

# **MITSUBISHI**

PROGRAMMABLE CONTROLLERS  
**MELSEC-F**

*Changes for the Better*

Industrial automation

**Elincom Group**

 European Union: [www.elinco.eu](http://www.elinco.eu)

 Russia: [www.elinc.ru](http://www.elinc.ru)

# D/UL

## HARDWARE MANUAL

FX<sub>2</sub>NC (D/UL) SERIES PROGRAMMABLE CONTROLLERS

# FX<sub>2</sub>NC



## **Foreword**

- This manual contains text, diagrams and explanations which will guide the reader in the correct installation and operation of the FX2NC and should be read and understood before attempting to install or use the unit.
- If in doubt at any stage during the installation of the FX2NC always consult a professional electrical engineer who is qualified and trained to the local and national standards. If in doubt about the operation or use of the FX2NC please consult the nearest Mitsubishi Electric distributor.
- This manual is subject to change without notice.



# FX2NC (D/UL) Series Programmable Controllers

## Hardware Manual

Manual number : JY992D87201

Manual revision : E

Date : June 2009

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

## **Guidelines for the safety of the user and protection of the FX<sub>2</sub>NC.**

This manual provides information for the installation and use of the FX<sub>2</sub>NC. The manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows;

- a) Any engineer who is responsible for the planning, design and construction of automatic equipment using the product associated with this manual should be of a competent nature, (trained and qualified to the local and national standards required to fulfill that role). These engineers should be fully aware of all aspects of safety with regards to automated equipment.
- b) Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards required to fulfill that job. These engineers should also be trained in the use and maintenance of the completed product. This includes being completely familiar with all associated documentation for the said product. All maintenance should be carried out in accordance with established safety practices.
- c) All operators of the completed product should be trained to use that product in a safe and co-ordinated manner in compliance to established safety practices. The operators should also be familiar with documentation which is connected with the actual operation of the completed equipment.

**Note :** The term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual.

## Note's on the symbology used in this manual

At various times through out this manual certain symbols will be used to highlight points of information which are intended to ensure the users personal safety and protect the integrity of the equipment. Whenever any of the following symbols are encountered, its associated note must be read and understood. Each of the symbols used will now be listed with a brief description of its meaning.

### Hardware warnings



1) Indicates that the identified danger **WILL** cause physical and property damage.



2) Indicates that the identified danger could **POSSIBLY** cause physical and property damage.



3) Indicates a point of further interest or further explanation.

### Software warning



4) Indicates special care must be taken when using this element of software.



5) Indicates a special point which the user of the associate software element should be aware of.



6) Indicates a point of interest or further explanation.

- Under no circumstances will Mitsubishi Electric be liable responsible for any consequential damage that may arise as a result of the installation or use of this equipment.
- All examples and diagrams shown in this manual are intended only as an aid to understanding the text, not to guarantee operation. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- Please contact a Mitsubishi Electric distributor for more information concerning applications in life critical situations or high reliability.

Guideline.....	ii
1. Introduction .....	1-1
1.1 Unit accessories.....	1-9
1.2 World Spec. ....	1-9
1.3 Model name .....	1-10
1.4 Serial numbers .....	1-11
1.5 Configuration.....	1-12
1.5.1 Summary .....	1-14
1.5.2 Current consumption and input/output points.....	1-16
1.5.3 Rules .....	1-20
1.5.4 System configuration example .....	1-23
1.5.5 Quick judgment .....	1-26
2. Terminal layouts.....	2-1
2.1 Main units.....	2-1
2.2 FX2NC Extension blocks .....	2-3
2.3 FX2N and FX0N Extension blocks .....	2-4

3.	Installation notes .....	3-1
3.1	Product outline .....	3-2
3.2	FX2NC RUN/STOP Control .....	3-4
3.3	General specifications.....	3-6
3.4	PC mounting arrangements .....	3-7
3.5	Connection of extension blocks to main unit.....	3-9
3.6	DIN rail mounting .....	3-9
3.7	Direct mounting .....	3-10
3.8	Extension cable installation.....	3-14
3.9	General notes .....	3-15
3.10	Memory Board installation .....	3-16
3.11	Wiring techniques .....	3-17
3.12	Termination of connector style I/O .....	3-18
3.13	Termination of screw terminals .....	3-19
3.14	Termination of connector style I/O cables.....	3-20
4.	Power supply.....	4-1
4.1	Power supply cautions .....	4-5
4.2	Earthing / Grounding.....	4-6



5. Inputs .....	5-1
5.1 24V DC input specifications .....	5-1
5.1.1 Typical wiring.....	5-2
5.1.2 Input circuit connection.....	5-4
5.1.3 Diodes and inputs connected in series;.....	5-6
5.1.4 Resistors and inputs connected in parallel;.....	5-7
5.2 AC110V input Extension block.....	5-8
5.2.1 Input circuit connection.....	5-8
5.2.2 Programming caution .....	5-9
6. Outputs .....	6-1
6.1 Transistor output specification .....	6-1
6.1.1 Response times.....	6-2
6.1.2 Output circuit configuration.....	6-3
6.1.3 Transistor output example .....	6-4
6.2 Relay output specification .....	6-6
6.2.1 Product life of relay contacts .....	6-7
6.2.2 Output circuit configuration.....	6-9
6.2.3 Relay output example.....	6-11
6.3 Triac (SSR) output specifications.....	6-13
6.3.1 In-rush currents .....	6-14
6.3.2 Output circuit configuration.....	6-15
6.3.3 Triac output example.....	6-17
6.4 Applying safe loads .....	6-17

7. Diagnostics.....	7-1
7.1 Preliminary checks.....	7-1
7.2 Basic diagnostics .....	7-2
7.2.1 BATT LED ON.....	7-2
7.2.2 ERROR LED flashes (PROGRAM ERROR) .....	7-2
7.2.3 ERROR LED ON (CPU ERROR) .....	7-3
7.3 Common errors .....	7-4
7.4 Replacing the battery .....	7-4
7.5 Maintenance .....	7-5
7.6 Error flags ON indicates error. ....	7-6
7.7 Error registers .....	7-8
7.8 Error codes .....	7-10
7.9 Instruction list.....	7-11
8. Discontinued model.....	8-1

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



# 1. Introduction

This manual covers the hardware installation instructions for the following programmable controller (PC) product ranges;


- FX2NC main units.
- FX2NC extension blocks and special function blocks

**Table 1.1 : Main units**

MODEL	INPUT		OUTPUT		POWER SUPPLY	DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	TYPE		W	H	D	
FX2NC-16MT-D/UL	8	24V DC Sink	8	Transistor (Sink)	24V DC +20% -15%  Ripple Voltage (p-p) 5% or less	35 (1.4)	90 (3.5)	87 (3.4)	0.2 (0.44)
FX2NC-32MT-D/UL	16		16			60 (2.4)			0.35 (0.77)
FX2NC-64MT-D/UL	32		32			86 (3.4)			0.45 (0.99)
FX2NC-96MT-D/UL	48		48						

**Figure 1.1 :Main unit dimensions**

UNITS: mm (inches)

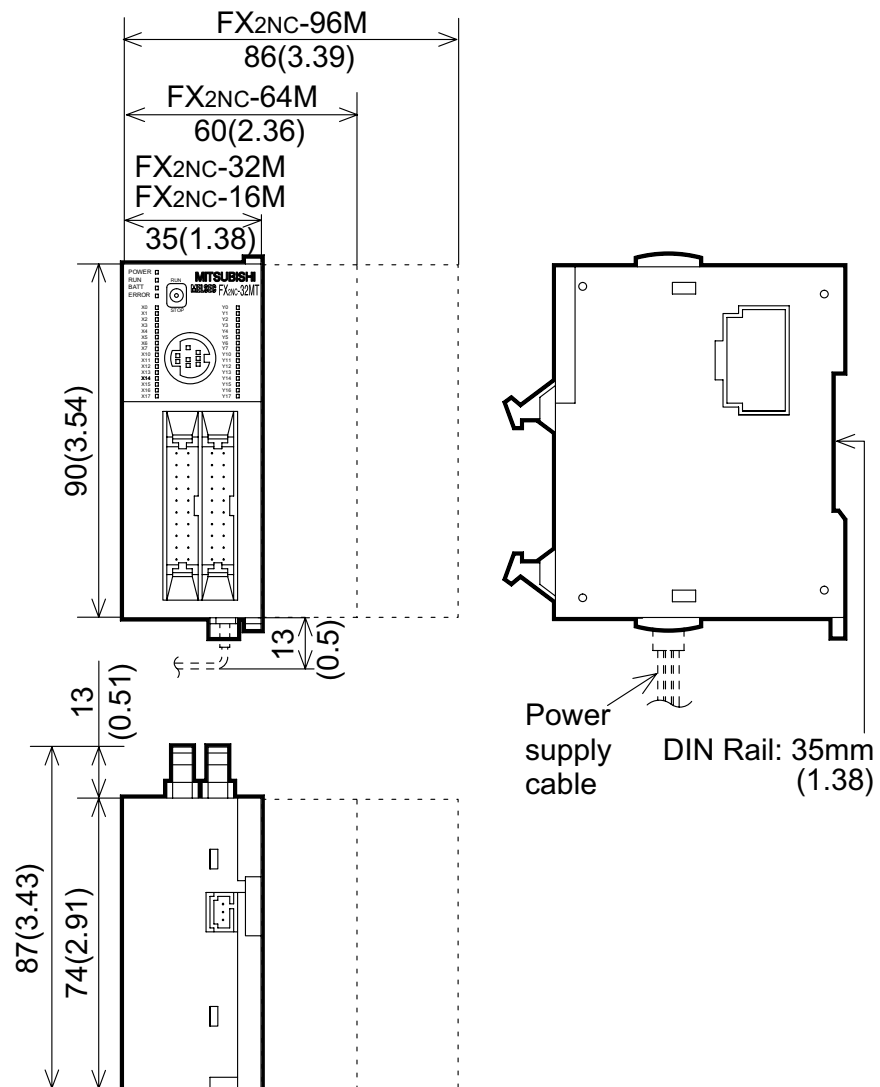

**Table 1.2 : Extension blocks**

MODEL	INPUT		OUTPUT			DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	DEVICE	TYPE	W	H	D	
FX2NC-16EX-D/UL	16	24V DC Sink	-	-	-	14.6 (0.6)	90 (3.5)	87 (3.4)	0.15 (0.33)
FX2NC-16EYT-D/UL	-	-	16	Transistor	Sink				
FX2NC-32EX-D/UL	32	24V DC Sink	-	-	-	26.2 (1.0)			0.2 (0.44)
FX2NC-32EYT-D/UL	-	-	32	Transistor	Sink				
FX0N-8EX-UA1/UL FX2N-8EX-UA1/UL	8	110V AC inputs	-	-	-	43 (1.7)	90 (3.5)	87 (3.4)	0.2 (0.44)
FX0N-8EX-ES/UL FX2N-8EX-ES/UL	8	24V DC Sink/	-	-	-				
FX0N-8ER-ES/UL FX2N-8ER-ES/UL	4	Source	4	Relay	-				
FX0N-8EYR-ES/UL FX2N-8EYR-ES/UL	-	-	8		-				
FX0N-8EYT-ESS/UL FX2N-8EYT-ESS/UL	-	-	8	Transistor	Source				
FX0N-16EX-ES/UL	16	24V DC Sink/	-	-	-	70 (2.8)			0.3 (0.66)
FX0N-16EYR-ES/UL	-	-	16	Relay	-				
FX0N-16EYT-ESS/UL	-	-	16	Transistor	Source				

**Table 1.2 : Extension blocks**

MODEL	INPUT		OUTPUT			DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	DEVICE	TYPE	W	H	D	
FX2N-16EX-ES/UL	16	24V DC Sink/ Source	-	-	-	40 (1.6)	90 (3.5)	87 (3.4)	0.3 (0.66)
FX2N-16EYR-ES/UL	-	-	16	Relay	-				
FX2N-16EYT-ESS/UL	-	-	16	Transistor	Source				


**Table 1.3 : Connector conversion adapter**

MODEL	DESCRIPTION	DIMENSIONS mm (inches)			MASS kg (lbs)
		W	H	D	
FX2NC-CNV-IF	Extension blocks and special functions blocks of FX2N and FX0N is connected by this adapter	14.6 (0.6)	90 (3.5)	74 (2.9)	0.15 (0.33)



**Figure 1.2 :Extension block dimensions**


UNITS: mm (inches)

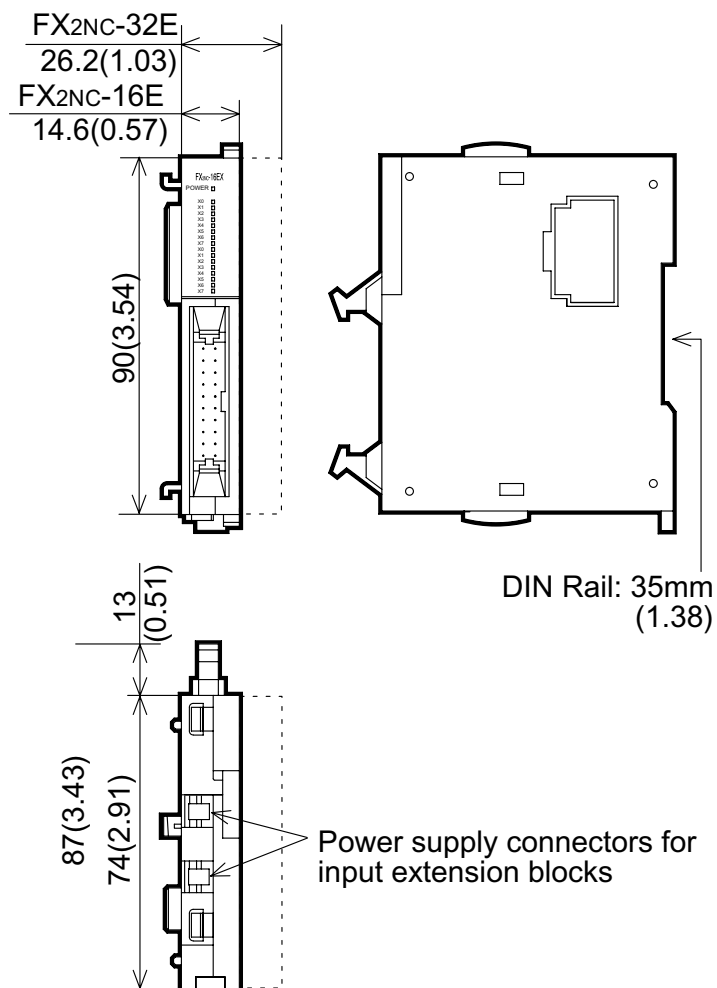

FX0N, FX2N Extension block dimensions →(See sec. 3.7)

**Figure 1.3 :Connector conversion adapter**

UNITS: mm (inches)

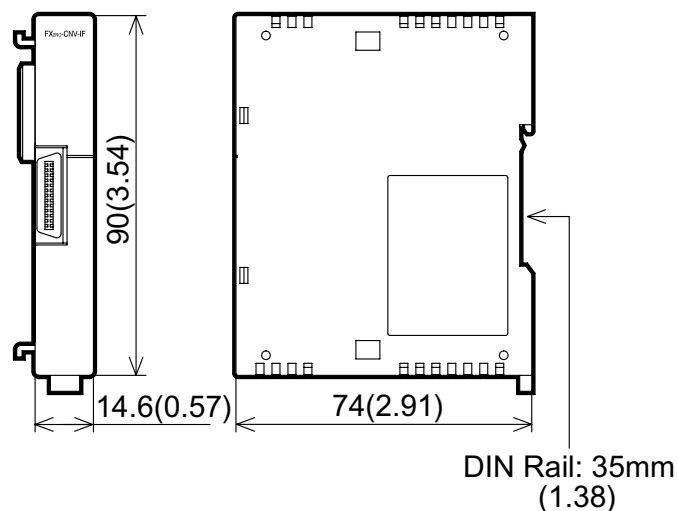**Table 1.4 :Special function blocks**

MODEL	DESCRIPTION	NUMBER OF I/O			POWER SUPPLY		DIMENSIONS mm (inches)			MASS kg (lbs)
		I		O	Internal 5V DC	External 24V DC	W	H	D	
FX2N-2AD	Analog to digital converter	-	8	-	20mA	50mA*1	43 (1.7)	90 (3.5)	87 (3.4)	0.2(0.44)
FX2NC-4AD		-	8	-	50mA	130mA	20 (0.8)		89 (3.5)	0.13 (0.29)
FX2N-4AD		-	8	-	30mA	55mA	55 (2.1)		87 (3.4)	0.3(0.66)
FX2N-8AD		-	8	-	50mA	80mA	75 (2.9)		75 (2.9)	0.4(0.88)

**Table 1.4 :Special function blocks**

MODEL	DESCRIPTION	NUMBER OF I/O			POWER SUPPLY		DIMENSIONS mm (inches)			MASS kg (lbs)
		I		O	Internal 5V DC	External 24V DC	W	H	D	
FX0N-3A	Analog / Digital converter	-	8	-	30mA	90mA*1	43 (1.7)	90 (3.5)	87 (3.4)	0.2(0.44)
FX2N-5A		-	8	-	70mA	90mA	55 (2.1)			0.3(0.66)
FX2N-2DA	Digital to analog converter	-	8	-	30mA	85mA*1	43 (1.7)			0.2(0.44)
FX2NC-4DA		-	8	-	30mA	130mA	24 (0.9)		89 (3.5)	0.13 (0.29)
FX2N-4DA		-	8	-	30mA	200mA	55 (2.1)		87 (3.4)	0.3(0.66)
FX2N-4AD-PT		PT 100 probe interface	-	8	-	30mA				
FX2N-4AD-TC	Thermo-couple interface	-	8	-	30mA	50mA				
FX2N-2LC	Temperature control	-	8	-	70mA	55mA				
FX2N-1HC	High speed counter	-	8	-	90mA	-				
FX2N-1PG-E	Pulse output, Position control	-	8	-	55mA	40mA	43 (1.7)			0.2(0.44)
FX2N-10PG		-	8	-	120mA	70mA*2	60 (2.4)			0.3(0.66)
FX2N-10GM	Positioning controller	-	8	-	-	5W				
FX2N-20GM		-	8	-	-	10W				
FX2N-1RM-E-SET	Programmable cam switch	-	8	-	-	5W	55 (2.1)	111 (4.4)	97 (3.8)	0.5(1.1)

**Table 1.4 :Special function blocks**

MODEL	DESCRIPTION	NUMBER OF I/O			POWER SUPPLY		DIMENSIONS mm (inches)			MASS kg (lbs)
		I	O		Internal 5V DC	External 24V DC	W	H	D	
FX2N-232IF	RS-232C Interface block	-	8	-	40mA	80mA	55 (2.1)	90 (3.5)	87 (3.4)	0.3(0.66)
FX2N-16CCL-M	CC-Link Interface block	*3	8	*3	-	150mA	85 (3.3)			0.4(0.88)
FX2N-32CCL	CC-Link Interface block	-	8	-	130mA	50mA	43 (1.7)			0.2(0.44)
FX2N-64CL-M	CC-Link/LT Interface block	*4	8	*4	190mA	25mA*4				0.15 (0.01)
FX2N-16LNK-M	MELSEC-I/O LINK Remote I/O system master block	*5			200mA	90mA				0.5(1.1)
FX0N-16NT	Net-mini interface	8	8		20mA	60mA				0.2(0.44)

\*1 : Internal 24V DC

\*2 : When the voltage of the external DC power supply is 24V DC and 5V DC, the current is 70 mA and 100 mA, respectively.

\*3 : Maximum number of I/O points per system Connection is allowed as far as the following condition is satisfied:

(Actual number of I/O points of PLC) + (Number of points occupied by special extension blocks) + (Number of points occupied by FX2N-16CCL-M: 8) + (32 x Number of remote I/O modules) ≤ 256

\*4 : For details, refer to the FX2N-64CL-M user's manual.

\*5 : The value depends on the switch setting.

## 1.1 Unit accessories


- MPU-Main unit :  
FX2NC-100MPCB main unit power supply cable and FX2NC-100BPCB input extension block power supply cable.
- FX2NC Input extension block :  
FX2NC-10BPCB1 input extension block power supply cable.
- FX2NC output extension and FX0N, FX2N extension block :  
I / O label kit.

## 1.2 World Spec.

**Table 1.5 : World / Japanese Spec.**

<b>Input Sink / Source</b>	World spec models : SINK / SOURCE. Japanese models : ALWAYS SINK.
<b>Outputs Transistor</b>	World spec models : ALWAYS SOURCE. Japanese models : ALWAYS SINK.

### 1.3 Model name

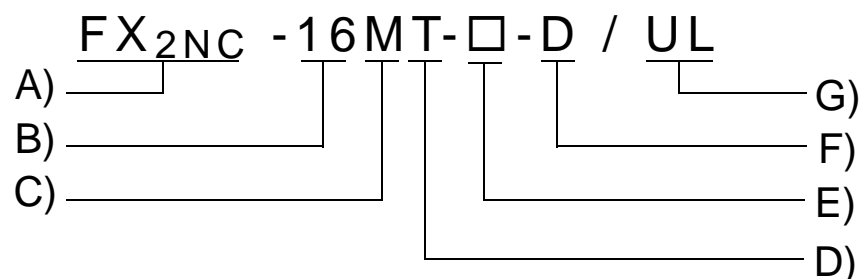


**Table 1.6 : Model table**

<b>A)</b>	PC type : FX2NC, FX2N, FX0N	
<b>B)</b>	Total number of I / O channels	
<b>C)</b>	<b>Unit type</b>	
	M	MPU - main unit
	E	Powered extension unit
	EX	Extension block, input
	EY	Extension block, output
<b>D)</b>	<b>Output type</b>	
	R	Relay
	S	Triac (SSR)
	T	Transistor

<b>E)</b>	T	Terminal style I/O. ,Only FX2NC.
<b>F)</b>	<b>Features</b>	
	Omit	AC, Japanese spec.
	D	24V DC Japanese spec.
	DS	24V DC World spec.
	DSS	24V DC World spec., DC source transistor
	ES	AC Power Supply World spec.,DC sink transistor
	ESS	AC Power Supply World spec., DC source transistor
	UA1	AC Power Supply, AC inputs
<b>G)</b>	UL	CE,UL registered product

## 1.4 Serial numbers

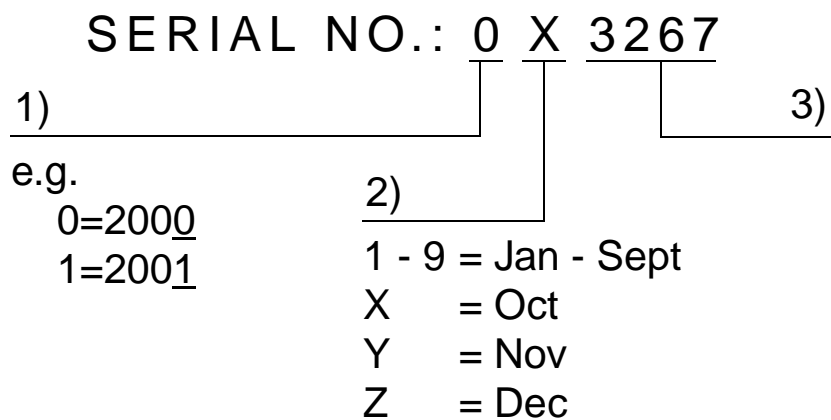


**Table 1.7 : Notes on serial numbers**

1)	Production year
2)	Production month
3)	Production serial number

## 1.5 Configuration

**Figure 1.4 :Schematic system**

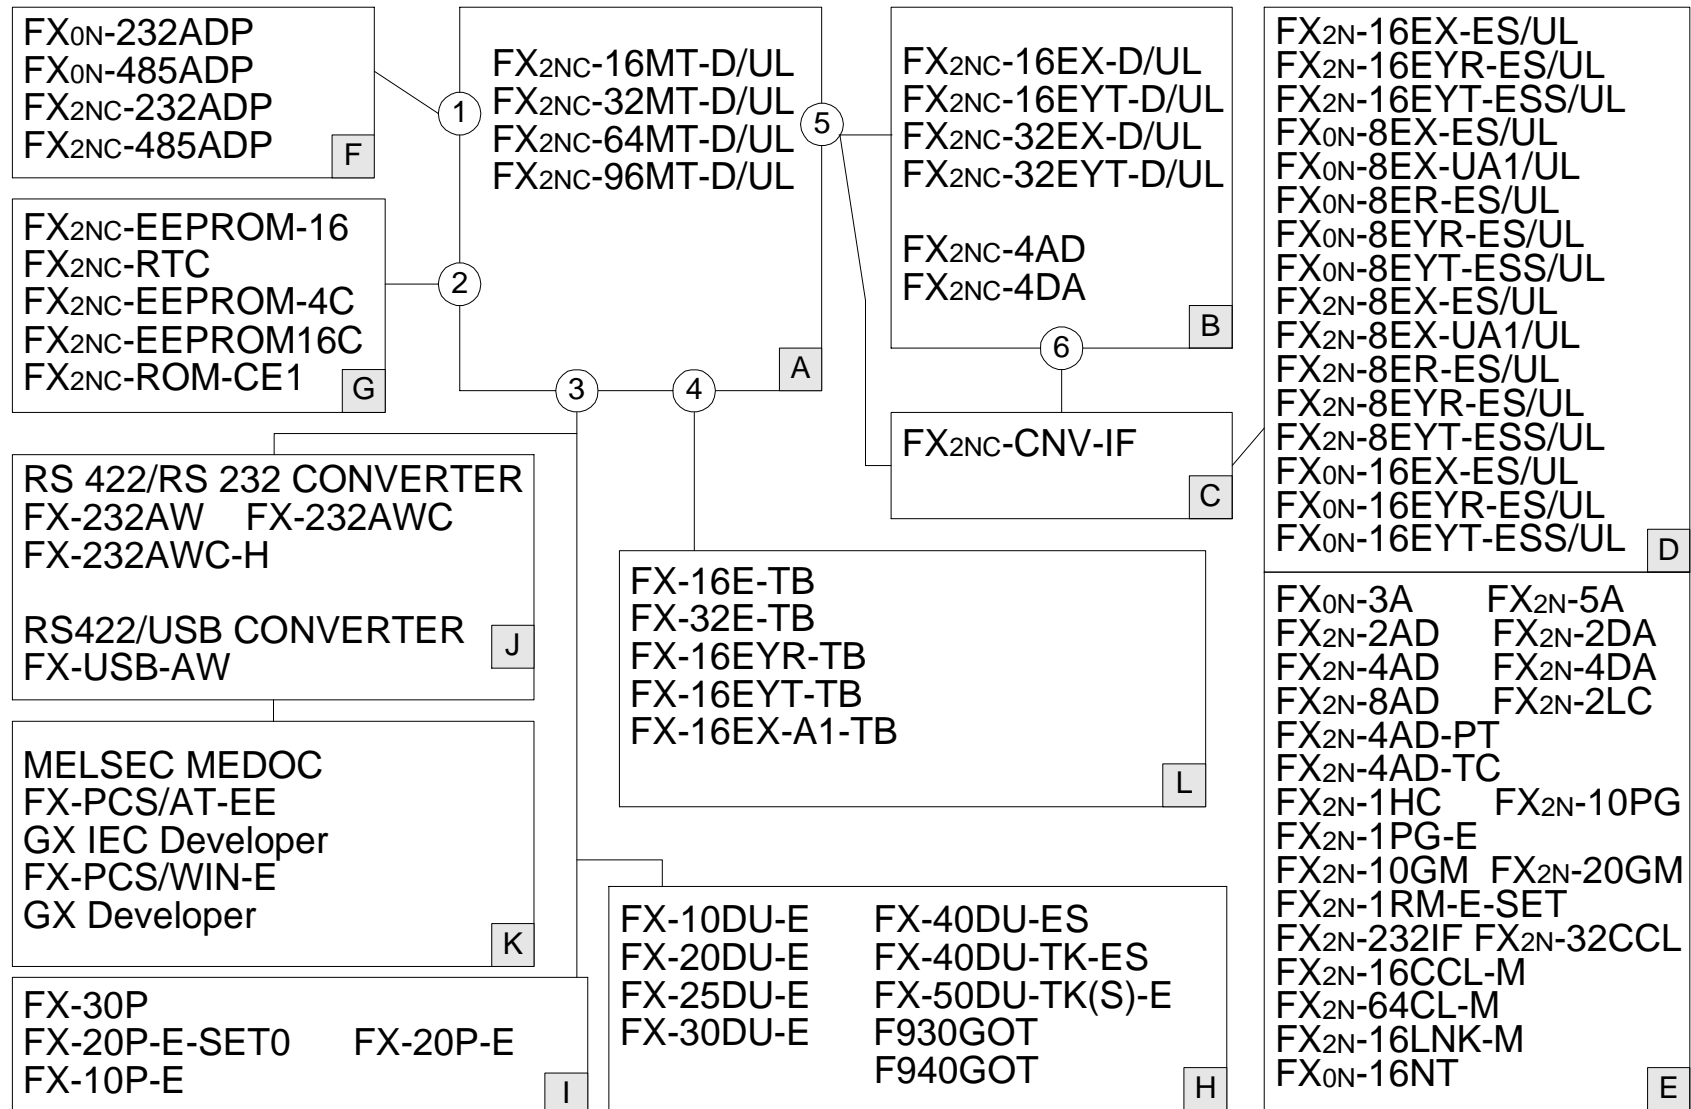



**Table 1.8 : Configuration notes**

<b>A</b>	MPU-Main unit (Main Processing Unit)
<b>B</b>	Extension block, Special function block
<b>C</b>	Connector conversion adapter
<b>D</b>	Extension block
<b>E</b>	Special function block
<b>F</b>	Function adapters
<b>G</b>	Memory board (Real time clock)
<b>H</b>	Data access units, GOT
<b>I</b>	Dedicated programming
<b>J</b>	Computer interface
<b>K</b>	Computer software
<b>L</b>	Terminal block

①	Left hand side port
②	Memory port
③	Programming port
④	I/O port
⑤	MPU bus port
⑥	Unit bus port

**Note**

When connecting peripheral equipment (programming tool or GOT [direct connection to CPU]) via the FX<sub>2</sub>NC-232ADP or the FX<sub>0</sub>N-232ADP, FX<sub>2</sub>NC main unit should be the following setting condition.

- Set the special data register for the communication format setting of the channel connecting the peripheral equipment (D8120) to K0.
- Set the communication parameter to "Not set".

### 1.5.1 Summary

#### Connection of FX2NC series extension blocks only


The FX2NC series input extension blocks and FX2NC series output extension blocks can be directly connected to the FX2NC series main unit. These input/output extension blocks can be connected in the desired order. After connection, octal numbers will be assigned to the input/output points of the extension blocks. These octal numbers are regarded as the input/output numbers. The smallest number will be assigned to the input/output point next to the main unit, and then sequentially increased for the subsequent input/output points.

Before connection, calculate the number of connectable input/output points by referring to Sec. 1.5.3, or quickly obtain this number using the table shown in Sec. 1.5.5.

	X020   X037	X040   X057		X060   X077			X100   X117	
X000-X017								
FX2NC-32MT-D/UL	16EX 16 points	16EX 16 points	16EYT 16 points	16EX 16 points	16EYT 16 points	16EYT 16 points	16EX 16 points	16EYT 16 points
Y000-Y017			Y020   Y037		Y040   Y057	Y060   Y077		Y100   Y117

## Connection of FX<sub>0</sub>N and FX<sub>2</sub>N series extension blocks and function adapter

To connect the FX<sub>2</sub>NC series main unit to the FX<sub>0</sub>N or FX<sub>2</sub>N series extension blocks, be sure to connect the FX<sub>2</sub>NC-CNV-IF connector conversion adapter first. Following the adapter, you can connect up to 4 blocks. In addition, one special adapter can be connected to the left side of the base unit. Before connection, calculate the number of connectable input/output points by referring to Sec. 1.5.3.

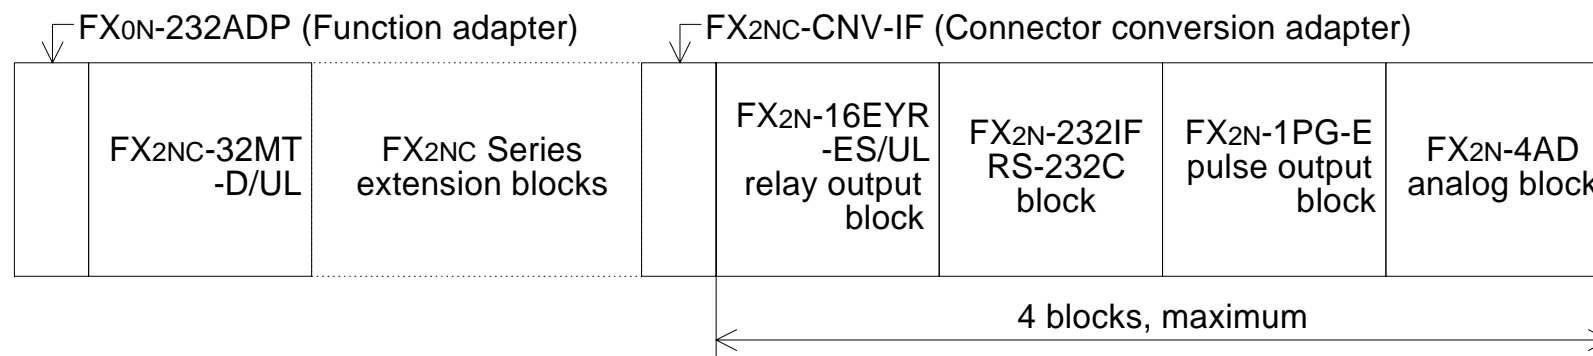

## 1.5.2 Current consumption and input/output points

The following tables show the current consumption and input/output points of various types of FX2NC series main units, extension blocks, and special function blocks.

While referring to Sec. 1.5.3, calculate the total current consumption and total input/output values using the following main unit values (values ❶ through ❹), extension block values, and special function block values.

**Table 1.9 : Base units**

MODEL	❶ CURRENT CAPACITY 5V DC	❷ INPUT X	❸ OUTPUT Y	❹ TOTAL
FX2NC-16MT-D/UL	600mA	8	8	16
FX2NC-32MT-D/UL	560mA	16	16	32
FX2NC-64MT-D/UL	480mA	32	32	64
FX2NC-96MT-D/UL	400mA	48	48	96

**Table 1.10: Extension blocks**

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X	OUTPUT Y	TOTAL
FX2NC-16EX-D/UL	30mA	16	-	16
FX2NC-16EYT-D/UL	50mA	-	16	16
FX2NC-32EX-D/UL	60mA	32	-	32
FX2NC-32EYT-D/UL	100mA	-	32	32
FX0N-8ER-ES/UL FX2N-8ER-ES/UL	25mA	4(8)	4(8)	16 <sup>*1</sup>
FX0N-8EX-ES/UL FX2N-8EX-ES/UL	25mA	8	-	8
FX0N-8EX-UA1/UL FX2N-8EX-UA1/UL	25mA	8	-	8
FX0N-8EYR-ES/UL FX2N-8EYR-ES/UL	30mA	-	8	8
FX0N-8EYT-ESS/UL FX2N-8EYT-ESS/UL	30mA	-	8	8
FX0N-16EX-ES/UL	40mA	16	-	16
FX0N-16EYT-ESS/UL	40mA	-	16	16
FX0N-16EYR-ES/UL	40mA	-	16	16
FX2N-16EX-ES/UL	45mA	16	-	16
FX2N-16EYR-ES/UL	40mA	-	16	16
FX2N-16EYT-ESS/UL	180mA	-	16	16

\*1: 8 points are used for actual input/output, however, this block should occupy 16 input/output points.

**Table 1.11: Special function block    Function adapters**

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X	OUTPUT Y		TOTAL
			X/Y		
FX0N-3A	30mA	-	8	-	8
FX0N-16NT	20mA	8	-	8	16
FX2N-2AD	20mA	-	8	-	8
FX2N-4AD	30mA	-	8	-	8
FX2NC-4AD	50mA	-	8	-	8
FX2N-8AD	50mA	-	8	-	8
FX2N-4AD-PT	30mA	-	8	-	8
FX2N-4AD-TC	30mA	-	8	-	8
FX2N-5A	70mA	-	8	-	8
FX2N-2DA	30mA	-	8	-	8
FX2N-4DA	30mA	-	8	-	8
FX2NC-4DA	30mA	-	8	-	8
FX2N-8AD	50mA	-	8	-	8
FX2N-2LC	70mA	-	8	-	8
FX2N-1HC	90mA	-	8	-	8
FX2N-1PG-E	55mA	-	8	-	8
FX2N-10PG	120mA	-	8	-	8
FX2N-232IF	40mA	-	8	-	8

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X	OUTPUT Y		TOTAL
			X/Y		
FX2N-16CCL-M	-	*1	8	*1	8
FX2N-32CCL	130mA	-	8	-	8
FX2N-64CL-M	190mA	*2	8	*2	*2
FX2N-16LNK-M	200mA	*3	*3	*3	*3
FX2N-10GM	-	-	8	-	8
FX2N-20GM	-	-	8	-	8
FX2N-1RM-E-SET *4	-	-	8	-	8
FX0N-232ADP	200mA	-	-	-	-
FX2NC-232ADP	100mA	-	-	-	-
FX0N-485ADP	30mA	-	-	-	-
FX2NC-485ADP	150mA	-	-	-	-
FX-2PIF	290mA	-	-	-	-

\*1: Maximum number of I/O points per system Connection is allowed as far as the following condition is satisfied:

(Actual number of I/O points of PLC) + (Number of points occupied by special extension blocks) + (Number of points occupied by FX2N-16CCL-M: 8) + (32 x Number of remote I/O modules) ≤ 256

\*2: For details, refer to the FX2N-64CL-M user's manual.

\*3: Value depends on the switch setting (16, 32, 48, 64, 96 or 128 points).

\*4: Maximum of 1 unit can be connected.

### 1.5.3 Rules

- 1) Add the input/output points of the extension blocks and special functions blocks to the input/output points of the main unit. The total number of input points should be 184 points or less, and the total number of output points should be also 184 points or less. The total number of input and output points should be no more than 256 points.
- 2) The FX2NC series main unit supplies the control power (5V DC) to the extension blocks and special function blocks. For this reason, the total current consumption of all the blocks connected to the main unit should not exceed the current capacity of the main unit.
- 3) Next to the FX2NC-CNV-IF, up to 4 blocks can be connected. To connect a special function unit, such as the FX2N-10GM or FX2N-1RM-E-SET, refer to the instruction manual of the corresponding special function block.

#### Calculation form for system configuration

Enter current consumption values and input/output points of the extension blocks and special function blocks while referring to Sec. 1.5.2, and then calculate the total current value ⑤ and total input and output points ⑥ through ⑨. From the obtained values, judge whether the blocks can be connected.



**Table 1.12 : Calculation form**

Block	Model	Current consumption	Number of blocks connected	Current consumption × number of blocks	INPUT X	X/Y	OUTPUT Y
FX2NC series input extension block	FX2NC-16EX-D/UL	30 mA	blocks	mA	points		points
	FX2NC-32EX-D/UL	60 mA	blocks	mA	points		points
FX2NC series output extension block	FX2NC-16EYT-D/UL	50 mA	blocks	mA	points		points
	FX2NC-32EYT-D/UL	100 mA	blocks	mA	points		points
FX0N/FX2N series extension block (4 blocks, maximum)		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
Function adapter		mA	blocks	mA	-		
2-port interface	FX-2PIF	mA	blocks	mA	-		
				⑤ Total current consumption: mA	⑥ Total input points:		points
					⑦ Total output points:		points
					⑧ Total input/output common points:		points
					⑨ Total points:		points

**Judgment form****a) 5V DC control current capacity check**

$$\begin{array}{|l|} \hline \text{5V DC current capacity of main unit} \\ \text{(value ① shown in Sec. 1.5.2): } \boxed{\phantom{000}} \text{ mA} \\ \hline \end{array} \geq \begin{array}{|l|} \hline \text{Total current consumption of all connected blocks} \\ \text{(value ⑤ written in calculation form): } \boxed{\phantom{000}} \text{ mA} \\ \hline \end{array}$$


**b) Input/output point connection upper limit check**

Input point connection upper limit : 184 points	≥	(	Input points of main unit (value ② shown in Sec. 1.5.2): $\boxed{\phantom{000}}$ points	+	Total input points of all connected blocks (value ⑥ written in calculation form): $\boxed{\phantom{000}}$ points	=	$\boxed{\phantom{000}}$ points	)
Output point connection upper limit: 184 points	≥	(	Output points of main unit (value ③ shown in Sec. 1.5.2): $\boxed{\phantom{000}}$ points	+	Total output points of all connected blocks (value ⑦ written in calculation form): $\boxed{\phantom{000}}$ points	=	$\boxed{\phantom{000}}$ points	)
Input/output point connection upper limit: 256 points	≥	(	Input/output points of main unit (value ④ shown in Sec. 1.5.2): $\boxed{\phantom{000}}$ points	+	Total input/output points of all connected blocks (value ⑨ written in calculation form): $\boxed{\phantom{000}}$ points	=	$\boxed{\phantom{000}}$ points	)

If all the above conditions are met, the extension and special function blocks can be connected to the base block.

If one of the above conditions is not met, reduce the number of input/output points or number of blocks, or change the types of blocks to be connected.

### 1.5.4 System configuration example

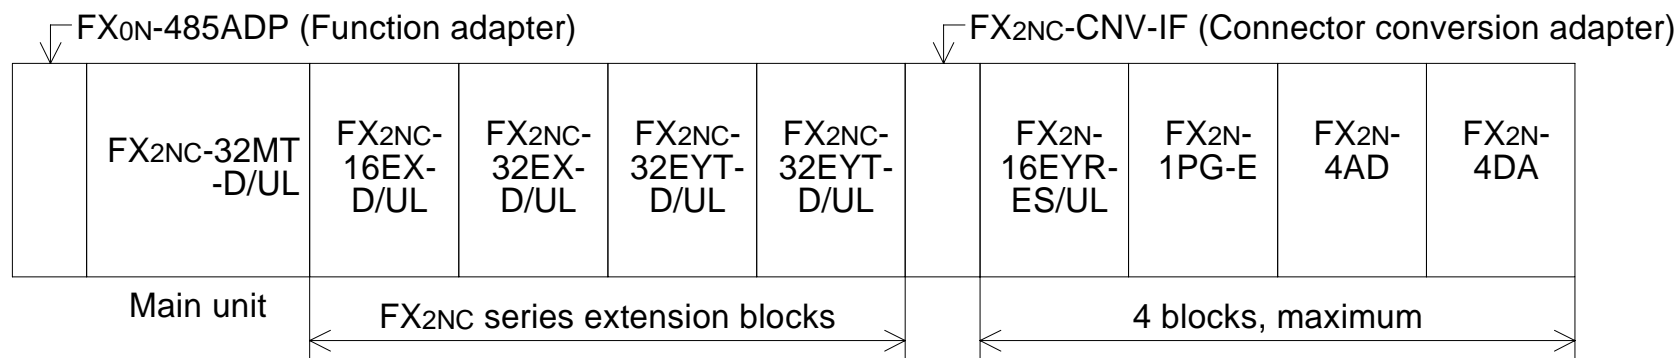

**Table 1.13 : Calculation (Example)**

Block	Model	Current consumption	Number of blocks connected	Current consumption × number of blocks	INPUT X	X/Y	OUTPUT Y
FX2NC series input extension block	FX2NC-16EX-D/UL	30 mA	1 blocks	30 mA	16 points		points
	FX2NC-32EX-D/UL	60 mA	1 blocks	60 mA	32 points		points
FX2NC series output extension block	FX2NC-16EYT-D/UL	50 mA	0 blocks	0 mA	points		points
	FX2NC-32EYT-D/UL	100 mA	2 blocks	200 mA	points		64 points
FX0N/FX2N series extension block (4 blocks, maximum)	<b>FX2N-16EYR-ES/UL</b>	<b>40 mA</b>	1 blocks	<b>40 mA</b>	points	points	<b>16 points</b>
	<b>FX2N-1PG-E</b>	<b>55 mA</b>	1 blocks	<b>55 mA</b>	points	8 points	points
	<b>FX2N-4AD</b>	<b>30 mA</b>	1 blocks	<b>30 mA</b>	points	8 points	points
	<b>FX2N-4DA</b>	<b>30 mA</b>	1 blocks	<b>30 mA</b>	points	8 points	points
Function adapter	<b>FX0N-485ADP</b>	<b>30 mA</b>	1 blocks	<b>30 mA</b>	-		
2-port interface	FX-2PIF	mA	0 blocks	0 mA	-		
				<b>㊦</b> Total current consumption:  <b>475 mA</b>	<b>㊦</b> Total input points: <b>48 points</b> <b>㊦</b> Total output points : <b>80 points</b> <b>㊦</b> Total input/output common points: <b>24 points</b> <b>㊦</b> Total points: <b>152 points</b>		

**Judgment (Example)****a) 5V DC control current capacity check**

5V DC current capacity of main unit (value ❶ shown in Sec. 1.5.2): 560 mA	≥	Total current consumption of all connected blocks (value ❺ written in calculation form): 475 mA	OK
--	---	--	----

**b) Input/output point connection upper limit check**

Input point connection upper limit : 184 points	≥	Input points of main unit (value ❷ shown in Sec. 1.5.2): 16 points	+	Total input points of all connected blocks (value ❻ written in calculation form): 48 points	=	64 points	OK
Output point connection upper limit: 184 points	≥	Output points of main unit (value ❸ shown in Sec. 1.5.2): 16 points	+	Total output points of all connected blocks (value ❼ written in calculation form): 80 points	=	96 points	OK
Input/output point connection upper limit: 256 points	≥	Input/output points of main unit (value ❹ shown in Sec. 1.5.2): 32 points	+	Total input/output points of all connected blocks (value ❽ written in calculation form): 152 points	=	184 points	OK

Calculation result:

The 5V DC power total current consumption value and total input/output points are in the specified ranges, therefore the above system configuration is possible.

### 1.5.5 Quick judgment

To connect FX2NC series extension blocks only, use the following tables to quickly obtain the connectable input/output points.

#### Example of quick judgment:

- If 96 input points are connected to the FX2NC-32MT-D/UL main unit, up to 112 output points can be connected.
- If the number of output points are determined first, select the same number or a slightly larger number from the output points (Y) area (area marked with \*1). In this case, note that you cannot increase the corresponding number of input points shown above even if the determined number of output points is slightly smaller than the number shown in the table. However, if the same number of output points are listed twice, you can select the larger number of input points.

**Table 1.14: FX2NC-16M main unit (input: 8 points / output: 8 points)**

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144	160	176
Output points of FX2NC series output extension block (Y)	176	176	160	160	144	144	128	112	112	96	80	64
Total points including those of main unit	192	208	208	224	224	240	240	240	256	256	256	256

←\*1

**Table 1.15: FX2NC-32M main unit (input: 16 points / output: 16 points)**

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144	160
Output points of FX2NC series output extension block (Y)	168	160	160	144	128	128	112	112	96	80	64
Total points including those of main unit	200	208	224	224	224	240	240	256	256	256	256

←\*1  
 ↑ Example of quick judgment

**Table 1.16: FX2NC-64M main unit (input: 32 points / output: 32 points)**

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144
Output points of FX2NC series output extension block (Y)	144	144	128	112	112	96	96	80	64	48
Total points including those of main unit	208	224	224	224	240	240	256	256	256	256

←\*1

**Table 1.17: FX2NC-96M main unit (input: 48 points / output: 48 points)**

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128
Output points of FX2NC series output extension block (Y)	128	112	96	96	80	80	64	48	32
Total points including those of main unit	224	224	224	240	240	256	256	256	256

←\*1

## **MEMO**



<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



## 2. Terminal layouts

The following selection of terminal layouts are taken from the FX2NC product range.

Note: All layouts are diagrammatic only and are only intended to aid the creation of wiring diagrams.

### 2.1 Main units

#### FX<sub>2</sub>NC-16MT-D/UL

IN		OUT	
X0	•	Y0	•
X1	•	Y1	•
X2	•	Y2	•
X3	•	Y3	•
X4	•	Y4	•
X5	•	Y5	•
X6	•	Y6	•
X7	•	Y7	•
COM	COM	COM1	COM1
•	•	•	•

FX<sub>2</sub>NC-32MT-D/UL

IN		OUT	
X0	X10	Y0	Y10
X1	X11	Y1	Y11
X2	X12	Y2	Y12
X3	X13	Y3	Y13
X4	X14	Y4	Y14
X5	X15	Y5	Y15
X6	X16	Y6	Y16
X7	X17	Y7	Y17
COM	COM	COM1	COM1
•	•	•	•

FX<sub>2</sub>NC-64MT-D/UL


IN		OUT		IN		OUT	
X0	X10	Y0	Y10	X20	X30	Y20	Y30
X1	X11	Y1	Y11	X21	X31	Y21	Y31
X2	X12	Y2	Y12	X22	X32	Y22	Y32
X3	X13	Y3	Y13	X23	X33	Y23	Y33
X4	X14	Y4	Y14	X24	X34	Y24	Y34
X5	X15	Y5	Y15	X25	X35	Y25	Y35
X6	X16	Y6	Y16	X26	X36	Y26	Y36
X7	X17	Y7	Y17	X27	X37	Y27	Y37
COM	COM	COM1	COM1	COM	COM	COM2	COM2
•	•	•	•	•	•	•	•

FX<sub>2</sub>NC-96MT-D/UL


IN		OUT		IN		OUT		IN		OUT	
X0	X10	Y0	Y10	X20	X30	Y20	Y30	X40	X50	Y40	Y50
X1	X11	Y1	Y11	X21	X31	Y21	Y31	X41	X51	Y41	Y51
X2	X12	Y2	Y12	X22	X32	Y22	Y32	X42	X52	Y42	Y52
X3	X13	Y3	Y13	X23	X33	Y23	Y33	X43	X53	Y43	Y53
X4	X14	Y4	Y14	X24	X34	Y24	Y34	X44	X54	Y44	Y54
X5	X15	Y5	Y15	X25	X35	Y25	Y35	X45	X55	Y45	Y55
X6	X16	Y6	Y16	X26	X36	Y26	Y36	X46	X56	Y46	Y56
X7	X17	Y7	Y17	X27	X37	Y27	Y37	X47	X57	Y47	Y57
COM	COM	COM1	COM1	COM	COM	COM2	COM2	COM	COM	COM3	COM3
•	•	•	•	•	•	•	•	•	•	•	•

## 2.2 FX2NC Extension blocks


FX2NC-16EX-D/UL

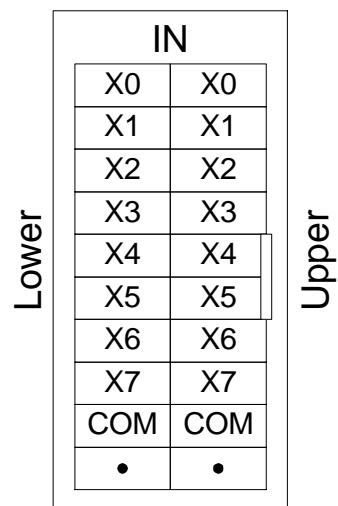


FX2NC-32EX-D/UL

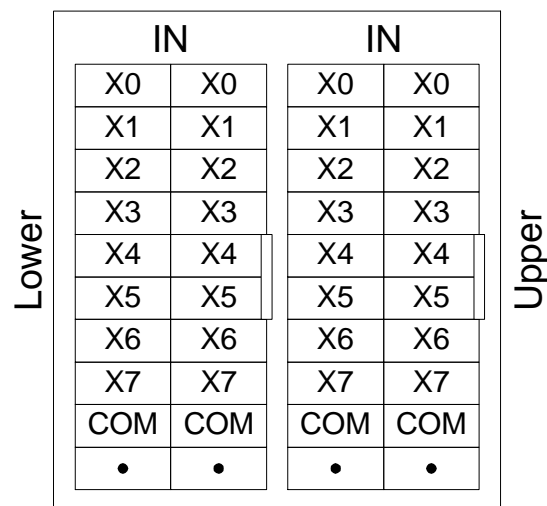

FX2NC-16EYT-D/UL

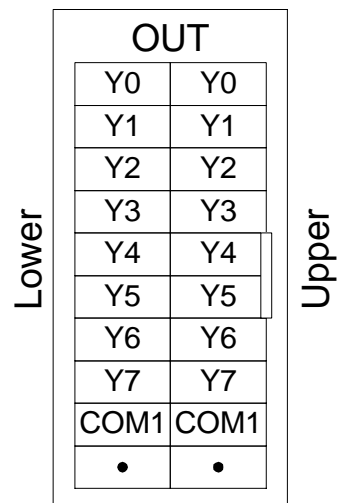

FX2NC-32EYT-D/UL

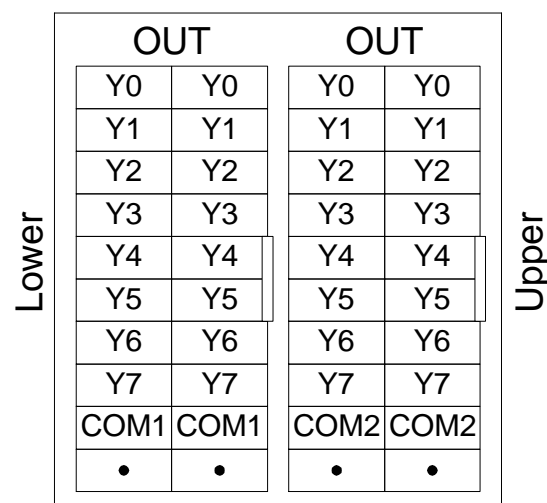

## 2.3 FX<sub>2</sub>N and FX<sub>0</sub>N Extension blocks

Y0 Y2 Y4	Y2 Y4 Y6 +V1
+V0 Y1 Y3 Y5 Y6 Y7	Y0 Y1 Y3 Y5 Y7
FX <sub>2N</sub> -16EYT-ESS/UL	
Y0 Y2 Y4	Y2 Y4 Y6 COM2
COM1 Y1 Y3 Y5 Y6 Y7	Y0 Y1 Y3 Y5 Y7
FX <sub>2N</sub> -16EYR-ES/UL	
X0 X2 X4	X2 X4 X6 •
S/S X1 X3 X5 X6 X7	X0 X1 X3 X5 X7
FX <sub>2N</sub> -16EX-ES/UL	
COM1 X1 X3	• X5 X7
• X0 X2	• X4 X6
FX <sub>0N</sub> -8EX-UA1/UL FX <sub>2N</sub> -8EX-UA1/UL	
S/S X1 X3	COM1 Y1 Y3
• X0 X2	• Y0 Y2
FX <sub>0N</sub> -8ER-ES/UL FX <sub>2N</sub> -8ER-ES/UL	
+V0 Y1 Y3	+V1 Y5 Y7
• Y0 Y2	• Y4 Y6
FX <sub>0N</sub> -8EYT-ESS/UL FX <sub>2N</sub> -8EYT-ESS/UL	
COM1 Y1 Y3	COM2 Y5 Y7
• Y0 Y2	• Y4 Y6
FX <sub>0N</sub> -8EYR-ES/UL FX <sub>2N</sub> -8EYR-ES/UL	
S/S X1 X3	• X5 X7
• X0 X2	• X4 X6
FX <sub>0N</sub> -8EX-ES/UL FX <sub>2N</sub> -8EX-ES/UL	

S/S	X1	X3	X5	X7	•
	X0	X2	X4	X6	•
FX <sub>0N</sub> -16EX-ES/UL					
	X0	X2	X4	X6	•
S/S	X1	X3	X5	X7	•

COM1	Y1	Y3	COM2	Y5	Y7
	Y0	Y2	•	Y4	Y6
FX <sub>0N</sub> -16EYR-ES/UL					
	Y0	Y2	•	Y4	Y6
COM3	Y1	Y3	COM4	Y5	Y7

+V0	Y1	Y3	+V1	Y5	Y7
	Y0	Y2	•	Y4	Y6
FX <sub>0N</sub> -16EYT-ESS/UL					
	Y0	Y2	•	Y4	Y6
+V2	Y1	Y3	+V3	Y5	Y7

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>






### **3. Installation notes**

The installation of FX2NC products has been designed to be safe and easy. When the products associated with this manual are used as a system or individually, they must be installed in a suitable enclosure. The enclosure should be selected and installed in accordance to the local and national standards.

### 3.1 Product outline

**Figure 3.1: Features of the FX2NC PC**

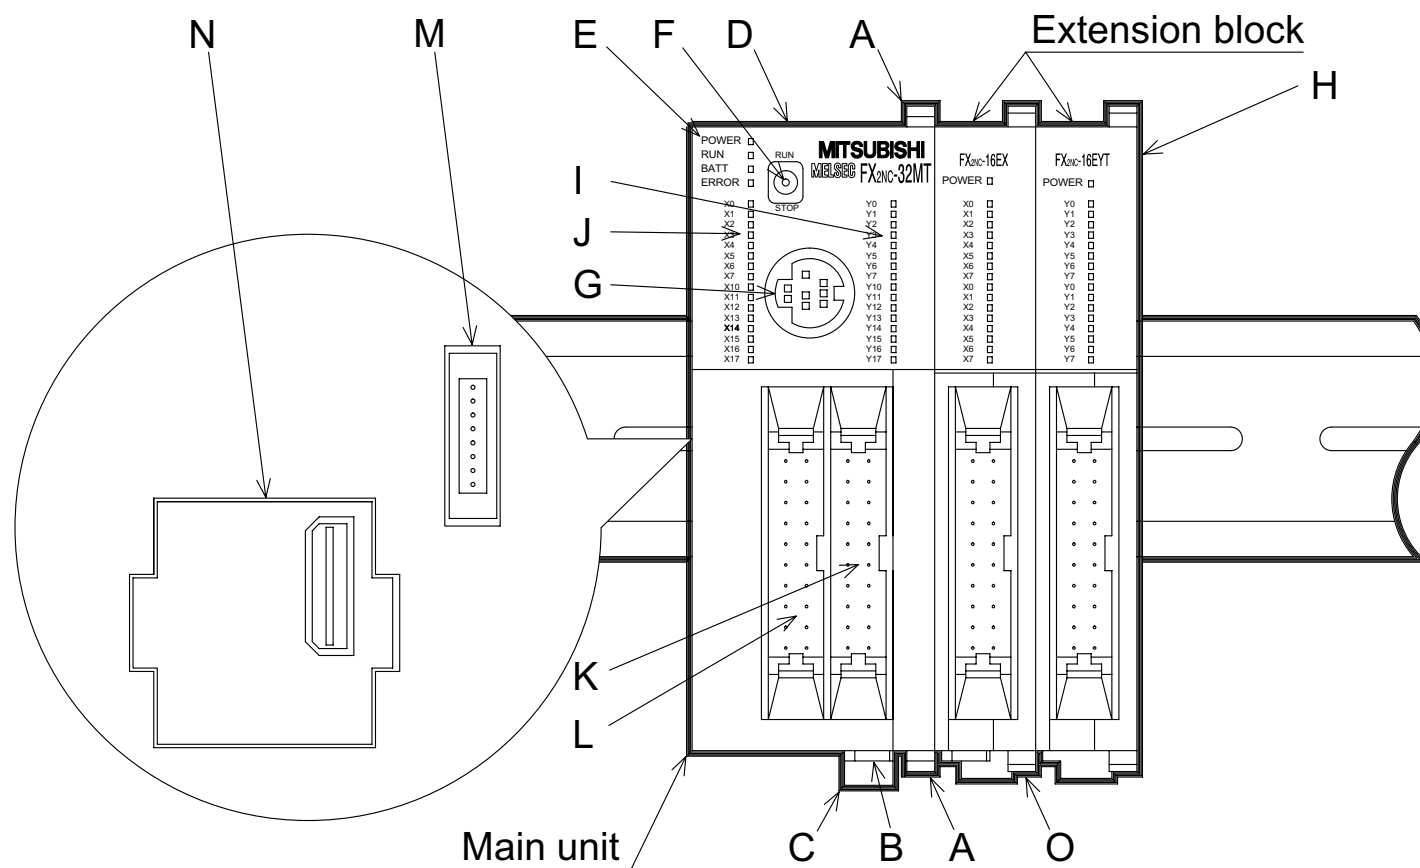

**Table 3.1 : Feature table**

<b>A</b>	Slide lock for extension I/O block
<b>B</b>	Power supply connector (Uses the 24V DC)
<b>C</b>	Din rail clip
<b>D</b>	Backup battery
<b>E</b>	Status indicators (POWER, RUN, BATT, ERROR)
<b>F</b>	Run / Stop switch
<b>G</b>	Programming port
<b>H</b>	Extension connector
<b>I</b>	Output indicators
<b>J</b>	Input indicators
<b>K</b>	Output connector or Output terminal
<b>L</b>	Input connector or Input terminal
<b>M</b>	Function adapter connector
<b>N</b>	Memory board / Real time clock board, connector
<b>O</b>	Input power supply connector, input power supply connector for crossover wiring

## 3.2 FX2NC RUN/STOP Control

RUN or STOP of the FX2NC can be controlled by:

- ❶ The RUN/STOP switch mounted next to the programming port.
- ❷ A standard input (X000 to X017; X000 to X007 for FX2NC-16M★ units) defined by the system parameters.
- ❸ Remotely from a personal computer or other programming peripheral.




**Note:** The FX2NC RUN/STOP switch ❶ works in parallel with the RUN-input terminal ❷. Please refer to table 3.2.

During remote operation the FX2NC RUN/STOP status is determined by the most recently operated control.

E.g. If the RUN/STOP switch is in RUN and a remote STOP is made from a personal computer the RUN/STOP switch must be switched to STOP then back to RUN to switch the MPU back to RUN mode.

**Table 3.2 : RUN/STOP selection**

① RUN/STOP SWITCH	② RUN INPUT TERMINAL	FX2NC MPU STATUS
RUN	ON	RUN
RUN	OFF	RUN
STOP	OFF	STOP
STOP	ON	RUN

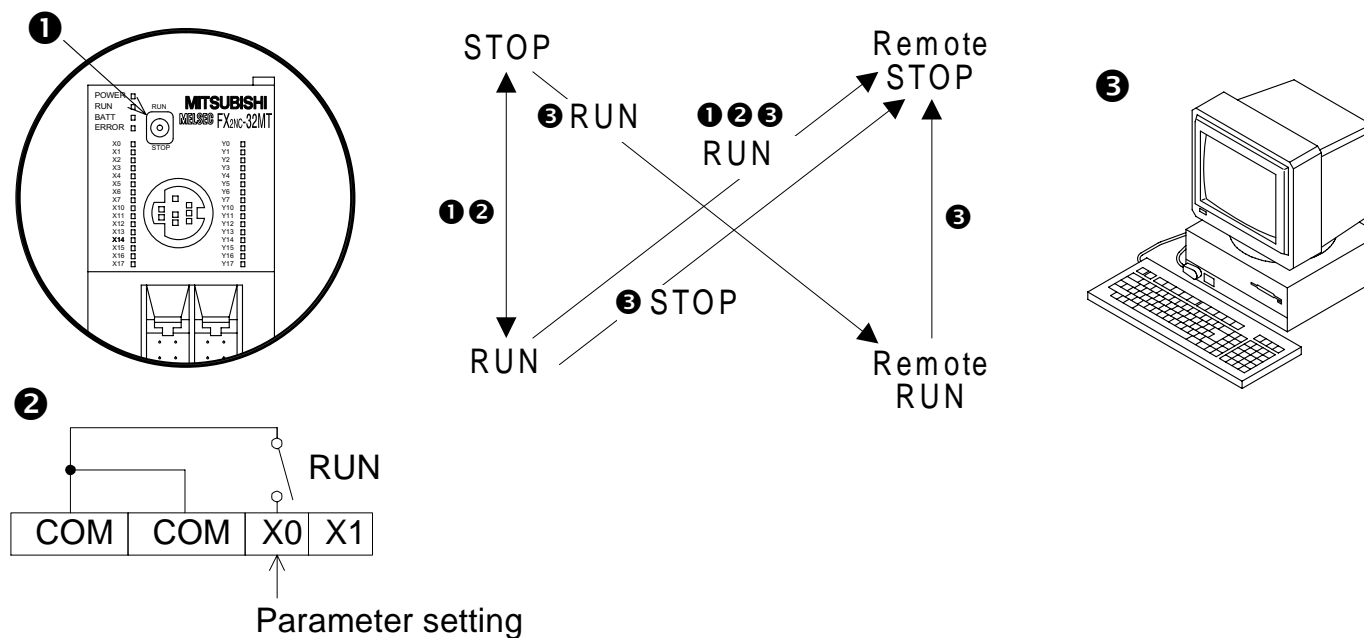**Figure 3.2:**

### 3.3 General specifications

**Table 3.3 :General Specifications**

Item	Description
Operating Temperature	0 to 55 °C (32 to 131 °F)
Storage Temperature	-20 to 70 °C (-4 to 158 °F)
Operating Humidity	35 to 85% Relative Humidity, No condensation
storage Humidity	35 to 90% Relative Humidity, No condensation
Vibration Resistance*1 - Direct Mounting	10 - 57 Hz: 0.075 mm Half Amplitude 57 - 150 Hz: 9.8 m/s <sup>2</sup> Acceleration Sweep Count for X, Y, Z: 10 times (80 min in each direction)
Vibration Resistance*1 - DIN rail Mounting	10 - 57 Hz: 0.035 mm Half Amplitude 57 - 150 Hz: 4.9 m/s <sup>2</sup> Acceleration Sweep Count for X, Y, Z: 10 times (80 min in each direction)
Shock Resistance*1	147m/s <sup>2</sup> Acceleration, Action Time: 11 ms 3 times by half-sine pulse in each direction X, Y, and Z
Noise Immunity	1000 Vp-p, 1microsecond, 30 - 100 Hz, tested by noise simulator
Dielectric Withstand Voltage	500 V AC > 1 min, tested between all points, terminals and ground
Insulation Resistance	5 MΩ > at 500 V DC, tested between all points, terminals and ground
Ground	Class D (100 Ω or less)
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dust
Working altitude	<2000m *2

\*1 The criterion is shown in IEC61131-2.

\*2 Do not use the PLC under pressure higher than the atmospheric pressure. Doing so may damage the PLC.


### 3.4 PC mounting arrangements

To prevent a rise in temperature, mount the units to walls. Never mount them to the floor or ceiling of an enclosure.


Figure 3.3 Single row arrangement

Figure 3.4 Double row arrangement using extension cable FX<sub>0</sub>N-65EC (650mm (25.59 inches); supplied separately).

**Figure 3.2 :**

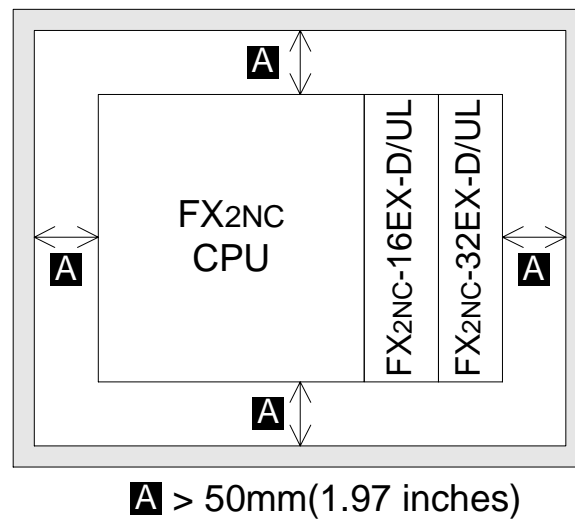

**Figure 3.4 :**

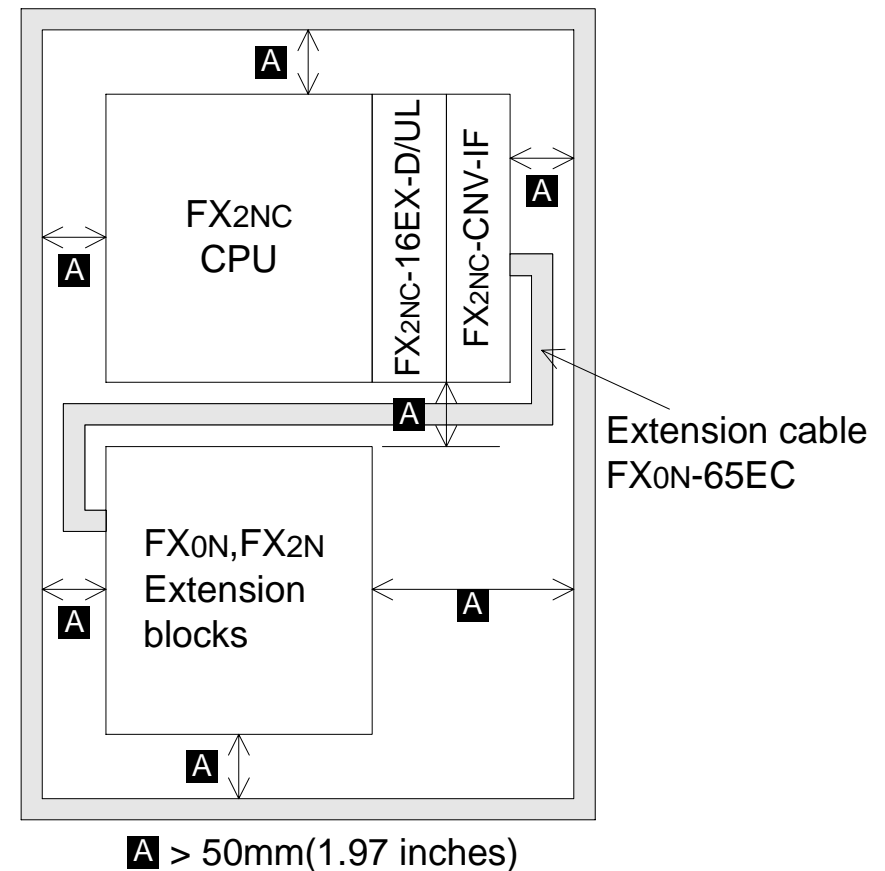

**Caution**


- Units should not be installed in areas subject to the following conditions: excessive or conductive dust, corrosive gas (salt air, Cl<sub>2</sub>, H<sub>2</sub>S, SO<sub>2</sub>, NO<sub>2</sub>, etc.) or flammable gas, moisture or rain, excessive heat, regular impact shocks or excessive vibration.
- Take special care not to allow debris to fall inside the unit during installation e.g. cut wires, shavings etc. Once installation is complete remove the protective paper band: to prevent overheating.



### 3.5 Connection of extension blocks to main unit

- 1) Remove the connector cover from the right side of the main unit.
- 2) Slide up the slide lock of the main unit, and then connect an extension block.
- 3) Slide down the slide lock to lock the extension block.  
Connect the other extension blocks in the same way.

**Figure 3.3 :**

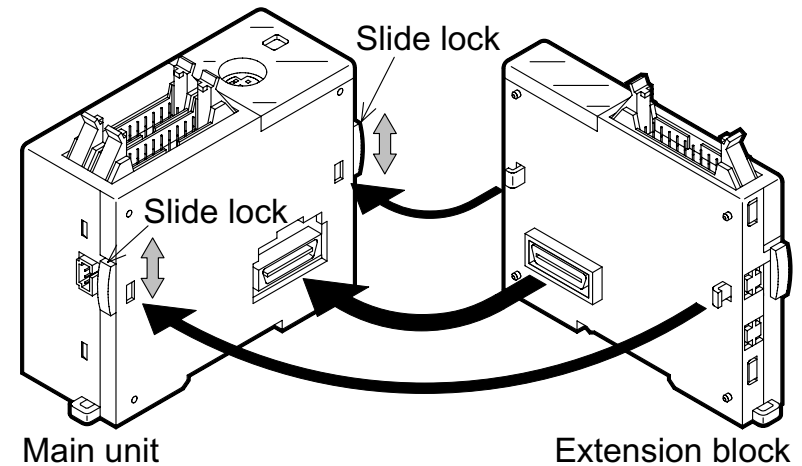


### 3.6 DIN rail mounting

The DIN 46277 rail (35 mm, 1.4 inches) can be directly installed on the FX2NC series programmable controller. (Do not use any screws for this installation.) To remove the main body, slightly slide down the DIN rail mounting clip. Slide the clip farther, and the rail will be locked with the clip left open.


To connect the FX2N series extension blocks, slide the DIN rail mounting clip in the direction of the arrow as shown to the right.

**Figure 3.6 :**

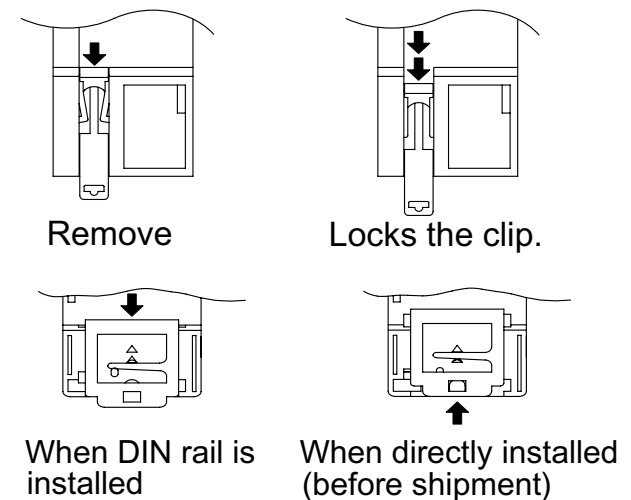

### 3.7 Direct mounting

**Figure 3.7 :Group1**

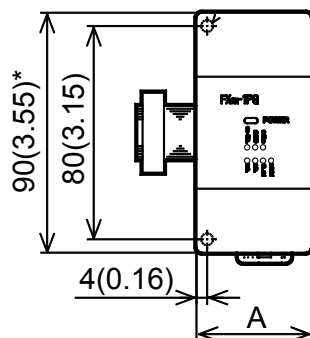




\*: FX2N-1RM is 111(4.37)

Ø = 4.5mm (0.18)


UNITS: mm (inches)

**Table 3.4 :**



MODEL	A	MODEL	A	MODEL	A
FX2N-5A	55 (2.16)	FX2N-2LC	55 (2.16)	FX2N-1PG-E	43 (1.69)
FX2N-4DA		FX2N-2DA	43 (1.69)	FX2N-10PG	
FX2N-4AD		FX2N-2AD		FX0N-232ADP	
FX2N-4AD-PT		FX2N-32CCL		FX0N-485ADP	
FX2N-4AD-TC		FX2N-64CL-M		FX0N-8E□	
FX2N-1HC		FX2N-16LNK-M		FX2N-8E□	
FX2N-232IF		FX0N-3A		FX2N-16CCL-M	85 (3.35)
FX2N-1RM		FX0N-16NT			

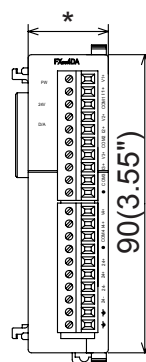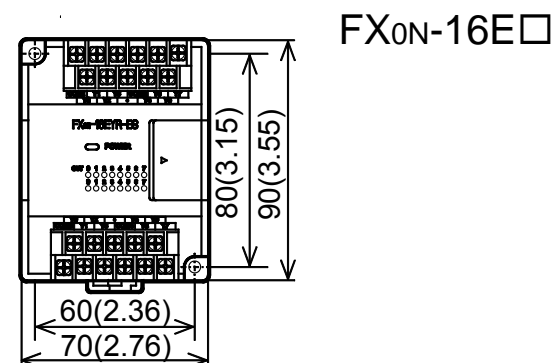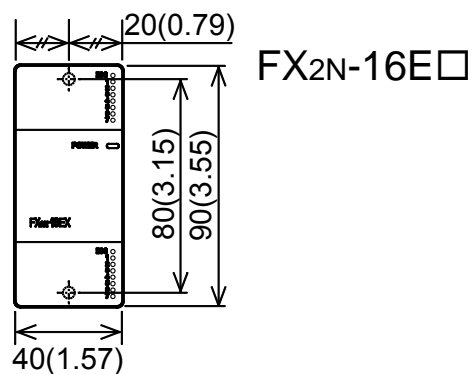**Figure 3.8: Group2**


- \*: FX2NC-4DA is 24.2 (0.96)
- \*: FX2NC-4AD is 20.2 (0.8)

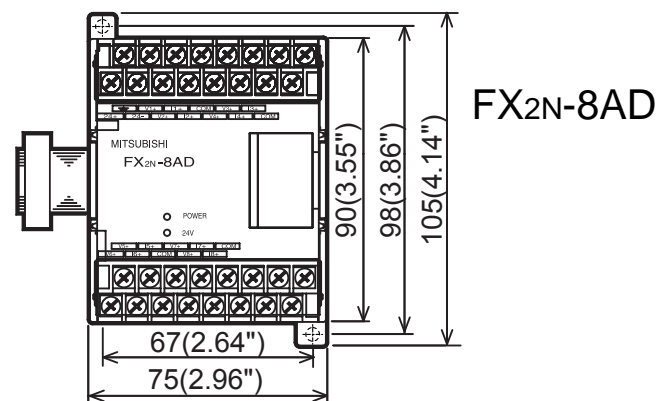

UNITS: mm (inches)

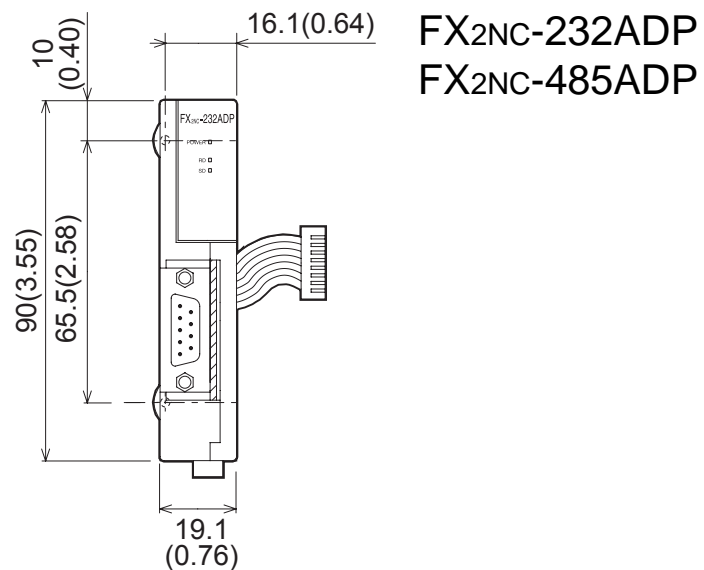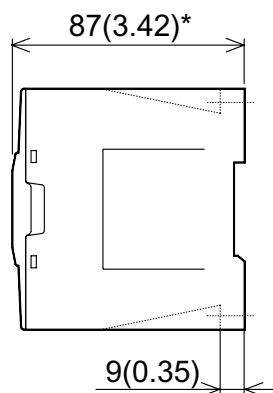
**Figure 3.9:Side view**

\* : FX<sub>2</sub>N-232IF is 85 (3.35)  
 FX<sub>2</sub>N-1RM is 97(3.82)  
 FX<sub>0</sub>N-232ADP is 68(2.68)

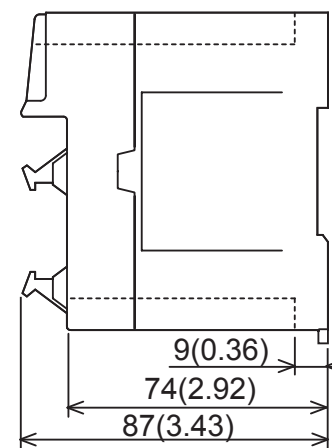
FX<sub>2</sub>N-10PG

UNITS: mm (inches)


15(0.60) 74(2.92)

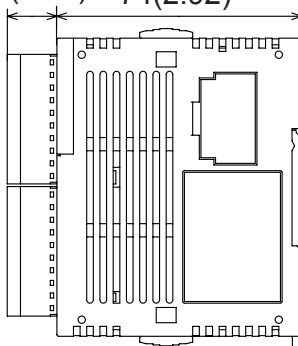

FX<sub>2</sub>NC-4DA  
FX<sub>2</sub>NC-4AD

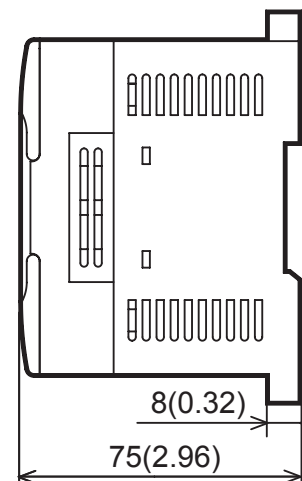

FX<sub>2</sub>N-8AD

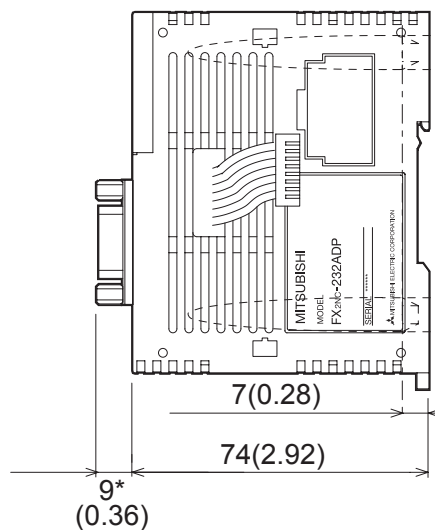

FX<sub>2</sub>NC-232ADP  
FX<sub>2</sub>NC-485ADP  
\* : FX<sub>2</sub>NC-485ADP is 4(0.16)


UNITS: mm (inches)

### 3.8 Extension cable installation

To connect extension blocks next to the FX<sub>2</sub>NC-CNV-IF block, use the FX<sub>0</sub>N-30EC or FX<sub>0</sub>N-65EC extension cable. Note that only one extension cable can be used for one system. In addition, to connect extension blocks, use the FX<sub>2</sub>N-CNV-BC connector conversion adapter as shown in the following figures.


**Figure 3.10:**

Connection example 1

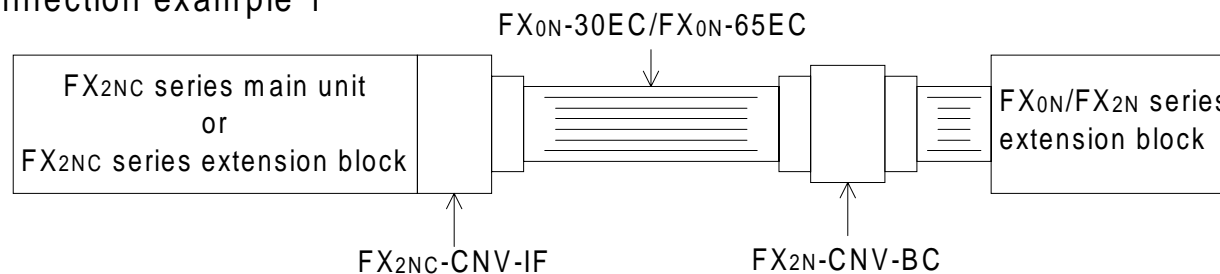

**Figure 3.11:**

Connection example 2

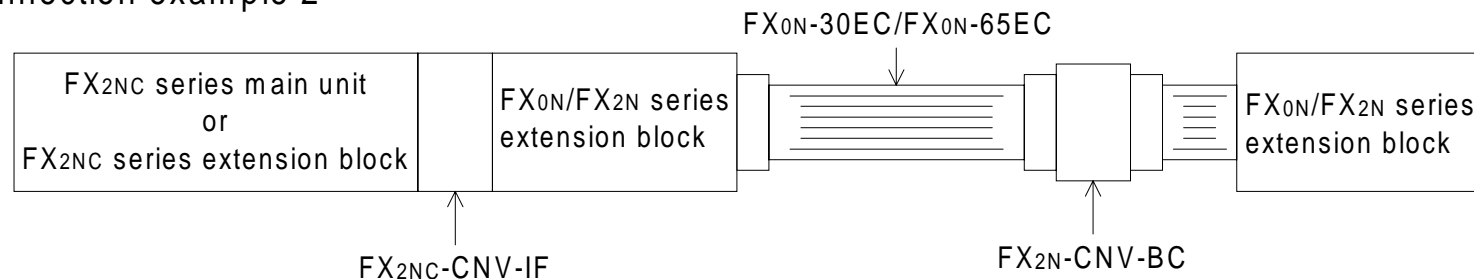

### 3.9 General notes




Always ensure that mounted units and blocks are kept as far as possible from high-voltage cables, high-voltage equipment and power equipment.

### 3.10 Memory Board installation


**Figure 3.12:Installation**

- 1) Turn off the power of the programmable controller.
- 2) Remove the cover from the memory board installation section.
- 3) Connect the memory board to the connector while carefully inserting the pins.

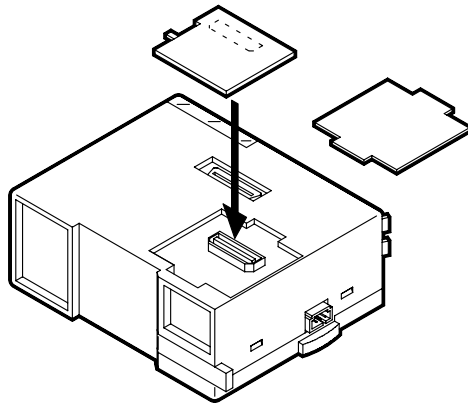

**Figure 3.13:Removal**

- 1) Turn off the power of the programmable controller.
- 2) Remove the cover from the memory board installation section.
- 3) Slowly pull up the lower section of the memory board, and completely remove the board.

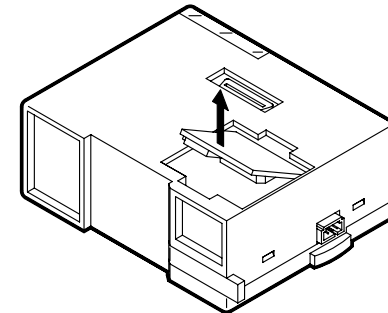

- Before removing or installing the memory board, be sure to turn off the power.
- If the memory board is removed or installed with the power on, the memory board may be damaged.
- During memory board removal or installation, be careful not to directly touch any electronic parts.



### 3.11 Wiring techniques

The wiring of FX2NC products has been designed to be safe and easy. If during the installation of these products or associated products concern is felt, please contact a professional electrician who is trained to the local and national standards applicable to the installation site.



#### Wiring cautions

- Do not run input signals in the same multicore cable as output signals or allow them to share the same wire.
- Do not lay I/O signal cables next to power to power cables or allow them to share the same trunking duct. Low voltage cables should be reliably separated or insulated with regard to high voltage cabling.
- Where I/O signal lines are used over an extended distance consideration for voltage drop and noise interference should be made.

### 3.12 Termination of connector style I/O

The I/O connector should be the 20-pin type and should conform to MIL C 83503 of Military Standard.

This type of connector is also used for FX2c series programmable controllers.






The output connectors of the main unit and the connector-type 16-point output extension blocks are the 16-point common type (8-point common type for the FX2NC-16MT). These output connectors have two COM1 to COM3 pins that are connected to each other inside the programmable controller. To connect the line to an external unit, shortcircuit these two pins at the external circuit so that the load of each pin can be reduced.

### 3.13 Termination of screw terminals




Cables terminating at a screw terminal of an FX2N and FX0N product should be fitted with insulated crimp terminals, see example shown. Terminals screws should be tightened to between 0.5 to 0.8 N·m. Screw terminals must be secured to prevent a loose connection from causing a malfunction. Failure to do so may cause equipment failures or malfunctions.

**Figure 3.14:**

- When one wire is connected to one terminal.

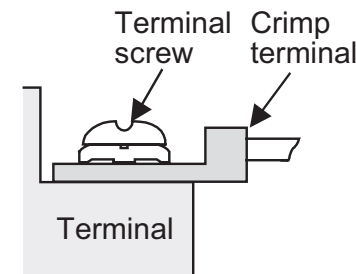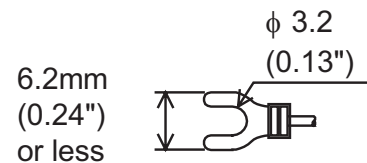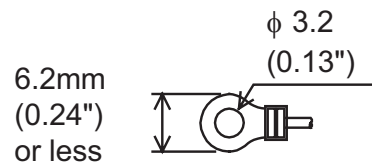

- When two wires are connected to one terminal.

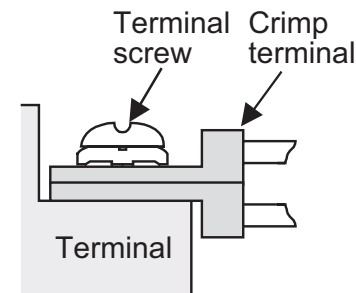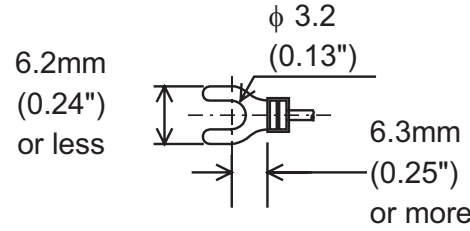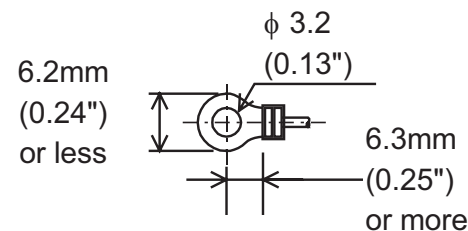


#### Caution

Make sure to turn OFF the power before starting any wiring work.

### 3.14 Termination of connector style I/O cables

Standard, pre-terminated cables are available from Mitsubishi in 1.5, 3 and 5 meter (4.9, 9.8 and 16.4 ft) lengths. However, users are encouraged to make their own cables to the lengths they require. The following table identifies connectors and cable requirements;

**Figure 3.15:**

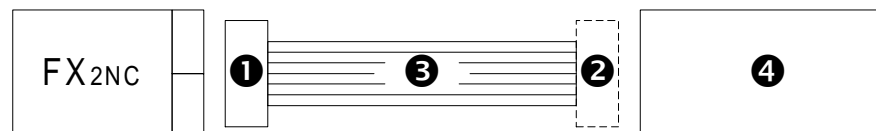

**Table 3.5 :**

( ): ft

MODEL	LENGTH	①	②	③	④
FX-16E-500CAB-S	5m (16.4)	20 Pin connector	No connector	Single wire	Input switch or Loads
FX-16E-150CAB	1.5m (4.9)	20 Pin connector	20 Pin connector	Flat cables	<b>TERMINAL BLOCK</b> •FX-16E-TB •FX-32E-TB •FX-16EX-A1-TB •FX-16EYR-TB •FX-16EYT-TB
FX-16E-300CAB	3m (9.8)				
FX-16E-500CAB	5m (16.4)				
FX-16E-150CAB-R	1.5m (4.9)	20 Pin connector	20 Pin connector	Round cables	
FX-16E-300CAB-R	3m (9.8)				
FX-16E-500CAB-R	5m (16.4)				

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



## 4. Power supply

**Table 4.1 : Power requirements**

	FX2NC-16MT-D/UL	FX2NC-32MT-D/UL	FX2NC-64MT-D/UL	FX2NC-96MT-D/UL
Power supply	24V DC +20%, -15% Ripple Voltage (p-p) 5% or less			
Max. allowable momentary power failure period	5ms (5ms > PC = RUN, 5ms < PC = STOP)			
Fuse (size) rating	250V 3.15A (3A) 5φ×20mm (0.2×0.79 inches)			
In-rush current	30A or less 0.5ms/24V DC			
Power consumption *1	6W	8W	11W	14W

\*1 Includes the input current (7 or 5 mA per point).

**Table 4.2 :Power consumption of FX2nc extension blocks**


When connecting extension blocks, add the values shown below to the power consumption value of the main unit.

Type	Model	Power consumption
Input extension	FX2NC-16EX-D/UL	2.2W *2
	FX2NC-32EX-D/UL	4.2W *2
Output extension	FX2NC-16EYT-D/UL	0.35W
	FX2NC-32EYT-D/UL	0.7W
Special extension	See sec. Table 1.4	

\*2 Includes the input current (5 mA per point).

- To supply the power to the main unit, use the power cable FX<sub>2</sub>NC-100MPCB.
- To supply the power to an input extension block, use the power cable FX<sub>2</sub>NC-100BPCB.  
To supply the power to the second input block or later, perform crossover wiring using the power cable FX<sub>2</sub>NC-10BPCB1.

**Figure 4.1 : Connection of power supply cables**

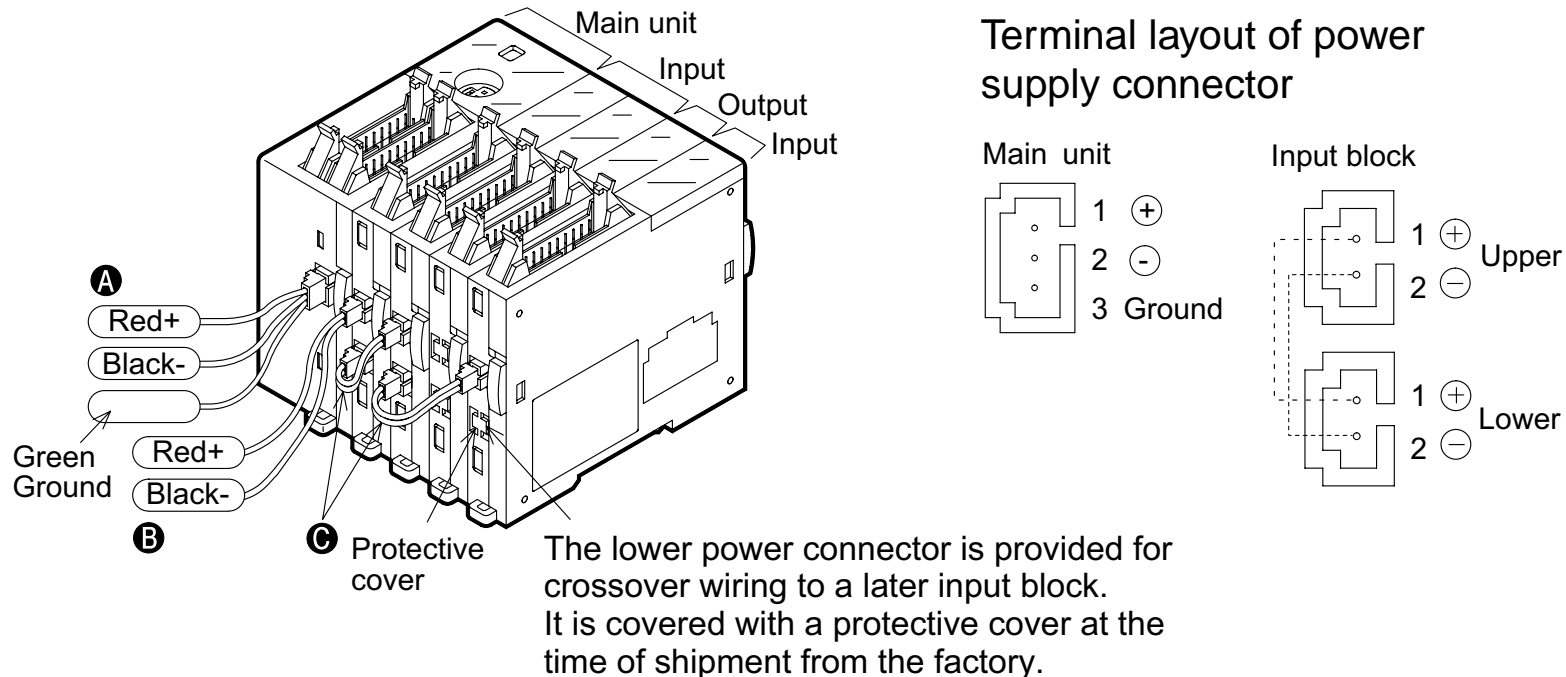



Three types of power cables shown below are offered. **A** and **B** are offered with the main unit, and **C** is offered with an input extension block.

**Table 4.3 :**


Type	Application	Model name	Length	Product in same package
<b>A</b>	Power cable for main unit	FX <sub>2</sub> NC-100MPCB	1m(3.3ft)	Main unit
<b>B</b>	Input power cable for input extension block	FX <sub>2</sub> NC-100BPCB	1m(3.3ft)	
<b>C</b>	Input power cable for input extension block (for crossover wiring)	FX <sub>2</sub> NC-10BPCB1	0.1m(0.3ft)	Input extension block

The crossover cable **C** can be wired across up to four 16-point output blocks. To supply the power to an input block beyond four output blocks, use the cable **B**.



For the 24V DC power source of the FX or FX<sub>2</sub>N series programmable controllers, the correction value should be written in data register D8008; a special data register that sets the power failure detection period. However, for the FX<sub>2</sub>NC series programmable controllers, it is not necessary to write the correction value.

The data stored in the D8008 register will be automatically corrected by the system program. Do not modify the D8008 data.

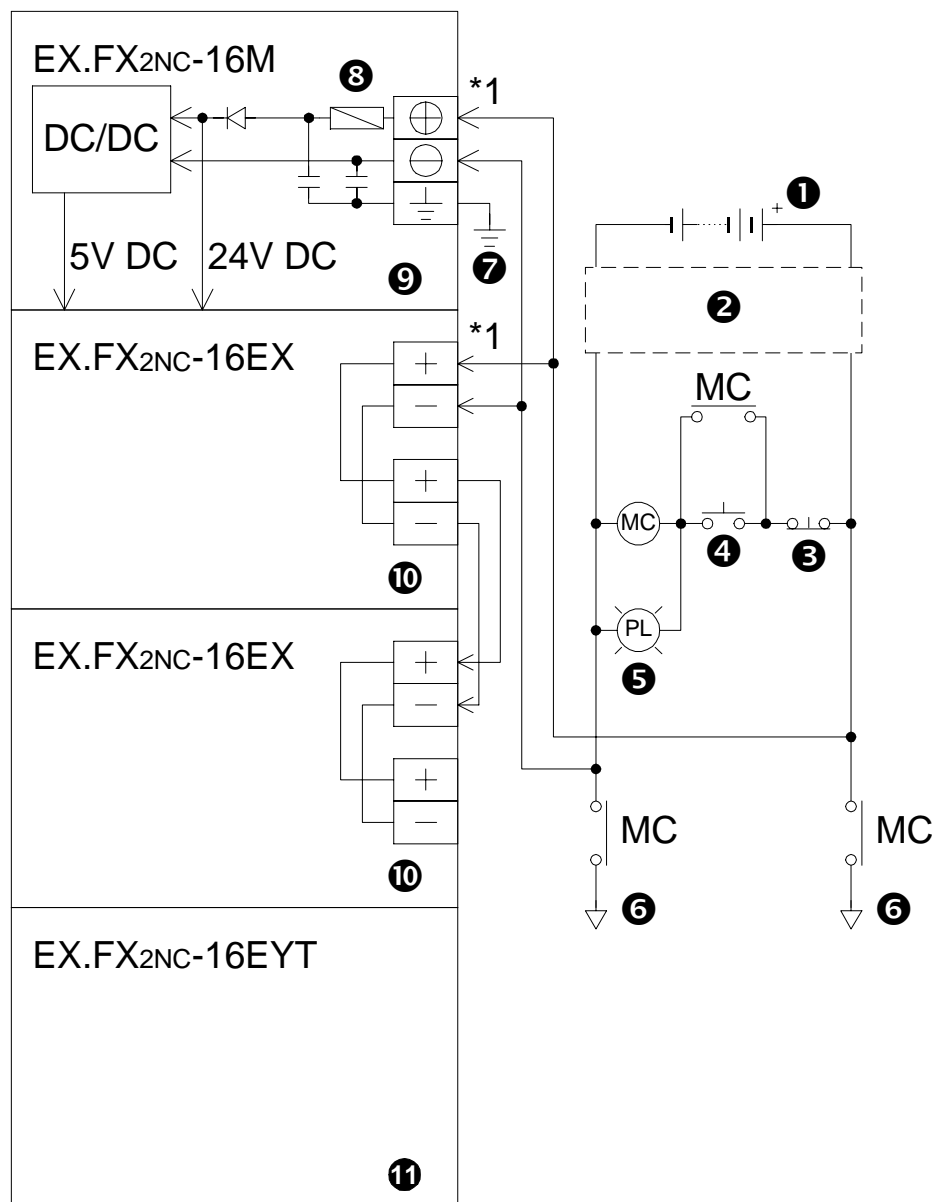**Figure 4.2 : EX.wiring**

①	Power supply 24V DC +20% -15% Ripple voltage (p-p) 5% or less
②	Circuit protector or Fuse
③	Emergency stop
④	Power supply switch
⑤	Power ON pilot indicator
⑥	Power supply for loads
⑦	Grounding resistor 100Ω or less (class D)
⑧	Fuse
⑨	Main unit
⑩	Input extension blocks
⑪	Output extension block

\*1 It is recommended to use the same power source to power the main unit, input extension blocks and special function blocks. If two sources are required, follow the below guidelines:


- Supply power to the input extension blocks and special function blocks before or at the same time the main unit is powered.
- The power supplies may be cut the same time after ensuring system safety.

## 4.1 Power supply cautions



As shown in the following figure, supply 24V DC to the main unit, special function blocks, and data access unit from the same power source.


**Figure 4.3 : Use of same power source**

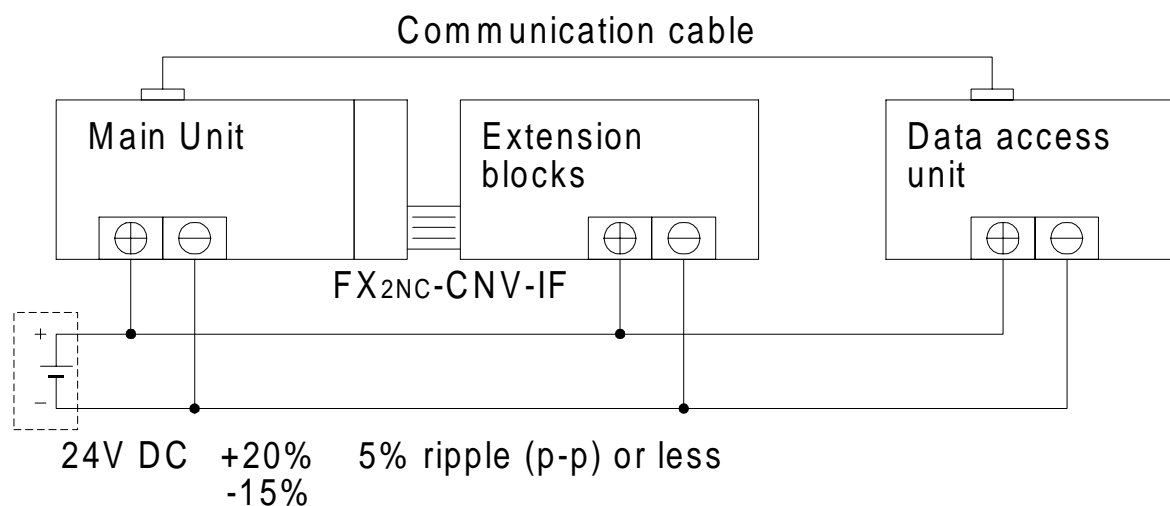



If the power has to be supplied from two power sources due to low capacity of the DC power supply unit, etc., be sure to connect the minus lines of the two power supply units.

**Figure 4.4: Connection of minus lines**

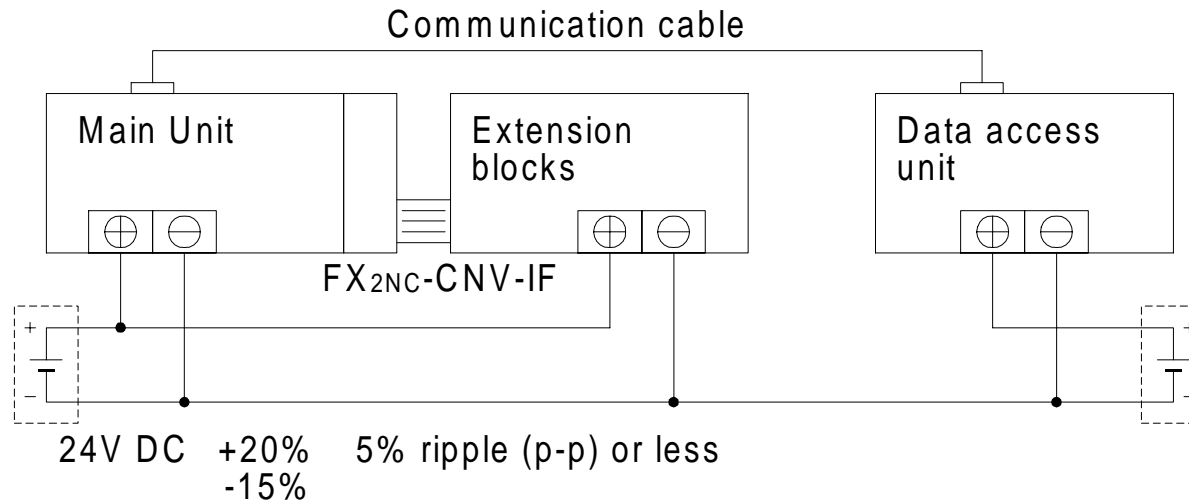

## 4.2 Earthing / Grounding



Use a cable at least  $0.2\text{mm}^2$  (AWG24) to ground equipment. Ground resistance must be less than  $100\Omega$  (class D). Note that the ground cable must not be connected to the same ground as the power circuits. Grounding is recommended but if a proper ground cannot be provided the PC will still operate correctly without being grounded.

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



## 5. Inputs


### 5.1 24V DC input specifications

**Table 5.1 :FX2NC input specifications**

		FX2NC main unit, extension block		FX0N, FX2N Extension block
		X0 → X7	X10 → ∞	
Input voltage		24V DC +20%, -15%		
Input current		24V DC, 7mA	24V DC, 5mA	24V DC, 5mA
Input switching current	OFF → ON	>4.5mA	>3.5mA	>3.5mA
	ON → OFF	<1.5mA		
Response time		10ms		
Variable response time		X000-X017 0-60ms (FX2NC-16M★ : X000-X007)		---
Circuit isolation		Photocoupler		
Operation indication		LED is lit		

### 5.1.1 Typical wiring

**Figure 5.1 : sink**

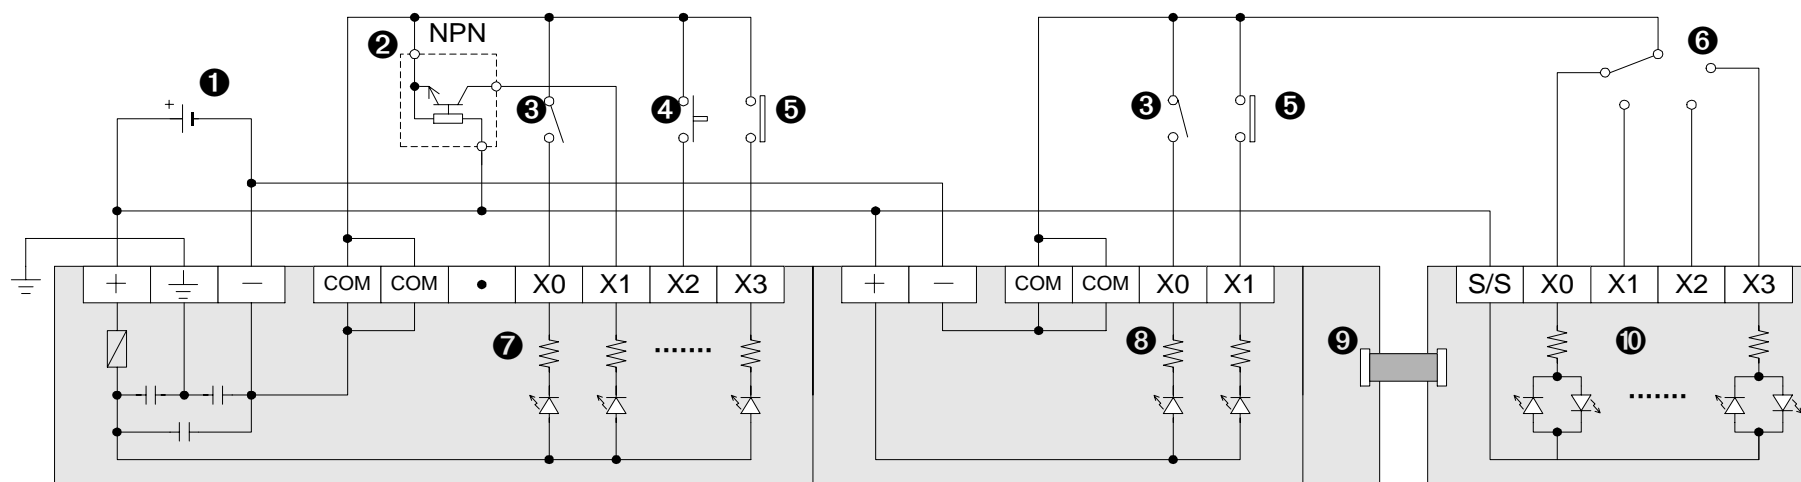





**Table 5.2 : Item check**

①	External power supply 24V DC +20% -15%
②	NPN proximity sensor
③	Switch
④	Push button
⑤	Contact
⑥	Rotary switch
⑦	MPU main processing unit (main unit)
⑧	FX2NC Input extension block
⑨	FX2NC-CNV-IF Connector conversion adapter
⑩	FX0N, FX2N Extension block

### 5.1.2 Input circuit connection

**Figure 5.2 : FX2NC Main unit and FX2NC Extension block**

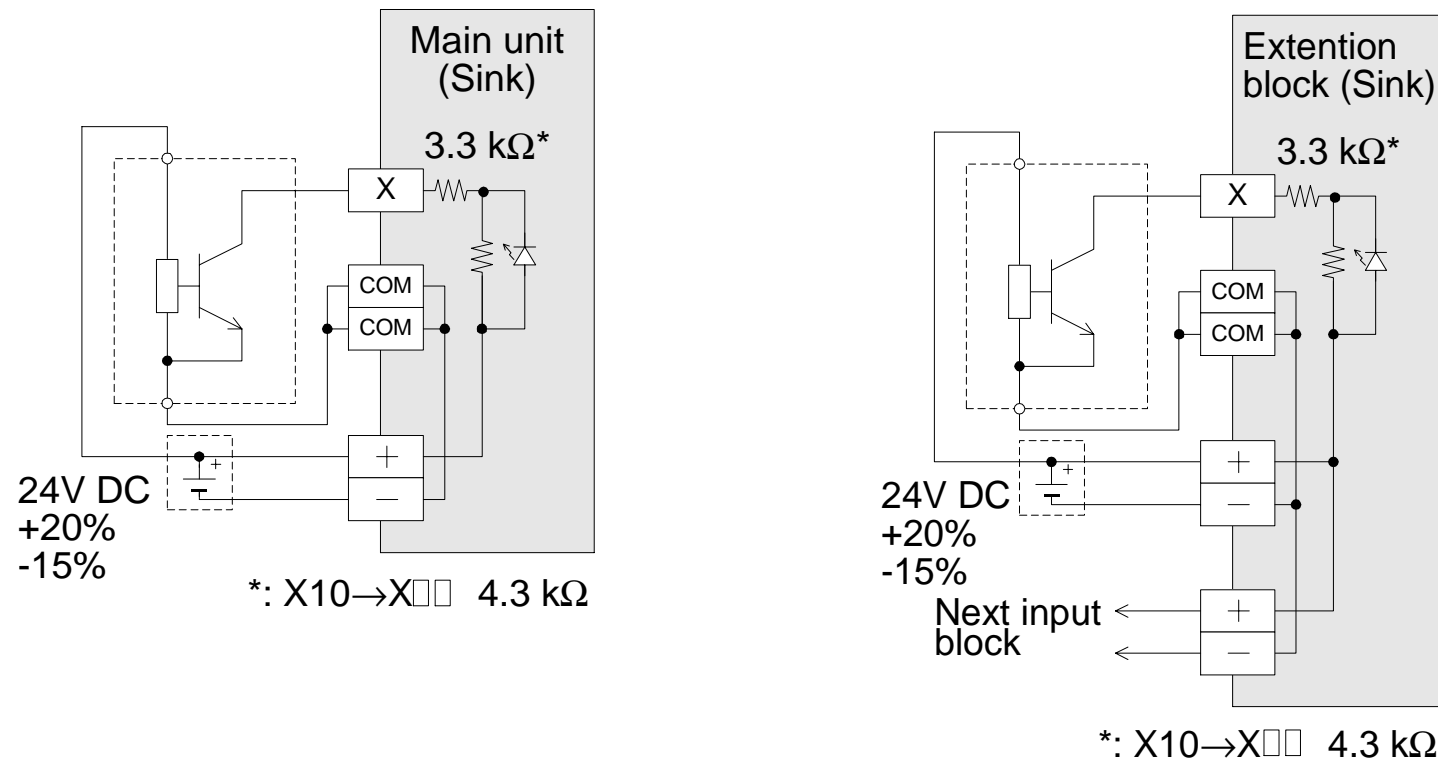


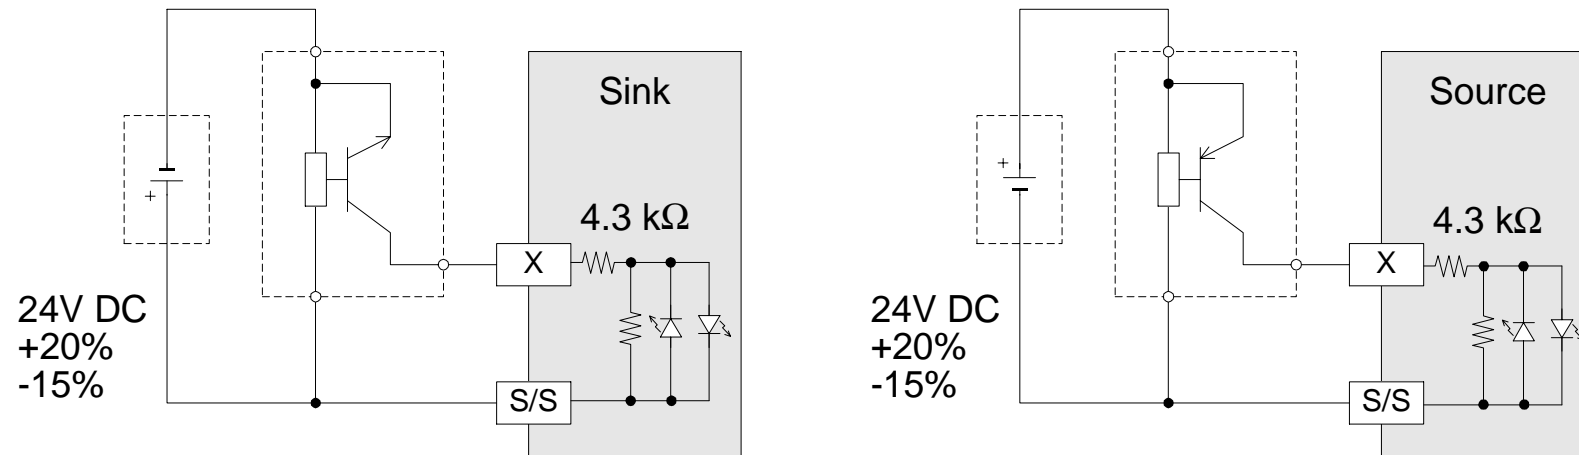
**Figure 5.3 : FX<sub>2N</sub> and FX<sub>0N</sub> Extension block**

### 5.1.3 Diodes and inputs connected in series;

Vdrop across the diode Max. 4V

No more than 2 LEDs should be connected in series.

**Figure 5.4 : Series diodes**

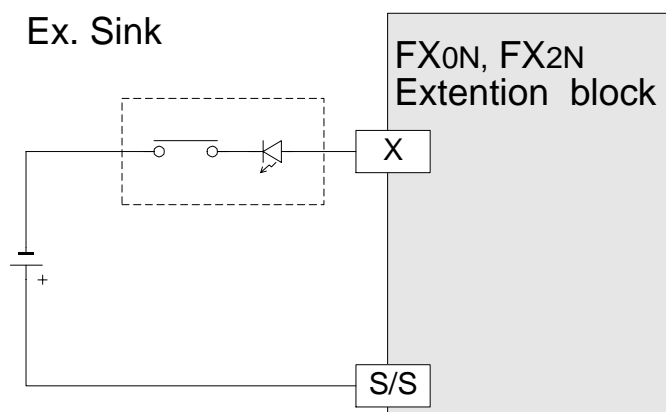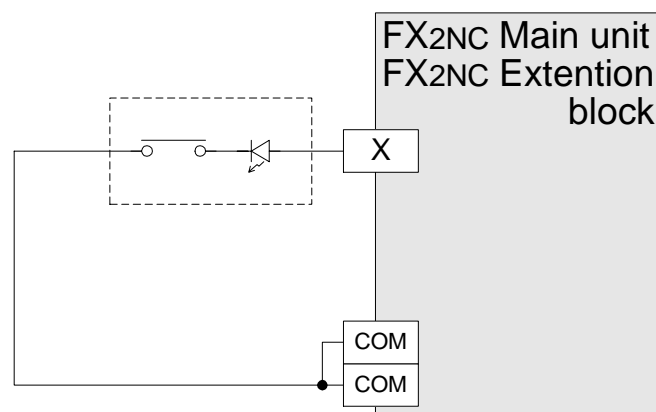

### 5.1.4 Resistors and inputs connected in parallel;


Parallel resistance  $R_p$ :  $FX_{2NC} = 15k\Omega$ . If resistance  $R_p$  is less than the stated value, then add  $R_b$ . See equation 1 for  $R_b$  calculation.

Alternatively; Current leakage:  $FX_{2NC} = 1.5mA$ . If the current leakage is greater than the stated value, then add  $R_b$ . See equation 2 for  $R_b$  calculation.

**Figure 5.5 : Parallel LED**

$$\text{Eqn 1 : } R_b \leq \frac{4R_p}{15 - R_p}$$

$$\text{Eqn 2 : } R_b \leq \frac{6}{I - 1.5}$$

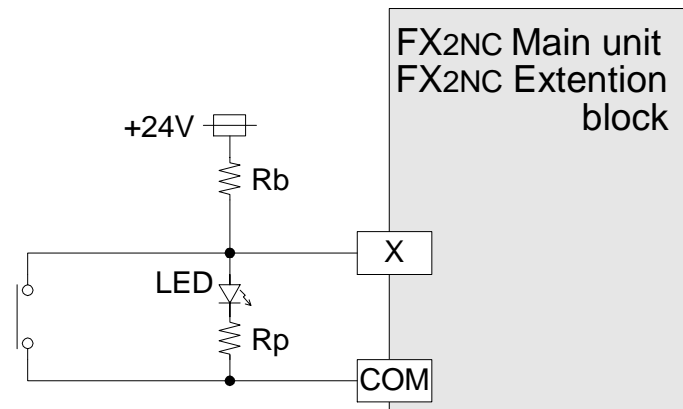


## 5.2 AC110V input Extension block

**Table 5.3 :  $FX_{0N}$ -8EX-UA1/UL,  $FX_{2N}$ -8EX-UA1/UL input specification**

Input voltage	85-132V AC 50/60Hz
Input impedance	21k $\Omega$ /50HZ 18k $\Omega$ /60Hz
Input current	4.7mA 100V AC/50Hz 6.2mA 110V AC/60Hz
OFF $\rightarrow$ ON/ON $\rightarrow$ OFF; input switching current	80V 3.8mA/30V 1.7mA
Response time	25ms
Circuit isolation / Operation indication	Photocoupler/LED is lit

### 5.2.1 Input circuit connection

**Figure 5.6 :  $FX_{0N}$ -8EX-UA1/UL,  $FX_{2N}$ -8EX-UA1/UL**

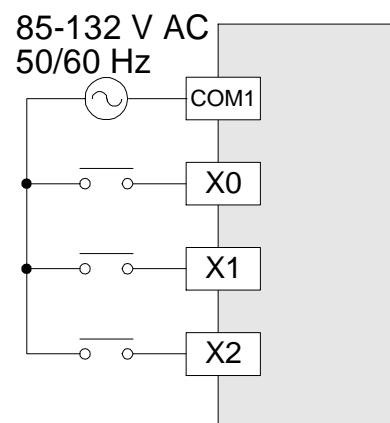


### 5.2.2 Programming caution



When using 110V AC units, high speed counter and interrupt routines are not suitable for use due to the long 'ON/OFF' times. The following instructions are also not suitable.

FNC 51 REFF	FNC 70 TKY
FNC 52 MTR	FNC71 HKY
FNC 56 SPD	FNC 72 DSW
FNC 68 ROTC	FNC 75 ARWS

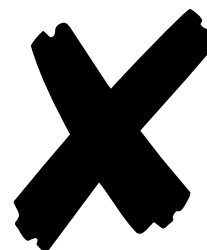

## **MEMO**



<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



## 6. Outputs

### 6.1 Transistor output specification

**Table 6.1 :**

<b>Switched voltage (resistive load)</b>		5-30V DC
<b>Rated current / N points (resistive load)</b>		FX2NC Main unit, Extension block: 0.1A/1point, 0.8A/8point, 0.3A/1point (Y000-Y003) FX0N, FX2N Extension block: 0.5A/1point, 0.8A/4point, 1.6A/8point
<b>Max. Inductive load</b>		FX2NC Main unit, Extension block: 2.4W/24V DC, 7.2W/24V DC (Y000-Y003) FX0N, FX2N Extension block: 12W/24V DC
<b>Response time (approx.)</b>	OFF → ON	<0.2ms (100mA/24V DC), <15μs (100mA/5V DC) (Y000,Y001)
	ON → OFF	<0.2ms (100mA/24V DC), <30μs (100mA/5V DC) (Y000,Y001)
<b>Open circuit current leakage</b>		0.1mA/30V DC
<b>Circuit isolation</b>		Photocoupler
<b>Operation indication</b>		LED is lit when photocoupler is driven

### 6.1.1 Response times


OFF times increase as the load current decreases.

For improved response times use a 'dummy' resistor, see Figure 6.1. If a response time of 0.5 ms or better is required when using 'light loads' use a 'dummy' resistor and ensure the signal line has a current greater than 60mA/24V DC.


**Figure 6.1 :Dummy load**

FX<sub>2</sub>NC Main unit

FX<sub>2</sub>NC Extension block

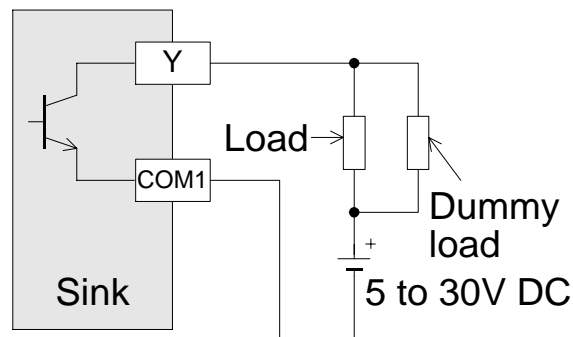

FX<sub>0</sub>N, FX<sub>2</sub>N Extension block

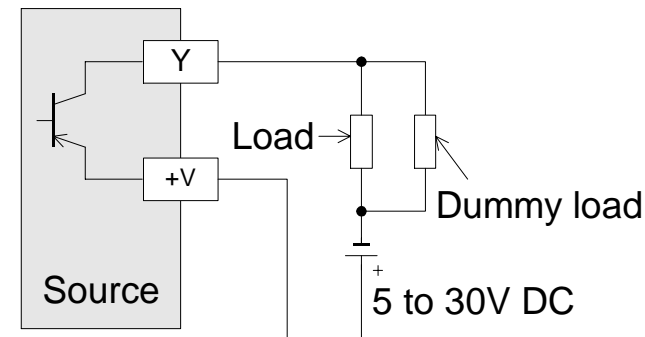


## 6.1.2 Output circuit configuration




### Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

### External Writing of Sink Output Type

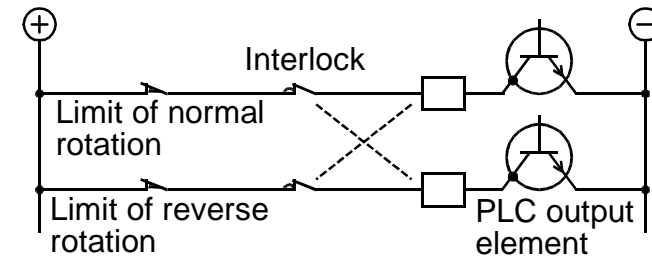

### External Writing of Source Output Type

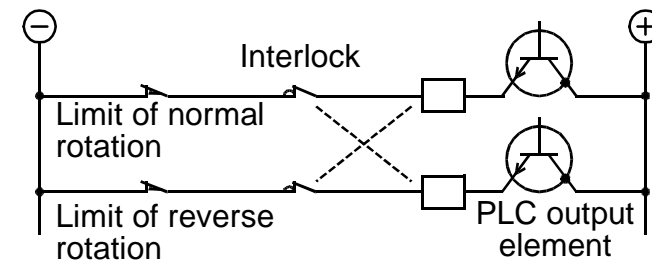

### 6.1.3 Transistor output example




#### Common points (See sec, 2.1, 2.2, 2.3)


- FX<sub>2</sub>NC-16MT-D/UL : 8 points (COM1 See sec, 3.12)
- FX<sub>2</sub>NC-32/64/96MT-D/UL, FX<sub>2</sub>NC-16/32EYT-D/UL :  
16 points (COM1 to COM3 See sec, 3.12)
- FX<sub>2</sub>N-16EYT-ESS/UL : 8 points (+V0, +V1)
- FX<sub>2</sub>N-8EYT-ESS/UL : 4 points (+V0, +V1)
- FX<sub>0</sub>N Extension blocks : 4 points (+V0 to +V3)

#### Typical wiring to the 4-point common type.

**Figure 6.2:FX<sub>0</sub>N, FX<sub>2</sub>N Extension (Source)**

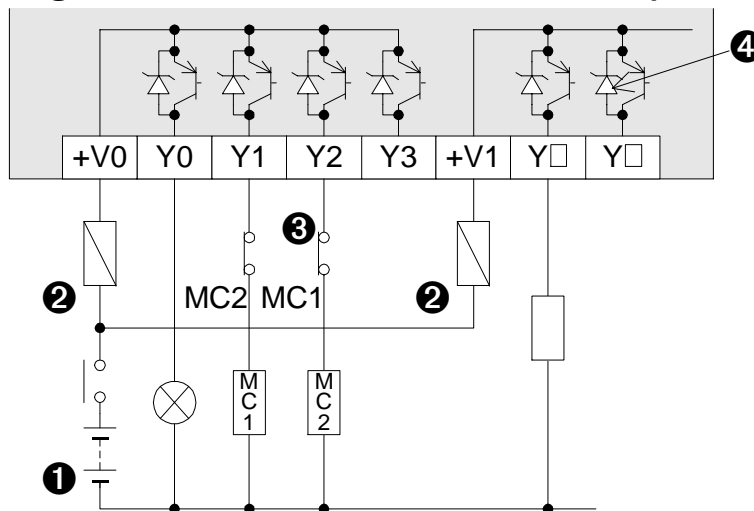

**Figure 6.3:Ref. Japanese Spec. (Sink)**

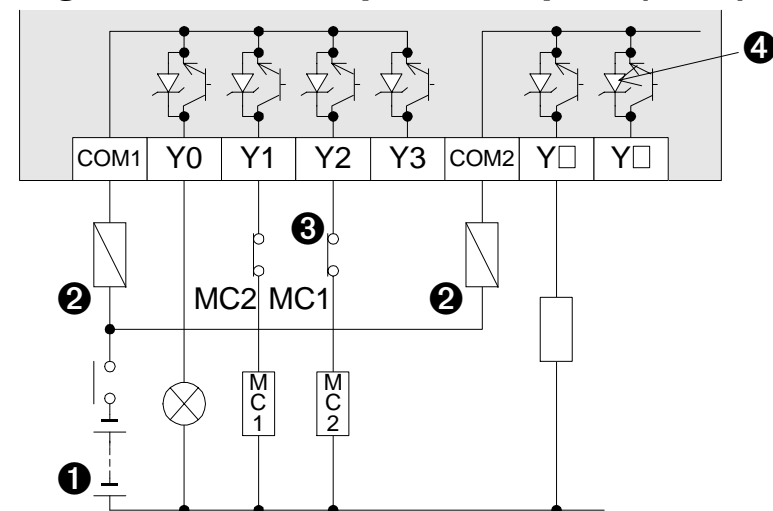

**Table 6.2 : Item check**

<b>①</b>	DC power supply	<b>③</b>	External, mechanical inter-lock
<b>②</b>	Fuse	<b>④</b>	Internal noise suppressor

Typical wiring to the 8 and 16-point common type.

Figure 6.4 :FX2NC (D/UL) (Sink)

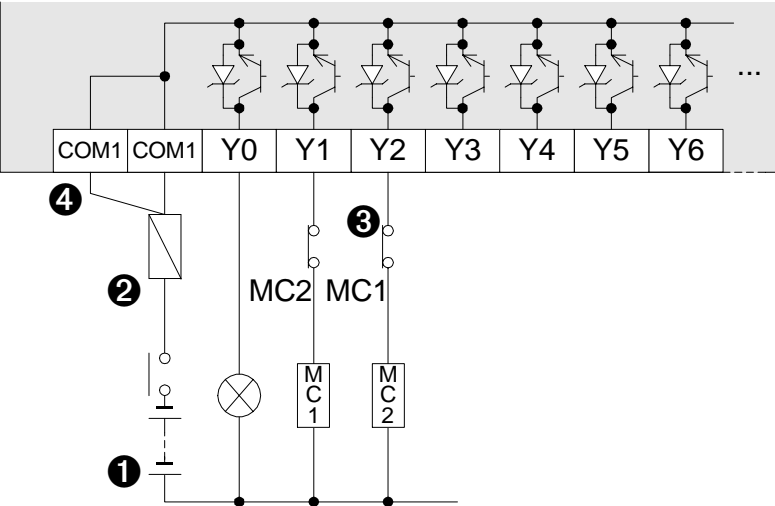


Figure 6.5 :FX0N, FX2N Extension (Source)

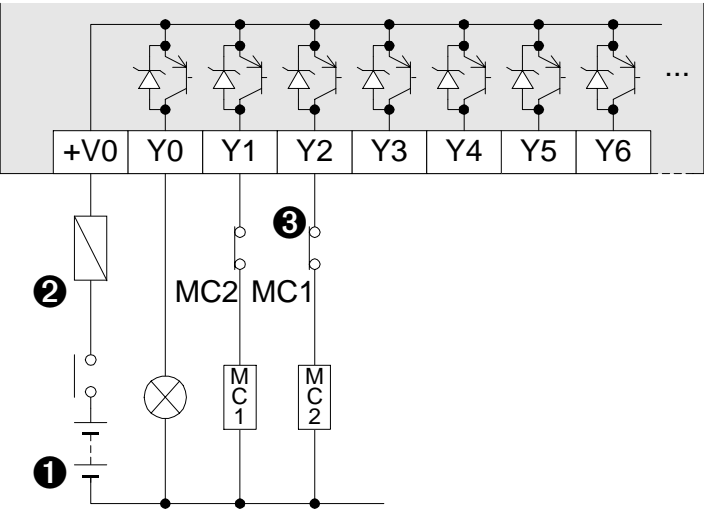



Table 6.3:Item check

①	DC power supply
②	Fuse
③	External, mechanical inter-lock
④	<div><p>The output connectors of the main unit and the connector-type 16-point output extension blocks are the 16-point common type (8-point common type for the FX2NC-16MT). These output connectors have two COM1 to COM3 pins that are connected to each other inside the programmable controller. To connect the line to an external unit, shortcircuit these two pins at the external circuit so that the load of each pin can be reduced.</p></div>

## 6.2 Relay output specification

**Table 6.4 :**

<b>Switched voltages (resistive load)</b>		≤ 250V AC, ≤ 30V DC
<b>Rated current / N points (resistive load)</b>		FX2N ,FX0N:Extension blocks 2A/1point, 8A/COM
<b>Max. Inductive load</b>		80VA See table 6.5
<b>Minimum load</b>		When supply voltage < 24V DC allow at least 5mA flow
<b>Response time (approx.)</b>	<b>OFF → ON</b>	10ms
	<b>ON → OFF</b>	10ms
<b>Circuit isolation</b>		by relay
<b>Operation indication</b>		LED is lit when coil is energized



### 6.2.1 Product life of relay contacts

The product life of relay contacts considerably varies depending on the load type used. Take care that loads generating reverse electromotive force or rush current may cause poor contact or deposition of contacts which may lead to considerable reduction of the contact product life.

#### 1) Inductive load

Inductive loads generate large reverse electromotive force between contacts at shutdown which may cause arcing. At a fixed current consumption, as the power factor (phase between current and voltage) gets smaller, the arc energy gets larger.

The test results in table 6.5 were gathered from a 1 sec ON/OFF test cycle.

Please note that the over current induced by in-rush greatly reduces the relay contacts life. The rated life for an inductive AC load such as a contactor or solenoid valve is 500,000 operations at 20VA.

**Table 6.5 :**

	<b>20VA</b>	<b>35VA</b>	<b>80VA</b>
Load capacity	0.2A/100VAC 0.1A/200VAC	0.35A/100V AC 0.15A/240V AC	0.8A/100V AC 0.33A/240V AC
Life of contact (cycles)	3,000,000	1,000,000	200,000

The product life of relay contacts becomes considerably shorter than the above conditions when the rush overcurrent is shut down.

\* For countermeasures while using inductive loads, refer to "Output circuit configuration" below in this section.

Some types of inductive loads generate rush current 5 to 15 times the stationary current at activation. Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

## 2) Lamp load

Lamp loads generally generate rush current 10 to 15 times the stationary current.

Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load.

## 3) Capacitive load

Capacitive loads can generate rush current 20 to 40 times the stationary current.

Make sure that the rush current does not exceed the current corresponding to the maximum specified resistance load. Capacitive loads such as capacitors may be present in electronic circuit loads including inverters.

\* For the maximum specified resistance load, refer to Section 6.1.

## 6.2.2 Output circuit configuration


An internal protection circuit for the relays is not provided in the relay output circuit for this product. It is recommended to use inductive loads with built-in protection circuits. When using loads without built-in protection circuits, insert an external contact protection circuit, etc. to reduce noise and extend the product life.



### 1) DC load

Connect a diode in parallel with the load. The diode (for commutation) must comply with the following specifications.


Item	Guide
Reverse voltage	5 to 10 times the load voltage
Forward current	Load current or more

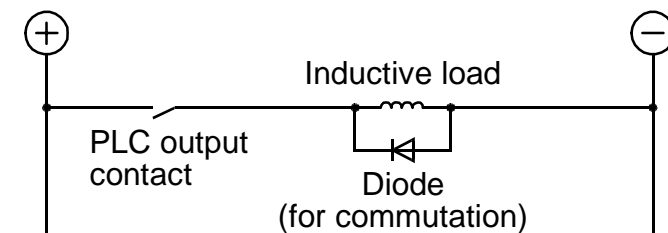

### 2) AC load

Connect the surge absorber shown to the right (combined CR components such as a surge killer and spark killer, etc.) parallel to the load. Select the rated voltage of the surge absorber suitable to the output used. Refer to the table below for other specifications.


Item	Guide
Electrostatic capacitance	Approx. 0.1 $\mu\text{F}$
Resistance value	Approx. 100 to 200 $\Omega$

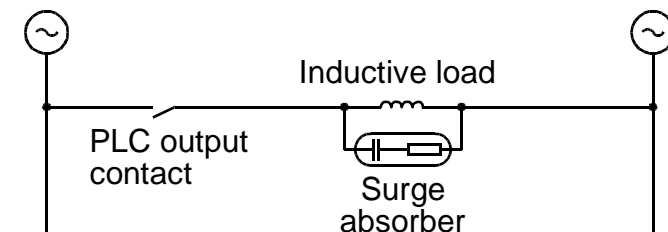




## 3) Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

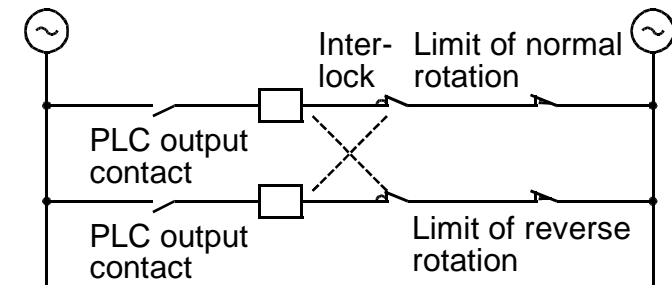


## 4) In-phase

PLC output contacts (\*) should be used in an "in-phase" manner.

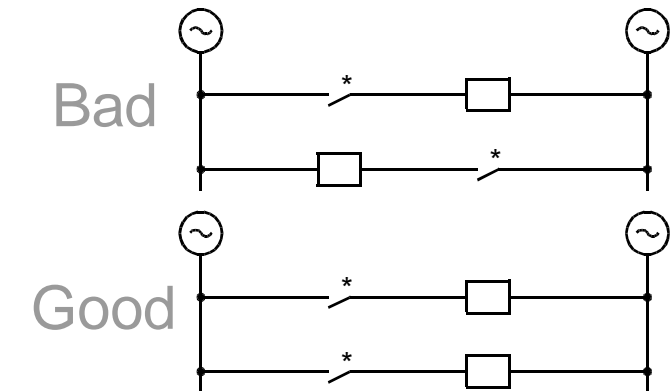

### 6.2.3 Relay output example

**Figure 6.6: Typical wiring to the 4-point common type**

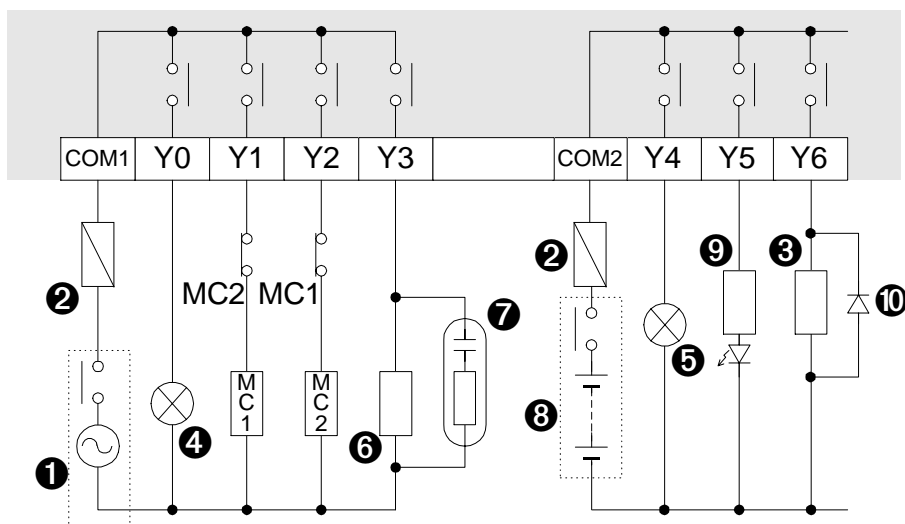

**Table 6.6 : Item check**


①	AC power supply
②	Fuse
③	Solenoid valve
④	Incandescent lamp
⑤	Neon lamp
⑥	Contactor
⑦	Noise suppressor 0.1μF capacitor + 100-200Ω resistor
⑧	DC power supply
⑨	LED
⑩	Surge absorbing diode



Common points (See sec, 2.1, 2.2, 2.3)

- FX<sub>2</sub>N-16EYR-ES/UL : 8points (COM1, COM2)
- FX<sub>2</sub>N-8EYR-ES/UL, FX<sub>2</sub>N-8ER-ES/UL : 4points (COM1, COM2)
- FX<sub>0</sub>N Extension blocks : 4points (COM1 to COM4)

**Figure 6.7 :Typical wiring to the  
8-point common type**

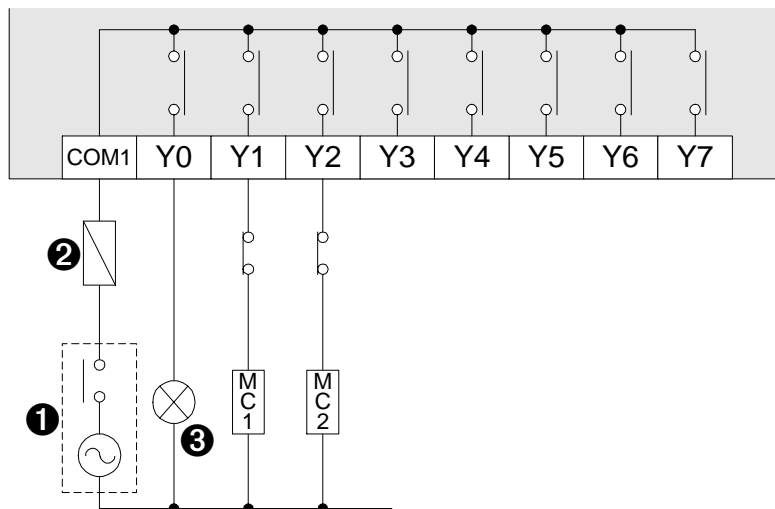

**Table 6.7 :Item check**

❶	AC power supply
❷	Fuse
❸	Incandescent lamp

### 6.3 Triac (SSR) output specifications

**Table 6.8 :**

<b>Switched voltages (resistive load)</b>		85-242V AC
<b>Rated current / N points (resistive load)</b>		0.3A/1point, 0.8A/COM
<b>Max. Inductive load</b>		15VA/100V AC, 36VA/240V AC
<b>Minimum load</b>		0.4VA/100V AC, 2.3VA/240V AC
<b>Open circuit current leakage</b>		1mA/100V AC, 2.4mA/240V AC
<b>Response time (approx.)</b>	<b>OFF→ON</b>	<1ms
	<b>ON→OFF</b>	<10ms
<b>Circuit isolation</b>		by photocoupler
<b>Operation indication</b>		LED is lit when photocoupler is driven

### 6.3.1 In-rush currents

These currents should be kept as low as possible. The root mean square ( $I_{rms}$ ) < 0.2A. Reference Eqn 1 for ( $I_{rms}$ )

$I_r$  -In-rush current (A)

$T_r$  -In-rush time (sec)

$I_s$  -Switch current (A)

$T_s$  -Switch time (sec)

$T_f$  -Operation time (sec)


Eqn 1

$$I_{rms} = \sqrt{\frac{I_r^2 \times T_r + I_s^2 \times T_s}{T_r + T_s + T_f}}$$

Ex.

$$0.2A = \sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}}$$

**Figure 6.9 :Current graph**

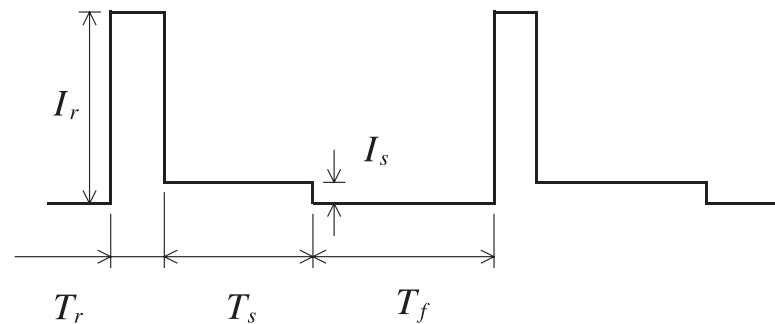




### 6.3.2 Output circuit configuration



#### 1) Very low current load


The triac output circuit inside the PLC has a C-R absorber for turning OFF. When connecting a very low current load of "0.4 VA / 100V AC or less, or 1.6 VA / 200V AC or less", please connect a surge absorber parallel to the load. Select the rated voltage of the surge absorber suitable to the load used. Refer to the table below for other specifications.

Item	Guide
Electrostatic capacitance	Approx. 0.1 $\mu$ F
Resistance value	Approx. 100 to 200 $\Omega$

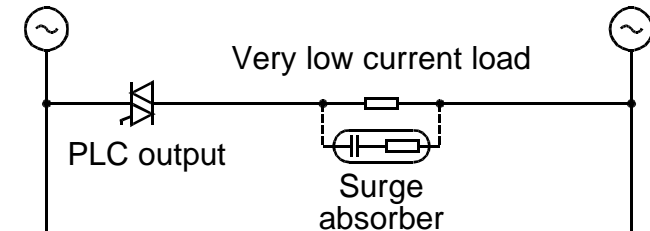

#### 2) Interlock


For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

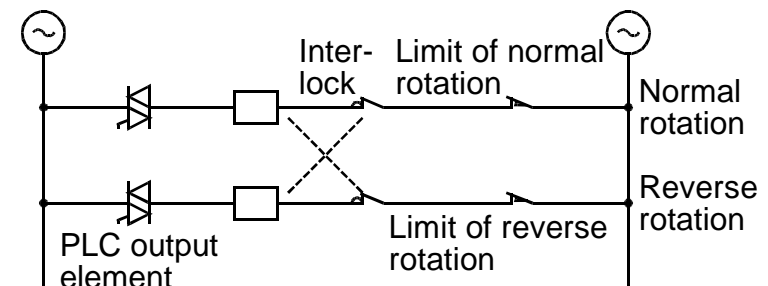




## 3) In-phase

PLC output contacts (\*) should be used in an "in-phase" manner.

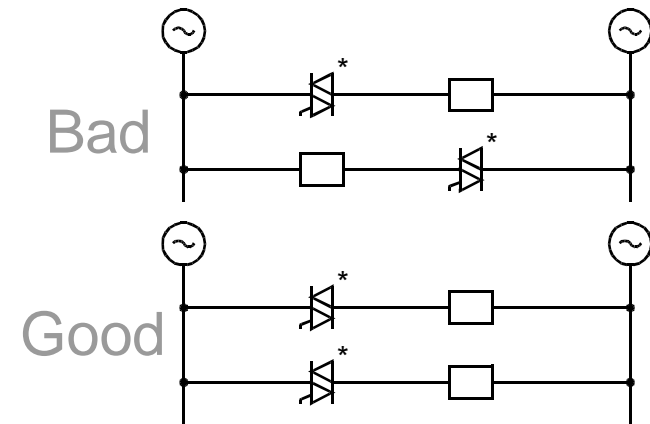

### 6.3.3 Triac output example

**Figure 6.10: Typical wiring**

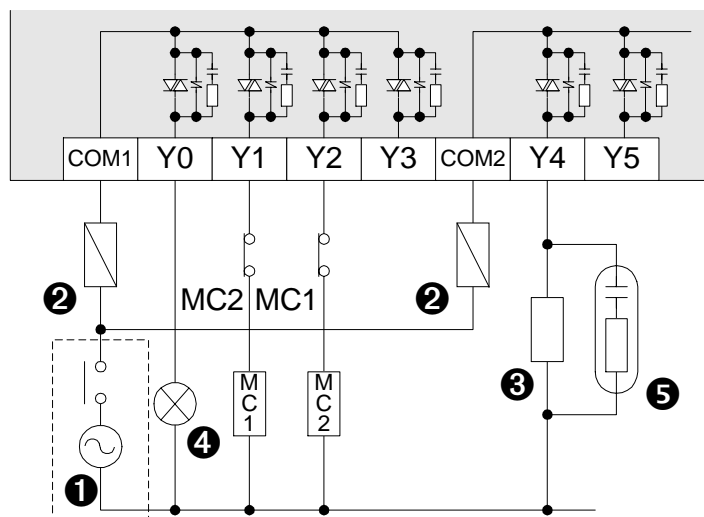

**Table 6.9: Item check**

①	AC power supply
②	Fuse
③	Solenoid valve
④	Incandescent lamp
⑤	Noise suppressor 0.1μF capacitor+100-200Ω resistor

## 6.4 Applying safe loads



Ensure all loads are applied to the same side of each PC output, see previous figures. Loads which should NEVER simultaneously operate (e.g. direction control of a motor), because of a safety critical situation, should not rely on the PC's sequencing alone. Mechanical interlocks MUST be fitted to all safety critical circuits. (See preceding figure.)


## **MEMO**

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>



## 7. Diagnostics

### 7.1 Preliminary checks

POWER <input type="checkbox"/> RUN <input type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Check power supply, ground and I/O cables are wired correctly.
POWER <input checked="" type="checkbox"/> RUN <input type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Turn the power supply on. Check the power LED is lit. Down load a small test program into the PC using a handheld programmer or MEDOC. Verify the program to ensure it has been written to the PC correctly. Using the programming device forcibly turn ON/OFF each output. Check the output LEDs for operation.
POWER <input checked="" type="checkbox"/> RUN <input checked="" type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Put the PC into RUN. Check the RUN LED is lit. Check the previously down loaded program works correctly. Once all check are complete take the PC out of run and turn OFF the power supply.
	During this testing stage take extrem care not to touch any live or hazardous parts.

## 7.2 Basic diagnostics

The following diagnostic functions will help identify, common faults.

### 7.2.1 BATT LED ON

POWER ■ RUN ■ BATT ■ ERROR □	<b>Fault</b> BATT LED ON	<b>Remedy</b> Monitor M8006 with a pro- gramming tool.	<b>Possible results</b>	M8006:ON	If the current program and/or date is stored only in the PCs RAM, copy and store this immediately. Proceed to replace the PCs battery.
				M8006:OFF	Monitor D8005. This is the current battery voltage (in 0.1V units). Contact a Mitsubishi service center for further consideration of the problem.


### 7.2.2 ERROR LED flashes (PROGRAM ERROR)

POWER ■ RUN □ BATT □ ERROR ■	<b>Fault</b> ERROR LED flashes	<b>Remedy</b> Check BATT LED.	<b>Possible results</b>	LED OFF	Is the BATT OK? Work through BATT diagnostic. If the BATT LED is cured yet the ERROR LED still flashes check for a programming problem.
				LED is lit	Check for programming problem.



## 7.2.3 ERROR LED ON (CPU ERROR)

POWER ■ RUN □ BATT □ ERROR ■	<b>Fault</b> <b>ERROR</b> <b>LED ON</b>	<b>Remedy</b> Reset PC. Power OFF,ON and trigger RUN in- put.	<b>Possible results</b>	LED OFF	Has the memory cassette been installed or removed while the units has still been powered?
				LED is lit	A

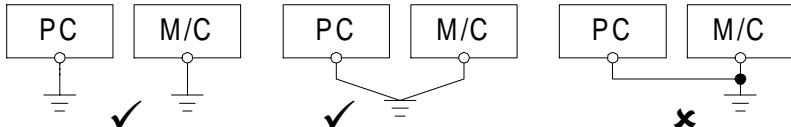A	<b>Remedy</b> Power OFF Discon- nect earth/ ground ter- minal Power ON	<b>Possible results</b>	LED is lit	B
			LED is flash- ing	Check for programming error. Ensure the earth/ ground cable is correctly rewired. 

B	<b>Remedy</b> Possible program/scan time error. Check D8012 for program scan time, (units 0.2 msec must be less than 0.2 sec, i.e data value <2000).	Possible results D8012 > D8000
---	--	-----------------------------------

### 7.3 Common errors

- Corroded contact points at some point in an I/O line.
- An I/O device has been used outside its specified operating range.
- An input signal occurs in a shorter time period that taken by one program scan.

### 7.4 Replacing the battery

Turn OFF PC's power supply. Remove sidecover from the PC. Remove battery from holder-disconnect and replace (this should be carried out in 20 sec if the current data held in the PC's RAM is not to be lost).

Refit battery and cover.


#### Caution:

- Battery replacement requires users to verify data integrity such as the PLC program (when a memory board is not attached), latched (battery backed) device values and RTC values.

Before switching the PLC to RUN, ensure the safety of the operation.

- If the battery backed data becomes unstable, clear the latched (battery backed) devices, and transfer the data again. Set the RTC and default values again if necessary.

**Figure 7.1: Battery (FX2NC-32BL)**

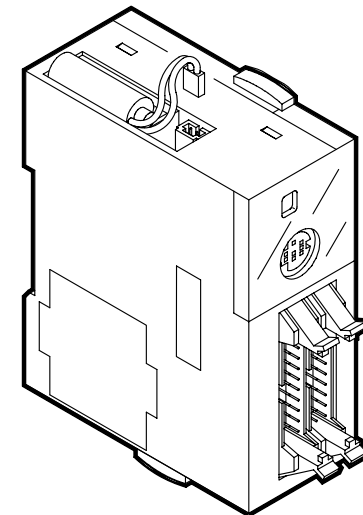


## **7.5 Maintenance**

- Battery has a 3 year life.
- Check interior temperature of the panel.
- Check panel air filters if fitted.
- Check for loosening of terminals or mounting facilities (due to vibration).

## 7.6 Error flags ON indicates error.

<b>M8004</b> (ref. 8004)	Error occurrence (ON when M8060-7 are ON)
<b>M8005</b>	Battery voltage abnormally low
<b>M8006</b> (ref. D8005/6)	Latched low battery voltage flag
<b>M8007</b> (ref. D8007/8)	Momentary power failure
<b>M8008</b> (ref. D8008)	Power failure (see Figure 7.2)
<b>M8009</b> (ref. D8009)	24V DC OFF
<b>M8030</b>	Battery LED OFF - Battery voltage low
<b>M8035</b>	Forced RUN mode
<b>M8036</b>	Forced RUN signal
<b>M8037</b>	Forced STOP signal
<b>M8039</b> (ref. D8039)	Constant scan mode

<b>M8060</b> (ref. D8060)	I/O configuration error
<b>M8061</b> (ref. D8061)	PC hardware error
<b>M8062</b> (ref. D8062)	PC/programming device communication error
<b>M8063</b> (ref. D8063)	Parallel link error
<b>M8064</b> (ref. D8064)	Parameter error
<b>M8065</b> (ref. D8065, D8069)	Syntax error
<b>M8066</b> (ref. D8066, D8069)	Program (circuit) error
<b>M8067</b> (ref. D8067, D8069)	Program execution error
<b>M8068</b> (ref. D8068)	Execution error latch
<b>M8069</b> (ref. D8069)	I/O bus check

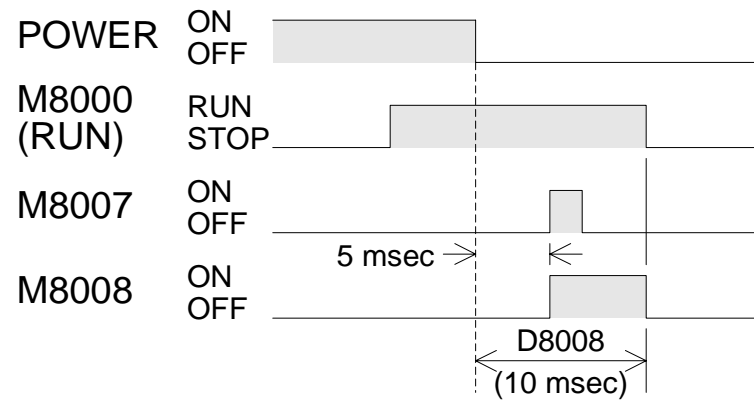**Figure 7.2: Power down and its associated flags**


## 7.7 Error registers

<b>D8000</b> (default 200msec)	Watchdog timer
<b>M8001</b>	PC version 24201=FX2NC/FX2N V2.01 (24=FX2NC/FX2N, 201=V2.01)
<b>M8002</b>	Memory capacity 02=2K steps, 04=4K steps, 08=8K(16K) steps
<b>M8003</b>	Memory type 02H=EEPROM protect switch OFF 0AH=EEPROM protect switch ON 10H=MPU memory
<b>M8004</b>	Error flag number 8060=M8060, (8060-8068)
<b>M8005</b>	Battery voltage 36=3.6V (units 0.1V)
<b>D8006</b> (default 3.0V)	Low battery detection level
<b>D8007</b>	Number of momentary power failures - reset on full power OFF

<b>D8008</b>	Power failure detection period (Automatically corrected)
<b>D8009</b>	Lowest device affected by 24V DC power failure

<b>D8060</b>	Reports location of I/O configuration error (see Figure 7.3)
<b>D8061</b>	Error code for PC hardware error
<b>D8062</b>	Error code number for programmer communications fault
<b>D8063</b>	Error code for parallel link fault
<b>D8064</b>	Parameter error code
<b>D8065</b>	Syntax error code
<b>D8066</b>	Program (circuit) error code
<b>D8067</b>	Program execution error code
<b>D8068</b>	Latched step number of execution error
<b>D8069</b>	Step number of errors associated with error flags M8065-M8067

**Figure 7.3:**  
**I/O configuration error, A) number, B) type.**

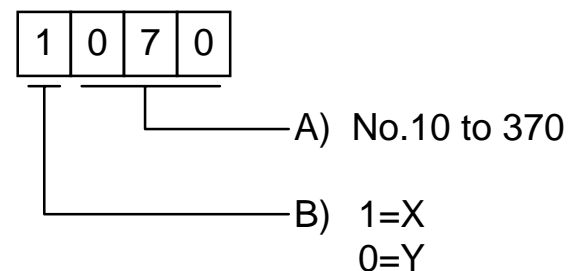

## 7.8 Error codes

<b>D8061</b>	Check cable connections	
	0000	No error
	6101	RAM error
	6102	Operation circuit error
	6103	I/O bus error (M8069 = ON)
<b>D8062</b>	Check the programmer / PC connections	
	0000	No error
	6201	Parity/overflow/framing error
	6202	Character error
	6203	Data sum check error
	6204	Data format error
	6205	Command error

<b>D8063</b>	Check both power and communications connections	
	0000	No error
	6301	Parity/overflow/framing error
	6302	Character error
	6303	Data sum check error
	6304	Data format error
	6305	Command error
	6306	Watchdog timer error



## 7.9 Instruction list

**Table 7.1: Numerically sorted**

		0	1	2	3	4	5	6	7	8	9
<b>000</b>	PROGRAM FLOW	CJ	CALL	SRET	IRET	EI	DI	FEND	WDT	FOR	NEXT
<b>010</b>	TRANSFERS, COMP	CMP	ZCP	MOV	SMOV	CML	BMOV	FMOV	XCH	BCD	BIN
<b>020</b>	+×÷, LOGICS	ADD	SUB	MUL	DIV	INC	DEC	WAND	WOR	WXOR	NEG
<b>030</b>	ROTATION, SHIFT	ROR	ROL	RCR	RCL	SFTR	SFTL	WSFR	WSFL	SFWR	SFRD
<b>040</b>	DATA OPERATION 1	ZRST	DECO	ENCO	SUM	BON	MEAN	ANS	ANR	SQR	FLT
<b>050</b>	HIGH-SPEED	REF	REFF	MTR	HSCS	HSCR	HSZ	SPD	PLSY	PWM	PLSR
<b>060</b>	HANDY INSTR. 1	IST	SER	ABSD	INCD	TTMR	STMR	ALT	RAMP	ROTC	SORT
<b>070</b>	FX I/O DEVICES	TKY	HKY	DSW	SEGD	SEGL	ARWS	ASC	PR	FROM	TO
<b>080</b>	FX SER DEVICES	RS	PRUN	ASCI	HEX	CCD	VRRD	VRSC	-	PID	-
<b>110</b>	FLOATING POINT 1	ECMP	EZCP	-	-	-	-	-	-	EBCD	EBIN
<b>120</b>	FLOATING POINT 2	EADD	ESUB	EMUL	EDIV	-	-	-	ESQR	-	INT
<b>130</b>	FLOATING POINT 3	SIN	COS	TAN	-	-	-	-	-	-	-
<b>140</b>	DATA OPERATION 2	-	-	-	-	-	-	-	SWAP	-	-
<b>150</b>	POSITIONING	-	-	-	-	-	ABS*	-	-	-	-
<b>160</b>	REAL TIME CLOCK	TCMP	TZCP	TADD	TSUB	-	-	TRD	TWR	-	HOURL*
<b>170</b>	GREY CODES	GRY	GBIN	-	-	-	-	RD3A*	WR3A*	-	-
<b>180</b>	ADDITIONAL FUNC	EXTR*	-	-	-	-	-	-	-	-	-
<b>220</b>	IN-LINE COMPARE	-	-	-	-	LD=	LD>	LD<	-	LD≠	LD≤
<b>230</b>		LD≥	-	AND=	AND>	AND<	-	AND≠	AND≤	AND≥	-
<b>240</b>		OR=	OR>	OR<	-	OR≠	OR≤	OR≥	-	-	-

\* V3.00 or later

**Table: 7.2 Alphabetically sorted**

	Symbol	FNC No.	D	P
<b>A</b>	ABS*	155		
	ABSD	062		
	ADD	020		
	ALT	066		
	AND□	232-238		
	ANR	047		
	ANS	046		
	ARWS	075		
	ASC	076		
	ASCI	082		
<b>B</b>	BCD	018		
	BIN	019		
	BMOV	015		
	BON	044		
<b>C</b>	CALL	001		
	CCD	084		
	CJ	000		
	CML	014		
	CMP	010		
	COS	131		
<b>D</b>	DEC	025		

	Symbol	FNC No.	D	P
<b>D</b>	DECO	041		
	DI	005		
	DIV	023		
	DSW	072		
<b>E</b>	EADD	120		
	EBCD	118		
	EBIN	119		
	ECMP	110		
	EDIV	123		
	EI	004		
	EMUL	122		
	ENCO	042		
	ESQR	127		
	ESUB	121		
<b>F</b>	EXTR*	180		
	EZCP	111		
	FEND	006		
<b>F</b>	FLT	049		
	FMOV	016		
	FOR	008		
	FROM	078		

	Symbol	FNC No.	D	P
<b>G</b>	GBIN	171		
	GRY	170		
<b>H</b>	HOUR*	169		
	HEX	083		
	HKY	071		
	HSCR	054		
	HSCS	053		
<b>I</b>	HSZ	055		
	INC	024		
	INCD	063		
	INT	129		
	IRET	003		
<b>L</b>	IST	060		
	LD□	224-230		
<b>M</b>	MEAN	045		
	MOV	012		
	MTR	052		
	MUL	022		
<b>N</b>	NEG	029		
	NEXT	009		
<b>O</b>	OR□	240-246		

	Symbol	FNC No.	D	P
<b>P</b>	PID	088		
	PLSR	059		
	PLSY	057		
	PR	077		
	PRUN	081		
	PWM	058		
<b>R</b>	RAMP	067		
	RCL	033		
	RCR	032		
	RD3A*	176		
	REF	050		
	REFF	051		
	ROL	031		
	ROR	030		
	ROTC	068		
	RS	080		
<b>S</b>	SEGD	073		
	SEGL	074		
	SER	061		
	SFRD	039		
	SFTL	035		

	Symbol	FNC No.	D	P
<b>S</b>	SFTR	034		
	SFWR	038		
	SIN	130		
	SMOV	013		
	SORT	069		
	SPD	056		
	SQR	048		
	SRET	002		
	STMR	065		
	SUB	021		
	SUM	043		
	SWAP	147		
<b>T</b>	TADD	162		
	TAN	132		
	TCMP	160		
	TKY	070		
	TO	079		
	TRD	166		
	TSUB	163		
	TTMR	064		
	TWR	167		

	Symbol	FNC No.	D	P
<b>T</b>	TZCP	161		
<b>V</b>	VRRD	085		
	VRSC	086		
<b>W</b>	WAND	026		
	WDT	007		
	WOR	027		
	WR3A*	177		
	WSFL	037		
	WSFR	036		
	WXOR	028		
<b>X</b>	XCH	017		
<b>Z</b>	ZCP	011		
	ZRST	040		

\* V3.00 or later

			FX2NC
Program capacity			Built-in memory(RAM) = 8K steps FX2NC-EEPROM-4C = 2K - 4K steps FX2NC-EEPROM-16 = 2K - 16K steps FX2NC-EEPROM16C = 2K - 16K steps
Input (X) relay			X0 - 267 (184 pnts)
Output (Y) relay			Y0 - 267 (184 pnts)
Auxiliary relay (3072 pnts, + 256 pnts)	General	M0-M499 (500 pnts)	
	Battery backup	M500-M1023 (524 pnts)	
	Battery backup	M1024-M3071 (2048 pnts)	
	Special function	M8000-M8255 (256 pnts)	
State relay (1000 pnts)	General	S0-S499 (500 pnts)	
	Battery backup	S500-S999 (500 pnts) (S900-S999 ANS FNC46)	
Timer (256 pnts)	100 ms		T0-T199 (200 pnts)
	10 ms		T200-T245 (46 pnts)
	1 ms retentive	Battery backup	T246-T249 (4 pnts)
	100 ms retentive		T250-T255 (6 pnts)

		FX2NC	
Counter (256 pnts)	16 bit	C0-C99 (100 pnts)	Battery backup by Parameters
	16 bit	C100-C199 (100 pnts)	
	32 bit	C200-C219 (20 pnts)	Battery backup by Parameters
	32 bit	C220-C234 (15 pnts)	
	32 bit High speed counter	C235-C245	
		C246-C250	
		C251-C255	
Data register (8000 pnts, + 256 pnts)	General	D0-D199 (200 pnts)	Battery backup by Parameters
	Battery backup	D200-D511 (312 pnts)	
	Battery backup	D512-D7999 (7488 pnts)	D1000-D7999 File register by Parameters
	Special function	D8000-D8255 (256 pnts)	
	Index	V0-V7, Z0-Z7 (16 pnts)	
Pointer	CJ (FNC 00), CALL (FNC 01)	P0-P127 (128 pnts)	
	EI (FNC 04)	I00□ - I50□, I6□□ - I8□□, I010 - I060 (6, 3, 6 pnts)	
Nesting	MC /MCR	N0 - N7 (8 pnts)	
Numbers	16 bit	32 bit	
K	-32,768 to 32,767	-2,147,483,648 to 2,147,483,647	
H	0 to FFFFH	0 to FFFFFFFFH	

## **MEMO**

<b>1</b>	<b>INTRODUCTION</b>
<b>2</b>	<b>TERMINAL LAYOUTS</b>
<b>3</b>	<b>INSTALLATION NOTES</b>
<b>4</b>	<b>POWER SUPPLY</b>
<b>5</b>	<b>INPUTS</b>
<b>6</b>	<b>OUTPUTS</b>
<b>7</b>	<b>DIAGNOSTICS</b>
<b>8</b>	<b>DISCONTINUED MODEL</b>





## 8. Discontinued model

The table below shows discontinued models of MELSEC-F Series PLCs described in this manual.

Discontinued model	Production stop date	Repair acceptance period
FX0N-8EX-ES/UL	January 31, 2006	Until January 31, 2013
FX0N-8EX-UA1/UL		
FX0N-8ER-ES/UL		
FX0N-8EYR-ES/UL		
FX0N-8EYT-ESS/UL		
FX0N-16EX-ES/UL		
FX0N-16EYR-ES/UL		
FX0N-16EYT-ESS/UL		
FX0N-232ADP		
FX0N-485ADP		
FX0N-16NT		
FX-50DU-TK(S)-E	September 30, 2002	Until September 30, 2009
FX-40DU(-TK-ES)(-ES)		
FX-30DU-E		
FX-25DU-E		
FX-232AW	September 30, 2004	Until September 30, 2011
FX-232AWC	June 30, 2004	Until June 30, 2011

## MEMO



# HARDWARE MANUAL

FX<sub>2</sub>NC (D/UL) SERIES PROGRAMMABLE CONTROLLERS



HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
HIMEJI WORKS: 840, CHIYODA CHO, HIMEJI, JAPAN

---

JY992D87201E  
(MEE)

Effective June 2009  
Specification are subject to change without notice.