SYSMAC CS Series

SYSMAC CJ Series

CJ2H-CPU6□-EIP

CJ2H-CPU6

CJ2M-CPU CJ1C-CPU CJ1C-CPU

SYSMAC One NSJ Series

NSJ -----

Programmable Controllers

INSTRUCTIONS REFERENCE MANUAL



Industrial automation

Elincom Group

European Union: www.elinco.eu

Russia: www.elinc.ru

© OMRON, 2008 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

SYSMAC CS Series

SYSMAC CJ Series

CJ2H-CPU6□-EIP

CJ2H-CPU6□

CJ2M-CPU□□

CJ1 CPU CPU CPU

SYSMAC One NSJ Series

NSJ ----

Programmable Controllers

Instructions Reference Manual

Revised March 2012

About this Manual:

This manual describes the ladder diagram programming instructions of the CPU Units for CS/CJ-series Programmable Controllers (PLCs) and the NSJ-series Controllers. The CS Series, CJ Series and NSJ Series are subdivided as shown in the following table.

Series	Name	Model numbers
CJ Series	CJ2H CPU Units	CJ2H-CPU6□-EIP
		CJ2H-CPU6□
	CJ2M CPU Units	CJ2M-CPU□□
	CJ1-H CPU Units	CJ1H-CPU□□H-R
		CJ1□-CPU□□H
		CJ1□-CPU□□P
	CJ1M CPU Units	CJ1M-CPU□□
	CJ1 CPU Units	CJ1□-CPU□□
CS Series	CS1-H CPU Units	CS1G/H-CPU□□H
	CS1 CPU Units	CS1G/H-CPU□-EV1
	CS1D CPU Units	CS1D-CPU□□H
		CS1D-CPU□□S
		CS1D-CPU□□P
NSJ Series	NSJ-series Controllers	NSJ5-TQ□□(B)-G5D
		NSJ5-SQ□□(B)-G5D
		NSJ8-TV□□(B)-G5D
		NSJ10-TV□□(B)-G5D
		NSJ12-TS□□(B)-G5D
		NSJ5-TQ□□(B)-M3D
		NSJ5-SQ□□(B)-M3D
		NSJ8-TV□□(B)-M3D

Please read this manual and all related manuals listed in the table and be sure you understand information provided before attempting to program or use CS/CJ-series CPU Units in a PLC System or an NSJ-series Controller.

Precautions provides general precautions for using the CS/CJ-series Programmable Controllers (PLCs), NSJ-series Controllers, and related devices.

Section 1 describes the basic information that is required to use programming instructions.

Section 2 provides a summary of instructions used with NSJ/CS/CJ-series PLCs.

Section 3 describes each of the instructions that can be used in programming NSJ/CS/CJ-series PLCs. Instructions are described in order of function, as classified *in Section 2 Summary of Instructions*.

Section 4 provides instruction execution times and the number of steps for each CS/CJ-series instruction.

The *Appendices* provide a list of instructions in order of the mnemonics and an ASCII table.

OMRON Product References

All OMRON products are capitalized in this manual. The word "Unit" is also capitalized when it refers to an OMRON product, regardless of whether or not it appears in the proper name of the product.

The abbreviation "Ch," which appears in some displays and on some OMRON products, often means "word" and is abbreviated "Wd" in documentation in this sense.

The abbreviation "PLC" means Programmable Controller. "PC" is used, however, in some Programming Device displays to mean Programmable Controller

Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

Personnel in charge of installing FA systems.

Personnel in charge of designing FA systems.

Personnel in charge of managing FA systems and facilities.

Read and Understand this Manual

Please read and understand this manual before using the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical
 equipment, amusement machines, vehicles, safety equipment, and installations subject to separate
 industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.


Unit Versions of CS/CJ-series CPU Units

Unit Versions

A "unit version" has been introduced to manage CPU Units in the CS/CJ Series according to differences in functionality accompanying Unit upgrades. Some instructions are supported only by specific versions of a CPU Unit. Confirm support before programming.

Notation of Unit Versions on Products

The unit version is given to the right of the lot number on the nameplate of the products for which unit versions are being managed, as shown below.

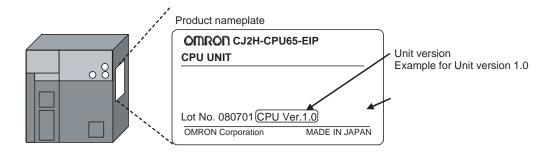

Confirming Unit Versions with Support Software


CX-Programmer version 4.0 can be used to confirm the unit version using one of the following two methods.

- Using the **PLC Information**
- Using the *Unit Manufacturing Information* (This method can be used for Special I/O Units and CPU Bus Units as well.)

PLC Information

- If you know the device type and CPU type, select them in the Change PLC Dialog Box, go online, and select PLC - Edit - Information from the menus.
- If you don't know the device type and CPU type, but are connected directly to the CPU Unit on a serial line, select *PLC Auto Online* to go online, and then select *PLC Edit Information* from the menus.


In either case, the following *PLC Information* Dialog Box will be displayed.

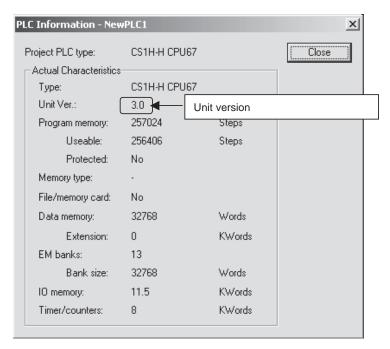


Use the above display to confirm the unit version of the CPU Unit.

Unit Manufacturing Information

In the IO Table Window, right-click and select *Unit Manufacturing information - CPU Unit.*

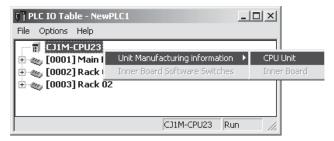

The following Unit Manufacturing information Dialog Box will be displayed.

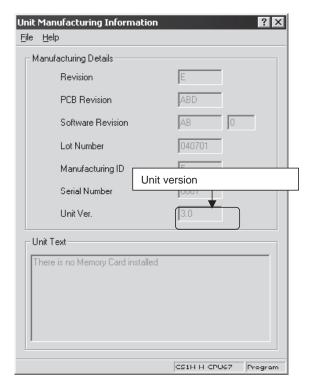

Use the above display to confirm the unit version of the CPU Unit connected online.

Using the Unit Version Labels

The following unit version labels are provided with the CPU Unit.



These labels can be attached to the front of previous CPU Units to differentiate between CPU Units of different unit versions.

Unit Version Notation

In this manual, the unit version of a CPU Unit is given as shown in the following table.

Product nameplate	CPU Units on which no unit version is given Lot No. XXXXXX XXXX OMRON Corporation MADE IN JAPAN	Units on which a version is given (Ver. □.□)
Meaning		
Designating individual CPU Units (e.g., the CS1H-CPU67H)	Pre-Ver. 2.0 CS1-H CPU Units	CS1H-CPU67H CPU Unit Ver. □.□
Designating groups of CPU Units (e.g., the CS1-H CPU Units)	Pre-Ver. 2.0 CS1-H CPU Units	CS1-H CPU Units Ver. □.□
Designating an entire series of CPU Units (e.g., the CS-series CPU Units)	Pre-Ver. 2.0 CS-series CPU Units	CS-series CPU Units Ver. □.□

Unit Versions

CS Series

Units	Models	Unit version
CS1-H CPU Units	CS1□-CPU□□H	Unit version 4.0
		Unit version 3.0
		Unit version 2.0
		Pre-Ver. 2.0
CS1D CPU Units	Duplex-CPU Systems CS1D-CPU□□H	Unit version 1.2
		Unit version 1.1
		Pre-Ver. 1.1
	Single-CPU Systems CS1D-CPU□□S	Unit version 2.0
CS1 CPU Units	CS1□-CPU□□	No unit version.
CS1 Version-1 CPU Units	CS1□-CPU□□-V1	No unit version.

CJ Series

Units	Models	Unit version
CJ2 CPU Units	CJ2H-CPU□□-□□□	Unit version 1.3
		Unit version 1.2
		Unit version 1.1
		Unit version 1.0
	CJ2M-CPU□□	Unit version 1.0
CJ1-H CPU Units	CJ1H-CPU□□H-R	Unit version 4.0
	CJ1□-CPU□□H	Unit version 4.0
	CJ1□-CPU□□P	Unit version 3.0
		Unit version 2.0
		Pre-Ver. 2.0
CJ1M CPU Units	CJ1M-CPU12/13	Unit version 4.0
	CJ1M-CPU22/23	Unit version 3.0
	00 1111 01 022/20	Unit version 2.0
		Pre-Ver. 2.0
	CJ1M-CPU11/21	Unit version 4.0
		Unit version 3.0
		Unit version 2.0

NSJ Series

Units	Unit version
NSJ□-TQ□□(B)-G5D	Unit version 3.0
NSJ□-TQ□□(B)-M3D	

Function Support by Unit Version

• Functions Supported for Unit Version 4.0 or Later

CX-Programmer 7.0 or higher must be used to enable using the functions added for unit version 4.0.

CS1-H CPU Units

Function		CS1□-CPU□□H	
		Unit version 4.0 or later	Other unit versions
Online editing of	function blocks	OK	
Note This function cannot be used for simulations on the CX-Simulator.			
Input-output varia	Input-output variables in function blocks		
Text strings in fu	nction blocks	OK	
New application	Number-Text String Conversion Instructions:	OK	
instructions	NUM4, NUM8, NUM16, STR4, STR8, and STR16		
	TEXT FILE WRITE (TWRIT)	OK	

CS1D CPU Units

Unit version 4.0 is not supported.

CJ1-H/CJ1M CPU Units

Function		CJ1H-CPU□□H-R, CJ1□-CPU□□H, CJ1G-CPU□□P, CJ1M-CPU□□	
		Unit version 4.0 or	Other unit versions
		later	
Online editing of	function blocks	OK	
Note This function cannot be used for simulations on the CX-Simulator.			
Input-output variables in function blocks		OK	
Text strings in fu	nction blocks	OK	
New application Number-Text String Conversion Instructions:		ОК	
instructions	NUM4, NUM8, NUM16, STR4, STR8, and STR16		
	TEXT FILE WRITE (TWRIT)	OK	

User programs that contain functions supported only by CPU Units with unit version 4.0 or later cannot be used on CS/CJ-series CPU Units with unit version 3.0 or earlier. An error message will be displayed if an attempt is made to download programs containing unit version 4.0 functions to a CPU Unit with a unit version of 3.0 or earlier, and the download will not be possible.

If an object program file (.OBJ) using these functions is transferred to a CPU Unit with a unit version of 3.0 or earlier, a program error will occur when operation is started or when the unit version 4.0 function is executed, and CPU Unit operation will stop.

• Functions Supported for Unit Version 3.0 or Later

CX-Programmer 5.0 or higher must be used to enable using the functions added for unit version 3.0.

CS1-H CPU Units

Function		CS1□-CPU□□H	
		Unit version 3.0 or later	Other unit versions
Function blocks		OK	
, ,	converting FINS commands to CompoWay/F e built-in serial port)	OK	
Comment memo	ry (in internal flash memory)	OK	
Expanded simple backup data		OK	
New application instructions	TXDU(256), RXDU(255) (support no-protocol communications with Serial Communications Units with unit version 1.2 or later)	OK	
	Model conversion instructions: XFERC(565), DISTC(566), COLLC(567), MOVBC(568), BCNTC(621)	OK	
	Special function block instructions: GETID(286)	OK	
Additional instruction functions	TXD(235) and RXD(236) instructions (support no-protocol communications with Serial Communications Boards with unit version 1.2 or later)	OK	

CS1D CPU Units

Unit version 3.0 is not supported.

CJ1-H/CJ1M CPU Units

Function		CJ1H-CPU□□H-R, CJ1□-CPU□□H, CJ1G-CPU□□P, CJ1M-CPU□□	
		Unit version 3.0 or later	Other unit versions
Function blocks		OK	
	converting FINS commands to CompoWay/F e built-in serial port)	ОК	
Comment memo	Comment memory (in internal flash memory)		
Expanded simple	e backup data	OK	
New application instructions	TXDU(256), RXDU(255) (support no-protocol communications with Serial Communications Units with unit version 1.2 or later)	OK	
	Model conversion instructions: XFERC(565), DISTC(566), COLLC(567), MOVBC(568), BCNTC(621)	OK	
	Special function block instructions: GETID(286)	OK	
Additional instruction functions	PRV(881) and PRV2(883) instructions: Added high-frequency calculation methods for calculating pulse frequency. (CJ1M CPU Units only)	OK	

User programs that contain functions supported only by CPU Units with unit version 3.0 or later cannot be used on CS/CJ-series CPU Units with unit version 2.0 or earlier. An error message will be displayed if an attempt is made to download programs containing unit version 3.0 functions to a CPU Unit with a unit version of 2.0 or earlier, and the download will not be possible.

If an object program file (.OBJ) using these functions is transferred to a CPU Unit with a unit version of 2.0 or earlier, a program error will occur when operation is started or when the unit version 3.0 function is executed, and CPU Unit operation will stop.

• Functions Supported for Unit Version 2.0 or Later

CX-Programmer 4.0 or higher must be used to enable using the functions added for unit version 2.0.

CS1-H CPU Units

Function		CS1-H CPU Units (CS1□-CPU□□H)	
		Unit version 2.0 or later	Other unit versions
Downloading and	Uploading Individual Tasks	OK	
Improved Read Pr	rotection Using Passwords	OK	
Write Protection fr CPU Units via Ne	rom FINS Commands Sent to tworks	ОК	
Online Network C	onnections without I/O Tables	OK	
Communications t work Levels	hrough a Maximum of 8 Net-	OK	
Connecting Online	e to PLCs via NS-series PTs	OK	OK from lot number 030201
Setting First Slot \	Words	OK for up to 64 groups	OK for up to 8 groups
Automatic Transfe Parameter File	rs at Power ON without a	ОК	
Automatic Detection Automatic Transfe	on of I/O Allocation Method for rat Power ON		
Operation Start/E	nd Times	OK	
New Application	MILH, MILR, MILC	OK	
Instructions	=DT, <>DT, <dt, <="DT,">DT, >=DT</dt,>	ОК	
	BCMP2	OK	
	GRY	OK	OK from lot number 030201
	TPO	OK	
	DSW, TKY, HKY, MTR, 7SEG	OK	
	EXPLT, EGATR, ESATR, ECHRD, ECHWR	OK	
	Reading/Writing CPU Bus Units with IORD/IOWR	ОК	OK from lot number 030418
	PRV2		

CS1D CPU Units

	Function	CS1D CPU Units for Single-CPU Systems (CS1D-CPU□□S)	CS1D CPU Units for Duplex-CPU Systems (CS1D-CPU□□H)	
		Unit version 2.0	Unit version 1.1 or later	Pre-Ver. 1.1
Functions	Duplex CPU Units		OK	OK
unique to CS1D CPU Units	Online Unit Replacement	OK	OK	OK
CPO Offics	Duplex Power Supply Units	OK	OK	OK
	Duplex Controller Link Units	OK	OK	OK
	Duplex Ethernet Units		OK	OK
	Unit removal without a Programming Device		OK (Unit version 1.2 or later)	
Downloading and	d Uploading Individual Tasks	OK		
Improved Read I	Protection Using Passwords	OK		
Write Protection to CPU Units via	from FINS Commands Sent Networks	OK		
Online Network (Tables	Connections without I/O	ОК		
Communications through a Maximum of 8 Network Levels		ОК		
Connecting Online to PLCs via NS-series PTs		ОК		
Setting First Slot	Words	OK for up to 64 groups		
Automatic Transf Parameter File	ers at Power ON without a	OK		
	tion of I/O Allocation Method Insfer at Power ON			
Operation Start/l	End Times	OK	OK	
New Applica-	MILH, MILR, MILC	OK		
tion Instructions	=DT, <>DT, <dt, <="DT,<br">>DT, >=DT</dt,>	ОК		
	BCMP2	OK		
	GRY	OK		
	TPO	OK		
	DSW, TKY, HKY, MTR, 7SEG	OK		
	EXPLT, EGATR, ESATR, ECHRD, ECHWR	OK		
	Reading/Writing CPU Bus Units with IORD/IOWR	ОК		
	PRV2	OK		

CJ1-H/CJ1M CPU Units

	Function	CJ1-H C	PU Units	C	J1M CPU Unit	:s
		CJ1□-C	PU□□H-R PU□□H PU□□P	CJ1M-CPU	12/13/22/23	CJ1M- CPU11/21
		Unit version 2.0 or later	Other unit versions	Unit version 2.0 or later	Other unit versions	Other unit versions
Downloading and	d Uploading Individual Tasks	OK		OK		OK
Improved Read I	Protection Using Passwords	OK		ОК		OK
Write Protection to CPU Units via	from FINS Commands Sent Networks	OK		OK		OK
Online Network (Tables	Connections without I/O	ОК	(Supported if I/O tables are automatically generated at startup.)	ОК	(Supported if I/O tables are automatically generated at startup.)	ОК
Communications Network Levels	through a Maximum of 8	OK		OK		OK
Connecting Online PTs	ne to PLCs via NS-series	ОК	OK from lot number 030201	ОК	OK from lot number 030201	ОК
Setting First Slot	Words	OK for up to 64 groups	OK for up to 8 groups	OK for up to 64 groups	OK for up to 8 groups	OK for up to 64 groups
Automatic Transf Parameter File	fers at Power ON without a	OK		OK		OK
	tion of I/O Allocation Method ansfer at Power ON					
Operation Start/F	End Times	OK		OK		OK
New Applica-	MILH, MILR, MILC	OK		OK		OK
tion Instructions	=DT, <>DT, <dt, <="DT,<br">>DT, >=DT</dt,>	OK		OK		OK
	BCMP2	OK		OK	OK	OK
	GRY	OK	OK from lot number 030201	ОК	OK from lot number 030201	ОК
	TPO	OK		ОК		ОК
	DSW, TKY, HKY, MTR, 7SEG	OK		OK		OK
	EXPLT, EGATR, ESATR, ECHRD, ECHWR	OK		OK		OK
	Reading/Writing CPU Bus Units with IORD/IOWR	OK		OK		OK
	PRV2			OK, but only for CPU Units with built-in I/O		OK, but only for CPU Units with built-in I/O

User programs that contain functions supported only by CPU Units with unit version 2.0 or later cannot be used on CS/CJ-series Pre-Ver. 2.0 CPU Units. An error message will be displayed if an attempt is made to download programs containing unit version s.0 functions to a Pre-Ver. 2.0 CPU Unit, and the download will not be possible.

If an object program file (.OBJ) using these functions is transferred to a Pre-Ver. 2.0 CPU Unit, a program error will occur when operation is started or when the unit version 2.0 function is executed, and CPU Unit operation will stop.

Unit Versions and Programming Devices

The following tables show the relationship between unit versions and CX-Programmer versions.

Unit Versions and Programming Devices

CPU Unit	Function	ns (See note 1.)		CX-Prog	grammer		Program-
			Ver. 3.3 or lower	Ver. 4.0	Ver. 5.0 Ver. 6.0	Ver. 7.0 or higher	ming Con- sole
CS/CJ-series unit version 4.0	Functions added for unit version 4.0	Using new functions				OK (See note 2 and 3.)	No restrictions
		Not using new functions	OK	OK	OK	OK	
CS/CJ-series unit	Functions added	Using new functions			OK	OK	
version 3.0	for unit version 3.0	Not using new functions	OK	OK	OK	ОК	
CS/CJ-series unit	Functions added	Using new functions		OK	OK	OK	
version2.0	for unit version 2.0	Not using new functions	OK	OK	ОК	ОК	
CS1D CPU Units	Functions added	Using new functions		OK	OK	OK	
for Single-CPU Systems, unit ver- sion 2.0	for unit version 2.0	Not using new functions					
CS1D CPU Units	Functions added	Using function blocks		OK	OK	OK	
for Duplex-CPU Systems, unit version 1.	for unit version 1.1	Not using function blocks	OK	OK	OK	OK	

Note

- 1. As shown above, there is no need to upgrade to CX-Programmer version as long as the functions added for unit versions are not used.
- CX-Programmer version 7.1 or higher is required to use the new functions
 of the CJ1-H-R CPU Units. CX-Programmer version 7.22 or higher is required to use unit version 4.1 of the CJ1-H-R CPU Units. You can check
 the CX-Programmer version using the *About* menu command to display
 version information.
- 3. CX-Programmer version 7.0 or higher is required to use the functional improvements made for unit version 4.0 of the CS/CJ-series CPU Units. With CX-Programmer version 7.2 or higher, you can use even more expanded functionality.

Device Type Setting

The unit version does not affect the setting made for the device type on the CX-Programmer. Select the device type as shown in the following table regardless of the unit version of the CPU Unit.

Series	CPU Unit group	CPU Unit model	Device type setting on CX-Programmer Ver. 4.0 or higher
CS Series	CS1-H CPU Units	CS1G-CPU□□H	CS1G-H
		CS1H-CPU□□H	CS1H-H
	CS1D CPU Units for Duplex-CPU Systems	CS1D-CPU□□H	CS1D-H (or CS1H-H)
	CS1D CPU Units for Single-CPU Systems	CS1D-CPU□□S	CS1D-S
CJ Series	CJ1-H CPU Units	CJ1G-CPU□□H	CJ1G-H
		CJ1G-CPU□□P	
		CJ1H-CPU□□H-R (See note.)	СЈ1Н-Н
		CJ1H-CPU□□H	
	CJ1M CPU Units	CJ1M-CPU□□	CJ1M

Note Select one of the following CPU types: CPU67-R, CPU66-R, CPU65-R, or CPU64-R.

<u>Troubleshooting Problems with Unit Versions on the CX-Programmer</u>

Problem	Cause	Solution
Unable to download program(s). Errors found during compilation After the above message is displayed, a compiling error will be displayed on the Compile Tab Page in the Output Window.	An attempt was made to download a program containing instructions supported only by later unit versions or a CPU Unit to a previous unit version.	Check the program or change to a CPU Unit with a later unit version.
(ELEMPINE Form) 19 date bit conducting varieties in this control form which are the specified by the strength control form which are the specified by the strength control form of the specified by the strength control form of the specified by t	An attempt was to download a PLC Setup containing settings supported only by later unit versions or a CPU Unit to a previous unit version.	Check the settings in the PLC Setup or change to a CPU Unit with a later unit version.
"????" is displayed in a program transferred from the PLC to the CX-Programmer.	An attempt was made to upload a program containing instructions supported only by higher versions of CX-Programmer to a lower version.	New instructions cannot be uploaded to lower versions of CX-Programmer. Use a higher version of CX-Programmer.

Related Manuals

Name	Cat. No.	Contents
SYSMAC CS/CJ/NSJ Series	W474	Provides detailed descriptions of the instructions.
CJ2H-CPU6 -EIP, CJ2H-CPU6 CJ2M-CPU , CS1G/H-CPU -EV1, CS1D-CPU S, CJ1H-CPU -H-R, CJ1G/H-CPU -H, CJ1G-CPU P, CJ1M-CPU CJ1G-CPU NSJ -M3D NSJ -M3D -M3D	(this manual)	When programming, use this manual together with the manuals for your CPU Unit.
Programmable Controllers Instructions Reference Manual		
CJ Series CJ2 CPU Unit Hardware User's Manual CJ2H-CPU6□-EIP, CJ2H-CPU6□, CJ2M-CPU□□	W472	Provides the following information on the CJ2 CPU Units: Overview, system design, hardware specifica- tions, hardware settings, installation, wiring, main-
		tenance, and troubleshooting. Use this manual together with the <i>CJ2 CPU Unit Software User's Manual</i> (W473).
CJ Series CJ2 CPU Unit Software User's Manual CJ2H-CPU6□-EIP, CJ2H-CPU6□, CJ2M-CPU□□	W473	Provides the following information on the CJ2 CPU Units:
		Overview of CPU Unit operation, programming, software settings, CPU Unit functions, and system startup.
		Use this manual together with the CJ2 CPU Unit Hardware User's Manual (W472).
CJ-series CJ2M CPU Unit Pulse I/O Module User's Manual CJ2M-CPU□□ + CJ2M-MD21□	W486	Provides the following information on the Pulse I/O Module for CJ2M CPU Units:
		Specifications and wiring methods I/O functions Quick-response inputs Interrupt functions High-speed counters Pulse outputs PWM outputs When programming, use this manual together with the Instructions Reference Manual (Cat. No. W474).
SYSMAC CS/CJ/NSJ Series CS1G/H-CPU H, CS1G/H-CPU V1, CS1D-CPU H, CS1D-CPU S, CJ1H-CPU H-R, CJ1G/H-CPU H, CJ1G-CPU P, CJ1M-CPU R, CJ1G-CPU (B)-G5D, NSJ (B)-M3D Programmable Controllers Programming Manual	W394	Describes programming, tasks, file memory, and other functions for the CS-series, CJ-series, and NSJ-series PLCs. Use this manual together with the CS-series Programmable Controller Operation Manual (W339) or CJ-series Programmable Controller Operation Manual (W393).
SYSMAC CS Series CS1G/H-CPU□□H, CS1G/H-CPU□□-V1 Programmable Controllers Operation Manual	W339	Provides an outline of, and describes the design, installation, maintenance, and other basic operations for the CS-series PLCs. Information is also included on features, system configuration, wiring, I/O memory allocations, and troubleshooting. Use this manual together with the <i>Programmable Controllers Programming Manual</i> (W394).
SYSMAC CJ Series CJ1H-CPU H-R, CJ1G/H-CPU H, CJ1G-CPU P, CJ1M-CPU CJ1G-CPU CPU CPU CPU CPU CPU CPU CPU CPU CPU	W393	Provides an outline of, and describes the design, installation, maintenance, and other basic operations for the CJ-series PLCs. Information is also included on features, system configuration, wiring, I/O memory allocations, and troubleshooting. Use together with the <i>Programmable Controllers Programming Manual</i> (W394).

SYSMAC CS/CJ/CP/NSJ Series CJ2H-CPUG -, CJ2M-CPUG -, CS1G/H-CPUG -H, CS1G-CPUG -, CJ1G-CPUG -H, CS1W-CPUG -H, CS1W-SCB -W1, CP1H-XG -H, CS1W-SCUG -W1, CP1H-XG -H, CP
CZPH-CPUBILER, CZPH-CPUBIL, CZBM-CPUBIL, CSIG/H-CPUBILER, CSIG-CPUBIL, CSIG-CPUBIL, CSIG-CPUBILS, CJIH-CPUBILH-R, CPIH-XALBBRAND COMMUNICATION COMMAND COMMAND COMMUNICATION COMMAND CO
CS1D-CPUIDH, CS1D-CPUIDP, CJ1M-CPUIDH, CJ1G-CPUIDP, CJ1M-CPUIDD, CJ1G-CPUIDP, CJ1M-CPUIDD, CJ1G-CPUIDP, CJ1M-CPUIDD, CJ1M-SCBID-V1, CS1W-SCBID-V1, CJ1W-SCBID-V1, CS1W-SCBID-V1, CJ1W-SCBID-V1, CP1H-XDIDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDD
CJIG-CPUID, CJIG-CPUIDP, CJIM-CPUID, CJIG-I-CPUIDH, CSIW-SCBID-V1, CSIW-SCUID-V1, CJIW-SCUID-V1, CPIL-MUDD-D, CPIE-RNDD-D-D, CPIE-RNDD-D-D, NSJI-D-D-D-D, NSJI-D-D-D-D, NSJI-D-D-D-D-D, SYSMAC CS Series CSID-CPUIDH CPU Units CSID-CPUIDH CPU Units CSID-CPUIDS CPU Units CSID-CPUIDS CPU Units CSID-PL01/02D Duplex Unit CSID-DPL01/02D Duplex Unit CSID-PDD-D-D-D-D-POST Supply Unit Duplex System Operation Manual NSJ Series NSJI-TUD-(B)-GSD, NSJI-TUD-(B)-M3D, NSJI-TVD-(B)-GSD, NSJI-TUD-(B)-M3D, NSJI-TSD-(B)-GSD, NSJI-TD-(B)-M3D, NSJI-TD-(B)-
CJ1G/H-CPUIDH, CS1W-SCBID-V1, CS1W-SCUID-V1, CJ1W-SCUID-V1, CP1H-XDID-D, CP1E-E/NDIDD-D, CP1H-YDIDD-D, CP1H-YDID-D, CP1H-YDIDD-D, CP1H-YDIDD-D, CP1H-YDIDD-D, CP1H-YDIDD-D, CP1H-YDIDD-D, CP1H-YDID-D, CP1H
CS1N-SCUID-N1, CJ1W-SCUID-N1, CP1H-YIDD-D, CP1L-MUDD-D, CP1E-R/NDD-D, CP1L-MUDD-D, CXONE-ALD-C-V4/ALDD-V4 CX-Programmer Operation Manual W446 Provides information on how to use the CX-Programmer for all functionality except for function blocks. Provides an outline of and describes the design, installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. SYSMAC CS Series CPU Units CS1D-PL01/02D Duplex Unit Duplex System Operation Manual NSJ Series NSJ5-TVD-CB(B-G5D, NSJ5-TVD-B)-G5D, NSJ5-TVD-B)-G5D, NSJ5-TVD-B-G5D, NS
CP1H-XA□□□□□, CP1H-Y□□□□□, CP1L-MV□□□□□, CP1E-EN□□□□□, CP1E-EN□□□□□, CP1E-EN□□□□□, CP1D□□□ (B)-G5D, NSJ□□□□□ (B)-G5D, NSJ□□□□□□ (B)-G5D, NSJ□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□
CP1E-E/N□□□-□, NS□-□□□(B)-GSD, NSU□-□□□(B)-M3D COmmunications Commands Reference Manual CXONE-AL□□-C-V4/AL□□D-V4 CX-Programmer Operation Manual SYSMAC CS Series CS1D-CPU□□H CPU Units CS1D-CPU□□S CPU Units CS1D-PL01/02D Duplex Unit CS1D-PL01/02D Duplex Unit CS1D-PL01/02D Duplex Unit Duplex System Operation Manual NSJ Series NSJ5-TQ□□(B)-G5D, NSJ5-SQ□□(B)-G5D, NSJ12-TS□□(B)-G5D, NSJ10-TV□□(B)-G5D, NSJ12-TS□□(B)-GSD, NSJ5-TQ□□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□□-C-V4/CXONE-AL□D-V4 CXONE-AL□-C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CPU Units or CS/CJ-series CPU Units or CS/CJ-
NSJ(B)-G5D, NSJ
Communications Commands Reference Manual CXONE-AL □ C-V4/AL □ D-V4 CX-Programmer Operation Manual W446 Provides information on how to use the CX-Programmer for all functionality except for function blocks. SYSMAC CS Series CS1D-CPU □ H CPU Units CS1D-CPU □ S CPU Units CS1D-PL01/02D Duplex Unit CS1D-PA/PD □ Power Supply Unit Duplex System Operation Manual NSJ Series NSJS-TQ □ (B)-G5D, NSJ5-SQ □ (B)-G5D, NSJ5-SQ □ (B)-G5D, NSJ1-TV □ (B)-G5D, NSJ3-TV □ (B)-M3D, NSJ8-TV □ (B)-G5D, NSJ8-TV □ (B)
CXONE-AL C-V4/AL D-V4 CX-Programmer Operation Manual W446 Provides information on how to use the CX-Programmer for all functionality except for function blocks. SYSMAC CS Series CS1D-CPU H CPU Units CS1D-DPL01/02D Duplex Unit CS1D-DPL01/02D Duplex Unit CD1D-DPL01/02D Duplex Unit Duplex System Operation Manual NSJ Series NSJS-T0 B-G5D, NSJ5-SQ B-G5D, NSJ8-TV B-G5D, NSJ10-TV B-G5D, NSJ8-TV B-G5D, NSJ10-TV B-G5D, NSJ8-TV NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO02-E, CQM1-PRO01-E, W446 Provides information on how to use the CX-Programming on the NSJ series on a Duplex System describes the design, installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Operation Manual W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W393), SYSMAC CS Series Operation Manual (W394), and NS-V1/-V2 Series Setup Manual (W394), and NS-V1/-V2 Series Setup Manual (W394), and NS-V1/-V2 Series Setup Manual (W393), SYSMAC CS/CJ Series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
CX-Programmer Operation Manual SYSMAC CS Series CS1D-CPU□H CPU Units CS1D-CPU□B CPU Units CS1D-DPL01/02D Duplex Unit CS1D-DPL01/02D Duplex Unit CS1D-PA/PD□D Power Supply Unit Duplex System Operation Manual NSJ Series NSJ5-TQ□(B)-G5D, NSJ5-SQ□(B)-G5D, NSJ8-TV□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJY-TS□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer operation Manual CX-Programmer operation Manual CX-Programmer operation Manual CX-Programmer operation Manual SYSMAC CS/CJ Series CYU Units . W452 Provides the following information on the NSJ-series Setup Manual (W339), SYSMAC CS/CJ Series Operation Manual (W339), SYSMAC CS/CJ Series PU Units or CS/CJ-series CPU Units CTS/CJ-series PLCs using a Programming Operate CS/CJ-series PLCs usin
CX-Programmer Operation Manual SYSMAC CS Series CS1D-CPU□H CPU Units CS1D-CPU□B CPU Units CS1D-DPL01/02D Duplex Unit CS1D-DPL01/02D Duplex Unit CS1D-PA/PD□D Power Supply Unit Duplex System Operation Manual NSJ Series NSJ5-TQ□(B)-G5D, NSJ5-SQ□(B)-G5D, NSJ8-TV□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJY-TS□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer operation Manual CX-Programmer operation Manual CX-Programmer operation Manual CX-Programmer operation Manual SYSMAC CS/CJ Series CYU Units . W452 Provides the following information on the NSJ-series Setup Manual (W339), SYSMAC CS/CJ Series Operation Manual (W339), SYSMAC CS/CJ Series PU Units or CS/CJ-series CPU Units CTS/CJ-series PLCs using a Programming Operate CS/CJ-series PLCs usin
Blocks.
CS1D-CPU□H CPU Units CS1D-CPU□S CPU Units CS1D-DPL01/02D Duplex Unit CS1D-PWPD□□ Power Supply Unit Duplex System Operation Manual NSJ Series NSJ5-TQ□(B)-G5D, NSJ5-SQ□(B)-G5D, NSJ8-TV□(B)-G5D, NSJ10-TV□(B)-M3D, NSJ5-TQ□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TNQ-(B)-M3D, NSJ5-TQ□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and chall stops of the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W394), and NS-V1/-V2 Series Setup Manual (W394), and NS-V1/-V2 S
CS1D-CPU□H CPU Units CS1D-CPU□S CPU Units CS1D-DPL01/02D Duplex Unit CS1D-PWPD□□ Power Supply Unit Duplex System Operation Manual NSJ Series NSJ5-TQ□(B)-G5D, NSJ5-SQ□(B)-G5D, NSJ8-TV□(B)-G5D, NSJ10-TV□(B)-M3D, NSJ5-TQ□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TQ□(B)-M3D, NSJ5-TNQ-(B)-M3D, NSJ5-TQ□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and other basic operations for a Duplex System based on CS1D CPU Units. W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation, maintenance, and chall stops of the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W394), and NS-V1/-V2 Series Setup Manual (W394), and NS-V1/-V2 S
CS1D-CPU□S CPU Units CS1D-DPL01/02D Duplex Unit CS1D-PA/PD□□ Power Supply Unit Duplex System Operation Manual NSJ Series NSJ-TV□(B)-G5D, NSJ5-SQ□(B)-G5D, NSJ8-TV□(B)-G5D, NSJ10-TV□(B)-G5D, NSJ12-TS□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJ5-SQ□(B)-M3D, NSJ8-TV□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Trovides information on how to program and operate CS/CJ-series PLCs using a Programming
CS1D-PPL01/02D Duplex Unit CS1D-PA/PD Power Supply Unit Duplex System Operation Manual NSJ Series NSJ5-TQ (B)-G5D, NSJ5-SQ (B)-G5D, NSJ8-TV (B)-G5D, NSJ5-TQ (B)-M3D, NSJ5-SQ (B)-M3D, NSJ8-TV (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E, W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CJ Series Operation Manual (W339), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V383) EXCONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual W447 Describes the functionality unique to the CX-Programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E,
CS1D-PA/PDDDD Power Supply Unit Duplex System Operation Manual NSJ Series NSJS-TQDD(B)-G5D, NSJ5-SQDD(B)-G5D, NSJ8-TVDD(B)-G5D, NSJ5-TQDDB Power Supply Unit NSJ5-TQDDB Power Supply Unit NSJ8-TVDDB Power Supply Unit NSJ8-TVDB Power Supply Unit NSJ8-TVDDB Power Supply Unit NSJ
Duplex System Operation Manual NSJ Series NSJ6-TQ (B)-G5D, NSJ5-SQ (B)-G5D, NSJ8-TV (B)-G5D, NSJ10-TV (B)-G5D, NSJ12-TS (B)-G5D, NSJ10-TV (B)-G5D, NSJ12-TS (B)-G5D, NSJ10-TV (B)-M3D, NSJ5-SQ (B)-M3D, NSJ8-TV (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual CXONE-AL (C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CYMS-PRO21-E, CQM1-PRO01-E, W452 Provides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS/CJ Series Programming Manual (W393), SYSMAC CS/CJ Series Programming Manual (W393) CXONE-AL (C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
NSJ Series NSJ5-TQ (B)-G5D, NSJ5-SQ (B)-G5D, NSJ8-TV (B)-G5D, NSJ10-TV (B)-G5D, NSJ12-TS (B)-G5D, NSJ5-TQ (B)-M3D, NSJ5-SQ (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Povides the following information on the NSJ-series NSJ Controllers: Overview and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
NSJ5-TQ (B)-G5D, NSJ5-SQ (B)-G5D, NSJ10-TV (B)-G5D, NSJ12-TS (B)-G5D, NSJ10-TV (B)-G5D, NSJ10-TV (B)-G5D, NSJ10-TV (B)-G5D, NSJ10-TV (B)-M3D, NSJ5-SQ (B)-M3D, NSJ8-TV (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CXONE-AL D-C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CXONE-AL D-C-V4/CXONE-AL D-V4 CX-Programmer operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CXONE-AL D-C-V4/CXONE-AL D-V4 CX-Programmer operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CYSMAC CS/CJ Series PLCs using a Programming
NSJ8-TV (B)-G5D, NSJ10-TV (B)-G5D, NSJ12-TS (B)-G5D, NSJ5-TQ (B)-M3D, NSJ5-SQ (B)-M3D, NSJ8-TV (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CYEVIEW and features Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) EXCONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E,
NSJ12-TS□(B)-G5D, NSJ5-TQ□(B)-M3D, NSJ5-SQ□(B)-M3D, NSJ8-TV□(B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E, Designing the system configuration Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CJ Series Operation Manual (W394), and NS-V1/-V2 Series Programming Manual (V083) W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E,
NSJ5-SQ (B)-M3D, NSJ8-TV (B)-M3D, NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual Operation Manual Operation Manual CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Installation and wiring I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CS Series Operation Manual (W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
NSJW-ETN21, NSJW-CLK21-V1, NSJW-IC101 Operation Manual I/O memory allocations Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CJ Series Operation Manual (W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
Operation Manual Troubleshooting and maintenance Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CJ Series Operation Manual (W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ- series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
Use this manual in combination with the following manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CJ Series Operation Manual (W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
manuals: SYSMAC CS Series Operation Manual (W339), SYSMAC CJ Series Operation Manual (W393), SYSMAC CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL C-V4/CXONE-AL D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E,
(W339), SYSMAC CJ Series Operation Manual (W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E,
(W393), SYSMAC CS/CJ Series Programming Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PR001-E, C200H-PR027-E, CQM1-PR001-E, W341 Provides information on how to program and operate CS/CJ-series PLCs using a Programming
Manual (W394), and NS-V1/-V2 Series Setup Manual (V083) CXONE-AL□□C-V4/CXONE-AL□□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ- series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, W341 Provides information on how to program and operate CS/CJ-series PLCs using a Programming
Manual (V083) CXONE-AL□C-V4/CXONE-AL□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed).
CXONE-AL□□C-V4/CXONE-AL□□D-V4 CX-Programmer Operation Manual Function Blocks/Structured Text W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, W447 Describes the functionality unique to the CX-Programmer and CP-series CPU Units or CS/CJ-series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed).
CX-Programmer Operation Manual Function Blocks/Structured Text grammer and CP-series CPU Units or CS/CJ- series CPU Units with unit version 3.0 or later based on function blocks or structured text pro- gramming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Grammer and CP-series CPU Units or CS/CJ- series CPU U
Function Blocks/Structured Text series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, Series CPU Units with unit version 3.0 or later based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed).
based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, based on function blocks or structured text programming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). Provides information on how to program and operate CS/CJ-series PLCs using a Programming
gramming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, gramming. Functionality that is the same as that of the CX-Programmer is described in W446 (enclosed). Provides information on how to program and operate CS/CJ-series PLCs using a Programming
of the CX-Programmer is described in W446 (enclosed). SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, of the CX-Programmer is described in W446 (enclosed). Provides information on how to program and operate CS/CJ-series PLCs using a Programming
(enclosed). SYSMAC CS/CJ Series W341 Provides information on how to program and operate CS/CJ-series PLCs using a Programming
SYSMAC CS/CJ Series CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, W341 Provides information on how to program and operate CS/CJ-series PLCs using a Programming
CQM1H-PRO01-E, C200H-PRO27-E, CQM1-PRO01-E, operate CS/CJ-series PLCs using a Programming
LOCAW KOOOA
CS1W-KS001 Console. Console.
Programming Consoles Operation Manual
SYSMAC CS/CJ Series W336 Describes the use of Serial Communications Unit
CS1W-SCBV1, CS1W-SCUV1, and Boards to perform serial communications
CJ1W-SCU V1, CJ1W-SCU 2 with external devices, including the usage of standard system protocols for OMPON products
Serial Communications Boards/Units Operation Manual dard system protocols for OMRON products.
CXONE-AL C-V4/AL D-V4 W344 Describes the use of the CX-Protocol to create
CX-Protocol Operation Manual protocol macros as communications sequences
to communicate with external devices.
CXONE-AL C-V4/AL D-V4 W464 Describes operating procedures for the CX-Inte-
CX-Integrator Operation Manual grator Network Configuration Tool for CS-, CJ-,
CP-, and NSJ-series Controllers.
CXONE-AL C-V4/AL CXONE-LT C-V4 W463 Installation and overview of CX-One FA Inte-CX-One Setup Manual grated Tool Package.



Safety Precautions

OMRON products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual.

The following conventions are used to indicate and classify precautions in this manual. Always heed the information provided with them. Failure to heed precautions can result in injury to people or damage to property.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. Additionally, there may be severe property damage.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. Additionally, there may be severe property damage.

⚠ Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.

Visual Aids

The following headings appear in the left column of the manual to help you locate different types of information.

Note Indicates information of particular interest for efficient and convenient operation of the product.

1,2,3... 1. Indicates lists of one sort or another, such as procedures, checklists, etc.

General Precautions

The user must operate the product according to the performance specifications described in the operation manuals.

Before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly, consult your OMRON representative.

Make sure that the ratings and performance characteristics of the product are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.

This manual provides information for programming and operating the Unit. Be sure to read this manual before attempting to use the Unit and keep this manual close at hand for reference during operation.



NARNING It is extremely important that a PLC and all PLC Units be used for the specified purpose and under the specified conditions, especially in applications that can directly or indirectly affect human life. You must consult with your OMRON representative before applying a PLC System to the above-mentioned applications.

Safety Precautions

/!\ WARNING Do not attempt to take any Unit apart or touch the inside of any Unit while the power is being supplied. Doing so may result in electric shock.



/!\ WARNING Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.



/!\ WARNING Provide safety measures in external circuits (i.e., not in the Programmable Controller), including the following items, to ensure safety in the system if an abnormality occurs due to malfunction of the Programmable Controller or another external factor affecting the operation of the Programmable Controller. "Programmable Controller" indicates the CPU Unit and all other Units and is abbreviated "PLC" in this manual. Not doing so may result in serious accidents.

- · Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
- The PLC will turn OFF all outputs when its self-diagnosis function detects any error or when a severe failure alarm (FALS) instruction is executed. Unexpected operation, however, may still occur for errors in the I/O control section, errors in I/O memory, and other errors that cannot be detected by the self-diagnosis function. As a countermeasure for all such errors, external safety measures must be provided to ensure safety in the system.
- The PLC outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safety in the system.
- Provide measures in the computer system and programming to ensure safety in the overall system even if errors or malfunctions occur in data link communications or remote I/O communications.

Caution Confirm safety before transferring data files stored in the file memory (Memory Card or EM file memory) to the I/O area (CIO) of the CPU Unit using a peripheral tool. Otherwise, the devices connected to the Output Unit may malfunction regardless of the operating mode of the CPU Unit.

/! Caution Fail-safe measures must be taken by the customer to ensure safety in the event of incorrect, missing, or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes. Serious accidents may result from abnormal operation if proper measures are not provided.

/!\ Caution Execute online edit only after confirming that no adverse effects will be caused by extending the cycle time. Otherwise, the input signals may not be readable.

/!\ Caution Confirm safety at the destination node before transferring a program, PLC Setup, I/O tables, I/O memory contents, or parameters to another node or changing contents of the any of these items. Transferring or changing data can result in unexpected system operation.

/!\ Caution The CJ2 CPU Units automatically back up the user program and parameter data to flash memory when these are written to the CPU Unit. I/O memory (including the DM, EM, and HR Areas), however, is not written to flash memory. The DM, EM, and HR Areas can be held during power interruptions with a battery. If there is a battery error, the contents of these areas may not be accurate after a power interruption. If the contents of the DM, EM, and Holding Areas are used to control external outputs, prevent inappropriate outputs from being made whenever the Battery Error Flag (A402.04) is ON.

/!\ Caution Tighten the terminal screws on the AC Power Supply Unit to the torque specified in the operation manual. The loose screws may result in burning or malfunction.

/!\ Caution Do not touch the Power Supply Unit when power is being supplied or immediately after the power supply is turned OFF. The Power Supply Unit will be hot and you may be burned.

/!\ Caution Be careful when connecting personal computers or other peripheral devices to a PLC to which is mounted a non-insulated Unit (CS1W-CLK12/52(-V1) or CS1W-ETN01) connected to an external power supply. A short-circuit will be created if the 24 V side of the external power supply is grounded and the 0 V side of the peripheral device is grounded. When connecting a peripheral device to this type of PLC, either ground the 0 V side of the external power supply or do not ground the external power supply at all.

Operating Environment Precautions

Caution Do not operate the control system in the following locations:

- · Locations subject to direct sunlight.
- Locations subject to temperatures or humidity outside the range specified in the specifications.
- Locations subject to condensation as the result of severe changes in tem-
- Locations subject to corrosive or flammable gases.
- Locations subject to dust (especially iron dust) or salts.
- Locations subject to exposure to water, oil, or chemicals.
- · Locations subject to shock or vibration.

Caution Take appropriate and sufficient countermeasures when installing systems in the following locations:

- Locations subject to static electricity or other forms of noise.
- Locations subject to strong electromagnetic fields.
- Locations subject to possible exposure to radioactivity.
- · Locations close to power supplies.

/!\ Caution The operating environment of the PLC System can have a large effect on the longevity and reliability of the system. Improper operating environments can lead to malfunction, failure, and other unforeseeable problems with the PLC System. Be sure that the operating environment is within the specified conditions at installation and remains within the specified conditions during the life of the system.

Application Precautions

Observe the following precautions when using a CJ-series PLC.

■ Power Supply

- Always use the power supply voltages specified in the operation manuals. An incorrect voltage may result in malfunction or burning.
- Design the system so that the power supply capacity of the Power Supply Unit that you are using is not exceeded. Exceeding the capacity of the Power Supply Unit may prevent the CPU Unit or other Units from starting.
- Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied. Be particularly careful in places where the power supply is unstable. An incorrect power supply may result in malfunction.
- Always turn OFF the power supply to the PLC before attempting any of the following. Not turning OFF the power supply may result in malfunction or electric shock.
 - Mounting or dismounting Power Supply Units, I/O Units, CPU Units, Option Boards, Pulse I/O Modules, or any other Units.
 - Assembling the Units.
 - · Setting DIP switches or rotary switches.
 - · Connecting cables or wiring the system.
 - Connecting or disconnecting the connectors.
- When cross-wiring terminals, the total current for all the terminal will flow in the wire. Make sure that the current capacity of the wire is sufficient.

- Observe the following precautions when using a Power Supply Unit that supports the Replacement Notification Function.
 - Replace the Power Supply Unit within six months if the display on the front of the Power Supply Unit alternates between 0.0 and A02, or if the alarm output automatically turns OFF.
 - Keep the alarm output cable separated from power line and high-voltage lines.
 - Do not apply a voltage or connect a load exceeding the specifications to the alarm output.
 - When storing the Power Supply Unit for more than three months, store it at -20 to 30°C and 25% to 70% humidity to preserve the Replacement Notification Function.
 - If the Power Supply Unit is not installed properly, heat buildup may cause the replacement notification signal to appear at the wrong time or may cause interior elements to deteriorate or become damaged. Use only the standard installation method.
- Do not touch the terminals on the Power Supply Unit immediately after turning OFF the power supply. Residual voltage may cause electrical shock.

■ Installation

- Do not install the PLC near sources of strong high-frequency noise.
- Before touching a Unit, be sure to first touch a grounded metallic object in order to discharge any static build-up. Not doing so may result in malfunction or damage.
- Be sure that the terminal blocks, connectors, Memory Cards, Option Boards, Pulse I/O Modules, expansion cables, and other items with locking devices are properly locked into place.
- The sliders on the tops and bottoms of the Power Supply Unit, CPU Unit, I/O Units, Special I/O Units, CPU Bus Units, and Pulse I/O Modules must be completely locked (until they click into place) after connecting to adjacent Units.

■ Wiring

- Follow the instructions in hardware manual for your PLC to correctly perform wiring.
- Double-check all wiring and switch settings before turning ON the power supply. Incorrect wiring may result in burning.
- Be sure that all terminal screws, and cable connector screws are tightened to the torque specified in the relevant manuals.
- Mount terminal blocks and connectors only after checking the mounting location carefully.
- Leave the label attached to the Unit when wiring. Removing the label may result in malfunction if foreign matter enters the Unit.
- Remove the label after the completion of wiring to ensure proper heat dissipation. Leaving the label attached may result in malfunction.
- Use crimp terminals for wiring. Do not connect bare stranded wires directly to terminals. Connection of bare stranded wires may result in burning.
- Do not apply voltages to the Input Units in excess of the rated input voltage. Excess voltages may result in burning.
- Always connect to a ground of 100 Ω or less when installing the Units. Not connecting to a ground of 100 Ω or less may result in electric shock. A ground of 100 Ω or less must be installed when shorting the GR and LG terminals on the Power Supply Unit.

- Do not apply voltages or connect loads to the Output Units in excess of the maximum switching capacity. Excess voltage or loads may result in burning.
- Do not pull on the cables or bend the cables beyond their natural limit.
 Doing either of these may break the cables.
- Do not place objects on top of the cables or other wiring lines. Doing so may break the cables.
- Do not use commercially available RS-232C personal computer cables.
 Always use the special cables listed in this manual or make cables according to manual specifications. Using commercially available cables may damage the external devices or CPU Unit.
- Never connect pin 6 (5-V power supply) on the RS-232C port on the CPU Unit to any device other than an NT-AL001 or CJ1W-CIF11 Adapter. The external device or the CPU Unit may be damaged.

■ Handling

- The Power Supply Unit may possibly be damaged if the entire voltage for a dielectric strength test is applied or shut OFF suddenly using a switch. Use a variable resistor to gradually increase and decrease the voltage.
- Separate the line ground terminal (LG) from the functional ground terminal (GR) on the Power Supply Unit before performing withstand voltage tests or insulation resistance tests. Not doing so may result in burning.
- Make sure that the DIP switches and DM Area are set correctly before starting operation.
- After replacing the CPU Unit, a Special I/O Unit, or a CPU Bus Unit, make sure that the required data for the DM Area, Holding Area, and other memory areas has been transferred to the new Unit before restarting operation.
- Confirm that no adverse effect will occur in the system before attempting any of the following. Not doing so may result in an unexpected operation.
 - Changing the operating mode of the PLC (including the setting of the startup operating mode).
 - Force-setting/force-resetting any bit in memory.
 - Changing the present value of any word or any set value in memory.
- Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction, fire, or electric shock.
- Do not drop the PLC or subject abnormal vibration or shock to it.
- The life of the battery will be reduced if the PLC is left for a period of time without a battery installed and without power supply, and then a battery is installed without turning ON the power supply.
- Replace the battery as soon as a battery error occurs or as soon as the specified battery backup time expires. Be sure to install a replacement battery within two years of the production date shown on the battery's
- Before replacing the battery, turn ON power for at least 5 minutes before starting the replacement procedure and complete replacing the battery within 5 minutes of turning OFF the power supply. Memory contents may be corrupted if this precaution is not obeyed.
- If the Battery Error Flag is used in programming the application, confirm system safety even if the system detects a battery error before you replace the battery while the power is ON.
- Do not short the battery terminals or charge, disassemble, heat, or incinerate the battery. Do not subject the battery to strong shocks. Doing any of these may result in leakage, rupture, heat generation, or ignition of the battery. Dispose of any battery that has been dropped on the floor or oth-

- erwise subjected to excessive shock. Batteries that have been subjected to shock may leak if they are used.
- UL standards require that only an experienced engineer can replace the battery. Make sure that an experienced engineer is in charge of battery replacement. Follow the procedure for battery replacement given in hardware manual for your PLC.
- Dispose of the product and batteries according to local ordinances as they apply.



廢雷池請回收

- If the I/O Hold Bit is turned ON, the outputs from the PLC will not be turned OFF and will maintain their previous status when the PLC is switched from RUN or MONITOR mode to PROGRAM mode. Make sure that the external loads will not produce dangerous conditions when this occurs. (When operation stops for a fatal error, including those produced with the FALS(007) instruction, all outputs from Output Unit will be turned OFF and only the internal output status will be maintained.)
- Unexpected operation may result if inappropriate data link tables or parameters are set. Even if appropriate data link tables and parameters have been set, confirm that the controlled system will not be adversely affected before starting or stopping data links.
- Write programs so that any data that is received for data link communications is used only if there are no errors in the CPU Units that are the sources of the data. Use the CPU Unit error information in the status flags to check for errors in the source CPU Units. If there are errors in source CPU Units, they may send incorrect data.
- All CPU Bus Units will be restarted when routing tables are transferred from a Programming Device to the CPU Unit. Restarting these Units is required to read and enable the new routing tables. Confirm that the system will not be adversely affected before transferring the routing tables.
- Tag data links between related nodes will stop while tag data link parameters are being transferred during PLC operation. Confirm that the system will not be adversely affected before transferring the tag data link parameters
- If there is interference with network communications, output status will depend on the products that are being used. When using products with outputs, confirm the operation that will occur when there is interference with communications and implement safety measures.
- When creating an AUTOEXEC.IOM file from a Programming Device (a Programming Console or the CX-Programmer) to automatically transfer data at startup, set the first write address to D20000 and be sure that the size of data written does not exceed the size of the DM Area. When the data file is read from the Memory Card at startup, data will be written in the CPU Unit starting at D20000 even if another address was set when the AUTOEXEC.IOM file was created. Also, if the DM Area is exceeded (which is possible when the CX-Programmer is used), the remaining data will be written to the EM Area.
- A battery is mounted to a CJ-series CPU Unit when the Unit is shipped from the factory. Also, the time is set on the internal clock. It is thus not necessary to clear memory and set the clock before using a CJ-series CPU Unit. This point differs from the CS-series CS1 CPU Units.
- The user program and parameter area data in the CJ2 CPU Units are backed up in the built-in flash memory. The BKUP indicator will light on the front of the CPU Unit when the backup operation is in progress. Do

- not turn OFF the power supply to the CPU Unit when the BKUP indicator is lit. The data will not be backed up if power is turned OFF.
- Check the user program and Unit parameter settings for proper execution before actually running them on the Unit. Not checking the program and parameter settings may result in an unexpected operation.
- When setting a Special I/O Unit or CPU Bus Unit in the I/O tables, carefully check the safety of the devices at the connection target before restarting the Unit.
- If a symbol or memory address (only symbols are allowed for ST programming) is specified for the suffix of an array variable in ladder or ST programming to indirectly specify the element number, be sure that the element number does not exceed the maximum memory area range. Specifying a element number that exceeds the maximum range of the memory area specified for the symbol will result accessing data in a different memory area, and may result in unexpected operation.
- Program so that the memory area of the start address is not exceeded when using a symbol or address is used to specify the offset directly in a ladder program.
 - If an indirect specification causes the address to exceed the memory area of the start address, the system will access data in other area, and unexpected operation may occur.
- A CS1 or CJ1 CPU Unit program file (.OBJ) cannot be transferred directly to a CJ2 CPU Unit using a Memory Card. It must first be converted for use with a CJ2 CPU Unit using the CX-Programmer.

■ External Circuits

- Always turn ON power to the PLC before turning ON power to the control system. If the PLC power supply is turned ON after the control power supply, temporary errors may result in control system signals because the output terminals on DC Output Units and other Units will momentarily turn ON when power is turned ON to the PLC.
- Install external breakers and take other safety measures against short-circuiting in external wiring. Insufficient safety measures against short-circuiting may result in burning.
- Do not turn OFF the power supply to the PLC when reading or writing a Memory Card. Also, do not remove the Memory Card when the BUSY indicator is lit. Doing so may make the Memory Card unusable.
 - To remove a Memory Card, first press the memory card power supply switch and then wait for the BUSY indicator to go out before removing the Memory Card.

TABLE OF CONTENTS

	General Precautions					
	Safety Precautions					
	Operating Environment Precautions					
	Application Precautions					
SEC	CTION 1					
	ic Understanding of Instructions					
1-1	Basic Understanding of Instructions.					
1-2	Specifying Operands.					
1-3	Data Formats					
SEC	CTION 2					
	nmary of Instructions					
2-1	Instruction Set and CPU Unit Support for Individual Instructions					
2-2	Instruction Functions.					
SEC	CTION 3					
Inst	ructions					
	CTION 3Notation and Layout of Instruction Descriptions					
	Sequence Input Instructions					
	Sequence Output Instructions					
	Sequence Control Instructions					
	Timer and Counter Instructions.					
	Comparison Instructions					
	Data Movement Instructions					
	Data Shift Instruction					
	Increment/Decrement Instructions					
	Symbol Math Instructions					
	Conversion Instructions.					
	Logic Instructions					
	Special Math Instructions					
	Floating-point Math Instructions					
	Double-precision Floating-point Instructions					
	Table Data Processing Instructions					
	Tracking Instructions					
	Data Control Instructions					
	Subroutines					
	Interrupt Control Instructions					
	High-speed Counter/Pulse Output Instructions.					
	Step Instructions					
	Basic I/O Unit Instructions					
	Serial Communications Instructions					
	Network Instructions					
	File Memory Instructions					
	Display Instructions					

TABLE OF CONTENTS

	Clock Instructions	1008
	Debugging Instructions	1019
	Failure Diagnosis Instructions	1022
	Other Instructions	1043
	Block Programming Instructions	1060
	Text String Processing Instructions	1087
	Task Control Instructions	1116
	Model Conversion Instructions	1120
	Special Function Block Instructions	1134
	SFC Instructions	1136
	CTION 4	1115
	ruction Execution Times and Number of Steps	
4-1	CJ2 CPU Unit Instruction Execution Times and Number of Steps	1150
4-2	CJ1 CPU Unit Instruction Execution Times and Number of Steps	1176
4-3	CS-series Instruction Execution Times and Number of Steps	1204
App	pendices	
App	pendix A List of Instructions by Function Code	1229
App	pendix B Alphabetical List of Instructions by Mnemonic	1245
App	pendix C ASCII Code Table	1263
Ind	ex 1	1265
Rev	ision History	1273

SECTION 1 Basic Understanding of Instructions


This section describes the basic information that is required to use programming instructions.

1-1	Basic Understanding of Instructions	2
1-2	Specifying Operands	11
1-3	Data Formats	19

1-1 Basic Understanding of Instructions

Structure of Instructions

Programs consist of instructions. The conceptual structure of the inputs to and outputs from an instruction is shown in the following diagram.

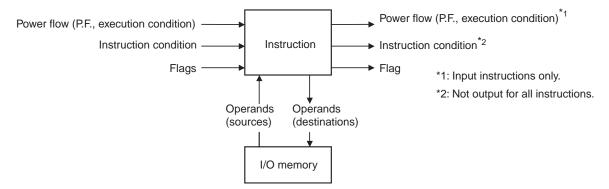

Power Flow


The power flow is the execution condition that is used to control the execute and instructions when programs are executing normally. In a ladder program, power flow represents the status of the execution condition.

Input Instructions

Load instructions indicate a logical start and outputs the execution condition.




• Intermediate instructions input the power flow as an execution condition and output the power flow to an intermediate or output instruction.

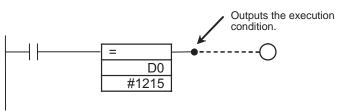

Output Instructions

Output instructions execute all functions, using the power flow as an execution condition.

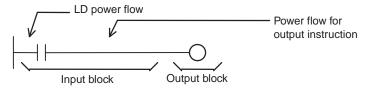

Instruction Conditions

Instruction conditions are special conditions related to overall instruction execution that are output by the following instructions. Instruction conditions have a higher priority than power flow (P.F.) when it comes to deciding whether or not to execute an instruction. An instruction may not be executed or may act differently depending on instruction conditions. Instruction conditions are reset (canceled) at the start of each task, i.e., they are reset when the task changes.

The following instructions are used in pairs to set and cancel certain instruction conditions. These paired instructions must be in the same task.

Instruction condition	Description	Setting instruction	Canceling instruction
Interlocked	An interlock turns OFF part of the program.	IL(002)	ILC(003)
	Special conditions, such as turning OFF output bits, resetting timers, and holding counters are in effect.		
BREAK(514) execution	Ends a FOR(512) - NEXT(513) loop during execution.	BREAK(514)	NEXT(513)
	(Prevents execution of all instructions until to the NEXT(513) instruction.)		
	Executes a JMP0(515) to JME0(516) jump.	JMP0(515)	JME0(516)
Block program execution	Executes a program block from BPRG(096) to BEND(801).	BPRG(096)	BEND(801)

Flags

In this context, a flag is a bit that serves as an interface between instructions.

	Input flags	Output flags		
Flag	Description	Flag	Description	
Carry (CY) Flag	The Carry Flag is used as an unspecified operand in data shift instructions and addition/subtraction instructions.	Condition Flags	Condition Flags include the Always ON/OFF Flags, as well as flags that are updated by results of instruction execution. In user programs, these flags can be specified by labels, such as P_On,	
			P_Off, P_ER, P_CY, P_EQ rather than by addresses.	
Flags for Special Instructions	These include teaching flags for FPD(269) instructions and network communications enabled flags.	Flags for Special Instructions	These include memory card instruction flags and MSG(046) execution completed flags.	


Operands

Operands specify preset instruction parameters (boxes in ladder diagrams) that are used to specify I/O memory area contents or constants. An instruction can be executed entering an address or constant as the operands. Operands are classified as source, destination, or number operands.



0	perand types	Operand symbol		Description
Source	Specifies the address of the data to be read or a constant.	S	Source Operand	Source operand other than control data (C)
		С	Control data	Compound data in a source operand that has different meanings depending bit status.
Destination (Results)	Specifies the address where data will be written.	D		
Number	Specifies a particular number used in the instruction, such as a jump number or subroutine number.	N		

Note Operands are also called the first operand, second operand, and so on, starting from the top of the instruction.

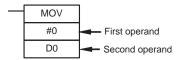

Instruction Location and Execution Conditions


The following table shows the possible locations for instructions. Instructions are grouped into those that do and those do not require execution conditions. Refer to *SECTION 3 Instructions* for details.

Ins	struction	Location	Execution	Diagram	Examples
Input instruc- tions	Logical start (Load instructions)	Connected directly to the left bus bar or is at the beginning of an instruction block.	Not required.		LD, LD TST(350), LD > (and other symbol comparison instructions)
	Intermediate instructions	Between a logical start and the output instruction.	Required		AND, OR, AND TEST(350), AND > (and other ADD symbol comparison instructions), UP(521), DOWN(522), NOT(520), etc.
Output instructions		Connected directly to the right bus bar.	Required	HHH	Most instructions including OUT and MOV(021).
			Not required.		END(001), JME(005), FOR(512), ILC(003), etc.

Instruction Variations

The following variations are available for instructions to differentiate executing conditions and to refresh data when the instruction is executed (immediate refresh).

Variation		Symbol	Description
Differentiation ON 0		@	Instruction that differentiates when the execution condition turns ON.
	OFF	%	Instruction that differentiates when the execution condition turns OFF.
Immediate refreshing		!	Refreshes data in the I/O area specified by the operands or the Special I/O Unit words when the instruction is executed.

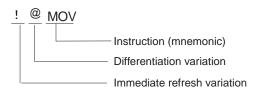

Execution Conditions


The following two types of basic and special instructions can be used.

- Non-differentiated instructions: Executed every cycle
- Differentiated instructions: Executed only once

Non-differentiated Instructions

■ Output instructions (Instructions That Require Input Conditions):

These instructions are executed once every cycle while the execution conditions are satisfied (ON or OFF).

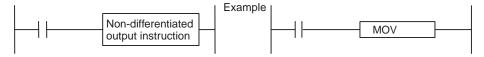


■ Input Instructions (Logical Starts and Intermediate Instructions):

These instructions read bit status, make comparisons, test bits, or perform other types of processing every cycle. If the results are ON, power flow is output (i.e., the execution condition is turned ON).



■ Time Chart

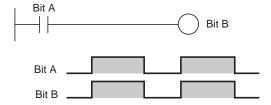

Input-differentiated Instructions

■ Upwardly Differentiated Instructions (Instruction Preceded by @)


Output Instructions:

The instruction is executed only during the cycle in which the execution condition turned ON (OFF \rightarrow ON) and are not executed in the following cycles. The instruction is executed only during the cycle in which the execution condition turned ON (OFF \rightarrow ON) and are not executed in the following cycles.




Executes the MOV instruction once when CIO 1.02 goes OFF \rightarrow ON.

■ Time Chart

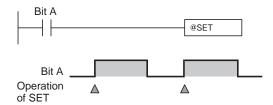


Input Instructions (Logical Starts and Intermediate Instructions):

The instruction reads bit status, makes comparisons, tests bits, or perform other types of processing every cycle and will output an ON execution condition (power flow) when results switch from OFF to ON. The execution condition will turn OFF the next cycle. The instruction reads bit status, makes comparisons, tests bits, or perform other types of processing every cycle and will output an ON execution condition (power flow) when results switch from OFF to ON. The execution condition will turn OFF the next cycle.

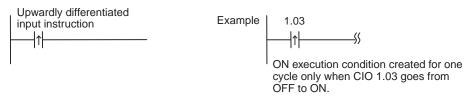

■ Time Chart

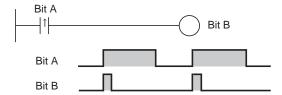


Input Instructions (Logical Starts and Intermediate Instructions):

The instruction reads bit status, makes comparisons, tests bits, or perform other types of processing every cycle and will output an OFF execution condition (power flow stops) when results switch from OFF to ON. The execution condition will turn ON the next cycle.



OFF execution condition created for one cycle only when CIO 1.03 goes from OFF to ON.


■ Time Chart

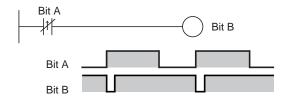


■ Downwardly Differentiated Instructions (Instruction Preceded by %)

Output Instructions:

The instruction is executed only during the cycle in which the execution condition turned OFF (ON \rightarrow OFF) and is not executed in the following cycles.

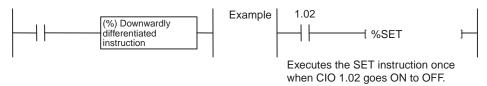


■ Time Chart

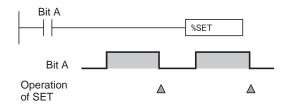

Input Instructions (Logical Starts and Intermediate Instructions):


The instruction reads bit status, makes comparisons, tests bits, or perform other types of processing every cycle and will output the execution condition (power flow) when results switch from ON to OFF.

The execution condition will turn OFF the next cycle.

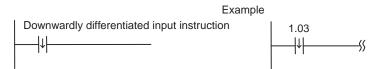

Will turn ON when the CIO 1.03 switches from ON \rightarrow OFF and will turn OFF after one cycle.


■ Time Chart

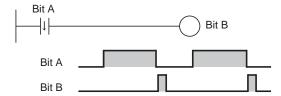


Note The downward differentiation variation (indicated by "%") cannot be used with as many instructions as the upward differentiation variation. It can be used only with the LD, AND, OR, SET, and RSET instruction. To use downward differentiation with any other instructions, combine the instruction with the DIFD(014) or DOWN(522) instruction. NOT can be added to instruction only for the CS1-H, CJ1-H, CJ1M, and CS1D CPU Units

Input Instructions (Logical Starts and Intermediate Instructions):

The instruction reads bit status, makes comparisons, tests bits, or perform other types of processing every cycle and will output an OFF execution condition (power flow stops) when results switch from ON to OFF.

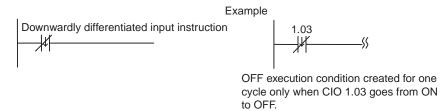


■ Time Chart

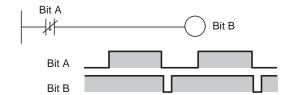

I/O Instruction Timing

The following timing chart shows different operating timing for individual instructions using a program comprised of only LD and OUT instructions.

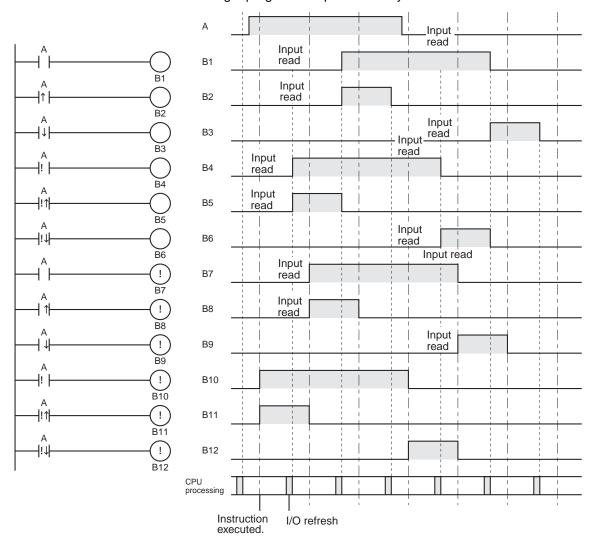


Differentiated Instructions

- A differentiated instruction has an internal flag that tells whether the previous value is ON or OFF. At the start of operation, the previous value flags for upwardly differentiated instruction (DIFU and @ instructions) are set to ON and the previous value flags for downwardly differentiated instructions (DIFD and % instructions) are set to OFF. This prevents differentiation outputs from being output unexpectedly at the start of operation.
- An upwardly differentiated instruction (DIFU or @ instruction) will output ON only when the execution condition is ON and flag for the previous value is OFF.

■ Using Differentiated Instructions in Interlocks (IL - ILC Instructions)

In the following example, the previous value flag for the differentiated instruction maintains the previous interlocked value and will not output a differentiated output at point A because the value will not be updated while the interlock is in effect.

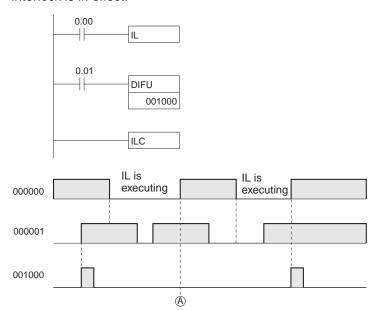

■ Using Differentiated Instructions in Jumps (JMP(004) - JME(005) Instructions)

Just as for interlocks, the previous value flag for a differentiated instruction is not changed when the instruction is jumped, i.e., the previous value is maintained.


- With downwardly differentiated instructions (DIFD(014) or instructions with a %), outputs will turn ON when inputs turn OFF only when the previous value flag is ON.
- With both upwardly and downwardly differentiated instructions, outputs will turn OFF in the next cycle.

Note Do not use the Always P_On Flag or A200.11 (First Cycle Flag) as the input bit for an upwardly differentiated instruction. Do not use the Always P_Off Flag as the input bit for a downwardly differentiated instruction. If either is used, the instruction will never be executed.


1-2 Specifying Operands


Addressing I/O Memory Areas

Bit Addresses

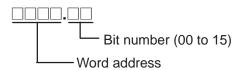


Example: The address of bit 03 in word 1 in the CIO Area would be as shown below.

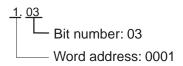


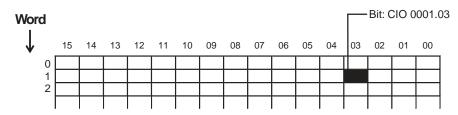

With the CJ2 CPU Unit, bit addresses can be specified in the DM and EM Areas.

Example: DM area

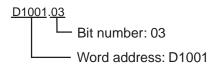

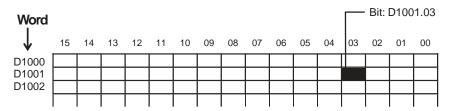

Word Addresses

Indicates the word address

Example: I/O Area

The address for word CIO 10 would be as shown below.

10 Word address

DM and EM Areas addresses are given "D" or "E" prefixes, as shown below for the address D200.

Example: DM Area

The address for word D200 would be as shown below.

D200 Word address

Example: EM Area


The address for word E200 in the current bank would be as shown

below.

E200 Word address

Example: EM Area Bank 1

The address for word E200 in bank 1 would be as shown below.

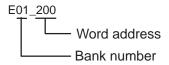

Specifying Operands

Operand	Description	Notation	Application examples
Specifying bit addresses	The word and bit numbers are specified directly to specify a bit (input bits). Bit number (00 to 15) Indicates the word address. The same addresses are used to access timer/counter Completion Flags and Present Values. There is also only one address for a Task Flag.	Bit number (02) Word number: 1	1.02
Specifying word addresses	The word number is specified directly to specify the 16-bit word. Indicates the word address.	Word number: 3 D200 Word number: 200	MOV 3 D200
Specifying offsets for bit addresses*1	In brackets, specify the number of bits to offset the specified starting bit address. Offset the specified starting bit address. Offset Constant 0 to 15 or word address in I/O memory Starting bit address A symbol can also be specified for the starting bit address. Only CIO, Holding, Work, DM, and EM Area addresses can be used regardless of whether a physical address or symbol is used. A constant or word address in I/O memory can be used for the offset. If a word address is specified, the contents of the word is used directly as the offset.	10.00[2] Number of bits to offset the address Starting bit address 10.00[WO] Number of bits to offset the address (W0 = &2) Starting bit address	10.00[2]

Operand	Description	Notation	Application examples
Specifying offsets for word addresses*1	In brackets, specify the number of bits to offset the specified starting bit address. Offset Constant 0 to 15 or word address in I/O memory Starting word address A symbol can also be specified for the starting word address. Only CIO, Holding, Work, DM, and EM Area addresses can be used regardless of whether a physical address or symbol is used. A constant or word address in I/O memory can be used for the offset. If a word address is specified, the contents of the word is used directly as the offset.	D0[2]Number of words to offset address Starting word address D2	MOV 3 D0[200]
Specifying indirect DM/EM addresses in Binary Mode	The offset from the beginning of the area is specified. The contents of the address will be treated as binary data (00000 to 32767) to specify the word address in Data Memory (DM) or Extended Data Memory (EM). Add the @ symbol at the front to specify an indirect ad-dress in Binary Mode. ©DOOD to 32767 (0000 Hex to 7FFF Hex in BIN) D0 to D32767 are specified if D(DDODD contains 0000 Hex to 7FFF Hex (0 to 32767).	@D300 & 2 5 6 Contents Hex: #0100 Specifies D256. Add the @ symbol.	MOV #0001 @D300

Operand	Description	Notation	Application examples
Specifying indirect DM/EM addresses in Binary Mode	E0 _0 to E0 _32767 of bank 0 in Extended Data Memory (EM) are specified if @D(□□□□□) contains 8000 Hex to FFFF Hex (32768 to 65535).	@D300 832769 Contents Hex: #8001 Specifies E0_01.	
	E□_0 to E□_32767 in the specified bank are specified if @E□_□□□□□ contains 0000 Hex to 7FFF Hex (0 to 32767).	@E1_200	MOV #0001@E1_200
	$E(\Box+1)_0$ to $E(\Box+1)_32767$ in the bank following the specified bank \Box are specified if $@E\Box_\Box\Box\Box\Box$ contains 8000 Hex to FFFF Hex (32768 to 65535).	@E1_200 832770 Contents Hex: #8002 \$ Specifies E2_2.	
	Note When specifying an indirect address Data Memory (EM) (banks 0 to 18) as with the @ symbol exceeds 32767, tl Extended Data Memory (EM) continu Example: If the Data Memory (DM) w Memory (EM) would be specified. If the fied as "n" and the contents of the wood an address in the Extended Data Me Example: If bank 2 in Extended Data in Extended Data Memory (EM) wou	s one series of addresses. If the ne address will be assumed to buing on from 0 in bank No. 0. Word contains 32768, E0_0 in bank Extended Data Memory (EM) ord exceeds 32767, the address mory (EM) continuing on from 0 Memory (EM) contains 32768,	contents of an address be an address in the ank 0 in Extended Data) bank number is speci- will be assumed to be in bank N+1.
Specifying indirect DM/EM addresses in BCD Mode	The offset from the beginning of the area is specified. The contents of the address will be treated as BCD data (0000 to 9999) to specify the word address in Data Memory (DM) or Extended Data Memory (EM). Add an asterisk (*) at the front to specify an indirect address in BCD Mode.	*D200 #0100 Contents V Specifies D100	MOV #0001 *D200
	D Contents	Add an asterisk ().	

Operand	Description		Notation	Application examples
Specifying a register directly (See note.)	An index register (IR) or a data register (DR) is specified directly by specifying IR□ (□: 0 to 15) or DR□ (□: 0 to 15).		IR0	MOVR 1.02 IR0 Stores the PLC memory address for CIO 0010 in IR0.
	, ,		IR1	MOVR 10 IR1
				Stores the PLC memory address for CIO 0010 in IR1.
Specifying an	Indirect address	The bit or word with the PLC	,IR0	LD ,IR0
indirect address using a register (See note.)	(No offset)	memory address contained in IR□ will be specified. Specify ,IR□ to specify bits and words for		Loads the bit with the PLC memory address in IR0.
(Occ Hote.)		instruction operands.	,IR1	MOV #0001 ,IR1
				Stores #0001 in the word with the PLC memory in IR1.
	Constant	The bit or word with the PLC memory address in IR□ + or – the	+5 ,IR0	LD +5 ,IR0
	offset	constant is specified. Specify +/- constant ,IR□. Constant offsets		Loads the bit with the PLC memory address in IR0 + 5.
		range from -2048 to +2047 (deci-	31 ,IR1	MOV #0001 +31 ,IR1
		mai). The offset is converted to binary data when the instruction is executed.		Stores #0001 in the word with the PLC memory address in IR1 + 31
	memory address in IR□ + contents of DR□ is specifi Specify DR□, IR□. DR (daister) contents are treated signed-binary data. The coof IR□ will be given a negative signed to the coof IR□ will be given a negative signed.	The bit or word with the PLC	DR0 ,IR0	LD DR0 ,IR0
		contents of DR□ is specified. Specify DR□ ,IR□. DR (data register) contents are treated as signed-binary data. The contents of IR□ will be given a negative offset if the signed binary value is		Loads the bit with the PLC memory address in IR0 + the value in DR0.
			DR0 ,IR1	MOV #0001 DR0 ,IR1
				Stores #0001 in the word with the PLC memory address in IR1 + the value in DR0.
	Auto-increment	The contents of IR□ is incre-	,IR0++	LD ,IR0 ++
		mented by +1 or +2 after referencing the value as an PLC memory address.		Increments the contents of IR0 by 2 after the bit with the PLC memory address in IR0 is loaded.
		+1: Specify ,IR□+	,IR1+	MOV #0001 ,IR1 +
		+2: Specify ,IR□ + +		Increments the contents of IR1 by 1 after #0001 is stored in the word with the PLC memory address in IR1.
	Auto-decrement	The contents of IR□ is decre-	,—IR0	LD ,—IR0
		mented by -1 or -2 after referencing the value as an PLC memory address.		After decrementing the contents of IR0 by 2, the bit with the PLC memory address in IR0 is loaded.
		-1: Specify ,-IR□	,IR1	MOV #0001 ,-IR1
	-2: Specify ,	–2: Specify ,—IR□		After decrementing the contents of IR1 by 1, #0001 is stored in the word with the PLC memory address in IR1.

Note For specific application methods, refer to the SYSMAC CS/CJ/NSJ-series Programmable Controllers Programming Manual (Cat. No. W394) and the SYSMAC CJ-series CJ2 CPU Unit Software User's Manual (Cat. No. W473).

Data	Operand	Data form	Symbol	Range	Application example
16-bit constant	All binary data or a limited range of binary data	Unsigned binary	#	#0000 to #FFFF	MOV #0100 D0 Stores #0100 hex (&256 decimal)
	uala				in D0. +#0009 #0001 D1
					Stores #000A hex (&10 decimal) in D1.
		Signed decimal	±	-32768 to +32767	MOV .100 D0
					Stores .100 decimal (#FF9C hex) in D0.
					+-9 -1 D1
					Stores –10 decimal (#FFF6 hex) in D1.
		Unsigned decimal	&	&0 to &65535	MOV &256 D0
					Stores –256 decimal (#0100 hex) in D0.
					+&9 &1 D1
					Stores –10 decimal (#000A hex) in D1.
	All BCD data or a lim-	BCD	#	#0000 to #9999	MOV #0100 D0
	ited range of BCD data				Stores #0100 (BCD) in D0.
	uala				+B #0009 #0001 D1
					Stores #0010 (BCD) in D1.
32-bit	All binary data or a	Unsigned binary	#	#00000000 to	MOVL #12345678 D0
constant	limited range of binary data			#FFFFFFF	Stores #12345678 hex in D0 and D1.
					D1 D0
					1234 5678
		Signed binary	+	-2147483648 to	MOVL -12345678 D0
				+2147483647	Stores –12345678 decimal in D0 and D1.
		Unsigned	&	&0 to	MOVL &12345678 D0
		decimal		&4294967295	Stores &12345678 decimal in D0 and D1.
	All BCD data or a lim-	BCD	#	#00000000 to	MOVL #12345678 D0
	ited range of BCD data			#9999999	Stores #12345678 (BCD) in D0 and D1.

Text string	Description	Symbol Examples	
	Text string data is stored in ASCII (one byte except for	↓ ABCDE	MOV\$ D100 D200
	special characters) in order	(A' (B'	D100 41 42
	from the leftmost to the rightmost byte and from the	'C' 'D'	D101 43 44 D102 45 00
	rightmost (smallest) to the leftmost word.	'E' NUL	102 40 100
	00 Hex (NUL code) is stored	41 42	D200 41 42
	in the rightmost byte of the	43 44 45 00	D201 43 44
	last word if there is an odd number of characters.	45 00	D202 45 00
	0000 Hex (2 NUL codes) is stored in the leftmost and	ABCD	
	rightmost vacant bytes of	'A' 'B'	
	the last word + 1 if there is an even number of charac-	'C' 'D'	
	ters.		
		41 42 43 44	
		00 00	
		used in a text string includes alphanu	
	and symbols (except for spe	cial characters). The characters are sh	nown in the following table.
		oper four digits	
	0 1 2 3 4 5	6 7 8 9 A B C D E F	
	0 Sp 0 @ F		
	1 ! 1 A C		
	3 # 3 C S		
	4 \$4DT	d t , I > 7	
		e u ・オナユ	
	ower four digits of the following states of the follow	f v ヲカニョ	
	5 7 ' 7 G W		
	8 (8 H X		
	9) 9 I Y A *: J Z	iy ゥケノル	
		jz ェコハレ	
	B + ; K	k {	
	C , < L ¥ D -= M]	I	
		m	
	F ? 0	n ~ ョセホ゛ o ッソマ゜	
		/ /	



Precautions for Correct Use

The following instructions are executed even when the input conditions are OFF. Therefore, when indirect memory addresses are specified using auto-incrementing or auto-decrementing (,IR+ or ,IR-) in an operand of any of these instructions, the value in the Index Register (IR) is refreshed each cycle regardless of the input condition (increases or decreases one every cycle). This must be considered when writing a program.

Classification	Instructions
Sequence input instructions	LD, LD NOT, AND, AND NOT, OR, OR NOT, LD TST(350), LD TSTN(351), AND TST(350), AND TSTN(351), OR TST(350), OR TSTN(351)
Sequence output instructions	OUT, OUT NOT, DIFU(013), DIFD(014)
Sequence control instructions	JMP(004), FOR(512)
Timer and counter instructions	TIM/TIMX(550), TIMH(015)/TIMHX(551), TMHH(540)/TMHHX(552), TIMU(541)/TIMUX(556), TMUH(544)/TMUHX(557), TTIM(087)/ TTIMX(555), TIML(542)/TIMLX(553), MTIM(533)/MTIMX(554), CNT/ CNTX(546), CNTR(012)/CNTRX(548)
Comparison instructions	Symbol comparison instructions (LD, AND, OR =, etc.(function codes: 300, 305, 310, 320, and 325))
Single-precision floating-point math instructions	Single-precision floating-point data comparison (LD, AND, OR = F, etc.(function codes: 329 to 334))
Double-precision floating-point math instructions	Double-precision floating-point data comparison (LD, AND, OR = D, etc.(function codes: 335 to 340))
Block programming instructions	BPPS(811), BPRS(812), EXIT(806), EXIT(806) NOT, IF(802), IF(802) NOT, WAIT(805), WAIT(805) NOT, TIMW(813)/TIMWX(816), CNTW(814)/CNTWX(818), TMHW(815)/TMHWX(817), LEND(810), LEND(810) NOT
Text string processing instructions	STRING COMPARISON (LD, AND, OR = \$, etc. (function codes: 670 to 675))

The following ladder programming examples show how the index registers are treated.

Example 1

Ladder Program:

LD P_Off OUT, IR0+

Operation: When the PLC memory address 0.13 is stored in IR0.

The input condition is OFF (P_Off is the Always OFF Flag), so the OUT instruction sets 0.13, which is indirectly addressed by IR0, to OFF. The OUT instruction is executed, so IR0 is incremented. As a result, the PLC memory address 0.14, which was incremented by +1 in the IR0, is stored. Therefore, in the following cycle the OUT instruction turns OFF 0.14.

Example 2

Ladder Program:

LD P_Off SET, IR0+

Operation: When the PLC memory address 0.13 is stored in IR0.

The input condition is OFF (P_Off is the Always OFF Flag), so the SET instruction is not executed. Therefore, IR0 is not incremented and the value stored in IR0 remains PLC memory address 0.13.

1-3 Data Formats

The following table shows the data formats that the CJ Series can handle.

Data type		Data format								Decimal	4-digit hexadecimal								
Unsigned		15	14	13	12	11	10	9	. 8	7	6	5	4	3	2	1	0	&0 to	#0000 to
binary																		&65535	#FFFF
	Binary →	2 15	2 1 4	2 13	2 1 2	211	2 10	2 ⁹	28	27	26	2 5	2 4	2 ³	22	2 1	20		
	Hex →	23	2 ²	2 1	20	2 ³	22	21	20	2 ³	2 ²	2 1	20	2 ³	2 ²	2 1	20		
	Decimal →	32768	16384	8192	4096	2048	1024	512	256	128	64	32	16	8	4	2	1		
Signed		_15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	0 to -32768	Negative:
binary																		0 to +32767	#8000 to
	Binary →	2 ¹⁵	2 ¹⁴	2 ¹³	2 ¹²	2 ¹¹	2 ¹⁰	2 ⁹	2 ⁸	2 ⁷	2 ⁶	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	20		#FFFF
	,	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_		Positive:
	Hex →	2 ³	2 ²	2 ¹	20	2 ³	2 ²	2 ¹	20	2 ³	2 ²	21	2^{0}	2 ³	2 ²	21	20		#0000 to #7FFF
		١١	\																
	Decimal →	-32768	1638	8192	4096	2048	1024	512	256	128	64	32	16	8	4	2	1		
		Sign	\ bit: 0: l	Positiv	e, 1: N	egative	9			•				:					
	The data												e lef	tmos	st bit	as t	he		
	Positive i	numb	ers:	If th	e lef	tmos	st bit	is C)FF,	it inc	licate	es a	non	-neg	ative	e val	ue.		
	For 4-dia	iit hex	ade	cima	al. th	e va	lue v	vill b	e 00	000 t	o 7F	FF ł	nex.						
	Negative 4-digit he as the 2's	num exade	bers cima	: If tl al, th	he le ie va	ftmo	st b	it is 000	ON, to Fl	it ind	dicat hex	es a and	neg it wi	II be	exp	ress	ed		
BCD		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	#0 to #9999	#0000 to #9999
(binary coded	Binary →		2 ²	2 ¹	2°	2 ³	2 ²	2 ¹	2°	2 ³	2 ²	2 ¹	2°	2 ³	2 ²	2 ¹	2°		
decimal)	Decimal →		0 to		ر 		0 to				0 to	_			0 to	_			

Data type	Data format	Decimal	4-digit hexadecimal
Single precision floating point decimal	Sign of mantissa Binary Mantissa Mantissa		
	Value = (-1) ^{Sign} Sign (bit 31) Mantissa The 23 bits from bit 00 to bit 22 contain the mantissa, i.e., the portion below the decimal point in 1.□□□□, in binary. Exponent The 8 bits from bit 23 to bit 30 contain the exponent. The exponent is expressed in binary as 127 plus n in 2 ⁿ .		
	This format conforms to IEEE754 standards for single-precision floating-point data and is used only with instructions that convert or calculate floating-point data. It can be used to set or monitor from the I/O memory Edit and Monitor Screen on the CX-Programmer. As such, users do not need to know this format although they do need to know that the formatting takes up two words.		
Double precision floating point deci- mal	Sign of Exponent Mantissa Binary		
	Value = (-1) ^{Sign} × 1.[Mantissa] × 2 ^{Exponent} Sign (bit 63) 1: negative or 0: positive Mantissa The 52 bits from bit 00 to bit 51 contain the mantissa, i.e., the portion below the decimal point in 1.□□□□, in binary.		
	Exponent The 11 bits from bit 52 to bit 62 contain the exponent The exponent is expressed in binary as 1023 plus n in 2 ⁿ . This format conforms to IEEE754 standards for double-precision floating-point data and is used only with instructions that convert or calculate floating-point data. It can be used to set or monitor from the I/O memory Edit and Monitor Screen on the CX-Programmer. As such, users do not need to know this for- mat although they do need to know that the formatting takes up four words.		

Note 1. Complements

Generally the complement of base x refers to a number produced when all digits of a given number are subtracted from x-1 and then 1 is added to the rightmost digit.

(Example: The ten's complement of 7556 is 9999-7556+1=2444.) A complement is used to express a subtraction and other functions as an addition.

Example: With 8954 - 7556 = 1398, 8954 + (the ten's complement of 7556) = 8954 + 2444 = 11398. If we ignore the leftmost bit, we get a subtraction result of 1398.

2. Two's Complements

A two's complement is a base-two complement. Here, we subtract all digits from 1 (2 - 1 = 1) and add one.

Example: The two's complement of binary number 1101 is 1111 (F Hex) - 1101 (D Hex) + 1 (1 Hex) = 0011 (3 Hex). The following shows this value expressed in 4-digit hexadecimal.

The two's complement b Hex of a Hex is FFFF Hex – a Hex + 0001 Hex = b Hex. To determine the two's complement b Hex of "a Hex," use b Hex = 10000 Hex - a Hex.

Example: to determine the two's complement of 3039 Hex, use 10000 Hex - 3039 Hex = CFC7 Hex.

Similarly use a Hex = 10000 Hex - b Hex to determine the value a Hex from the two's complement b Hex.

Example: To determine the real value from the two's complement CFC7 Hex use 10000 Hex – CFC7 Hex = 3039 Hex.

The CS/CJ Series has two instructions: NEG(160)(2'S COMPLEMENT) and NEGL(161) (DOUBLE 2'S COMPLEMENT) that can be used to determine the two's complement from the true number or to determine the true number from the two's complement.

Values Represented in 1-word Data

Value		Binary representation	1	BCD representation	
(Decimal)	Decimal rep	resentations	Hexadecimal	(decimal)	
	Unsigned	Signed	representation		
1	&1	+1	#0001	#0001	
2	&2	+2	#0002	#0002	
3	&3	+3	#0003	#0003	
4	&4	+4	#0004	#0004	
5	&5	+5	#0005	#0005	
6	&6	+6	#0006	#0006	
7	&7	+7	#0007	#0007	
8	&8	+8	#0008	#0008	
9	&9	+9	#0009	#0009	
10	&10	+10	#000A	#0010	
11	&11	+11	#000B	#0011	
12	&12	+12	#000C	#0012	
13	&13	+13	#000D	#0013	
14	&14	+14	#000E	#0014	
15	&15	+15	#000F	#0015	
16	&16	+16	#0010	#0016	
:	:	:	:	:	
9999	&9999	+9999	#270F	#9999	
10000	&10000	+10000	#2710	Not applicable	
:	:	:	:		
32767	&32767	+32767	#7FFF		
32768	&32768	Not applicable.	#8000		
:	:		:		
65535	&65535	<u>-</u>	#FFFF		
–1	Not applicable.	-1	#FFFF	Not applicable	
:		:	:		
-32768		-32768	#8000		
-32769		Not applicable.	Not applicable.		

1. Basic Understanding of Instructions

SECTION 2 Summary of Instructions

This section provides a summary of instructions used with NSJ/CS/CJ-series PLCs.

2-1	Instruct	ion Set and CPU Unit Support for Individual Instructions	24
2-2	Instruct	ion Functions	33
	2-2-1	Sequence Input Instructions	33
	2-2-2	Sequence Output Instructions	35
	2-2-3	Sequence Control Instructions	38
	2-2-4	Timer and Counter Instructions	42
	2-2-5	Comparison Instructions	47
	2-2-6	Data Movement Instructions	51
	2-2-7	Data Shift Instructions	54
	2-2-8	Increment/Decrement Instructions	58
	2-2-9	Symbol Math Instructions	59
	2-2-10	Conversion Instructions	64
	2-2-11	Logic Instructions	72
	2-2-12	Special Math Instructions	74
	2-2-13	Floating-point Math Instructions	75
	2-2-14	Double-precision Floating-point Instructions	80
	2-2-15	Table Data Processing Instructions	84
	2-2-17	Data Control Instructions	91
	2-2-18	Subroutine Instructions.	95
	2-2-19	Interrupt Control Instructions	96
	2-2-20	High-speed Counter and Pulse Output Instructions (CJ2M-CPU@@ and CJ1M-CPU21/22/23 Only)	98
	2-2-21	Step Instructions	100
	2-2-22	Basic I/O Unit Instructions	100
	2-2-23	Serial Communications Instructions	104
	2-2-24	Network Instructions	106
	2-2-25	File Memory Instructions	109
	2-2-26	Display Instructions	111
	2-2-27	Clock Instructions.	111
	2-2-28	Debugging Instructions.	112
	2-2-29	Failure Diagnosis Instructions	113
	2-2-30	Other Instructions	114
	2-2-31	Block Programming Instructions	115
	2-2-32	Text String Processing Instructions	121
	2-2-33	Task Control Instructions	124
	2-2-34	Model Conversion Instructions (CPU Unit Ver. 3.0 or Later and CJ2 CPU Units Only)	125
	2-2-35	Special Function Block Instructions.	126
	2-2-36	SFC Instructions	127

2-1 Instruction Set and CPU Unit Support for Individual Instructions

The following table lists the CS/CJ-series instructions by function. The instructions also appear by order of their function in SECTION 3 Instructions.

Asterisks and numbers are used in the table to indicate which CPU Unit models and unit versions support each instruction as listed below. If no asterisk and number appears, all models and all unit versions of the CS/CJ-series CPU Units support the instruction.

- *1 CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units only.
- *2 CJ2 and CJ1-H-R CPU Units only.
- *3 CJ2M and CJ1M CPU Units only.
- *4 CJ2 CPU Units only.
- *5 CS/CJ-series CPU Units with CPU Units 2.0 or later and CJ2 CPU Units only.
- *6 CS/CJ-series CPU Units with unit version 2.0 or later, CJ2 CPU Units, and CJ1M CPU Units only.
- *7 CS/CJ-series CPU Units with unit version 3.0 or later and CJ2 CPU Units only.
- *8 CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only.
- *9 CJ1M CPU Units with unit version 2.0 or later and CJ2M CPU Units only.
- *10 Serial Communications Unit with unit version 1.2 or later.
- *11 All CPU Units except for CS1D CPU Units for Duplex-CPU Systems.
- *12 CJ1W-SCU22/SCU32/SCU42 with CJ2H CPU Unit with unit version 1.1 or later only.
- *13 CJ2M CPU Units only.
- *14 CJ2H CPU Units with unit version 1.3 or later and CJ2M CPU Units only.

Classifica- tion	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Basic	Input	LD	LOAD	LD NOT	LOAD NOT	AND	AND
instructions		AND NOT	AND NOT	OR	OR	OR NOT	OR NOT
		AND LD	AND LOAD	OR LD	OR LOAD		
	Output	OUT	OUTPUT	OUT NOT	OUTPUT NOT		
Sequence input		NOT	NOT	UP	CONDITION ON	DOWN	CONDITION OFF
instructions	Bit test	LD TST	LD BIT TEST	LD TSTN	LD BIT TEST NOT	AND TST	AND BIT TEST NOT
		AND TSTN	AND BIT TEST NOT	OR TST	OR BIT TEST	OR TSTN	OR BIT TEST NOT
Sequence output		KEEP	KEEP	DIFU	DIFFERENTI- ATE UP	DIFD	DIFFERENTI- ATE DOWN
instructions		OUTB*1	SINGLE BIT OUTPUT				
	Set/Reset	SET	SET	RSET	RESET	SETA	MULTIPLE BIT SET
		RSTA	MULTIPLE BIT RESET	SETB*1	SINGLE BIT SET	RSTB*1	SINGLE BIT RESET

Classifica- tion	Sub	-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Sequence control			END	END	NOP	NO OPERA- TION		
instructions	Interlock		IL	INTERLOCK	ILC	INTERLOCK CLEAR	MILH*5	MULTI-INTER- LOCK DIF- FERENTIATIO N HOLD
			MILR*5	MULTI-INTER- LOCK DIF- FERENTIATIO N RELEASE	MILC*5	MULTI-INTER- LOCK CLEAR		
	Jump		JMP	JUMP	JME	JUMP END	CJP	CONDI- TIONAL JUMP
			CJPN	CONDI- TIONAL JUMP	JMP0	MULTIPLE JUMP	JME0	MULTIPLE JUMP END
	Repeat		FOR	FOR-NEXT LOOPS	BREAK	BREAK LOOP	NEXT	FOR-NEXT LOOPS
Timer and counter	BCD	Timers with timer	TIM	HUNDRED- MS TIMER	TIMH	TEN-MS TIMER	ТМНН	ONE-MS TIMER
instructions		numbers	TIMU*2	TENTH-MS TIMER	TMUH ^{*2}	HUN- DREDTH-MS TIMER	TTIM	ACCUMULA- TIVE TIMER
		Timers without timer numbers	TIML	LONG TIMER	MTIM	MULTI-OUT- PUT TIMER		
		Counters with counter numbers	CNT	COUNTER	CNTR	REVERSIBLE TIMER	CNR	RESET TIMER/ COUNTER
	Binary	Timers with timer	TIMX	HUNDRED- MS TIMER	TIMHX	TEN-MS TIMER	TMHHX	ONE-MS TIMER
		numbers	TIMUX*2	TENTH-MS TIMER	TMUHX*2	HUN- DREDTH-MS TIMER	TTIMX	ACCUMULA- TIVE TIMER
		Timers without timer numbers	TIMLX*1	LONG TIMER	MTIMX*1	MULTI-OUT- PUT TIMER		
		Counters with counter numbers	CNTX*1	COUNTER	CNTRX	REVERSIBLE TIMER	CNRX*1	RESET TIMER/ COUNTER
		Timer reset*4	TRSET	TIMER RESET				
Comparison instructions	Symbol comparis	son	LD, AND, OR + =, <>, <, <=, >, >=*5	Symbol com- parison (unsigned)	LD, AND, OR + =, <>, <, <=, >, >= + L*5	Symbol com- parison (dou- ble-word, unsigned)	LD, AND, OR + =, <>, <, <=, >, >= +S*5	Symbol comparison (signed)
			LD, AND, OR + =, <>, <, <=, >, >= + SL*5	Symbol com- parison (dou- ble-word, signed)	LD, AND, OR + = DT, <> DT, < DT, <= DT, > DT, >= DT*5	Time comparison		
	Data comparis (Condition		CMP	UNSIGNED COMPARE	CMPL	DOUBLE UNSIGNED COMPARE	CPS	SIGNED BINARY COMPARE
	(CPSL	DOUBLE SIGNED BINARY COMPARE	ZCP*1	AREA RANGE COMPARE	ZCPL*1	DOUBLE AREARANGE COMPARE
			ZCPS*14	SIGNED AREA RANGE COMPARE	ZCPSL*14	DOUBLE SIGNED AREA RANGE COMPARE		
	Table compare		MCMP	MULTIPLE COMPARE	TCMP	TABLE COM- PARE	BCMP	UNSIGNED BLOCK COM- PARE
			BCMP2 ^{*6}	EXPANDED BLOCK COM- PARE				

Classifica-	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Data movement	Single/ double-word	MOV	MOVE	MOVL	DOUBLE MOVE	MVN	MOVE NOT
instructions		MVNL	DOUBLE MOVE NOT				
	Bit/digit	MOVB	MOVE BIT	MOVD	MOVE DIGIT		
	Exchange	XCHG	DATA EXCHANGE	XCGL	DOUBLE DATA EXCHANGE		
	Block/bit transfer	XFRB	MULTIPLE BIT TRANS- FER	XFER	BLOCK TRANSFER	BSET	BLOCK SET
	Distribute/ collect	DIST	SINGLE WORD DIS- TRIBUTE	COLL	DATA COL- LECT		
	Index register	MOVR	MOVE TO REGISTER	MOVRW	MOVE TIMER/ COUNTER PV TO REGIS- TER		
Data shift instructions	1-bit shift	SFT	SHIFT REG- ISTER	SFTR	REVERSIBLE SHIFT REG- ISTER	ASLL	DOUBLE SHIFT LEFT
		ASL	ARITHMETIC SHIFT LEFT	ASR	ARITHMETIC SHIFT RIGHT	ASRL	DOUBLE SHIFT RIGHT
	0000 hex asynchronous	ASFT	ASYNCHRO- NOUS SHIFT REGISTER				
	Word shift	WSFT	WORD SHIFT				
	1-bit rotate	ROL	ROTATE LEFT	ROLL	DOUBLE ROTATE LEFT	RLNC	ROTATE LEFT WITHOUT CARRY
		RLNL	DOUBLE ROTATE LEFT WITHOUT CARRY	ROR	ROTATE RIGHT	RORL	DOUBLE ROTATE RIGHT
		RRNC	ROTATE RIGHT WITH- OUT CARRY	RRNL	DOUBLE ROTATE RIGHT WITH- OUT CARRY		
	1 digit shift	SLD	ONE DIGIT SHIFT LEFT	SRD	ONE DIGIT SHIFT RIGHT		
	Shift n-bit data	NSFL	SHIFT N-BIT DATA LEFT	NSFR	SHIFT N-BIT DATA RIGHT		
	Shift n-bit	NASL	SHIFT N-BITS LEFT	NSLL	DOUBLE SHIFT N-BITS LEFT	NASR	SHIFT N-BITS RIGHT
		NSRL	DOUBLE SHIFT N-BITS RIGHT				
Increment/ decrement instructions	BCD	++B	INCREMENT BCD	++BL	DOUBLE INCREMENT BCD	B	DECRE- MENT BCD
		BL	DOUBLE DECRE- MENT BCD				
	Binary	++	INCREMENT BINARY	++L	DOUBLE INCREMENT BINARY		DECRE- MENT BINARY
		L	DOUBLE DECRE- MENT BINARY				

Classifica-	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Symbol math instructions	Binary add	+	SIGNED BINARY ADD WITHOUT CARRY	+L	DOUBLE SIGNED BINARY ADD WITHOUT CARRY	+C	SIGNED BINARY ADD WITH CARRY
		+CL	DOUBLE SIGNED BINARY ADD WITH CARRY				
	BCD add	+B	BCD ADD WITHOUT CARRY	+BL	DOUBLE BCD ADD WITHOUT CARRY	+BC	BCD ADD WITH CARRY
		+BCL	DOUBLE BCD ADD WITH CARRY				
	Binary subtract	-	SIGNED BINARY SUB- TRACT WITHOUT CARRY	-L	DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-C	SIGNED BINARY SUBTRACT WITH CARRY
		-CL	DOUBLE SIGNED BINARY WITH CARRY				
	BCD subtract	-В	BCD SUBTRACT WITHOUT CARRY	-BL	DOUBLE BCD SUBTRACT WITHOUT CARRY	-BC	BCD SUBTRACT WITH CARRY
		-BCL	DOUBLE BCD SUBTRACT WITH CARRY				
	Binary multiply	*	SIGNED BINARY MULTIPLY	*L	DOUBLE SIGNED BINARY MULTIPLY	*U	UNSIGNED BINARY MULTIPLY
		*UL	DOUBLE UNSIGNED BINARY MULTIPLY				
	BCD multiply	*B	BCD MULTIPLY	*BL	DOUBLE BCD MULTIPLY		
	Binary divide	/	SIGNED BINARY DIVIDE	/L	DOUBLE SIGNED BINARY DIVIDE	/U	UNSIGNED BINARY DIVIDE
		/UL	DOUBLE UNSIGNED BINARY DIVIDE				
	BCD divide	/B	BCD DIVIDE	/BL	DOUBLE BCD DIVIDE		

Classifica- tion	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Conversion instructions	BCD-binary conversions	BIN	BCD TO BINARY	BINL	DOUBLE BCD TO DOUBLE BINARY	BCD	BINARY TO BCD
		BCDL	DOUBLE BINARY TO DOUBLE BCD	NEG	2'S COMPLE- MENT	NEGL	DOUBLE 2'S COMPLE- MENT
		SIGN	16-BIT TO 32-BIT SIGNED BINARY				
	Decoder/encoder	MLPX	DATA DECODER	DMPX	DATA ENCODER		
	ASCII-hexadecimal conversions	ASC	ASCII CON- VERT	HEX	ASCII TO HEX	-1	
	Line-column con- versions	LINE	COLUMN TO LINE	COLM	LINE TO COLUMN		
	Signed binary-BCD conversions	BINS	SIGNED BCD TO BINARY	BISL	DOUBLE SIGNED BCD TO BINARY	BCDS	SIGNED BINARY TO BCD
		BDSL	DOUBLE SIGNED BINARY TO BCD				
	Gray code conversions	GRY ^{*5}	GRAY CODE CONVER- SION	GRAY_BIN*4	GRAY CODE TO BINARY CONVERT	GRAY_BINL*4	DOUBLE GRAY CODE TO BINARY CONVERT
		BIN_GRAY*4	BINARY TO GRAY CODE CONVERT	BIN_GRAYL*4	DOUBLE BINARY TO GRAY CODE CONVERT		
	Number-ASCII conversions*8	STR4	FOUR-DIGIT NUMBER TO ASCII	STR8	EIGHT-DIGIT NUMBER TO ASCII	STR16	SIXTEEN- DIGIT NUM- BER TO ASCII
		NUM4	ASCII TO FOUR-DIGIT NUMBER	NUM8	ASCII TO EIGHT-DIGIT NUMBER	NUM16	ASCII TO SIX- TEEN-DIGIT NUMBER
Logic instructions	Logical AND/OR	ANDW	LOGICAL AND	ANDL	DOUBLE LOGICAL AND	ORW	LOGICAL OR
		ORWL	DOUBLE LOGICAL OR	XORW	EXCLUSIVE OR	XORL	DOUBLE EXCLUSIVE OR
		XNRW	EXCLUSIVE NOR	XNRL	DOUBLE EXCLUSIVE NOR		
	Complement	СОМ	COMPLE- MENT	COML	DOUBLE COMPLE- MENT		
Special math		ROTB	BINARY ROOT	ROOT	BCD SQUARE ROOT	APR	ARITHMETIC PROCESS
instructions		FDIV	FLOATING POINT DIVIDE	BCNT	BIT COUNTER		

Classifica- tion	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Floating- point math	Floating point/ binary convert	FIX	FLOATING TO 16-BIT	FIXL	FLOATING TO 32-BIT	FLT	16-BIT TO FLOATING
instructions		FLTL	32-BIT TO FLOATING				
	Floating- point basic math	+F	FLOATING- POINT ADD	-F	FLOATING- POINT SUBTRACT	/F	FLOATING- POINT DIVIDE
		*F	FLOATING- POINT MULTIPLY				
	High-speed trigono- metric functions*2	SINQ	HIGH-SPEED SINE	CONQ	HIGH-SPEED COSINE	TANQ	HIGH-SPEED TANGENT
	Floating- point trigonometric func-	RAD	DEGREES TO RADIANS	DEG	RADIANS TO DEGREES	SIN	SINE
	tions	cos	COSINE	TAN	TANGENT	ASIN	ARC SINE
		ACOS	ARC COSINE	ATAN	ARC TAN- GENT		
	Floating- point math	SQRT	SQUARE ROOT	EXP	EXPONENT	LOG	LOGARITHM
		PWR	EXPONEN- TIAL POWER				
	Symbol comparison and conversion*1	LD, AND, OR + =, <>, <, <=, >, >= + F	Symbol com- parison (sin- gle-precision floating point)	FSTR	FLOATING- POINT TO ASCII	FVAL	ASCII TO FLOATING- POINT
	Single-precision floating point move*2	MOVF	MOVE FLOAT- ING-POINT (SINGLE)				
Double-pre- cision float- ing- point	Floating point/ binary convert	FIXD	DOUBLE FLOATING TO 16-BIT	FIXLD	DOUBLE FLOATING TO 32-BIT	DBL	16-BIT TO DOUBLE FLOATING
instruc- tions ^{*1}		DBLL	32-BIT TO DOUBLE FLOATING				
	Floating- point basic math	+D	DOUBLE FLOATING- POINT ADD	-D	DOUBLE FLOATING- POINT SUBTRACT	/D	DOUBLE FLOATING- POINT DIVIDE
		*D	DOUBLE FLOATING- POINT MULTIPLY				
	Floating- point trigonometric functions	RADD	DOUBLE DEGREES TO RADIANS	DEGD	DOUBLE RADIANS TO DEGREES	SIND	DOUBLE SINE
		COSD	DOUBLE COSINE	TAND	DOUBLE TANGENT	ASIND	DOUBLE ARC SINE
		ACOSD	DOUBLE ARC COSINE	ATAND	DOUBLE ARC TANGENT		
	Floating- point math	SQRTD	DOUBLE SQUARE ROOT	EXPD	DOUBLE EXPONENT	LOGD	DOUBLE LOGARITHM
		PWRD	DOUBLE EXPONEN- TIAL POWER				
	Symbol comparison	LD, AND, OR + =, <>, <, <=, >, >= + D	Symbol comparison (double-precision floating point)				

Classifica- tion	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Table data processing	Stack processing	SSET	SET STACK	PUSH	PUSH ONTO STACK	LIFO	LAST IN FIRST OUT
instructions		FIFO	FIRST IN FIRST OUT	SNUM ^{*1}	STACK SIZE READ	SREAD*1	STACK DATA READ
		SWRIT*1	STACK DATA OVERWRITE	SINS*1	STACK DATA INSERT	SDEL*1	STACK DATA DELETE
	1-record/ multiple-word pro- cessing	DIM	DIMENSION RECORD TABLE	SETR	SET RECORD LOCATION	GETR	GET RECORD NUMBER
	Record-to- word processing	SRCH	DATA SEARCH	MAX	FIND MAXIMUM	MIN	FIND MINIMUM
		SUM	SUM	FCS	FRAME CHECKSUM		
	Byte processing	SWAP	SWAP BYTES				
	Multiple-record/ multiple-word pro- cessing	MAXL*4	DOUBLE FIND MAXI- MUM	MINL*4	DOUBLE FIND MINI- MUM	MAXD*4	FIND DOU- BLE MAXI- MUM FLOATING
		MIND*4	FIND DOU- BLE MINI- MUM FLOATING	MAXF*4	FIND MAXI- MUM FLOAT- ING	MINF*4	FIND MINI- MUM FLOAT- ING
Tracking instructions*2		RSRCH<, RSRCH<=, RSRCH=, RSRCH>, RSRCH>=	Unsigned One-word Record Search Instructions	RSRCH2<, RSRCH2<=, RSRCH2=, RSRCH2>, RSRCH2>=	Unsigned Two-word Record Search Instructions	RSRCH4<, RSRCH4<=, RSRCH4=, RSRCH4>, RSRCH4>=	Unsigned Four-word Record Search Instructions
Data control instructions		PID	PID CON- TROL	PIDAT*1	PID CON- TROL WITH AUTOTUNING	LMT	LIMIT CONTROL
		BAND	DEAD BAND CONTROL	ZONE	DEAD ZONE CONTROL	TPO*5	TIME-PRO- PORTIONAL OUTPUT
		SCL	SCALING	SCL2	SCALING 2	SCL3	SCALING 3
		AVG	AVERAGE				
Subrou- tines instructions		SBS	SUBROU- TINE CALL	MCRO	MACRO	SBN	SUBROU- TINE ENTRY
ilistructions		RET	SUBROU- TINE RETURN	GSBS*1	GLOBAL SUBROU- TINE CALL	GSBN*1	GLOBAL SUBROU- TINE ENTRY
		GRET*1	GLOBAL SUBROU- TINE RETURN				
Interrupt control instructions		MSKS*11	SET INTERRUPT MASK	MSKR*11	READ INTER- RUPT MASK	CLI*11	CLEAR INTERRUPT
		DI	DISABLE INTERRUPTS	EI	ENABLE INTERRUPTS	1	
High-speed counter/ pulse out-		INI ^{*3}	MODE CON- TROL	PRV ^{*3}	HIGH-SPEED COUNTER PV READ	PRV2 ^{*9}	COUNTER FREQUENCY CONVERT
put instruc- tions		CTBL*3	COMPARI- SON TABLE LOAD	SPED*3	SPEED OUT- PUT	PULS*3	SET PULSES
		PLS2*3	PULSE OUT- PUT	ACC*3	ACCELERA- TION CON- TROL	ORG*3	ORIGIN SEARCH
		PWM*3	PULSE WITH VARIABLE DUTY FAC- TOR	IFEED*13	INTERRUPT FEEDING		
Step instructions		STEP	STEP DEFINE	SNXT	STEP START		

Classifica- tion	Sub-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Basic I/O Unit instructions		IORF	I/O REFRESH	FIORF *2	SPECIAL I/O UNIT I/O REFRESH	DLNK*1	CPU BUS UNIT I/O REFRESH
		SDEC	7-SEGMENT DECODER	DSW*5	DIGITAL SWITCH INPUT	TKY*5	TEN KEY INPUT
		HKY*5	HEXADECI- MAL KEY INPUT	MTR*5	MATRIX INPUT	7SEG ^{*5}	7-SEGMENT DISPLAY OUTPUT
		IORD	INTELLI- GENT I/O READ	IOWR	INTELLI- GENT I/O WRITE	DLNK*	CPU BUS UNIT I/O REFRESH
		AIDC	ANALOG INPUT DIRECT CON- VERSION	AODC	ANALOG OUTPUT DIRECT CON- VERSION	NCDMV*14	PCU HIGH- SPEED POSI- TIONING
		NCDTR*14	PCU POSI- TIONING TRIGGER				
Serial com- munica-		PMCR2*4	PROTOCOL MACRO 2	PMCR	PROTOCOL MACRO	TXD	TRANSMIT
tions instructions		TXDU*7	TRANSMIT VIA SERIAL COMMUNI- CATIONS UNIT	DTXDU*12	DIRECT TRANSMIT VIA SERIAL COMMUNI- CATIONS UNIT	RXD	RECEIVE
		RXDU*7	RECEIVE VIA SERIAL COM- MUNICA- TIONS UNIT	DRXDU*12	DIRECT RECEIVE VIA SERIAL COM- MUNICA- TIONS UNIT	STUP	CHANGE SERIAL PORT SETUP
Network instructions		SEND2*4	NETWORK SEND 2	SEND	NETWORK SEND	RECV2*4	NETWORK RECEIVE 2
		RECV	NETWORK RECEIVE	CMND2*4	DELIVER COMMAND 2	CMND	DELIVER COMMAND
		EXPLT*5	SEND GEN- ERAL EXPICIT	EGATR*5	EXPLICIT GET ATTRIBUTE	ESATR*5	EXPLICIT SET ATTRIBUTE
		ECHRD*5	EXPLICIT WORD READ	ECHWR*5	EXPLICIT WORD WRITE		
Display instructions		MSG	DISPLAY MESSAGE				
File mem- ory instruc- tions		FREAD	READ DATA FILE	FWRIT	WRITE DATA FILE	TWRIT*8	WRITE TEXT FILE
Clock instructions		CADD	CALENDAR ADD	CSUB	CALENDAR SUBTRACT	SEC	HOURS TO SECONDS
		HMS	SECONDS TO HOURS	DATE	CLOCK ADJUST- MENT		
Debugging instructions		TRSM	TRACE MEMORY SAMPLING				
Failure diagnosis instructions		FAL*1	FAILURE ALARM	FALS ^{*1}	SEVERE FAILURE ALARM	FPD	FAILURE POINT DETECTION
Other instructions		STC	SET CARRY	CLC	CLEAR CARRY	EMBC	SELECT EM BANK
		WDT	EXTEND MAXIMUM CYCLE TIME	CCS*1	SAVE CONDI- TION FLAGS	CCL*1	LOAD CONDITION FLAGS
		FRMCV*1	CONVERT ADDRESS FROM CV	TOCV*1	CONVERT ADDRESS TO CV	IOSP*11	DISABLE PERIPH- ERAL SER- VICING
		IORS*11	ENABLE PERIPH- ERAL SER- VICING				

Classifica- tion	Sub	-class	Mnemonic	Instruction	Mnemonic	Instruction	Mnemonic	Instruction
Block program-	Define block pro- gram area		BPRG	BLOCK PRO- GRAM BEGIN	BEND	BLOCK PRO- GRAM END		
ming instructions	Block program start/stop		BPPS	BLOCK PROGRAM PAUSE	BPRS	BLOCK PROGRAM RESTART		
	EXIT IF branch processing		EXIT bit_address	Conditional END	EXIT NOT bit_address	Conditional END NOT	input_condition EXIT	Conditional END
			IF bit_address	CONDI- TIONAL BLOCK BRANCHING	IF NOT bit_address	CONDI- TIONAL BLOCK BRANCHING (NOT)	ELSE	CONDI- TIONAL BLOCK BRANCHING (ELSE)
			IEND	CONDI- TIONAL BLOCK BRANCHING END				
	WAIT		WAIT bit_address	ONE CYCLE AND WAIT	WAIT NOT bit_address	ONE CYCLE AND WAIT NOT	input_condition WAIT	ONE CYCLE AND WAIT
	Timer/ counter	BCD	TIMW	HUNDRED- MS TIMER WAIT	CNTW	COUNTER WAIT	TMHW	TEN-MS TIMER WAIT
		Binary*1	TIMWX	HUNDRED- MS TIMER WAIT	CNTWX	COUNTER WAIT	TMHWX	TEN-MS TIMER WAIT
	Repeat		LOOP	LOOP BLOCK	LEND bit_address	LOOP BLOCK END	LEND NOT bit_address	LOOP BLOCK END NOT
			input_ condition LEND	LOOP BLOCK END				
Text string processing instructions			MOV\$	MOV STRING	+\$	CONCATE- NATE STRING	LEFT\$	GET STRING LEFT
			RIGHT\$	GET STRING RIGHT	MID\$	GET STRING MIDDLE	FIND\$	FIND IN STRING
			LEN\$	STRING LENGTH	RPLC\$	REPLACE IN STRING	DEL\$	DELETE STRING
			XCHG\$	EXCHANGE STRING	CLR\$	CLEAR STRING	INS\$	INSERT INTO STRING
			LD, AND, OR + =\$, <>\$, <\$, <=\$, >\$, >=\$	STRING COMPARI- SON				
Task control instructions			TKON	TASK ON	TKOF	TASK OFF		
Model conversion			XFERC	BLOCK TRANSFER	DISTC	SINGLE WORD DIS- TRIBUTE	COLLC	DATA COL- LECT
tions ^{*7}			MOVBC	MOVE BIT	BCNTC	BIT COUNTER		
Function block instruc- tions* ⁷			GETID	GET VARI- ABLE ID				
SFC pro- gram			SFCON	SFC ON	SFCOFF	SFC OFF	SFCPR	SFC PAUSE WITH RESET
instruc- tions ^{*8}			SFCPRN	SFC PAUSE WITH NO RESET	SA	STEP ACTI- VATION	SE	STEP DEAC- TIVATION
			TSR	READ SET TIMER	TSW	SET STEP TIMER		

2-2 Instruction Functions

2-2-1 Sequence Input Instructions

- *1: Not supported by CS1D CPU Units for Duplex-CPU Systems.
- *2: Supported by CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units only.
- *3: Supported by CJ2, CS1-H, CJ1-H, and CJ1M CPU Units only.

Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code			condition	
LOAD LD @LD %LD %LD !LD*1 !@LD*1 !%LD*1	Starting point of block	Indicates a logical start and creates an ON/OFF execution condition based on the ON/OFF status of the specified operand bit.	Start of logic Not required	140
LOAD NOT LD NOT @LD NOT*2 %LD NOT*1 !LD NOT*1 !@LD NOT*3 !%LD NOT*3	Starting point of block	Indicates a logical start and creates an ON/OFF execution condition based on the reverse of the ON/OFF status of the specified operand bit.	Start of logic Not required	140
AND AND @AND %AND !AND ^{*1} !@AND ^{*1} !%AND ^{*1}	⊣⊢	Takes a logical AND of the status of the specified operand bit and the current execution condition.	Continues on rung Required	142
AND NOT AND NOT @AND NOT*2 %AND NOT*1 !AND NOT*3 !%AND NOT*3	#	Reverses the status of the specified operand bit and takes a logical AND with the current execution condition.	Continues on rung Required	142
OR OR @OR %OR !OR*1 !@OR*1 !%OR*1	Bus bar	Takes a logical OR of the ON/OFF status of the specified operand bit and the current execution condition.	Continues on rung Required	144
OR NOT OR NOT @OR NOT*2 %OR NOT*2 !OR NOT*1 !@OR NOT*3 !%OR NOT*3	Bus bar	Reverses the status of the specified bit and takes a logical OR with the current execution condition	Continues on rung Required	144

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
AND LOAD AND LD	Logic block Logic block	Takes a logical AND between logic blocks. LD to Logic block A LD Logic block B to AND LD Serial connection between logic block A and logic block B.	Continues on rung Required	146
OR LOAD OR LD	Logic block Logic block	Takes a logical OR between logic blocks. LD to Logic block A LD to OR LD Parallel connection between logic block A and logic block B.	Continues on rung Required	146
NOT NOT 520		Reverses the execution condition.	Continues on rung Required	149
CONDITION ON UP 521	UP(521)	UP(521) turns ON the execution condition for one cycle when the execution condition goes from OFF to ON.	Continues on rung Required	150
CONDITION OFF DOWN 522	DOWN(522)	DOWN(522) turns ON the execution condition for one cycle when the execution condition goes from ON to OFF.	Continues on rung Required	150
BIT TEST LD TST 350	TST(350) S N S: Source word N: Bit number	LD TST(350), AND TST(350), and OR TST(350) are used in the program like LD, AND, and OR; the execution condition is ON when the specified bit in the specified word is ON and OFF when the bit is OFF.	Continues on rung Not required	152
BIT TEST LD TSTN 351	TSTN(351) S N S: Source word N: Bit number	LD TSTN(351), AND TSTN(351), and OR TSTN(351) are used in the program like LD NOT, AND NOT, and OR NOT; the execution condition is OFF when the specified bit in the specified word is ON and ON when the bit is OFF.	Continues on rung Not required	152
BIT TEST AND TST 350	S: Source word N: Bit number	LD TST(350), AND TST(350), and OR TST(350) are used in the program like LD, AND, and OR; the execution condition is ON when the specified bit in the specified word is ON and OFF when the bit is OFF.	Continues on rung Required	154
BIT TEST AND TSTN 351	S: Source word N: Bit number	LD TSTN(351), AND TSTN(351), and OR TSTN(351) are used in the program like LD NOT, AND NOT, and OR NOT; the execution condition is OFF when the specified bit in the specified word is ON and ON when the bit is OFF.	Continues on rung Required	154

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
OR TST 350	TST(350) S N S: Source word N: Bit number	LD TST(350), AND TST(350), and OR TST(350) are used in the program like LD, AND, and OR; the execution condition is ON when the specified bit in the specified word is ON and OFF when the bit is OFF.	Continues on rung Required	156
BIT TEST OR TSTN 351	TSTN(351) S N S: Source word N: Bit number	LD TSTN(351), AND TSTN(351), and OR TSTN(351) are used in the program like LD NOT, AND NOT, and OR NOT; the execution condition is OFF when the specified bit in the specified word is ON and ON when the bit is OFF.	Continues on rung Required	156

2-2-2 Sequence Output Instructions

 $^{\star 1}$: Not supported by CS1D CPU Units for Duplex-CPU Systems.

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
OUTPUT OUT !OUT*1	-	Outputs the result (execution condition) of the logical processing to the specified bit.	Output Required	158
OUTPUT NOT OUT NOT !OUT NOT*1	-Ø+	Reverses the result (execution condition) of the logical processing, and outputs it to the specified bit.	Output Required	158
KEEP KEEP*1 011	S (Set) KEEP(011) B R (Reset) B: Bit	Operates as a latching relay. Set KEEP A C Sexecution condition R execution condition Status of B	Output Required	162
DIFFERENTIATE UP DIFU !DIFU*1 013	DIFU(013) B: Bit	DIFU(013) turns the designated bit ON for one cycle when the execution condition goes from OFF to ON (rising edge). Execution condition Status of B One cycle	Output Required	166


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DIFFERENTIATE DOWN DIFD !DIFD*1	DIFD(014) B: Bit	DIFD(014) turns the designated bit ON for one cycle when the execution condition goes from ON to OFF (falling edge). Execution condition Status of B One cycle	Output Required	168
SET SET @ SET % SET %SET !SET*1 !@ SET*1 !% SET*1	SET B	SET turns the operand bit ON when the execution condition is ON. Execution condition of SET ON ON OFF ON OFF	Output Required	170
RESET RSET @RSET %RSET %RSET !RSET*1 !@RSET*1 !%RSET*1	RSET B B: Bit	RSET turns the operand bit OFF when the execution condition is ON. Execution condition of RSET ON OFF Status of B ON OFF	Output Required	170
MULTIPLE BIT SET SETA @SETA 530	SETA(530) D N1 N2 D: Beginning word N1: Beginning bit N2: Number of bits	SETA(530) turns ON the specified number of consecutive bits. N1 N2 bits are set to 1 ON).	Output Required	172
MULTIPLE BIT RESET RSTA @RSTA 531	RSTA(531) D N1 N2 D: Beginning word N1: Beginning bit N2: Number of bits	RSTA(531) turns OFF the specified number of consecutive bits. 15 D 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Output Required	172
SINGLE BIT SET (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) SETB @ SETB !SETB*1 !@ SETB*1	SETB(532) D N D: Word address N: Bit number	SETB(532) turns ON the specified bit in the specified word when the execution condition is ON. Unlike the SET instruction, SETB(532) can be used to set a bit in a DM or EM word.	Output Required	174

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SINGLE BIT RESET (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) RSTB @RSTB !RSTB*1	RSTB(533) D N D: Word address N: Bit number	RSTB(533) turns OFF the specified bit in the specified word when the execution condition is ON. Unlike the RSET instruction, RSTB(533) can be used to reset a bit in a DM or EM word.	Output Required	174
SINGLE BIT OUTPUT (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) OUTB @OUTB !OUTB*1	OUTB(534) D N D: Word address N: Bit number	OUTB(534) outputs the result (execution condition) of the logical processing to the specified bit. Unlike the OUT instruction, OUTB(534) can be used to control a bit in a DM or EM word.	Output Required	176

2-2-3 Sequence Control Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
END END 001	END(001)	Indicates the end of a program. END(001) completes the execution of a program for that cycle. No instructions written after END(001) will be executed. Execution proceeds to the program with the next task number. When the program being executed has the highest task number in the program, END(001) marks the end of the overall main program.	Output Not required	181
		Task 1 Program A To the next task number		
		Task 2 Program B To the next task number		
		Task n Program Z End of the main program I/O refreshing		
NO OPERATION NOP 000		This instruction has no function. (No processing is performed for NOP(000).)	Output Not required	182
INTERLOCK IL 002	IL(002)	Interlocks all outputs between IL(002) and ILC(003) when the execution condition for IL(002) is OFF. IL(002) and ILC(003) are normally used in pairs. Execution Execution Condition ON Condition OFF Condition IL Interlocked section of the program Normal Outputs execution interlocked.	Output Required	183
INTERLOCK CLEAR ILC 003	ILC(003)	All outputs between IL(002) and ILC(003) are interlocked when the execution condition for IL(002) is OFF. IL(002) and ILC(003) are normally used in pairs.	Output Not required	183


Instruction Mnemonic	Symbol/Operand	Function	Location Execution condition	Page
MULTI-INTER- LOCK DIFFER- ENTIATION HOLD MILH 517 CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only	MILH (517) N D N: Interlock number D: Interlock Status Bit	When the execution condition for MILH(517) is OFF, the outputs for all instructions between that MILH(517) instruction and the next MILC(519) instruction are interlocked. MILH(517) and MILC(519) are used as a pair. MILH(517)/MILC(519) interlocks can be nested (e.g., MILH(517)—MILH(517)—MILC(519)—MILC(519)). If there is a differentiated instruction (DIFU, DIFD, or instruction with a @ or% prefix) between MILH(517) and the corresponding MILC(519), that instruction will be executed after the interlock is cleared if the differentiation condition of the instruction was established while it was interlocked.	Output Required	187
MULTI-INTER- LOCK DIFFER- ENTIATION RELEASE MILR 518 CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only	MILR (518) N D N: Interlock number D: Interlock Status Bit	When the execution condition for MILR(518) is OFF, the outputs for all instructions between that MILR(518) instruction and the next MILC(519) instruction are interlocked. MILR(518) and MILC(519) are used as a pair. MILR(518)/MILC(519) interlocks can be nested (e.g., MILR(518)—MILR(518)—MILC(519)). If there is a differentiated instruction (DIFU, DIFD, or instruction with a @ or % prefix) between MILR(518) and the corresponding MILC(519), that instruction will not be executed after the interlock is cleared even if the differentiation condition of the instruction was established.	Output Required	187
MULTI-INTER- LOCK CLEAR MILC 519 CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only	MILC (519) N N: Interlock number	Clears an interlock started by an MILH(517) or MILR(518) with the same interlock number. All outputs between MILH(517)/MILR(518) and the corresponding MILC(519) with the same interlock number are interlocked when the execution condition for MILH(517)/MILR(518) is OFF.	Output Not required	187
JUMP JMP 004	JMP(004) N N: Jump number	When the execution condition for JMP(004) is OFF, program execution jumps directly to the first JME(005) in the program with the same jump number. JMP(004) and JME(005) are used in pairs. Execution condition ON OFF Instructions jumped Instructions in this section are not executed and output status is maintained. The instruction execution time for these instructions is eliminated.	Output Required	196
CONDITIONAL JUMP CJP 510	CJP(510) N N: Jump number	The operation of CJP(510) is the basically the opposite of JMP(004). When the execution condition for CJP(510) is ON, program execution jumps directly to the first JME(005) in the program with the same jump number. CJP(510) and JME(005) are used in pairs. Execution Execution condition ON Instructions jumped Instructions in this section are not executed and output status is maintained. The instruction execution time for these instructions is eliminated.	Output Required	199
JUMP END JME 005	JME(005) N N: Jump number	Indicates the end of a jump initiated by JMP(004) or CJP(510).	Output Not required	196

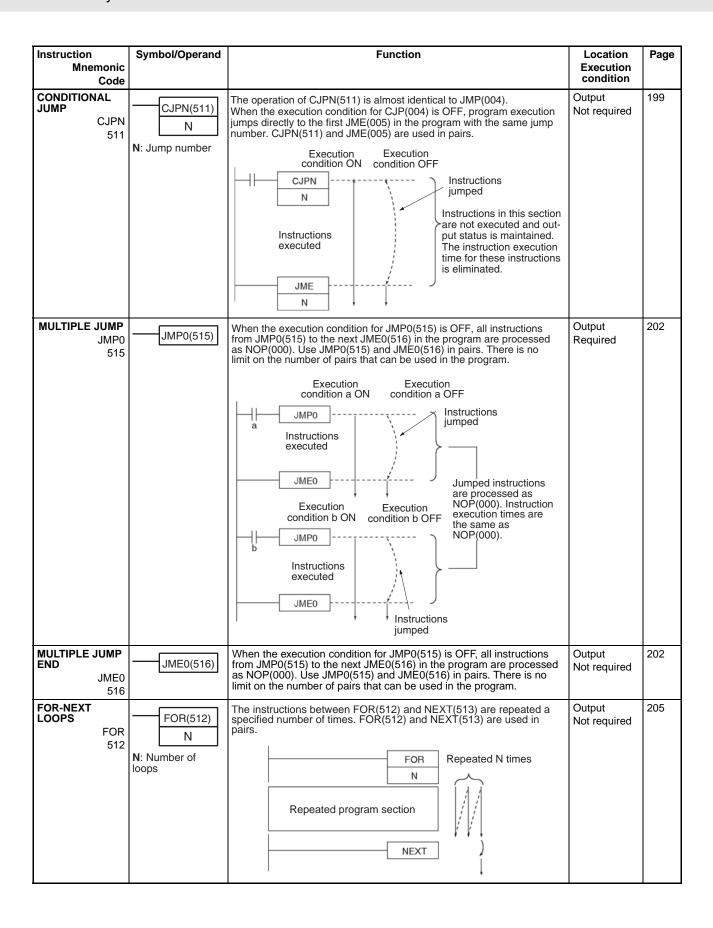



Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
BREAK LOOP BREAK 514	BREAK(514)	Programmed in a FOR-NEXT loop to cancel the execution of the loop for a given execution condition. The remaining instructions in the loop are processed as NOP(000) instructions. Condition a ON Repetitions forced to end. Processed as NOP(000).	Output Required	208
FOR-NEXT LOOPS NEXT 513	NEXT(513)	The instructions between FOR(512) and NEXT(513) are repeated a specified number of times. FOR(512) and NEXT(513) are used in pairs.	Output Not required	205


2-2-4 Timer and Counter Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
TIMER RESET TRSET @TRSET 549 (CJ2 only)	N: Timer number	Resets the specified timer.	Output Required	252
HUNDRED-MS TIMER TIM (BCD) TIMX (Binary) (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only)	TIM N S N: Timer number S: Set value TIMX(550) N S N: Timer number S: Set value	TIM/TIMX(550) operates a decrementing timer with units of 0.1-s. The setting range for the set value (SV) is 0 to 999.9 s for BCD and 0 to 6,553.5 s for binary (decimal or hexadecimal). Timer input ON OFF Timer PV ON OFF Timer input ON OFF Timer PV ON OFF Timer PV ON OFF Timer PV ON OFF Timer PV ON OFF	Output Required	217
TEN-MS TIMER TIMH 015 (BCD) TIMHX 551 (Binary) (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only)	TIMH(015) N S N: Timer number S: Set value TIMHX(551) N S N: Timer number S: Set value	TIMH(015)/TIMHX(551) operates a decrementing timer with units of 10-ms. The setting range for the set value (SV) is 0 to 99.99 s for BCD and 0 to 655.35 s for binary (decimal or hexadecimal). Timer input ON OFF Timer PV ON OFF Timer input ON OFF Timer PV OFF Timer PV OFF ON OFF ON OFF Timer input ON OFF OFF OFF ON OFF	Output Required	221

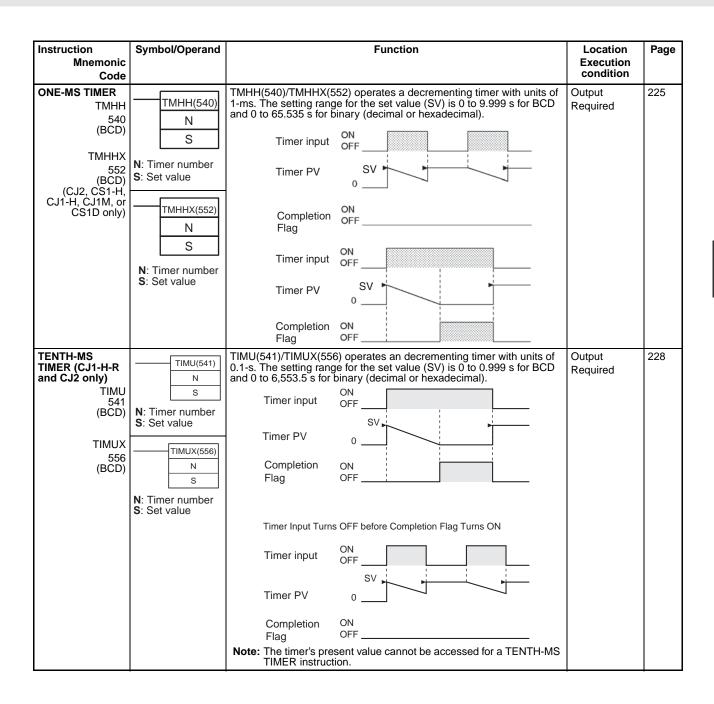

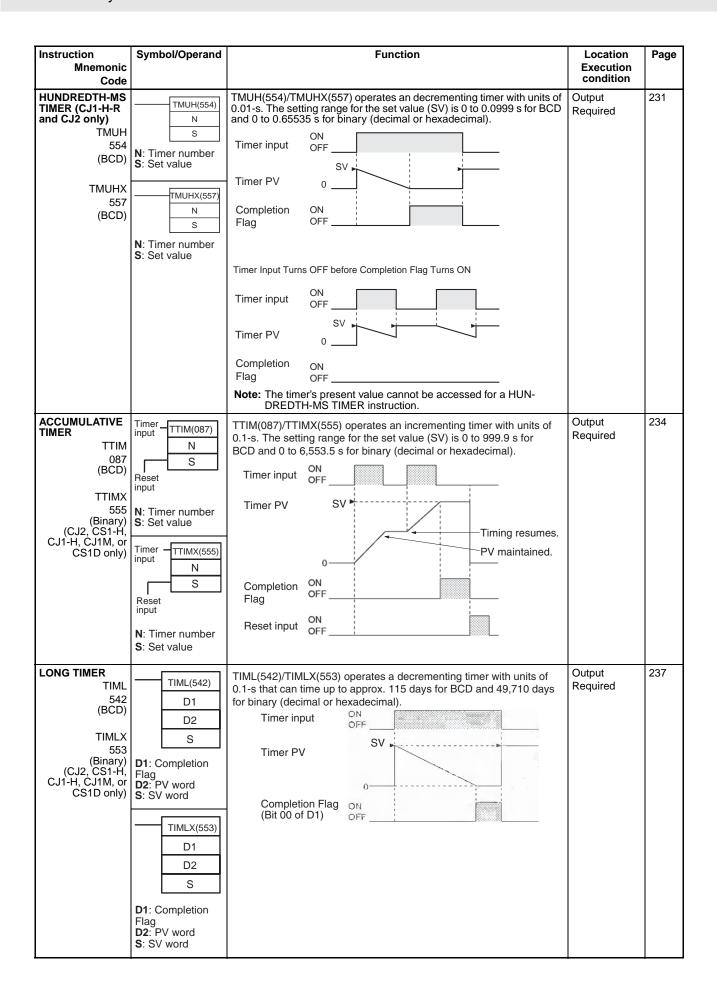

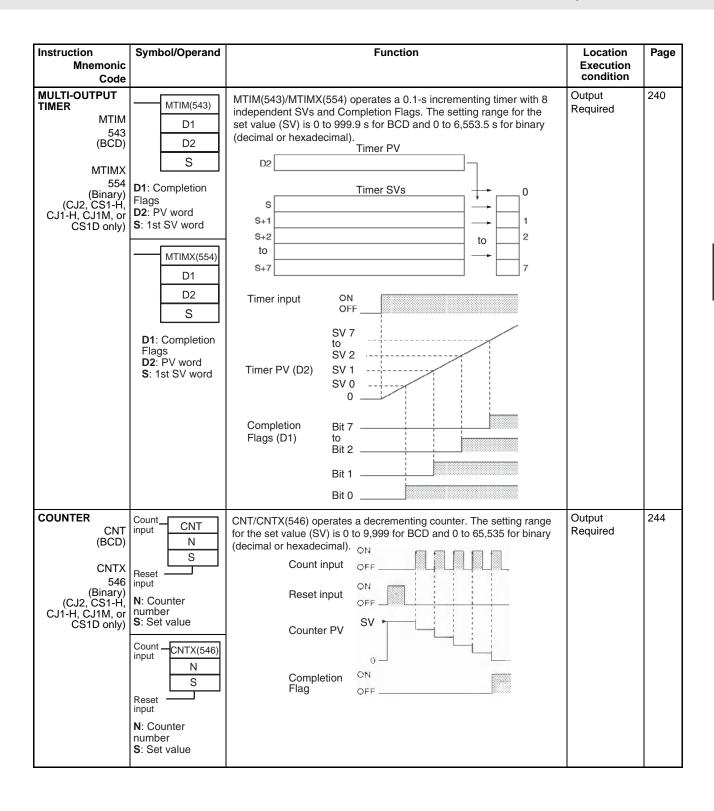

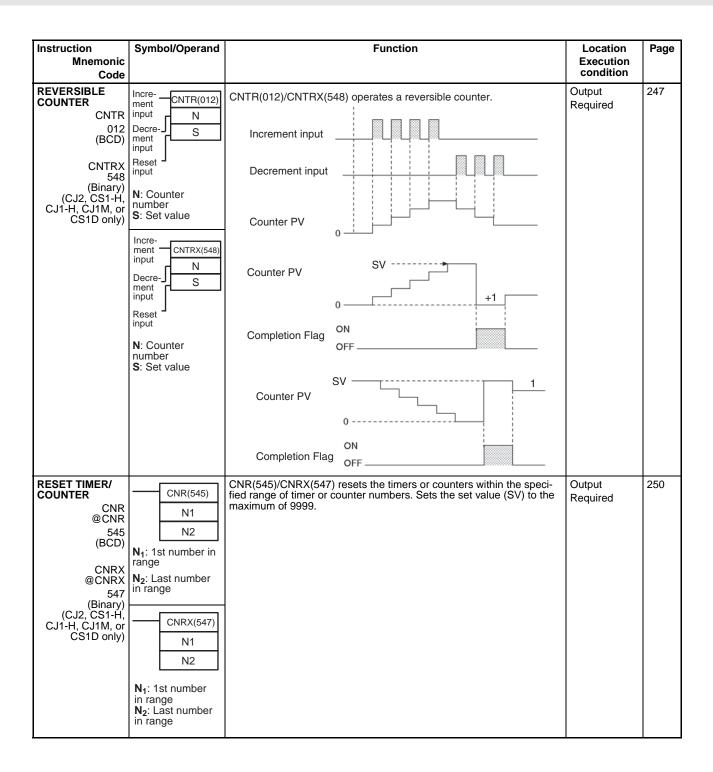


2-2-5 Comparison Instructions

*1: Not supported by CS1D CPU Units for Duplex-CPU Systems.

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
Symbol Comparison (Unsigned) LD, AND, OR + =,	Symbol & options S1 S2 S1: Comparison data 1 S2: Comparison data 2	Symbol comparison instructions (unsigned) compare two values (constants and/or the contents of specified words) in 16-bit binary data and create an ON execution condition when the comparison condition is true. There are three types of symbol comparison instructions, LD (LOAD), AND, and OR. LD ON execution condition when comparison result is true. ON execution condition when comparison result is true. ON execution condition when comparison result is true. ON execution condition when comparison result is true.	LD: Not required AND, OR: Required	253
Symbol Comparison (Doubleword, unsigned) LD, AND, OR + =, <>, <, <=, >, >= + 301 (=) 306 (<>) 311 (<) 316 (<=) 321 (>) 326 (>=)	S ₁ : Comparison data 1 S ₂ : Comparison data 2	Symbol comparison instructions (double-word, unsigned) compare two values (constants and/or the contents of specified double-word data) in unsigned 32-bit binary data and create an ON execution condition when the comparison condition is true. There are three types of symbol comparison instructions, LD (LOAD), AND, and OR.	LD: Not required AND, OR: Required	253
Symbol Comparison (Signed) LD, AND, OR + =,	S ₁ : Comparison data 1 S ₂ : Comparison data 2	Symbol comparison instructions (signed) compare two values (constants and/or the contents of specified words) in signed 16-bit binary (4-digit hexadecimal) and create an ON execution condition when the comparison condition is true. There are three types of symbol comparison instructions, LD (LOAD), AND, and OR.	LD: Not required AND, OR: Required	253
Symbol Comparison (Double-word, signed) LD, AND, OR + =, <>>, <=, >>, =	S ₁ : Comparison data 1 S ₂ : Comparison data 2	Symbol comparison instructions (double-word, signed) compare two values (constants and/or the contents of specified double-word data) in signed 32-bit binary (8-digit hexadecimal) and create an ON execution condition when the comparison condition is true. There are three types of symbol comparison instructions, LD (LOAD), AND, and OR.	LD: Not required AND, OR: Required	253


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
Time Comparison LD, AND, OR + = DT, <> DT, < DT, <= DT, > DT 341 (= DT) 342 (<> DT) 344 (<= DT) 345 (> DT) 345 (> DT) 346 (>= DT) (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	AND: Symbol C S1 S2 AND: Symbol C S1 S2 OR: Symbol C S1 S2 C: Control word S1: 1st word of present time S2: 1st word of comparison time	Time comparison instructions compare two BCD time values and create an ON execution condition when the comparison condition is true. There are three types of time comparison instructions, LD (LOAD), AND, and OR. Time values (year, month, day, hour, minute, and second) can be masked/unmasked in the comparison so it is easy to create calendar timer functions.	LD: Not required AND, OR: Required	257
UNSIGNED COM- PARE CMP !CMP*1 020	CMP(020) S ₁ S ₂ S1: Comparison data 1 S2: Comparison data 2	Compares two unsigned binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area. Unsigned binary comparison S1 Arithmetic Flags (>, >=, =, <=, <, >)	Output Required	261
DOUBLE UNSIGNED COMPARE CMPL 060	CMPL(060) S ₁ S ₂ S1: Comparison data 1 S2: Comparison data 2	Compares two double unsigned binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area. Unsigned binary comparison S1+1 S1 Arithmetic Flags (>, >=, =, <=, <, <>)	Output Required	261
SIGNED BINARY COMPARE CPS !CPS*1 114	CPS(114) S ₁ S ₂ S1: Comparison data 1 S2: Comparison data 2	Compares two signed binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area. Signed binary comparison S1 Arithmetic Flags (>, >=, =, <=, <, >>)	Output Required	264

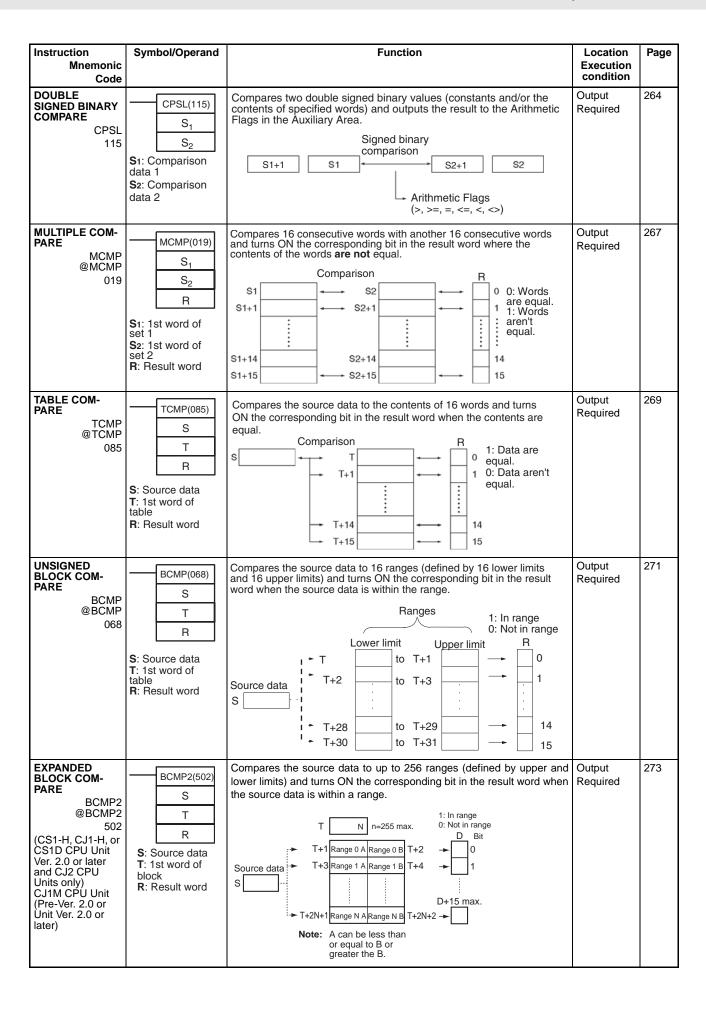


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
AREA RANGE COMPARE ZCP @ZCP 088 (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only)	ZCP(088) CD LL UL CD: Compare data (1 word) LL: Lower limit of range UL: Upper limit of range	Compares the 16-bit unsigned binary value in CD (word contents or constant) to the range defined by LL and UL and outputs the results to the Arithmetic Flags in the Auxiliary Area.	Output Required	276
DOUBLE AREA RANGE COM- PARE ZCPL 0ZCPL 116 (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only)	ZCPL(116) CD LL UL CD: Compare data (2 words) LL: First word of lower limit UL: First word of upper limit	Compares the 32-bit unsigned binary value in CD and CD+1 (word contents or constant) to the range defined by LL and UL and outputs the results to the Arithmetic Flags in the Auxiliary Area.	Output Required	276
SIGNED AREA RANGE COM- PARE ZCPS @ZCPS 117 (CJ2H CPU Unit Ver. 1.3 or later, and CJ2M only)	ZCPS(117) CD LL UL CD: Compare data (1 word) LL: Lower limit of range UL: Upper limit of range	Compares the 16-bit signed binary value in CD (word contents or constant) to the range defined by LL and UL and outputs the results to the Arithmetic Flags in the Auxiliary Area.	Output Required	280
DOUBLE SIGNED AREA RANGE COM- PARE ZCPSL @ZCPSL 118 (CJ2H CPU Unit Ver. 1.3 or later, and CJ2M only)	ZCPSL(118) CD LL UL CD: Compare data (2 words) LL: First word of lower limit UL: First word of upper limit	Compares the 32-bit signed binary value in CD and CD+1 (word contents or constant) to the range defined by LL and UL and outputs the results to the Arithmetic Flags in the Auxiliary Area.	Output Required	280

2-2-6 Data Movement Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
MOVE MOV @MOV !MOV !@MOV 021	MOV(021) S D S: Source D: Destination	Transfers a word of data to the specified word. Source word Bit status not changed. Destination word	Output Required	283
MOVL @MOVL 498	MOVL(498) S D S: 1st source word D: 1st destination word	Transfers two words of data to the specified words. S S+1 Bit status not changed. D D D+1	Output Required	283
MOVE NOT MVN @MVN 022	MVN(022) S D S: Source D: Destination	Transfers the complement of a word of data to the specified word. Source word Bit status inverted. Destination word	Output Required	286
DOUBLE MOVE NOT MVNL @MVNL 499	MVNL(499) S: 1st source word D: 1st destination word	Transfers the complement of two words of data to the specified words. S	Output Required	286
MOVE BIT MOVB @MOVB 082	MOVB(082) S C D S: Source word or data C: Control word D: Destination word	Transfers the specified bit.	Output Required	288

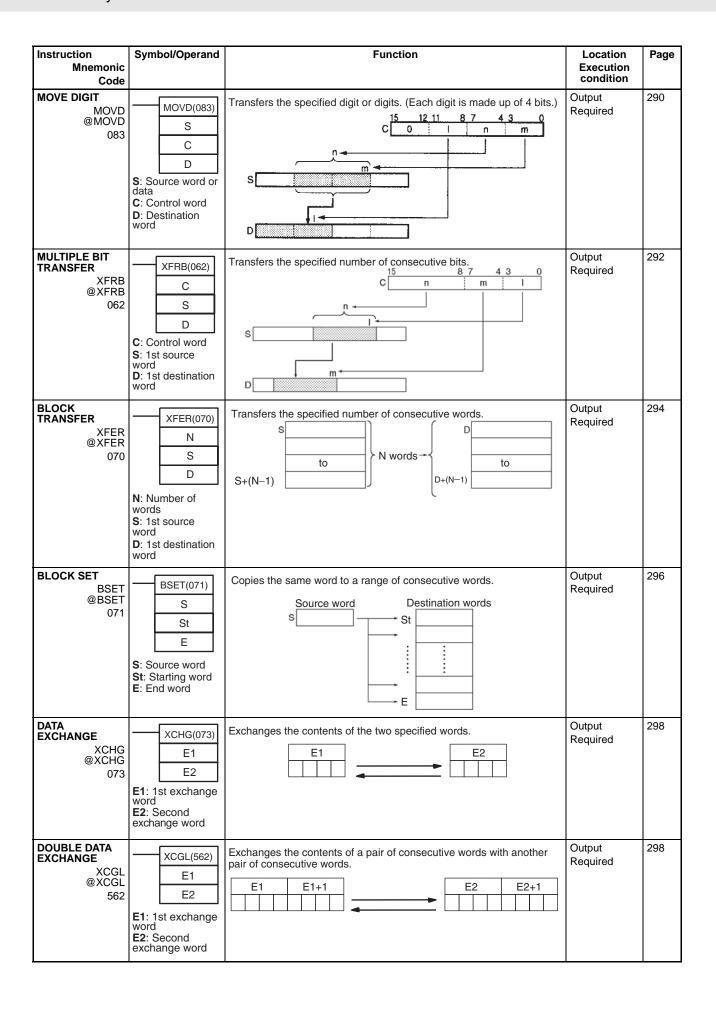

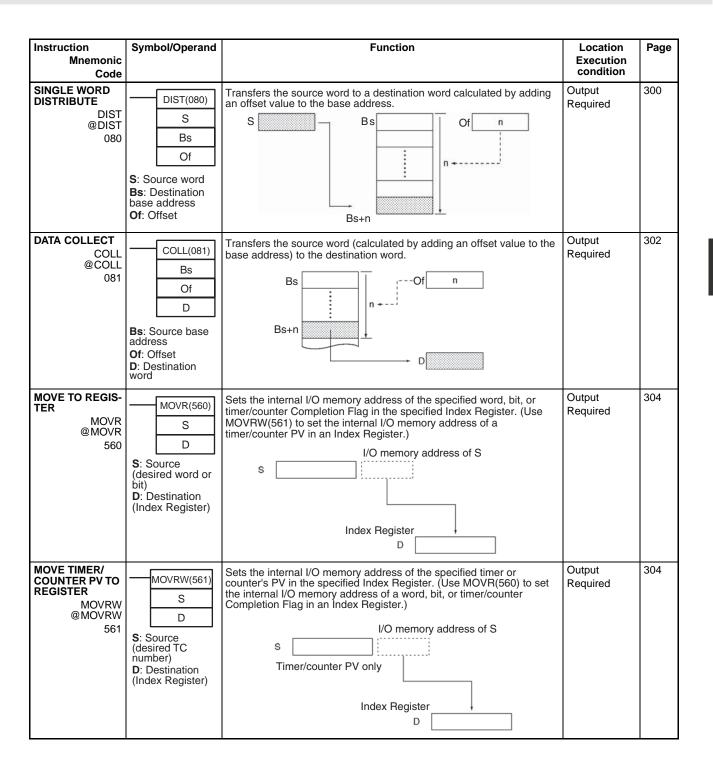

2-2-7 Data Shift Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SHIFT REGISTER SFT 010	Data input - SFT(010) Shift - St input Reset - E input St: Starting word E: End word	Operates a shift register. St+1, St+2	Output Required	307
REVERSIBLE SHIFT REGISTER SFTR @SFTR 084	SFTR(084) C St E C: Control word St: Starting word E: End word	Creates a shift register that shifts data to either the right or the left. CY 15 E 0 15 0 15 St 0 Data input Data 15 E 0 15 0 15 St 0 CY direction	Output Required	309
ASYNCHRO- NOUS SHIFT REGISTER ASFT @ASFT 017	ASFT(017) C St E C: Control word St: Starting word E: End word	Shifts all non-zero word data within the specified word range either towards St or toward E, replacing 0000Hex word data. St St Shift direction Shift E St Zero data Non-zero data	Output Required	311
WORD SHIFT WSFT @WSFT 016	WSFT(016) S St E S: Source word St: Starting word E: End word	Shifts data between St and E in word units. Lost 15 E 15 St 15 St	Output Required	313
ARITHMETIC SHIFT LEFT ASL @ASL 025	ASL(025) Wd Wd: Word	Shifts the contents of Wd one bit to the left.	Output Required	315
DOUBLE SHIFT LEFT ASLL @ASLL 570	ASLL(570) Wd Wd: Word	Shifts the contents of Wd and Wd +1 one bit to the left. Wd+1	Output Required	315

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
ARITHMETIC SHIFT RIGHT ASR @ASR 026	ASR(026) Wd Wd: Word	Shifts the contents of Wd one bit to the right.	Output Required	317
DOUBLE SHIFT RIGHT ASRL @ASRL 571	ASRL(571) Wd Wd: Word	Shifts the contents of Wd and Wd +1 one bit to the right. Wd+1 Wd 15 10 15 10 15 CY	Output Required	317
ROTATE LEFT ROL @ROL 027	ROL(027) Wd Wd: Word	Shifts all Wd bits one bit to the left including the Carry Flag (CY).	Output Required	319
DOUBLE ROTATE LEFT ROLL @ROLL 572	ROLL(572) Wd Wd: Word	Shifts all Wd and Wd + 1 bits one bit to the left including the Carry Flag (CY). Wd+1 Ud 1514 Wd 1 0 1514 1 0 1514	Output Required	319
ROTATE LEFT WITHOUT CARRY RLNC @RLNC 574	RLNC(574) Wd Wd: Word	Shifts all Wd bits one bit to the left not including the Carry Flag (CY).	Output Required	321
DOUBLE ROTATE LEFT WITHOUT CARRY RLNL @RLNL 576	RLNL(576) Wd Wd: Word	Shifts all Wd and Wd +1 bits one bit to the left not including the Carry Flag (CY). CY 1514 Wd+1 0 1514 Wd 1 0	Output Required	321
ROTATE RIGHT ROR @ROR 028	ROR(028) Wd	Shifts all Wd bits one bit to the right including the Carry Flag (CY). Wd+1 Wd	Output Required	323
DOUBLE ROTATE RIGHT RORL @RORL 573	RORL(573) Wd Wd: Word	Shifts all Wd and Wd +1 bits one bit to the right including the Carry Flag (CY). Wd+1 Wd	Output Required	323
ROTATE RIGHT WITHOUT CARRY RRNC @RRNC 575	RRNC(575) Wd Wd: Word	Shifts all Wd bits one bit to the right not including the Carry Flag (CY). The contents of the rightmost bit of Wd shifts to the leftmost bit and to the Carry Flag (CY).	Output Required	325

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE ROTATE RIGHT WITHOUT CARRY RRNL @RRNL 577	RRNL(577) Wd Wd: Word	Shifts all Wd and Wd +1 bits one bit to the right not including the Carry Flag (CY). The contents of the rightmost bit of Wd +1 is shifted to the leftmost bit of Wd, and to the Carry Flag (CY). 1514 Wd+1 0 15 Wd CY	Output Required	325
ONE DIGIT SHIFT LEFT SLD @SLD 074	SLD(074) St E St: Starting word E: End word	Shifts data by one digit (4 bits) to the left. E S t OHex	Output Required	327
ONE DIGIT SHIFT RIGHT SRD @SRD 075	SRD(075) St E St: Starting word E: End word	Shifts data by one digit (4 bits) to the right. S Lost	Output Required	327
SHIFT N-BIT DATA LEFT NSFL @NSFL 578	NSFL(578) D C N D: Beginning word for shift C: Beginning bit N: Shift data length	Shifts the specified number of bits to the left. D N-1 bit N-1 bit N-1 bit	Output Required	329
SHIFT N-BIT DATA RIGHT NSFR @NSFR 579	NSFR(579) D C N D: Beginning word for shift C: Beginning bit N: Shift data length	Shifts the specified number of bits to the right. D N-1 bit N-1 bit N-1 bit	Output Required	329
SHIFT N-BITS LEFT NASL @NASL 580	NASL(580) D C D: Shift word C: Control word	Shifts the specified 16 bits of word data to the left by the specified number of bits. Contents of shifted in "a" or "0" N bits	Output Required	332

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE SHIFT N-BITS LEFT NSLL @NSLL 582	NSLL(582) D C D: Shift word C: Control word	Shifts the specified 32 bits of word data to the left by the specified number of bits. Contents of "a" or "0" shifted in	Output Required	332
SHIFT N-BITS RIGHT NASR @NASR 581	NASR(581) D C D: Shift word C: Control word	Shifts the specified 16 bits of word data to the right by the specified number of bits. Contents of "a" or "0" shifted in N bits	Output Required	335
DOUBLE SHIFT N-BITS RIGHT NSRL @NSRL 583	NSRL(583) D C D: Shift word C: Control word	Shifts the specified 32 bits of word data to the right by the specified number of bits. 15 12 11 8 7 4 3 0	Output Required	335

2-2-8 Increment/Decrement Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
INCREMENT BINARY ++ @++ 590	++(590) Wd Wd: Word	Increments the 4-digit hexadecimal content of the specified word by 1. Wd +1 Wd	Output Required	338
DOUBLE INCREMENT BINARY ++L @++L 591	++L(591) Wd Wd: Word	Increments the 8-digit hexadecimal content of the specified words by 1. Wd+1 Wd	Output Required	338
DECREMENT BINARY @ 592	(592) Wd Wd : Word	Decrements the 4-digit hexadecimal content of the specified word by 1. Wd -1 Wd	Output Required	341
DOUBLE DEC- REMENT BINARY L @L 593	L(593) Wd Wd: 1st word	Decrements the 8-digit hexadecimal content of the specified words by 1. Wd+1 Wd -1 Wd+1 Wd	Output Required	341
#+B @++B 594	++B(594) Wd: Word	Increments the 4-digit BCD content of the specified word by 1. Wd +1	Output Required	344
DOUBLE INCRE- MENT BCD ++BL @++BL 595	++BL(595) Wd Wd: 1st word	Increments the 8-digit BCD content of the specified words by 1. Wd+1 Wd +1 Wd Wd+1 Wd	Output Required	344
DECREMENT BCDB @B 596	B(596) Wd Wd: Word	Decrements the 4-digit BCD content of the specified word by 1. Wd —1 — Wd	Output Required	347
DOUBLE DEC- REMENT BCD BL @BL 597	BL(597) Wd Wd: 1st word	Decrements the 8-digit BCD content of the specified words by 1. Wd+1 Wd −1 Wd+1 Wd	Output Required	347

2-2-9 Symbol Math Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SIGNED BINARY ADD WITHOUT CARRY + @+ 400	+(400) Au Ad R Au: Augend word Ad: Addend word R: Result word	Adds 4-digit (single-word) hexadecimal data and/or constants. Au (Signed binary) + Ad (Signed binary) CY will turn ON when there is a carry. (Signed binary)	Output Required	350
DOUBLE SIGNED BINARY ADD WITHOUT CARRY +L @+L 401	+L(401) Au Ad R Au: 1st augend word Ad: 1st addend word R: 1st result word	Adds 8-digit (double-word) hexadecimal data and/or constants. Au+1 Au (Signed binary) + Ad+1 Ad (Signed binary) CY will turn ON when there is a carry.	Output Required	350
SIGNED BINARY ADD WITH CARRY +C @+C 402	+C(402) Au Ad R Au: Augend word Ad: Addend word R: Result word	Adds 4-digit (single-word) hexadecimal data and/or constants with the Carry Flag (CY). Au (Signed binary) Ad (Signed binary) + CY CY will turn ON when there is a carry. CY R (Signed binary)	Output Required	352
DOUBLE SIGNED BINARY ADD WITH CARRY +CL @+CL 403	+CL(403) Au Ad R Au: 1st augend word Ad: 1st addend word R: 1st result word	Adds 8-digit (double-word) hexadecimal data and/or constants with the Carry Flag (CY). Au+1 Au (Signed binary) Ad+1 Ad (Signed binary) + CY Will turn ON when there is a CY R+1 R (Signed binary)	Output Required	352
BCD ADD WITH- OUT CARRY +B @+B 404	+B(404) Au Ad R Au: Augend word Ad: Addend word R: Result word	Adds 4-digit (single-word) BCD data and/or constants. Au (BCD) + Ad (BCD) CY will turn ON when there is a CY R (BCD) carry.	Output Required	354

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE BCD ADD WITHOUT CARRY +BL @+BL 405	+BL(405) Au Ad R Au: 1st augend word Ad: 1st addend word R: 1st result word	Adds 8-digit (double-word) BCD data and/or constants. Au+1 Au (BCD) + Ad+1 Ad (BCD) CY will turn ON When there is a carry.	Output Required	354
BCD ADD WITH CARRY +BC @+BC 406	+BC(406) Au Ad R Au: Augend word Ad: Addend word R: Result word	Adds 4-digit (single-word) BCD data and/or constants with the Carry Flag (CY). Au (BCD) Ad (BCD) + CY CY will turn ON when there is a carry. R (BCD)	Output Required	356
DOUBLE BCD ADD WITH CARRY +BCL @+BCL 407	+BCL(407) Au Ad R Au: 1st augend word Ad: 1st addend word Word R: 1st result word	Adds 8-digit (double-word) BCD data and/or constants with the Carry Flag (CY). Au+1 Au (BCD) Ad+1 Ad (BCD) + CY Will turn ON when there CY R+1 R (BCD)	Output Required	356
SIGNED BINARY SUBTRACT WITHOUT CARRY	-(410) Mi Su R Mi: Minuend word Su: Subtrahend word Word R: Result word	Subtracts 4-digit (single-word) hexadecimal data and/or constants. Mi (Signed binary) - Su (Signed binary) CY will turn ON when there is a borrow.	Output Required	358
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY -L @-L 411	— L(411) Mi Su R Mi: Minuend word Su: Subtrahend word word R: Result word	Subtracts 8-digit (double-word) hexadecimal data and/or constants. Mi+1 Mi (Signed binary) - Su+1 Su (Signed binary) CY will turn ON when there is a borrow.	Output Required	358
SIGNED BINARY SUBTRACT WITH CARRY -C @-C 412	—C(412) Mi Su R Mi: Minuend word Su: Subtrahend word R: Result word	Subtracts 4-digit (single-word) hexadecimal data and/or constants with the Carry Flag (CY). Mi (Signed binary) Su (Signed binary) - CY CY will turn ON when there is a borrow. R (Signed binary)	Output Required	362

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE SIGNED BINARY WITH CARRY -CL @-CL 413	—CL(413) Mi Su R Mi: Minuend word Su: Subtrahend word R: Result word	Subtracts 8-digit (double-word) hexadecimal data and/or constants with the Carry Flag (CY). Mi+1 Mi (Signed binary) Su+1 Su (Signed binary) CY will turn ON when there is a borrow.	Output Required	362
BCD SUBTRACT WITHOUT CARRY -B @-B 414	—B(414) Mi Su R Mi: Minuend word Su: Subtrahend word word R: Result word	Subtracts 4-digit (single-word) BCD data and/or constants. Mi (BCD) - Su (BCD) CY will turn ON when there is a carry.	Output Required	365
DOUBLE BCD SUBTRACT WITHOUT CARRY -BL @-BL 415	BL(415) Mi Su R Mi: 1st minuend word Su: 1st subtrahend word R: 1st result word	Subtracts 8-digit (double-word) BCD data and/or constants. Mi +1 Mi (BCD) - Su+1 Su (BCD) CY will turn ON when there is a borrow.	Output Required	365
BCD SUBTRACT WITH CARRY -BC @-BC 416	BC(416) Mi Su R Mi: Minuend word Su: Subtrahend word R: Result word	Subtracts 4-digit (single-word) BCD data and/or constants with the Carry Flag (CY). Mi (BCD) Su (BCD) - CY CY will turn ON when there is a borrow.	Output Required	368
DOUBLE BCD SUBTRACT WITH CARRY -BCL @-BCL 417	—BCL(417) Mi Su R Mi: 1st minuend word Su: 1st subtrahend word R: 1st result word	Subtracts 8-digit (double-word) BCD data and/or constants with the Carry Flag (CY). Mi +1 Mi (BCD) Su+1 Su (BCD) CY will turn ON CY When there is a CY R+1 R (BCD)	Output Required	368

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SIGNED BINARY MULTIPLY * @* 420	*(420) Md Mr R Md: Multiplicand word Mr: Multiplier word R: Result word	Multiplies 4-digit signed hexadecimal data and/or constants. Md (Signed binary) × Mr (Signed binary) R +1 R (Signed binary)	Output Required	370
DOUBLE SIGNED BINARY MULTIPLY *L @*L 421	*L(421) Md Mr R Md: 1st multiplicand word Mr: 1st multiplier word R: 1st result word	Multiplies 8-digit signed hexadecimal data and/or constants. Md + 1	Output Required	370
UNSIGNED BINARY MULTIPLY *U @*U 422	*U(422) Md Mr R Md: Multiplicand word Mr: Multiplier word R: Result word	Multiplies 4-digit unsigned hexadecimal data and/or constants. Md (Unsigned binary) × Mr (Unsigned binary) R +1 R (Unsigned binary)	Output Required	372
DOUBLE UNSIGNED BINARY MULTIPLY *UL @*UL 423	*UL(423) Md Mr R Md: 1st multiplicand word Mr: 1st multiplier word R: 1st result word	Multiplies 8-digit unsigned hexadecimal data and/or constants. Md + 1 Md (Unsigned binary) × Mr + 1 Mr (Unsigned binary) R + 3 R + 2 R + 1 R (Unsigned binary)	Output Required	372
BCD MULTIPLY *B @*B 424	*B(424) Md Mr R Md: Multiplicand word Mr: Multiplier word R: Result word	Multiplies 4-digit (single-word) BCD data and/or constants. Md (BCD) × Mr (BCD) R+1 R (BCD)	Output Required	374


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE BCD MULTIPLY *BL @*BL 425	*BL(425) Md Mr R Md: 1st multiplicand word Mr: 1st multiplier word R: 1st result word	Multiplies 8-digit (double-word) BCD data and/or constants. Md + 1 Md (BCD) × Mr + 1 Mr (BCD) R + 3 R + 2 R + 1 R (BCD)	Output Required	374
SIGNED BINARY DIVIDE // @/ 430	/(430) Dd Dr R Dd: Dividend word Dr: Divisor word R: Result word	Divides 4-digit (single-word) signed hexadecimal data and/or constants. Dd (Signed binary) ÷ Dr (Signed binary) R+1 R (Signed binary) Remainder Quotient	Output Required	376
DOUBLE SIGNED BINARY DIVIDE /L @/L 431	Dd: 1st dividend word Dr: 1st divisor word R: 1st result word	Divides 8-digit (double-word) signed hexadecimal data and/or constants. Dd + 1	Output Required	376
UNSIGNED BINARY DIVIDE /U @/U 432	/U(432) Dd Dr R Dd: Dividend word Dr: Divisor word R: Result word	Divides 4-digit (single-word) unsigned hexadecimal data and/or constants. Dd (Unsigned binary) + Dr (Unsigned binary) R+1 R (Unsigned binary) Remainder Quotient	Output Required	378
DOUBLE UNSIGNED BINARY DIVIDE /UL @/UL 433	/UL(433) Dd Dr R Dd: 1st dividend word Dr: 1st divisor word R: 1st result word	Divides 8-digit (double-word) unsigned hexadecimal data and/or constants. Dd + 1 Dd (Unsigned binary)	Output Required	378


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
BCD DIVIDE /B @/B 434	/B(434) Dd Dr R Dd: Dividend word Dr: Divisor word R: Result word	Divides 4-digit (single-word) BCD data and/or constants. Dd (BCD) + Dr (BCD) R+1 R (BCD) Remainder Quotient	Output Required	380
DOUBLE BCD DIVIDE /BL @/BL 435	/BL(435) Dd Dr R Dd: 1st dividend word Dr: 1st divisor word R: 1st result word	Divides 8-digit (double-word) BCD data and/or constants. Dd + 1	Output Required	380


2-2-10 Conversion Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
BCD TO BINARY BIN @BIN 023	BIN(023) S R S: Source word R: Result word	Converts BCD data to binary data. s (BCD) → R (BIN)	Output Required	382
DOUBLE BCD TO DOUBLE BINARY BINL @BINL 058	BINL(058) S R S: 1st source word R: 1st result word	Converts 8-digit BCD data to 8-digit hexadecimal (32-bit binary) data. S (BCD) R (BIN) R+1 (BIN)	Output Required	382
BINARY TO BCD BCD @BCD 024	BCD(024) S R S: Source word R: Result word	Converts a word of binary data to a word of BCD data. S (BIN) — R (BCD)	Output Required	384
DOUBLE BINARY TO DOU- BLE BCD BCDL @BCDL 059	BCDL(059) S R S: 1st source word R: 1st result word	Converts 8-digit hexadecimal (32-bit binary) data to 8-digit BCD data. S (BIN) R (BCD) S+1 (BIN) R+1 (BCD)	Output Required	384

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
2'S COMPLE- MENT NEG @NEG 160	NEG(160) S R S: Source word R: Result word	Calculates the 2's complement of a word of hexadecimal data. 2's complement (Complement + 1) (S) (R)	Output Required	387
DOUBLE 2'S COMPLEMENT NEGL @NEGL 161	NEGL(161) S R S: 1st source word R: 1st result word	Calculates the 2's complement of two words of hexadecimal data. 2's complement (Complement + 1) (S+1, S) (R+1, R)	Output Required	387
16-BIT TO 32-BIT SIGNED BINARY SIGN @SIGN 600	SIGN(600) S R S: Source word R: 1st result word	Expands a 16-bit signed binary value to its 32-bit equivalent. MSB S MSB = 0: 00000 Hex D+1 D D = Contents of S	Output Required	389

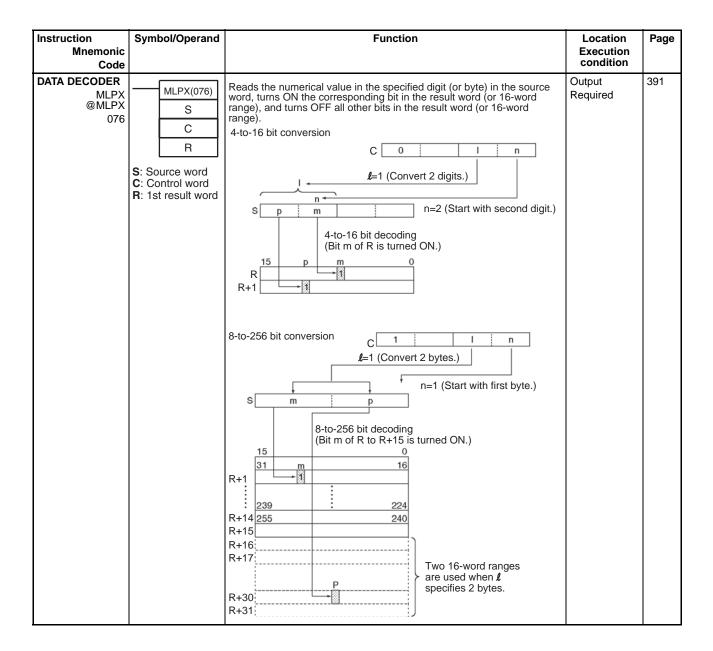

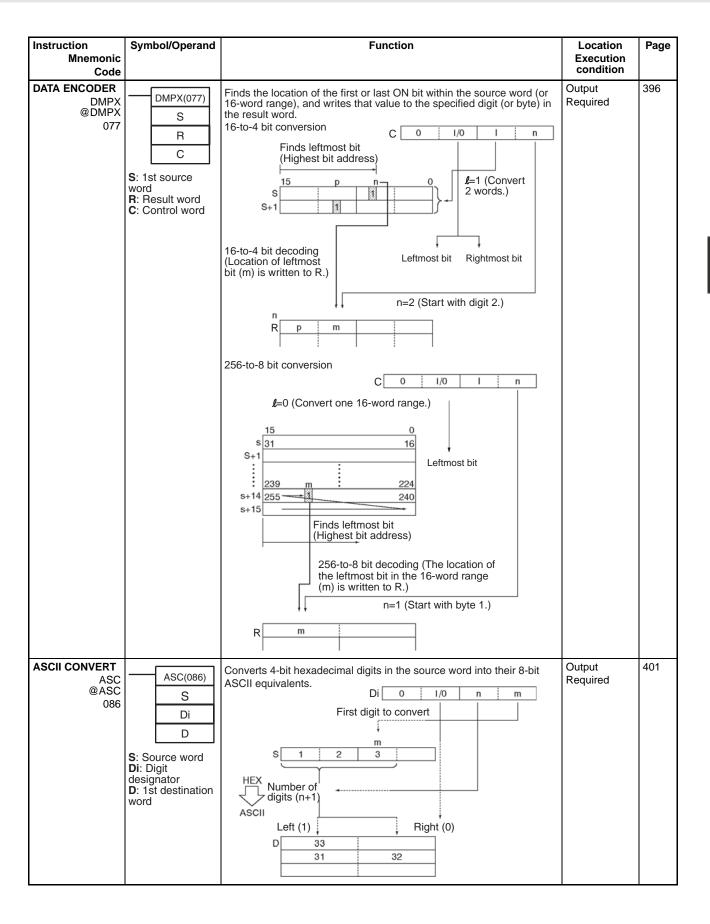

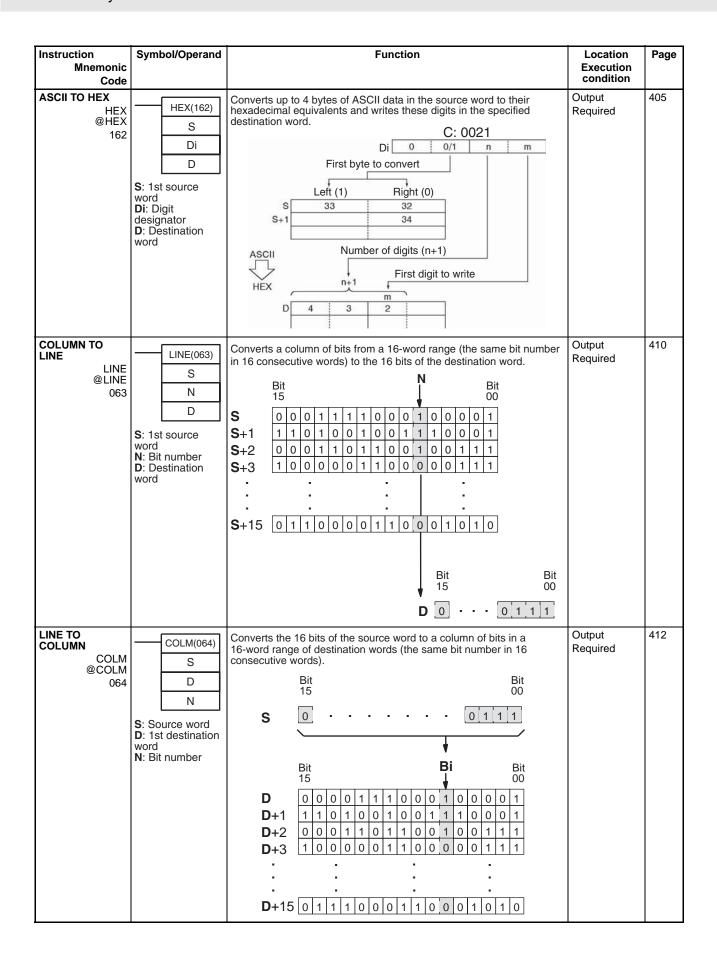

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SIGNED BCD TO BINARY BINS @BINS 470	BINS(470) C S D C: Control word S: Source word D: Destination word	Converts one word of signed BCD data to one word of signed binary data. C Signed BCD format specified in C S Signed BCD D Signed binary	Output Required	414
DOUBLE SIGNED BCD TO BINARY BISL @BISL 472	BISL(472) C S D C: Control word S: 1st source word D: 1st destination word	Converts double signed BCD data to double signed binary data. C Signed BCD format specified in C S Signed BCD Signed BCD D D Signed binary Signed binary Signed binary	Output Required	414
SIGNED BINARY TO BCD BCDS @BCDS 471	BCDS(471) C S D C: Control word S: Source word D: Destination word	Converts one word of signed binary data to one word of signed BCD data. Signed BCD format specified in C Signed binary — D Signed BCD	Output Required	419
DOUBLE SIGNED BINARY TO BCD BDSL @BDSL 473	BDSL(473) C S D C: Control word S: 1st source word D: 1st destination word	Converts double signed binary data to double signed BCD data. C Signed BCD format specified in C Signed binary Signed binary Signed BCD Signed BCD Signed BCD	Output Required	419
GRAY CODE CONVERSION GRY 474 (CS/CJ-series Unit Ver. 2.0 or later and CJ2 CPU Units only, includ- ing CS1-H, CJ1-H, and CJ1M CPU Units from lot number 030201 and later)	GRY (474) C S D C: Control word S: Source word D: 1st destination word	Converts the Gray code data in the specified word to binary, BCD, or angle (°) data at the specified resolution.	Output Required	423
GRAY CODE TO BINARY CON- VERT GRAY_BIN @GRAY_BIN 478 (CJ2 only)	S: Source (gray code) D: Destination (binary data)	Converts the specified word of gray code to one word of binary data.	Output Required	428

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE GRAY CODE TO BINARY CON- VERT GRAY_BINL @GRAY_BINL 479 (CJ2 only)	S: First source word (gray code) D: First destination word (binary)	Converts the specified two words of gray code to two words of binary data.	Output Required	428
BINARY TO GRAY CODE CONVERT BIN_GRAY @BIN_GRAY 480 (CJ2 only)	S: Source word (binary data) D: Destination word (gray code)	Converts the specified word of binary data to one word of gray code.	Output Required	430
DOUBLE BINARY TO GRAY CODE CONVERT BIN_GRAYL @BIN_GRAYL 481 (CJ2 only)	S: First source word (binary data) D: First destination word (gray code)	Converts the specified two words of binary data to two words of gray code.	Output Required	430
FOUR-DIGIT NUMBER TO ASCII STR4 @STR4 601 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	STR4 S D S: Numeric D: ASCII text	Converts a 4-digit hexadecimal number (#0000 to #FFFF) to ASCII data (4 characters).	Output Required	432
EIGHT-DIGIT NUMBER TO- ASCII STR8 @STR8 602 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	STR8 S D S: Numeric D: ASCII text	Converts an 8-digit hexadecimal number (#0000 0000 to #FFFF FFFF) to ASCII data (8 characters).	Output Required	432
SIXTEEN-DIGIT NUMBER TO ASCII STR16 @STR16 603 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	STR16 S D S: Numeric D: ASCII text	Converts a 16-digit hexadecimal number (#0000 0000 0000 0000 to #FFFF FFFF FFFF) to ASCII data (16 characters).	Output Required	432
ASCII TO FOUR- DIGIT NUMBER NUM4 @NUM4 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	NUM4 S D S: ASCII text D: Numeric	Converts 4 characters of ASCII data to a 4-digit hexadecimal number.	Output Required	435

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
ASCII TO EIGHT-DIGIT NUMBER NUM8 @ NUM8 605 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	NUM8 S D S: ASCII text D: Numeric	Converts 8 characters of ASCII data to an 8-digit hexadecimal number.	Output Required	435
ASCII TO SIX- TEEN-DIGIT NUMBER NUM16 @NUM16 606 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	NUM16 S D S: ASCII text D: Numeric	Converts 16 characters of ASCII data to a 16-digit hexadecimal number.	Output Required	435

2-2-11 Logic Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
LOGICAL AND ANDW @ANDW 034	ANDW(034) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical AND of corresponding bits in single words of word data and/or constants. $\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	438
DOUBLE LOGICAL AND ANDL @ANDL 610	ANDL(610) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical AND of corresponding bits in double words of word data and/or constants. $ \begin{array}{c cccc} (I_1,I_1+1), & (I_2,I_2+1) \rightarrow (R,R+1) \\ \hline & I_1,I_1+1 & I_2,I_2+1 & R,R+1 \\ \hline & 1 & 1 & 1 \\ \hline & 1 & 0 & 0 \\ \hline & 0 & 1 & 0 \\ \hline & 0 & 0 & 0 \\ \hline \end{array} $	Output Required	438
LOGICAL OR ORW @ORW 035	ORW(035) I ₁ I ₂ R I1: Input 1 I2: Input 2 R: Result word	Takes the logical OR of corresponding bits in single words of word data and/or constants. $I_1 + I_2 \rightarrow R$ $\boxed{\begin{array}{c cccc} I_1 & I_2 & R \\ \hline 1 & 1 & 1 \\ \hline 1 & 0 & 1 \\ \hline 0 & 1 & 1 \\ \hline 0 & 0 & 0 \\ \hline \end{array}}$	Output Required	440
DOUBLE LOGICAL OR ORWL @ORWL 611	ORWL(611) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical OR of corresponding bits in double words of word data and/or constants.	Output Required	440
EXCLUSIVE OR XORW @XORW 036	XORW(036) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical exclusive OR of corresponding bits in single words of word data and/or constants. $I_1.T_2 + T_1.I_2 \rightarrow R$ $\begin{array}{ c c c c c c c c c c c c c c c c c c c$	Output Required	442

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE EXCLU- SIVE OR XORL @XORL 612	XORL(612) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical exclusive OR of corresponding bits in double words of word data and/or constants. $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	442
EXCLUSIVE NOR XNRW @XNRW 037	XNRW(037) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: Result word	Takes the logical exclusive NOR of corresponding single words of word data and/or constants. $\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	444
DOUBLE EXCLU- SIVE NOR XNRL @XNRL 613	XNRL(613) I ₁ I ₂ R I ₁ : Input 1 I ₂ : Input 2 R: 1st result word	Takes the logical exclusive NOR of corresponding bits in double words of word data and/or constants.	Output Required	444
COMPLEMENT COM @COM 029	COM(029) Wd: Word	Turns OFF all ON bits and turns ON all OFF bits in Wd. $\overline{\text{Wd}} \rightarrow \text{Wd} : 1 \rightarrow 0 \text{ and } 0 \rightarrow 1$	Output Required	446
DOUBLE COM- PLEMENT COML @COML 614	COML(614) Wd: Word	Turns OFF all ON bits and turns ON all OFF bits in Wd and Wd+1. (Wd+1. Wd) → (Wd+1. Wd)	Output Required	446

2-2-12 Special Math Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
BINARY ROOT ROTB @ROTB 620	ROTB(620) S R S: 1st source word R: Result word	Computes the square root of the 32-bit binary content of the specified words and outputs the integer portion of the result to the specified result word. S+1 S Binary data (32 bits) Binary data (16 bits)	Output Required	448
BCD SQUARE ROOT ROOT @ROOT 072	ROOT(072) S R S: 1st source word R: Result word	Computes the square root of an 8-digit BCD number and outputs the integer portion of the result to the specified result word. S+1 BCD data (8 digits) BCD data (4 digits)	Output Required	450
ARITHMETIC PROCESS APR @APR 069	APR(069) C S R C: Control word S: Source data R: Result word	Calculates the sine, cosine, or a linear extrapolation of the source data. The linear extrapolation function allows any relationship between X and Y to be approximated with line segments.	Output Required	453
FLOATING POINT DIVIDE FDIV @FDIV 079	PDIV(079) Dd Dr R Dd: 1st dividend word Dr: 1st divisor word R: 1st result word	Divides one 7-digit floating-point number by another. The floating-point numbers are expressed in scientific notation (7-digit mantissa and 1-digit exponent). Quotient R+1 R Dr+1 Dr Dd+1 Dd	Output Required	462
BIT COUNTER BCNT @BCNT 067	BCNT(067) N S R N: Number of words S: 1st source word R: Result word	Counts the total number of ON bits in the specified word(s). S N words Counts the number of ON bits. Binary result	Output Required	465

2-2-13 Floating-point Math Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
FLOATING TO 16-BIT FIX @FIX 450	FIX(450) S R S: 1st source word R: Result word	Converts a 32-bit floating-point value to 16-bit signed binary data and places the result in the specified result word. S+1 S Floating-point data (32 bits) R Signed binary data (16 bits)	Output Required	472
FLOATING TO 32-BIT FIXL @FIXL 451	FIXL(451) S R S: 1st source word R: 1st result word	Converts a 32-bit floating-point value to 32-bit signed binary data and places the result in the specified result words. S+1 S Floating-point data (32 bits) R+1 R Signed binary data (32 bits)	Output Required	472
16-BIT TO FLOATING FLT @FLT 452	FLT(452) S R S: Source word R: 1st result word	Converts a 16-bit signed binary value to 32-bit floating-point data and places the result in the specified result words. Signed binary data (16 bits) R+1 R Floating-point data (32 bits)	Output Required	474
32-BIT TO FLOATING FLTL @FLTL 453	FLTL(453) S R S: 1st source word R: 1st result word	Converts a 32-bit signed binary value to 32-bit floating-point data and places the result in the specified result words. S+1 S Signed binary data (32 bits) R+1 R Floating-point data (32 bits)	Output Required	474
FLOATING- POINT ADD +F @+F 454	+F(454) Au Ad R Au: 1st augend word AD: 1st addend word word R: 1st result word	Adds two 32-bit floating-point numbers and places the result in the specified result words. Au+1 Au Augend (floating-point data, 32 bits) Addend (floating-point data, 32 bits) R+1 R Result (floating-point data, 32 bits)	Output Required	476
FLOATING-POINT SUB-TRACT -F @-F 455	F(455) Mi Su R Mi: 1st Minuend word Su: 1st Subtrahend word R: 1st result word	Subtracts one 32-bit floating-point number from another and places the result in the specified result words. Mi+1 Mi Minuend (floating-point data, 32 bits) Subtrahend (floating-point data, 32 bits) R+1 R Result (floating-point data, 32 bits)	Output Required	476

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
FLOATING-POINT MULTIPLY *F @*F 456	*F(456) Md Mr R	Multiplies two 32-bit floating-point numbers and places the result in the specified result words. Md+1 Md Multiplicand (floating-point data, 32 bits) Mr+1 Mr Multiplier (floating-point data, 32 bits)	Output Required	476
	Md: 1st Multiplicand word Mr: 1st Multiplier word R: 1st result word	R+1 R Result (floating-point data, 32 bits)		
FLOATING- POINT DIVIDE /F @/F 457	/F(457) Dd Dr R Dd: 1st Dividend word Dr: 1st Divisor word R: 1st result word	Divides one 32-bit floating-point number by another and places the result in the specified result words. Dd+1 Dd Dividend (floating-point data, 32 bits) Dr+1 Dr Divisor (floating-point data, 32 bits) R+1 R Result (floating-point data, 32 bits)	Output Required	476
DEGREES TO RADIANS RAD @RAD 458	RAD(458) S R S: 1st source word R: 1st result word	Converts a 32-bit floating-point number from degrees to radians and places the result in the specified result words. S+1 S Source (degrees, 32-bit floating-point data) R+1 R Result (radians, 32-bit floating-point data)	Output Required	480
RADIANS TO DEGREES DEG @DEG 459	DEG(459) S R S: 1st source word R: 1st result word	Converts a 32-bit floating-point number from radians to degrees and places the result in the specified result words. S+1 S Source (radians, 32-bit floating-point data) R+1 R Result (degrees, 32-bit floating-point data)	Output Required	482
SINE SIN @SIN 460	SIN(460) S R S: 1st source word R: 1st result word	Calculates the sine of a 32-bit floating-point number (in radians) and places the result in the specified result words. SIN (S+1 S) Source (32-bit floating-point data) R+1 R R Result (32-bit floating-point data)	Output Required	484
HIGH-SPEED SINE (CJ1-H-R and CJ2 only) SINQ @SINQ 475	SINQ(475) S R S: 1st source word R: 1st result word	Calculates the sine of a 32-bit floating-point number (in radians) and places the result in the specified result words. SIN (S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	487

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
COSINE COS @COS 461	COS(461) S R S: 1st source word R: 1st result word	Calculates the cosine of a 32-bit floating-point number (in radians) and places the result in the specified result words. COS(S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	484
HIGH-SPEED COSINE (CJ1-H- R and CJ2 only) COSQ @COSQ 476	COSQ(476) S R S: 1st source word R: 1st result word	Calculates the cosine of a 32-bit floating-point number (in radians) and places the result in the specified result words. COS(S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	487
TANGENT TAN @ TAN 462	TAN(462) S R S: 1st source word R: 1st result word	Calculates the tangent of a 32-bit floating-point number (in radians) and places the result in the specified result words. TAN (S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	484
HIGH-SPEED TANGENT (CJ1- H-R and CJ2 only) TANQ @TANQ 477	TANQ(477) S R S: 1st source word R: 1st result word	Calculates the tangent of a 32-bit floating-point number (in radians) and places the result in the specified result words. TAN (S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	487
ARC SINE ASIN @ASIN 463	ASIN(463) S R S: 1st source word R: 1st result word	Calculates the arc sine of a 32-bit floating-point number and places the result in the specified result words. (The arc sine function is the inverse of the sine function; it returns the angle that produces a given sine value between –1 and 1.) SIN-1 S Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	491
ARC COSINE ACOS @ACOS 464	ACOS(464) S R S: 1st source word R: 1st result word	Calculates the arc cosine of a 32-bit floating-point number and places the result in the specified result words. (The arc cosine function is the inverse of the cosine function; it returns the angle that produces a given cosine value between –1 and 1.) COS ⁻¹ (S+1 S Source (32-bit floating-point data) Result (32-bit floating-point data)	Output Required	491

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
ARC TANGENT ATAN @ ATAN 465	ATAN(465) S R S: 1st source word R: 1st result word	Calculates the arc tangent of a 32-bit floating-point number and places the result in the specified result words. (The arc tangent function is the inverse of the tangent function; it returns the angle that produces a given tangent value.) TAN-1 (S+1 S) Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	491
SQUARE ROOT SQRT @ SQRT 466	SQRT(466) S R S: 1st source word R: 1st result word	Calculates the square root of a 32-bit floating-point number and places the result in the specified result words. S+1 S Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	494
EXPONENT EXP @EXP 467	EXP(467) S R S: 1st source word R: 1st result word	Calculates the natural (base e) exponential of a 32-bit floating-point number and places the result in the specified result words. Source (32-bit floating-point data) Result (32-bit floating-point data)	Output Required	496
LOGARITHM LOG @LOG 468	LOG(468) S R S: 1st source word R: 1st result word	Calculates the natural (base e) logarithm of a 32-bit floating-point number and places the result in the specified result words. Ioge S+1 S Source (32-bit floating-point data) R+1 R Result (32-bit floating-point data)	Output Required	498
EXPONENTIAL POWER PWR PWR 840	PWR(840) B E R B: 1st base word E: 1st exponent word R: 1st result word	Raises a 32-bit floating-point number to the power of another 32-bit floating-point number. Power E+1 E B+1 S R+1 R Base	Output Required	500

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
FLOATING SYM-BOL COMPARI-SON (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) LD, AND. or OR =F (329), <>F (330), <f (331),="" (332),="" <="F">F (333), or >=F (334)</f>	Using LD: Symbol, option S1 S2 Using AND: Symbol, option S1 S2 Using OR: Symbol, option S1 S2 S1: Comparison data 1 S2: Comparison data 2	Compares the specified single-precision data (32 bits) or constants and creates an ON execution condition if the comparison result is true. Three kinds of symbols can be used with the floating-point symbol comparison instructions: LD (Load), AND, and OR.	LD: Not required AND or OR: Required	502
FLOATING- POINT TO ASCII (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) FSTR @FSTR 448	FSTR(448) S C D S: 1st source word C: Control word D: Destination word	Converts the specified single-precision floating-point data (32-bit decimal-point or exponential format) to text string data (ASCII) and outputs the result to the destination word.	Output required	505
ASCII TO FLOAT- ING-POINT (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) FVAL @FVAL 449	FVAL(449) S D S: Source word D: 1st destination word	Converts the specified text string (ASCII) representation of single-precision floating-point data (decimal-point or exponential format) to 32-bit single-precision floating-point data and outputs the result to the destination words.	Output required	510
	MOVF(469) S D S: First source word D: First destination word	Transfers the specified 32-bit floating-point number to the destination words. S+1 S D+1 D	Output required	514

2-2-14 Double-precision Floating-point Instructions

The Double-precision Floating-point Instructions are supported only by the CJ2, CS1-H, CJ1-H, CJ1M, or CS1D CPU Units.


Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code DOUBLE FLOAT- ING TO 16-BIT BINARY FIXD @FIXD 841	FIXD(841) S D S: 1st source word D: Destination word	Converts the specified double-precision floating-point data (64 bits) to 16-bit signed binary data and outputs the result to the destination word.	Output Required	521
DOUBLE FLOAT- ING TO 32-BIT BINARY FIXLD @FIXLD 842	FIXLD(842) S: 1st source word D: 1st destination word	Converts the specified double-precision floating-point data (64 bits) to 32-bit signed binary data and outputs the result to the destination words.	Output Required	521
16-BIT BINARY TO DOUBLE FLOATING DBL @DBL 843	DBL(843) S D S: Source word D: 1st destination word	Converts the specified 16-bit signed binary data to double-precision floating-point data (64 bits) and outputs the result to the destination words.	Output Required	523
32-BIT BINARY TO DOUBLE FLOATING DBLL @DBLL 844	DBLL(844) S D S: 1st source word D: 1st destination word	Converts the specified 32-bit signed binary data to double-precision floating-point data (64 bits) and outputs the result to the destination words.	Output Required	523
DOUBLE FLOAT- ING-POINT ADD +D @+D 845	+D(845) Au Ad R Au: 1st augend word Ad: 1st addend word R: 1st result word	Adds the specified double-precision floating-point values (64 bits each) and outputs the result to the result words.	Output Required	525
DOUBLE FLOAT- ING-POINT SUB- TRACT -D @-D 846	D(846) Mi Su R Mi: 1st minuend word Su: 1st subtrahend word R: 1st result word	Subtracts the specified double-precision floating-point values (64 bits each) and outputs the result to the result words.	Output Required	525


Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code			condition	
DOUBLE FLOAT- ING-POINT MUL- TIPLY *D @*D 847	*D(847) Md Mr R Md: 1st multiplicand word Mr: 1st multiplier	Multiplies the specified double-precision floating-point values (64 bits each) and outputs the result to the result words.	Output Required	525
	word R: 1st result word			
DOUBLE FLOAT- ING-POINT DIVIDE /D @/D 848	Dd: 1st Dividend word Dr: 1st divisor word R: 1st result word	Divides the specified double-precision floating-point values (64 bits each) and outputs the result to the result words.	Output Required	525
DOUBLE DEGREES TO RADIANS RADD @RADD 849	RADD(849) S R S: 1st source word R: 1st result word	Converts the specified double-precision floating-point data (64 bits) from degrees to radians and outputs the result to the result words.	Output Required	528
DOUBLE RADI- ANS TO DEGREES DEGD @DEGD 850	DEGD(850) S R S: 1st source word R: 1st result word	Converts the specified double-precision floating-point data (64 bits) from radians to degrees and outputs the result to the result words.	Output Required	530
DOUBLE SINE SIND @SIND 851	SIND(851) S R S: 1st source word R: 1st result word	Calculates the sine of the angle (radians) in the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	532
DOUBLE COSINE COSD @COSD 852	COSD(852) S R S: 1st source word R: 1st result word	Calculates the cosine of the angle (radians) in the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	532

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE TAN- GENT TAND @TAND 853	TAND(853) S R S: 1st source word R: 1st result word	Calculates the tangent of the angle (radians) in the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	532
DOUBLE ARC SINE ASIND @ASIND 854	ASIND(854) S R S: 1st source word R: 1st result word	Calculates the angle (in radians) from the sine value in the specified double-precision floating-point data (64 bits) and outputs the result to the result words. (The arc sine function is the inverse of the sine function; it returns the angle that produces a given sine value between -1 and 1.)	Output Required	535
DOUBLE ARC COSINE ACOSD @ ACOSD 855	ACOSD(855) S R S: 1st source word R: 1st result word	Calculates the angle (in radians) from the cosine value in the specified double-precision floating-point data (64 bits) and outputs the result to the result words. (The arc cosine function is the inverse of the cosine function; it returns the angle that produces a given cosine value between -1 and 1.)	Output Required	535
DOUBLE ARC TANGENT ATAND @ATAND 856	ATAND(856) S R S: 1st source word R: 1st result word	Calculates the angle (in radians) from the tangent value in the specified double-precision floating-point data (64 bits) and outputs the result to the result words. (The arc tangent function is the inverse of the tangent function; it returns the angle that produces a given tangent value.)	Output Required	535
DOUBLE SQUARE ROOT SQRTD @ SQRTD 857	SQRTD(857) S R S: 1st source word R: 1st result word	Calculates the square root of the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	538
DOUBLE EXPONENT EXPD @EXPD 858	EXPD(858) S R S: 1st source word R: 1st result word	Calculates the natural (base e) exponential of the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	540
DOUBLE LOGA- RITHM LOGD @LOGD 859	LOGD(859) S R S: 1st source word R: 1st result word	Calculates the natural (base e) logarithm of the specified double-precision floating-point data (64 bits) and outputs the result to the result words.	Output Required	542

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DOUBLE EXPONENTIAL POWER PWRD @PWRD 860	PWRD(860) B E R B: 1st base word E: 1st exponent word R: 1st result word	Raises a double-precision floating-point number (64 bits) to the power of another double-precision floating-point number and outputs the result to the result words.	Output Required	544
DOUBLE SYM-BOL COMPARISON LD, AND. or OR =D (335), <>D (336), <d (337),="" (338),="" <="D">D (339), or >=D (340)</d>	Using LD: Symbol, option S1 S2 Using AND: Symbol, option S1 S2 Using OR: Symbol, option S1 S2 Using OR: Symbol, option S1 S2 Comparison data 1 S2: Comparison data 2	Compares the specified double-precision data (64 bits) and creates an ON execution condition if the comparison result is true. Three kinds of symbols can be used with the floating-point symbol comparison instructions: LD (Load), AND, and OR.	LD: Not required AND or OR: Required	546

2-2-15 Table Data Processing Instructions

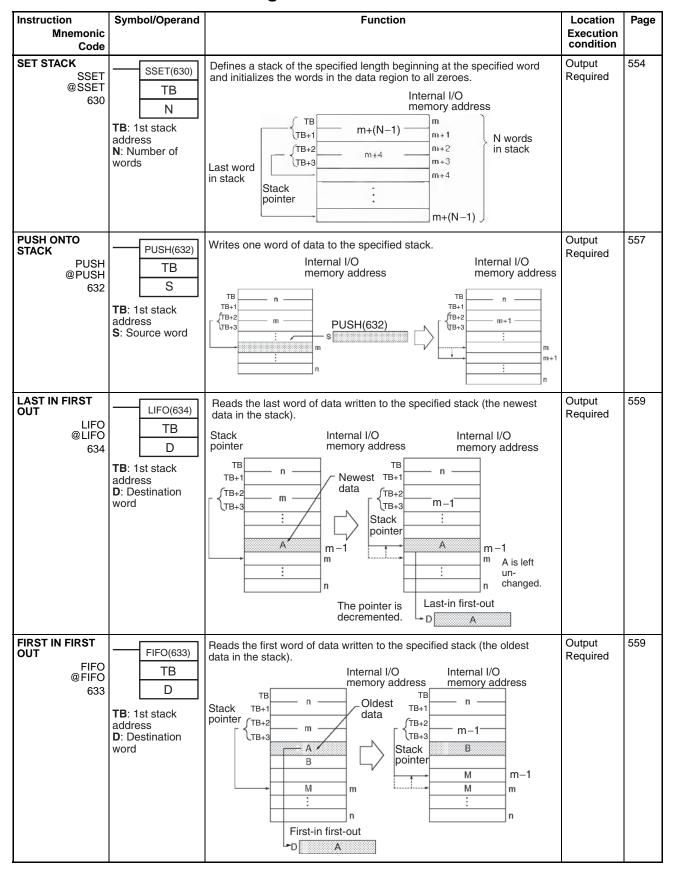

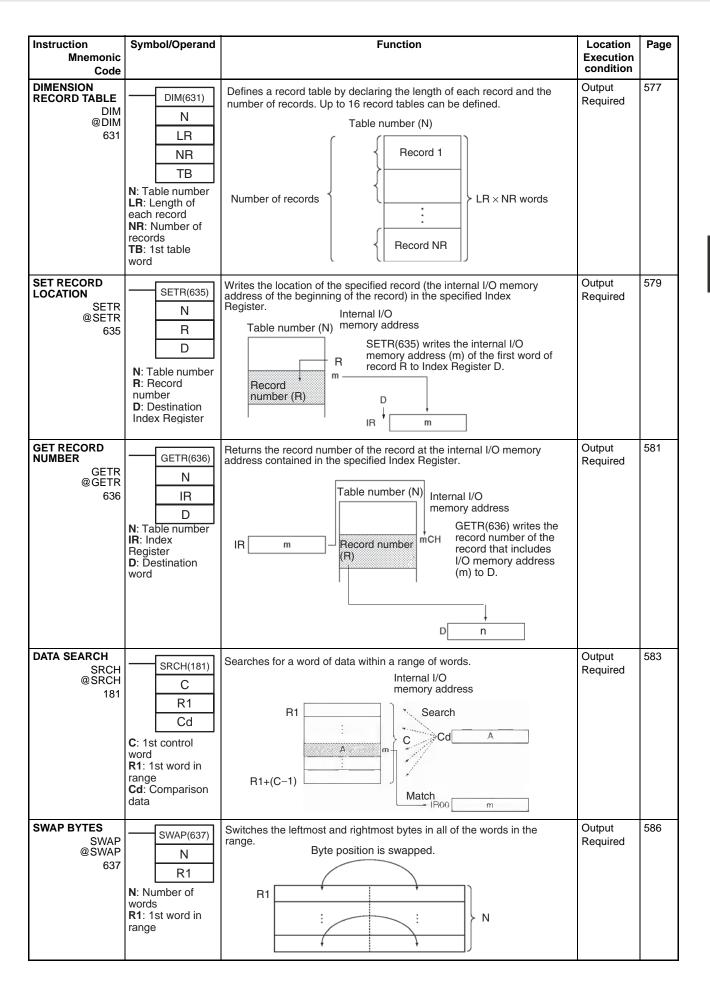

Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
FIND MAXIMUM MAX @MAX 182	MAX(182) C R1 D C: 1st control word R1: 1st word in range D: Destination word	Finds the maximum value in the range. Internal I/O memory address C words Max. value IR0 m Treats the specified number of data items as double word table data and	Condition Output Required Output	588
MAXIMUM MAXL @MAXL 174 (CJ2 only)	C: First control word S: First word in range D: First destination word	outputs the maximum value in the table.	Required	
FIND MAXIMUM FLOATING MAXF @MAXF 176 (CJ2 only)	C: First control word S: First word in range D: First destination word	Treats the specified number of data items as a table of single-precision floating-point data and outputs the maximum value in the table.	Output Required	595
FIND DOUBLE MAXIMUM FLOATING MAXD @MAXD 178 (CJ2 only)	C: First control word S: First word in range D: First destination word	Treats the specified number of data items as a table of double-precision floating-point data and outputs the maximum value in the table.	Output Required	597
FIND MINIMUM MIN @ MIN 183	MIN(183) C R1 D C: 1st control word R1: 1st word in range D: Destination word	Finds the minimum value in the range. R1 R1 R1+(W-1) R1 R1+(W-1) R1+(W-1)	Output Required	588

Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code			condition	
DOUBLE FIND MINIMUM MINL @MINL 175 (CJ2 only)	C: First control word S: First word in range D: First destination word	Treats the specified number of data items as double word table data and outputs the minimum value in the table.	Output Required	599
FIND MINIMUM FLOATING MINF @MINF 177 (CJ2 only)	C: First control word S: First word in range D: First destination word	Treats the specified number of data items as a table of single-precision floating-point data and outputs the minimum value in the table.	Output Required	601
FIND DOUBLE MINIMUM FLOATING MIND @MIND 179 (CJ2 only)	C: First control word S: First word in range D: First destination word	Treats the specified number of data items as a table of double-precision floating-point data and outputs the minimum value in the table.	Output Required	603
SUM SUM @SUM 184	SUM(184) C R1 D C: 1st control word R1: 1st word in range D: 1st destination word	Adds the bytes or words in the range and outputs the result to two words. R1 +) R1+(W-1) D+1 D	Output Required	605
FRAME CHECK- SUM FCS @FCS 180	FCS(180) C R1 D C: 1st control word R1: 1st word in range D: 1st destination word	Calculates the ASCII FCS value for the specified range. R1 C units ASCII conversion FCS value D	Output Required	608

Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code			condition	
STACK SIZE READ (CJ2, CS1- H, CJ1-H, CJ1M, or CS1D only) SNUM @SNUM 638	SNUM(638) TB D TB: First stack address D: Destination word	Counts the amount of stack data (number of words) in the specified stack.	Output required	563
STACK DATA READ (CJ2, CS1- H, CJ1-H, CJ1M, or CS1D only) SREAD @SREAD 639	SREAD(639) TB C D TB: First stack address C: Offset value D: Destination word	Reads the data from the specified data element in the stack. The offset value indicates the location of the desired data element (how many data elements before the current pointer position).	Output required	565
STACK DATA OVERWRITE (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) SWRIT @SWRIT 640	SWRIT(640) TB C S TB: First stack address C: Offset value S: Source data	Writes the source data to the specified data element in the stack (overwriting the existing data). The offset value indicates the location of the desired data element (how many data elements before the current pointer position).	Output required	568
STACK DATA INSERT (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) SINS @SINS 641	SINS(641) TB C S TB: First stack address C: Offset value S: Source data	Inserts the source data at the specified location in the stack and shifts the rest of the data in the stack downward. The offset value indicates the location of the insertion point (how many data elements before the current pointer position).	Output required	571
STACK DATA DELETE (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) SDEL @SDEL 642	SDEL(642) TB C D TB: First stack address C: Offset value D: Destination word	Deletes the data element at the specified location in the stack and shifts the rest of the data in the stack upward. The offset value indicates the location of the deletion point (how many data elements before the current pointer position).	Output required	574

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
FRAME CHECK- SUM FCS @FCS 180	FCS(180) C R1 D C: 1st control word R1: 1st word in range D: 1st destination word	Calculates the FCS value for the specified range and outputs the value in ASCII.	Output required	608


2-2-16 Tracking Instructions


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
Unsigned One- word Record Search Instruc- tions RSRCH<-= RSRCH= RSRCH>= RSRCH>= @RSRCH>= @RSRCH<-= @RSRCH<-= @RSRCH-= @RSRCH>= 360 to 364 (CJ2 only)	Symbol C S1 S2 D1 D2 C: First control word S1: First word of first record to search S2: Search data D1: First destination word D2: Destination index register	An Unsigned One-word Record Search Instruction searches the specified table of records for a record with the specific data (1 word) in the specified location. When a record matching the specified condition is found, its record number and data are output.	Output required	618
Unsigned Twoword Record Search Instructions RSRCH2<= RSRCH2= RSRCH2>= RSRCH2>= RSRCH2>= @RSRCH2<= @RSRCH2<= @RSRCH2= @RSRCH2>= @RSRCH2>= 370 to 374 (CJ2 only)	Symbol C S1 S2 D1 D2 C: First control word S1: First word of first record to search S2: First word of search data D1: First destination word D2: Destination index register	An Unsigned Two-word Record Search Instruction searches the specified table of records for a record with the specific data (2 words) in the specified location. When a record matching the specified condition is found, its record number and data are output.	Output required	624


Instruction Mnemonic	Symbol/Operand	Function	Location	Page
Code			Execution condition	
Unsigned Fourword Record Search Instructions RSRCH4<= RSRCH4= RSRCH4>= RSRCH4>= RSRCH4>= RSRCH4>= RSRCH4>= RSRCH4= RSRCH4= RSRCH4= RSRCH4= RSRCH4>= RSRCH4>	Symbol C S1 S2 D1 D2 C: First control word S1: First word of first record to search S2: First word of search data D1: First destination word D2: Destination index register	An Unsigned Four-word Record Search Instruction searches the specified table of records for a record with the specific data (4 words) in the specified location. When a record matching the specified condition is found, its record number and data are output.	Output required	627
UNSIGNED ONE- WORD RECORD SORT RSORT @RSORT 203 (CJ2 only)	C: First control word S: First word of first record to sort D1: First word of sorting results D2: Destination index register	Sorts the records in the specified table according to the data (1 word) at the specified position in the records.	Output required	630
UNSIGNED TWO- WORD RECORD SORT RSORT2 @RSORT2 204 (CJ2 only)	C: First control word S: First word of first record to sort D1: First word of sorting results D2: Destination index register	Sorts the records in the specified table according to the data (2 words) at the specified position in the records.	Output required	634
UNSIGNED FOUR-WORD RECORD SORT RSORT4 @RSORT4 205 (CJ2 only)	RSORT4(205) C S D1 D2 C: First control word S: First word of first record to sort D1: First word of sorting results D2: Destination index register	Sorts the records in the specified table according to the data (4 words) at the specified position in the records.	Output required	637

2-2-17 Data Control Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
PID CONTROL PID 190	PID(190) S C D S: Input word C: 1st parameter word D: Output word	Executes PID control according to the specified parameters. Parameters (C to C+8) PV input (S) — PID control Manipulated variable (D)	Output Required	640
PID CONTROL WITH AUTOTUN- ING PIDAT 191 (CJ2, CS1-H, CJ1-H, or CJ1M only)	PIDAT(191) S C D S: Input word C: 1st parameter word D: Output word	Executes PID control according to the specified parameters. The PID constants can be auto-tuned with PIDAT(191).	Output required	651
LIMIT CONTROL LMT @LMT 680	LMT(680) S C D S: Input word C: 1st limit word D: Output word	Controls output data according to whether or not input data is within upper and lower limits. Upper limit C+1 Lower limit C	Output Required	658
DEAD BAND CONTROL BAND @BAND 681	BAND(681) S C D S: Input word C: 1st limit word D: Output word	Controls output data according to whether or not input data is within the dead band range. Output Lower limit (C) Upper limit (C+1)	Output Required	660

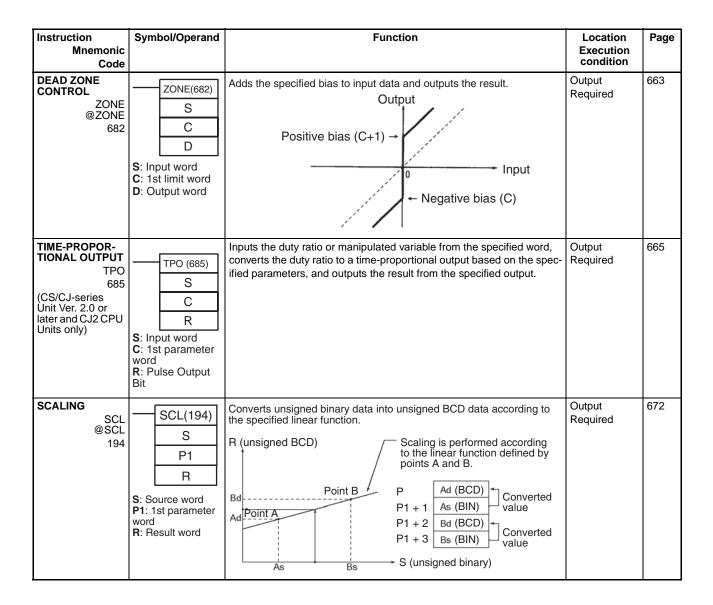

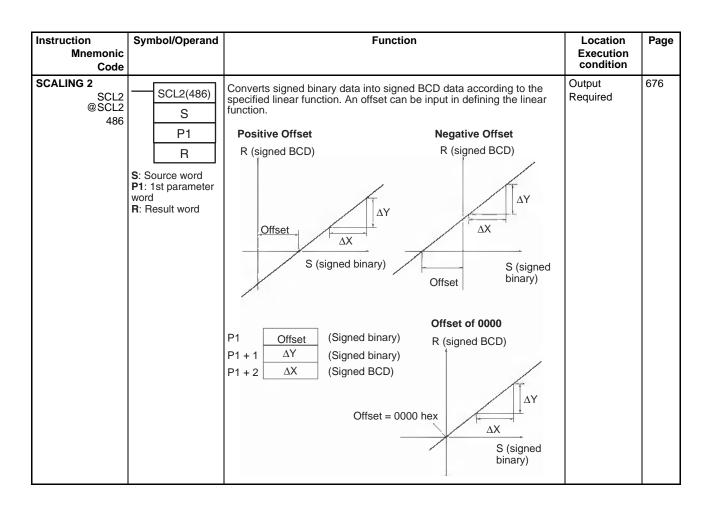

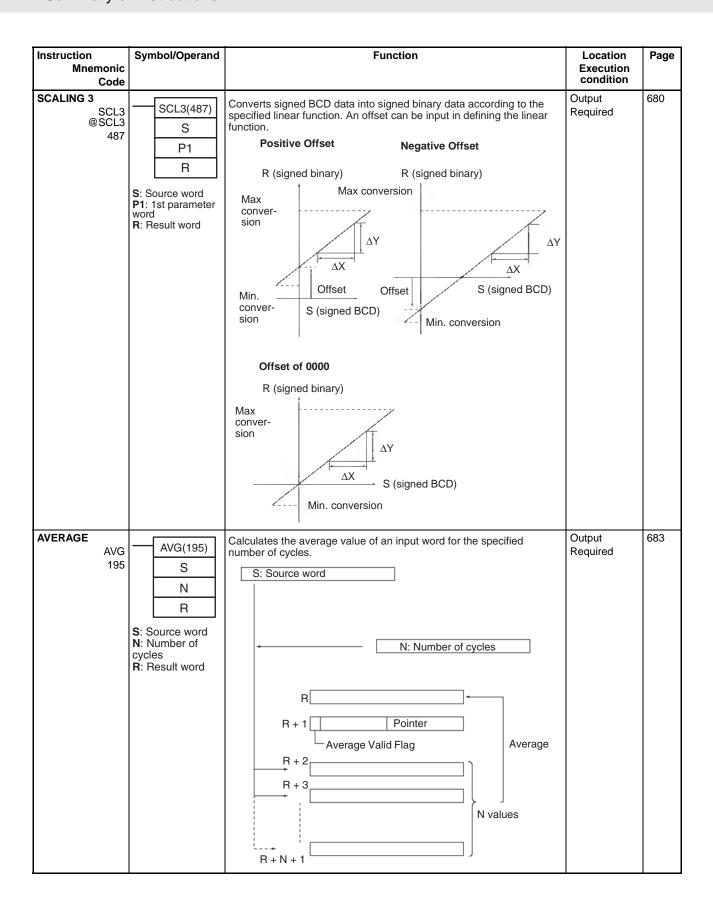


2-2-18 Subroutine Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SUBROUTINE CALL SBS @ SBS 091	SBS(091) N N: Subroutine number	Calls the subroutine with the specified subroutine number and executes that program. Execution condition ON B SBS N Main program Subroutine program (SBN(092) to RET(093)) RET Program end	Output Required	687
MACRO MCRO @MCRO 099	MCRO(099) N S D N: Subroutine number S: 1st input parameter word D: 1st output parameter word	Calls the subroutine with the specified subroutine number and executes that program using the input parameters in S to S+3 and the output parameters in D to D+3. MCRO(099) MCRO(099) Solution of subroutine between SBN(092) and REFIGORAL SECTION SIDE	Output Required	693
SUBROUTINE ENTRY SBN 092	SBN(092) N N: Subroutine number	Indicates the beginning of the subroutine program with the specified subroutine number. SBS Or N SBN Subroutine region	Output Not required	696
SUBROUTINE RETURN RET 093	RET(093)	Indicates the end of a subroutine program.	Output Not required	696
GLOBAL SUB- ROUTINE CALL (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) GSBS 750	GSBS(750) N N: Subroutine number	Calls the subroutine with the specified subroutine number and executes that program.	Output Not required	699

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
	GSBN(751) N: Subroutine number	Indicates the beginning of the subroutine program with the specified subroutine number.	Output Not required	705
GLOBAL SUB- ROUTINE RETURN (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) GRET 752	GRET(752)	Indicates the end of a subroutine program.	Output Not required	705

2-2-19 Interrupt Control Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SET INTERRUPT MASK (Not supported by CS1D CPU Units for Duplex- CPU Systems.) MSKS @MSKS 690	MSKS(690) N C N: Interrupt identifier C: Control data	Controls interrupts.	Output Required	711
	MSKR(692) N D N: Interrupt identifier D: Destination word	Reads the current interrupt processing settings that were set with MSKS(690).	Output Required	717
CLEAR INTERRUPT (Not supported by CS1D CPU Units for Duplex- CPU Systems.) CLI @CLI 691	CLI(691) N C N: Interrupt identifier C: Control data	Clears or retains recorded interrupt inputs for I/O interrupts/input interrupts or sets the time to the first scheduled interrupt for scheduled interrupts.	Output Required	722

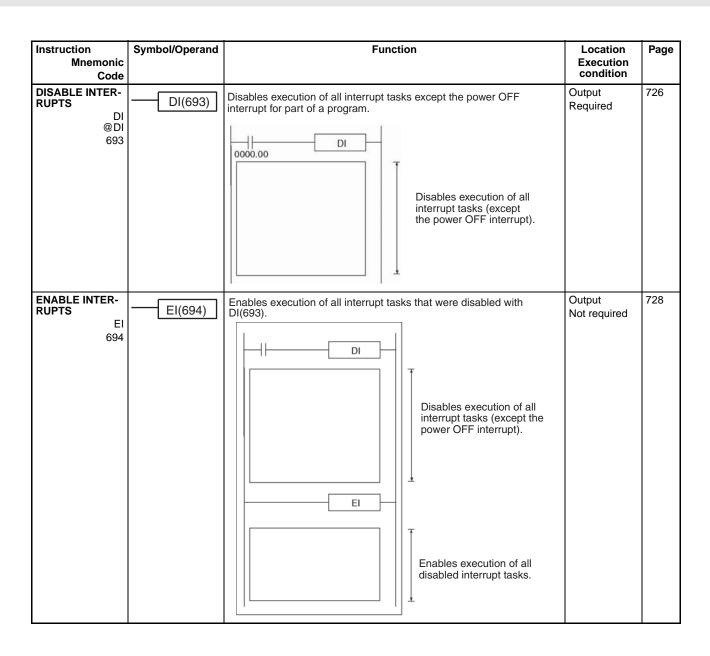

2-2-20 High-speed Counter and Pulse Output Instructions (CJ2M-CPU□□ and CJ1M-CPU21/22/23 Only)


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
MODE CONTROL INI @INI 880	P: Port specifier C: Control data NV: 1st word with new PV	INI(880) is used to start and stop target value comparison, to change the present value (PV) of a high-speed counter, to change the PV of an interrupt input (counter mode), to change the PV of a pulse output, or to stop pulse output.	Output Required	730
HIGH-SPEED COUNTER PV READ PRV @ PRV 881	PRV P C D P: Port specifier C: Control data D: 1st destination word	PRV(881) is used to read the present value (PV) of a high-speed counter, pulse output, or interrupt input (counter mode).	Output Required	736
COUNTER FRE- QUENCY CON- VERT PRV2 883 (CJ1M CPU Unit Ver. 2.0 or later and CJ2M CPU Unit Ver. 1.0 or later only)	PRV2 C1 C2 D C1: Control data C2: Pulses/revolution D: 1st destination word	Reads the pulse frequency input from a high-speed counter and either converts the frequency to a rotational speed (number of revolutions) or converts the counter PV to the total number of revolutions. The result is output to the destination words as 8-digit hexadecimal. Pulses can be input from high-speed counter 0 only.	Output Required	742
COMPARISON TABLE LOAD CTBL @ CTBL 882	CTBL P C TB P: Port specifier C: Control data TB: 1st comparison table word	CTBL(882) is used to perform target value or range comparisons for the present value (PV) of a high-speed counter.	Output Required	745
SPEED OUTPUT SPED @SPED 885	P: Port specifier M: Output mode F: 1st pulse frequency word	SPED(885) is used to specify the frequency and perform pulse output without acceleration or deceleration.	Output Required	751
SET PULSES PULS @ PULS 886	PULS P T N P: Port specifier T: Pulse type N: Number of pulses	PULS(886) is used to set the number of pulses for pulse output.	Output Required	755

Instruction	Symbol/Operand	Function	Location	Page
Mnemonic Code			Execution condition	
PULSE OUTPUT	PLS2	PLS2(887) is used to set the pulse frequency and acceleration/deceler-	Output	757
PLS2 @PLS2	PLSZ	ation rates, and to perform pulse output with acceleration/deceleration (with different acceleration/deceleration rates). Only positioning is pos-	Required	
887	<u> </u>	sible.		
	M			
	S F			
	P: Port specifier M: Output mode			
	S: 1st word of set-			
	tings table			
	F: 1st word of starting frequency			
ACCELERATION		ACC(888) is used to set the pulse frequency and acceleration/deceler-	Output	766
CONTROL	ACC P	ation rates, and to perform pulse output with acceleration/deceleration (with the same acceleration/deceleration rate). Both positioning and	Required	
@ACC	<u> </u>	speed control are possible.		
888	M S			
	P: Port specifier M: Output mode			
	S: 1st word of set-			
	tings table			
ORIGIN SEARCH ORG	ORG	ORG(889) is used to perform origin searches and returns.	Output Required	774
@ORG	Р		Required	
889	С			
	P: Port specifier			
	C: Control data			
PULSE WITH VARIABLE DUTY	PWM	PWM(891) is used to output pulses with a variable duty factor.	Output	777
FACTOR	P		Required	
PWM @	F			
891	D			
	P: Port specifier			
	F: Frequency			
	D: Duty factor			
INTERRUPT FEEDING	IFEED	IFEED(892) uses an input interrupt as a trigger to switch from speed control to position control and move the specified number of pulses.	Output Required	780
IFEED	Р	It is not necessary to create an interrupt task. (IFEED(892) is sup-	Required	
@IFEED 892	С	ported only by the CJ2M.)		
(CJ2M only)	S			
	P: Port specifier			
	C: Control Data			
	S: First word of settings table			
	counge table			

2-2-21 Step Instructions


Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
STEP DEFINE STEP 008	STEP(008) B: Bit	STEP(008) functions in following 2 ways, depending on its position and whether or not a control bit has been specified. (1)Starts a specific step. (2)Ends the step programming area (i.e., step execution).	Output Required	784
STEP START SNXT 009	SNXT(009) B B: Bit	SNXT(009) is used in the following three ways: (1)To start step programming execution. (2)To proceed to the next step control bit. (3)To end step programming execution.	Output Required	784

2-2-22 Basic I/O Unit Instructions

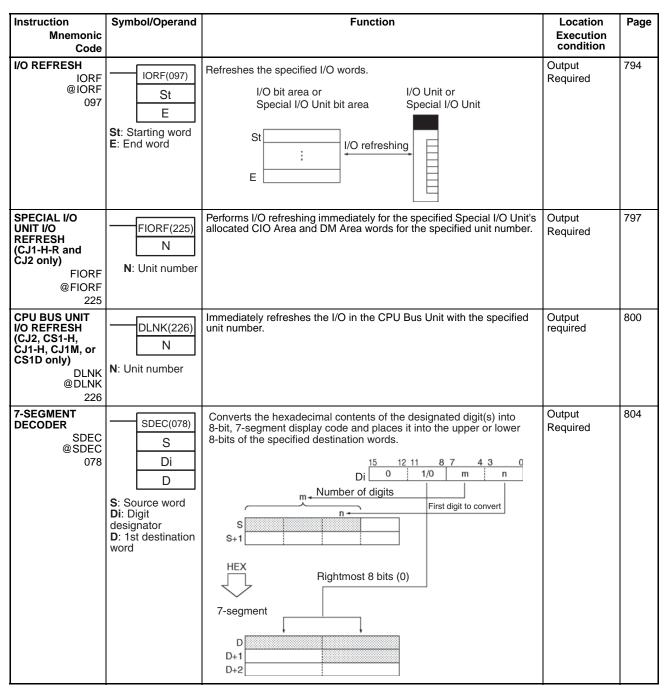

Instruction	Symbol/Operand	Function	Location	Page
Mnemonic Code			Execution condition	
DIGITAL SWITCH INPUT DSW 210 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	DSW (210) I O D C1 C2 I: Data input word (D0 to D3) O: Output word D: 1st result word C1: Number of digits C2: System word	Reads the value set on an external digital switch (or thumbwheel switch) connected to an Input Unit or Output Unit and stores the 4-digit or 8-digit BCD data in the specified words.	Output Required	807
TEN KEY INPUT TKY 211 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	TKY (211) I D1 D2 I: Data input word D1: 1st register word D2: Key input word	Reads numeric data from a ten-key keypad connected to an Input Unit and stores up to 8 digits of BCD data in the specified words.	Output Required	811
HEXADECIMAL KEY INPUT HKY 212 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	HKY (212) I O D C I: Data input word O: Output word D: 1st register word C: System word	Reads numeric data from a hexadecimal keypad connected to an Input Unit and Output Unit and stores up to 8 digits of hexadecimal data in the specified words.	Output Required	814
MATRIX INPUT MTR 213 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	MTR (213) I O D C I: Data input word O: Output word D: 1st destination word C: System word	Inputs up to 64 signals from an 8×8 matrix connected to an Input Unit and Output Unit (using 8 input points and 8 output points) and stores that 64-bit data in the 4 destination words.	Output Required	818

Instruction	Symbol/Operand	Function	Location	Page
Mnemonic Code			Execution condition	
7-SEGMENT DIS- PLAY OUTPUT 7SEG 214 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	7SEG (214) S O C D S: 1st source word O: Output word C: Control data D: System word	Converts the source data (either 4-digit or 8-digit BCD) to 7-segment display data, and outputs that data to the specified output word.	Output Required	822
ANALOG INPUT DIRECT CON- VERSION (for CJ1W-AD042) AIDC @AIDC 216	AIDC(216) N A N: Unit number A: Analog input number	Reads the input conversion value of the specified analog input number from the CJ1W-AD042 Analog Input Unit in Direct Conversion Mode.	Output Required	826
ANALOG OUT- PUT DIRECT CONVERSION (for CJ1W- DA042V) AODC @AODC 217	AODC(217) N A N: Unit number A: Analog output number	Outputs the output set value for the specified analog output number to the CJ1W-DA042V Analog Output Unit in Direct Conversion Mode.	Output Required	829
PCU HIGH- SPEED POSI- TIONING NCDMV @NCDMV 218 (CJ1W-NC □ 4 or CJ1W-NC □ 4, CJ2H CPU Unit Ver. 1.3 or later, and CJ2M only)	C: Control word A: First word of Direct Operation Command Area	Starts absolute or relative high-speed point-to-point positioning for the specified axis of a CJ1W-NC□□4 or CJ1W-NC□81 Position Control Unit.	Output Required	832
PCU POSITION- ING TRIGGER NCDTR NCDTR 219 (CJ1W-NC□81, CJ2H CPU Unit Ver. 1.3 or later, and CJ2M only)	C: Control word	Starts a sequence for Memory Operation of a CJ1W-NC□81 Position Control Unit when the start condition for the sequence is waiting for a command from NCDTR(219).	Output Required	836

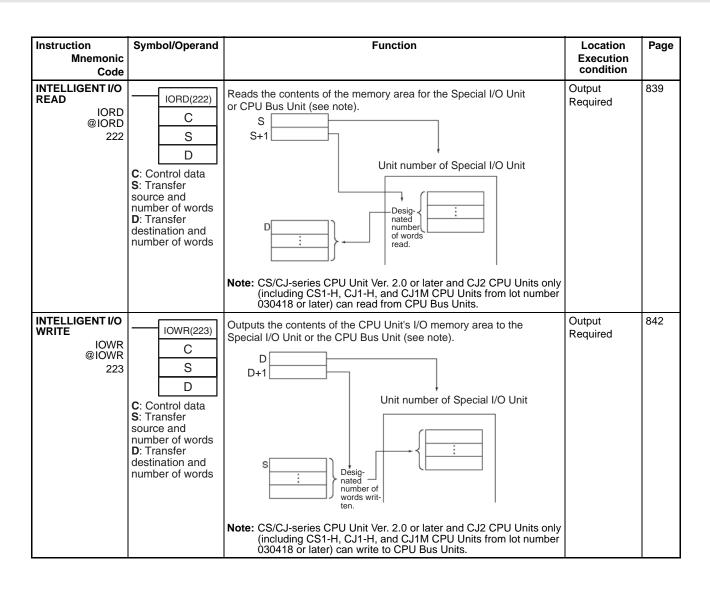


2-2-23 Serial Communications Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
PROTOCOL MACRO PMCR @PMCR 260	PMCR(260) C1 C2 S R C1: Control word 1 C2: Control word 2 S: 1st send word R: 1st receive word	Calls and executes a communications sequence registered in a Serial Communications Board (CS Series only) or Serial Communications Unit. CPU Unit Serial Communications Unit Port to External device	Output Required	848
PROTOCOL MACRO 2 PMCR2 @ PMCR2 264 (CJ2 only)	C1: Control word 1 C2: Control word 2 S: First send word R: First receive word I: First communications information word	Calls and executes a communications sequence (protocol data) registered in a Serial Communications Unit.	Output Required	899
TRANSMIT TXD @TXD 236	TXD(236) S C N S: 1st source word C: Control word N: Number of bytes 0000 to 0100 hex (0 to 256 decimal)	Outputs the specified number of bytes of data from the RS-232C port built into the CPU Unit or the serial port of a Serial Communications Board (version 1.2 or later).	Output Required	855
RECEIVE RXD @RXD 235	RXD(235) D C N D: 1st destination word C: Control word N: Number of bytes to store 0000 to 0100 hex (0 to 256 decimal)	Reads the specified number of bytes of data from the RS-232C port built into the CPU Unit or the serial port of a Serial Communications Board (version 1.2 or later).	Output Required	861

Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code TRANSMIT VIA SERIAL COMMU- NICATIONS UNIT TXDU @TXDU 256	TXDU(256) S C N S: 1st source word C: 1st control word N: Number of bytes 0000 to 0256 BCD	Outputs the specified number of bytes of data from the serial port of a Serial Communications Unit (version 1.2 or later). The data is output in no-protocol mode with the start code and end code (if any) specified in the allocated DM Setup Area.	Condition Output Required	870
RECEIVE VIA SERIAL COMMU- NICATIONS UNIT RXDU @RXDU 255	RXDU(255) D C N D: 1st destination word C: 1st control word N: Number of bytes to store 0000 to 0256 BCD	Reads the specified number of bytes of data from the serial port of a Serial Communications Unit (version 1.2 or later). The data is read in no-protocol mode with the start code and end code (if any) specified in the allocated DM Setup Area.	Output Required	876
DIRECT TRANS-MIT VIA SERIAL COMMUNICA-TIONS UNIT DTXDU @DTXDU 262 This instruction is supported only by CJ2M CPU Units and CJ2H CPU Units.	S: 1st source word C: 1st control word N: Number of bytes to store 0000 to 0256 BCD	Outputs the specified number of bytes of data from the serial port of a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. The data is output in no-protocol mode from the specified first word with the start code and end code (if any) specified in the allocated DM Setup Area. This instruction sends the data to the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data transmission.	Output Required	883
DIRECT RECEIVE VIA SERIAL COMMU- NICATIONS UNIT DRXDU @DRXDU 261 This instruction is supported only by CJ2M CPU Units and CJ2H CPU Units.	DRXDU(261) D C N D: 1st destination word C: 1st control word N: Number of bytes to store 0000 to 0256 BCD	Reads the specified number of bytes of data from the serial port of a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit to CPU Unit memory starting at the specified first word. The data is read in noprotocol mode with the start code and end code (if any) specified in the allocated DM Setup Area. This instruction reads the data from the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data reception.	Output Required	888
CHANGE SERIAL PORT SETUP STUP @ STUP 237	STUP(237) C S C: Control word (port) S: First source word	Changes the communications parameters of a serial port on the CPU Unit, Serial Communications Unit (CPU Bus Unit), or Serial Communications Board. STUP(237) thus enables the protocol mode to be changed during PLC operation.	Output Required	896

2-2-24 Network Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
NETWORK SEND SEND @SEND 090	SEND(090) S D C S: 1st source word D: 1st destination word C: 1st control word	Transmits data to a node in the network. Local node 15 0 n: No. of send words n: No.	Output Required	929
NETWORK SEND 2 SEND2 @ SEND2 491 (CJ2 only)	S: First source word D: First destination word C: First control word I: First communications information word	Sends data to a node on a network.	Output Required	935
NETWORK RECEIVE RECV @RECV 098	RECV(098) S D C S: 1st source word D: 1st destination word C: 1st control word	Requests data to be transmitted from a node in the network and receives the data. Local node Source node Source node Source node Source node	Output Required	939
NETWORK RECEIVE 2 RECV2 @RECV2 492 (CJ2 only)	S: First source word D: First destination word C: First control word I: First communications information word	Requests data to be transmitted from a node in the network and receives the data.	Output Required	944

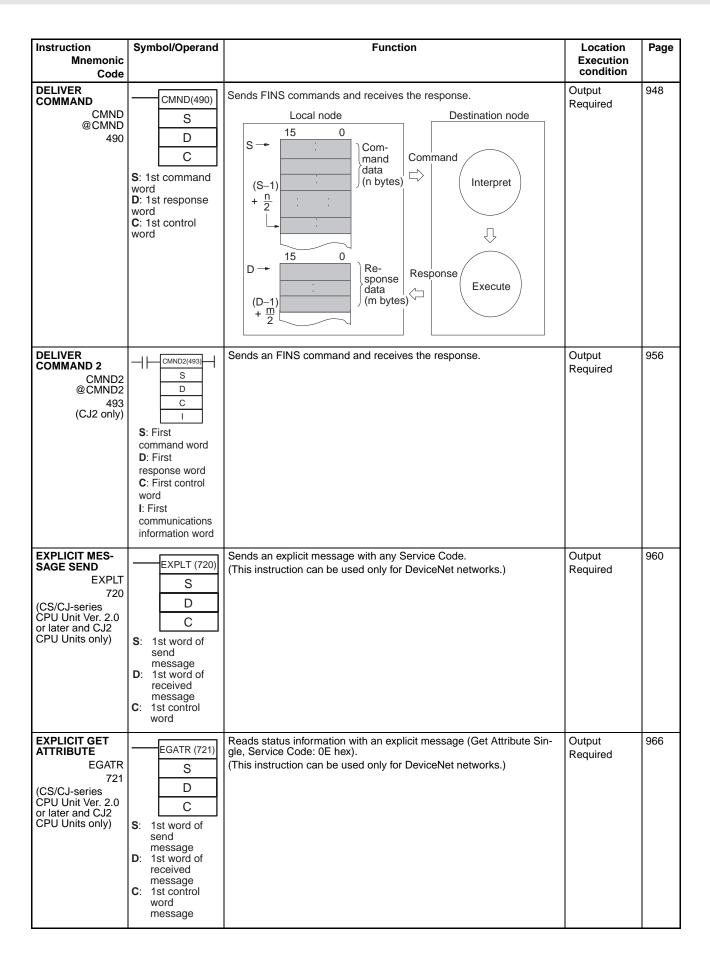

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
EXPLICIT SET ATTRIBUTE ESATR 722 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	ESATR (722) S: First word of send message C: First control word	Writes status information with an explicit message (Set Attribute Single, Service Code: 0E hex) (This instruction can be used only for DeviceNet networks.)	Output Required	971
EXPLICIT WORD READ ECHRD 723 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	S: 1st source word in remote CPU Unit D: 1st destination word in local CPU Unit C: 1st control word	Reads data to the local CPU Unit from a remote CPU Unit in the network. (The remote CPU Unit must support explicit messages.) (This instruction can be used only for DeviceNet networks.)	Output Required	975
EXPLICIT WORD WRITE ECHWR 724 (CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units only)	ECHWR (724) S D C S: 1st source word in local CPU Unit D: 1st destination word in remote CPU Unit C: 1st control word	Writes data from the local CPU Unit to a remote CPU Unit in the network. (The remote CPU Unit must support explicit messages.) (This instruction can be used only for DeviceNet networks.)	Output Required	978

2-2-25 File Memory Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
READ DATA FILE FREAD @FREAD 700	FREAD(700) C S1 S2 D C: Control word S1: 1st source word S2: Filename D: 1st destination word	Reads the specified data or amount of data from the specified data file in file memory to the specified data area in the CPU Unit. Starting read address specified in S1+2 and S1+3 Memory Card or EM file memory (Specified by the 4th digit of C.) Memory Card or EM file memory (Specified in S2 Number of words written to D and D+1. File specified in S2 CPU Unit Number of words written to D and D+1. CPU Unit CPU Unit Number of words written to D and D+1. CPU Unit Starting read address specified in S1 and S1+1 Number of words written to D and D+1. CPU Unit Starting read address specified in S2 CPU Unit Number of words written to D and D+1.	Output Required	989

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
WRITE DATA FILE FWRIT @FWRIT 701	FWRIT(701) C D1 D2 S C: Control word D1: 1st destination word D2: Filename S: 1st source word	Overwrites or appends data in the specified data file in file memory with the specified data from the data area in the CPU Unit. If the specified file doesn't exist, a new file is created with that filename. CPU Unit Starting address 15 0 specified in D1 specified in D1 and D1+1 Overwrite Memory Card or EM file memory (Specified in D2 Existing address 15 0 specified in D1 and D1+1 Append Memory Card or EM file memory (Specified in D2 Existing data specified in D1 and D1+1 Append Memory Card or EM file memory (Specified by the 4 th digit of C.) CPU Unit Starting address 15 0 specified in D1 and D1+1 Append Memory Card or EM file memory (Specified by the 4 th digit of C.) Memory Card or EM file memory (Specified by the 4 th digit of C.) Memory Card or EM file memory (Specified in D2 specified in D1 and D1+1 and D1+1) Memory Card or EM file memory (Specified by the 4 th digit of C.)	Output Required	994
WRITE TEXT FILE TWRIT @TWRIT 704 (CS/CJ-series CPU Units with unit version 4.0 or later and CJ2 CPU Units only)	TWRIT C S1 S2 S3 S4 C: Control word S1: Number of bytes to write S2: Directory and file name S3: Write data S4: Delimiter	Reads ASCII data from I/O memory and stores that data in the Memory Card as a text file (writing a new file or appending a file). The data is stored in the TXT format.	Output Required	1000

2-2-26 Display Instructions

Instruction Mnemonic Code		Function	Location Execution condition	Page
DISPLAY MESSAGE MSG @MSG 046	IN	Reads the specified sixteen words of extended ASCII and displays the message on a Peripheral Device such as a Programming Console.	Output Required	1005

2-2-27 Clock Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
CALENDAR ADD CADD @CADD 730	CADD(730) C T R C: 1st calendar word T: 1st time word R: 1st result word	Adds time to the calendar data in the specified words. 15 8 7 0 C CH1 Day Hour C+2 Year Month + 15 8 7 0 T Minutes Seconds T+1 Hours 15 8 7 0 Minutes Seconds T+1 Hours 15 8 7 0 Minutes Seconds TH1 Hours	Output Required	1008
CALENDAR SUBTRACT CSUB @CSUB 731	CSUB(731) C T R C: 1st calendar word T: 1st time word R: 1st result word	Subtracts time from the calendar data in the specified words. 15 8 7 0 C Minutes Seconds Day Hour C+2 Month	Output Required	1008
HOURS TO SECONDS SEC @SEC 065	SEC(065) S: 1st source word D: 1st destination word	Converts time data in hours/minutes/seconds format to an equivalent time in seconds only. 15 0 Minutes Seconds Hours 15 0 D D+1 Seconds —	Output Required	1013

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SECONDS TO HOURS HMS @HMS 066	HMS(066) S D S: 1st source word D: 1st destination word	Converts seconds data to an equivalent time in hours/minutes/ seconds format. 15 0 S S+1 Seconds 0 D Minutes Seconds Hours	Output Required	1015
CLOCK ADJUSTMENT DATE @DATE 735	DATE(735) S: 1st source word	Changes the internal clock setting to the setting in the specified source words. CPU Unit New S1 Minutes Seconds Day Hour Year Month 00 Day of week	Output Required	1017

2-2-28 Debugging Instructions

Instruction Mnemonic Code	Function	Location Execution condition	Page
TRACE MEMORY SAMPLING TRSM 045	 When TRSM(045) is executed, the status of a preselected bit or word is sampled and stored in Trace Memory. TRSM(045) can be used anywhere in the program, any number of times.	Output Not required	1019

2-2-29 Failure Diagnosis Instructions


Instruction Mnemonic	Symbol/Operand	Function	Location Execution	Page
Code			condition	
FAILURE ALARM FAL @FAL 006	FAL(006) N S N: FAL number S: 1st message word or error code to generate	Generates or clears user-defined non-fatal errors. Non-fatal errors do not stop PC operation. Also generates non-fatal errors with the system. Execution of FAL(006) generates a non-fatal error with FAL number N. Execution of FAL(006) generates a non-fatal error with FAL number N. Execution of FAL(006) Generates a non-fatal error with FAL number N. Execution of FAL(006) Generates a non-fatal error code written to A400 Error code and time written to Error Log Area Message displayed on Programming Console	Output Required	1022
SEVERE FAILURE ALARM FALS 007	FALS(007) N S N: FALS number S: 1st message word or error code to generate	Generates user-defined fatal errors. Fatal errors stop PC operation. Also generates fatal errors with the system. FALS Fror Flag ON Error code written to A400 Error code and time/date written to Error Log Area fatal error with FALS number N. ERR Indicator lit Message displayed on Programming Console	Output Required	1029
FAILURE POINT DETECTION FPD 269	FPD(269) C T R C: Control word T: Monitoring time R: 1st register word	Diagnoses a failure in an instruction block by monitoring the time between execution of FPD(269) and execution of a diagnostic output and finding which input is preventing an output from being turned ON. Time monitoring function: Starts timing when execution condition A goes ON. Generates a non-fatal error if output B isn't turned ON within the monitoring time. Execution Condition A C T Error-processing Block (optional) Logic diagnosis block* Logic diagnosis function Determines which input in C prevents output B from going ON.	Output Required	1035


2-2-30 Other Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
SET CARRY STC @STC 040	STC(040)	Sets the Carry Flag (CY).	Output Required	1043
CLEAR CARRY CLC @CLC 041	CLC(041)	Turns OFF the Carry Flag (CY).	Output Required	1043
SELECT EM BANK EMBC @EMBC 281	EMBC(281) N N: EM bank number	Changes the current EM bank.	Output Required	1044
EXTEND MAXIMUM CYCLE TIME WDT @WDT 094	WDT(094) T T: Timer setting	Extends the maximum cycle time, but only for the cycle in which this instruction is executed.	Output Required	1046
SAVE CONDITION FLAGS (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) CCS @CCS 282	CCS(282)	Saves the status of the condition flags.	Output Required	1048
LOAD CONDITION FLAGS (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) CCL @CCL 283	CCL(283)	Reads the status of the condition flags that was saved.	Output Required	1048
CONVERT ADDRESS FROM CV (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) FRMCV @FRMCV 284	FRMCV(284) S D S: Word containing CV-series memory address D: Destination Index Register	Converts a CV-series PLC memory address to its equivalent CS/CJ-series PLC memory address.	Output Required	1051
CONVERT ADDRESS TO CV (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only) TOCV @TOCV 285	TOCV(285) S D S: Index Register containing CS-series memory address D: Destination word	Converts a CS/CJ-series PLC memory address to its equivalent CV-series PLC memory address.	Output Required	1055

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
DISABLE PERIPHERAL SERVICING (CS1D CPU Units for Single-CPU Systems, CJ2, CS1-H, CJ1-H, or CJ1M only) IOSP @IOSP 287	IOSP(287)	Disables peripheral servicing during program execution in one of the Parallel Processing Modes or Peripheral Servicing Priority Mode.	Output Required	1058
ENABLE PERIPHERAL SERVICING (CS1D CPU Unit for Single-CPU Systems, CJ2, CS1-H, CJ1-H, or CJ1M only) IORS 288	IORS(288)	Enables peripheral servicing that was disabled by IOSP(287) for program execution in one of the Parallel Processing Modes or Peripheral Servicing Priority Mode.	Output Not required	1058


2-2-31 Block Programming Instructions

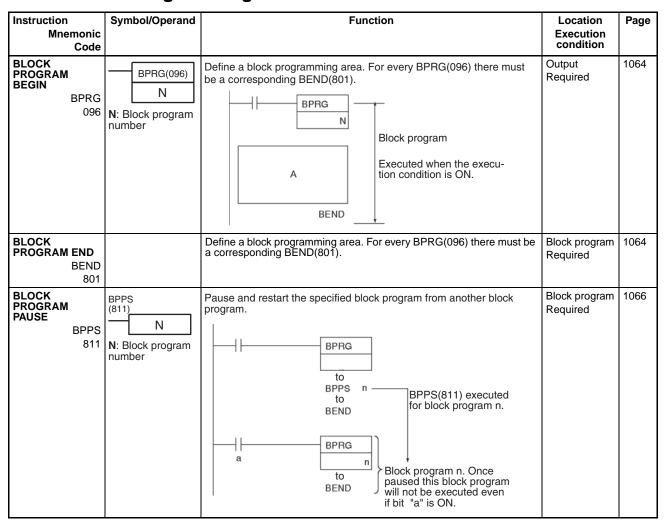

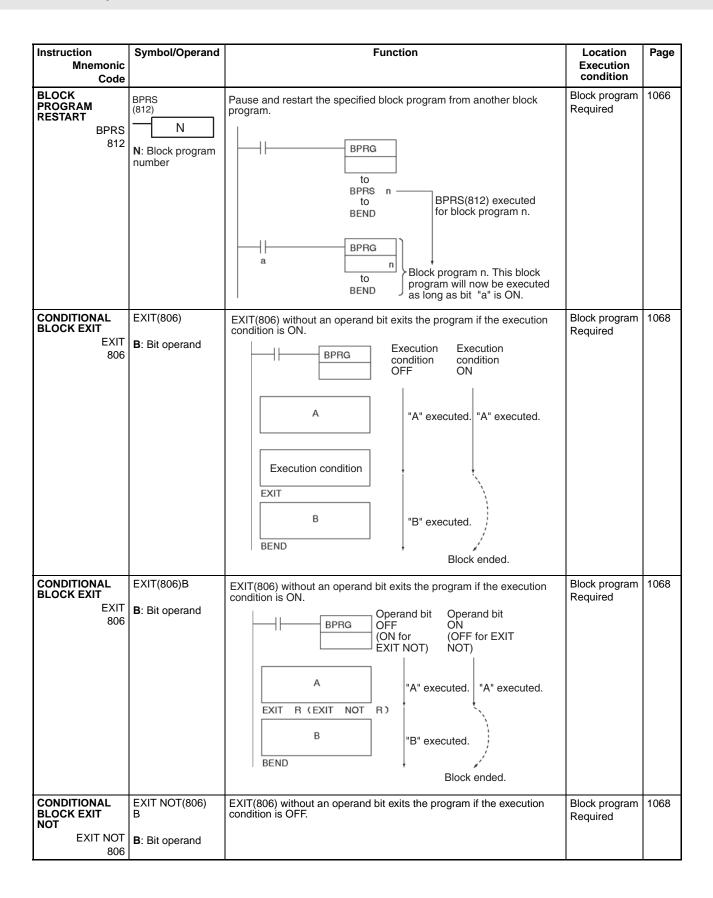

Instruction	Symbol/Operand	Function	Location	Page
Mnemonic Code	Symbol/Operand	Function	Execution condition	raye
CONDITIONAL BLOCK BRANCHING IF 802	IF (802)	If the execution condition is ON, the instructions between IF(802) and ELSE(803) will be executed and if the execution condition is OFF, the instructions between ELSE(803) and IEND(804) will be executed. Execution condition IF A "A" executed (between IF and ELSE). B IEND IEND IEND	Block program Required	1070
CONDITIONAL BLOCK BRANCHING IF 802	IF (802) B B: Bit operand	If the operand bit is ON, the instructions between IF(802) and ELSE(803) will be executed. If the operand bit is OFF, the instructions between ELSE(803) and IEND(804) will be executed. IF R (IF NOT R) Which is only in the instructions between IF(802) and ELSE is only in the instructions between IF, and it is of the instr	Block program Required	1070
CONDITIONAL BLOCK BRANCHING (NOT) IF NOT 802	IF (802) NOT B	The instructions between IF(802) and ELSE(803) will be executed and if the operand bit is ON, the instructions be ELSE(803) and IEND(804) will be executed is the operand bit is OFF.	Block program Required	1070
CONDITIONAL BLOCK BRANCHING (ELSE) ELSE 803		If the ELSE(803) instruction is omitted and the operand bit is ON, the instructions between IF(802) and IEND(804) will be executed	Block program Required	1070
CONDITIONAL BLOCK BRANCHING END IEND 804		If the operand bit is OFF, only the instructions after IEND(804) will be executed.	Block program Required	1070

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
ONE CYCLE AND WAIT WAIT 805	WAIT(805)	If the execution condition is ON for WAIT(805), the rest of the instruction in the block program will be skipped. Execution Execution Execution condition Condition OFF OFF	Block program Required	1073
		Execution condition WAIT B BEND C C Wait "A" executed. "B" executed. "C" executed. "C" executed. Wait		
ONE CYCLE AND WAIT WAIT 805	WAIT(805) B B: Bit operand	If the operand bit is OFF (ON for WAIT NOT(805)), the rest of the instructions in the block program will be skipped. In the next cycle, none of the block program will be executed except for the execution condition for WAIT(805) or WAIT(805) NOT. When the execution condition goes ON (OFF for WAIT(805) NOT), the instruction from WAIT(805) or WAIT(805) NOT to the end of the program will be executed.	Block program Required	1073
ONE CYCLE AND WAIT (NOT) WAIT NOT 805	WAIT(805) NOT B	If the operand bit is OFF (ON for WAIT NOT(805)), the rest of the instructions in the block program will be skipped. In the next cycle, none of the block program will be executed except for the execution condition for WAIT(805) or WAIT(805) NOT. When the execution condition goes ON (OFF for WAIT(805) NOT), the instruction from WAIT(805) or WAIT(805) NOT to the end of the program will be executed.	Block program Required	1073
HUNDRED-MS TIMER WAIT TIMW 813 (BCD) TIMWX 816 (Binary) (CJ2, CS1-H, CJ1-H, CJ1M, or CS1D only)	TIMW(813) N SV N: Timer number SV: Set value TIMWX(816) N SV N: Timer number SV: Set value	Delays execution of the block program until the specified time has elapsed. Execution continues from the next instruction after TIMW(813)/TIMWX(816) when the timer times out. SV: 0 to 999.9 s for BCD and 0 to 6,553.5 s for binary A TIMW N SV	Block program Required	1076

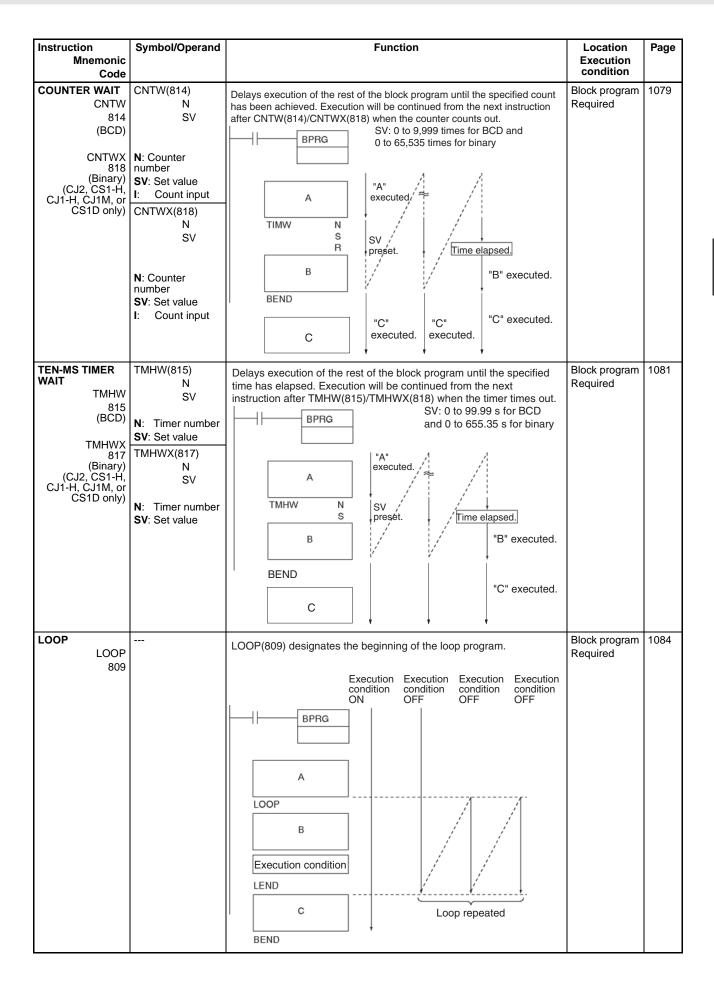

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
LEND LEND 810	LEND (810)	LEND(810) or LEND(810) NOT specifies the end of the loop. When LEND(810) or LEND(810) NOT is reached, program execution will loop back to the next previous LOOP(809) until the operand bit for LEND(810) or LEND(810) NOT turns ON or OFF (respectively) or until the execution condition for LEND(810) turns ON.	Block program Required	1084
LEND 810	LEND (810) B B: Bit operand	If the operand bit is OFF for LEND(810) (or ON for LEND(810) NOT), execution of the loop is repeated starting with the next instruction after LOOP(809). If the operand bit is ON for LEND(810) (or OFF for LEND(810) NOT), the loop is ended and execution continues to the next instruction after LEND(810) or LEND(810) NOT. Operand Operand Operand Operand Dit OFF bit OFF BPRG BPRG LEND R (LEND NOT R) Loop repeated Note The status of the operand bit would be reversed for LEND(810) NOT.	Block program Required	1084
LEND NOT LEND NOT 810	LEND(810) NOT B : Bit operand	LEND(810) or LEND(810) NOT specifies the end of the loop. When LEND(810) or LEND(810) NOT is reached, program execution will loop back to the next previous LOOP(809) until the operand bit for LEND(810) or LEND(810) NOT turns ON or OFF (respectively) or until the execution condition for LEND(810) turns ON.	Block program Required	1084

2-2-32 Text String Processing Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
MOV STRING MOV\$ @MOV\$ 664	MOV\$(664) S D S: 1st source word D: 1st destination word	Transfers a text string. S A B C D E F G NUL D A B C D E F G NUL	Output Required	1089
CONCATENATE STRING +\$ @+\$ 656	+\$(656) S1 S2 D S1: Text string 1 S2: Text string 2 D: First destination word	Links one text string to another text string. $S1 \rightarrow \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	1090
GET STRING LEFT LEFT\$ @LEFT\$ 652	S1: Text string first word S2: Number of characters D: First destination word	Fetches a designated number of characters from the left (beginning) of a text string. S1 A B C D NUL NUL NUL NUL NUL	Output Required	1092
GET STRING RIGHT RGHT\$ @RGHT\$ 653	RGHT\$(653) S1 S2 D S1: Text string first word S2: Number of characters D: First destination word	Reads a designated number of characters from the right (end) of a text string. S1 A B C D G NUL F F G NUL	Output Required	1092
GET STRING MIDDLE MID\$ @MID\$ 654	MID\$(654) S1 S2 S3 D S1: Text string first word S2: Number of characters S3: Beginning position D: First destination word	Reads a designated number of characters from any position in the middle of a text string. $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	1095

Instruction	Symbol/Operand	Function	Location	Page
Mnemonic Code			Execution condition	
FIND IN STRING FIND @FIND\$ 660	FIND\$(660) S1 S2 D S1: Source text string first word S2: Found text string first word D: First destination word	Finds a designated text string from within a text string. Found data S1 \rightarrow A B \rightarrow S2 \rightarrow C NUL D \rightarrow 00 03 E F \rightarrow NUL NUL	Output Required	1097
STRING LENGTH LEN\$ @ LEN\$ 650	LEN\$(650) S D S: Text string first word D: 1st destination word	Calculates the length of a text string. $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	1099
REPLACE IN STRING RPLC\$ @RPLC\$ 661	RPLC\$(654) S1 S2 S3 S4 D S1: Text string first word S2: Replacement text string first word S3: Number of characters S4: Beginning position D: First destination word	Replaces a text string with a designated text string from a designated position. S1	Output Required	1101
DELETE STRING DEL\$ @DEL\$ 658	DEL\$(658) S1 S2 S3 D S1: Text string first word S2: Number of characters S3: Beginning position D: First destination word	Deletes a designated text string from the middle of a text string. Number of characters to be deleted (designated by S2). S1 → A B C D H I NUL NUL S3 00 05	Output Required	1103
EXCHANGE STRING XCHG\$ @XCHG\$ 665	XCHG\$(665) Ex1 Ex2 Ex1: 1st exchange word 1 Ex2: 1st exchange word 2	Replaces a designated text string with another designated text string. Ex1 A B NUL	Output Required	1105

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
CLEAR STRING CLR\$ @CLR\$ 666	CLR\$(666) S S: Text string first word	Clears an entire text string with NUL (00 hex). $S \rightarrow \begin{array}{c c} A & B \\ \hline C & D \\ \hline NUL & NUL \\ \hline \end{array} \qquad \begin{array}{c c} S \rightarrow \begin{array}{c c} NUL & NUL \\ \hline NUL & NUL \\ \hline NUL & NUL \\ \hline \end{array}$	Output Required	1107
INSERT INTO STRING INS\$ @INS\$ 657	INS\$(657) S1 S2 S3 D S1: Base text string first word S2: Inserted text string first word S3: Beginning position D: First destination word	Deletes a designated text string from the middle of a text string. $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Output Required	1109
String Comparison LD, AND, OR + =\$, <>\$, <=\$,	Symbol S1 S2 AND Symbol S1 S2 OR Symbol S1 S2 OR Symbol S1 S2 S1: Text string 1 S2: Text string 2	Sting comparison instructions (=\$, <>\$, <\$, <\$, >\$, >=\$) compare two text strings from the beginning, in terms of value of the ASCII codes. If the result of the comparison is true, an ON execution condition is created for a LOAD, AND, or OR.	LD: Not required AND, OR: Required	1111

2-2-33 Task Control Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
TASK ON TKON @TKON 820	TKON(820) N N: Task number	Makes the specified task executable. The specified task's task number is higher than the local task's task number (m <n). becomes="" cycle.="" cycle.<="" executable="" in="" m="" n="" recomes="" task="" td="" that="" tkon=""><td>Output Required</td><td>1116</td></n).>	Output Required	1116
TASK OFF TKOF @TKOF 821	TKOF(821) N N: Task number	Puts the specified task into standby status. The specified task's task number is higher than the local task's task number is lower than the local task's task number (m <n). m="" m<="" task="" td=""><td>Output Required</td><td>1116</td></n).>	Output Required	1116

2-2-34 Model Conversion Instructions (CPU Unit Ver. 3.0 or Later and CJ2 CPU Units Only)

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
BLOCK TRANSFER XFERC @XFERC 565	XFERC(565) N S D N: Number of words S: 1st source word D: 1st destination word	Transfers the specified number of consecutive words. $ S = $	Output Required	1122
SINGLE WORD DISTRIBUTE DISTC @DISTC 566	Bs Of S: Source word Bs: Destination base address Of: Offset	Transfers the source word to a destination word calculated by adding an offset value to the base address. Can also write to a stack (Stack Push Operation). S Bs Of n Bs+n	Output Required	1124
DATA COLLECT COLLC @COLLC 567	Bs: Source base address Of: Offset D: Destination word	Transfers the source word (calculated by adding an offset value to the base address) to the destination word. Can also read data from a stack in FIFO or LIFO order (Stack Read Operation). Bs Bs+n D	Output Required	1127
MOVE BIT MOVBC @MOVBC 568	MOVBC(568) S C D S: Source word or data C: Control word D: Destination word	Transfers the specified bit.	Output Required	1130
BIT COUNTER BCNTC @BCNTC 621	BCNTC(621) N S R N: Number of words (BCD) S: 1st source word R: Result word	Counts the total number of ON bits in the specified word(s). S N words Counts the number of ON bits. BCD result	Output Required	1132

2-2-35 Special Function Block Instructions

Instruction Mnemonic Code		Function	Location Execution condition	Page
GET VARIABLE ID GETID @GETID 286	3	Outputs the FINS command variable type (data area) code and word address for the specified variable or address. This instruction is generally used to get the assigned address of a variable in a function block.	Output Required	1134

2-2-36 SFC Instructions

Instruction Mnemonic Code	Symbol/Operand	Function	Location Execution condition	Page
STEP ACTIVATE SA @SA 784 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	SA(784) D	Makes the specified step or subchart active to start execution of the actions.	Output Required	1138
STEP DEACTIVATE SE @SE 785 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	SE(785) D	Makes the specified step of subchart inactive to end execution of the actions.	Output Required	1138
READ SET TIMER TSR @TSR 780 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	TSR(780) S D	The present value of the Step Time specified by S is stored starting at D.	Output Required	1140
SET STEP TIMER TSW @TSW 781 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	TSW(781) S D	The present value of the Step Timer specified by S is changed to the value specified starting at D.	Output Required	1140
SFC ON SFCON 789 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	N: SFC task	Restarts execution of an SFC task that was ended or paused using one of the other SFC Task Control Instructions.	Output Required	1142
SFC OFF SFCOFF 790 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	SFCOFF(790) N N: SFC task number	Ends execution of an SFC task. The status of all outputs is held. When execution of the SFC task is restarted, it is executed from the initial step.	Output Required	1142
SFC PAUSE WITH RESET SFCPR 793 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	SFCPR(793) N: SFC task number	Pauses execution of an SFC task. The status of all outputs is reset. When execution of a paused task is restarted, execution will start from the step that was active when the task was paused.	Output Required	1144
SFC PAUSE WITH NO RESET SFCPRN 791 (CS/CJ Unit Ver. 4.0 or later, CJ2 only)	N: SFC task	Pauses execution of an SFC task. The status of all outputs is held. When execution of a paused task is restarted, execution will start from the step that was active when the task was paused.	Output Required	1144

2. Summary of Instructions

SECTION 3 Instructions

This section describes each of the instructions that can be used in programming NSJ/CS/CJ-series PLCs. Instructions are described in order of function, as classified in *Section 2 Summary of Instructions*.

Notation and Layout of Instruction Descriptions
Sequence Input Instructions
LD/LD NOT
AND/AND NOT. 14
OR/OR NOT
AND LD/OR LD14
NOT
UP/DOWN
LD TST/LD TSTN
AND TST/AND TSTN. 15
OR TST/OR TSTN
Sequence Output Instructions
OUT/OUT NOT
TR
KEEP
DIFU
DIFD
SET/RSET
SETA/RSTA
SETB/RSTB
OUTB
Sequence Control Instructions
END
NOP
IL/ILC
MILH/MILR/MILC
JMP/JME
CJP/CJPN
JMP0/JME0
FOR/NEXT
BREAK
Timer and Counter Instructions
TIM/TIMX
TIMH/TIMHX
TMHH/TMHHX
TIMU/TIMUX
TMUH/TMUHX
TTIM/TTIMX
TIML/TIMLX
MTIM/MTIMX24
CNT/CNTX
CNTR/CNTRX24
CNR/CNRX
TRSET
Comparison Instructions
=, <>, <, <=, >, >=
=DT, <>DT, <dt, <="DT,">DT, >=DT</dt,>
CMP/CMPL
CPS/CPSL
MCMP
TCMP

	BCMP
	BCMP2
	ZCP/ZCPL
Data M	ovement Instructions
	MOV/MOVL
	MVN/MVNL
	MOVB
	MOVD
	XFRB
	XFER
	BSET.
	XCHG/XCGL.
	DIST
	COLL
	MOVR/MOVRW
Data Cl	
Data Si	nift Instruction
	SFT
	SFTR
	ASFT
	WSFT
	ASL/ASLL
	ASR/ASRL
	ROL/ROLL
	RLNC/RLNL
	ROR/RORL
	RRNC/RRNL
	SLD/SRD
	NSFL/NSFR
	NASL/NSLL
	NASR/NSRL
Increme	ent/Decrement Instructions
	++/++L
	/L
	++B/++BL
	++/++ <u>L</u>
Symbol	Math Instructions
	+/+L
	+C/+CL
	+B/+BL
	+BC/+BCL
	-/-L
	-C/-CL
	-B/-BL
	-BC/-BCL
	*/*L
	*U/*UL
	*B/*BL
	/, /L
	/U. /UL
	,
Com	/B, /BL
Conver	sion Instructions.
	BIN/BINL
	BCD/BCDL
	NEG/NEGL
	SIGN
	MLPX
	DMPX
	ASC
	HEX
	LINE

COLM	. 412
BINS/BISL	
BCDS/BDSL	
GRY	
GRAY_BIN/GRAY_BINL	
BIN_GRAY/BIN_GRAYL	
STR4/STR8/STR16	
NUM4/NUM8/NUM16	
Logic Instructions	
ANDW/ANDL	
ORW/ORWL	
XORW/XORL	
XNRW/XNRL	. 444
COM/COML	. 446
Special Math Instructions	. 448
ROTB	. 448
ROOT	. 450
APR	. 453
FDIV	
BCNT	
Floating-point Math Instructions	
Floating-point Math Instructions	
FIX/FIXL	
FLT/FLTL	
+F, -F, *F, /F.	
RAD	
DEG	
SIN/COS/TAN	
SINQ/COSQ/TANQ.	
ASIN/ACOS/ATAN	
SQRT	
· ·	
EXP	
LOG	
PWR	
=F, <>F, <f, <="F,">F, >=F</f,>	
FSTR	
FVAL	
MOVF	
Double-precision Floating-point Instructions	
Double-precision Floating-point Instructions.	. 515
FIXD/FIXLD	. 521
DBL/DBLL	
+D, -D, *D, /D	. 525
RADD	. 528
DEGD	. 530
SIND/COSD/TAND	
ASIND/ACOSD/ATAND	
SQRTD	
EXPD	
LOGD	
PWRD.	
=D, <>D, <d, <="D,">D, >=D.</d,>	
Table Data Processing Instructions	
Table Data Processing Instructions.	
SSET	
PUSH	
LIFO/FIFO	
SNUM	
SREAD	
SWRIT	. 568

	SINS
	SDEL
	DIM
	SETR
	GETR
	SRCH
	SWAP
	MAX/MIN
	MAXL
	MAXF
	MAXD
	MINL
	MINF
	MIND
	SUM
	FCS
Trackii	ng Instructions
	Tracking Instructions
	RSRCH<, RSRCH<=, RSRCH=, RSRCH>, RSRCH>=
	RSRCH2<, RSRCH2<=, RSRCH2=, RSRCH2>, RSRCH2>=
	RSRCH4<, RSRCH4<=, RSRCH4=, RSRCH4>, RSRCH4>=
	RSORT
	RSORT2
	RSORT4
Data C	ontrol Instructions
Data C	
	PID
	PIDAT
	LMT
	BAND
	ZONE
	TPO
	SCL
	SCL2
	SCL3
	AVG
Subrou	tines
	Subroutine instruction.
	SBS
	MCRO.
	SBN/RET
	GSBS
т.,	GSBN/GRET
Interru	pt Control Instructions
	Interrupt Control Instructions
	MSKS
	MSKR
	CLI
	DI
	EI
High-s	peed Counter/Pulse Output Instructions
	INI
	PRV.
	PRV2.
	CTBL
	SPED.
	PULS.
	PLS2
	ACC
	ORG
	PWM

Step Instructions	783
Step Instructions	783
SNXT/STEP	784
Basic I/O Unit Instructions	794
IORF	794
FIORF	797
DLNK	800
SDEC	804
DSW	807
TKY	811
HKY	814
MTR	818
7SEG	822
IORD	839
IOWR	842
Serial Communications Instructions	845
Serial Communications Instructions	845
PMCR	848
TXD	855
RXD	861
TXDU	870
RXDU	876
STUP	896
PMCR2	899
Network Instructions	905
Network Instructions	905
SEND	929
SEND2	935
RECV	939
RECV2	944
CMND	948
CMND2	956
EXPLT	960
EGATR	966
ESATR	971
ECHRD	975
ECHWR	978
File Memory Instructions	981
File Memory Instructions	981
FREAD	989
FWRIT	994
TWRIT	1000
Display Instructions	1005
MSG	1005
Clock Instructions	1008
CADD/CSUB	1008
SEC	1013
HMS	1015
DATE	1017
Debugging Instructions	1019
TRSM	1019
Failure Diagnosis Instructions.	1022
FAL	1022
FALS	1029
FPD	1035
Other Instructions	1043
STC/CLC	1043
EMBC	1044
WDT	1046
CCS/CCL	1048

FRI	MCV
	CV
	SP/IORS
	amming Instructions
	ck Programming Instructions
	RG/BEND
	PS/BPRS
	IT/EXIT NOT
	F NOT/ELSE/IEND
	IT/WAIT NOT
	/W/TIMWX
	TW/CNTWX.
	HW/TMHWX
	OP/LEND/LEND NOT
_	Processing Instructions.
	t String Processing Overview
	V\$
	FT\$/RGHT\$
	O\$
	ID\$
	N\$
RPI	LC\$
DE:	L\$
XC	HG\$
CL	R\$
INS	\$\$
=\$,	, <>\$, <\$, <=\$, >\$, >=\$
Task Control	Instructions
TK	ON/TKOF
	ersion Instructions
	del Conversion Instructions.
	ERC
	TC
	LLC
	VBC
	NTC
	etion Block Instructions
	TID
	ions
	Control Instructions
	C Task Control Instruction
	SE
	R/TSW
	CON/SFCOFF
SFC	CPR/SFCPRN

Notation and Layout of Instruction Descriptions

Instructions are described in groups by function. Refer to Appendix A List of Instructions by Function Code for a list of instructions by mnemonic that lists the page number in this section for each instruction.

The description of each instruction is organized as described in the following table.

Item									Conte	nts								
Instruction	Indicates th	e name	of th	ne ins	struc	tion.	Exar	nple	MOVI	E BIT								
Mnemonic	Indicates th Example: M).														
Variations	@ Inst % Inst Immediate ! Ref	Instruction (mnemonic) Differentiation variation Immediate refresh variation																
Function code	Indicates th	Indicates the function code.																
Function	The basic p	urpose	of th	e ins	truc	tion is	s des	cribe	ed afte	r the s	ection	head	ding.					
Symbol		The ladder symbol used to represent the instruction on the CX-Programmer is shown, as in the example for the MOVE BIT instruction given below. The name of each operand is also provided with the ladder symbol. MOVB																
Applicable Program Areas	The program	on can	be u		the i	instru	ction	can	be use	ed are	specif	ied. "	OK"	indicate				
	Area 	Function blo definitions OK		Block		am area	s Ste		ram areas	S	OK	s	In	OK	5		ion or tra rograms OK	
Operands	Where necessiven.	Indicates a description of the operand, the data type, and the size. Where necessary, the meaning of words and bits used in specific operands, such as control words, is given.																
Operand Specifications	The memor The letters "" is used	used in	the c	olum	n he	eadin	gs or	the	above	are th	e sam	e as	thos				_	•
	Area —		١	Nord ad	Idress	es			addre	DM/EM esses	Con-		Regis		Fla	ags	Pulse	TR
	S	CIO WR	HR	AR	T	C	DM	EM	@DM @EM	*DM *EM	stants OK	DR	IR	Indirect using IR	тк	CF	bits	bits
	C	OK OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Item			Contents									
Flags	The flags table indicates the status of the condition flags immediately after execution of the instruction Any flags that are not listed are not affected by the instruction. "OFF" indicates that a flag is turned OF immediately after execution of the instruction regardless of the results of executing the instruction. Name Label Operation											
	Name	Operation										
	Error Flag	ER	OFF									
	Equal Flag = ON if the data being transferred (D) is 0. OFF in all other cases.											
	Negative Flag N ON if the leftmost bit of the data being transferred (D) is 1. OFF in all other cases.											
Function	Indicates the function	of the instru	ction.									
Hint	Indicates a suppleme	ntal explanat	tion of other than the main function.									
Precautions	Indicates important pe	Indicates important points when using an instruction.										
Example Programming	One or more example function of the instruc	•	e instruction with specific operands is provided to further explain the									

Constants

Constants input for operands are given as listed below.

Operand Descriptions and Operand Specifications

- Operands Specifying Bit Strings (Normally Input as Hexadecimal):
 Only the hexadecimal form is given for operands specifying bit strings, e.g., only "#0000 to #FFFF" is specified as the S operand for the MOV(021) instruction. On the CX-Programmer, however, bit strings can be input in decimal form by using the & prefix.
- Operands Specifying Numeric Values (Normally Input as Decimal, Including Jump Numbers):
 Both the decimal and hexadecimal forms are given for operands specifying numeric values, e.g.,
 "#0000 to #FFFF" and "&0 to &65535" are given for the N operand for the XFER(070) instruction.
- Operands Indicating Control Numbers (Except for Jump Numbers):
 The decimal form is given for control numbers, e.g., "0 to 1023" is given for the N operand for the SBS(091) instruction.

Examples

In the examples, constants are given using the CX-Programmer notation, e.g., operands specifying numeric values are given in decimal for with an & prefix, as shown in the following example.



The input methods for constants for the Programming Devices are given in the following table.

Operand	CX-Programmer	Programming Console						
Operands specifying bit strings (normally input as hexadecimal)	Input as decimal with an & prefix or input as hexadecimal with an #	The Cont/# Key can be pressed to input hexadecimal values by default with an # prefix.						
Operands specifying numeric values (normally input as decimal)	prefix. (See note.)	The CHG Key can then be pressed to rotate between hexadecimal (with # prefix), signed decimal (with +/-), and unsigned decimal (with & prefix).						
Operands specifying control numbers (except for jump numbers)	Input as decimal with an # prefix. (See note.)	Input directly in decimal form. If the & prefix is automatically added, the CHG Key can be pressed to rotate between unsigned decimal (with & prefix), hexadecimal (with # prefix), and signed decimal (with +/-). If no prefix is displayed, the value must be entered in decimal form.						

Note When operands are input on the CX-Programmer, the input ranges will be displayed along with the appropriate prefixes.

Condition Flags

Programming Console labels are used for condition flags in this section. With the CX-Programmer, the condition flags are registered in advance as global symbols with "P_" in front of the symbol name.

Flag	CX-Programmer label	Programming Console label
Error Flag	P_ER	ER
Access Error Flag	P_AER	AER
Carry Flag	P_CY	CY
Greater Than Flag	P_GT	>
Equals Flag	P_EQ	=
Less Than Flag	P_LT	<
Negative Flag	P_N	N
Overflow Flag	P_OF	OF
Underflow Flag	P_UF	UF
Greater Than or Equals Flag	P_GE	>=
Not Equal Flag	P_NE	<>
Less Than or Equals Flag	P_LE	<=
Always ON Flag	P_On	ON
Always OFF Flag	P_Off	OFF

Symbol Instructions

Some of the C/CV-series PLC instructions have been changed to different instructions with the same functionality for the CS/CJ-series PLCs.

Instruction group	C/CV Series	CS/CJ Series
Sequence Control	JMP #0 / JME #0	JMP0 / JME0
Comparison	EQU	AND=
Data Movement	MOVQ	MOV
Increment/Decrement	INC	++B
	INCL	++BL
	INCB	++
	INBL	++L
	DEC	B
	DECL	BL
	DECB	
	DCBL	L
Symbol Math	ADB	+C
	ADBL	+CL
	ADD	+BC
	ADDL	+BCL
	SBB	-C
	SBBL	-CL
	SUB	-BC
	SUBL	-BCL
	MBS	*
	MBSL	*L
	MLB	*U
	MUL	*B
	MULL	*BL
	DBS	/
	DBSL	/L
	DVB	/U
	DIV	/B
	DIVL	/BL
Interrupt Control	INT	MSKS / MSKR / CLIDI / EI

Sequence Input Instructions


Differentiated and Immediate Refreshing Instructions

- The LOAD, AND, and OR instructions have differentiated and immediate refreshing variations in addition to their ordinary forms, and there are also two combinations available.
- The LOAD NOT, AND NOT, OR NOT, OUT, and OUT NOT instructions have immediate refreshing variations in addition to their ordinary forms.
- The I/O timing for data handled by instructions differs for ordinary and differentiated instructions, immediate refreshing instructions, and immediate refreshing differentiated instructions.
- Ordinary and differentiated instructions are executed using data input by previous I/O refresh processing, and the results are output with the next I/O processing. Here "I/O refreshing" means the data exchanged between the CPU Unit's internal memory and the I/O Unit.
- In addition to the above I/O refreshing, an immediate refresh instruction exchanges data with the I/O
 Unit for those words that are accessed by the instruction. When using immediate-refresh versions of
 bit instructions, all 16 bits in the word containing the specified bit will be refreshed.
 Immediate refresh instructions cannot be used for Units on Slave Racks.

IIIIIIeulai		not be used for Units on Slave Racks.	
Instruction variation	Mnemonic	Function	I/O refresh
Ordinary	LD, AND, OR, LD NOT, AND NOT, OR NOT	The ON/OFF status of the specified bit is taken by the CPU with cyclic refreshing, and it is reflected in the next instruction execution.	Cyclic refreshing
	OUT, OUT NOT	After the instruction is executed, the ON/OFF status of the specified bit is output with the next cyclic refreshing.	
Differentiated up	@LD, @AND, @OR	The instruction is executed once when the specified bit turns from OFF to ON and the ON state is held for one cycle.	
Differentiated down	%LD, %AND, %OR	The instruction is executed once when the specified bit turns from ON to OFF and the ON state is held for one cycle.	
Immediate refresh	!LD, !AND, !OR, !LD NOT, !AND NOT, !OR NOT	The input data for the specified bit is taken by the CPU and the instruction is executed.	Before instruction execution
	!OUT, !OUT NOT	After the instruction is executed, the data for the specified bit is output.	After instruction execution
Differentiated up / immediate refresh	!@LD, !@AND, !@OR	The input data for the specified bit is refreshed by the CPU, and the instruction is executed once when the bit turns from OFF to ON and the ON state is held for one cycle.	Before instruction execution
Differentiated down / immediate refresh	!%LD, !%AND, !%OR	The input data for the specified bit is refreshed by the CPU, and the instruction is executed once when the bit turns from ON to OFF and the ON state is held for one cycle.	


• Operation Timing for I/O Instructions

The following chart shows the differences in the timing of instruction operations for a program configured from LD and OUT.

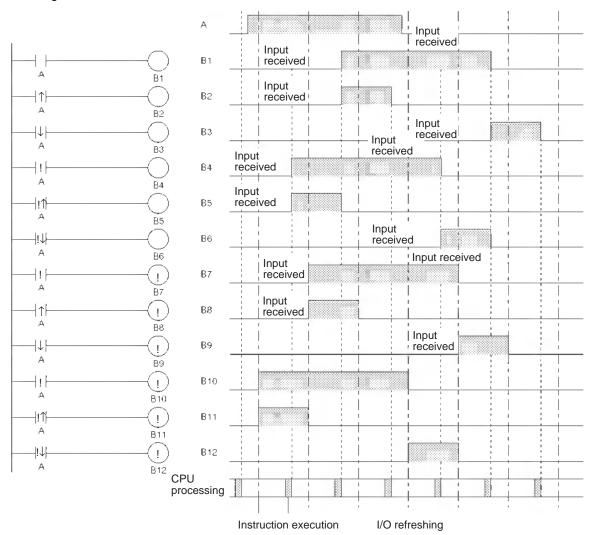

LD/LD NOT

Instruction	Mnemonic	Variations	Function code	Function
LOAD	LD	@LD, %LD, !LD, !@LD, !%LD		Indicates a logical start and creates an ON/OFF execution condition based on the ON/OFF status of the specified operand bit.
LOAD NOT	LD NOT	@LD NOT, %LD NOT, ! LD NOT, !@LD NOT, !%LD NOT		Indicates a logical start and creates an ON/OFF execution condition based on the reverse of the ON/OFF status of the specified operand bit.

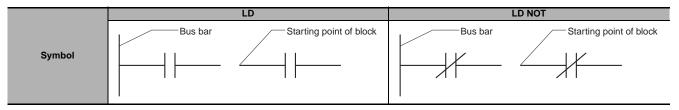

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
		BOOL	

Operand Specifications

Aron			,	Word a	ddres	ses			Indirect addre		Con-		Regist	ers	Fla	ags	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
LD bit operand	ОК	ОК	ОК	OK	ОК	OK	OK*1	OK*1						ОК	ОК	OK	OK	ОК
LD NOT bit operand	OK	OK	OK	OK	OK	OK	OK 1	OK 1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.

Flags

There are no flags affected by this instruction.

Function

• LD

LD is used for the first normally open bit from the bus bar or for the first normally open bit of a logic block. If there is no immediate refreshing specification, the specified bit in I/O memory is read. If there is an immediate refreshing specification, the status of the Basic Input Unit's input terminal is read and used.

LD NOT

LD NOT is used for the first normally closed bit from the bus bar, or for the first normally closed bit of a logic block. If there is no immediate refreshing specification, the specified bit in I/O memory is read and reversed. If there is an immediate refreshing specification, the status of the Basic Input Unit's input terminal is read, reversed, and used.


Hint


- LD/LD NOT is used in the following circumstances as an instruction for indicating a logical start.
 - 1. When directly connecting to the bus bar.
 - When logic blocks are connected by AND LD or OR LD, i.e., at the beginning of a logic block.
 The AND LOAD and OR LOAD instructions are used to connect in series or in parallel logic blocks
 beginning with LD or LD NOT.
- At least one LOAD or LOAD NOT instruction is required for the execution condition when outputrelated instructions cannot be connected directly to the bus bar. If there is no LOAD or LOAD NOT instruction, a programming error will occur with the program check by the Peripheral Device.
- When logic blocks are connected by AND LOAD or OR LOAD instructions, the total number of AND LOAD/OR LOAD instructions must match the total number of LOAD/LOAD NOT instructions minus1.
 If they do not match, a programming error will occur. For details, refer to 3-3-7 AND LOAD: AND LD and 3-3-8 OR LOAD: OR LD.

Precautions

- Differentiate up (@) or differentiate down (%) can be specified for LD. If differentiate up (@) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from OFF to ON. If differentiate down (%) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from ON to OFF.
- Immediate refreshing (!) can be specified for LD/LD NOT. An immediate refresh instruction updates the status of the input bit just before the instruction is executed for Basic Input Units (but not Basic Input Units on Slave Racks or for C200H Group 2 Multi-point Input Units).
- For LD, it is possible to combine immediate refreshing and up or down differentiation (!@ or !%). If either of these is specified, the input is refreshed from the Basic Input Unit just before the instruction is executed and the execution condition is turned ON for one cycle only after the status goes from OFF to ON, or from ON to OFF.
- With CJ2 CPU Units, LD and LD NOT can be used for bits in the DM or EM Area. For other models of CPU Unit, LD and LD NOT cannot be used for bits in the DM or EM Area. Use LD TST(350) and LD TSTN(351) instead.

Example Programming

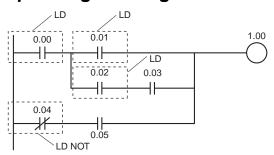

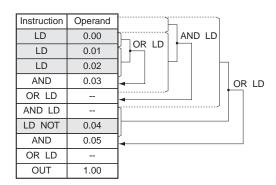

AND/AND NOT

Instruction	Mnemonic	Variations	Function code	Function				
AND	AND	@AND, %AND, !AND, !@AND, !%AND		Takes a logical AND of the status of the specified operand bit and the current execution condition.				
AND NOT	AND NOT	@AND NOT, %AND NOT, !AND NOT, !@AND NOT, !%AND NOT		Reverses the status of the specified operand bit and takes a logical AND with the current execution condition.				

	AND	AND NOT					
Symbol							

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	ОК	OK	OK		

Operands

Operand	Description	Data type	Size		
		BOOL			

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR		
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
AND bit operand	ОК	ОК	ОК	OK	ОК	OK	OK*1	OK*1						OK	ОК	OK	ОК	
AND NOT bit operand	8	6	5	OK	5	5	06	OK ·		-				OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.

Flags

There are no flags affected by this instruction.

Function

AND

AND is used for a normally open bit connected in series. AND cannot be directly connected to the bus bar, and cannot be used at the beginning of a logic block. If there is no immediate refreshing specification, the specified bit in I/O memory is read. If there is an immediate refreshing specification, the status of the Basic Input Unit's input terminal is read.


AND NOT

AND NOT is used for a normally closed bit connected in series. AND NOT cannot be directly connected to the bus bar, and cannot be used at the beginning of a logic block. If there is no immediate refreshing specification, the specified bit in I/O memory is read. If there is an immediate refreshing specification, the status the Basic Input Unit's input terminals is read.

Precautions

- Differentiate up (@) or differentiate down (%) can be specified for AND. If differentiate up (@) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from OFF to ON. If differentiate down (%) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from ON to OFF.
- Immediate refreshing (!) can be specified for AND/AND NOT. An immediate refresh instruction updates the status of the input bit just before the instruction is executed from the Basic Input Unit (but not Basic Input Units on Slave Racks or for C200H Group 2 Multi-point Input Units).
- For AND, it is possible to combine immediate refreshing and up or down differentiation (!@ or !%). If either of these is specified, the input is refreshed from the Basic Input Unit just before the instruction is executed and the execution condition is turned ON for one cycle only after the status goes from OFF to ON, or from ON to OFF.
 - With CJ2 CPU Units, AND and AND NOT can be used for bits in the DM or EM Area. For other models of CPU Unit, AND and AND NOT cannot be used for bits in the DM or EM Area. Use AND TST (350) instead.


Example Programming

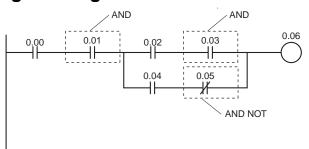

Instruction	Operand
LD	0.00
AND	0.01
LD	0.02
AND	0.03
LD	0.04
AND NOT	0.05
OR LD	
AND LD	
OUT	0.06

OR/OR NOT

Instruction	Mnemonic	Variations	Function code	Function
OR	OR	@OR, %OR, !OR, !@OR, !%OR		Takes a logical OR of the ON/OFF status of the specified operand bit and the current execution condition.
OR NOT	OR NOT	@OR NOT, %OR NOT, !OR NOT, !@OR NOT, !%OR NOT		Reverses the status of the specified bit and takes a logical OR with the current execution condition.

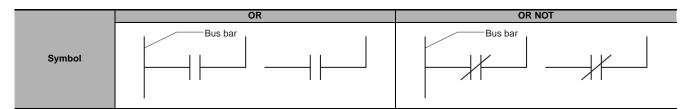

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	ОК	ОК	OK	ОК

Operands

Operand	Description	Data type	Size	
		BOOL		

Operand Specifications

Area			'	Word a	ddres	ses				Indirect DM/EM addresses Con-				Fla	ags	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	U	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
OR bit operand OR NOT bit operand	OK	ОК	ОК	ОК	ОК	OK	OK*1	OK*1						ОК	ОК	ОК	ок	

^{*1} CJ2 CPU Units only.

Flags

There are no flags affected by this instruction.

Function

OR

OR is used for a normally open bit connected in parallel. A normally open bit is configured to form a logical OR with a logic block beginning with a LOAD or LOAD NOT instruction (connected to the bus bar or at the beginning of the logic block). If there is no immediate refreshing specification, the specified bit in I/O memory is read. If there is an immediate refreshing specification, the status of the Basic Input Unit's input terminal is read.


OR NOT

OR NOT is used for a normally closed bit connected in parallel. A normally closed bit is configured to form a logical OR with a logic block beginning with a LOAD or LOAD NOT instruction (connected to the bus bar or at the beginning of the logic block). If there is no immediate refreshing specification, the specified bit in I/O memory is read. If there is an immediate refreshing specification, the status of the Basic Input Unit's input terminal is read.

Precautions

- Differentiate up (@) or differentiate down (%) can be specified for OR. If differentiate up (@) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from OFF to ON. If differentiate down (%) is specified, the execution condition is turned ON for one cycle only after the status of the operand bit goes from ON to OFF.
- Immediate refreshing (!) can be specified for OR/OR NOT. An immediate refresh instruction updates the status of the input bit just before the instruction is executed from the Basic Input Unit (but not for Basic Input Units on Slave Racks or for C200H Group 2 Multi-point Input Units).
- For OR, it is possible to combine immediate refreshing and up or down differentiation (!@ or !%). If either of these is specified, the input is refreshed from the Basic Input Unit just before the instruction is executed and the execution condition is turned ON for one cycle only after the status of the operand bit goes from OFF to ON, or from ON to OFF.
- With CJ2 CPU Units, OR and OR NOT can be used for bits in the DM or EM Area. For other models
 of CPU Unit, OR and OR NOT cannot be used for bits in the DM or EM Area. Use OR TST (350)
 instead.

Example Programming

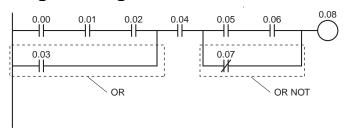

Operand
0.00
0.01
0.02
0.03
0.04
0.05
0.06
0.07
0.08

AND LD/OR LD

Instruction	Mnemonic	Variations	Function code	Function
AND LOAD	AND LD			Takes a logical AND between logic blocks.
OR LOAD	OR LD			Takes a logical OR between logic blocks.

	AND LD	OR LD
Symbol	Logic block Logic block	Logic block Logic block

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Flags


There are no flags affected by this instruction.

Function

AND LD

AND LD connects in series the logic block just before this instruction with another logic block.

The logic block consists of all the instructions from a LOAD or LOAD NOT instruction until just before the next LOAD or LOAD NOT instruction on the same rungs.

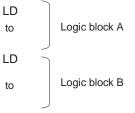


AND LD ······ Serial connection between logic block A and logic block B.

OR LD

OR LD connects in parallel the logic block just before this instruction with another logic block.

The logic block consists of all the instructions from a LOAD or LOAD NOT instruction until just before the next LOAD or LOAD NOT instruction on the same rungs.

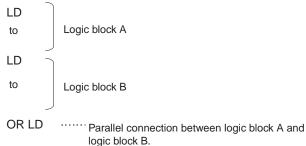

Hint

AND LD

• Three or more logic blocks can be connected in series using this instruction to first connect two of the logic blocks and then to connect the next and subsequent ones in order. It is also possible to continue placing this instruction after three or more logic blocks and connect them together in series.

OR LD


• Three or more logic blocks can be connected in parallel using this instruction to first connect two of the logic blocks and then to connect the next and subsequent ones in order. It is also possible to continue placing this instruction after three or more logic blocks and connect them together in parallel.

Precautions

When a logic block is connected by AND LOAD or OR LOAD instructions, the total number of AND LOAD/OR LOAD instructions must match the total number of LOAD/LOAD NOT instructions minus 1. If they do not match, a programming error will occur.

AND LD

In the following diagram, the two logic blocks are indicated by dotted lines. Studying this example shows that an ON execution condition will be produced when either of the execution conditions in the left logic block is ON (i.e., when either CIO 0.00 or CIO 0.01 is ON) and either of the execution conditions in the right logic block is ON (i.e., when either CIO 0.02 is ON or CIO 0.03 is OFF).

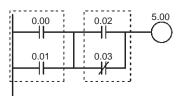


Coding

Instruction	Operand
LD	0.00
OR	0.01
LD	0.02
OR NOT	0.03
AND LD	
OUT	5.00

Second LD: Used for first bit of next block connected in series to previous block.

OR LD

The following diagram requires an OR LOAD instruction between the top logic block and the bottom logic block. An ON execution condition would be produced either when CIO 0.00 is ON and CIO 0.01 is OFF or when CIO 0.02 and CIO 0.03 are both ON. The operation of and mnemonic code for the OR LOAD instruction is exactly the same as those for a AND LOAD instruction except that the current execution condition is ORed with the last unused execution condition.

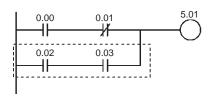


Coding

Instruction	Operand
LD	0.00
AND NOT	0.01
LD	0.02
AND	0.03
OR LD	
OUT	5.01

Second LD: Used for first bit of next block connected in series to previous block.

Example Programming

AND LD

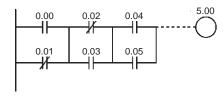

Coding Example (1)


Instruction	Operand
LD	0.00
OR NOT	0.01
LD NOT	0.02
OR	0.03
AND LD	
LD	0.04
OR	0.05
AND LD	
	·
OUT	5.00

Coding Example (2)

Instruction	Operand
LD	0.00
OR NOT	0.01
LD NOT	0.02
OR	0.03
LD	0.04
OR	0.05
	-
AND LD	
AND LD	
OUT	5.00

- The AND LOAD instruction can be used repeatedly. In programming method (2) above, however, the number of AND LOAD instructions becomes one less than the number of LOAD and LOAD NOT instructions before that.
- In method (2), make sure that the total number of LOAD and LOAD NOT instructions before AND LOAD is not more than eight.
- To use nine or more, program using method (1).
- If there are nine or more with method (2), then a program error will occur during the program check by the Peripheral Device.

OR LD

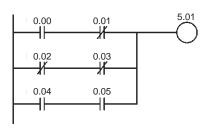

Coding Example (1)

Instruction	Operand
LD	0.00
AND NOT	0.01
LD NOT	0.02
AND NOT	0.03
OR LD	
LD	0.04
AND	0.05
OR LD	
OUT	5.01
	•

Coding Example (2)

Instruction	Operand
LD	0.00
AND NOT	0.01
LD NOT	0.02
AND NOT	0.03
LD	0.04
AND	0.05
OR LD	
OR LD	
OUT	5.01

- The OR LOAD instruction can be used repeatedly. In programming method (2) above, however, the number of OR LOAD instructions becomes one less than the number of LOAD and LOAD NOT instructions before that.
- In method (2), make sure that the total number of LOAD and LOAD NOT instructions before OR LOAD is not more than eight.
- To use nine or more, program using method (1).
- If there are nine or more with method (2), then a program error will occur during the program check by the Peripheral Device.

NOT

Instruction	Mnemonic	Variations	Function code	Function
NOT	NOT		520	Reverses the execution condition.

	NOT
Symbol	NOT(520)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	ОК	OK	OK

Flags

There are no flags affected by NOT(520).


Function

NOT(520) is placed between an execution condition and another instruction to invert the execution condition.

Precautions

NOT(520) is an intermediate instruction, i.e., it cannot be used as a right-hand instruction. Be sure to program a right-hand instruction after NOT(520).

Example Programming

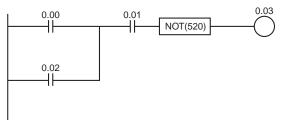

NOT(520) reverses the execution condition in the following example.

0.00	0.01	0.02	0.03
1	1	1	0
1	1	0	0
1	0	1	1
0	1	1	0
1	0	0	1
0	1	0	1
0	0	1	1
0	0	0	1

UP/DOWN

Instruction	Mnemonic	Variations	Function code	Function
CONDITION ON	UP		521	UP(521) turns ON the execution condition for the next instruction for one cycle when the execution condition it receives goes from OFF to ON.
CONDITION OFF	DOWN		522	DOWN(522) turns ON the execution condition for the next instruction for one cycle when the execution condition it receives goes from ON to OFF.

	UP	DOWN
Symbol	—— UP(521)	DOWN(522)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Flags

There are no flags affected by UP(521) and DOWN(522).

Function

• UP

UP(521) is placed between an execution condition and another instruction to turn the execution condition into an up-differentiated condition. UP(521) causes the connecting instruction to be executed just once when the execution condition goes from OFF to ON.

DOWN

DOWN(522) is placed between an execution condition and another instruction to turn the execution condition into a down-differentiated condition. DOWN(522) causes the connecting instruction to be executed just once when the execution condition goes from ON to OFF.

Hint

The DIFU(013) and DIFD(014) instructions can also be used for the same purpose, but they require
work bits. UP(521) and DOWN(522) simplify programming by reducing the number of work bits and
program addresses needed.

Precautions

- UP(521) and DOWN(522) are intermediate instructions, i.e., they cannot be used as right-hand instructions. Be sure to program a right-hand instruction after UP(521) or DOWN(522).
- The operation of UP(521) and DOWN(522) depends on the execution condition for the instruction as well as the execution condition for the program section when it is programmed in an interlocked program section, a jumped program section, or a subroutine.

Note Observe the following precaution when using UP(521) in a function block definition.


- The operation of UP(521) and DOWN(522) will not be consistent if the same function block instance is executed more than once in the same cycle.
- An instance will not be executed while EN is OFF. Caution is thus required when using UP(521) and DOWN(522) in a function block definition. For details, refer to information on restrictions on using ladder programming instructions in the CX-Programmer Operation Manual: Function Blocks.

Note Observe the following precaution when using UP(521) and DOWN(522) in a subroutine.


- The operation of UP(521) and DOWN(522) will not be consistent if the same subroutine is executed more than once in the same cycle.
- An subroutine will not be executed while the input condition for the subroutine is OFF. Caution is thus required when using UP(521) and DOWN(522) in a function block definition. For details, refer to information on SBS(091).

Example Programming


• UP

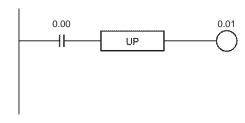


When CIO 0.00 goes from OFF to ON, CIO 0.01 is turned ON for just one cycle.

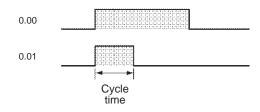

DOWN

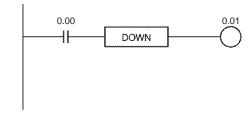

When CIO 0.00 goes from ON to OFF, CIO 0.01 is turned ON for just one cycle.

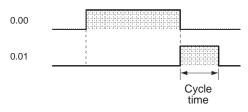

LD TST/LD TSTN

Instruction	Mnemonic	Variations	Function code	Function
LOAD BIT TEST	LD TST		350	LD TST(350) is used in the program like LD; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.
LOAD BIT TEST NOT	LD TSTN		351	LD TSTN(351) is used in the program like LD NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.

	LD TST	LD TSTN
Symbol	TST(350) S: Source word N: Bit number	TSTN(351) S: Source word N: Bit number

Applicable Program Areas

Area	Function block definitions	I Block program areas I		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	ОК	

Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
N	Bit number	UINT	1

N: Bit number

The bit number must be between 0000 and 000F hexadecimal or between &0000 and &0015 decimal. Only the rightmost bit (0 to F hexadecimal) of the contents of the word is valid when a word address is specified.

Operand Specifications

Area	Word addresses					Indirect addre	DM/EM esses	Con-		Registers		Flags		Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S	ОК	ОК	ОК	ОК	ок	ОК	ОК	OK	OK	ОК		OK		OK				
N		UK	UK	UK	UK	UK	OK	UK	UK	UK	OK	OK		UK				

Flags

Name	Label	Operation
Error Flag	ER	OFF or unchanged *1
Equals Flag	=	OFF or unchanged *1
Negative Flag	N	OFF or unchanged *1

^{*1} In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF. In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units, these Flags are left unchanged.

Function

• LD TST

LD TST(350) is used in the program like LD; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.


LD TSTN

LD TSTN(351) is used in the program like LD NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.

Precautions

• TST(350) and TSTN(351) are intermediate instructions, i.e., they cannot be used as right-hand instructions. Be sure to program a right-hand instruction after TST(350) or TSTN(351).

Example Programming

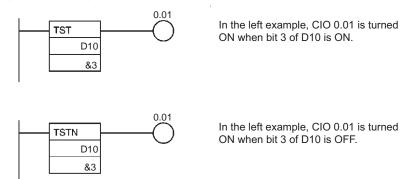

AND TST/AND TSTN

Instruction	Mnemonic	Variations	Function code	Function
AND BIT TEST	AND TST		350	AND TST(350) is used in the program like AND; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.
AND BIT TEST NOT	AND TSTN		351	AND TSTN(351) is used in the program like AND NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.

	AND TST	AND TSTN				
Symbol	AND TST(350) S: Source word N: Bit number	AND TSTN(351) S: Source word N: Bit number				

Applicable Program Areas

Are	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs	
Usag	e OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	Source word	WORD	1		
N	Bit number	UINT	1		

N: Bit number

The bit number must be between 0000 and 000F hexadecimal or between &0000 and &0015 decimal. Only the rightmost bit (0 to F hexadecimal) of the contents of the word is valid when a word address is specified.

Operand Specifications

Area		Word addresses						Indirect addre	DM/EM esses	Con-		Registers		Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	U	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bi	bits
S	ок	ОК	ОК	ОК	ок	ОК	ОК	ОК	ОК	OK		ОК		OK				
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	ER	OFF or unchanged *1
Equals Flag	=	OFF or unchanged *1
Negative Flag	N	OFF or unchanged *1

^{*1} In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF. In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units, these Flags are left unchanged.

Function

AND TST

AND TST(350) is used in the program like AND; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.


AND TSTN

AND TSTN(351) is used in the program like AND NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.


Precautions

• TST(350) and TSTN(351) are intermediate instructions, i.e., they cannot be used as right-hand instructions. Be sure to program a right-hand instruction after TST(350) or TSTN(351).

Example Programming

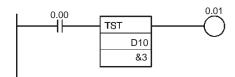


In the left example, CIO 0.01 is turned ON when CIO 0.00 and bit 3 of D10 are both ON.

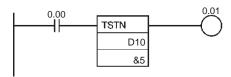

In the left example, CIO 0.01 is turned ON when CIO 0.00 is ON and bit 5 of D10 is OFF.

OR TST/OR TSTN

Instruction	Mnemonic	Variations	ations Function Function			
OR BIT TEST	OR TST		350	OR TST(350) is used in the program like OR; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.		
OR BIT TEST NOT	OR TSTN		351	OR TSTN(351) is used in the program like OR NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.		

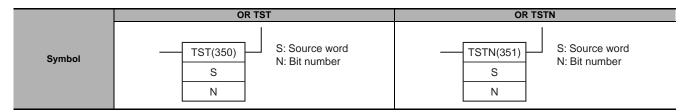

Applicable Program Areas

Area	Function block definitions	I Block program areas I S		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
N	Bit number	UINT	1

N: Bit number

The bit number must be between 0000 and 000F hexadecimal or between &0000 and &0015 decimal. Only the rightmost bit (0 to F hexadecimal) of the contents of the word is valid when a word address is specified.

Operand Specifications

Aron	Word addresses					Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR				
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	OK	ОК	ок	ОК	ОК	ОК	OK	OK		ОК		OK				
N	OK	OK	OK	ÖK	OK	OK	ÖK	OK	OK	ÖK	OK	ÖK		OK				

Flags

Name	Label	Operation
Error Flag	ER	OFF or unchanged *1
Equals Flag	=	OFF or unchanged *1
Negative Flag	N	OFF or unchanged *1

^{*1} In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF. In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units, these Flags are left unchanged.

Function

• OR TST

OR TST(350) is used in the program like OR; the execution condition is ON when the specified bit in the specified word is ON, and OFF when the bit is OFF.


OR TSTN

OR TSTN(351) is used in the program like OR NOT; the execution condition is OFF when the specified bit in the specified word is ON, and ON when the bit is OFF.

Precautions

• TST(350) and TSTN(351) are intermediate instructions, i.e., they cannot be used as right-hand instructions. Be sure to program a right-hand instruction after TST(350) or TSTN(351).

Example Programming

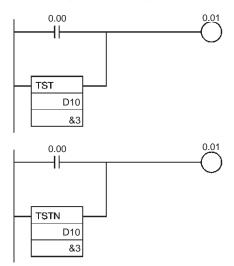


In the left example, CIO 0.01 is turned ON when CIO 0.00 or bit 3 of D10 is ON.

In the left example, CIO 0.01 is turned ON when CIO 0.00 is ON or bit 3 of D10 is OFF.

Sequence Output Instructions

OUT/OUT NOT

Instruction	Mnemonic	Variations	Function code	Function
OUTPUT	OUT	!OUT		Outputs the result (execution condition) of the logical processing to the specified bit.
OUTPUT NOT	OUT NOT	!OUT NOT		Reverses the result (execution condition) of the logical processing, and outputs it to the specified bit.

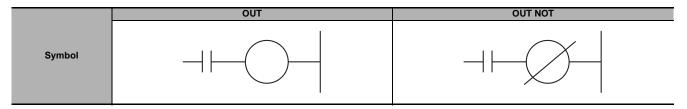

Applicable Program Areas

	Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Ī	Usage	ОК	Not allowed	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size	
		BOOL		

Operand Specifications

Aroa		Word addresses							Indirect addre	DM/EM esses	Con-	Registers Con-			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits t	bits
OUT NOT	ок	ОК	OK	ОК			OK*1	OK*1						ОК				ок

^{*1} CJ2 CPU Units only.

Flags

There are no flags affected by this instruction.

Function

OUT

If there is no immediate refreshing specification, the status of the execution condition (power flow) is written to the specified bit in I/O memory. If there is an immediate refreshing specification, the status of the execution condition (power flow) is also written to the Basic Output Unit's output terminal in addition to the output bit in I/O memory.

OUT NOT


If there is no immediate refreshing specification, the status of the execution condition (power flow) is reversed and written to a specified bit in I/O memory. If there is an immediate refreshing specification, the status of the execution condition (power flow) is reversed and also written to the Basic Output Unit's output terminal in addition to the output bit in I/O memory.

Hint


- Immediate refreshing (!) can be specified for OUT and OUT NOT. An immediate refresh instruction
 updates the status of the output terminal just after the instruction is executed for the Basic Output
 Unit (but not for Basic Output Units on Slave Racks or for C200H Group 2 Multi-point Input Units), at
 the same time as it writes the status of the execution condition (power flow) to the specified output bit
 in I/O memory.
- Difference between SET/RSET and OUT
 For OUT, the operand bit is turned ON when the input condition turns ON and is turned OFF when the input condition turns OFF. For SET and RSET, the operand bit turns ON or OFF, respectively, when the input condition turns ON and the operand bit does not change when the input condition turns OFF.

Precautions

- With CJ2 CPU Units, OUT can be used for bits in the DM or EM Area. For other models of CPU Unit, OUT cannot be used for bits in the DM or EM Area. Use OUTB(534) instead.
- If an indirect register address is used, OUT is executed even when the input condition turns OFF. Be particularly careful when programming OUT using an indirect index register address.

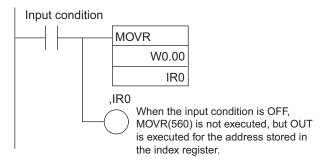

Example Programming

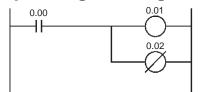


Instruction	Operand
LD	0.00
OUT	0.01
OUT NOT	0.02

TR

Instruction	Mnemonic	Variations	Function code	Function
TR Bits	TR			TR bits are used to temporarily retain the ON/OFF status of execution conditions in a program when programming in mnemonic code.

Function

TR bits are used to temporarily retain the ON/OFF status of execution conditions in a program when programming in mnemonic code. They are not used when programming directly in ladder program form because the processing is automatically executed by the Peripheral Device. The following diagram shows a simple application using two TR bits.

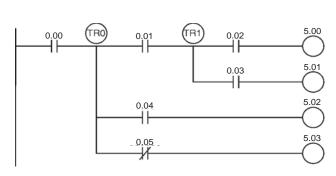

Coding								
Instruction	Operands							
LD	0.00							
OUT	TR0							
AND	0.01							
OUT	TR1							
AND	0.02							
OUT	5.00							
LD	TR1							
AND	0.03							
OUT	5.01							
LD	TR0							
AND	0.04							
OUT	5.02							
LD	TR0							
AND NOT	5.00							
OUT	5.03							
Dolov Addro								


Relay Address

Temporary Relay TR0 to TR15

Using TR0 to TR15

- TR0 to TR15 are used only with LOAD and OUTPUT instructions.
- There are no restrictions on the order in which the bit addresses are used.
- Sometimes it is possible to simplify a program by rewriting it so that TR bits are not required. The following diagram shows one case in which a TR bit is unnecessary and one in which a TR bit is required.

In instruction block (1), the ON/OFF status at point A is the same as for output CIO 2.00, so AND 0.01 and OUT 2.01 can be coded without requiring a TR bit. In instruction block (2), the status of the branching point and that of output CIO 2.02 are not necessarily the same, so a TR bit must be used. In this case, the number of steps in the program could be reduced by using instruction block (1) in place of instruction block (2).

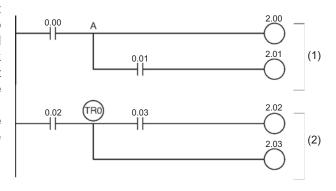


• TR0 to TR15 Considerations

TR bits are used only for retaining (OUT TR0 to TR15) and restoring (LD TR0 to TR15) the ON/OFF status of branching points in programs with many output branches. They are thus different from general bits, and cannot be used with AND or OR instructions, or with instructions that include NOT.


■ TR0 to TR15 output Duplication

A TR bit address cannot be repeated within the same block in a program with many output branches, as shown in the following diagram. It can, however, be used again in a different block.

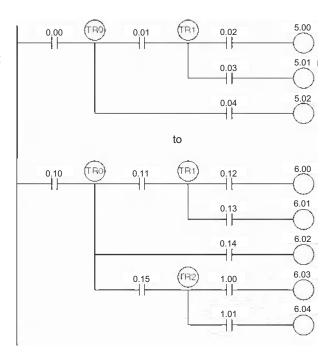

KEEP

Instruction	Mnemonic	Variations	Function code	Function
KEEP	KEEP	!KEEP	011	Operates like a latching relay.

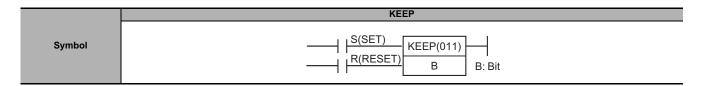

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	ОК	OK	OK	

Operands

Operand	Description	Data type	Size
В	Bit	BOOL	

Operand Specifications

	Aron	Word addresses							Indirect DM/EM addresses Co		Con-	Registers		ters	Flags		Pulse	TR	
ı	Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
	В	OK	OK	OK	OK			OK*1	OK*1						OK				


^{*1} CJ2 CPU Units only.

Flags

No flags are affected by KEEP(011).


Function

When S turns ON, the designated bit will go ON and stay ON until reset, regardless of whether S stays ON or goes OFF. When R turns ON, the designated bit will go OFF. The relationship between execution conditions and KEEP(011) bit status is shown below on the right.

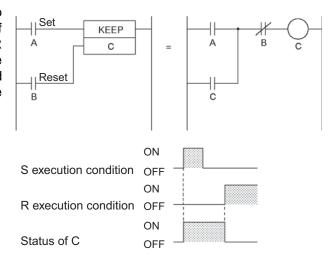


Hint


- KEEP(011) has an immediate refreshing variation (!KEEP(011)). When an external output bit has
 been specified for B in a !KEEP(011) instruction, any changes to B will be refreshed when
 !KEEP(011) is executed and reflected immediately in the output bit. (The changes will not be
 reflected immediately if the bit is allocated to a Group-2 High-density I/O Unit, High-density Special
 I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.)
- KEEP(011) operates like the self-maintaining bit, but a self-maintaining bit programmed with KEEP(011) requires one less instruction.

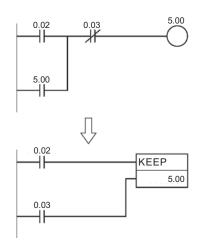


Self-maintaining bits programmed with KEEP(011) will maintain status even in an interlock program section, unlike the self-maintaining bit programmed without KEEP(011).

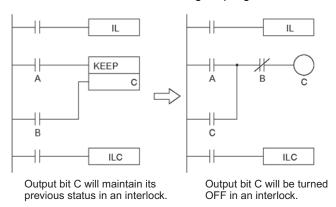

KEEP(011) can be used to create flip-flops as shown below.

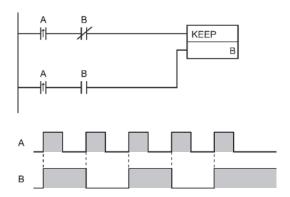


• If a holding bit is used for B, the bit status will be retained even during a power interruption. KEEP(011) can thus be used to program bits that will maintain status after restarting the PLC following a power interruption. An example of this that can be used to produce a warning display following a system shutdown for an emergency situation is shown below.

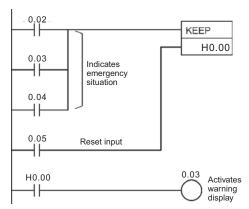


The status of I/O Area bits can be retained in the event of a power interruption by turning ON the IOM
Hold Bit and setting IOM Hold Bit Hold in the PLC Setup. In this case, I/O Area bits used in
KEEP(011) will maintain status after restarting the PLC following a power interruption, just like
holding bits. Be sure to restart the PLC after changing the PLC Setup; otherwise the new settings will
not be used.


Precautions

- If S and R are ON simultaneously, the reset input takes precedence.
- The set input (S) cannot be received while R is ON.
- Never use an input bit in a normally closed condition on the reset (R) for KEEP(011) when the input device uses an AC power supply. The delay in shutting down the PLC's DC power supply (relative to the AC power supply to the input device) can cause the operand bit of KEEP(011) to be reset. This situation is shown on the right.

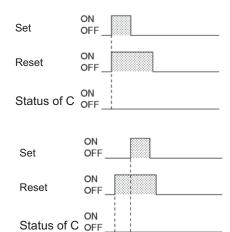

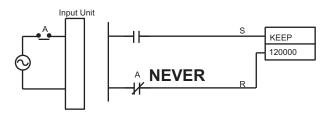

Example Programming

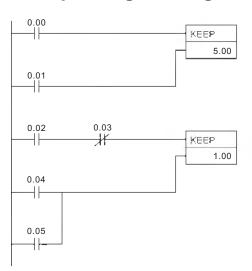

When CIO 0.00 goes ON in the left example, CIO 5.00 is turned ON. CIO 5.00 remains ON until CIO 0.01 goes ON.

When CIO 0.02 goes ON and CIO 0.03 goes OFF in the left example, CIO 1.00 is turned ON. CIO 1.00 remains ON until CIO 0.04 or CIO 0.05 goes ON.


Coding

Instruction	Operand
LD	0.00
LD	0.01
KEEP (011)	5.00
LD	0.02
AND NOT	0.03
LD	0.04
OR	0.05
KEEP (011)	1.00

Note KEEP(011) is input in different orders on in ladder and mnemonic form. In ladder form, input the set input, KEEP(011), and then the reset input. In mnemonic form, input the set input, the reset input, and then KEEP(011).

DIFU

Instruction	Mnemonic	Variations	Function code	Function
DIFFERENTIATE UP	DIFU	!DIFU	013	DIFU(013) turns the designated bit ON for one cycle when the execution condition goes from OFF to ON (rising edge).

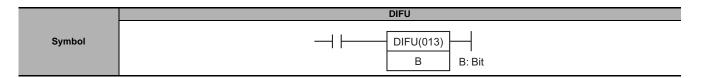

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
В	Bit	BOOL	

Operand Specifications

Aron	Word addresses							Indirect DM/EM addresses Con			Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
В	OK	OK	OK	OK			OK*1	OK*1						OK				


^{*1} CJ2 CPU Units only.

Flags

No flags are affected by DIFU(013).

Function

When the execution condition goes from OFF to ON, DIFU(013) turns B ON. When DIFU(013) is reached in the next cycle, B is turned OFF.

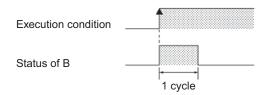

Hint


- UP(521) can be used to execute an instruction for just one cycle when the execution condition goes from OFF → ON.
- DIFU(013) has immediate refreshing variation (!DIFU(013)). When an external output bit has been specified for B in this instruction, any changes to B will be refreshed when the instruction is executed and reflected immediately in the output bit. (The changes will not be reflected immediately if the bit is allocated to a Group-2 High-density I/O Unit, High-density Special I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.)

Precautions

- The operation of DIFU(013) depends on the execution condition for the instruction itself as well as the
 execution condition for the program section when it is programmed in an interlocked program section,
 a jumped program section, or a subroutine.
- An instance will not be executed while EN is OFF. Caution is thus required when using DIFU(013) in a function block definition. For details, refer to information on restrictions on using ladder programming instructions in the CX-Programmer Operation Manual: Function Blocks.
- The operation of DIFU(013) will not be consistent if the same function block instance is executed more than once in the same cycle.
- An subroutine will not be executed while the input condition for the subroutine is OFF. Caution is thus required when using DIFU(013) in a function block definition. For details, refer to information on SBS(091).
- The operation of DIFU(013) will not be consistent if the same subroutine is executed more than once in the same cycle.


Example Programming

When CIO 0.00 goes from ON to OFF in the following example, CIO 10.00 is turned ON for one cycle.

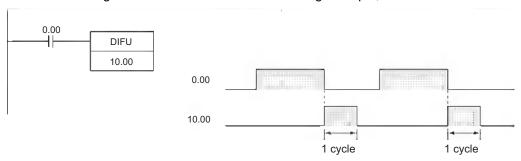

DIFD

Instruction	Mnemonic	Variations	Function code	Function
DIFFERENTIATE DOWN	DIFD	!DIFD	014	DIFD(014) turns the designated bit ON for one cycle when the execution condition goes from ON to OFF (falling edge).

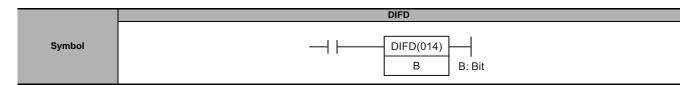

Applicable Program Areas

Area	Function block definitions	Block program areas Step program		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
В	Bit	BOOL	

Operand Specifications

Aroa		Word addresses							Indirect DM/EM addresses Co		Con-	Registers		ters	Flags		Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
В	OK	OK	OK	OK			OK*1	OK*1						OK				


^{*1} CJ2 CPU Units only.

Flags

No flags are affected by DIFD(014).

Function

When the execution condition goes from ON to OFF, DIFD(014) turns B ON. When DIFD(014) is reached in the next cycle, B is turned OFF.

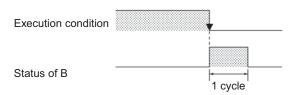

Hint


- DOWN(522) can be used to execute an instruction for just one cycle when the execution condition goes from ON → OFF.
- The operation of DIFD(014) depends on the execution condition for the instruction itself as well as the execution condition for the program section when it is programmed in an interlocked program section, a jumped program section, or a subroutine.
- DIFD(014) has immediate refreshing variation (!DIFD(014)). When an external output bit has been specified for B in this instruction, any changes to B will be refreshed when the instruction is executed and reflected immediately in the output bit. (The changes will not be reflected immediately if the bit is allocated to a Group-2 High-density I/O Unit, High-density Special I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.)

Precautions

- The operation of DIFD(014) depends on the execution condition for the instruction itself as well as the execution condition for the program section when it is programmed in an interlocked program section, a jumped program section, or a subroutine.
- An instance will not be executed while EN is OFF. Caution is thus required when using DIFD(014) in a function block definition. For details, refer to information on restrictions on using ladder programming instructions in the CX-Programmer Operation Manual: Function Blocks.
- The operation of DIFD(014) will not be consistent if the same function block instance is executed more than once in the same cycle.
- An subroutine will not be executed while the input condition for the subroutine is OFF. Caution is thus required when using DIFD(014) in a function block definition. For details, refer to information on SBS(091).


Example Programming

When CIO 0.00 goes from ON to OFF in the following example, CIO 10.00 is turned ON for one cycle.

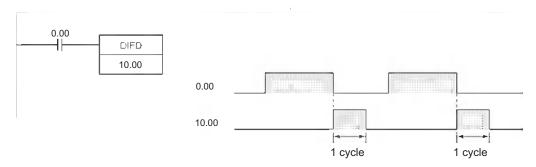

SET/RSET

Instruction	Mnemonic	Variations	Function code	Function
SET	SET	@SET, %SET, !SET, !@SET, !%SET		SET turns the operand bit ON when the execution condition is ON. After this, the specified contact will remain ON regardless of ON/OFF of the input condition.
RESET	RSET	@RSET, %RSET, !RSET, !@RSET, !%RSET		RSET turns the operand bit OFF when the execution condition is ON. After this, the specified contact will remain OFF regardless of ON/OFF of the input condition.

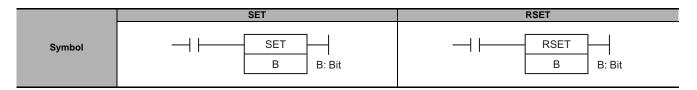

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
В	Bit	BOOL	

Operand Specifications

Area			١	Nord ac	ddress	es			Indirect addre		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
В	OK	OK	OK	OK			OK*1	OK*1						OK				

^{*1} CJ2 CPU Units only.


Flags

No flags are affected by SET and RSET.

Function

• SET

SET turns the operand bit ON when the execution condition is ON, and does not affect the status of the operand bit when the execution condition is OFF. Use RSET to turn OFF a bit that has been turned ON with SET.

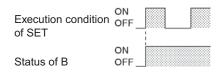


RSET

RSET turns the operand bit OFF when the execution condition is ON, and does not affect the status of the operand bit when the execution condition is OFF. Use SET to turn ON a bit that has been turned OFF with RSET.



Hint

Differences between OUT/OUT NOT and SET/RSET
 The operation of SET differs from that of OUT because the OUT instruction turns the operand bit OFF when its execution condition is OFF. Likewise, RSET differs from OUT NOT because OUT NOT turns the operand bit ON when its execution condition is OFF. For OUT, the operand bit is turned ON when the input condition turns ON and is turned OFF when the input condition turns OFF. For SET and RSET, the operand bit turns ON or OFF, respectively, when the input condition turns ON and the operand bit does not change when the input condition turns OFF.

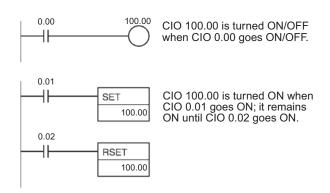


- The set and reset inputs for a KEEP(011) instruction must be programmed with the instruction, but the SET and RSET instructions can be programmed completely independently. Furthermore, the same bit may be used as the operand in any number of SET or RSET instructions.
- SET and RSET have immediate refreshing variations (!SET and !RSET). When an external output bit has been specified for B in one of these instructions, any changes to B will be refreshed when the instruction is executed and reflected immediately in the output bit. (The changes will not be reflected immediately if the bit is allocated to a Group-2 High-density I/O Unit, High-density Special I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.)
 If external output is specified for R by !SET (or !RSET), R will be OUT-refreshed as soon as it turns ON (or OFF) (when the instruction is executed). R, which turned ON (or OFF), will remain ON (or OFF) as normal until a RSET instruction (or SET instruction) is executed.

Precautions

- With CJ2 CPU Units, SET can be used for bits in the DM or EM Area. For other models of CPU Unit, SET cannot be used for bits in the DM or EM Area. Use SETB(532) instead. With CJ2 CPU Units, RSET can be used for bits in the DM or EM Area. For other models of CPU Unit, RSET cannot be used for bits in the DM or EM Area. Use RSTB(533) instead.
- SET and RSET cannot be used to set and reset timers and counters. When SET or RSET is
 programmed between IL(002) and ILC(003) or JMP(004) and JME(005), the status of the specified
 bit will not be changed if the program section is interlocked or jumped.

SETA/RSTA

Instruction	Mnemonic	Variations	Function code	Function
MULTIPLE BIT SET	SETA	@SETA	530	SETA(530) turns ON the specified number of consecutive bits.
MULTIPLE BIT RESET	RESTA	@RSTA	531	RSTA(531) turns OFF the specified number of consecutive bits.

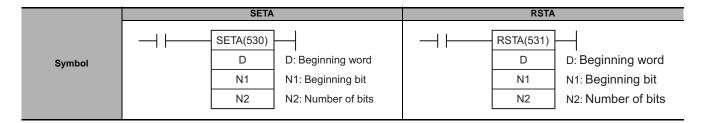

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
D	Beginning Word	UINT	Variable
N1	Beginning Bit	UINT	1
N2	Number of Bits	UINT	1

Operand Specifications

Area			v	Vord ad	dresse	es			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	S	DR	IR	Indirect using IR	тк	CF	bits	bits
D																		
N1	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК	ОК		OK				
N2											UK	UK						

Flags


Operand	Description	Data type
Error Flag	P_ER	ON if N1 is not within the specified range of 0000 to 000F (&0 to &15). OFF in all other cases.

Function

SETA

SETA(530) turns ON N2 bits, beginning from bit N1 of D, and continuing to the left (more-significant bits). All other bits are left unchanged. (No changes will be made if N2 is set to 0.)


Bits turned ON by SETA(530) can be turned OFF by any other instructions, not just RSTA(531).

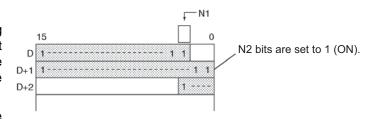

RSTA

RSTA(531) turns OFF N2 bits, beginning from bit N1 of D, and continuing to the left (more-significant bits). All other bits are left unchanged. (No changes will be made if N2 is set to 0.)

Bits turned OFF by RSTA(531) can be turned ON by any other instructions, not just SETA(530).

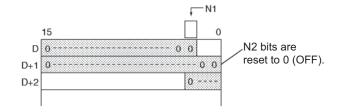

Hint

SETA

 SETA(530) can be used to turn ON bits in data areas that are normally accessed by words only, such as the DM and EM areas.


RSTA


 RSTA(531) can be used to turn OFF bits in data areas that are normally accessed by words only, such as the DM and EM areas.

Example Programming

SETA


When CIO 0.00 is turned ON in the following example, the 20 bits (0014 hexadecimal) beginning with bit 5 of CIO 100 are turned ON.

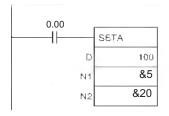


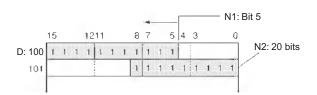

RSTA


When CIO 0.00 is turned ON in the following example, the 20 bits (0014 hexadecimal) beginning with bit 3 of CIO 100 are turned OFF.

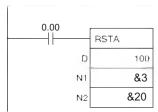

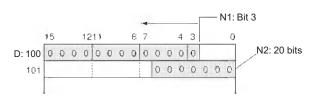

SETB/RSTB

Instruction	Mnemonic	Variations	Function code	Function
SINGLE BIT SET	SETB	@SETB, !SETB, !@SETB	532	SETB(532) turns ON the specified bit.
SINGLE BIT RESET	RSTB	@RSTB, !RSTB, !@RSTB	533	RSTB(533) turns OFF the specified bit.

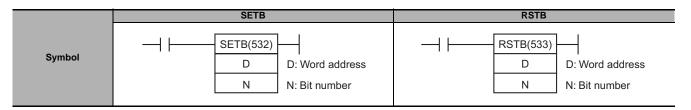

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
D	Word address	UINT	1
N	Bit number	UINT	1

Operand Specifications

Aron	Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
D	ОК	ОК	ОК	OK	ОК	ОК	ОК	ОК	ОК	ОК		ОК		ОК				
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	UK	OK	OK		OK				


Flags

Operand	Description	Data type						
Error Flag	P_ER	 ON if N is not within the specified range of 0000 to 000F (&0 to &15). OFF in all other cases. 						

Function


• SETB

SETB(532) turns ON bit N of word D when the execution condition is ON. The status of the bit is not affected when the execution condition is OFF.

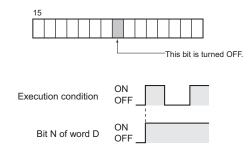

RSTB

RSTB(533) turns OFF bit N of word D when the execution condition is ON. The status of the bit is not affected when the execution condition is OFF. (Use SETB(532) to turn ON the bit.)

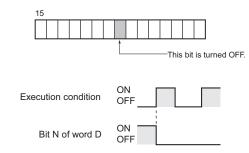


Hint

- Differences between SET/RSET and SETB(532)/RSTB(533)
 The instructions operate in the same way when the specified bit is in the CIO, W, H, or A Area.
 The SETB(532) and RSTB(533) instructions can control bits in the DM and EM Areas, unlike SET and RSET.
- Differences between OUTB(534) and SETB(532)/RSTB(533)
 The SETB(532) and RSTB(533) instructions change the status of the specified bit only when their execution condition is ON. These instructions have no effect on the status of the specified bit when their execution condition is OFF.
 - The OUTB(534) instruction turns ON the specified bit when its execution condition is ON and turns OFF the specified bit when its execution condition is OFF.
- The set and reset inputs for a KEEP(011) instruction must be programmed with the instruction, but the SETB(532) and RSTB(533) instructions can be programmed completely independently. Furthermore, the same bit may be used as the operand in any number of SETB(532) and RSTB(533) instructions.

Precautions


- Bits turned ON by SETB(532) can be turned OFF by any other instruction, not just RSTB(533). Bits turned OFF by RSTB(533) can be turned ON by any other instruction, not just SETB(532).
- SETB(532) and RSTB(533) cannot set/reset timers and counters.
- When SETB(532) or RSTB(533) is programmed between IL(002) and ILC(003) or JMP(004) and JME(005), the status of the specified bit will not be changed if the program section is interlocked or jumped, i.e., when the interlock condition or jump condition is OFF.
- SETB(532) and RSTB(533) have immediate refreshing variations (!SETB(532) and !RSTB(533)). When an external output bit has been specified in one of these instructions, any changes to the specified bit will be refreshed when the instruction is executed and reflected immediately in the output bit. (The changes will not be reflected immediately if the bit is allocated to a Group-2 High-density I/O Unit, High-density Special I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.)
- When external output is specified for bit address N of word D by !SETB (or !RSTB instruction), bit
 address N of word D which turned ON (or OFF) will be OUT-refreshed at that point (when the
 instruction is executed). Bit address N of word D which was turned ON (or OFF) remains ON (or
 OFF) as normal until an RSTB instruction (or SETB instruction) is executed.

Example Programming

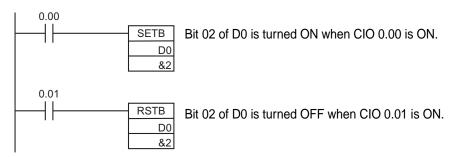

OUTB

Instruction	Mnemonic	Variations	Function code	Function				
SINGLE BIT OUTPUT	OUTB	!OUTB	534	OUTB(534) outputs the status of the instruction's execution condition to the specified bit.				

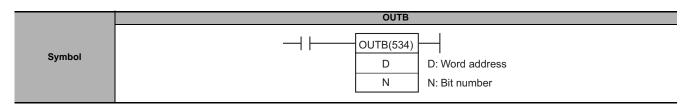

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	Not allowed	OK	OK	OK	OK		

Operands


Operand	Description	Data type	Size
D	Word address	UINT	1
N	Bit number	UINT	1

Operand Specifications

Area -		Word addresses							Indirect DM/EM addresses		Con-		Registers		Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
D	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		ОК		ОК				
N		OK	OK	OK	UK	OK	OK	OK	OK	OK	OK	OK		OK				

Function

When the execution condition is ON, OUTB(534) turns ON bit N of word D. When the execution condition is OFF, OUTB(534) turns OFF bit N of word D. If the immediate refreshing version is not used, the status of the execution condition (power flow) is written to the specified bit in I/O memory. If the immediate refreshing version is used, the status of the execution condition (power flow) is written to the Basic Output Unit's output terminal as well as the output bit in I/O memory.

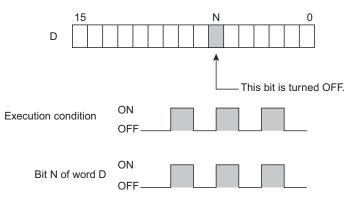

Hint


Difference between SETB(532)/RSTB(533) and OUTB(534)
 For OUTB(534), the operand bit is turned ON when the input condition turns ON and is turned OFF when the input condition turns OFF. For SETB(532) and RSTB(533), the operand bit turns ON or OFF, respectively, when the input condition turns ON and the operand bit does not change when the input condition turns OFF.

```
OUTB
D0
&10
```

Immediate refreshing (!OUTB(534)) can be specified. An immediate refresh instruction updates the
status of the output terminal just after the instruction is executed on an output bit allocated to a Basic
Output Unit (but not for C200H Group 2 Multi-point Output Units or Basic Output Units on Slave
Racks), at the same time as it writes the status of the execution condition (power flow) to the
specified output bit in I/O memory.

Precautions

- When OUTB(534) is programmed between IL(002) and ILC(003), the specified bit will be turned OFF
 if the program section is interlocked. (This is the same as an OUT instruction in an interlocked
 program section.)
- When a word is specified for the bit number (N), only bits 00 to 03 of N are used. For example, if N contains FFFA hex, OUTB(534) will control bit 10 of word D.
- If an indirect index address is used, OUTB(534) is executed even when the input condition turns OFF. Be particularly careful when programming OUT using an indirect index register address.

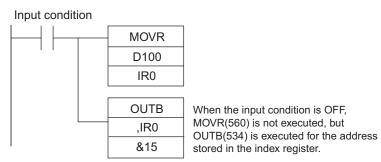

Sequence Control Instructions

Overview of Interlock Instructions

Interlock Instructions

The following instruction combinations can be used to interlock outputs in a program section.

- INTERLOCK and INTERLOCK CLEAR (IL(002) and IL(003))
- MULTI-INTERLOCK DIFFERENTIATION HOLD and MULTI-INTERLOCK CLEAR (MILH(517) and MILC(519))*

Note MILH(517) holds the status of the Differentiation Flag, so differentiated instructions that were interlocked are executed after the interlock is cleared.


 MULTI-INTERLOCK DIFFERENTIATION RELEASE and MULTI-INTERLOCK CLEAR (MILR(518) and MILC(519))*


Note MILR(518) does not hold the status of the Differentiation Flag, so differentiated instructions that were interlocked are not executed after the interlock is cleared.

 These instructions are supported only by CS/CJ-series CPU Unit Ver. 2.0 or later and CJ2 CPU Units.

Differences between Interlocks and Multiple Interlocks

Regular interlocks (IL(002) and IL(003)) cannot be nested, but multiple interlocks (MILH(517), MILR(518), and MILC(519)) can be nested. Ladder programming can be simplified by nesting multiple interlocks, as shown in the following diagram.

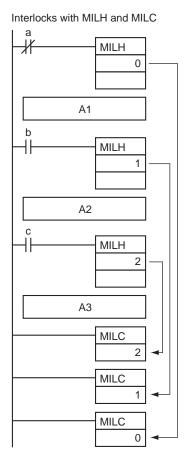

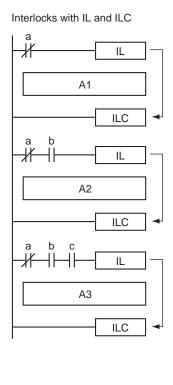

• Differences between MILH(517) and MILR(518)

Differentiated instructions (DIFU, DIFD, or instructions with a @ or % prefix) operate differently in interlocks created with MILH(517) and MILR(518).


The operation of differentiated instructions in an interlock created with MILH(517) is identical to the operation in an interlock created with IL(002).

For details, refer to 3-5-5 MULTI-INTERLOCK DIFFERENTIATION HOLD, MULTI-INTERLOCK DIFFERENTIATION RELEASE, and MULTI-INTERLOCK CLEAR: MILH(517), MILR(518), and MILC(519).

Precautions


Do not combine interlocks created with different interlock instructions (IL-ILC, MILH-MILC, and MILR-MILC). The interlocks may not operate properly if different interlock methods are used together. For details on combining instructions, refer to 3-5-5 MULTI-INTERLOCK DIFFERENTIATION HOLD, MULTI-INTERLOCK DIFFERENTIATION RELEASE, and MULTI-INTERLOCK CLEAR: MILH(517), MILR(518), and MILC(519).

For example, an MILH(517) instruction cannot be inserted between IL(002) and IL(003).

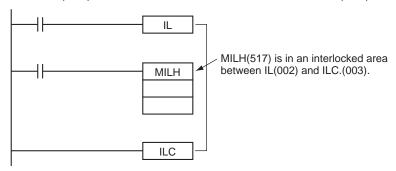

Note The different interlocks (IL-ILC, MILH-MILC, and MILR-MILC) can be used together as long as the interlocked program sections do not overlap.

For example, all three interlock methods can be used without overlapping, as shown in the following diagram.

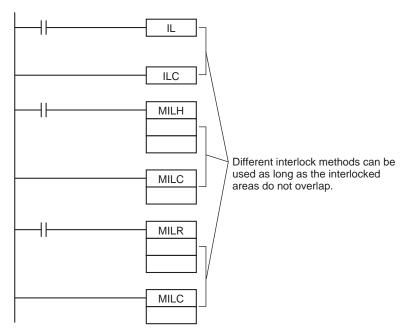

• Differences between Interlocks and Jumps

The following table shows the differences between interlocks (created with IL(002)/ILC(003), MILH(517)/MILC(519), or MILR(518)/MILC(519)) and jumps created with JMP(004)/JME(005).

Item	Treatment in IL(002)/ILC(003), MILH(517)/MILC(519), or MILR(518)/MILC(519))	Treatment in JMP(004)/JME(005)
Instruction execution	Except OUT, OUT NOT, OUTB(534), and timer instructions, all instructions are not executed.	No instructions are executed.
Output status in instructions	Except for outputs in OUT, OUT NOT, OUTB(534), and timer instructions, all outputs retain their previous status.	All outputs retain their previous status.
Bits in OUT, OUT NOT, OUTB(534)	OFF	All outputs retain their previous status.
Status of timer instructions (except (TTIM(087), TTIMX(555), MTIM(543), and MTIMX(554))	Reset	Operating timers (TIM, TIMX(550), TIMH(015), TIMHX(551), TMHH(540), TMHHX(552), TIMU(541), TIMUX(556), TMUH(544), TMUHX(557) only) continue timing because the PVs are updated even when the timer instruction is not being exe- cuted.

END

Instruction	Mnemonic	Variations	Function code	Function
END	END		001	Indicates the end of a program.

	END
Symbol	END(001)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	Not allowed	Not allowed	Not allowed	OK	Not allowed


Flags

There are no flags affected by this instruction.

Function

END(001) completes the execution of a program for that cycle. No instructions written after END(001) will be executed.

Execution proceeds to the program with the next task number. When the program being executed has the highest task number in the program, END(001) marks the end of the overall main program.

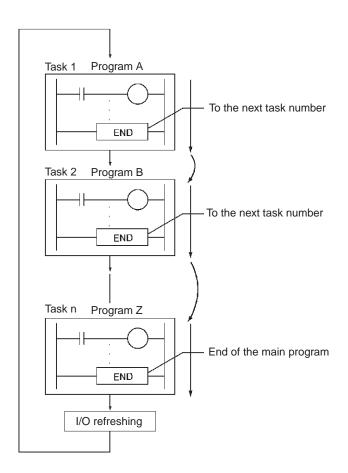

Precautions

• Always place END(001) at the end of each program. A programming error will occur if there is not an END(001) instruction in the program.

NOP

Instruction	Mnemonic	Variations	Function code	Function
NO OPERATION	NOP		000	This instruction has no function.

Cumbal	NOP
Symbol	(There is no ladder symbol associated with NOP(000).)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Flags

No flags are affected by NOP(000).

Function

- No processing is performed for NOP(000), but this instruction can be used to set aside lines in the program where instructions will be inserted later.
- NOP(000) can only be used with mnemonic displays, not with ladder programs.

Hint

• When the instructions are inserted later, there will be no change in program addresses.

IL/ILC

Instruction	Mnemonic	Variations	Function code	Function
INTERLOCK	IL		002	Interlocks all outputs between IL(002) and ILC(003) when the execution condition for IL(002) is OFF.
INTERLOCK CLEAR	ILC		003	Indicates the end of the interlock range.

	IL	ILC
Symbol		ILC(003)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	Not allowed	OK	ОК	OK

Flags

Name	Label	Operation
Error Flag	ER	Unchanged *1
Equals Flag	=	Unchanged *1
Negative Flag	N	Unchanged *1

^{*1} In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D (for Single-CPU System) CPU Units, the Equals and Negative Flags are left unchanged. In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.


Function

When the execution condition for IL(002) is OFF, the outputs for all instructions between IL(002) and ILC(003) are interlocked. When the execution condition for IL(002) is ON, the instructions between IL(002) and ILC(003) are executed normally.

The following table shows the treatment of various outputs in an interlocked section between IL(002) and ILC(003).


Instruction	Treatment	
Bits specified in OUT, OUT NOT, or OUTB(534)		OFF
TIM, TIMX(550), TIMH(015), TIMHX(551), TMHH(540),	Completion Flag	OFF (reset)
TMHHX(552), TIML(542), and TIMXL(553)	PV	Time set value (reset)
TIMU(541), TIMUX(556), TMUH(544), and TMUHX(557)	Cannot be referenced.	
Bits/words specified in all other instructions (See note.)	Retain previous status.	

Note Bits and words in all other instructions including TTIM(087), TTIMX(555), MTIM(543), MTIMX(554), SET, RSET, CNT, CNTX(546), CNTR(012), CNTRX(548), SFT, and KEEP(011) retain their previous status.

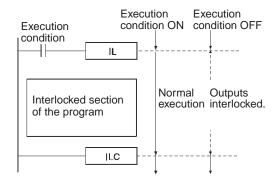


Hint

- If there are bits which you want to remain ON in an interlocked program section, set these bits to ON with SET just before IL(002).
- It is often more efficient to switch a program section with IL(002) and ILC(003). When several processes are controlled with the same execution condition, it takes fewer program steps to put these processes between IL(002) and ILC(003).

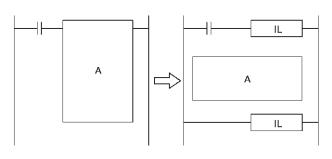


Precautions

- The cycle time is not shortened when a section of the program is interlocked because the interlocked instructions are executed internally.
- In general, IL(002) and ILC(003) are used in pairs, although it is possible to use more than one IL(002) with a single ILC(003) as shown in the following diagram. If IL(002) and ILC(003) are not paired, an error message will appear when the program check is performed but the program will be executed properly.

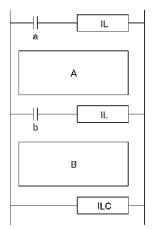

	ution lition	Program section			
а	b	Α	В		
OFF	ON	Interlocked	Interlocked		
OFF	OFF	Interlocked	Interlocked		
ON	OFF	Not interlocked	Interlocked		
ON	ON	Not interlocked	Not interlocked		

• IL(002) and ILC(003) cannot be nested, as in the following diagram. (Use MILH(517)/MILR(518) and MILC(519) when it is necessary to nest interlocks.)

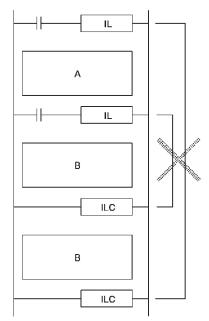

Operation of Differentiated Instructions

If there is a differentiated instruction (DIFU, DIFD, or instruction prefixed by @ or %) between IL(002) and ILC(003) instructions, that instruction will be executed when the interlock is cleared if the differentiation condition of the instruction is satisfied by means of a change in the input condition between starting and clearing of the interlock.

Example:

When a DIFFERENTIATE UP (DIFU(013)) instruction is used and the input condition is OFF when the interlock starts and ON when the interlock is cleared, the DIFFERENTIATE UP (DIFU(013)) instruction will be executed when the interlock is cleared.


```
1. When 0.00 is OFF (interlock starts), input condition 0.01 of DIFU is OFF.
2. Input condition 0.01 of DIFU goes from OFF to ON while 0.00 is OFF (interlock in effect),
3. When 0.00 goes from OFF to ON (interlock cleared), the DIFU instruction is executed if input condition 0.01 of DIFU is ON.

| DIFU | 10.00 | ILC
```

Reference:


An IL(002) instruction operates in the same way as an MILH(517) instruction in relation to differentiated instruction operation.

Timing Chart

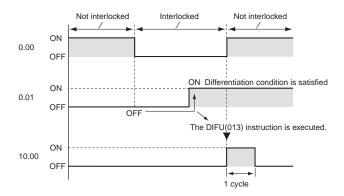


Example Programming

When CIO 0.00 is OFF in the right example, all outputs between IL(002) and ILC(003) are interlocked. When CIO 0.00 is ON in the right example, the instructions between IL(002) and ILC(003) are executed normally.

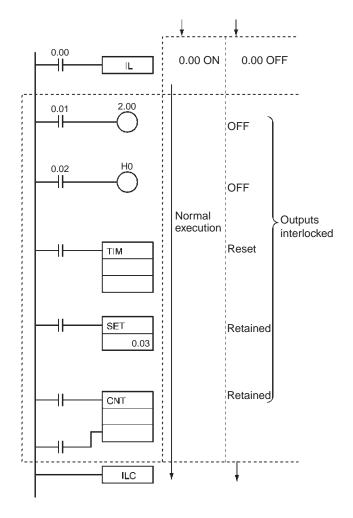

MILH/MILR/MILC

Instruction	Mnemonic	Variations	Function code	Function
MULTI-INTERLOCK DIFFERENTIATION HOLD	MILH		517	Interlocks all outputs between MILH(517) and MILC(519) when the execution condition for MILH(517) is OFF.
MULTI-INTERLOCK DIFFERENTIATION RELEASE	MILR		518	Interlocks all outputs between MILR(518) and MILC(519) when the execution condition for MILR(518) is OFF.
MULTI-INTERLOCK CLEAR	MILC		519	Indicates the end of a multi-interlock range by means of an MILH or MILR instruction with the same interlock number.

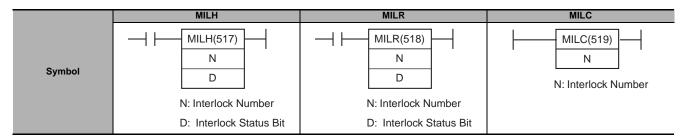

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	Not allowed	OK	ОК	OK

Operands

Operand	Description	Data type	Size	
N	Interlock number		1	
D	Interlock status bit	BOOL		

N: Interlock Number

The interlock number must be between 0 and 15. Match the interlock number of the MILH(517) (or MILR(518)) instruction with the same number in the corresponding MILC(519) instruction. The interlock numbers can be used in any order.

D: Interlock Status Bit

- ON when the program section is not interlocked.
- OFF when the program section is interlocked.

When the interlock is engaged, the Interlock Status Bit can be force-set to release the interlock. Conversely, when the interlock is not engaged, the Interlock Status Bit can be force-reset to engage the interlock.

Operand Specifications

Area	Word addresses			Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR							
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											OK							
D	OK	OK	OK	OK										OK				

Flags

Name	Label	Operation
Error Flag	P_ER	OFF

187

Function

When the execution condition for MILH(517) (or MILR(518)) with interlock number N is OFF, the outputs for all instructions between that MILH(517)/MILR(518) instruction and the next MILC(519) with interlock number N are interlocked.

When the execution condition for MILH(517) (or MILR(518)) with interlock number N is ON, the instructions between that MILH(517)/MILR(518) instruction and the next MILC(519) with interlock number N are executed normally.


Interlock Status

The following table shows the treatment of various outputs in an interlocked section between MILH(517)/MILR(518) instruction and the next MILC(519).

Instruction	Treatment	
Bits specified in OUT, OUT NOT, or	OFF	
TIM, TIMX(550), TIMH(015),	Completion Flag	OFF (reset)
TIMHX(551), TMHH(540), TMHHX(552), TIML(542), and TIMXL(553)	PV	Time set value (reset)
TIMU(541), TIMUX(556), TMUH(544), and TMUHX(557)	Cannot be referenced.	
Bits/words specified in all other inst	Retain previous status.	

Note Bits and words in all other instructions including TTIM(087), TTIMX(555), MTIM(543), MTIMX(554), SET, RSET, CNT, CNTX(546), CNTR(012), CNTRX(548), SFT, and KEEP(011) retain their previous status.

The MILH(517)/MILR(518) instruction turns OFF the Interlock Status Bit (operand D) when the interlock is in engaged and turns ON the bit when the interlock is not engaged. Consequently, the Interlock Status Bit can be monitored to check whether or not the interlock for a given interlock number is engaged.

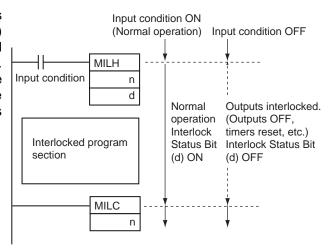


Nesting


Interlocks are nested when an interlocked program section (MILH(517)/MILR(518) and MILC(519) combination) is placed within another interlocked program section (MILH(517)/MILR(518) and MILC(519) combination). Interlocks can be nested up to 16 levels. Nesting can be used for the following kinds of applications.

Example 1

Interlocking the entire program with one condition and interlocking a part of the program with another condition (1 nesting level)

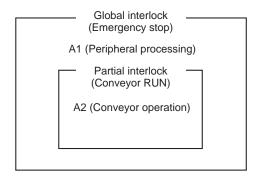

- A1 and A2 are interlocked when the Emergency Stop Button is ON.
- A2 is interlocked when Conveyor RUN is OFF.

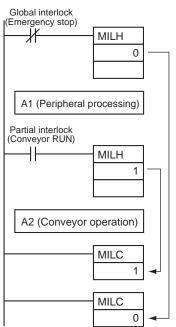


When the Emergency Stop is ON (input condition OFF), both A1 and A2 are interlocked.

When the Emergency Stop is OFF (input condition ON), A1 is executed normally and A2 is controlled by the Conveyor RUN switch as described below.


When the Conveyor RUN switch is OFF (input condition OFF), A2 is interlocked. When the Conveyor RUN switch is ON (input condition ON), A2 is executed normally.

Example 2

Interlocking the entire program with one condition and interlocking two overlapping parts of the program with other conditions (2 nesting levels)

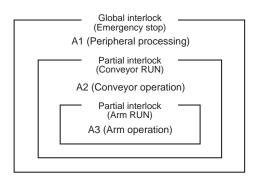

- A1, A2, and A3 are interlocked when the Emergency Stop Button is ON.
- A2 and A3 are interlocked when Conveyor RUN is OFF.
- A3 is interlocked when Arm RUN is OFF.

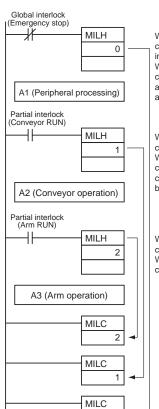

0

When the Emergency Stop is ON (input condition OFF), A1, A2, and A3 are interlocked.

When the Emergency Stop is OFF (input condition ON), A1 is executed normally and A2 and A3 are controlled by the Conveyor RUN and Arm RUN switches as described below.

When the Conveyor RUN switch is OFF (input condition OFF), both A2 and A3 are interlocked. When the Conveyor RUN switch is ON (input condition ON), A2 is executed normally and A3 is controlled by the Arm RUN switch as described below.

When the Arm RUN switch is OFF (input condition OFF), A3 is interlocked. When the Arm RUN switch is ON (input condition ON), A3 is executed normally.

Differences between MILH(517) and MILR(518)

Differentiated instructions (DIFU, DIFD, or instructions with a @ or % prefix) operate differently in interlocks created with MILH(517) and MILR(518).

When a program section is interlocked with MILR(518), a differentiated instruction will not be executed when the interlock is cleared even if the differentiation condition was activated during the interlock (comparing the status of the execution condition when the interlock started to its status when the interlock was cleared).

When a program section is interlocked with MILH(517), a differentiated instruction will be executed when the interlock is cleared if the differentiation condition was activated during the interlock (comparing the status of the execution condition when the interlock started to its status when the interlock was cleared).

Instruction	Operation of Differentiated Instructions
MILH(517) MULTI-INTERLOCK DIFFER- ENTIATION HOLD	A differentiated instruction (DIFU, DIFD, or instruction with a @ or % prefix) will be executed after the interlock is cleared if the differentiation condition of the instruction was established while the instruction was interlocked. (The status of the execution condition when the interlock started is compared to its status when the interlock was cleared.)
MILR(518) MULTI-INTERLOCK DIFFER- ENTIATION RELEASE	A differentiated instruction (DIFU, DIFD, or instruction with a @ or % prefix) will not be executed after the interlock is cleared even if the differentiation condition of the instruction was established while the instruction was interlocked.

Operation of Differentiated Instructions in an MILH(517) Interlock


If there is a differentiated instruction (DIFU, DIFD, or instruction with a @ or % prefix) between MILH(517) and the corresponding MILC(519), that instruction will be executed after the interlock is cleared if the differentiation condition of the instruction was established.


In the same way, a differentiated instruction will be executed if its execution condition is established at the same time that the interlock is started or cleared.

Many other conditions in the program may cause the differentiation condition to be reset even if it was established during the interlock. In this case, the differentiation instruction will not be executed when the interlock is cleared.

Example

When a DIFFERENTIATE UP (DIFU(013)) instruction is being used and the input condition is OFF when the interlock starts and ON when the interlock is cleared, DIFU(013) will be executed when the interlock is cleared. (Differentiated instructions operate the same in the MILH(517) interlock as they would in an IL(002) interlock.)

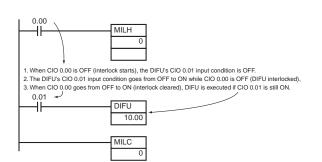

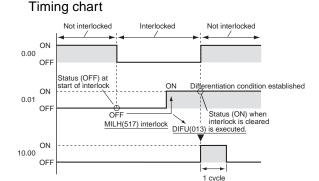


Operation of Differentiated Instructions in an MILR(518) Interlock


If there is a differentiated instruction (DIFU, DIFD, or instruction with a @ or % prefix) between MILR(518) and the corresponding MILC(519), that instruction will not be executed after the interlock is cleared even if the differentiation condition of the instruction was established.

In the same way, a differentiated instruction will not be executed if its execution condition is established at the same time that the interlock is started or cleared.

Example

When a DIFFERENTIATE UP (DIFU(013)) instruction is being used and the input condition is OFF when the interlock starts and ON when the interlock is cleared, DIFU(013) will not be executed when the interlock is cleared.

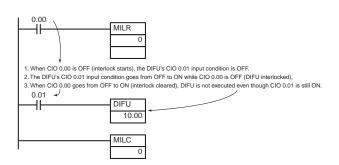


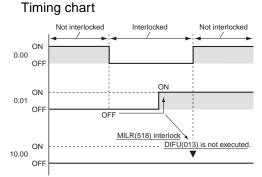


Controlling Interlock Status from a Programming Device

An interlock can be engaged or released manually by force-resetting or force-setting the Interlock Status Bit (specified with operand D of MILH(517) and MILR(518)) from a Programming Device. The forced status of the Interlock Status Bit has priority and overrides the interlock status calculated by program execution.

Force-set: Releases the interlock.

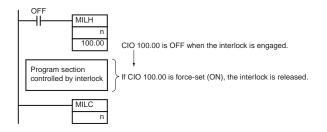


Force-reset: Engages the interlock.

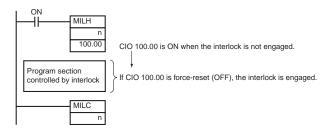

Hint


- The cycle time is not shortened when a section of the program is interlocked by MILH(517) or MILR(518) because the interlocked instructions are executed internally.
- When nesting interlocks, assign interlock numbers so that the nested program section does not exceed the outer program section.

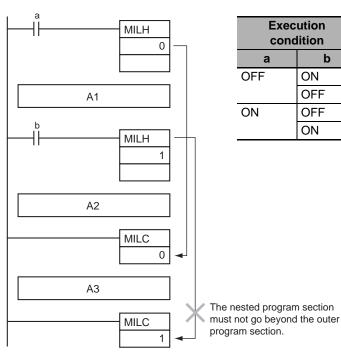

Execution condition		Program section					
а	b	A1	A2	A3			
OFF	ON	Interlocked	Interlocked	Not interlocked			
	OFF						
ON	OFF	Not interlocked	Interlocked	Interlocked			
	ON	Not interlocked	Not interlocked	Not interlocked			


 Other instructions can be input between the MILC(519) instructions, as shown in

the following diagram.

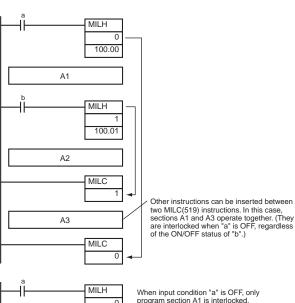


 If there is an ILC(003) instruction between an MILH(517) and MILC(519) pair, the program section between MILH(517) and ILC(003) will be interlocked.

- If there is an ILC(003) instruction between an MILR(518) and MILC(519) pair, the ILC(003) instruction will be ignored and the full program section between MILR(518) and MILC(519) will be interlocked.
- If there is another MILH(517) or MILR(518) instruction with the same interlock number between an MILH(517) and MILC(519) pair and the first MILH(517) instruction's interlock is engaged, the second MILH(517)/MILR(518) will not operate.
- If there is another MILH(517) or MILR(518) instruction with the same interlock number between an MILH(517) and MILC(519) pair and the first MILH(517) instruction's interlock is not engaged, the second MILH(517)/MILR(518) will operate normally.

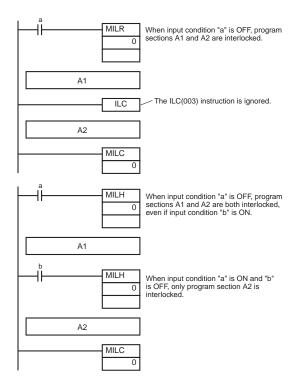

Note The MILR(518) interlocks operate in the same way if there is another MILH(517) or MILR(518) instruction with the same interlock number between an MILR(518) and MILC(519) pair.


- If there is an MILC(519) instruction with a different interlock number between an MILH(517)/MILR(518) and MILC(519) pair, that MILC(519) instruction will be ignored.
- If there is an MILH(517) instruction between an IL(002) and ILC(003) pair and the IL(002) interlock is engaged, the MILH(517) instruction has no effect. In this case, the program section between IL(002) and ILC(003) will be interlocked.
 If the IL(002) interlock is not engaged and
 - the MILH(517) instruction's execution condition (b in this case) is OFF, the program section between MILH(517) and ILC(003) will be interlocked.
- If there is an MILC(519) instruction between an IL(002) and ILC(003) pair, that MILC(519) instruction will be ignored and the entire program section between IL(002) and ILC(003) will be interlocked.

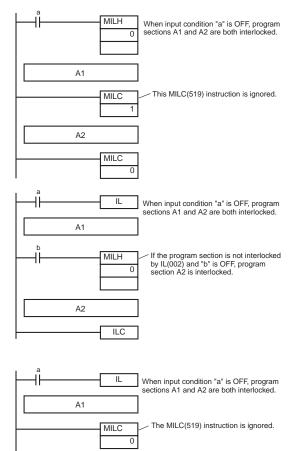


A2

ILC

Program operation can be switched more efficiently by using interlocks with MILH(517) or MILR(518).
 Instead of switching processing with compound conditions, insert an MILH(517) or MILR(518) instruction before each process and an MILC(519) instruction after each process.

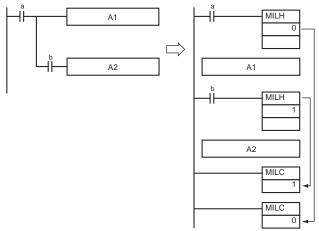


- Unlike the IL(002) interlocks, MILH(517) and MILR(518) interlocks can be nested, so the operation of similar programs will be different if MILH(517) or MILR(518) is used instead of ILC(002).
 - Program with MILH(517)/MILC(519) Interlocks

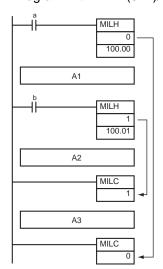

Execution condition		Program section					
а	b	A1	A2	A3			
OFF	ON	Interlocked	Interlocked	Not interlocked			
	OFF						
ON	OFF	Not interlocked	Interlocked	Not interlocked			
ON	ON	Not interlocked	Not interlocked	Not interlocked			

• Program with IL(002)/ILC(003) Interlocks

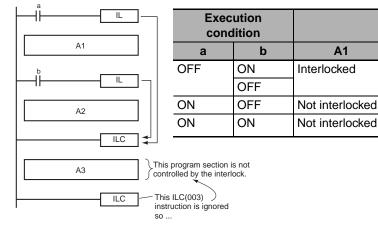

• If there are bits which you want to remain ON in a program section interlocked by MILH(517) or MILR(518), set these bits to ON with SET just before the MILH(517) or MILR(518) instruction.

Program section

A2

Interlocked

Interlocked

Not interlocked

A3

Not interlocked

(Not controlled

IL(002)/ILC(003)

by the


interlock.)

Example Programming

When W0.00 and W0.01 are both ON, the instructions between MILH(517) with interlock number 0 and MILC(519) with interlock number 0 are executed normally.


When W0.00 is OFF, the instructions between MILH(517) with interlock number 0 and MILC(519) with interlock number 0 are interlocked.

When W0.00 is ON and W0.01 are OFF, the instructions between MILH(517) with interlock number 1 and MILC(519) with interlock number 1 are interlocked. The other instructions are executed normally.

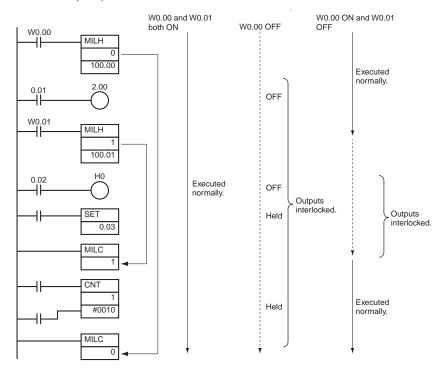

JMP/JME

Instruction Mnemonic		Variations	Function code	Function
JUMP	JMP		004	When the execution condition for JMP(004) is OFF, program execution jumps directly to the first JME(005) in the program with the same jump number.
JUMP END	JME		005	Indicates the end position of a jump by JMP or CJP instruction.

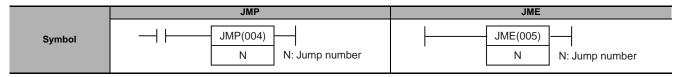

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	Not allowed	ОК	OK	Not allowed

Operands

Operand	Description	Data type	Size	
N	Jump number	UINT	1	

N: Jump Number

The jump number must be 0000 to 03FF (&0 to &1,023 decimal).

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the jump number must be between the range 0000 to 00FF hex or &0 to &255 decimal.

Operand Specifications

Δ-	ea		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
AI	ea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
JMP	N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK*1	OK		OK				
JME	N											UK '							

^{*1} For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the range is #0000 to #00FF (binary) or &0 to &1023 (decimal).

Flags

JMP

Name	Label	Operation
Error Flag	ER	 ON if N is not within the specified range of 0000 to 03FF. (See note.) ON if there is a JMP(004) in the program without a JME(005) with the same jump number. ON if there is a JMP(004) in the task without a JME(005) with the same jump number in the task. OFF in all other cases.

^{*1} For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the range is 0 to 255 (0000 to 00FF hex).


JME

There are no flags affected by this instruction.

Function

When the execution condition for JMP(004) is ON, no jump is made and the program is executed consecutively as written.

When the execution condition for JMP(004) is OFF, program execution jumps directly to the first JME(005) in the program with the same jump number. The instructions between JMP(004) and JME(005) are not executed, so the status of outputs between JMP(004) and JME(005) is maintained. In block programs, the instructions between JMP(004) and JME(005) are skipped regardless of the status of the execution condition.

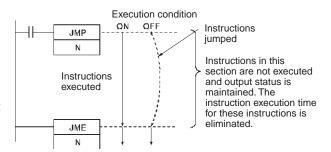


Hint

- Because all of instructions between JMP(004)/CJP(510)/CJPN(511) and JME(005) are skipped when the execution condition for JMP(004) is OFF, the cycle time is reduced by the total execution time of the skipped instructions. In contrast, processing time equivalent to NOP(000) processing is required for instructions between JMP0(515) and JME0(516), so the cycle time is not reduced as much with those jump instructions.
- The following table compares the various jump instructions.

Item	JMP(004) JME(005)	CJP(510) JME(005)	CJPN(511) JME(005)	JMP0(515) JME0(516)					
Execution condition for jump	OFF	OFF							
Number allowed	1,024 total (256 f	1,024 total (256 for CJ1M-CPU11/21.)							
Instruction processing when jumped	Not executed.	NOP(000) processing							
Instruction execution time when jumped	None	Equivalent to NOP(000) instructions							
Status of outputs (bits and words) when jumped	Bits and words m	aintain their previou	s status.						
Status of operating timers when jumped	Operating timers continue timing.								
Processing in block programs	Always jump.	Jump when ON.	Jump when OFF.	Not allowed.					


Precautions

- All of the outputs (bits and words) in jumped instructions retain their previous status. Operating timers (TIM, TIMX(550), TIMH(015), TIMHX(551), TMHH(540), TMHHX(552), TIMU(541), TIMUX(556), TMUH(544), and TMUHX(557)) continue timing because the PVs are updated even when the timer instruction is not being executed.
 - Error will occur in the present value of any active TIMU(541), TIMUX(556), TMUH(544), TMUHX(557) instruction when the instruction is jumped.
- When there are two or more JME(005) instructions with the same jump number, only the instruction with the lower address will be valid. The JME(005) with the higher program address will be ignored.
- When JME(005) precedes JMP(004) in the program, the instructions between JME(005) and JMP(004) will be executed repeatedly as long as the execution condition for JMP(004) is OFF. A Cycle Time Too Long error will occur if the execution condition is not turned ON or END(001) is not executed within the maximum cycle time.

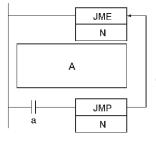

Program section A is executed repeatedly as long as execution condition a is OFF.

 In block programs, the instructions between JMP(004) and JME(005) are always skipped regardless of the status of the execution condition for JMP(004).

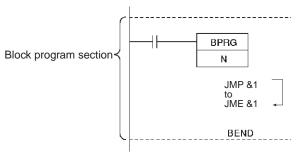


- JMP(004) and JME(005) pairs must be in the same task because jumps between tasks are not allowed. An error will occur if a JME(005) instruction is not programmed in the same task as its corresponding JMP(004) instruction.
- The operation of DIFU(013), DIFD(014), and differentiated instructions is not dependent solely on the status of the execution condition when they are programmed between JMP(004) and JME(005). When DIFU(013), DIFD(014), or a differentiated instruction is executed in an jumped section immediately after the execution condition for the JMP(004) has gone ON, the execution condition for the DIFU(013), DIFD(014), or differentiated instruction will be compared to the execution condition that existed before the jump became effective (i.e., before the execution condition for JMP(004) went OFF).

Example Programming


When CIO 0.00 is OFF in the right example, the instructions between JMP(004) and JME(005) are not executed and the outputs maintain their previous status.

When CIO 0.00 is ON in the right example, the instructions between JMP(004) and JME(005) are executed normally.

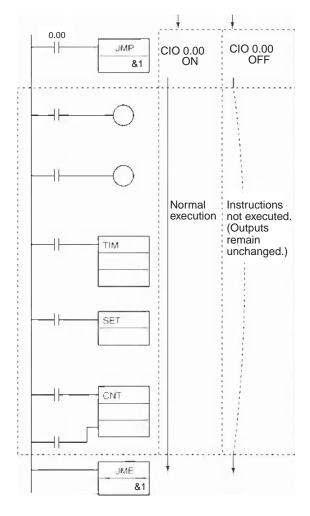

CJP/CJPN

Instruction	Mnemonic	Variations	Function code	Function
CONDITIONAL JUMP	CJP		510	When the execution condition for CJP(510) is ON, program execution jumps directly to the first JME(005) in the program with the same jump number.
CONDITIONAL JUMP NOT	CJPN		511	When the execution condition for CJP(004) is OFF, program execution jumps directly to the first JME(005) in the program with the same jump number.

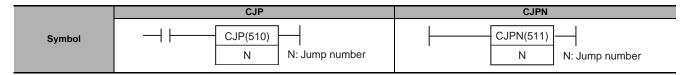

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	Not allowed	OK	OK	Not allowed

Operands

Operand	Description	Data type	Size	
N	Jump number	UINT	1	

N: Jump number

The jump number must be 0000 to 03FF (0 to 1,023 decimal).

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the jump number must be between the range 0000 to 00FF hex or &0 to &255 decimal.

Operand Specifications

Area		Word addresses					Indirect DM/EM addresses Con-				Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
CJP/ CJPN N	ОК	ОК	ОК	OK	OK	OK	ОК	ОК	ОК	OK	OK*1	ОК		ОК				

^{*1} For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the range is #0000 to #00FF (binary) or &0 to &1023 (decimal).

Flags

Name	Label	Operation
Error Flag	ER	 ON if there is not a JME(005) with the same jump number as CJP(510) or CJPN(511). (See note.) ON if N is not within the specified range of 0000 to 03FF. ON if there is a CJP(510) or CJPN(511) instruction in a task without a JME(005) with the same jump number. OFF in all other cases.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the jump number must be between the range 0 to 255 (0000 to 00FF hex).

Function

CJP


When the execution condition for CJP(510) is OFF, no jump is made and the program is executed consecutively as written.

When the execution condition for CJP(510) is ON, program execution jumps directly to the first JME(005) in the program with the same jump number.

CJPN

When the execution condition for CJPN(511) is ON, no jump is made and the program is executed consecutively as written.

When the execution condition for CJPN(511) is OFF, program execution jumps directly to the first JME(005) in the program with the same jump number.

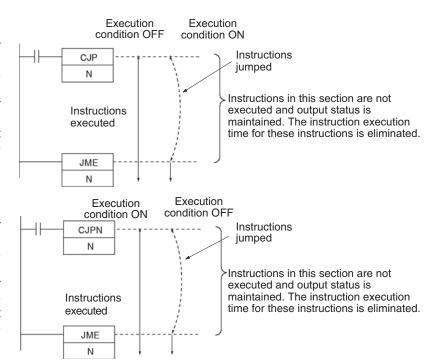

Hint

• In the case of a JMP, CJP, or CJPN instruction, the program jumps directly to the JME instruction when the jump condition is satisfied. An instruction is not executed between JMP/CJP/CJPN and JME, and thus instruction execution time is not needed in that interval. Therefore, cycle time is reduced.

By contrast, in the case of a JMP0 instruction, when the jump condition is satisfied, NOP processing (non-functional processing) is executed between JMP0 and JME0. During that interval, a processing time equivalent to a NOP instruction is required, and thus the cycle time will not be reduced.

• Functional comparison of jump instructions

Jump instruction	JMP-JME	CJP-JME	CJPN-JME	JMP0-JME0						
Input condition for jump	OFF	ON	OFF	OFF						
Number used	Total of 1024 (256 on the 0	Total of 1024 (256 on the CJ1M-CPU11/21)								
Instruction processing at jump	Non-execution	Non-execution								
Execution time for jump	None			Total time is equivalent to a NOP instruction						
Instruction output at jump	Holds the previous status									
Processing in block program area	Unconditional jump	Jump at ON	Jump at OFF	Not allowed						

Precautions


- CJP(510) jumps to the first JME(005) when the execution condition is ON and CJPN(511) jumps to the first JME(005) when the execution condition is OFF.
- All of the outputs (bits and words) in jumped instructions retain their previous status. Operating timers (TIM, TIMX(550), TIMH(015), TIMHX(551), TMHH(540), and TMHHX(552)) continue timing be-cause the PVs are updated even when the timer instruction is not being executed.
 Error will occur in the present value of any active TIMU(541), TIMUX(556), TMUH(544), TMUHX(557) instruction when the instruction is jumped.
- When there are two or more JME(005) instructions with the same jump number, only the instruction with the lower address will be valid. The JME(005) with the higher program address will be ignored.

- When JME(005) precedes the CJP(510) or CJPN(511) instruction in the program, the instructions inbetween will be executed repeatedly as long as the execution condition remains OFF (CJP(510)) or ON (CJPN(511)). A Cycle Time Too Long error will occur if the jump is not completed by changing the execution condition executing END(001) within the maximum cycle time.
- When the execution condition for the CJP(510) is ON or the execution condition for CJPN(511) is OFF, program execution will jump directly to the JME instruction without executing instructions between CJP(510)/CJPN(511) and JME. No execution time will be required for these instructions and the cycle time will thus be reduced.
- In the block program area, the program will jump when the input condition prior to the CJP (CJPN) instruction is ON (OFF).
- When a CJP(510) or CJPN(511) instruction is programmed in a task, there must be a JME(005) with the same jump number because jumps between tasks are not allowed. An error will occur if a corresponding JME(005) instruction is not programmed in the same task.
- The operation of DIFU(013), DIFD(014), and differentiated instructions is not dependent solely on the status of the execution condition when they are programmed in a jumped program section. When DIFU(013), DIFD(014), or a differentiated instruction is executed in an jumped section immediately after the execution condition for the CJP(510) has gone OFF (ON for CJPN(511)), the execution condition for the DIFU(013), DIFD(014), or differentiated instruction will be compared to the execution condition that existed before the jump became effective.

Example Programming

When CIO 0.00 is ON in the right example, the instructions between CJP(510) and JME(005) are not executed and the outputs maintain their previous status.

When CIO 0.00 is OFF in the right example, the instructions between CJP(510) and JME(005) are executed normally.

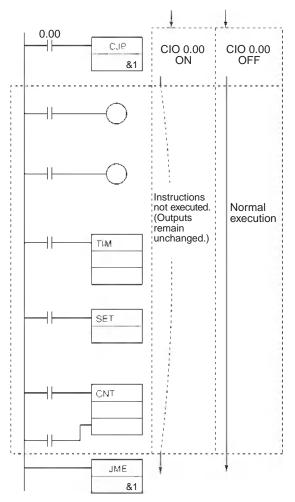

Note For CJPN(511), the ON/OFF status of CIO 0.00 would be reversed.

JMP0/JME0

Instruction	Mnemonic	Mnemonic Variations Functions code		Function			
MULTIPLE JUMP	JMP0		515	When the execution condition for JMP0(515) is OFF, all instructions from JMP0(515) to the next			
MULTIPLE JUMP END	JME0		516	JME0(516) in the program are processed as NOP(000).			

	JMP0	JME0				
Symbol	JMP0(515)	JME0(516)				

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	Not allowed	OK	OK	OK


Flags

There are no flags affected by this instruction.

Function

When the execution condition for JMP0(515) is ON, no jump is made and the program executed consecutively as written.

When the execution condition for JMP0(515) is OFF, all instructions from JMP0(515) to the next JME0(516) in the program are processed as NOP(000). Unlike JMP(004), CJP(510), and CJPN(511), JMP0(515) does not use jump numbers, so these instructions can be placed anywhere in the program.

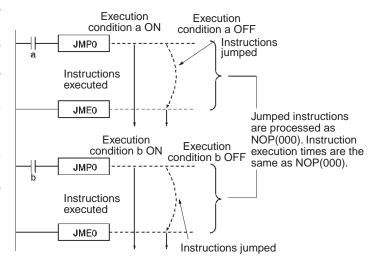

Hint

• In the case of a JMP, CJP, or CJPN instruction, the program jumps directly to the JME instruction when the jump condition is satisfied. An instruction is not executed between JMP/CJP/CJPN and JME, and thus instruction execution time is not needed in that interval. Therefore, cycle time is reduced

By contrast, in the case of a JMP0 instruction, when the jump condition is satisfied, NOP processing (non-functional processing) is executed between JMP0 and JME0. During that interval, a processing time equivalent to a NOP instruction is required, and thus the cycle time will not be reduced.

· Functional comparison of jump instructions

Jump instruction	JMP-JME	CJP-JME	CJPN-JME	JMP0-JME0				
Input condition for jump	OFF	OFF	OFF					
Number used	Total of 1024 (256 on the 0	No restrictions						
Instruction processing at jump	Non-execution NOP processing							
Execution time for jump	None			Total time is equivalent to a NOP instruction				
Instruction output at jump	Holds the previous status							
Processing in block program area								


Precautions

- Unlike JMP(004), CJP(510), and CJPN(511) which jump directly to the first JME(005) instruction in the program, all of the instructions between JMP0(515) and JME0(516) are executed as NOP(000).
 The execution time of the jumped instructions will be reduced, but not eliminated. The jumped instructions themselves are not executed and their outputs (bits and words) maintain their previous status.
- Multiple pairs of JMP0(515) and JME0(516) instructions can be used in the program, but the pairs cannot be nested.
- JMP0(515) and JME0(516) cannot be used in block programs.
- JMP0(515) and JME0(516) pairs must be in the same tasks because jumps between tasks are not allowed
- The operation of DIFU(013), DIFD(014), and differentiated instructions is not dependent solely on the status of the execution condition when they are programmed between JMP0(515) and JME0(516). When DIFU(013), DIFD(014), or a differentiated instruction is executed in an jumped section immediately after the execution condition for the JMP0(515) has gone ON, the execution condition for the DIFU(013), DIFD(014), or differentiated instruction will be compared to the execution condition that existed before the jump became effective (i.e., before the execution condition for JMP0(515) went OFF).

Example Programming

When CIO 0.00 is OFF in the following example, the instructions between JMP0(515) and JME0(516) are processed as NOP(000) instructions and the outputs maintain their previous status.

When CIO 0.00 is ON in the following example, the instructions between JMP0(515) and JME0(516) are executed normally.

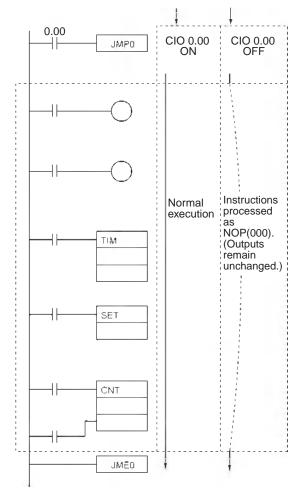

FOR/NEXT

Instruction	Mnemonic	Variations	Function code	Function
	FOR		512	The instructions between FOR(512) and NEXT(513) are repeated a specified number of
	NEXT		513	times.

		FOR		NEXT
Symbol	 FOR(512)		<u> </u>	NEXT(513)
	N	N: Number of loops		

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	Not allowed	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Number of loops	UINT	1

N: Number of loops

The number of loops must be 0000 to FFFF (0 to 65,535 decimal).

Operand Specifications

Aron	Word addresses					Indirect addre	: DM/EM esses	Con-	Registers		Flags		Pulse	TR				
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				


Flags

Name	Label	Operation
Error Flag	ER	ON if more than 15 loops are nested. OFF in all other cases.
Equals Flag	=	OFF
Negative Flag	N	OFF

Function

The instructions between FOR(512) and NEXT(513) are executed N times and then program execution continues with the instruction after NEXT(513). The BREAK(514) instruction can be used to cancel the loop.

If N is set to 0, the instructions between FOR(512) and NEXT(513) are processed as NOP(000) instructions. Loops can be used to process tables of data with a minimum amount of programming.

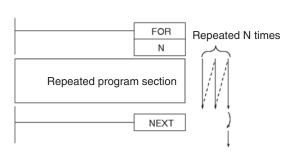

Note If a loop repeats in one cycle and a differentiated bit is used in the FOR-NEXT loop, that bit will be always ON or always OFF within that loop.


Hint

There are two ways to repeat a program section until a given execution condition is input.

- FOR-NEXT Loop with BREAK
 Start a FOR-NEXT loop with a maximum of N repetitions. Program BREAK(514) within the loop with the desired execution condition. The loop will end before N repetitions if the execution condition is input.
- JME(005)-JMP(004) Loop
 Program a loop with JME(005) before JMP(004). The instructions between JME(005) and JMP(004) will be executed repeatedly as long as the execution condition for JMP(004) is OFF. (A Cycle Time Too Long error will occur if the execution condition is not turned ON or END(001) is not executed within the maximum cycle time.)


Precautions

- Program FOR(512) and NEXT(513) in the same task. Execution will not be repeated if these
 instructions are not in the same task.
- FOR-NEXT loops can be nested up to 15 levels.

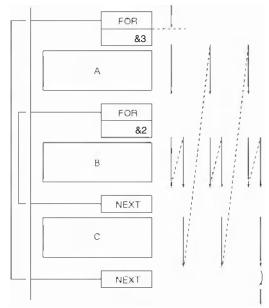


In the example above, program sections A, B, and C are executed as follows: A \rightarrow B \rightarrow B \rightarrow C, A \rightarrow B \rightarrow B \rightarrow C, and A \rightarrow B \rightarrow B

 Use BREAK(514) to escape from a FOR-NEXT loop. Several BREAK(514) instructions (the number of levels nested) are required to escape from nested loops. The remaining instructions in the loop after BREAK(514) are processed as NOP(000) instructions.

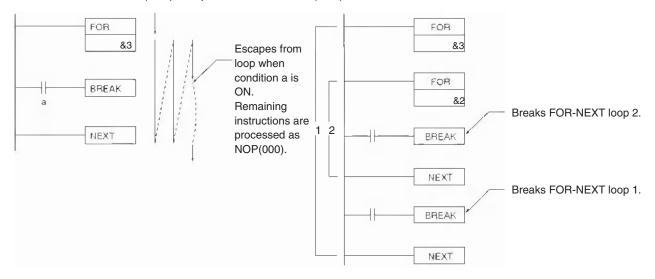


- A jump instruction such as JMP(004) may be executed within a FOR-NEXT loop, but do not jump beyond the FOR-NEXT loop.
- The following instructions cannot be used within FOR-NEXT loops:
 - · Block programming instructions
 - MULTIPLE JUMP and JUMP END: JMP(515) and JME(516)
 - STEP DEFINE and STEP START: STEP(008)/SNXT(009)
- If the following differentiated instructions are used between FOR and NEXT, the differentiated instruction will be executed only once. It will not be executed for the number of loops.
 - UP and DOWN
 - DIFU and DIFD
 - Upwardly differentiated versions of instructions (instructions with @ option)
 - Downwardly differentiated versions of instructions (instructions with % option)

Example Programming

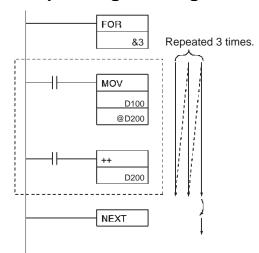

In the left example, the looped program section transfers the content of D100 to the address indicated in D200 and then increments the content of D200 by 1.

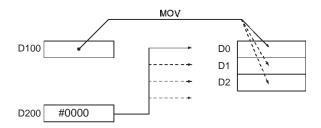

BREAK

Instruction	Mnemonic	Variations	Function code	Function
BREAK LOOP	BREAK		514	Programmed in a FOR-NEXT loop to cancel the execution of the loop for a given execution condition. The remaining instructions in the loop are processed as NOP(000) instructions.

	BREAK
Symbol	— ———BREAK(514)

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	OK	OK

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	OFF
Negative Flag	N	OFF

Function

Program BREAK(514) between FOR(512) and NEXT(513) to cancel the FOR-NEXT loop when BREAK(514) is executed. When BREAK(514) is executed, the rest of the instructions up to NEXT(513) are processed as NOP(000).

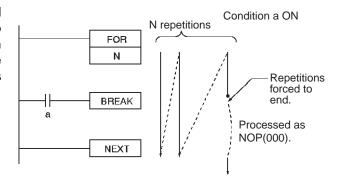

Precautions

- A BREAK(514) instruction cancels only one loop, so several BREAK(514) instructions (the number of levels nested) are required to escape from nested loops.
- BREAK(514) can be used only in a FOR-NEXT loop.

Timer and Counter Instructions

Timer Instructions Refresh Methods for Timer/Counter PV

Overview

There are two PV refresh methods for instructions related to timer/counters, "BCD" and "BINARY".

Method	Description	Setting range	Set value
BCD	Sets the timer set value in BCD.	0~9.999	#0000~9999
Binary	Sets the timer set value in BINARY.	0~65.535	&0~65535 or #0000~FFFF

The PLC Setup for all of the timer/counter-related instructions. The refresh method is valid also when setting an SV indirectly (i.e., using the contents of memory word). (That is, the contents of the addressed word is taken as either BCD or binary data according to the refresh method that is set.)

Applicable Instructions

Classification	Instruction	N	Inemonic
Classification	instruction	BCD	Binary
Timer/counter	HUNDRED-MS TIMER	TIM	TIMX(550)
instructions	TEN-MS TIMER	TIMH(015)	TIMHX(551)
	ONE-MS TIMER	TMHH(540)	TMHHX(552)
	TENTH-MS TIMER (See note.)	TIMU(541)	TIMUX(556)
	HUNDREDTH-MS TIMER (See note.)	TMUH(544)	TMUHX(557)
	ACCUMULATIVE TIMER	TTIM(087)	TTIMX(555)
	LONG TIMER	TIML(542)	TIMLX(553)
	MULTI-OUTPUT TIMER	MTIM(543)	MTIMX(554)
	COUNTER	CNT	CNTX(546)
	REVERSIBLE COUNTER	CNTR(012)	CNTRX(548)
	RESET TIMER/COUNTER	CNR(545)	CNRX(547)
Block programming	HUNDRED-MS TIMER WAIT	TIMW(813)	TIMWX(816)
instructions	TEN-MS TIMER WAIT	TMHW(815)	TMHWX(817)
	COUNTER WAIT	CNTW(814)	CNTWX(818)

Setting method for PV refresh

- In the CS1-H, CS1D, CJ1-H, and CS1M CPU Units, either BCD or binary PV refreshing must be set in the PLC Setup for the entire product.
- In the CJ2 CPU Units, BCD and binary PV refreshing can both be used in the same project. The setting of the PV refresh method in the PLC Setup will be ignored.

Basic Timer Specifications

Item		TIM/TIMX (550)	TIMH(015)/ TIMHX(551)	TMHH(540)/ TMHHX(552)	TIMU(541)/ TIMUX(556) (See note 3.)	TMUH(544)/ TMUHX(557) (See note 3.)	TTIM(087)/ TTIMX(555)	TIML(542)/ TIMLX(553)	MTIM(543)/ MTIMX(554)
Timing me	ethod	Decrementin g	Decrementing	Decrementing	Decrementing	Decrementing	Incrementing	Decrementing	Incrementing
Timing un	nits	100 ms	10 ms	1 ms	0.1 ms	0.01 ms	100 ms	100 ms	100 ms
Maximum	sv	TIM: 999.9 s TIMX: 6,553.5 s	TIMH: 99.99 s TIMHX: 655.35 s	TMHH: 9.999 s TMHHX: 65.535 s	TIMU: 0.9999 s TIMUX: 6.5535 s	TMUH: 0.09999 s TMUHX: 0.65535 s	TTIM: 999.9 s TTIMX: 6,553.5 s	TIML: 115 days TIMLX: 49,710 days	MTIM: 999.9 s MTIMX: 6,553.5 s
Outputs/ instruction	n	1	1	1	1	1	1	1	8
Timer num	nbers	Used	Used	Used	Used	Used	Used	Not used	Not used
Completio Flag refres		When the instruction is executed	When the instruction is executed	When the instruction is executed	When the instruction is executed	When the instruction is executed	When the instruction is executed	When the instruction is executed	When the instruction is executed
Timer PV refreshing (See note)	•	TIM PVs are refreshed when the instruction is executed, after executing all cyclic tasks each cycle, or every 80 ms by interrupt if the cycle time exceeds 80 ms.	TIMH(015)/TI MHX(551) PVs are refreshed when the instruction is executed, after executing all cyclic tasks each cycle, and every 10 ms by interrupt.	Every 1 ms When the instruction is executed	The PV cannot be read.	The PV cannot be read.	When the instruction is executed	When the instruction is executed	When the instruction is executed
Value p after ti	Com- ole- ion lags	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Р	PVs	SV	SV	SV			0	SV	0

Note Timers are refreshed at different times depending on the timer number. Refer to the descriptions of individual timer instructions for details

Item		TIM/TIMX (550)	TIMH(015)/ TIMHX(551)	TMHH(540)/ TMHHX(552)	TIMU(541)/ TIMUX(556)	TMUH(544)/ TMUHX(557)	TTIM(087)/ TTIMX(555)	TIML(542)/ TIMLX(553)	MTIM(543)/ MTIMX(554)
Operating change	g mode PV = 0 Completion Flag = OFF								
Power inte	rrupt/reset	PV = 0 Completion Flag = OFF							
Execution CNR(545)/0	, , , , , , , , , , , , , , , , , , , ,					Not applicable			
program se	peration in jumped orgram section MP(004)-JME(005)) Operating timers continue timing. Timer status is many timer				maintained.				
Operation in inter- locked program sec- tion (IL(002)-ILC(003)) PV = SV Completion Flag = OFF				Timer status maintained.	PV = SV Completion Flag = OFF	Timer status maintained.			
Forced set	Comple- tion Flag								
Set	PVs	Set to 0.			(See note.)		Set to 0.		
Forced reset	Comple- tion Flags	OFF			•		•		
reset	PVs	Reset to SV.			(See note.)		Set to 0.		

Note It is not possible to read the timer PVs of TIMU(541), TIMUX(556), TMUH(544), and TMUHX(557).


Example Timer and Counter Applications

Example 1: Long-term Timers

The following program examples show three ways to create long-term timers with standard TIM and CNT instructions.

1) Two TIM Instructions


In this example, two TIM instructions are combined to make a 30-minute timer.

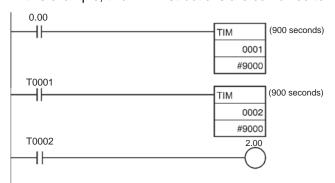

Instruction	Operands
LD	0.00
TM	1
	#9000
LD	T0001
TM	2
	#9000
LD	T0002
OUT	2.00

2) TIM and CNT Instructions

In this example, a TIM instruction and a CNT instruction are combined to make a 500-second timer. TIM 0001 generates a pulse every 5 s and CNT 0002 counts these pulses. The set value for this combination is the timer interval \times counter SV. In this case, the timer SV would be 5 s \times 100 = 500 s. With this combination, the long-term timer's PV is actually the PV of a counter, which is maintained through power interruptions.

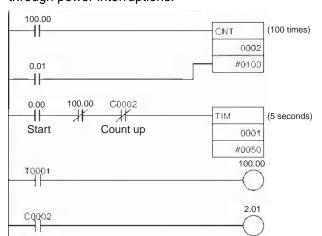


Instruction	Operands
LD	100.00
LD	0.01
CNT	2
	#0100
LD	0.00
AND NOT	100.00
AND NOT	C0002
TIM	1
	#0050
LD	T0001
OUT	100.00
LD	C0002
OUT	2.01
	<u> </u>

3) Clock Pulse and CNT Instruction

In this example, a CNT instruction counts the pulses from the 1-s clock pulse to make a 700-second timer


If the First Cycle Flag (A200.11) is ORed with the counter's reset input (CIO 0.01), the counter's PV will be reset to the SV (0700) when program execution begins rather than resuming the count from the previous PV.

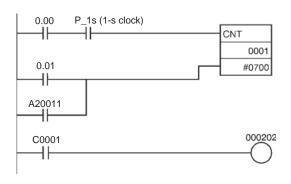

Instruction	Operands
LD	0.00
AND	1s
LD NOT	0.01
CNT	1
	#0700
	C0001
	2.02

Example 2: Two-stage Counter


When an SV higher than 9999 is required, two counters can be combined as shown in the following example. In this case, two CNT instructions are combined to make a BCD counter with an SV of 20,000.

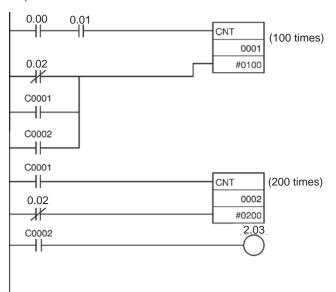

Instruction	Operands
LD	0.00
AND	0.01
LD NOT	0.02
OR	C0001
OR	C0002
CNT	1
	#0100
LD	C0001
LD NOT	0.02
CNT	2
	#0200
LD	C0002
OUT	2.03

Example 3: ON/OFF Delay

In this example two TIM timers are combined with KEEP(011) to make an ON delay and an OFF delay. CIO 5.00 will be turned ON 5.0 seconds after CIO 0.00 goes ON and it will be turned OFF 3.0 seconds after CIO 0.00 goes OFF.

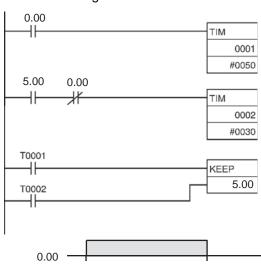


5.0 s

3.0 s

Instruction	Operands
LD	0.00
TIM	1
	#0050
LD	5.00
LD NOT	0.00
TIM	2
	#0030
LD	T0001
LD	T0002
KEEP(011)	5.00

Example 4: One-shot Bit


A TIM timer can be combined with OUT or OUT NOT to control how long a particular bit is ON or OFF. In this example, CIO 2.04 will be ON for 1.5 seconds (the SV of T0001) after CIO 0.00 goes ON.

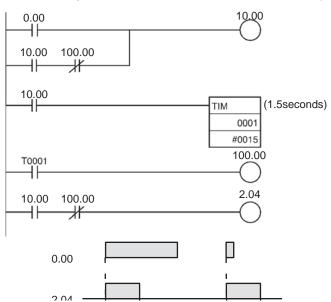

0.00
10.00
100.00
10.00
10.00
1
#0015
T0001
100.00
10.00
100.00
2.04

Example 5: Flicker Bit 1) Two TIM Instructions


Two TIM timers can be combined to make a bit turn ON and OFF at regular intervals while the execution condition is ON. In this example, CIO 2.05 will be OFF for 1.0 second and then ON for 1.5 seconds as long as CIO 0.00 is ON.

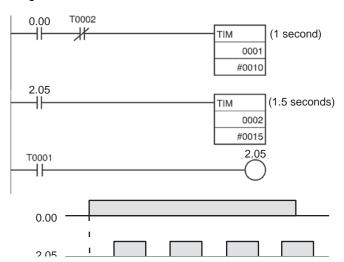

Instruction	Operands
LD	0.00
AND LD	T0002
TIM	1
	#0010
LD	2.05
TIM	2
	#0015
LD	T0001
OUT	2.05

2) Clock Pulse

The desired execution condition can be combined with a clock pulse to mimic the clock pulse (0.1 s, 0.2 s, or 1.0 s).

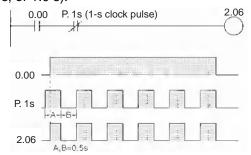

Instruction	Operands
LD	0.00
AND	1s
OUT	2.6


• The internal clock pulse (0.1 s, 0.2 s, 1 s) can be used to easily program a flicker circuit.


For information on clock pulses, refer to the CJ-Series CJ2 CPU Unit Software User's Manual (W473).

Indirect Addressing of Timer/Counter Numbers

- Timer and counter numbers can be indirectly addressed using Index Registers. When Index Registers will be used for indirect addressing, use MOVRW(561) (MOVE TIMER/COUNTER PV TO REGISTER) to set the PLC memory address of the desired timer or counter's PV to the desired Index Register.
- The following timers and counters can be indirectly addressed using Index Registers: TIM, TIMX(550), TIMH(015), TIMHX(551), TTIM(087), TTIMX(555), TMHH(540), TMHHX(552), TIMW(813), TIMWX(816), TMHW(815), TMHWX(817), CNT, CNTX(546), CNTR(012), CNTRX(548), CNTW(814), and CNTWX(818). (These are the timers and counters that use timer and counter numbers.)
- The timer or counter instruction will not be executed if the PLC memory address in the specified Index Register is not the address of a timer or counter PV.
- Using Index Registers to indirectly address timers and counters can reduce the size of the program and increase flexibility. For example, common subroutines can be created.

Example:

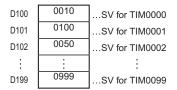

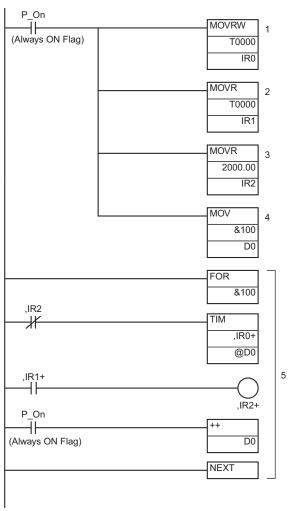


- The following example shows a program section that uses indirect addressing to define and start 100 timers with SVs contained in D100 through D199. IR0 contains the PLC memory address of the timer PV and IR1 contains the PLC memory address of the timer Completion Flag.
- MOVRW(561) moves the PLC memory address of the PV for timer T0000 to IR0. Afterwards IR0 can be used in place of the timer number.
- MOVR(560) moves the PLC memory address of the Completion Flag for timer T0000 to IR1.
- MOVR(560) moves the PLC memory address of CIO 2000.00 into IR2.
- MOV(021) moves &100 into D100 for indirect addressing of the timer SVs.
- The content of IR0, IR1, IR2, and D0 are incremented by 1 each time as this loop is executed 100 times, starting timers T0000 through T0099.

The loop in the program above has 4 input parameters which are used to start all 100 timers with this common subroutine.

- IR0 The PLC memory address of the timer's PV
- IR1 The PLC memory address of the timer's Completion Flag
- IR2 The PLC memory address of the timer's execution condition
- D0 The DM address of the word containing the timer's SV

The subroutine above is equivalent to the 400 instructions below

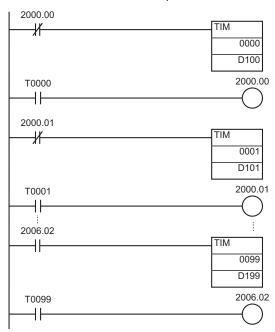

• Timer reset method


There are three methods for resetting a timer instruction.


1. Use the TIMER RESET Instruction.

The specified instruction will be reset when the TIMER RESET instruction (TRSET) is executed.

TRSET can be used to reset only one timer at a time, but it is faster than the RESET TIMER/COUNTER instruction (CNR/CNRX).

Use TRSET when a timer is to be reset and then restarted within the same cycle.

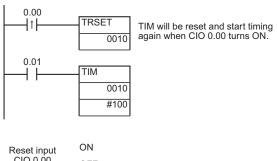

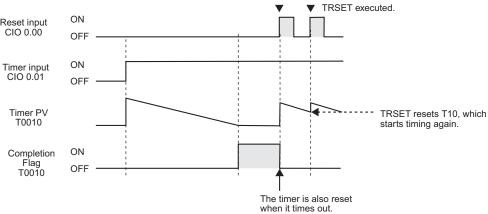



2. Turn OFF the execution condition for the timer instruction.

The timer will be reset when its execution condition turns OFF.

The timer will start timing again when its execution condition turns ON.

With this method, a timer cannot be reset and then restarted within the same cycle.

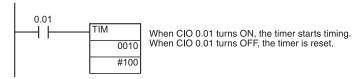

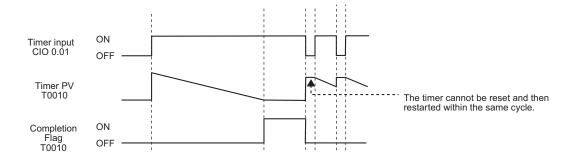

3. Use the RESET TIMER/COUNTER instruction.


The specified instruction will be reset when the RESET TIMER/COUNTER instruction (CNR/CNRX) is executed.

More than one timer can be reset at the same time for CNR/CNRX, but more time is required than for TRSET.

CNR/CNRX is used in the same way as TRSET.

TIM/TIMX

Instruction	Mnemonic	Variations	Function code	Function		
HUNDRED-MS TIMER	TIM/TIMX		550	TIM or TIMX(550) operates a decrementing timer with units of 0.1-s.		

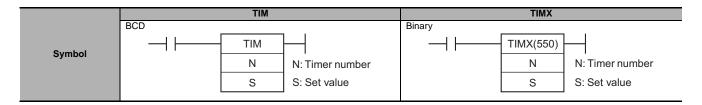

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	ОК	Not allowed	OK	ОК	Not allowed	OK		

Operands

Operand	Description	Data	type	Size
Operand	Description	TIM	TIMX	Size
N	Timer Number	TIMER	TIMER	1
S	Set Value	WORD	UINT	1

N: Timer Number

The timer number must be between 0000 and 4095 (decimal).

S: Set Value (100-ms units)

The set value must be between #0000 and 9999 (BCD).

Operand Specifications

Area			W	ord ad	dresse	s				DM/EM esses	Con-		Regist	ters	Fla	igs	Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					ОК									ОК				
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		ÜK				


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer Completion Flag or timer PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.
Equals Flag	P_EQ	OFF or unchanged (See note.)
Negative Flag	P_N	OFF or unchanged (See note.)


Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF. In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units, these Flags are left unchanged.

- When the timer input is OFF, the timer specified by N is reset, i.e., the timer's PV is reset to the SV and its Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TIM/TIMX(550) starts decrementing the PV.
 The PV will continue timing down as long as the timer input remains ON and the timer's Completion Flag will be turned ON when the PV reaches 0.
- The status of the timer's PV and Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again or the timer's PV must be changed to a non-zero value (by MOV(021), for example).
- The setting range for the set value (SV) is 0 to 999.9 s for TIM and 0 to 6,553.5 s for TIMX(550).
- The timer accuracy is -0.01 to 0 s.

Note The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time. The timer accuracy for unit version 4.1 of the CJ1-H-R is -0.1 to 0 s.

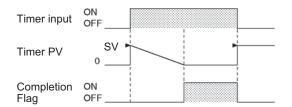

The following timing chart shows the behavior of the timer's PV and Completion Flag when the timer input is turned OFF before the timer times out.

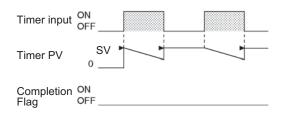

Hint

A TIM/TIMX(550) instruction's PV and Completion Flag can be refreshed in the following ways depending on the timer number that is used.


Timers Created with Timer Numbers 0000 to 2047

Execution of TIM/TIMX(550)	The PV is updated every time that TIM/TIMX(550) is executed. The Completion Flag is turned ON if the PV is 0. The Completion Flag is turned OFF if the PV is not 0.
After execution of all cyclic tasks	The PV is also updated every cycle after executing all cyclic tasks.
80-ms interval refreshing	If the cycle time exceeds 80 ms, the timer's PV is updated every 80 ms.

- Timers are reset (PV = SV, Completion Flag OFF) by power interruptions unless the IOM Hold Bit (A500.12) is ON and the bit is protected in the PLC Setup. It is also possible use a clock pulse bit and a counter instruction to program a timer that will retain its PV in the event of a power interruption, as shown in the following diagram.
- When the timer set value is #0000, timeup occurs when the instruction is executed.

Timers Created with Timer Numbers 2048 to 4095

Execution of TIM	The PV is updated every time that TIM is executed. The Completion Flag is turned ON if the PV is 0. The Completion Flag is turned OFF if the PV is not 0.
------------------	--

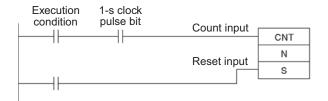

Precautions

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- Timers created with timer numbers 2048 to 4095 will not operate properly when the CPU Unit cycle time exceeds 100 ms. Use timer numbers 0 to 2047 when the cycle time is longer than 100 ms.
- The present value of timers programmed with timer numbers 0 to 2047 will be updated even when the timer is on standby. The present value of timers programmed with timer numbers 2048 to 4095 will be held when the timer is on standby.
- Timers will be reset or paused in the following cases. (When a timer is reset, its PV is reset to the SV and its Completion Flag is turned OFF.)

Condition	PV	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa.*1	0	OFF
Power off and reset*2	0	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions*3	BCD: 9999 Binary: FFFF	OFF
Operation in interlocked program section (IL(002)–ILC(003))	Reset to SV.	OFF
Operation in jumped program section (JMP(004)–JME(005))	PV continues decrementing.	Retains previous status.

- *1 If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.
- *2 If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is off.
- *3 The PV will be set to the SV when TIM/TIMX(550) is executed.
- When TIM/TIMX(550) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF.
- When an operating TIM/TIMX(550) timer created with a timer number between 0000 and 2047 is in a jumped program section (JMP(004), CJMP(510), CJPN(511), JME(005)), the timer's PV will continue timing. (See note.) The jumped TIM/TIMX(550) instruction will not be executed, but the PV will be refreshed each cycle after all tasks have been executed.


Note With the CS1D CPU Units, the PV will not be refreshed in the above case.

- When a TIM/TIMX(550) timer is forced set, its Completion Flag will be turned ON and its PV will be set to 0000. When a TIM/TIMX(550) timer is forced reset, its Completion Flag will be turned OFF and its PV will be reset to the SV.
- The timer's Completion Flag is refreshed only when TIM/TIMX(550) is executed, so a delay of up to one cycle may be required for the Completion Flag to be turned ON after the timer times out.
- If online editing is used to overwrite a timer instruction, always reset the Completion Flag. The timer will not operate properly unless the Completion Flag is reset.
- The following restrictions apply if Synchronous Unit Operation is used with a CJ2H-CPU6□-(EIP)
 CPU Unit or if the internal pulse control period is set to 1 ms for a CJ2M-CPU□□CPU Unit with unit
 version 2.0 or later.
 - An error of up to one cycle time will occur in the timer PV accuracy.
 - The timers will not operate correctly if the cycle time exceeds 100 ms.
 - If an TIM/TIMX instruction is in a task that is stopped or is not executed because it is jumped by a JMP(004), CJMP(510), or CJPN(511) instruction, the timer will not operate correctly.

Example Programming


When timer input CIO 0.00 goes from OFF to ON in the following example, the timer PV will begin counting down from the SV. Timer Completion Flag T0000 will be turned ON when the PV reaches 0.

When CIO 0.00 goes OFF, the timer PV will be reset to the SV and the Completion Flag will be turned OFF.

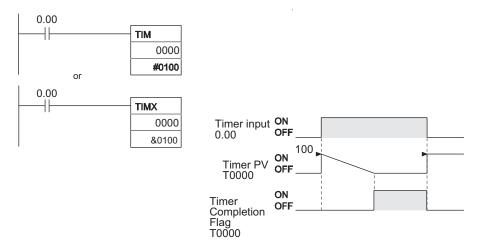

TIMH/TIMHX

Instruction	Mnemonic	Variations	Function code	Function			
TEN-MS TIMER	TIMH		015	TIMH(015)/TIMHX(551) operates a decrementing			
TEN-IVIS TIMER	TIMHX		551	timer with units of 10-ms.			

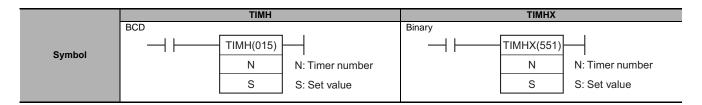

Applicable Program Areas

Area	Function block definitions	I Block program areas I		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	Not allowed	OK	

Operands

Operand	Description	Data	type	Size
Operand	Description	TIMH	TIMHX	Size
N	Timer Number	TIMER	TIMER	1
S	Set Value	WORD	UINT	1

N: Timer Number

The timer number must be between 0000 and 4095 (decimal).

S: Set Value

TIMH: The set value must be between #0000 and 9999 in BCD mode.

TIMHX: &0 to 65535 decimal or #0000 to FFFF hex

Operand Specifications


Area			W	ord ad	dresse	s			Indirect addre		Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
N					ОК									ОК				
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK						

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer Completion Flag or timer PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.
Equals Flag	P_EQ	Unchanged (See note.)
Negative Flag	P_N	Unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

- When the timer input is OFF, the timer specified by N is reset, i.e., the timer's PV is reset to the SV and its Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TIMH(015)/TIMHX(551) starts decrementing the PV. The PV will continue timing down as long as the timer input remains ON and the timer's Completion Flag will be turned ON when the PV reaches 0000.
- The status of the timer's PV and Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again or the timer's PV must be changed to a non-zero value (by MOV(021), for example).
- The setting range for the set value (SV) is 0 to 99.99 s for TIMH(015) and 0 to 655.35 s for TIMHX(551).
- The timer accuracy is -0.01 to 0 s. The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

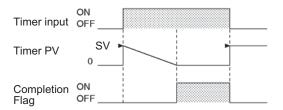

The following timing chart shows the behavior of the timer's PV and Completion Flag when the timer input is turned OFF before the timer times out.

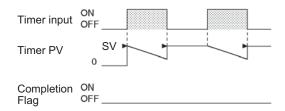

Hint

A TIMH(015)/TIMHX(551) instruction's PV and Completion Flag can be refreshed in the following ways depending on the timer number that is used.

Timers Created Numbers 0000 to		Timers Created Numbers 0256 t		Timers Created with Timer Numbers 2048 to 4095			
Execution of TIMH(015)/TIMH X(551)	The Completion Flag is turned ON if the PV is 0. The Completion Flag is turned OFF if the PV is not 0.	Execution of TIMH(015)/TIMH X(551)	The PV is updated every time that TIMH(015)/TIM HX(551) is executed. The Completion Flag is turned ON if the PV is 0. The Completion Flag is turned OFF if the PV is not 0.	Execution of TIMH(015)/TIMH X(551)	The PV is updated every time that TIMH(015) is executed. The Completion Flag is turned ON if the PV is 0. The Completion Flag is turned OFF if the PV is not 0.		
10-ms interval refreshing	The timer's PV is updated every 10 ms.	After execution of all cyclic tasks	The PV is also updated every cycle after executing all cyclic tasks				
		80-ms interval refreshing	If the cycle time exceeds 80 ms, the timer's PV is updated every 80 ms.				

Precautions

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- Timers created with timer numbers 2048 to 4095 will not operate properly when the CPU Unit cycle time exceeds 100 ms. Use timer numbers 0 to 2047 when the cycle time is longer than 100 ms.
- TIMH(015)/TIMHX(551) timers created with timer numbers 0 to 0255 are refreshed every 10 ms. Use these timer numbers when the PV is being referenced in the user program.
- The present value of timers programmed with timer numbers 0000 to 2047 will be updated even when the timer is on standby. The present value of timers programmed with timer numbers 2048 to 4095 will be held when the timer is on standby.
- The Completion Flags for TIMH(015)/TIMHX(551) timers will be updated when the instruction is executed. (This operation differs from that for CV-series and CVM1 PLCs.)
- Timers will be reset or paused in the following cases. (When a timer is reset, its PV is reset to the SV and its Completion Flag is turned OFF.)

Condition	PV	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa.*1	0	OFF
Power off and reset*2	0	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions*3	BCD: 9999 Binary: FFFF	OFF
Operation in interlocked program section (IL(002)-ILC(003))	Reset to SV.	OFF
Operation in jumped program section (JMP(004)-JME(005))	PV continues decrementing.	Retains previous status.

^{*1} If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.

- *3 The PV will be set to the SV when TIMH(015)/TIMHX(551) is executed.
 - When an operating TIMH(015)/TIMHX(551) timer created with a timer number between 0000 and 2047 is in a jumped program section (JMP(004), CJMP(510), CJPN(511), JME(005)), the timer's PV will continue timing. (See note.) (The jumped TIMH(015)/TIMHX(551) instruction will not be executed, but the PV will be refreshed every 10 ms and each cycle after all tasks have been executed.)

Note With the CS1D CPU Units, the PV will not be refreshed in the above case.

- When TIMH(015)/TIMHX(551) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF.
- When a TIMH(015)/TIMHX(551) timer is forced set, its Completion Flag will be turned ON and its PV will be set to 0000. When a TIMH(015)/TIMHX(551) timer is forced reset, its Completion Flag will be turned OFF and its PV will be reset to the SV.
- The timer's Completion Flag is refreshed only when TIMH(015)/TIMHX(551) is executed, so a delay of up to one cycle may be required for the Completion Flag to be turned ON after the timer times out.
- If online editing is used to overwrite a timer instruction, always reset the Completion Flag. The timer will not operate properly unless the Completion Flag is reset.
- The following restrictions apply if Synchronous Unit Operation is used with a CJ2H-CPU6□-(EIP)
 CPU Unit or if the internal pulse control period is set to 1 ms for a CJ2M-CPU□□ CPU Unit with unit
 version 2.0 or later.
 - An error of up to one cycle time will occur in the timer PV accuracy.
 - The timers will not operate correctly if the cycle time exceeds 100 ms.


^{*2} If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is off.

• If an TIMH(015)/TIMHX(551) instruction is in a task that is stopped or is not executed because it is jumped by a JMP(004), CJMP(510), or CJPN(511) instruction, the timer will not operate correctly.

Example Programming


When timer input CIO 0.00 goes from OFF to ON in the following example, the timer PV will begin counting down from the SV (#0064 = 100 = 1.00 s). The Timer Completion Flag, T0000, will be turned ON when the PV reaches 0.

When CIO 0.00 goes OFF, the timer PV will be reset to the SV and the Completion Flag will be turned OFF.

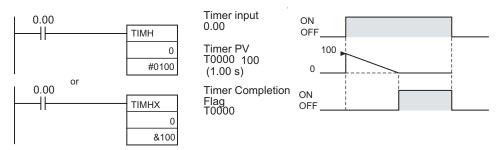

TMHH/TMHHX

Instruction	Mnemonic	Variations	Function code	Function
ONE-MS TIMER	ТМНН		540	TMHH(540)/TMHHX(552) operates a decrement-
ONE-WIS THINER	TMHHX		552	ing timer with units of 1-ms.

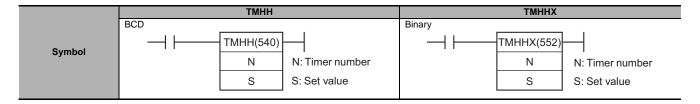

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK Not allowed		OK	ОК	Not allowed	Not allowed*1

^{*1 &}quot;OK" on CJ1-H-R/CJ2 CPU Units

Operands

Operand	Description	Data	type	- Size	
	Description	ТМНН	тмннх		
N	Timer Number	TIMER	TIMER	1	
S	Set Value	WORD	UINT	1	

N: Timer Number

The timer must be between 0000 and 4095 for the CJ1-H-R and CJ2 CPU Units and between 0000 and 0015 decimal for other PLCs.

S: Set Value

The set value must be between #0000 and 9999 (BCD).

&0 to 65535 decimal or #0000 to FFFF hex (binary)

Operand Specifications

Aron			W	ord ad	dresse	s			Indirect DM/EM addresses Con-			Registers			Flags		Pulse 1	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits	
N					ОК									ОК					
S	OK	OK	OK	OK	UK	OK	OK	OK	OK	OK	OK	OK			UK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer Completion Flag or timer PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.
Equals Flag	P_EQ	Unchanged (See note.)
Negative Flag	P_N	Unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

- When the timer input is OFF, the timer specified by N is reset, i.e., the timer's PV is reset to the SV and its Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TMHH(540)/TMHHX(552) starts decrementing the PV.
 The PV will continue timing down as long as the timer input remains ON and the timer's Completion Flag will be turned ON when the PV reaches 0000.
- The status of the timer's PV and Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again or the timer's PV must be changed to a non-zero value (by MOV(021), for example).
- The setting range for the set value (SV) is 0 to 9.999 s for TMHH(540) and 0 to 65.535 for TMHHX(552).

Note The timer accuracy is -0.001 to 0 s. The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

The timer accuracy for CJ2 CPU Units and unit version 4.1 of the CJ1-H-R is -0.01 to 0 s.

Hint

The timer PV and timeup used in TMHH/TMHHX instructions are refreshed at the timing below.

T0000 to T0015*1

Refresh timing	Description
1) When each instruction is executed	The timeup flag is ON when the PV is 0 and OFF otherwise.
2) Refresh every 1 ms	Refresh PV every 1 ms

T0016 to T4095*2

Refresh timing	Description
executed	The timeup flag is ON when the PV is 0 and OFF otherwise.

^{*2} Only with a CJ1-H-R/CJ2 CPU Unit.

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- The Completion Flag is updated only when TMHH(540)/TMHHX(552) is executed. The Completion Flag can thus be delayed by up to one cycle time from the actual set value.
- The present value of a high-speed timer with a timer number from 0 to 15 will be refreshed even if the task is on standby.
- Timers will be reset or paused in the following cases. (When a timer is reset, its PV is reset to the SV and its Completion Flag is turned OFF.)

Condition	PV	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa.*1	0	OFF
Power supply interrupted and reset*2	0	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions*3	BCD: 9999 Binary: FFFF	OFF
Operation in interlocked program section (IL(002)-ILC(003))	Reset to SV.	OFF
Operation in jumped program section (JMP(004)-JME(005))	PV continues decrementing.	Retains previous status.

^{*1} If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.

^{*1} Cannot be used in CJ-H-R CPU Unit Version 4.1.


^{*2} If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is interrupted.

^{*3} The PV will be set to the SV when TMHH(540)/TMHHX(552) is executed.

- For all CPU Units except CS1D CPU Units, the present value of all operating timers with timer numbers 0 to 15 will be refreshed even if the timer is in a program section that is jumped using JMP(004), CJMP(510), CJPN(511), JME(005). (The jumped timer instruction will not be executed, but the PV will be refreshed every 1 ms.) The present values will not be updated with a CS1D CPU Unit.
- When TMHH(540)/TMHHX(552) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF
- When a TMHH(540)/TMHHX(552) timer is forced set, its Completion Flag will be turned ON and its PV will be set to 0. When a TMHH(540)/TMHHX(552) timer is forced reset, its Completion Flag will be turned OFF and its PV will be reset to the SV.
- If online editing is used to overwrite a timer instruction, always reset the Completion Flag. The timer will not operate properly unless the Completion Flag is reset.
- The following restrictions apply if Synchronous Unit Operation is used with a CJ2H-CPU6□-(EIP)
 CPU Unit or if the internal pulse control period is set to 1 ms for a CJ2M-CPU□□ CPU Unit with unit
 version 2.0 or later.
 - An error of up to one cycle time will occur in the timer PV accuracy.
 - The timers will not operate correctly if the cycle time exceeds 100 ms.
 - If an TMHH(540)/TIMHHX(552) instruction is in a task that is stopped or is not executed because it is jumped by a JMP(004), CJMP(510), or CJPN(511) instruction, the timer will not operate correctly.

TIMU/TIMUX

Instruction	Mnemonic	Variations	Function code	Function
TENTH-MS TIMER	TIMU		541	TIMU(541)/TIMUX(556) operates a decrementing
TENTI-WS TIMEN	TIMUX		556	timer with units of 0.1-ms.

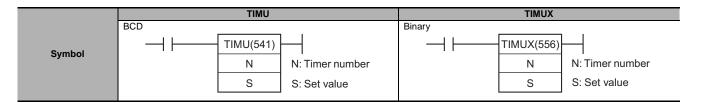

Applicable Program Areas

Area	Function block definitions Block program areas Step		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data	type	Size
Operand	Description	TIMU	TIMUX	Size
N	Timer Number	TIMER	TIMER	1
S	Set Value	WORD	UINT	1

N: Timer Number

The timer number must be between 0000 and 4095 (decimal).

S: Set Value

The set value must be between #0000 and 9999 (BCD).

&0 to 65535 decimal or #0000 to FFFF hex (Binary).

Operand Specifications

Area			W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					ОК									ОК				
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if timer number N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer's Completion Flag or PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.
Equals Flag	P_EQ	Unchanged
Negative Flag	P_N	Unchanged

- When the timer input is OFF, the timer specified by N is reset, i.e., the timer's Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TIMU(541)/TIMUX(556) starts decrementing the PV. If the set value is reached while the timer input is ON, the timer's Completion Flag will be turned ON (the timer times out).
- The status of the timer's Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again.
- Read this timer's Completion Flag only. The timer's PV is used by the system, so it cannot be read.
- The setting range for the set value (SV) is 0 to 0.9999 s for TIMU(541) and 0 to 6.5535 s for TIMUX(556).
- The timer accuracy is -0.1 to 0 ms.

Hint

• A TIMU(541)/TIMUX(556) instruction's Completion Flag is refreshed as shown in the following table.

Execution of TIMU(541)/TIMUX(556)	The Completion Flag is turned ON if the SV is reached.
	The Completion Flag is turned OFF if the SV has not been reached.

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- The timer PV cannot be read.
- The Completion Flag is updated only when TIMU(541)/TIMUX(556) is executed. The Completion Flag can thus be delayed by up to one cycle time from the actual set value.
- The timer will not operate properly when the cycle time exceeds 100 ms.
- Timers will be reset or paused in the following cases. (When a timer is reset, its PV is reset to the SV and its Completion Flag is turned OFF.)

Condition	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa. (See note 1.)	OFF
Power supply interrupted and reset (See note 2.)	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions3	OFF
Operation in interlocked program section (IL(002)-ILC(003))	OFF
Operation in jumped program section (JMP(004)-JME(005))	Retains previous status.


- **Note 1** If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.
 - 2 If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is interrupted.

- When TIMU(541)/TIMUX(556) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF.
- TIMU(541)/TIMUX(556) timers may not time accurately when used in a program section jumped by the JMP(004), CJMP(510), CJPN(511), and JME(005) instructions.
- When a TIMU(541)/TIMUX(556) timer is forced set, its Completion Flag will be turned ON. When a TIMU(541)/TIMUX(556) timer is forced reset, its Completion Flag will be turned OFF.
- If online editing is used to overwrite a timer instruction, always reset the Completion Flag. The timer will not operate properly unless the Completion Flag is reset.

Example Programming


When timer input CIO 0.00 goes from OFF to ON in this example, the timer PV will begin counting down. The Timer Completion Flag, T0000, will be turned ON after 12.3 ms.

When CIO 0.00 goes OFF, the Timer Completion Flag, T0000, will be turned OFF.

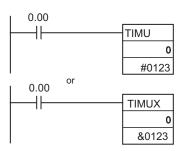

TMUH/TMUHX

Instruction	Mnemonic	Variations	Function code	Function
HUNDREDTH-MS TIMER	TMUH		544	TMUH(544)/TMUHX(557) operates a decrement-
HONDRED ITI-WIS TIMER	TMUHX		557	ing timer with units of 0.01-ms.

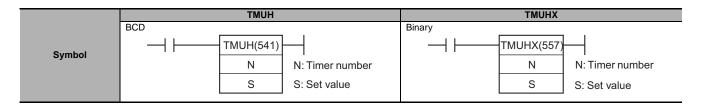

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	Not allowed	OK	

Operands

I	Operand	Description	Data	type	Size		
Орега	Operand	Description	TMUH	TMUHX	Oize		
_	N	Timer Number	TIMER	TIMER	1		
	S	Set Value	WORD	UINT	1		

N: Timer Number

The timer number must be between 0000 and 4095 (decimal).

S: Set Value

The set value must be between #0000 and 9999 (BCD).

&0 to 65535 decimal or #0000 to FFFF hex (Binary).

Operand Specifications

Area			W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con-	Registers		ers	Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					ОК									ОК				
S	OK	OK	OK	OK	UK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation					
Error Flag	P_ER	 ON if timer number N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer's Completion Flag or PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases. 					
Equals Flag	P_EQ	Unchanged					
Negative Flag	P_N	Unchanged					

- When the timer input is OFF, the timer specified by N is reset, i.e., the timer's Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TMUH(544)/TMUHX(557) starts decrementing the PV. If
 the set value is reached while the timer input is ON, the timer's Completion Flag will be turned ON
 (the timer times out).
- The status of the timer's Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again.
- · Read this timer's Completion Flag only. The timer's PV is used by the system, so it cannot be read.
- The setting range for the set value (SV) is 0 to 0.09999 s for TMUH(544) and 0 to 0.65535 s for TMUHX(557).
- The timer accuracy is -0.01 to 0 ms.

Hint

A TIMU(541)/TIMUX(556) instruction's Completion Flag is refreshed as shown in the following table.

Execution of TIMU(541)/TIMUX(556)	The Completion Flag is turned ON if the SV is reached.
	The Completion Flag is turned OFF if the SV has not
	been reached.

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- · The timer PV cannot be read.
- The Completion Flag is updated only when TIMU(541)/TIMUX(556) is executed. The Completion Flag can thus be delayed by up to one cycle time from the actual set value.
- The timer will not operate properly when the cycle time exceeds 10 ms.
- Timers will be reset or paused in the following cases. (When a timer is reset, its PV is reset to the SV and its Completion Flag is turned OFF.)

Condition	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa. (See note 1.)	OFF
Power supply interrupted and reset (See note 2.)	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions	OFF
Operation in interlocked program section (IL(002)-ILC(003))	OFF
Operation in jumped program section (JMP(004)-JME(005))	Retains previous status.


- Note 1 If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.
 - 2 If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is interrupted.

- When TIMU(541)/TIMUX(556) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF.
- TIMUH(544)/TIMUHX(557) timers may not time accurately when used in a program section jumped by the JMP(004), CJMP(510), CJPN(511), and JME(005) instructions.
- When a TIMU(541)/TIMUX(556) timer is forced set, its Completion Flag will be turned ON. When a TIMU(541)/TIMUX(556) timer is forced reset, its Completion Flag will be turned OFF.
- If online editing is used to overwrite a timer instruction, always reset the Completion Flag. The timer will not operate properly unless the Completion Flag is reset.

Example Programming


When timer input CIO 0.00 goes from OFF to ON in this example, the timer PV will begin counting down. The Timer Completion Flag, T0000, will be turned ON after 1.23 ms.

When CIO 0.00 goes OFF, the Timer Completion Flag, T0000, will be turned OFF.

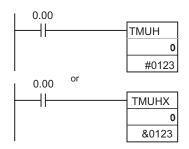

TTIM/TTIMX

Instruction	Mnemonic	Variations	Function code	Function			
ACCUMULATIVE TIMER	TTIM		087	TTIM(087)/TTIMX(555) operates an incrementing			
ACCOMOLATIVE TIMEN	TTIMX		555	timer with units of 0.1-s.			

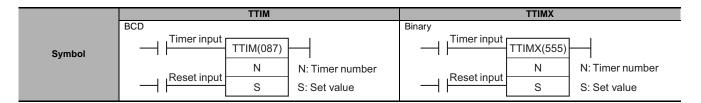

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	ОК	ОК	Not allowed	OK

Operands

Operand	Description	Data	type	Size
	Description	TTIM	TTIMX	Size
N	Timer Number	TIMER	TIMER	1
S	Set Value	WORD	UINT	1

N: Timer Number

The timer number must be between 0000 to 4095 (decimal).

S: Set Value

The set value must be between #0000 and 9999 (BCD).

&0 to 65535 decimal or #0000 to FFFF hex (Binary).


Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					ОК									ОК				
S	OK	OK	OK	OK	UK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer Completion Flag or timer PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.

- When the timer input is ON, TTIM(087)/TTIMX(555) increments the PV.
 When the timer input goes OFF, the timer will stop incrementing the PV, but the PV will retain its value. The PV will resume timing when the timer input goes ON again. The timer's Completion Flag will be turned ON when the PV reaches the SV.
- The status of the timer's PV and Completion Flag will be maintained after the timer times out. There are three ways to restart the timer: the timer's PV can be changed to a non-zero value (by MOV(021), for example), the reset input can be turned ON, or CNR(545)/CNRX(547) can be executed.
- The setting range for the set value (SV) is 0 to 999.9 s for TTIM(087) and 0 to 6,553.5 s for TTIMX(555).
- The timer accuracy is -0.01 to 0 s.
 The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

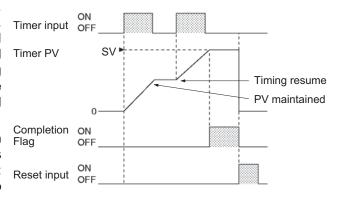

Hint

 Typical timers such as TIM/TIMX(550) are decrementing counters and the PV shows the time remaining until the timer times out. The PV of TTIM(087)/TTIMX(555) shows how much time has elapsed, so the PV can be used unchanged in many calculations and display outputs.

- Timer numbers are shared with other timer instructions. If two timers share the same timer number, but are not used simultaneously, a duplication error will be generated when the program is checked, but the timers will operate normally. Timers which share the same timer number will not operate properly if they are used simultaneously.
- Timers will be reset or paused in the following cases. (When a TTIM(087)/TTIMX(555) timer is reset, its PV is reset to 0 and its Completion Flag is turned OFF.)

Condition	PV	Completion Flag
Operating mode changed from RUN or MONITOR mode to PROGRAM mode or vice versa.*1	0	OFF
Power supply interrupted and reset*2	0	OFF
Execution of CNR(545)/CNRX(547), the RESET TIMER/COUNTER instructions*3	BCD: 9999 Binary: FFFF	OFF
Operation in interlocked program section (IL(002)-ILC(003))	Retains previous status.	Retains previous status.
Operation in jumped program section (JMP(004)-JME(005))	Retains previous status.	Retains previous status.

- *1 If the IOM Hold Bit (A500.12) has been turned ON, the status of timer Completion Flags and PVs will be maintained when the operating mode is changed.
- *2 If the IOM Hold Bit (A500.12) has been turned ON and the status of the IOM Hold Bit itself is protected in the PLC Setup, the status of timer Completion Flags and PVs will be maintained even when the power is interrupted.
- *3 The PV will be set to the SV when TTIM(087)/TTIMX(555) is executed.


- When TTIM(087)/TTIMX(555) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will retain its previous value (it will not be reset). Be sure to take this fact into account when TTIM(087)/TTIMX(555) is programmed between IL(002) and ILC(003).
- When an operating TTIM(087)/TTIMX(555) timer is in a program section between JMP(004) and JME(005) and the program section is jumped, the PV will retain its previous value. Be sure to take this fact into account when TTIM(087)/TTIMX(555) is programmed between JMP(004) and JME(005).
- When a TTIM(087)/TTIMX(555) timer is forced set, its Completion Flag will be turned ON and its PV will be reset to 0. When a TTIM(087)/TTIMX(555) timer is forced reset, its Completion Flag will be turned OFF and its PV will be reset to 0. The forced set and forced reset operations take priority over the status of the timer and reset inputs.
- The timer's PV is refreshed only when TTIM(087)/TTIMX(555) is executed, so the timer will not operate properly when the cycle time exceeds 100 ms because the timer increments in 100-ms units.
- The timer's Completion Flag is refreshed only when TTIM(087)/TTIMX(555) is executed, so a delay of up to one cycle may be required for the Completion Flag to be turned ON after the timer times out.

Example Programming

When timer input CIO 0.00 is ON in the following example, the timer PV will begin counting up from 0. Timer Completion Flag T0001 will be turned ON when the PV reaches the SV.


If the reset input is turned ON, the timer PV will be reset to 0 and the Completion Flag (T0001) will be turned OFF. (Usually the reset input is turned ON to reset the timer and then the timer input is turned ON to start timing.)

If the timer input is turned OFF before the SV is reached, the timer will stop timing but the PV will be maintained. The timer will resume from its previous PV when the timer input is turned ON again.

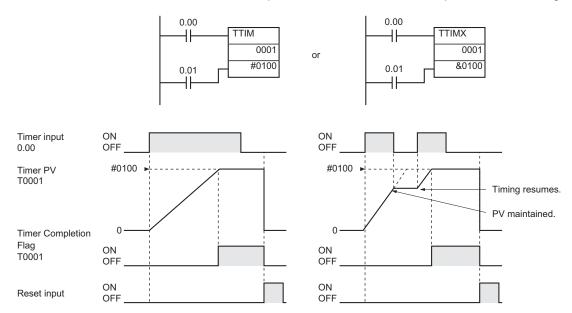

TIML/TIMLX

Instruction	Mnemonic	Variations	Function code	Function			
LONG TIMER	TIML		542	TIML(542)/TIMLX(553) operates a decrementing			
LONG TIMER	TIMLX		553	timer with units of 0.1s.			

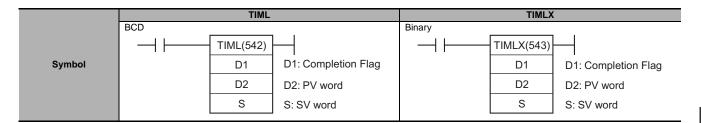


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	Not allowed	OK	

Operands

Operand	Description	Data	type	Size
Operand	Description	TIML	TIMLX	Size
D1	Completion Flag	WORD	UINT	1
D2	PV word	DWORD	UDINT	2
S	SV word	DWORD	UDINT	2

D1: Completion Flag

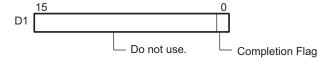


The PV and SV can range from #00000000 to #9999999 for TIML(542) and &00000000 to &4294967294 (decimal) or #00000000 to #FFFFFFF (hexadecimal) for TIMLX(553).

Note S, S+1, D2 and D2+1 must be in the same data area.

D2: PV Word



S: SV Word

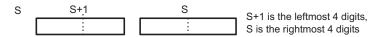


Operand Specifications

Area			V	Vord ad	dresse	es			Indirect addre	Con-	Con- Registers				ıgs	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	S	DR	IR	Indirect using IR	тк	CF	bits	bits
D1																		
D2	OK	OK	OK	OK			OK	OK	OK	OK				OK				
S					OK	OK					OK							

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the PV contained in D2 is not BCD. ON if the SV contained in S is not BCD, when TIML(542) is used. OFF in all other cases.

- When the timer input is OFF, the timer is reset, i.e., the timer's PV is reset to the SV and its Completion Flag is turned OFF.
- When the timer input goes from OFF to ON, TIML(542)/TIMLX(553) starts decrementing the PV in D2+1 and D2. The PV will continue timing down as long as the timer input remains ON and the timer's Completion Flag will be turned ON when the PV reaches 0.
- The status of the timer's PV and Completion Flag will be maintained after the timer times out. To restart the timer, the timer input must be turned OFF and then ON again or the timer's PV must be changed to a non-zero value (by MOV(021), for example).

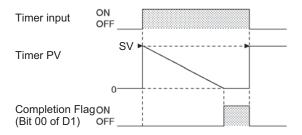


- The timer accuracy is -0.01 to 0 s. The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.
- TIML(542)/TIMLX(553) can time up to 115 days for TIML(542) and 4,971 days for TIMLX(543).

- Unlike most timers, TIML(542)/TIMLX(553) does not use a timer number. (Timer area PV refreshing is not performed for TIML(542)/TIMLX(553).)
- Since the Completion Flag for TIML(542)/TIMLX(553) is in a data area it can be forced set or forced reset like other bits, but the PV will not change.
- The timer's PV is refreshed only when TIML(542)/TIMLX(553) is executed, so the timer will not operate properly when the cycle time exceeds 100 ms because the timer increments in 100-ms units.
- The timer's Completion Flag is refreshed only when TIML(542)/TIMLX(553) is executed, so a delay of up to one cycle may be required for the Completion Flag to be turned ON after the timer times out.
- When TIML(542)/TIMLX(553) is in a program section between IL(002) and ILC(003) and the program section is interlocked, the PV will be reset to the SV and the Completion Flag will be turned OFF.
- When an operating TIML(542)/TIMLX(553) timer is in a program section between JMP(004) and JME(005) and the program section is jumped, the PV will retain its previous value. Be sure to take this fact into account when TIML(542)/TIMLX(553) is programmed between JMP(004) and JME(005).
- Be sure that the words specified for the Completion Flag and PV (D1, D2, and D2+1) are not used in other instructions. If these words are affected by other instructions, the timer might not time out properly.

Example Programming


When timer input CIO 0.00 is ON in the following example, the timer PV (in D201 and D200) will be set to the SV (in D101 and D100) and the PV will begin counting down. The timer Completion Flag (CIO 200.00) will be turned ON when the PV reaches 0.

When CIO 0.00 goes OFF, the timer PV will be reset to the SV and the Completion Flag will be turned OFF.

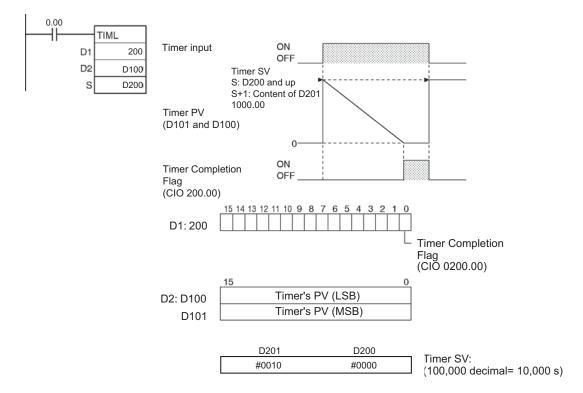

MTIM/MTIMX

Instruction	Mnemonic	Variations	Function code	Function		
	MTIM		543	MTIM(543)/MTIMX(554) operates a 0.1-s incre-		
MULTI-OUTPUT TIMER	MTIMX		554	menting timer with eight independent SVs and Completion Flags.		

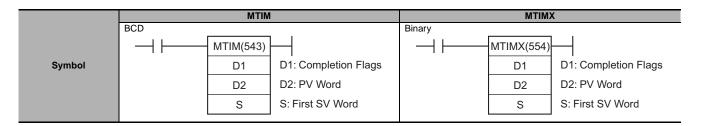


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	ОК	ОК	Not allowed	OK

Operands


Operand	Description	Data	type	Size
	Description	MTIM	MTIMX	Size
D1	Completion Flags	UINT	UINT	1
D2	PV Word	WORD	UINT	1
S	First SV Word	WORD	WORD	8

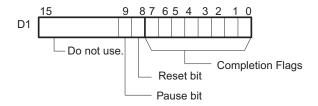

Range of D2, S to S+7

- In BCD: #0000 to #9999
- In Binary:
 &0 to &65535 (decimal) or
 #0000 to #FFFF (hex)

Note S through S+7 must be in the same data area.

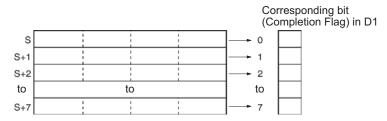

Operand Specifications

Aron	Word addresses							Indirect DM/EM addresses Constant			Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stant	DR	IR	Indirect using IR	тк	CF	bits bi	bits
D1																		
D2	ОК	OK	OK	OK		OK		OK										
S	Ĭ																	


Flags

Name	Label	Operation				
Error Flag	P_ER	ON if the PV contained in D2 is not BCD, when MTIM(543) is used. OFF in all other cases.				

Function

- When the execution condition for MTIM(543)/MTIMX(554) is ON and the reset and timer bits are both OFF, MTIM(543)/MTIMX(554) increments the PV in D2. If the pause bit is turned ON, the timer will stop incrementing the PV, but the PV will retain its value. MTIM(543)/MTIMX(554) will resume timing when the pause bit goes OFF again.
- The PV (content of D2) is compared to the eight SVs in S through S+7 each time that MTIM(543)/MTIMX(554) is executed, and if any of the SVs is less than or equal to the PV, the corresponding Completion Flag (D1 bits 00 through 07) is turned ON.
- When the PV reaches 9999, the PV will be reset to 0 and all of the Completion Flags will be turned OFF. If the reset bit is turned ON while the timer is operating or paused, the PV will be reset to 0 and all of the Completion Flags will be turned OFF.
- The set value is 0 to 999.9 s for MTIM(543) and 0 to 6,553.5 s for MTIMX(554), and the timer accuracy is -0.01 to 0 s.

Note The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

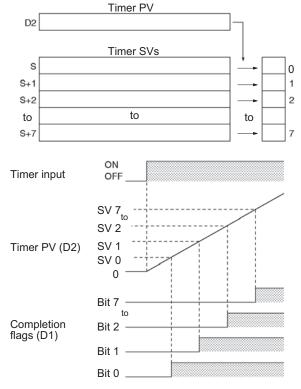

• The following table shows the operation of MTIM(543)/MTIMX(554) for the four possible combinations of the reset and pause bits

Reset bit (Bit 08)	Pause bit (Bit 09)	Operation
OFF	OFF	The PV will be updated and the corresponding Completion Flag will be turned ON when SV \leq PV.
	ON	The PV will not be updated and MTIM(543)/MTIMX(554) will be treated as NOP(000).
ON	OFF	The PV will be reset to 0 and the Completion Flags will be turned OFF. The PV will not
	ON	be updated.


The reset and pause bits are effective only when the execution condition for MTIM(543)/MTIMX(554) is ON

Hint

If a word in the CIO area is specified for D1, the SET and RSET instructions can be used to control
the pause and reset bits.

- Unlike most timers, MTIM(543)/MTIMX(554) does not use a timer number. (Timer area PV refreshing is not performed for MTIM(543)/MTIMX(554).)
- When the PV reaches 9999, the PV will be reset to 0 and all of the Completion Flags will be turned OFF.

- If in BCD mode and an SV in S through S+7 does not contain BCD data, that SV will be ignored. An error will not occur and the Error Flag will not be turned ON.
- Since the Completion Flag for MTIM(543)/MTIMX(554) is in a data area it can be forced set or forced reset like other bits, but the PV will not change.
- When eight or fewer SVs are required, set the word after the last SV to 0. MTIM(543)/MTIMX(554) will ignore the SV that is set to 0 and all of the remaining SVs.

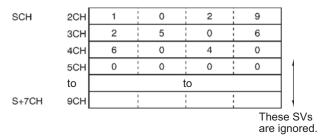



- The timer's PV is refreshed only when MTIM(543)/MTIMX(554) is executed, so the timer will not operate properly when the cycle time exceeds 100 ms because the timer increments in 100-ms units. To ensure precise timing and prevent problems caused by long cycle times, input the same MTIM(543)/MTIMX(554) instruction at several points in the program.
- The timer's Completion Flag is refreshed only when MTIM(543)/MTIMX(554) is executed, so a delay of up to one cycle may be required for the Completion Flag to be turned ON after the timer times out.
- When MTIM(543)/MTIMX(554) is in a program section between IL(002) and ILC(003) and the
 program section is interlocked, the PV will retain its previous value (it will not be reset). Be sure to
 take this fact into account when MTIM(543)/MTIMX(554) is programmed between IL(002) and
 ILC(003).
- When an operating MTIM(543)/MTIMX(554) timer is in a program section between JMP(004) and JME(005) and the program section is jumped, the PV will retain its previous value. Be sure to take this fact into account when MTIM(543)/MTIMX(554) is programmed between JMP(004) and JME(005).
- Be sure that the words specified for the Completion Flags and PV (D1 and D2) are not used in other instructions. If these words are affected by other instructions, the timer might not time out properly.


Example Programming


When CIO 0.00 is ON and the pause bit (CIO 010009) is OFF in the following example, the timer will start operating when the reset bit (CIO 010009) is turned from ON to OFF. The timer's PV will begin timing up from 0.

The eight SVs in D200 through D207 are compared to the PV and the corresponding Completion Flags (CIO 010000 through CIO 010007) are turned on when the SV \leq PV.

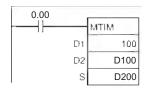

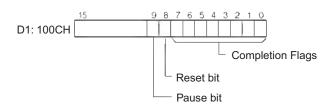


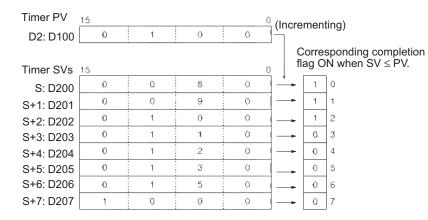

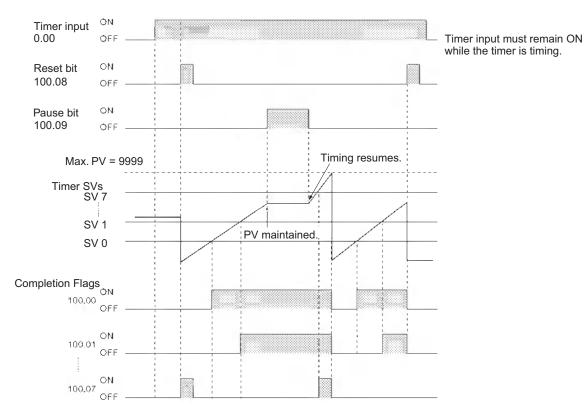

CNT/CNTX

Instruction	Mnemonic	Variations	Function code	Function		
COUNTER	CNT/CNTX		546	CNT/CNTX(546) operates a decrementing counter.		

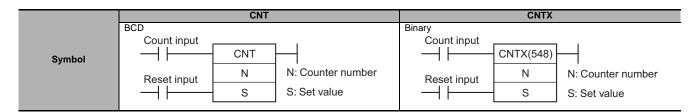

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size	
	Description	CNT	CNTX	Size	
N	Counter Number	COUNTER	COUNTER	1	
S	Set Value	WORD	UINT	1	

N: Counter Number

The counter number must be between 0000 and 4095 (decimal).

S: Set Value

BCD: #0000 to #9999

Binary: &0 to &65535 (decimal) or #0000 to #FFFF (hex)

Operand Specifications


Area			W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con- Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N						ОК								OK				
S	OK	OK	OK	OK	OK	UK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a counter Completion Flag or counter PV. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.
Equals Flag	P_EQ	Unchanged (See note.)
Negative Flag	P_N	Unchanged (See note.)


Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

- The counter PV is decremented by 1 every time that the count input goes from OFF to ON. The Completion Flag is turned ON when the PV reaches 0.
- Once the Completion Flag is turned ON, reset the counter by turning the reset input ON or by using the CNR(545)/CNRX(547) instruction. Otherwise, the counter cannot be restarted.
- The counter is reset and the count input is ignored when the reset input is ON. (When a counter is reset, its PV is reset to the SV and the Completion Flag is turned OFF.)
- The setting range 0 to 9,999 for CNT and 0 to 65,535 for CNTX(546).

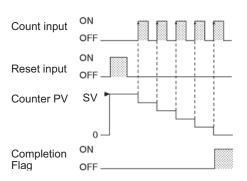


Hint

 Counter PVs are retained even through a power interruption. If you want to restart counting from the SV instead of resuming the count from the retained PV, add the First Cycle Flag (A200.11) as a reset input to the counter.

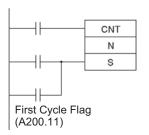


- Counter numbers are shared by the CNT, CNTX(546), CNTR(012), CNTRX(548), CNTW(814), and CNTWX(818) instructions. If two counters share the same counter number but are not used simultaneously, a duplication error will be generated when the program is checked but the counters will operate normally. Counters which share the same counter number will not operate properly if they are used simultaneously.
- A counter's PV is refreshed when the count input goes from OFF to ON and the Completion Flag is refreshed each time that CNT/CNTX(546) is executed. The Completion Flag is turned ON if the PV is 0 and it is turned OFF if the PV is not 0.

- When a CNT/CNTX(546) counter is forced set, its Completion Flag will be turned ON and its PV will be reset to 0000. When a CNT/CNTX(546) counter is forced reset, its Completion Flag will be turned OFF and its PV will be set to the SV.
- Be sure to reset the counter by turning the reset input from OFF → ON → OFF before beginning counting with the count input, as shown in the following diagram. The count input will not be received if the reset input is ON.

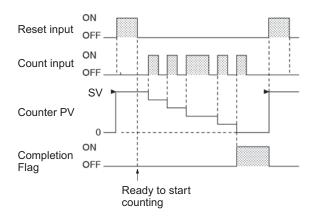


The reset input will take precedence and the counter will be reset if the reset input and count input
are both ON at the same time. (The PV will be reset to the SV and the Completion Flag will be turned
OFF.)

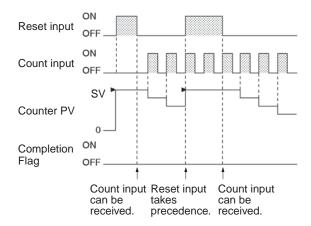

• If online editing is used to add a counter, the counter must be reset before it will work properly. If the counter is not reset, the previous value will be used as the counter's present value (PV), and the counter may not operate properly after it is written.

CNTR/CNTRX

Instruction	Mnemonic	Variations	Function code	Function
REVERSIBLE COUNTER	CNTR		012	
REVERSIBLE COUNTER	CNTRX		548	

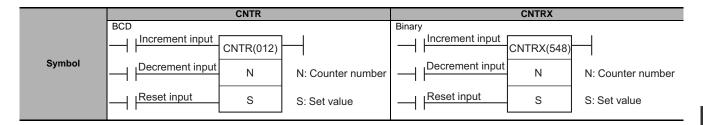

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size
Operand	Description	CNTR	CNTRX	Size
N	Counter Number	COUNTER	COUNTER	1
S	Set Value	WORD	UINT	1

N: Counter Number

The counter number must be between 0000 and 4095 (decimal).

S: Set Value

BCD:#0000 to #9999

Binary: &0 to &65535 (decimal) or #0000 to #FFFF (hex)

Operand Specifications

Area		Word addresses							Indirect DM/EM addresses Con-			Registers			Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
N						ОК								OK				
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the PV address of a counter. ON if in BCD mode and S does not contain BCD data. OFF in all other cases.

The counter PV is incremented by 1 every time that the increment input goes from OFF to ON and it is decremented by 1 every time that the decrement input goes from OFF to ON. The PV can fluctuate between 0 and the SV.

When incrementing, the Completion Flag will be turned ON when the PV is incremented from the SV back to 0 and it will be turned OFF again when the PV is incremented from 0 to 1.

When decrementing, the Completion Flag will be turned ON when the PV is decremented from 0 up to the SV and it will be turned OFF again when the PV is decremented from the SV to SV-1.

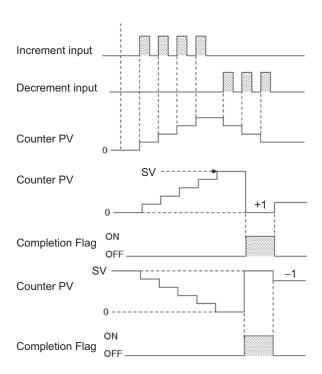


Precautions

- Counter numbers are shared by the CNT, CNTX(546), CNTR(012), CNTRX(548), CNTW(814), and CNTWX(818) instructions. If two counters share the same counter number but are not used simultaneously, a duplication error will be generated when the program is checked but the counters will operate normally. Counters which share the same counter number will not operate properly if they are used simultaneously.
- The PV will not be changed if the increment and decrement inputs both go from OFF to ON at the same time. When the reset input is ON, the PV will be reset to 0 and both count inputs will be ignored.
- The Completion Flag will be ON only when the PV has been incremented from the SV to 0 or decremented from 0 to the SV; it will be OFF in all other cases.
- When inputting the CNTR(012)/CNTRX(548) instruction with mnemonics, first enter the increment input (II), then the decrement input (DI), the reset input (R), and finally the CNTR(012)/CNTRX(548) instruction. When entering with the ladder diagrams, first input the increment input (II), then the CNTR(012)/CNTRX(548) instruction, the decrement input (DI), and finally the reset input (R).

Example Programming


The counter PV is reset to 0 by turning the reset input (CIO 0.02) ON and OFF. The PV is incremented by 1 each time that the increment input (CIO 0.00) goes from OFF to ON. When the PV is incremented from the SV (3), it is automatically reset to 0 and the Completion Flag is turned ON.

Likewise, the PV is decremented by 1 each time that the decrement input (CIO 0.01) goes from OFF to ON. When the PV is decremented from 0, it is automatically set to the SV (3) and the Completion Flag is turned ON.

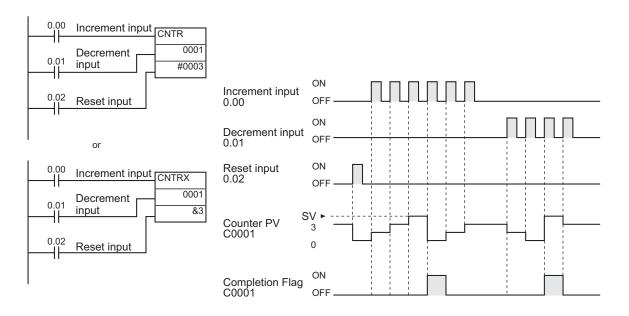

The add and subtract count inputs increase/decrease the count once when the signal rises (OFF to ON). When both inputs turn ON at the same time, neither increases/decreases the count. When the reset input turns ON, the PV changes to 0 and count input is not accepted.


In the following example, the SV for CNTR(012) 0007 is determined by the content of CIO 0001. When the content of CIO 0001 is controlled by an external switch, the set value can be changed manually from the switch.

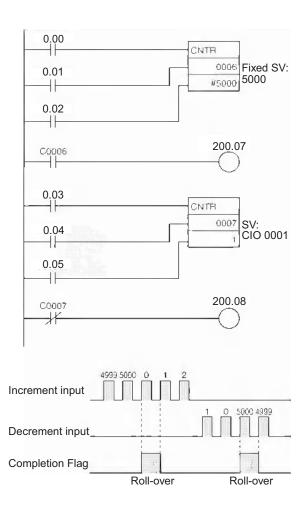

Instruction	Operands
LD	0.00
LD	0.01
LD	0.02
CNTR (012)	0006
	#5000
LD	200.07
OUT	0.03
LD	0.04
LD	0.05
LD	0007
CNTR (012)	1
LD NOT	C0007
OUT	200.08

CNR/CNRX

Instruction	Mnemonic	Variations	Function code	Function			
RESET TIMER/COUNTER	CNR	@CNR	545	Resets the timers or counters within the specified			
RESET TIMER/COUNTER	CNRX	@CNRX	547	range of timer or counter numbers.			

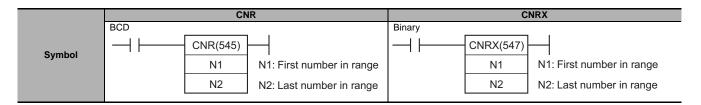

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	ОК	OK	OK	

Operands

Operand	Description	Data	type	Size			
Operand	Description	CNT	CNTX	Size			
N1	First number in range	TIMER/CO	OUNTER*1	Variable			
N2	Last number in range	TIMER/CO	OUNTER*1	Variable			

N1: First Number in Range

N1 must be a timer number between T0000 and T4095 or a counter number between C0000 and C4095.

N2: Last Number in Range

N2 must be a timer number between T0000 and T4095 or a counter number between C0000 and C4095

Note N1 and N2 must be in the same data area, i.e., N1 and N2 must be timer numbers or counter numbers.

Operand Specifications

Area		Word addresses							Indirect addre	DM/EM esses	Con-		Regist	ters	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N1					ОК	ОК								ОК				
N2					UK	UK								UK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N1 is indirectly addressed through an Index Register but the address in the Index Register is not the PV address of a timer or counter. ON if N2 is indirectly addressed through an Index Register but the address in the Index Register is not the PV address of a timer or counter. ON if N1 and N2 are not in the same data area. OFF in all other cases.

Function

CNR(545)/CNRX(547) resets the Completion Flags of all timers or counters from N1 to N2. At the same time, the PVs will all be set to the maximum value (9999 for BCD and FFFF for binary). (The PV will be set to the SV the next time that the timer or counter instruction is executed.)

Precautions


The timer/counter that is reset is as follows.

	Instructions reset	Operation of CNR(545)
BCD	TIM: HUNDRED-MS TIMER TIMH(015): TEN-MS TIMER TMHH(540): ONE-MS TIMER TTIM(087): ACCUMULATIVE TIMER TIMW(813): HUNDRED-MS TIMER WAIT TMHW(815): TEN-MS TIMER WAIT CNT: COUNTER CNTR(012): REVERSIBLE COUNTER CNTW(814): COUNTER WAIT	The PV is set to its maximum value (9,999 BCD) and the Completion Flag is turned OFF.
	TIMU(541): TENTH-MS TIMER TMUH(544): HUNDREDTH-MS TIMER	The Completion Flag is turned OFF. (The PV cannot be read.)

	Instructions reset	Operation of CNRX(547)
Binary	TIMX(550): HUNDRED-MS TIMER TIMHX(551): TEN-MS TIMER TMHHX(552): ONE-MS TIMER TTIMX(555): ACCUMULATIVE TIMER TIMWX(816): HUNDRED-MS TIMER WAIT TMHWX(817):TEN-MS TIMER WAIT CNTX(546): COUNTER CNTRX(548): REVERSIBLE COUNTER CNTWX(818): COUNTER WAIT	The PV is set to its maximum value (FFFF hex) and the Completion Flag is turned OFF.
	TIMUX(556): TENTH-MS TIMER TMUHX(557): HUNDREDTH-MS TIMER	The Completion Flag is turned OFF. (The PV cannot be read.)

- The CNR(545)/CNRX(547) instructions do not reset TIML(542), TIMLX(553), MTIM(543), and MTIMX(554), because these timers do not use timer numbers.
- The CNR(545)/CNRX(547) instructions do not reset the timer/counter instructions themselves, they reset the PVs and Completion Flags allocated to those instructions. In most cases, the effect of CNR(545)/CNRX(547) is different from directly resetting the instructions. For example, when a TIM/TIMX(550) instruction is reset directly its PV is set to the SV, but when that timer is reset by CNR(545)/CNRX(547) its PV is set to the maximum value (9999 for BCD and FFFF for binary).
- When N1 and N2 are specified with N1>N2, only the Completion Flag for the timer/counter number will be reset.

Example Programming

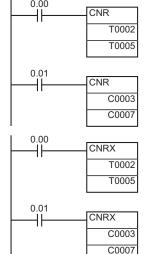

When CIO 0.00 is ON in the following example, the Completion Flags for timers T0002 to T0005 are turned OFF and the timers' PVs are set to the maximum value (9999 for BCD).


When CIO 0.01 is ON, the Completion Flags for counters C0003 to C0007 are turned OFF and the counters' PVs are set to the maximum value (9999 for BCD).

When CIO 0.00 is ON in the following example, the Completion Flags for timers T0002 to T0005 are turned OFF and the timers' PVs are set to the maximum value (FFFF for binary).

When CIO 0.01 is ON, the Completion Flags for counters C0003 to C0007 are turned OFF and the counters' PVs are set to the maximum value (FFFF for binary).

TRSET

Instruction	Mnemonic	Variations	Function code	Function	
TIMER RESET	TRSET	@TRSET	549	Resets the specified timer.	

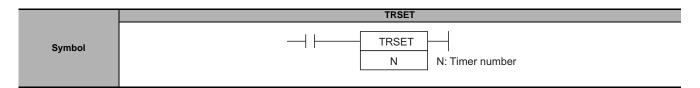

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
N	Timer number	TIMER	1		

Operand Specifications

Aron			Wor	d addre	sses			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					OK								OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is indirectly addressed through an Index Register but the address in the Index Register is not the address of a timer Completion Flag or timer PV. OFF in all other cases.
Equals Flag	P_EQ	Unchanged.
Negative Flag	P_N	Unchanged.

Function


Resets the specified timer.

Comparison Instructions

=, <>, <, <=, >, >=

Instruction	Mnemonic	Variations	Function code	Function
Input Comparison Instructions	=, <>, <, <=, >, >=		300 to 328	Input comparison instructions compare two values (constants and/or the contents of specified words) and create an ON execution condition when the comparison condition is true.

Note Input comparison instructions are available to compare signed or unsigned data of one-word or double length data. Refer to 3-15-24 Single-precision Floating-point Comparison Instructions for details on single-precision floating-point input comparison instructions and 3-16-21 Double-precision Floating-point Input Comparison Instructions for details on double-precision floating-point input comparison instructions.

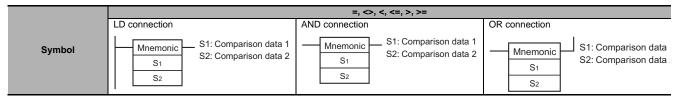

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

			Data	Size			
Operand	Description	Unsigned	Unsigned double length	Signed	Signed double length	One-word	Double length
S1	Comparison data 1	UINT	UDINT	INT	DINT	1	2
S2	Comparison data 2	UINT	UDINT	INT	DINT	1	2

Operand Specifications

Area		Word addresses								addresses		Con-	Registers		тк	CF	Pulse bits	TR bits	
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			nits	טונט
One-word Data	S1 S2	OK	ОК	OK	ОК	ОК	ОК		ОК										
Double- length Data	S1 S2	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК	OK		OK	ОК				

Name	Label	Operation						
Error Flag	ER	OFF or unchanged (See note.)						
Greater Than Flag	>	 ON if S₁ > S₂ with one-word data. ON if S₁+1, S₁ > S₂+1, S₂ with double-length data. OFF in all other cases. 						
Greater Than or Equal Flag	>=	 ON if S₁ ≥ S₂ with one-word data. ON if S₁+1, S₁ ≥ S₂+1, S₂ with double-length data. OFF in all other cases. 						

Name	Label	Operation
Equal Flag	=	 ON if S₁ = S₂ with one-word data. ON if S₁+1, S₁ = S₂+1, S₂ with double-length data. OFF in all other cases.
Not Equal Flag	<>	 ON if S₁ ≠ S₂ with one-word data. ON if S₁+1, S₁ ≠ S₂+1, S₂ with double-length data. OFF in all other cases.
Less Than Flag	<	 ON if S₁ < S₂ with one-word data. ON if S₁+1, S₁ < S₂+1, S₂ with double-length data. OFF in all other cases.
Less Than or Equal Flag	<=	 ON if S₁ ≤ S₂ with one-word data. ON if S₁+1, S₁ ≤ S₂+1, S₂ with double-length data. OFF in all other cases.
Negative Flag	N	OFF or unchanged (See note.)


Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF. In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units, these Flags are left unchanged.

Function

The input comparison instruction compares S1 and S2 as signed or unsigned values and creates an ON execution condition when the comparison condition is true.

The input comparison instructions are treated just like the LD, AND, and OR instructions to control the execution of subsequent instructions.

Input type	Operation
LD	The instruction can be connected directly to the left bus bar.
AND	The instruction cannot be connected directly to the left bus bar.
OR	The instruction can be connected directly to the left bus bar.

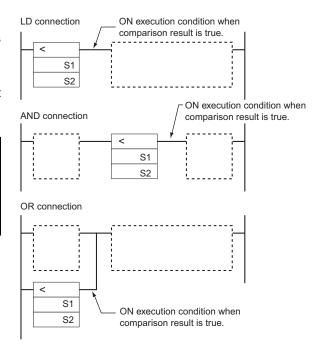

Options

The input comparison instructions can compare signed or unsigned data and they can compare one-word or double values. If no options are specified, the comparison will be for one-word unsigned data. With the three input types and two options, there are 72 different input comparison instructions.

Symbol	Option (data format)	Option (data length)
= (Equal) <> (Not equal) < (Less than) <= (Less than or equal) > (Greater than) >= (Greater than or equal)	None: Unsigned data S: Signed data	None: One-word data L: Double-length data

Unsigned input comparison instructions (i.e., instructions without the S option) can handle unsigned binary or BCD data. Signed input comparison instructions (i.e., instructions with the S option) handle signed binary data.

Summary of Input Comparison Instructions

The following table shows the function codes, mnemonics, names, and functions of the 72 input comparison instructions. (For one-word comparisons $C1=S_1$ and $C2=S_2$; for double comparisons $C1=S_1+1$, S_1 and $C2=S_2+1$, S_2 .)

Code	Mnemonic	Name	Function
300	LD=	LOAD EQUAL	True if
	AND=	AND EQUAL	C1 = C2
	OR=	OR EQUAL	
301	LD=L	LOAD DOUBLE EQUAL	
	AND=L	AND DOUBLE EQUAL	
	OR=L	OR DOUBLE EQUAL	
302	LD=S	LOAD SIGNED EQUAL	
302			
	AND=S	AND SIGNED EQUAL	
	OR=S	OR SIGNED EQUAL	
303	LD=SL	LOAD DOUBLE SIGNED EQUAL	
	AND=SL	AND DOUBLE SIGNED EQUAL	
	OR=SL	OR DOUBLE SIGNED EQUAL	
305	LD<>	LOAD NOT EQUAL	True if
	AND<>	AND NOT EQUAL	C1 ≠ C2
	OR<>	OR NOT EQUAL	
306	LD<>L	LOAD DOUBLE NOT EQUAL	
	AND<>L	AND DOUBLE NOT EQUAL	
	OR<>L	OR DOUBLE NOT EQUAL	
307	LD<>S	LOAD SIGNED NOT EQUAL	
	AND<>S	AND SIGNED NOT EQUAL	
	OR<>S	OR SIGNED NOT EQUAL	
300			
308	LD<>SL	LOAD DOUBLE SIGNED NOT EQUAL	
	AND<>SL	AND DOUBLE SIGNED NOT EQUAL	
	OR<>SL	OR DOUBLE SIGNED NOT EQUAL	
310	LD<	LOAD LESS THAN	True if
	AND<	AND LESS THAN	C1 < C2
	OR<	OR LESS THAN	
311	LD <l< td=""><td>LOAD DOUBLE LESS THAN</td><td></td></l<>	LOAD DOUBLE LESS THAN	
	AND <l< td=""><td>AND DOUBLE LESS THAN</td><td></td></l<>	AND DOUBLE LESS THAN	
	OR <l< td=""><td>OR DOUBLE LESS THAN</td><td></td></l<>	OR DOUBLE LESS THAN	
312	LD <s< td=""><td>LOAD SIGNED LESS THAN</td><td></td></s<>	LOAD SIGNED LESS THAN	
	AND <s< td=""><td>AND SIGNED LESS THAN</td><td></td></s<>	AND SIGNED LESS THAN	
	OR <s< td=""><td>OR SIGNED LESS THAN</td><td></td></s<>	OR SIGNED LESS THAN	
313	LD <sl< td=""><td>LOAD DOUBLE SIGNED LESS THAN</td><td></td></sl<>	LOAD DOUBLE SIGNED LESS THAN	
313	AND <sl< td=""><td>AND DOUBLE SIGNED LESS THAN</td><td></td></sl<>	AND DOUBLE SIGNED LESS THAN	
		OR DOUBLE SIGNED LESS THAN	
045	OR <sl< td=""><td></td><td>T 'f</td></sl<>		T 'f
315	LD<=	LOAD LESS THAN OR EQUAL	True if C1 ≤ C2
	AND<=	AND LESS THAN OR EQUAL	U1 ≥ U2
	OR<=	OR LESS THAN OR EQUAL	
316	LD<=L	LOAD DOUBLE LESS THAN OR EQUAL	
	AND<=L	AND DOUBLE LESS THAN OR EQUAL	
	OR<=L	OR DOUBLE LESS THAN OR EQUAL]
317	LD<=S	LOAD SIGNED LESS THAN OR EQUAL	
	AND<=S	AND SIGNED LESS THAN OR EQUAL	
	OR<=S	OR SIGNED LESS THAN OR EQUAL	
318	LD<=SL	LOAD DOUBLE SIGNED LESS THAN OR EQUAL	True if
	AND<=SL	AND DOUBLE SIGNED LESS THAN OR EQUAL	C1 ≤ C2
	OR<=SL	OR DOUBLE SIGNED LESS THAN OR EQUAL	
320	LD>	LOAD GREATER THAN	True if
	AND>	AND GREATER THAN	C1 > C2
224	OR>	OR GREATER THAN	
321	LD>L	LOAD DOUBLE GREATER THAN	
	AND>L	AND DOUBLE GREATER THAN	
	OR>L	OR DOUBLE GREATER THAN	
322	LD>S	LOAD SIGNED GREATER THAN	
	AND>S	AND SIGNED GREATER THAN	
	OR>S	OR SIGNED GREATER THAN	
323	LD>SL	LOAD DOUBLE SIGNED GREATER THAN	
	AND>SL	AND DOUBLE SIGNED GREATER THAN	
	OR>SL	OR DOUBLE SIGNED GREATER THAN	

Code	Mnemonic	Name	Function
325	LD>=	LOAD GREATER THAN OR EQUAL	True if
	AND>=	AND GREATER THAN OR EQUAL	C1 ≥ C2
	OR>=	OR GREATER THAN OR EQUAL	
326	LD>=L	LOAD DOUBLE GREATER THAN OR EQUAL	1
	AND>=L	AND DOUBLE GREATER THAN OR EQUAL	1
	OR>=L	OR DOUBLE GREATER THAN OR EQUAL	1
327	LD>=S	LOAD SIGNED GREATER THAN OR EQUAL	1
	AND>=S	AND SIGNED GREATER THAN OR EQUAL	1
	OR>=S	OR SIGNED GREATER THAN OR EQUAL	1
328	LD>=SL	LOAD DBL SIGNED GREATER THAN OR EQUAL	1
	AND>=SL	AND DBL SIGNED GREATER THAN OR EQUAL]
	OR>=SL	OR DBL SIGNED GREATER THAN OR EQUAL	

Hint

Unlike instructions such as CMP(020) and CMPL(060), the result of an input comparison instruction
is reflected directly as an execution condition, so it is not necessary to access the result of the
comparison through an Arithmetic Flag and the program is simpler and faster.


Precautions

• Input comparison instructions cannot be used as right-hand instructions, i.e., another instruction must be used between them and the right bus bar.

Example Programming


AND LESS THAN: AND<(310)

When CIO 0.00 is ON in the following example, the contents of D100 and D200 are compared in as unsigned binary data. If the content of D100 is less than that of D200, CIO 50.00 is turned ON and execution proceeds to the next line. If the content of D100 is not less than that of D200, the remainder of the instruction line is skipped and execution moves to the next instruction line.

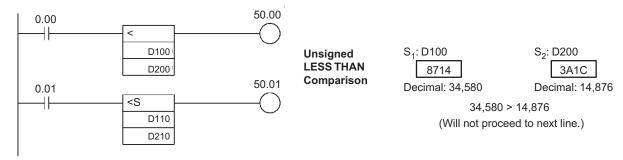


AND SIGNED LESS THAN: AND<S(312)

When CIO 0.01 is ON in the following example, the contents of D110 and D210 are compared as signed binary data. If the content of D110 is less than that of D210, CIO 50.01 is turned ON and execution proceeds to the next line. If the content of D110 is not less than that of D210, the remainder of the instruction line is skipped and execution moves to the next instruction line.

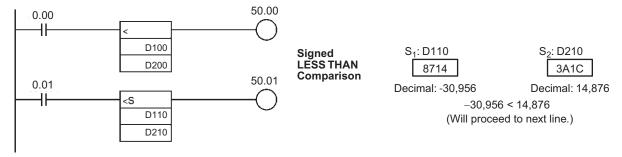

=DT, **<>**DT, **<D**T, **>**DT, **>D**T

Instruction	Mnemonic	Variations	Function code	Function
Time Comparison Instructions	=DT <>DT <dt <=DT >DT >=DT</dt 		341 342 343 344 345 346	Time comparison instructions compare two BCD time values and create an ON execution condition when the comparison condition is true.

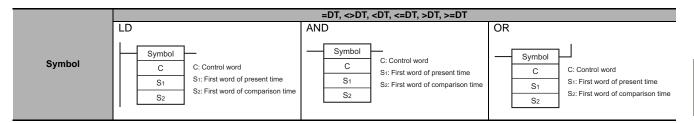

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	Control word	WORD	1
S1	First word of present time	WORD	3
S2	First word of comparison time	WORD	3


C: Control Word

Bits 00 to 05 of C specify whether or not the time data will be masked for the comparison. Bits 00 to 05 mask the seconds, minutes, hours, day, month, and year, respectively. If all 6 values are masked, the instruction will not be executed, the execution condition will be OFF, and the Error Flag will be turned ON.

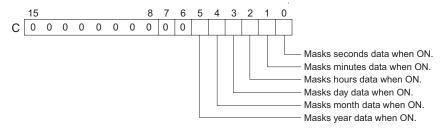

S₁ through S₁₊₂: Present Time Data


 S_1 through S_1+2 contain the present time data. S_1 through S_1+2 must be in the same data area.

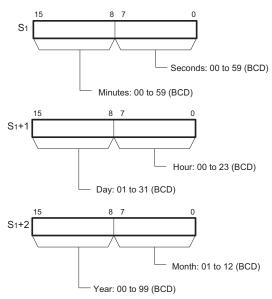

Note When using the CPU Unit's internal clock data for the comparison, set S1 to A351 to specify the CPU Unit's internal clock data (A351 to A353).

S₂ through S₂+2: Comparison Time Data

 S_2 through S_2 +2 contain the comparison time data. S_2 through S_2 +2 must be in the same data area.

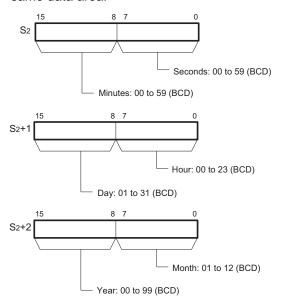

Note The year value indicates the last two digits of the year. Values 00 to 97 are interpreted as 2000 to 2097. Values 98 and 99 are interpreted as 1998 and 1999.

Operand Specifications

Area	Word addresses					addresses Con-			Registers TK		CF	Pulse bits	TR bits					
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	-	Stants	DR	IR	Indirect using IR			DILS	DILS
С	ОК	ОК	OK	ОК	ОК	ОК					OK			ОК				
S1, S2	JUK	UK	UK	OK OK OK	OK	OK	OK				UK							

Name	Label	Operation
Error Flag	P_ER	ON if all 6 of the mask bits (C bits 00 to 05) are ON. OFF in all other cases.
Greater Than Flag	P_GT	 ON if S₁ > S₂. OFF in all other cases.
Greater Than or Equal Flag	P_GE	 ON if S₁ ≥ S₂. OFF in all other cases.
Equal Flag	P_EQ	 ON if S₁ = S₂. OFF in all other cases.
Not Equal Flag	P_NE	 ON if S₁ ≠ S₂. OFF in all other cases.
Less Than Flag	P_LT	 ON if S₁ < S₂. OFF in all other cases.
Less Than or Equal Flag	P_LE	 ON if S₁ ≤ S₂. OFF in all other cases.

Function

The time comparison instruction compares the unmasked values (corresponding bit of C set to 0) of the present time data in S_1 to S_1+2 with the comparison time data in S_2 to S_2+2 and creates an ON execution condition when the comparison condition is true. At the same time, the result of a time comparison instruction is reflected in the arithmetic flags (=, <>, <, <=, >, >=).


The time comparison instructions are treated just like the LD, AND, and OR instructions to control the execution of subsequent instructions.

There are 18 possible combinations of time comparison instructions.

Any time values that are masked in the control word (C) are not included in the comparison.

The following table shows the ON/OFF status of each flag for each comparison result.

Result	Flag status									
Result	=	<>	<	<=	>	>=				
$S_1 = S_2$	ON	OFF	OFF	ON	OFF	ON				
S ₁ > S ₂	OFF	ON	OFF	OFF	ON	ON				
S ₁ < S ₂	OFF	ON	ON	ON	OFF	OFF				

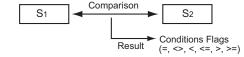


Masking Time Values

Time values can be masked individually and excluded from the comparison operation. To mask a time value, set the corresponding bit in the control word (C) to 1. Bits 00 to 05 of C mask the seconds, minutes, hours, day, month, and year, respectively.

Example:

When C = 39 hex, the rightmost 6 bits are 111001 (year=1, month=1, day=1, hours=0, minutes=0, and seconds=1) so only the hours and minutes are compared. This mask setting can be used to perform a particular operation at a given time (hour and minute) each day.

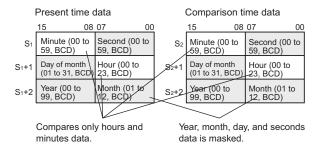

Hint

 Previous data comparison instructions compared data in 16-bit units. The time comparison instructions are limited to comparing 8-bit time values.

The following table shows the structure of the CPU Unit's internal Calendar/Clock Area.

Addresses	Contents
A351.00 to A351.07	Second (00 to 59, BCD)
A351.08 to A351.15	Minute (00 to 59, BCD)
A352.00 to A352.07	Hour (00 to 23, BCD)
A352.08 to A352.15	Day of month (01 to 31, BCD)
A353.00 to A353.07	Month (01 to 12, BCD)
A353.08 to A353.15	Year (00 to 99, BCD)


The Calendar/Clock Area can be set with a Programming Device (including a Programming Console), DATE(735) instruction, or "CLOCK WRITE" FINS command (0702 hex).

Precautions

• Time comparison instructions cannot be used as right-hand instructions, i.e., another instruction must be used between them and the right bus bar.


Example Programming

When CIO 0.00 is ON and the time is 13:00:00, CIO 50.00 is turned ON. The contents of A351 to A352 (the CPU Unit's internal calendar/clock data) are used as the present time data and the contents of D100 to D102 are used as the comparison time data. The year, month, and day values are masked, so only the hour, minute, and second data are compared.

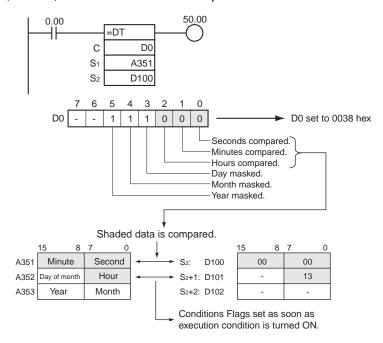

CMP/CMPL

Instruction	Mnemonic	Variations	Function code	Function
COMPARE	СМР	!CMP	020	Compares two unsigned binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area.
DOUBLE COMPARE	CMPL		060	Compares two double unsigned binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area.

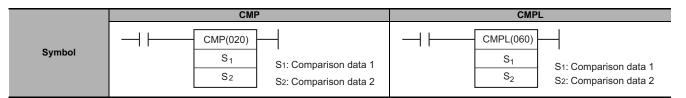

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	CMP	CMPL	CMP	CMPL		
S1	CMP: Comparison data 1 CMPL: Comparison data 1, rightmost word address	UINT	UDINT	1	2		
S2	CMP: Comparison data 2 CMPL: Comparison data 2, rightmost word address	UINT	UDINT	1	2		

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses		Con-	Registers			тк	CF	Pulse bits	TR bits
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	- stants -	DR	IR	Indirect using IR			DILS	มแร
CMP S1, S2	OK	ОК	ОК	ОК	OK		OK											
CMPL S1, S2	CMPL		OK	Ŏĸ.	OK		OK	OK .										

Flags


News	CX-Programmer	Oper	ation
Name	label	СМР	CMPL
Error Flag	ER	Unchanged (See note.)	Unchanged (See note.)
Greater Than Flag	>	ON if S ₁ > S ₂ . OFF in all other cases.	 ON if S₁ +1, S₁ > S₂+1, S₂. OFF in all other cases.
Greater Than or Equal Flag	>=	 ON if S₁ ≥ S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ ≥ S₂+1, S₂. OFF in all other cases.
Equal Flag	=	 ON if S₁ = S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ = S₂+1, S₂. OFF in all other cases.
Not Equal Flag	=	 ON if S₁ ≠ S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ ≠ S₂+1, S₂. OFF in all other cases.
Less Than Flag	<	 ON if S₁ < S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ < S₂+1, S₂. OFF in all other cases.
Less Than or Equal Flag	<=	ON if S ₁ ≤ S ₂ . OFF in all other cases.	 ON if S₁ +1, S₁ ≤ S₂+1, S₂. OFF in all other cases.
Negative Flag	N	Unchanged (See note.)	Unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

• The following table shows the status of the Arithmetic Flags after execution of CMP(020).

CMP(020) Result	Flag status											
CWF (020) Result	>	>=	=	<=	<	<>						
$S_1 > S_2$	ON	ON	OFF	OFF	OFF	ON						
$S_1 = S_2$	OFF	ON	ON	ON	OFF	OFF						
S ₁ < S ₂	OFF	OFF	OFF	ON	ON	ON						


^{*}A status of "---" indicates that the Flag may be ON or OFF.

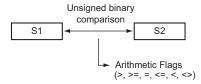

• The following table shows the status of the Arithmetic Flags after execution of CMPL(060).

CMPL(060) Result	Flag status											
CWFE(000) Result	>	>=	=	v =	<	<>						
S ₁ +1, S ₁ > S ₂ +1, S ₂	ON	ON	OFF	OFF	OFF	ON						
S_1+1 , $S_1 = S_2+1$, S_2	OFF	ON	ON	ON	OFF	OFF						
$S_1+1, S_1 < S_2+1, S_2$	OFF	OFF	OFF	ON	ON	ON						

^{*}A status of "---" indicates that the Flag may be ON or OFF.

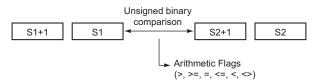

Function

CMP


CMP(020) compares the unsigned binary data in S_1 and S_2 and outputs the result to Arithmetic Flags (the Greater Than, Greater Than or Equal, Less Than or Equal, Less Than, and Not Equal Flags) in the Auxiliary Area.

• CMPL


CMPL(060) compares the unsigned binary data in S_1 +1, S_1 and S_2 +1, S_2 and outputs the result to Arithmetic Flags (the Greater Than, Greater Than or Equal, Less Than or Equal, Less Than, and Not Equal Flags) in the Auxiliary Area.

Precautions

Using CMP(020)Results in the Program
 When CMP(020)/CMPL(060) is executed, the result is reflected in the Arithmetic Flags. Control the
 desired output or right-hand instruction with a branch from the same input condition that controls
 CMP(020)/CMPL(060), as shown in the following diagram. In this case, the Equals Flag and output A
 will be turned ON when S₁ = S₂ or S₁ + 1, S₁ = S₂ + 1, S₂.

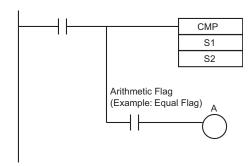


Using CMP(020) Results in the Program
 Do not program another instruction between CMP(020)/CMPL(060) and the instruction controlled by
 the Arithmetic Flag because the other instruction might change the status of the Arithmetic Flag.

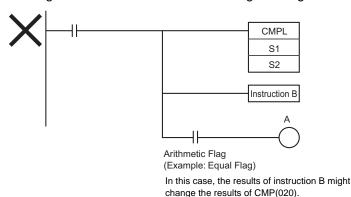

• The immediate-refreshing variation (!CMP(020)) can be used with words allocated to external inputs specified in S₁ and/or S₂. When !CMP(020) is executed, input refreshing will be performed for the external input word specified in S₁ and/or S₂ and that refreshed value will be compared. (Immediate refreshing cannot be performed on inputs allocated to Group-2 High-density I/O Units or Units mounted to Slave Racks.)

Example Programming


 When CIO 0.00 is ON in the following example, the eight-digit unsigned binary data in CIO 0011 and CIO 0010 is compared to the eight-digit unsigned binary data in CIO 0009 and CIO 0008 and the result is output to the Arithmetic Flags. The results recorded in the Greater Than, Equals, and Less Than Flags are immediately saved to CIO 20.00 (Greater Than), CIO 20.01 (Equals), and CIO 20.02 (Less Than).

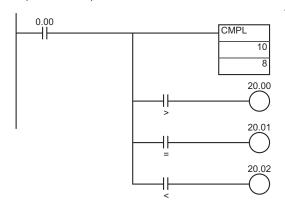

-					
	S1+1=11CH	S1=10CH		Flag	g status
	1234	5678		>	OFF (0)
	4	Comparison —	► Result	=	OFF (0)
Γ	S2+1=9CH	S2=8CH		<	ON (1)
Ī	ABCD	EF12			

CPS/CPSL

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY COMPARE	CPS	!CPS	114	Compares two signed binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area.
DOUBLE SIGNED BINARY COMPARE	CPSL		115	Compares two double signed binary values (constants and/or the contents of specified words) and outputs the result to the Arithmetic Flags in the Auxiliary Area.

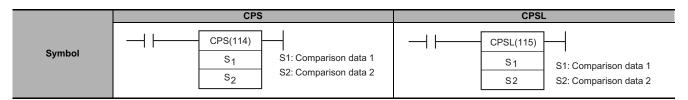

Applicable Program Areas

Area	Function block definitions	I Block program areas I		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	CPS	CPSL	CPS	CPSL		
S1	CMP: Comparison data 1 CMPL: Comparison data 1, rightmost word address	INT	DINT	1	2		
S2	CMP: Comparison data 2 CMPL: Comparison data 2, rightmost word address	INT	DINT	1	2		

Operand Specifications

Area	Word addresses								rect /EM esses	Con-		Regist	ers	тк	CF	Pulse bits	TR bits	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			DILS	טונט
CPS S1, S2	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК	OK	OK	ОК		OK				
CPSL S1, S2	56	OK	OK.	OK .			OK .											

Flags


Marra	Labat	Ор	eration
Name	Label	CPS	CPSL
Error Flag	ER	Unchanged (See note.)	OFF or unchanged (See note.)
Greater Than Flag	>	ON if S ₁ > S ₂ . OFF in all other cases.	 ON if S₁ +1, S₁ > S₂+1, S₂. OFF in all other cases.
Greater Than or Equal Flag	>=	 ON if S₁ ≥ S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ ≥ S₂+1, S₂. OFF in all other cases.
Equal Flag	=	 ON if S₁ = S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ = S₂+1, S₂. OFF in all other cases.
Not Equal Flag	=	 ON if S₁ ≠ S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ ≠ S₂+1, S₂. OFF in all other cases.
Less Than Flag	<	 ON if S₁ < S₂. OFF in all other cases. 	 ON if S₁ +1, S₁ < S₂+1, S₂. OFF in all other cases.
Less Than or Equal Flag	<=	ON if S ₁ ≤ S ₂ . OFF in all other cases.	 ON if S₁ +1, S₁ ≤ S₂+1, S₂. OFF in all other cases.
Negative Flag	N	Unchanged (See note.)	OFF or unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

• The following table shows the status of the Arithmetic Flags after execution of CPS(114).

CPS(114) Result	Flag status									
CF3(114) Result	>	>=	=	<=	<	<>				
$S_1 > S_2$	ON	ON	OFF	OFF	OFF	ON				
$S_1 = S_2$	OFF	ON	ON	ON	OFF	OFF				
S ₁ < S ₂	OFF	OFF	OFF	ON	ON	ON				


^{*}A status of "---" indicates that the Flag may be ON or OFF.

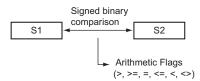

• The following table shows the status of the Arithmetic Flags after execution of CPSL(115).

CPSL(115) Result	Flag status									
CF3L(113) Nesult	>	>=	=	v =	<	<>				
$S_1 +1, S_1 > S_2 +1, S_2$	ON	ON	OFF	OFF	OFF	ON				
S_1+1 , $S_1 = S_2+1$, S_2	OFF	ON	ON	ON	OFF	OFF				
S ₁ +1, S ₁ < S ₂ +1, S ₂	OFF	OFF	OFF	ON	ON	ON				

^{*}A status of "---" indicates that the Flag may be ON or OFF.

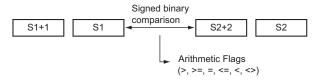

Function

CPS


CPS(114) compares the signed binary data in S_1 and S_2 and outputs the result to Arithmetic Flags (the Greater Than, Greater Than or Equal, Less Than or Equal, Less Than, and Not Equal Flags) in the Auxiliary Area.

CPSL


CPSL(115) compares the double signed binary data in $S_1 + 1$, S_1 and $S_2 + 1$, S_2 and outputs the result to Arithmetic Flags (the Greater Than, Greater Than or Equal, Less Than or Equal, Less Than, and Not Equal Flags) in the Auxiliary Area.

Precautions

When CPS(114)/CPSL(115) is executed, the result is reflected in the Arithmetic Flags. Control the
desired output or right-hand instruction with a branch from the same input condition that controls
CPS(114)/CPSL(115), as shown in the following diagram.

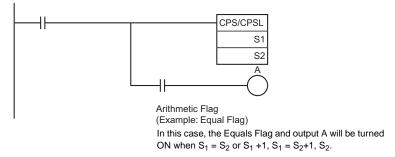

• Do not program another instruction between CPS(114)/CPSL(115) and the instruction controlled by the Arithmetic Flag because the other instruction might change the status of the Arithmetic Flag.

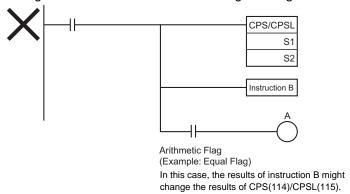


The immediate-refreshing variation (!CPS(114)/!CPSL(115)) can be used with words allocated to external inputs specified in S₁ and/or S₂. When !CPS(114)/!CPSL(115) is executed, input refreshing will be performed for the external input word specified in S₁ and/or S₂ and that refreshed value will be compared. (Immediate refreshing cannot be performed on inputs allocated to Group-2 High-density I/O Units or Units mounted to Slave Racks.)

Example Programming


When CIO 0.00 is ON in the following example, the eight-digit signed binary data in D2 and D1 is compared to the eight-digit signed binary data in D6 and D5 and the result is output to the Arithmetic Flags.

- If the content of D2 and D1 is greater than that of D6 and D5, the Greater Than Flag will be turned ON, causing CIO 20.00 to be turned ON.
- If the content of D2 and D1 is equal to that of D6 and D5, the Equals Flag will be turned ON, causing CIO 20.01 to be turned ON.
- If the content of D2 and D1 is less than that of D6 and D5, the Less Than Flag will be turned ON, causing CIO 20.02 to be turned ON.

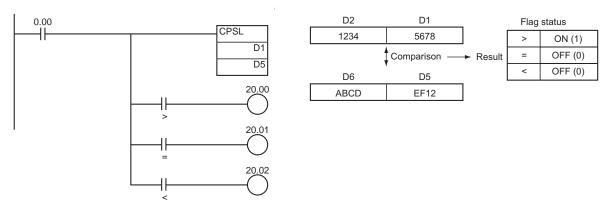

MCMP

Instruction	Mnemonic	Variations	Function code	Function
MULTIPLE COMPARE	MCMP	@MCMP	019	Compares 16 consecutive words with another 16 consecutive words and turns ON the corresponding bit in the result word where the contents of the words are not equal.

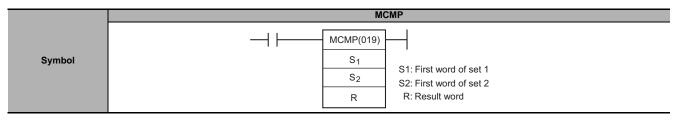

Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S1	First word of set 1	WORD	16
S2	First word of set 2	WORD	16
R	Result word	UINT	1


S₁: First word of set 1

S1	Comparison data 0						
S1+1	Comparison data 1						
	to						
S1+15	Comparison data 15						

S₂: First word of set 2

S2	Comparison data 0
S2+1	Comparison data 1
	to
S2+15	Comparison data 15

R: Result word

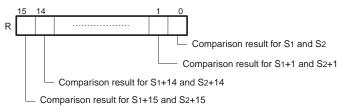

Note Specifies the beginning of the first 16-word range. S_1 and S_1 + 15 and S_2 and S_2 + 15 must be in the same data area.

Operand Specifications

Area		Word addresses Indirect DM/EM addresses Con- stants							DM/EM addresses Con-			DM/EM Registers Con-					Pulse bits	TR bits
	CIO	WR	HR	AR	Т	O	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			Dits	DILS
S1, S2 R	ОК	ОК	ОК	ОК	OK	OK	OK	OK	ОК	ОК		OK		ОК				


Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	 ON if the result word is 0000. (The two 16-word sets contain the same data.) OFF in all other cases.

Function

MCMP(019) compares the contents of the 16 words S_1 through S_1 +15 to the contents of the 16 words S_2 through S_2 +15, and turns ON the corresponding bit in word R when the contents **are not** equal.

The content of S_1 is compared to the content of S_2 , the content of S_1+1 to the content of S_2+1 , ..., and the content of S_1+15 to the content of S_2+15 . Bit n of R is turned OFF if the content of S_1+n is equal to the content of S_2+n ; bit n of R is turned ON if the contents are not equal.

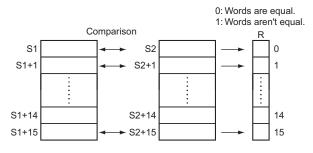


Hint

 If the contents of all 16 pairs of words are the same, the Equals Flag will turn ON after the instruction has been executed.


Example Programming

When CIO 0.00 is ON in the following example, MCMP(019) compares words D100 through D115 in order to words D200 through D215 and turns ON the corresponding bits in D300 when the words are not equal.

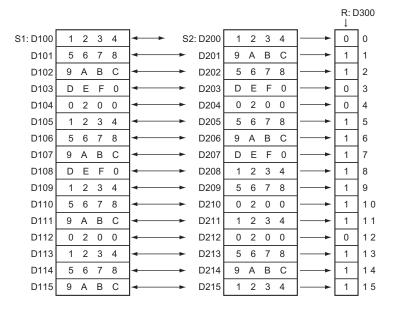

TCMP

Instruction	Mnemonic	Variations	Function code	Function
TABLE COMPARE	ТСМР	@TCMP	085	Compares the source data to the contents of 16 consecutive words and turns ON the corresponding bit in the result word when the contents of the words are equal.

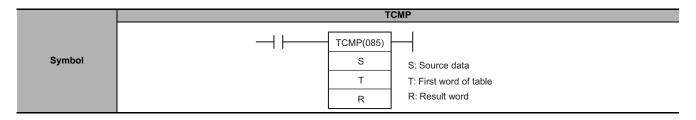


Applicable Program Areas

Area	Function block definitions	I Block program areas I Step program area		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S	Source data	WORD	1
Т	First word of table	WORD	16
R	Result word	UINT	1

T: First word of table

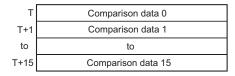

R: Result word

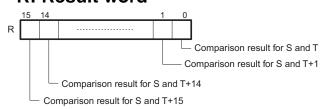

Operand Specifications


Δ	Area	Word addresses							Indi DM/ addre		Con- stants	Registers			тк	CF	Pulse bits	TR bits		
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			Dits	DILS	
	S										OK	OK								
	Т	ОК	OK	OK	OK				OK											
	R													OK						

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the result word is 0000. (The two 16-word sets contain the same data.) OFF in all other cases.

Function

TCMP(085) compares the source data (S) to each of the 16 words T through T+15 and turns ON the corresponding bit in word R when the data **are** equal. Bit n of R is turned ON if the content of T+n is equal to S and it is turned OFF if they are not equal.


S is compared to the content of T and bit 00 of R is turned ON if they are equal or OFF if they are not equal, S is compared to the content of T+1 and bit 01 of R is turned ON if they are equal or OFF if they are not equal, ..., and S is compared to the content of

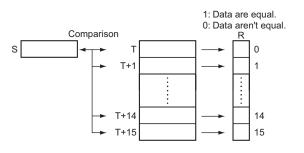

T+15 and bit 15 of R is turned ON if they are equal or OFF if they are not equal.


Example Programming

When CIO 0.00 is ON in the following example, TCMP(085) compares the content of D100 with the contents of words D200 through D215 and turns ON the corresponding bits in D300 when the contents are equal or OFF when the contents are not equal.

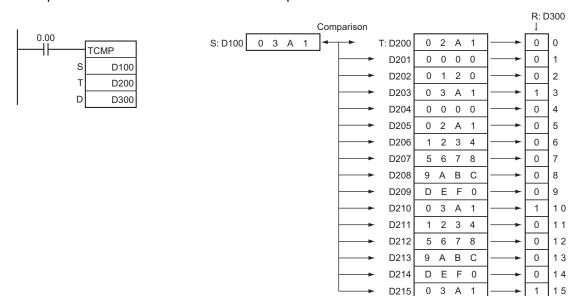

BCMP

Instruction	Mnemonic	Variations	Function code	Function
BLOCK COMPARE	ВСМР	@BCMP	068	Compares the source data to 16 ranges (defined by 16 lower limits and 16 upper limits) and turns ON the corresponding bit in the result word when the source data is within a range.

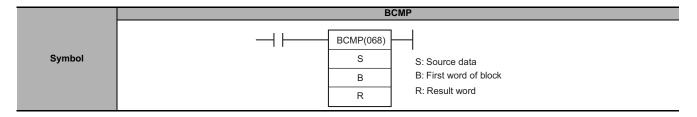

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S	Source data	WORD	1
В	First word of block	WORD	32
R	Result word	UINT	1

B: First word of block

В	Lower limit value 0
B+1	Upper limit value 0
B+2	Lower limit value 1
B+3	Upper limit value 1
\$	\$
B+30	Lower limit value 15
B+31	Upper limit value 15

R: Result word

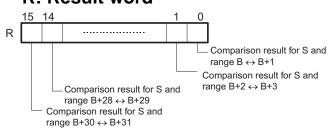


Operand Specifications

Area	addresses Con- stants						Registers		тк	CF	Pulse bits	TR bits						
	CIO	WR	HR	AR	Т	C	DM	EM	@EM	*EM		DR	IR	using IR				
S											OK	OK						
В	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D												OK	1					

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the result word is 0000. (S is not within any of the 16 ranges.) OFF in all other cases.

Function

BCMP(068) compares the source data (S) to the 16 ranges defined by pairs of lower and upper limit values in B through B+31. The first word in each pair (B+2n) provides the lower limit and the second word (B+2n+1) provides the upper limit of range n (n = 0 to 15). If S is within any of these ranges (inclusive of the upper and lower limits), the corresponding bit in R is turned ON. If S is out of any these ranges, the corresponding bit in R is turned OFF.

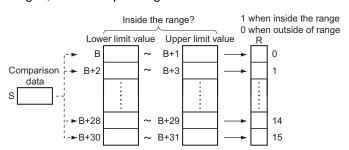


For example, bit 00 of R is turned ON if S is within the first range (B \leq S \leq B+1), bit 01 of R is turned ON if S is within the second range (B+2 \leq S \leq B+3), ..., and bit 15 of R is turned ON if S is within the fifteenth range (B+30 \leq S \leq B+31). All other bits in R are turned OFF.

Note An error will not occur if the lower limit is greater than the upper limit, but 0 (not within the range) will be output to the corresponding bit of R.


Example Programming

When CIO 0.00 is ON in the following example, BCMP(068) compares the content of D100 with the 16 ranges defined in D200 through D231 and turns ON the corresponding bits in D300 when S is within the range or OFF when S is not within the range.

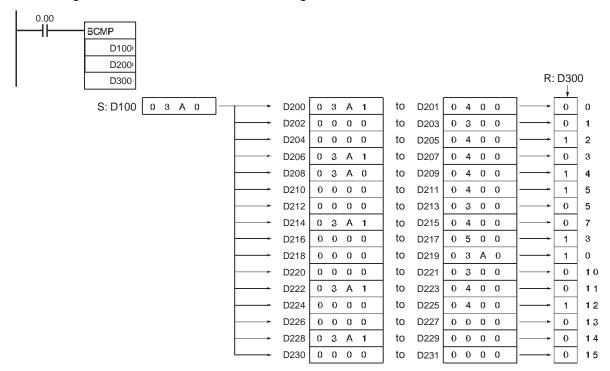

BCMP2

Instruction	Mnemonic	Variations	Function code	Function
EXPANDED BLOCK COMPARE	BCMP2	@BCMP2	502	Compares the source data to up to 256 ranges (defined by 256 lower limits and 256 upper limits) and turns ON the corresponding bit in the result word when the source data is within a range.

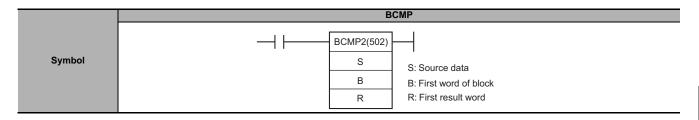


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
S	Source data	WORD	1
В	First word of block	WORD	Variable
R	Result word	WORD	Variable

B: First word of block

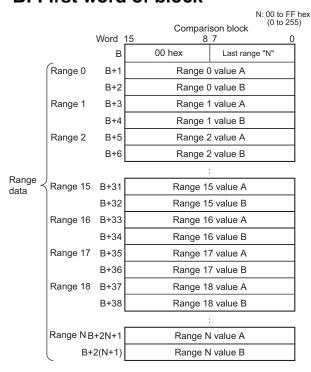

R: First result word

Each bit of each R word contains the result of a comparison between S and one of the ranges defined the comparison block. The maximum number of result words is 16, i.e., m equals 0 to 15.

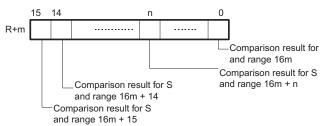

Operand Specifications

Area			٧	Nord ad	ldresse	:s			-	rect /EM esses	Con-				тк	CF	Pulse bits	TR bits
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			DILS	DILS
S											OK	OK						
В	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
R																		


Flags

Name	Label	Operation
Error Flag	P_ER	OFF

Function

BCMP2(502) compares the source data (S) to the ranges defined by pairs of lower and upper limit values in the comparison block. If S is within any of these ranges (inclusive of the upper and lower limits), the corresponding bits in the result words (R to R+15 max.) are turned ON. The rest of the bits in R will be turned OFF.

The number of ranges is determined by the value N set in the lower byte of B. N can be between 0 and 255. The upper byte of B must be 00 hex.

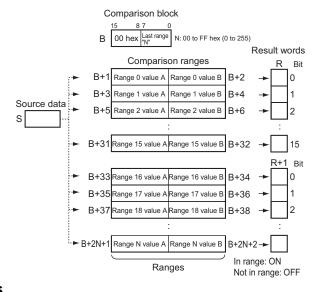


Number of Ranges

The number of ranges in the comparison block is set in the first word of the block. Up to 256 ranges can be set.

Setting Ranges

The values A and B for each range will determine how the comparison operates depending on which value is larger, as shown below.

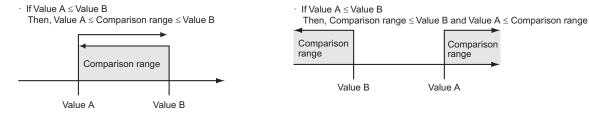

Comparison

range

Value A

• When B+1 ≤ B+2

If B+1 \le S \le B+2, then bit 0 of R will turn ON, If B+3 \le S \le B+4, then bit 1 of R will turn ON, If S < B+5 and B+6 < S, then bit 2 of R will turn OFF, and If S < B+7 and B+8 < S, then bit 3 of R will turn OFF.


• When B+1 > B+2

If $S \le B+2$ and $B+1 \le S$, then bit 0 of R will turn ON, If $S \le B+4$ and $B+3 \le S$, then bit 1 of R will turn ON, If B+6 < S < B+5, then bit 2 of R will turn OFF, and If B+8 < S < B+7, then bit 3 of R will turn OFF.

Results Storage Location


The results are output to corresponding bits in word R. If there are more than 16 comparison ranges, consecutive words following R will be used.

The maximum number of result words is 16, i.e., m equals 0 to 15.

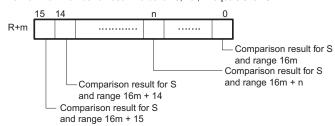


Example Programming

When CIO 0.00 is ON in the following example, BCMP2(502) compares the content of CIO 10 with the 24 ranges defined in D200 through D247 (N = 17 hex = 23 decimal, i.e., 24 ranges) and turns ON the corresponding bits in CIO 100 and CIO 101 when S is within the range and OFF when S is not within the range. For example, if the source data in CIO 10 is in the range defined by D201 and D202, then bit 00 of CIO 100 is turned ON and if it in not in the range, then bit 00 of CIO 100 is turned OFF. Likewise, the source data in CIO 10 is compared to the ranges defined by D203 and D204, D247 and D248, and the other words in the comparison block, and bit 1 in CIO 100, bit 7 in CIO 101, and the other bits in the result words are manipulated according to the results of comparison.

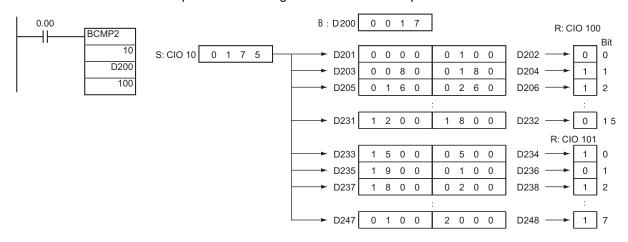

ZCP/ZCPL

Instruction	Mnemonic	Variations	Function code	Function
AREA RANGE COMPARE	ZCP		088	Compares a 16-bit unsigned binary value (CD) with the range defined by lower limit LL and upper limit UL. The results are output to the Arithmetic Flags.
DOUBLE AREA RANGE COMPARE	ZCPL		116	Compares a 32-bit unsigned binary value (CD+1, CD) with the range defined by lower limit (LL+1, LL) and upper limit (UL+1, UL). The results are output to the Arithmetic Flags.

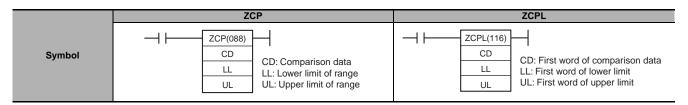

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	CMP	CMPL	CMP	CMPL	
CD	ZCP: Comparison data (one word of data) ZCPL: Comparison data (two words of data)	UINT	UDINT	1	2	
LL	ZCP: Low limit ZCPL: Low limit leftmost word number	UINT	UDINT	1	2	
UL	ZCP: High limit ZCPL: First word of upper limit	UINT	UDINT	1	2	

Operand Specifications

Area	Word addresses Area a				Indirect DM/EM addresses Constants		Registers		Flags		Pulse bits	TR bits						
	CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	Statits	DR	IR	Indirect using IR	тк	CF	Dits	Dits
ZCP: CD, LL, UL ZCPL: CD, LL, UL	ОК	ОК	ОК	ОК	ОК	OK	OK	OK	OK	OK	OK	OK 	OK	OK				

Name	Label	Operation					
Name	Label	ZCP	ZCPL				
Error Flag	P_ER	ON if LL > UL.	ON if LL+1, LL > UL+1, UL.				
Greater Than Flag	P_GT	ON if CD > UL. OFF in all other cases.	ON if CD > UL+1, UL. OFF in all other cases.				
Greater Than or Equal Flag	P_GE	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if CD ≤ LL OFF in all other cases.	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if CD+1, CD ≤ LL+1, LL OFF in all other cases.				
Equal Flag	P_EQ	 ON if LL ≤ CD ≤ UL. OFF in all other cases. 	 ON if LL+1, LL ≤ CD+1, CD ≤ UL+1, UL. OFF in all other cases. 				

Name	Label	Oper	ation
Name	Labei	ZCP	ZCPL
Not Equal Flag	P_NE	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if CD < LL. ON if CD > UL. OFF in all other cases.	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if CD+1, CD < LL+1, LL. ON if CD+1, CD > UL+1, UL. OFF in all other cases.
Less Than Flag	P_LT	ON if CD < LL. OFF in all other cases.	ON if CD+1, CD < LL+1, LL. If the cases.
Less Than or Equal Flag	P_LE	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if CD ≤ UL. OFF in all other cases.	CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, or CS1D CPU Unit: Held CJ2H (unit version 1.3 or later) or CJ2M CPU Unit: ON if LL+1, LL ≤ CD+1, CD. OFF in all other cases.
Negative Flag	P_N	Held	Held

Function

ZCP

ZCP(088) compares the 16-bit signed binary data in CD with the range defined by LL and UL and outputs the result to the Greater Than, Equals, and Less Than Flags in the Auxiliary Area. (The Less Than or Equal, Greater Than or Equal, and Not Equal Flags are left unchanged.)

When S > T2 as shown below, the > flag turns ON.

When $T1 \le S \le T2$, the = flag turns ON. When S < T1, the < flag turns ON.

ZCP(088)Result	Flag status						
ZCF(000)Result	>	=	<				
CD > UL	ON	OFF	OFF				
CD = UL	OFF	ON					
LL < CD < UL							
CD = LL							
CD < LL		OFF	ON				

ZCPL

ZCPL(116) compares the 32-bit signed binary data in CD+1, CD with the range defined by LL+1, LL and UL+1, UL and outputs the result to the Greater Than, Equals, and Less Than Flags in the Auxiliary Area. (The Less Than or Equal, Greater Than or Equal, and Not Equal Flags are left unchanged.)

When S+1,S > T2+1,T2 as shown below, the > flag turns ON.

When $T1+1,T1 \le S+1$, $S \le T2+1$, T2, the = flag turns ON.

When S+1, S < T1+1, T1, the < flag turns ON.


ZCPL(116)Result	Flag status						
ZOFE(110)Nesuit	>	=	٧				
CD+1, CD > UL+1, UL	ON	OFF	OFF				
CD+1, CD = UL+1, UL	OFF	ON					
LL+1, LL < CD+1, CD < UL+1, UL							
CD+1, CD = LL+1, LL							
CD+1, CD < LL+1, LL		OFF	ON				

Comparison Result and Flag Operation

Result	Greater Than Flag	Equals Flag	Less Than Flag	Greater Than or Equals Flag* (AND of Greater Than Flag and Equals Flag)	Less Than or Equals Flag* (AND of Less Than Flag and Equals Flag)	Not Equals Flag* (AND of Greater Than Flag and Less Than Flag)
CD > UL	ON	OFF	OFF	ON	OFF	ON
——————————————————————————————————————						
CD = UL	OFF	ON			ON	OFF
CD UL						
LL < CD < UL						
CD CD						
CD = LL						
CD UL						
CD < LL		OFF	ON	OFF		ON
CD UL						

^{*} These flags do not turn ON and OFF in the CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, and CS1D CPU Units. They turn ON and OFF only in CJ2H (unit version 1.3 or later) and CJ2M CPU Units.


Each flag shown below is ON when CD is on the bold lines or the filled circles.

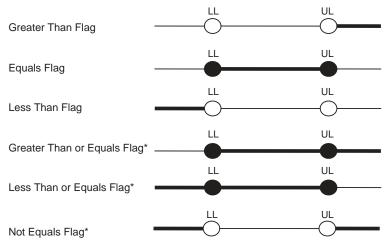


^{*} These flags do not turn ON and OFF in the CJ2H (unit version 1.0 to 1.2), CS1-H, CJ1-H, CJ1M, and CS1D CPU Units.

Precautions

When ZCP(088)/ZCPL(116) is executed, the result is reflected in the Arithmetic Flags. Control the
desired output or right-hand instruction with a branch from the same input condition that controls
ZCP(088)/ZCPL(116), as shown in the following diagram.

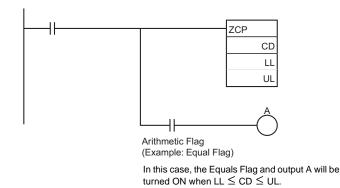


• Do not program another instruction between ZCP(088)/ZCPL(116) and the instruction controlled by the Arithmetic Flag because the other instruction might change the status of the Arithmetic Flag.

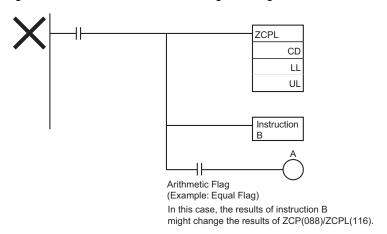


Example Programming

- When CIO 0.00 is ON in the following example, the 16-bit unsigned binary data in D0 is compared to the range 0005 to 001F hex (5 to 31 decimal) and the result is output to the Arithmetic Flags.
 - CIO 20.00 is turned ON if 0005 hex \leq content of D0 \leq 001F hex.
 - CIO 20.01 is turned ON if the content of D0 > 001F hex.
 - CIO 20.02 is turned ON if the content of D0 < 0005 hex.

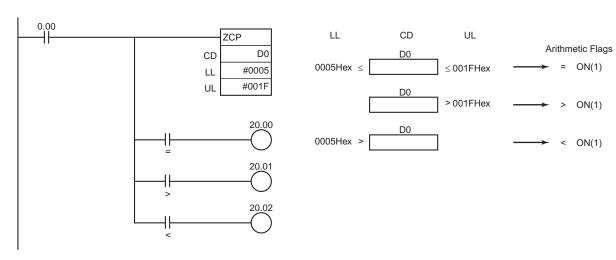

ZCPS/ZCPSL

Instruction	Mnemonic	Variations	Function code	Function
SIGNED AREA RANGE COM- PARE	ZCPS		117	Compares the 16-bit signed binary value in CD (word contents or constant) to the range defined by LL and UL and outputs the results to the Arithmetic Flags.
DOUBLE SIGNED AREA RANGE COMPARE	ZCPSL		118	Compares the 32-bit signed binary value in CD and CD+1 (word contents or constant) to the range defined by LL+1, LL and UL+1, UL and outputs the results to the Arithmetic Flags.

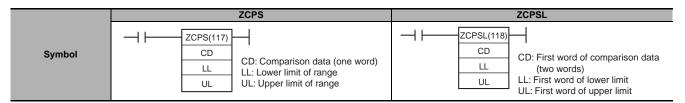

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	ОК	ОК	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	ZCPS	ZCPSL	ZCPS	ZCPSL	
CD	ZCPS: Comparison data (one word of data) ZCPSL: Comparison data (two words of data)	INT	DINT	1	2	
LL	ZCPS: Lower limit ZCPSL: First word of lower limit	INT	DINT	1	2	
UL	ZCPS: Upper limit ZCPSL: First word of upper limit	INT	DINT	1	2	

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse bits	TR bits	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	DITS	DITS
ZCPS: CD, LL, UL	ОК	ОК	ОК	ОК	ОК	OK	OK	OK	OK	OK	ОК	OK		ОК				
ZCPSL: CD, LL, UL	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK	OK				

Name	Label	Oper	Operation						
Name	Labei	ZCP	ZCPL						
Error Flag	P_ER	ON if LL > UL.	ON if LL+1, LL > UL+1, UL.						
Greater Than Flag	P_GT	ON if CD > UL. OFF in all other cases.	ON if CD+1, CD > UL+1, UL. OFF in all other cases.						
Greater Than or Equal Flag	P_GE	ON if LL ≤ CD. OFF in all other cases.	 ON if LL+1, LL ≤ CD+1, CD. OFF in all other cases. 						
Equal Flag	P_EQ	 ON if LL ≤ CD ≤ UL. OFF in all other cases. 	ON if LL+1, LL ≤ CD+1, CD ≤ UL+1, UL. OFF in all other cases.						
Not Equal Flag	P_NE	ON if CD < LL. ON if CD > UL. OFF in all other cases.	ON if CD+1, CD < LL+1, LL. ON if CD+1, CD > UL+1, UL. OFF in all other cases.						

Name	Label	Operation						
Name	Labei	ZCP	ZCPL					
Less Than Flag	P_LT	ON if CD < LL. OFF in all other cases.	ON if CD+1, CD < LL+1, LL. OFF in all other cases.					
Less Than or Equal Flag	P_LE	ON if CD ≤ UL. OFF in all other cases.	ON if CD+1, CD ≤ UL+1, UL. OFF in all other cases.					
Negative Flag	P_N	Held	Held					

Function

ZCPS

ZCPS(117) compares the 16-bit signed binary data in CD with the range defined by LL and UL and outputs the result to the Arithmetic Flags.


ZCPSL

ZCPSL(118) compares the 32-bit signed binary data in CD+1, CD with the range defined by LL+1, LL and UL+1, UL and outputs the result to the Arithmetic Flags.

Comparison Result and Flag Operation


Result	Greater Than Flag	Equals Flag	Less Than Flag	Greater Than or Equals Flag* (AND of Greater Than Flag and Equals Flag)	Less Than or Equals Flag* (AND of Less Than Flag and Equals Flag)	Not Equals Flag* (AND of Greater Than Flag and Less Than Flag)
CD > UL	ON	OFF	OFF	ON	OFF	ON
LL UL CD						
CD = UL	OFF	ON			ON	OFF
CD LL UL						
LL < CD < UL						
CD UL						
CD = LL						
CD UL						
CD < LL		OFF	ON	OFF		ON
CD						

Each flag shown below is ON when CD is on the bold lines or the filled circles.

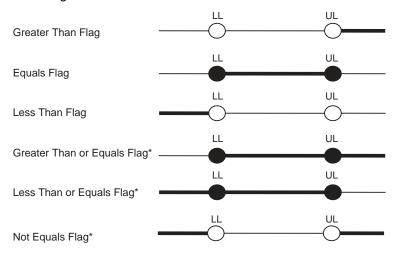


Precautions

When ZCPS(117)/ZCPSL(118) is executed, the result is reflected in the Arithmetic Flags. Control the
desired output or right-hand instruction with a branch from the same input condition that controls
ZCPS(117)/ZCPSL(118), as shown in the following diagram.

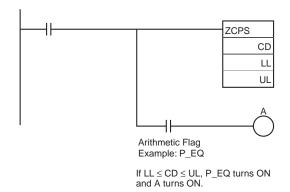


• Do not program another instruction between ZCPS(117)/ZCPSL(118) and the instruction controlled by the Arithmetic Flag because the other instruction might change the status of the Arithmetic Flag.

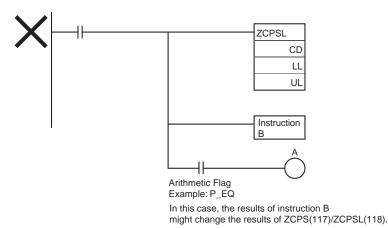

Example Programming


- When CIO 0.00 is ON in the following example, the 16-bit signed binary data in D0 is compared to the range FFF6 to 0064 hex (-10 to 100 decimal) and the result is output to the Arithmetic Flags.
- CIO 20.00 is turned ON if −10 decimal ≤ content of D0 ≤ 100 decimal. CIO 20.01 is turned ON if the content of D0 > 100 decimal. CIO 20.02 is turned ON if the content of D0 < −10 decimal.

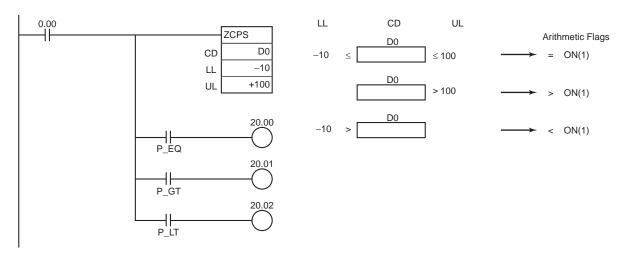

Data Movement Instructions

MOV/MOVL

Instruction	Mnemonic	Variations	Function code	Function
MOVE	MOV	@MOV, !MOV, !@MOV	021	Transfers a word of data to the specified word.
DOUBLE MOVE	MOVL	@MOVL	498	Transfers two words of data to the specified words.

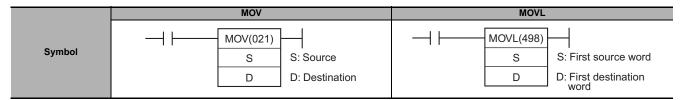

Applicable Program Areas

	Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
ι	Jsage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	MOV	MOVL	MOV	MOVL	
S	MOV: Source MOVL: First source word	WORD	DWORD	1	2	
D	MOV: Destination MOVL: First destination word	WORD	DWORD	1	2	

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
MOV S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK 	ОК		ОК				
MOVL S	ОК	OK	OK	OK	OK	OK	OK	OK	ОК	OK	OK 		OK	ОК				

Name	Label	Operation
Error Flag	ER	OFF
Equal Flag	=	ON if the data being transferred (D) is 0. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the data being transferred (D) is 1. OFF in all other cases.


Function

MOV

Transfers S to D. If S is a constant, the value can be used for a data setting.

MOVL

MOVL(498) transfers S+1 and S to D+1 and D. If S+1 and S are constants, the value can be used for a data setting.

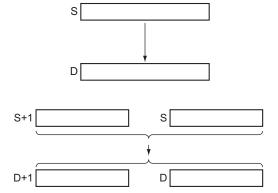


Precautions

MOV(021) has an immediate refreshing variation (!MOV(021)). An external input bits can be specified for S and external output bits can be specified for D. Input bits used for S will refreshed just before, and output bits used for D will be refreshed just after execution unless the bits are allocated to a Group-2 High-density I/O Unit, High-density Special I/O Unit, or a Unit mounted in a SYSMAC BUS Remote I/O Slave Rack.


When external input is specified for S, the value of S will be in-refreshed when the instruction is executed and transferred to D. When external output is specified for D, the value of S will be transferred to D and immediately out-refreshed when the instruction is executed. It is also possible to in-refresh S and out-refresh D at the same time.

Example Programming

When CIO 0.00 is ON in the following example, the content of CIO 100 is copied to D100.

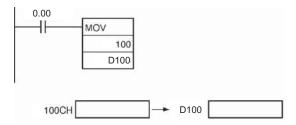


When CIO 0.00 is ON in the following example, the content of D101 and D100 are copied to D201 and D200.

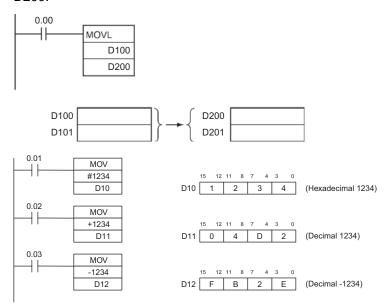

MVN/MVNL

Instruction	Mnemonic	Variations	Function code	Function			
MOVE NOT	MVN	@MVN	022	Transfers the complement of a word of data to the specified word.			
DOUBLE MOVE NOT	MVNL	@MVNL	499	Transfers the complement of two words of data to the specified words.			

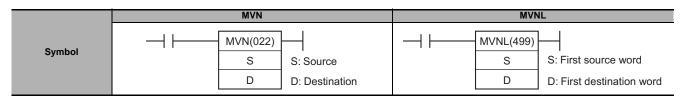

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size			
Operand	Description	MVN	MVNL	MVN	MVNL		
S	MVN: Source MVNL: First source word	WORD	DWORD	1	2		
D	MVN: Destination MVNL: First destination word	WORD	DWORD	1	2		

Operand Specifications

Area	Word addresses								ndirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
MVN S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK 	ОК		ОК				
MVNL S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK 			ОК				


Name	Label	Operation					
Error Flag	ER	OFF					
Equal Flag =		ON if the data being transferred (D) is 0.OFF in all other cases.					
<u> </u>		ON if the leftmost bit of the data being transferred (D) is 1. OFF in all other cases.					

MVN

MVN(022) inverts the bits in S and transfers the result to D. The content of S is left unchanged.


MVNL

MVNL(499) inverts the bits in S+1 and S and transfers the result to D+1 and D. The contents of S+1 and S are left unchanged.

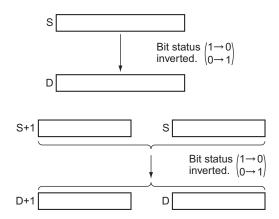


Example Programming

When CIO 0.00 is ON in the following example, the status of the bits in CIO 100 is inverted and the result is copied to D100.

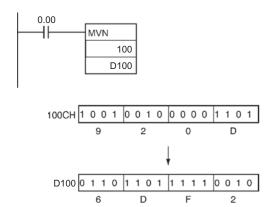


When CIO 0.00 is ON in the following example, the status of the bits in D101 and D100 are inverted and the result is copied to D201 and D200. (The original contents of D101 and D100 are left unchanged.)

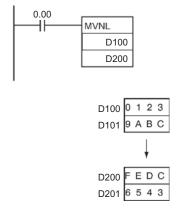

MOVB

Instruction	Mnemonic	Variations	Function code	Function		
MOVE BIT	MOVB	@MOVB	082	Transfers the specified bit.		

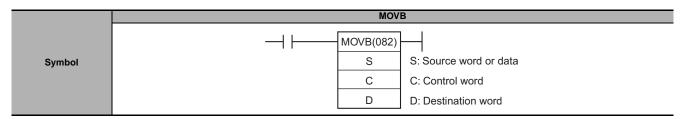


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word or data	WORD	1
С	Control word	UINT	1
D	Destination word	WORD	1

C: Control Word

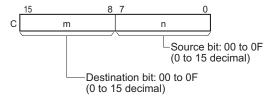


Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											ОК							
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D	1																	

Name	Label	Operation
Error Flag	ER	 ON if the rightmost and leftmost two digits of C are not within the specified range of 00 to 0F. OFF in all other cases.

MOVB(082) copies the specified bit (n) from S to the specified bit (m) in D.

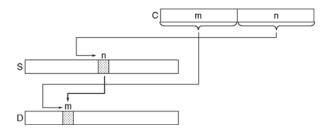

Hint


The same word can be specified for both S and D to copy a bit within a word.

Precautions


The other bits in the destination word are left unchanged.

Example Programming

When CIO 0.00 is ON in the following example, the 5th bit of the source word (CIO 200) is copied to the 12th bit of the destination word (CIO 300) in accordance with the control word's value of 0C05.

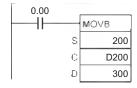




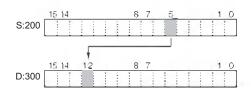

MOVD

Instruction	uction Mnemonic		Function code	Function		
MOVE DIGIT	MOVD	@MOVD	083	Transfers the specified digit or digits. (Each digit is made up of 4 bits.)		

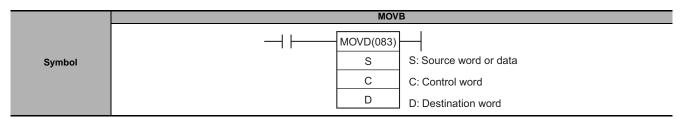

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word or data	WORD	1
С	Control word	UINT	1
D	Destination word	UINT	1

S: Source Word

15 12 11 8 7 4 3 0 S Digit 3 Digit 2 Digit 1 Digit 0


The source digits are read from right to left, wrapping back to the rightmost digit (digit 0) if necessary.

D: Destination Word

	15	12	11	8	7	4	3	0
D	Digit 3		Digit 2		Digit 1		Digit 0	

The destination digits are written from right to left, wrapping back to the rightmost digit (digit 0) if necessary.

C: Control Word

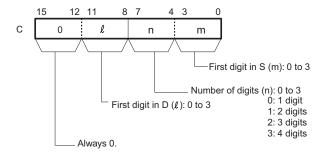

Operand Specifications


A.z.c.		Word addresses								Indirect DM/EM addresses		Registers			Flags			TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											ОК							
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		

Flags

Name	Label	Operation
Error Flag	ER	ON if one of the first three digits of C is not within the specified range of 0 to 3. OFF in all other cases.

Function

MOVB(082) copies the specified bit (n) from S to the specified bit (m) in D. The other bits in the destination word are left unchanged.

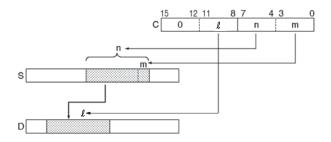

Hint


The same word can be specified for both S and D to copy a bit within a word.

Precautions

If the number of digits being read or written exceeds the leftmost digit of S or D, MOVD(083) will wrap to the rightmost digit of the same word.

Example Programming

When CIO 0.00 is ON in the following example, four digits of data are copied from CIO 200 to CIO 300. The transfer begins with the digit 1 of CIO 200 and digit 0 of CIO 300, in accordance with the control word's value of 31.

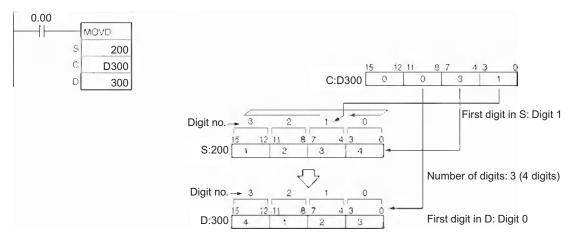


Note After reading the leftmost digit of S (digit 3), MOVD(083) wraps to the rightmost digit (digit 0).

Example of transferring multiple digits

The following diagram shows examples of data transfers for various values of C.

XFRB

Instruction	Mnemonic Variations		Function code	Function	
MULTIPLE BIT TRANSFER	XFRB	@XFRB	062	Transfers the specified number of consecutive bits.	

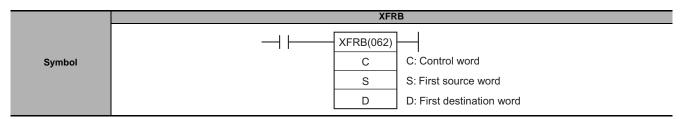


Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands


Operand	Description	Data type	Size
С	Control word	UINT	1
S	First source word	WORD	Variable
D	First destination word	WORD	Variable

C: Control Word

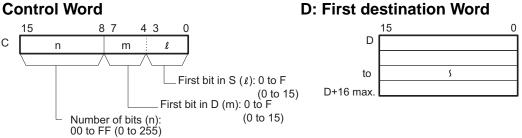

Note The source words and the destination words must be in the same data area respectively.

S: First Source Word

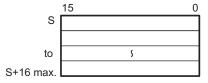


Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-		Registers		Flags		Pulse T	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bi	bits
С											OK	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Name	Label	Operation
Error Flag	ER	OFF

XFRB(062) transfers up to 255 consecutive bits from the source words (beginning with bit I of S) to the destination words (beginning with bit m of D).

The beginning bits and number of bits are specified in C, as shown in the following diagram.

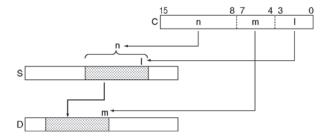

Hint


- Up to 255 bits of data can be transferred per execution of XFRB(062).
- It is possible for the source words and destination words to overlap. By transferring data overlapping several words, the data can be packed more efficiently in the data area. (This is particularly useful when handling position data for position control.)
- Since the source words and destination words can overlap, XFRB(062) can be combined with ANDW(034) to shift m bits by n spaces.

Precautions

- · Be sure that the source words and destination words do not exceed the end of the data area.
- When the number of transfer bits (n of C) is 0, transfer does not take place.
- Bits in the destination words that are not overwritten by the source bits are left unchanged.


Example Programming

When CIO 0.00 is ON in the following example, the 20 bits beginning with CIO 200.06 are copied to the 20 bits beginning with CIO 300.

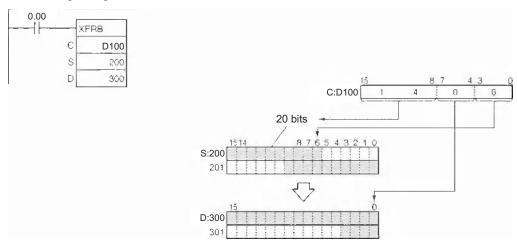

XFER

Instruction	Mnemonic	Variations	Function code	Function
BLOCK TRANSFER	XFER	@XFER	070	Transfers the specified number of consecutive words.

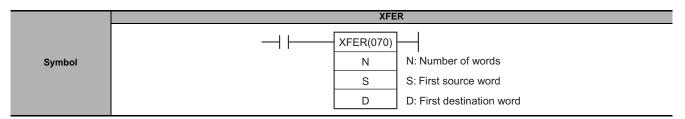

Applicable Program Areas


Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
N	Number of words	UINT	1
S	First source word	WORD	Variable
D	First destination word	WORD	Variable

N: Number of Words

Specifies the number of words to be transferred. The possible range for N is 0000 to FFFF (0 to 65,535 decimal).

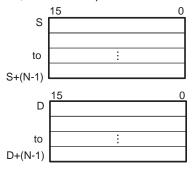


Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											OK	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		ł


Name	Label	Operation
Error Flag	ER	OFF

XFER(070) copies N words beginning with S (S to S+(N-1)) to the N words beginning with D (D to D+(N-1)).

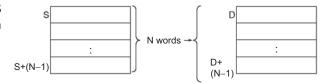


Hint

- It is possible for the source words and destination words to overlap, so XFER(070) can perform word-shift operations.
- The specified source and destination data areas can overlap (word shift).

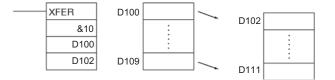


Precautions

- Be sure that the source words (S to S+N-1) and destination words (D to D+N-1) do not exceed the end of the data area.
- Some time will be required to complete XFER(070) when a large number of words is being transferred. Even if an interrupt occurs, execution of this instruction will not be interrupted and execution of the interrupt task will be started after execution of XFER(070) has been completed. If power is interrupted during execution of XFER(070), execution may not be completed, i.e., all of the specified data may not be transferred. One XFER(070) instruction can be replaced with two XFER(070) instructions to help avoid this problem.

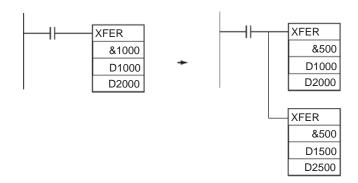


Example Programming

When CIO 0.00 is ON in the following example, the 10 words D100 through D109 are copied to D200 through D209.

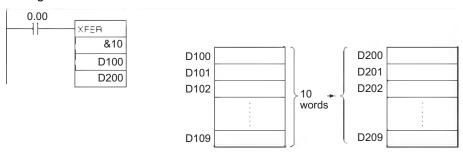

BSET

Instruction	Mnemonic	Variations	Function code	Function		
BLOCK SET	BSET	@BSET	071	Copies the same word to a range of consecutive words.		

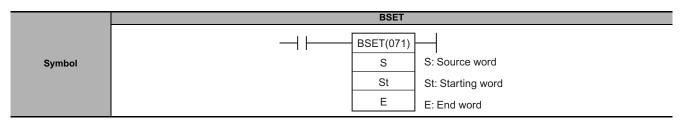

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands


Operand	Description	Data type	Size
S	Source word	WORD	1
St	Starting word	WORD	Variable
E	End word	WORD	Variable

St: Starting Word

Specifies the first word in the destination range.

E: End Word

Specifies the last word in the destination range.

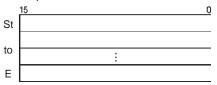

Note St and E must be in the same data area.

Operand Specifications


Area		Word addresses							Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S											OK	OK						
St	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
E	1																	

Flags

Name	Label	Operation
Error Flag	ER	ON if St is greater than E. OFF in all other cases.


Note Be sure that the starting word (St) and end word (E) are in the same data area and that $St \le E$.

BSET(071) copies the same source word (S) to all of the destination words in the range St to E.

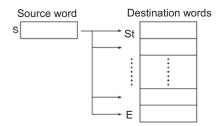


Precautions

• Some time will be required to complete BSET(071) when a large number of words is being set. Even if an interrupt occurs, execution of this instruction will not be interrupted and execution of the interrupt task will be started after execution of BSET(071) has been completed. If power is interrupted during execution of BSET(071), execution may not be completed, i.e., all of the specified words may not be set. One BSET(071) instruction can be replaced with two BSET(071) instructions to help avoid this problem.

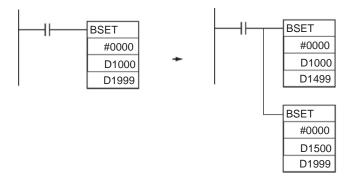


Example Programming

When CIO 0.00 is ON in the following example, the source data in D100 is copied to D200 through D209.

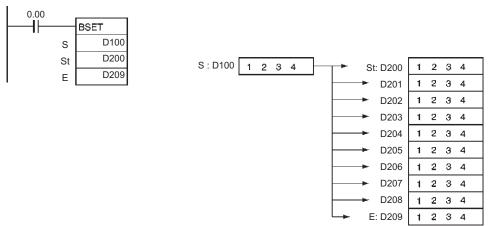

XCHG/XCGL

Instruction	Mnemonic	Variations	Function code	Function
DATA EXCHANGE	XCHG	@XCHG	073	Exchanges the contents of the two specified words.
DOUBLE DATA EXCHANGE	XCGL	@XCGL	562	Exchanges the contents of a pair of consecutive words with another pair of consecutive words.

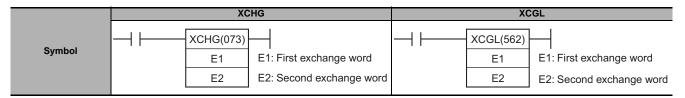

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Si	ze
Operand	Description	XCHG	XCGL	XCHG	XCGL
E1	First exchange word	WORD	DWORD	1	2
E2	Second exchange word	WORD	DWORD	1	2

Operand Specifications

	rea		Word addresses								DM/EM esses	Con-	Registers			Flags		Pulse	TR
A	iea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
XCHG	E1,E2	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
XCGL	E1,E2	5	5	5	OK	OK	OK	OK	OK	OK	OK			OK	OK				

Flags

Name	Label	Operation
Error Flag	ER	Unchanged (See note.)
Equals Flag	=	Unchanged (See note.)
Negative Flag	N	Unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.

Function

XCHG

XCGL

XCHG(073) exchanges the contents of E1 and E2.


XCHG(073) exchanges the contents of E1+1 and E1 with the contents of E2+1 and E2.






Hint

To exchange 3 or more words, use XFER(070) to transfer the words to a third set of words (a buffer) as shown in this diagram.

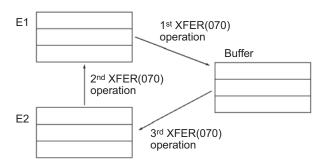


Example Programming

When CIO 0.00 is ON in this example, the content of D100 is exchanged with the content of D200.

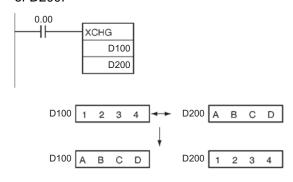


When CIO 0.00 is ON in this example, the contents of D100 and D101 are exchanged with the contents of D200 and D201.

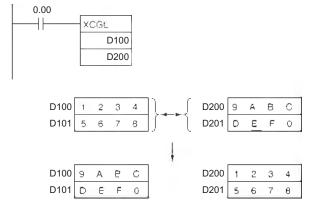

DIST

Instruction	Mnemonic	Variations	Function code	Function
SINGLE WORD DISTRIBUTE	DIST	@DIST	080	Transfers the source word to a destination word calculated by adding an offset value to the base address.

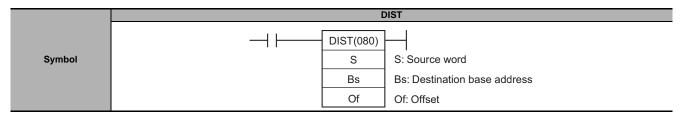

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
Bs	Destination base address	WORD	1
Of	Offset	UINT	1

Bs: Destination Base Address



Of: Offset

The offset can be any value from 0000 to FFFF (0 to 65,535 decimal).


Note Bs and Bs+Of must be in the same data area.

Operand Specifications

Area			v	ord ad	ldresse	s			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK	OK						
Bs	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
Of											OK	OK						

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the source data is 0000. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the source data is 1. OFF in all other cases

DIST(080) copies S to the destination word calculated by adding Of to Bs.

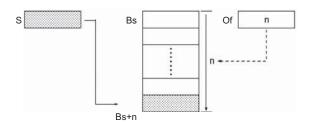

Hint


The same DIST(080) instruction can be used to distribute the source word to various words in the data area by changing the value of Of.


Precautions

Be sure that the offset does not exceed the end of the data area, i.e., Bs and Bs+Of are in the same data area.

Example Programming


When CIO 0.00 is ON in this example, the contents of D100 will be copied to D210 (D200 + 10) if the contents of D300 is 10 (0A hexadecimal). The contents of D100 can be copied to other words by changing the offset in D300.

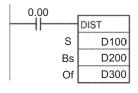

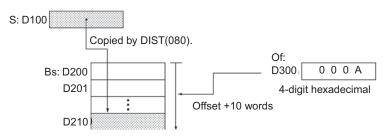

COLL

Instruction	Mnemonic	Variations	Function code	Function
DATA COLLECT	COLL	@COLL	081	Transfers the source word (calculated by adding an offset value to the base address) to the destination word.

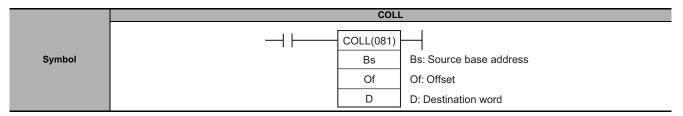


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
Bs	Source base address	WORD	1
Of	Offset	WORD	1
D	Destination word	WORD	1

Bs: Source Base Address

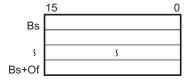

Of: Offset

The offset can be any value from 0000 to FFFF (0 to 65,535 decimal).


Note Bs and Bs+Of must be in the same data area.

Operand Specifications

Area			V	Vord ad	ldresse	s			Indirect DM/EM addresses Cor		Con-	Register		ters Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
Bs																		
Of	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
D												OK						ĺ

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the source data is 0000. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the source data is 1. OFF in all other cases

COLL(081) copies the source word (calculated by adding Of to Bs) to the destination word.

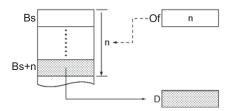

Hint


The same COLL(081) instruction can be used to collect data from various source words in the data area by changing the value of Of.


Precautions

Be sure that the offset does not exceed the end of the data area, i.e., Bs and Bs+Of are in the same data area.

Example Programming


When CIO 0.00 is ON in the following example, the contents of D110 (D100 + 10) will be copied to D300 if the content of D200 is 10 (0A hexadecimal). The contents of other words can be copied to D300 by changing the offset in D200.

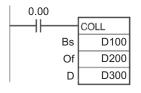

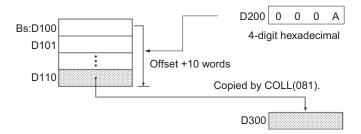

MOVR/MOVRW

Instruction	Mnemonic	Variations	Function code	Function			
MOVE TO REGISTER	MOVR	@MOVR	560	Sets the PLC memory address of the specified word, bit, or timer/counter Completion Flag in the specified Index Register.			
MOVE TIMER/COUNTER PV TO REGISTER	MOVRW	@MOVRW	561	Sets the PLC memory address of the specified timer or counter's PV in the specified Index Register.			

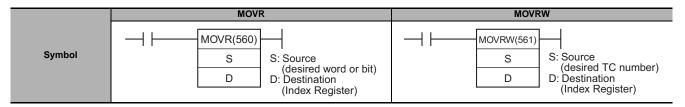

Applicable Program Areas

MOVR

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

MOVRW

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	Not allowed	OK	OK	OK	OK	Not allowed	

Operands

Operand	Description	Data	type	Size
Operand	Description	MOVR	MOVRW	Size
S	MOVR: Source (desired word or bit) MOVRW: Source (desired TC number)	BOOL	UINT	1
D	Destination	WORD	WORD	2

Operand Specifications

Area		Word addresses									DM/EM esses	Con-	Registers		Flags		Pulse	TR	
Alea		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM		DR	IR	Indirect using IR	TK	CF	bits	bits
MOVR	S	OK	OK	OK	OK	OK	OK	OK	OK							OK			
WOVK	D													OK					
MOVRW	S					OK	OK												
WOVKW	D													OK					


Flags

Name	Label	Operation
Error Flag	ER	Unchanged (See note.)
Equals Flag	=	Unchanged (See note.)
Negative Flag	N	Unchanged (See note.)

Note In CS1D CPU Units for Duplex Systems, CS1 CPU Units, and CJ1 CPU Units, these are turned OFF.


MOVR

MOVR(560) finds the PLC memory address (absolute address) of S and writes that address in D (an Index Register).

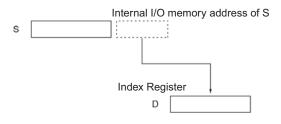

MOVRW

MOVRW(561) finds the PLC memory address for the PV of the timer or counter specified in S and writes that address in D (an Index Register).

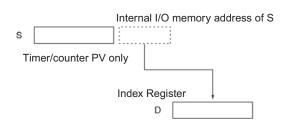

Precautions

MOVR


- The internal I/O memory address (excluding the timer/counter PV) is set in the index register (IR0 to 15) using this instruction.
- If S is specified using a regular I/O memory address (address based on area type), this will be automatically converted to an internal I/O memory address and stored in D.
- If a timer or counter is specified in S, MOVR(560) will write the PLC memory address of the timer/counter Completion Flag in D.
- MOVR(560) cannot set the PLC memory addresses of timer/counter PVs. Use MOVRW(561) to set the PLC memory addresses of timer/counter PVs.
- The contents of an index register in an interrupt task is not predictable until it is set. Be sure to set a register using MOVR(560) in an interrupt task before using the register.
- Any changes to the contents of an IR or DR made in an interrupt task will not affect the contents of the register in a cyclic task.

MOVRW


- MOVRW(561) will set the PLC memory address of the timer or counter's PV in D.
- Use MOVRW(561) to write the PLC memory address of the timer/counter PV in D.
- MOVRW(561) cannot set the PLC memory addresses of data area words, bits, or timer/counter Completion Flags. Use MOVR(560) to set these PLC memory addresses.

Example Programming

When CIO 0.00 is ON in the following example, MOVR(560) writes the PLC memory address of CIO 20 to IR0.

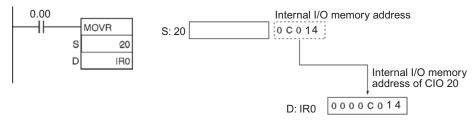

When CIO 0.00 is ON in the following example, MOVRW(561) writes the PLC memory address for the PV of timer T0 to IR1.

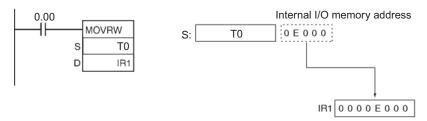

Refer to the CS/CJ Series Operation Manual or the CJ2 CPU Unit Software Operation Manual (W473) for specific PLC memory addresses.

Data Shift Instruction

SFT

Instruction	Mnemonic	Variations	Function code	Function
SHIFT REGISTER	SFT		010	Operates a shift register.

	SFT
Symbol	Data input SFT(010) Shift input St St: Starting word Reset input E E: End word

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	Not allowed	ОК	ОК	OK	OK	

^{*} OK as long as words in the CIO Area, Work Area, or Holding Area are specified in the function block instance allocation areas.

Operands

Operand	Description	Data type	Size
St	Starting word	UINT	Variable
Е	End word	UINT	Variable

Operand Specifications


Aroa				W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con-	n- Registers				ıgs	Pulse	TR
Area	CI	Ю	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
St	_ 0	NZ.	ОК	ОК											ОК				
E		'IN	OK	OK											OK				

Flags

Name	Label	Operation
Error Flag	ER	ON if the indirect IR address for St and E is not in the CIO, WR or HR data areas. OFF in all other cases.

Function

• When the execution condition on the shift input changes from OFF to ON, all the data from St to E is shifted to the left by one bit (from the rightmost bit to the leftmost bit), and the ON/OFF status of the data input is placed in the rightmost bit.

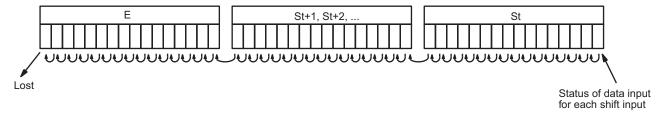


Precautions

- Do not use more than one SFT(010) instructions with overlapping shift words. The results will not be dependable.
- St and E must be in the same data area.
- The bit data shifted out of the shift register is discarded.
- When the reset input turns ON, all bits in the shift register from the rightmost designated word (St) to the leftmost designated word (E) will be reset (i.e., set to 0). The reset input takes priority over other inputs.
- St must be less than or equal to E, but even when St is set to greater than E an error will not occur and one word of data in St will be shifted.

Example Programming


Shift Register Exceeding 16 Bits

The following example shows a 48-bit shift register using words CIO 128 to CIO 130. A 1-s clock pulse is used so that the execution condition produced by CIO 0.05 is shifted into a 3-word register between CIO 128.00 and CIO 130.15 every second.

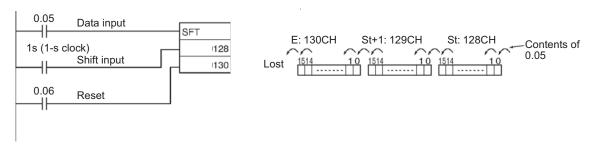

SFTR

Instruction	Mnemonic	Variations	Function code	Function	
REVERSIBLE SHIFT REGIS- TER	SFTR	@SFTR	084	Creates a shift register that shifts data to either the right or the left.	

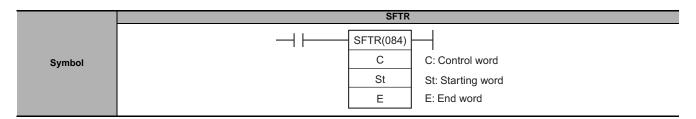


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
С	Control word	UINT	1
St	Starting word	UINT	Variable
E	End word	UINT	Variable

C: Control Word

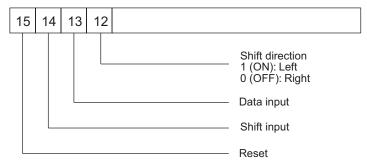


Note St and E must be in the same data area.

Operand Specifications

Area	Word addresses								Indirect addre				Registers			ıgs		TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bi	bits
С												OK						
St	OK	OK	OK	OK	OK	ОК	OK	OK	OK	OK				OK				
E																		

Name	Label	Operation
Error Flag	ER	ON when St is greater than E. OFF in all other cases.
Carry Flag	CY	 ON when 1 is shifted into it. OFF when 0 is shifted into it. OFF when reset is set to 1.

When the execution condition of the shift input bit (bit 14 of C) changes to ON, all the data from St to E is moved in the designated shift direction (designated by bit 12 of C) by 1 bit, and the ON/OFF status of the data input is placed in the rightmost or leftmost bit. The bit data shifted out of the shift register is placed in the Carry Flag (CY)

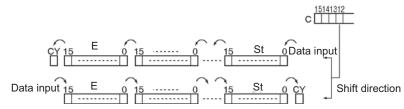


• The above shift operations are applicable when the reset bit (bit 15 of C) is set to OFF.

• When reset (bit 15 of C) turns ON all bits in the shift register, from St to E will be reset (i.e., set to 0).

Example Programming

· Shifting Data

If shift input CIO 300.14 goes ON when CIO 0.00 is ON, and the reset bit CIO 300.15 is OFF, words CIO 100 through CIO 102 will shift one bit in the direction designated by CIO 300.12 (e.g., 1: Right) and the contents of input bit CIO 300.13 will be shifted into the rightmost bit, CIO 100.00. The contents of CIO 102.15 will be shifted to the Carry Flag (CY).

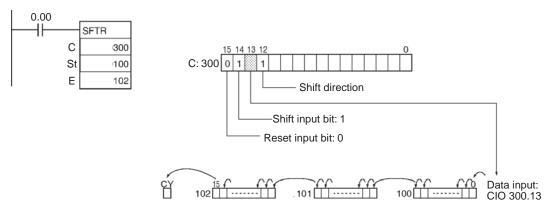

· Resetting Data

If CIO 300.14 is ON when CIO 0.00 is ON, and the reset bit, CIO 300.15, is ON, words CIO 100 through CIO 102 and the Carry Flag will be reset to OFF.


Controlling Data

Resetting Data



All bits from St to E and the Carry Flag are set to 0 and no other data can be received when the reset input bit (bit 15 of C) is ON.

Shifting Data Left (from Rightmost to Leftmost Bit)

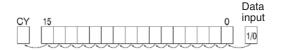

When the shift input bit (bit 14 of C) is ON, the contents of the input bit (bit 13 of C) is shifted to bit 00 of the starting word, and each bit thereafter is shifted one bit to the left. The status of bit 15 of the end word is shifted to the Carry Flag.


Shifting Data Right (from Leftmost to Rightmost Bit



When the shift input bit (bit 14 of C) is ON, the contents of the input bit (bit 13 of C) (I/O) is shifted to bit 15 on the end word, and each bit thereafter is shifted one bit to the right. The status of bit 00 of the starting word is shifted to the Carry Flag.

ASFT

Instruction	Mnemonic	Variations	Function code	Function
ASYNCHRONOUS SHIFT REGISTER	ASFT	@ASFT	017	Shifts all non-zero word data within the specified word range either towards St or toward E, replacing 0000Hex word data.

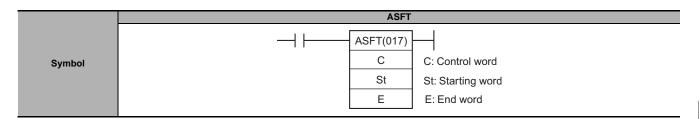


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	Control word	UINT	1
St	Starting word	UINT	Variable
E	End word	UINT	Variable

C: Control Word

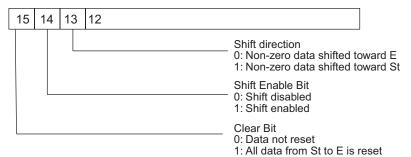

Note St and E must be in the same data area.


Operand Specifications

Area			W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
С												OK						
St	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
E																		

Name	Label	Operation
Error Flag	ER	 ON when St is greater than E. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.

When the Shift Enable Bit (bit 14 of C) is ON, all of the words with non-zero content within the range of words between St and E will be shifted one word in the direction determined by the Shift Direction Bit (bit 13 of C) whenever the word in the shift direction contains all zeros. If ASFT(017) is repeated sufficient times, all all-zero words will be replaced by non-zero words. This will result in all the data between St and E being divided into zero and non-zero data.


Note When the Clear Flag (bit 15 of C) goes ON, all bits in the shift register, from St to E, will be reset (i.e., set to 0). The Clear Flag has priority over the Shift Enable Bit (bit 14 of C).

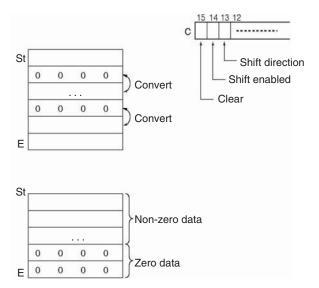

ASFT(017) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Example Programming

Shifting Data
 If the Shift Enable Bit, CIO 300.14, goes ON when CIO 0.00 is ON, all words with non-zero data content from CIO 100 through CIO 109 will be shifted in the direction designated by the Shift Direction Bit, CIO 300.13 (e.g., 1: Toward St) if the word to the left of the non-zero data is all zeros.

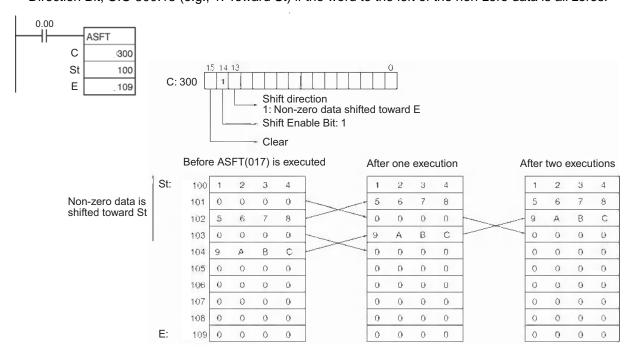

WSFT

Instruction		Variations	Function code	Function
WORD SHIFT	WSFT	@WSFT	016	Shifts data between St and E in word units.

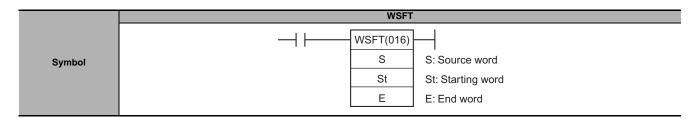

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
S	Control word	WORD	1
St	Starting word	UINT	Variable
E	End word	UINT	Variable

Operand Specifications


Area			W	ord ad	dresse	s				DM/EM esses	Con-		ters	Flags		Pulse	TR	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK	OK						
St	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
E																		

Flags

Name	Label	Operation
Error Flag	ER	ON when St is greater than E. OFF in all other cases.

Function

WSFT(016) shifts data from St to E in word units and the data from the source word S is places into St. The Lost contents of E is lost.

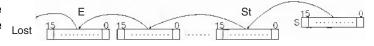



Precautions

- St and E must be in the same data area.
- When large amounts of data are shifted, the instruction execution time is quite long. Be sure that the power is not cut while WSFT(016) is being executed, causing the shift operation to stop halfway through.

Example Programming


When CIO 0.00 is ON, data from CIO 100 through CIO 102 will be shifted one word toward E. The contents of CIO 300 will be stored in CIO 100 and the contents of CIO 102 will be lost.

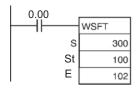

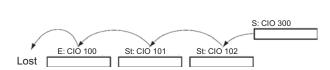

ASL/ASLL

Instruction	Mnemonic	Variations	Function code	Function
ARITHMETIC SHIFT LEFT	ASL	@ASL	025	Shifts the contents of Wd one bit to the left.
DOUBLE SHIFT LEFT	ASLL	@ASLL	570	Shifts the contents of Wd and Wd +1 one bit to the left.

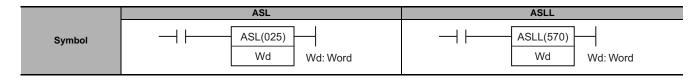

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
	Description	ASL	ASLL	ASL	ASLL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

	Are	•			W	ord ad	dresse	s			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
	AIC	a	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
AS	SL	Wd	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
ASL	LL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift.OFF in all other cases.


ASL

ASL(025) shifts the contents of Wd one bit to the left (from rightmost bit to leftmost bit). "0" is placed in the rightmost bit and the data from the leftmost bit is shifted into the Carry Flag (CY).

ASLL


ASLL(570) shifts the contents of Wd and Wd +1 one bit to the left (from rightmost bit to leftmost bit). "0" is placed in the rightmost bit of Wd and the contents of the leftmost bit of Wd and Wd +1 are shifted into the Carry Flag (CY).




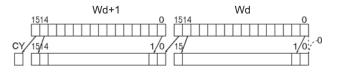


Example Programming


When CIO 0.00 is ON, CIO 100 will be shifted one bit to the left. "0" will be placed in CIO 100.00 and the contents of CIO 100.15 will be shifted to the Carry Flag (CY).

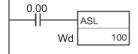

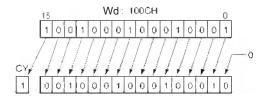


When CIO 0.00 is ON, word CIO 100 and CIO 101 will shift one bit to the left. "0" is placed into CIO 100.00 and the contents of CIO 101.15 will be shifted to the Carry Flag (CY).

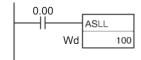

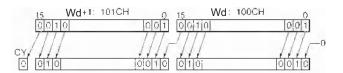

ASR/ASRL

Instruction	Mnemonic	Variations	Function code	Function
ARITHMETIC SHIFT RIGHT	ASR	@ASL	026	Shifts the contents of Wd one bit to the right.
DOUBLE SHIFT RIGHT	ASRL	@ASLL	571	Shifts the contents of Wd and Wd +1 one bit to the right.

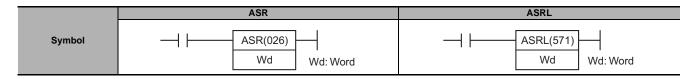

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
	Description	ASR	ASRL	ASR	ASRL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

٨٢	ea	Word addresses					Indirect DM/EM addresses		Con-		Regist	egisters		Flags		TR			
AI	ea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ASR	Wd	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK		OK		ОК				
ASRL	Wd	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Name	Label	Operation				
Error Flag	ER	OFF				
Equals Flag	=	ON when the shift result is 0.OFF in all other cases.				
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.				
Negative Flag	N	OFF				

ASR

ASR(026) shifts the contents of Wd one bit to the right (from leftmost bit to rightmost bit). "0" will be placed in the leftmost bit and the contents of the rightmost bit will be shifted into the Carry Flag (CY).


ASRL


ASRL(571) shifts the contents of Wd and Wd +1 one bit to the right (from leftmost bit to rightmost bit). "0" will be placed in the leftmost bit of Wd +1 and the contents of the rightmost bit of Wd will be shifted into the Carry Flag (CY).

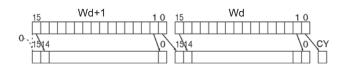


Example Programming


When CIO 0.00 is ON, word CIO 100 will shift one bit to the right. "0" will be placed in CIO 100.15 and the contents of CIO 100.00 will be shifted to the Carry Flag (CY).

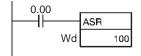

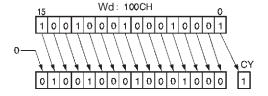

When CIO 0.00 is ON, word CIO 100 and CIO 101 will shift one bit to the right. "0" will be placed into CIO 100.15 and the contents of CIO 100.00 will be shifted to the Carry Flag (CY).

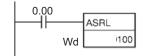

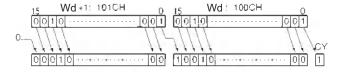

ROL/ROLL

Instruction	Mnemonic	Variations	Function code	Function		
ROTATE LEFT	ROL	@ROL	027	Shifts all Wd bits one bit to the left including the Carry Flag (CY).		
DOUBLE ROTATE LEFT	ROLL	@ROLL	572	Shifts all Wd and Wd +1 bits one bit to the left including the Carry Flag (CY).		



Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
	Description	ROL	ROLL	ROL	ROLL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

Are		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
AIG	ea	CIO	WR	HR	AR	Т	ပ	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ROL	Wd	ОК	ОК	OK	ОК	ОК	ОК	OK	ОК	ОК	OK		OK		ОК				
ROLL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.


ROL

ROL(027) shifts all bits of Wd including the Carry Flag (CY) to the left (from rightmost bit to leftmost bit).

CY 15 14 1 0

ROLL

ROLL(572) shifts all bits of Wd and Wd +1 including the Carry Flag (CY) to the left (from rightmost bit to leftmost bit).

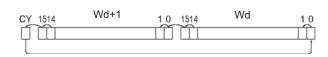


Hint


It is possible to set the Carry Flag contents to 1 or 0 immediately before executing this instruction, by using the Set Carry (STC(040)) or Clear Carry (CLC(041)) instructions.

Example Programming

When CIO 0.00 is ON, word CIO 100 and the Carry Flag (CY) will shift one bit to the left. The contents of CIO 100.15 will be shifted to the Carry Flag (CY) and the Carry Flag contents will be shifted to CIO 100.00.

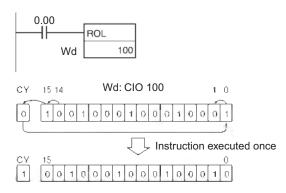

When CIO 0.00 is ON, word CIO 100, CIO 101 and the Carry Flag (CY) will shift one bit to the left. The contents of CIO 100.15 will be shifted to the Carry Flag (CY) and the Carry Flag contents will be shifted to CIO 100.00.

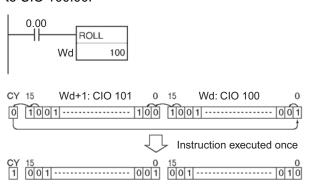

RLNC/RLNL

Instruction	Mnemonic	Variations	Function code	Function			
ROTATE LEFT WITHOUT CARRY	RLNC	@RLNC	574	Shifts all Wd bits one bit to the left not including the Carry Flag (CY).			
DOUBLE ROTATE LEFT WITHOUT CARRY	RLNL	@RLNL	576	Shifts all Wd and Wd +1 bits one bit to the left not including the Carry Flag (CY).			



Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	ОК	ОК	ОК	ОК	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	RLNC	RLNL	RLNC	RLNL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

	Area -		Word addresses								Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
			CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
RLN	VС	Wd	ОК	ОК	ОК	ОК	ОК	ок	ОК	ОК	ОК	OK		OK		ОК				
RLI	NL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation				
Error Flag	ER	OFF				
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.				
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.				
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.				


RLNC

RLNC(574) shifts all bits of Wd to the left (from rightmost bit to leftmost bit). The contents of the leftmost bit of Wd shifts to the rightmost bit and to the Carry Flag (CY).

CY 15 14 Wd 1 0


RLNL

RLNL(576) shifts all bits of Wd and Wd +1 to the left (from rightmost bit to leftmost bit). The contents of the leftmost bit of Wd +1 is shifted to the rightmost bit of Wd, and to the Carry Flag (CY).

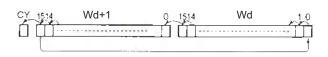


Example Programming

When CIO 0.00 is ON, word CIO 100 will shift one bit to the left (excluding the Carry Flag (CY)). The contents of CIO 100.15 will be shifted to CIO 100.00.

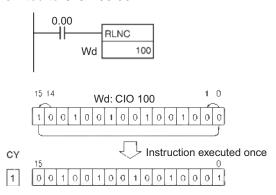

When CIO 0.00 is ON, word CIO 100 and CIO 101 will shift one bit to the left (excluding the Carry Flag (CY)). The contents of CIO 101.15 will be shifted to CIO 100.00.

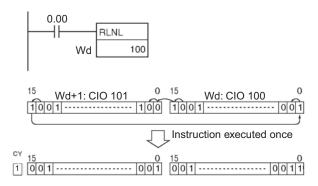

ROR/RORL

Instruction	Mnemonic	Variations	Function code	Function
ROTATE RIGHT	ROR	@ROR	028	Shifts all Wd bits one bit to the right including the Carry Flag (CY).).
DOUBLE ROTATE RIGHT	RORL	@RORL	573	Shifts all Wd and Wd +1 bits one bit to the right including the Carry Flag (CY).



Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	ОК	

Operands

Operand	Description	Data	type	Size		
Operand	Description	ROR	RORL	ROR	RORL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

Are		Word addresses							Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR		
AR	za	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ROR	Wd	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		OK		ОК				
RORL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.


ROR

ROR(028) shifts all bits of Wd including the Carry Flag (CY) to the right (from leftmost bit to rightmost bit).



RORL

RORL(573) shifts all bits of Wd and Wd +1 including the Carry Flag (CY) to the right (from leftmost bit to rightmost bit).

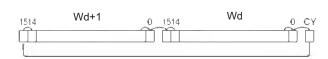


Hint


It is possible to set the Carry Flag contents to 1 or 0 immediately before executing this instruction, by using the Set Carry (STC(040)) or Clear Carry (CLC(041)) instructions.

Example Programming

When CIO 0.00 is ON, word CIO 100 and the Carry Flag (CY) will shift one bit to the right. The contents of CIO 100.00 will be shifted to the Carry Flag (CY) and the Carry Flag contents will be shifted to CIO 100.15.

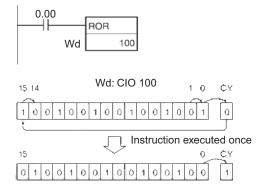


When CIO 0.00 is ON, word CIO 100, CIO 101 and the Carry Flag (CY) will shift one bit to the right. The contents of CIO 101.00 will be shifted to the Carry Flag (CY) and the Carry Flag contents will be shifted to CIO 101.15.

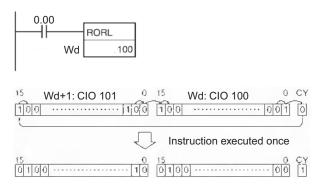

RRNC/RRNL

Instruction	Mnemonic	Variations	Function code	Function
ROTATE RIGHT WITHOUT CARRY	RRNC	@RRNC	575	Shifts all Wd bits one bit to the right not including the Carry Flag (CY).
DOUBLE ROTATE RIGHT WITHOUT CARRY	RRNL	@RRNL	577	Shifts all Wd and Wd +1 bits one bit to the right not including the Carry Flag (CY).

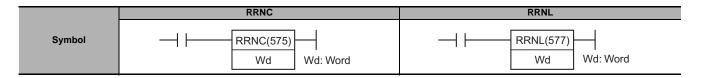

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	RRNC	RRNL	RRNC	RRNL	
Wd	Word	UINT	UDINT	1	2	

Operand Specifications

Are		Word addresses						Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR			
AR	ea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
RRNC	Wd	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
RRNL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.


RRNC

RRNC(575) shifts all bits of Wd to the right (from leftmost bit to rightmost bit) not including the Carry Flag (CY). The contents of the rightmost bit of Wd shifts to the leftmost bit and to the Carry Flag (CY).

RRNL


RRNL(577) shifts all bits of Wd and Wd +1 to the right (from leftmost bit to rightmost bit) not including the Carry Flag (CY). The contents of the rightmost bit of Wd +1 is shifted to the leftmost bit of Wd, and to the Carry Flag (CY).

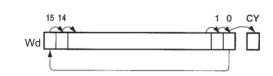

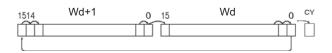


Example Programming

When CIO 0.00 is ON, word CIO 100 will shift one bit to the right (excluding the Carry Flag (CY)). The contents of CIO 100.00 will be shifted to CIO 100.15.

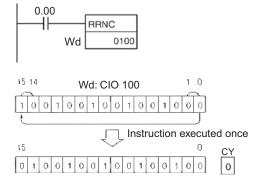


When CIO 0.00 is ON, words CIO 100 and CIO 101 will shift one bit to the right, (excluding the Carry Flag (CY)). The contents of CIO 100.00 will be shifted to CIO 101.15.

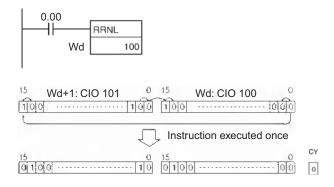

SLD/SRD

Instruction	Mnemonic	Variations	Function code	Function
ONE DIGIT SHIFT LEFT	SLD	@SLD	074	Shifts data by one digit (4 bits) to the left.
ONE DIGIT SHIFT RIGHT	SRD	@SRD	075	Shifts data by one digit (4 bits) to the right.

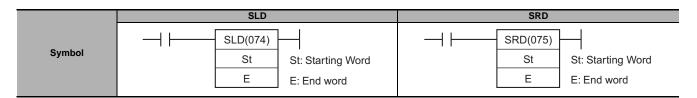

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
St	Starting Word	UINT	Variable
E	End Word	UINT	Variable

Operand Specifications

Area		Word addresses								DM/EM esses	Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
St	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				ОК				
E		OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	ON when St is greater than E. OFF in all other cases.

Function

• SLD


SLD(074) shifts data between St and E by one digit (4 bits) to the left. "0" is placed in the rightmost digit (bits 3 to 0 of St), and the content of the leftmost digit (bits 15 to 12 of E) is lost.

SRD

SRD(075) shifts data between St and E by one digit (4 bits) to the right. "0" is placed in the leftmost digit (bits 15 to 12 of E), and the content of the rightmost digit (bits 3 to 0 of St) is lost.

Precautions


- St and E must be in the same data area.
- When large amounts of data are shifted, the instruction execution time is quite long. Be sure that the power is not cut while SLD(074) and SRD(075) is being executed, causing the shift operation to stop halfway through.

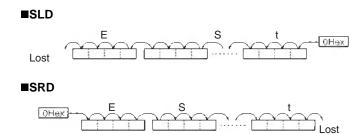

Example Programming


• SLD

When CIO 0.00 is ON, words CIO 100 through CIO 102 will shift by one digit (4 bits) to the left. A zero will be placed in bits 0 to 3 of word CIO 100 and the contents of bits 12 to 15 of CIO 102 will be lost.

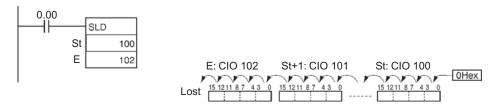


• SRD

When CIO 0.00 is ON, words CIO 100 through CIO 102 will shift by one digit (4 bits) to the right. A zero will be placed in bits 12 to 15 of CIO 102 and the contents of bits 0 to 3 of word CIO 100 will be lost.

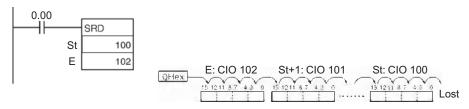

NSFL/NSFR

Instruction	Mnemonic	Variations	Function code	Function
SHIFT N-BIT DATA LEFT	NSFL	@NSFL	578	Shifts the specified number of bits to the left.
SHIFT N-BIT DATA RIGHT	NSFR	@NSFR	579	Shifts the specified number of bits to the right.

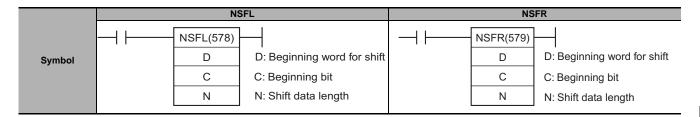

Applicable Program Areas

Area	definitions		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
D	Beginning word for shift	UINT	Variable
С	Beginning bit	UINT	1
N	Shift data length	UINT	1

C: Beginning bit

0000 to 000F hex (0 to 15)

N: Shift data length

0000 to FFFF hex (0 to 65535)

Note All words in the shift register must be in the same area.

Operand Specifications


Area		Word addresses								DM/EM esses	Con-		Regist	egisters		ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
D																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
N											UK	UK						

Name	Label	Operation
Error Flag	ER	ON when C data is not between 0000 and 000F hex. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.

NSFL

NSFL(578) shifts the specified number of bits by the shift data length (N) from the beginning bit (C) in the rightmost word, as designated by D one bit to the left (towards the leftmost word and the leftmost bit). "0" is place into the beginning bit and the contents of the leftmost bit in the shift area are shifted to the Carry Flag (CY).


- Note When the shift data length (N) is 0, the contents of the beginning bit will be copied to the Carry Flag (CY), and its contents will not be changed.
 - · Only the bits shifted into rightmost word in the shift area (i.e. leftmost word data) will be changed.

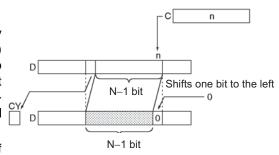

NSFR

NSFR(579) shifts the specified number of bits by the shift data length (N) from the beginning bit (C) in the rightmost word as designated by D one bit to the right (towards the rightmost word and the rightmost bit). "0" will be placed into the beginning bit and the contents of the rightmost bit in the shift area will be shifted to the Carry Flag (CY).


- Note When the shift data length (N) is 0, the contents of the beginning bit will be copied to the Carry Flag (CY), and its contents will not be changed.
 - · Only the bits shifted into rightmost word in the shift area (i.e. leftmost word data) will be changed

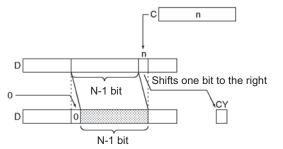

Example Programming


NSFL

When CIO 0.00 is ON, all bits from the beginning bit 3 to the shift data length (B hex) will be shifted one bit to the left (from the rightmost bit to the leftmost bit). "0" will be placed into bit 3 of CIO 100. The contents of the leftmost bit in the shift area (bit 13 of CIO 100) are copied into the Carry Flag (CY).

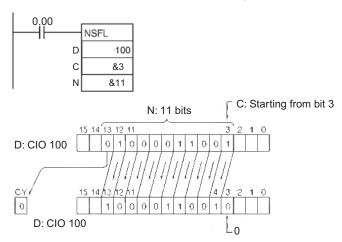


NSFR

When CIO 0.00 is ON, all bits from the beginning bit 2 to end of the shift data length 11 bits (B hex), will be shifted one bit to the right, (from the leftmost bit to the rightmost bit). "0" is shifted into bit 12 of CIO 100. The contents of the rightmost bit in the shift area (bit 2 of CIO 100) are copied into the Carry Flag (CY).

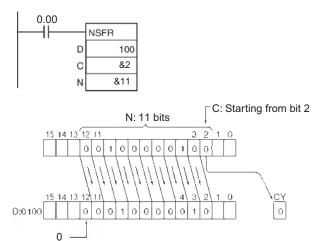

NASL/NSLL

Instruction	Mnemonic	Variations	Function code	Function
SHIFT N-BITS LEFT	NASL	@NASL	580	Shifts the specified 16 bits of word data to the left by the specified number of bits.
DOUBLE SHIFT N-BITS LEFT	NSLL	@NSLL	582	Shifts the specified 32 bits of word data to the left by the specified number of bits.

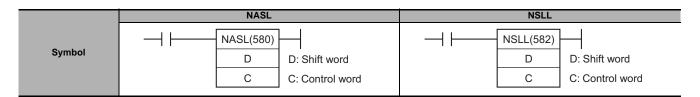


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	NASL	NSLL	NASL	NSLL		
D	Shift Word	UINT	UDINT	1	2		
С	Control word	UINT	UDINT	1	1		

C: Control word

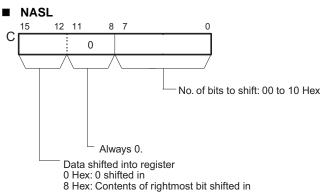

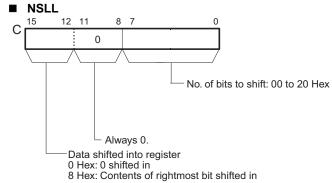

Operand Specifications

Word addresses									Indirect DM/EM addresses Co			Registers			ıgs	Pulse	TR		
Ale	a	CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
NASL	D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ок		ОК		ОК				
	С	•	•	•	0.1	•	•	•	0.1		0.1	OK	•		0.1				
NSLL	D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ок				ОК				
INOLL	С	UK	UK	UK	UK	UK	UK	UK	UK	UK	UK	OK	OK		UK				


Flags

Name	Label	Operation
Error Flag	ER	 ON when the control word C (the number of bits to shift) is not within range. OFF in all other cases.
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.

Function


NASL

NASL(580) shifts D (the shift word) by the specified number of binary bits (specified in C) to the left (from the rightmost bit to the leftmost bit). Either zeros or the value of the rightmost bit will be placed into the specified number of bits of the shift word starting from the rightmost bit.

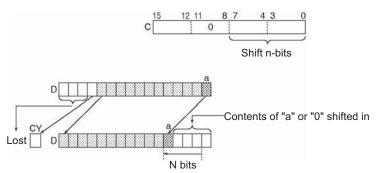

NSLL

NSLL(582) shifts D and D+1 (the shift words) by the specified number of binary bits (specified in C) to the left (from the rightmost bit to the leftmost bit). Either zeros or the value of the rightmost bit will be placed into the specified number of bits of the shift word starting from the rightmost bit.

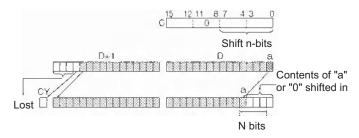



Precautions

- For any bits which are shifted outside the specified word, the contents of the last bit is shifted to the Carry Flag (CY), and all other data is lost.
- When the number of bits to shift (specified in C) is "0," the data will not be shifted. The appropriate flags will turn ON and OFF, however, according to data in the specified word.


Example Programming


When CIO 0.00 is ON, The contents of CIO 100 is shifted 10 bits to the left (from the rightmost bit to the leftmost bit). The number of bits to shift is specified in bits 0 to 7 of word CIO 300 (control data). The contents of bit 0 of CIO 100 is copied into bits from which data was shifted and the contents of the rightmost bit which was shifted out of range is shifted into the Carry Flag (CY). All other data is lost.

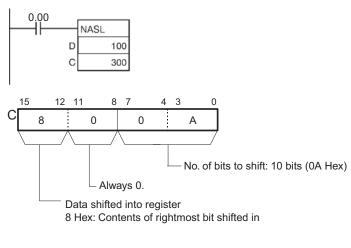

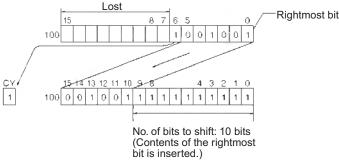


When CIO 0.00 is ON, CIO 100 and CIO 101 will be shifted to the left (from the rightmost bit to the leftmost bit) by 10 bits. The number of bits to shift is specified in bits 0 to 7 of word CIO 300 (control data). The contents of bit 0 of CIO 100 is copied into bits from which data was shifted and the contents of the rightmost bit which was shifted out of range is shifted into the Carry Flag (CY). All other data is lost.

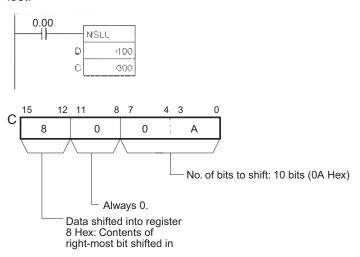

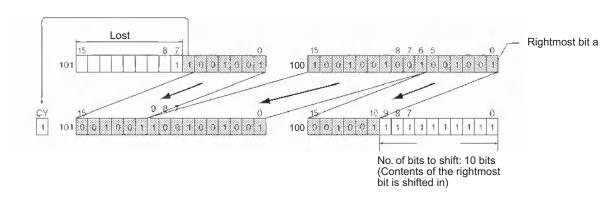

NASR/NSRL

Instruction	Mnemonic	Variations	Function code	Function				
SHIFT N-BITS RIGHT	NASR	@NASR	581	Shifts the specified 16 bits of word data to the right by the specified number of bits.				
DOUBLE SHIFT N-BITS RIGHT	NSRL	@NSRL	583	Shifts the specified 32 bits of word data to the right by the specified number of bits.				

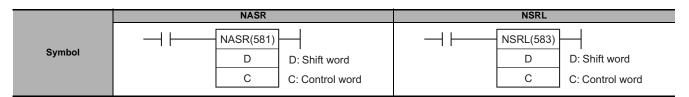


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
	Description	NASR	NSRL	NASR	NSRL	
D	Shift Word	UINT	UDINT	1	2	
С	Control word	UINT	UDINT	1	1	

C: Control word

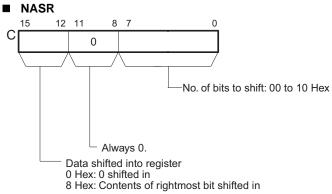

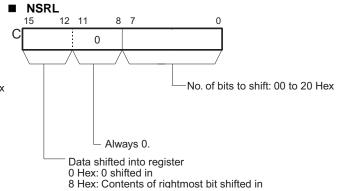

Operand Specifications


Are	. 2			w	ord ad	dresse	s				Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR	
Ale	:a	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
NASR	D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК		ОК				
NASK	С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
NSRL	D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК				ОК				
NOIL	С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Name	Label	Operation
Error Flag	ER	 ON when the control word C (the number of bits to shift) is not within range. OFF in all other cases.
Equals Flag	=	ON when the shift result is 0. OFF in all other cases.

Name	Label	Operation
Carry Flag	CY	ON when 1 is shifted into the Carry Flag (CY). OFF in all other cases.
Negative Flag	N	ON when the leftmost bit is 1 as a result of the shift. OFF in all other cases.


NASR

NASR(581) shifts D (the shift word) by the specified number of binary bits (specified in C) to the right (from the rightmost bit to the leftmost bit). Either zeros or the value of the rightmost bit will be placed into the specified number of bits of the shift word starting from the rightmost bit.

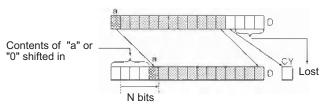

NSRL

NSRL(583) shifts D and D+1 (the shift words) by the specified number of binary bits (specified in C) to the right (from the leftmost bit to the rightmost bit). Either zeros or the value of the rightmost bit will be placed into the specified number of bits of the shift word starting from the rightmost bit.

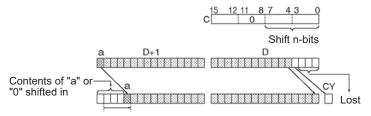


Precautions


- For any bits which are shifted outside the specified word, the contents of the last bit is shifted to the Carry Flag (CY), and all other data is discarded.
- When the number of bits to shift (specified in C) is "0," the data will not be shifted. The appropriate flags will turn ON and OFF, however, according to data in the specified word.

Example Programming

• When CIO 0.00 is ON, CIO 100 will be shifted 10 bits to the right (from the leftmost bit to the rightmost bit). The number of bits to shift is specified in bits 0 to 7 of word CIO 300. The contents of bit 15 of CIO 100 is copied into the bits from which data was shifted and the contents of the leftmost bit of data which was shifted out of range, is shifted into the Carry Flag (CY). All other data is lost.

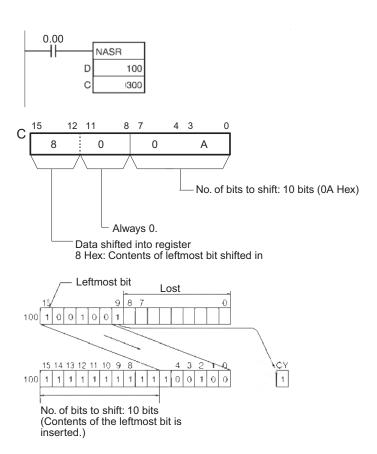


When CIO 0.00 is ON, CIO 100 and CIO 101 will be shifted 10 bits to the right (from the leftmost bit to the rightmost bit). The number of bits to shift is specified in bits 0 to 7 of word CIO 300 (control data). The contents of bit 15 of CIO will be copied into the bits from which data was shifted and the contents of the leftmost bit of data which was shifted out of range will be shifted into the Carry Flag (CY). All other data is lost.

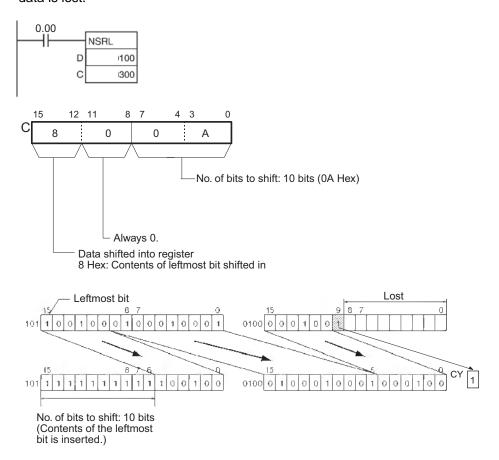

Increment/Decrement Instructions

++/++L

Instruction	Mnemonic	Variations Function code		Function			
INCREMENT BINARY	++	@++	590	Increments the 4-digit hexadecimal content of the specified word by 1.			
DOUBLE INCREMENT BINARY	++L	@++L	591	Increments the 8-digit hexadecimal content of the specified words by 1.			

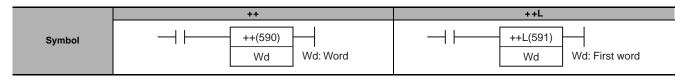

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	++	++L	++	++L	
Wd	++: Word ++L: First word	UINT	UDINT	1	2	


Operand Specifications

Area		Word addresses								addresses Con-			Registers			ags	Pulse	TR	
Ale	d	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
++	Wd	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК	ОК	OK		OK		OK				
++L	Wd	OK	OK.	OK.	Š	OK.	OK	OK	OK.	OK .	OK			OK	OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the result is 0000/0000 0000 after execution. OFF in all other cases.
Carry Flag	CY	 ON if a digit in Wd/Wd+1 or Wd went from F to 0 during execution. OFF in all other cases.
Negative Flag	N	ON if bit 15 of Wd/Wd+1 is ON after execution. OFF in all other cases.

• ++

The ++(590) instruction adds 1 to the binary content of Wd. The specified word will be incremented by 1 every cycle as long as the execution condition of ++(590) is ON. When the up-differentiated variation of this instruction (@++(590)) is used, the specified word is incremented only when the execution condition has gone from OFF to ON.

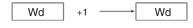

• ++L


The ++L(591) instruction adds 1 to the 8-digit hexadecimal content of Wd+1 and Wd. The content of the specified words will be incremented by 1 every cycle as long as the execution condition of ++L(591) is ON. When the up-differentiated variation of this instruction (@++L(591)) is used, the content of the specified words is incremented only when the execution condition has gone from OFF to ON.




Example Programming

Operation of ++(590)/++L(591)

In the following example, the content of D100 will be incremented by 1 every cycle as long as CIO 0.00 is ON.

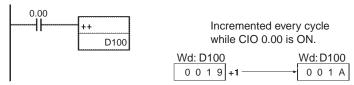


In the following example, the content of D100 will be incremented by 1 every cycle as long as CIO 0.00 is ON.

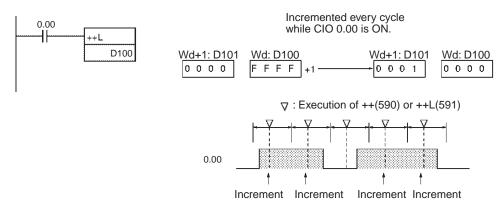


Operation of @++(590)/@++L(591)


The up-differentiated variation is used in the following example, so the content of D100 will be incremented by 1 only when CIO 0.00 has gone from OFF to ON.

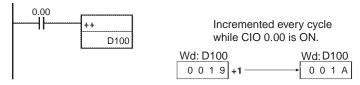

The up-differentiated variation is used in the following example, so the content of D101 and D100 will be incremented by 1 only when CIO 0.00 has gone from OFF to ON.

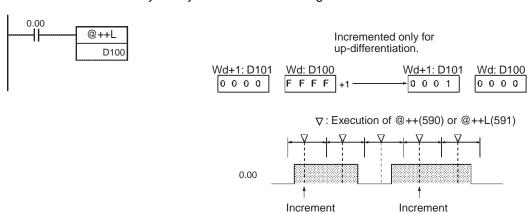

Instruction	Mnemonic	Variations	Function code	Function
DECREMENT BINARY		@	592	Decrements the 4-digit hexadecimal content of the specified word by 1.
DOUBLE DECREMENT BINARY	L	@L	593	Decrements the 8-digit hexadecimal content of the specified words by 1.

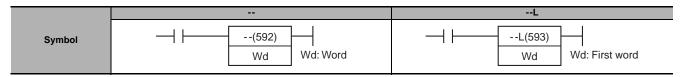

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description		-i-L		L	
Wd	: Word L: First word	UINT	UDINT	1	2	

Operand Specifications

	Area			Word addresses						Indirect addre	Con-	Registers			Fla	ıgs	Pulse	TR		
	Ale	a	CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
		Wd	ОК	ОК	ок	ОК	ОК	ОК	ОК	ОК	OK	OK		OK		OK				
_	L	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK	OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON if the result is 0000/0000 0000 after execution. OFF in all other cases.
Carry Flag	CY	ON if a digit in Wd/Wd+1 or Wd went from 0 to F during execution. OFF in all other cases.
Negative Flag	N	ON if bit 15 of Wd/Wd+1 is ON after execution. OFF in all other cases.

• --

The --(592) instruction subtracts 1 from the binary content of Wd. The specified word will be decremented by 1 every cycle as long as the execution condition of --(592) is ON. When the up-differentiated variation of this instruction (@ --(592)) is used, the specified word is decremented only when the execution condition has gone from OFF to ON.





The --L(593) instruction subtracts 1 from the 8-digit hexadecimal content of Wd+1 and Wd. The content of the specified words will be decremented by 1 every cycle as long as the execution condition of --L(593) is ON. When the up-differentiated variation of this instruction (@--L(593)) is used, the content of the specified words is decremented only when the execution condition has gone from OFF to ON.




Example Programming

• Operation of --(592)/--L(593)

The up-differentiated variation is used in the following example, so the content of D100 will be decremented by 1 only when CIO 0.00 has gone from OFF to ON.



In the following example, the 8-digit hexadecimal content of D101 and D100 will be decremented by 1 every cycle as long as CIO 0.00 is ON.

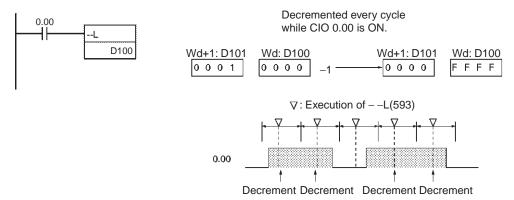


• Operation of @--(592)/@--L(593)

In the following example, the content of D100 will be decremented by 1 every cycle as long as CIO 0.00 is ON.




The up-differentiated variation is used in the following example, so the content of D101 and D100 will be decremented by 1 only when CIO 0.00 has gone from OFF to ON.

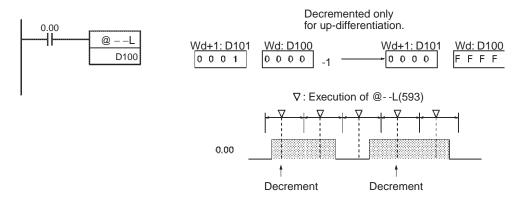

++B/++BL

Instruction	Mnemonic	Variations	Function code	Function
INCREMENT BCD	++B	@++B	594	Increments the 4-digit BCD content of the specified word by 1.
DOUBLE INCREMENT BCD	++BL	@++BL	595	Increments the 8-digit BCD content of the specified words by 1.

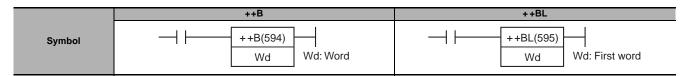

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	++	++L	++	++L	
Wd	++B: Word ++BL: First word	WORD	DWORD	1	2	


Operand Specifications

Area			Word addresses						Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse	TR	
Ale	ŧa	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
++B	Wd	ОК	ОК	ОК	ок	ОК	ОК	ОК	ОК	ОК	OK		OK		ОК				
++BL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the content of Wd/Wd+1 and Wd is not BCD. OFF in all other cases.
Equals Flag	=	ON if the result is 0000/0000 0000 after execution. OFF in all other cases.
Carry Flag	CY	ON if a digit in Wd/Wd+1 or Wd went from 9 to 0 during execution. OFF in all other cases.


• ++B

The ++B(594) instruction adds 1 to the BCD content of Wd. The specified word will be incremented by 1 every cycle as long as the execution condition of ++B(594) is ON. When the up-differentiated variation of this instruction (@++B(594)) is used, the specified word is incremented only when the execution condition has gone from OFF to ON.

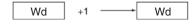

• ++BL

The ++BL(595) instruction adds 1 to the 8-digit BCD content of Wd+1 and Wd. The content of the specified words will be incremented by 1 every cycle as long as the execution condition of ++BL(595) is ON. When the up-differentiated variation of this instruction (@++BL(595)) is used, the content of the specified words is incremented only when the execution condition has gone from OFF to ON.

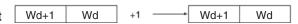


Example Programming

Operation of ++B(594)/++BL(595)

In the following example, the BCD content of D100 will be incremented by 1 every cycle as long as CIO 0.00 is ON.




In the following example, the 8-digit BCD content of D101 and D100 will be incremented by 1 every cycle as long as CIO 0.00 is ON.

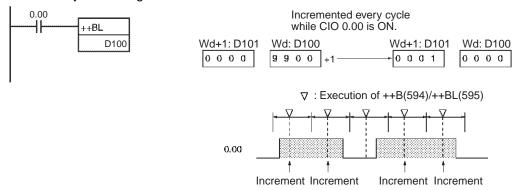


Operation of @++B(594)/@++BL(595)

The up-differentiated variation is used in the following example, so the content of D100 will be incremented by 1 only when CIO 0.00 has gone from OFF to ON.

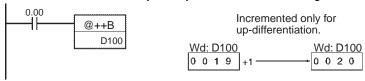


The up-differentiated variation is used in the following example, so the BCD content of D101 and D100 will be incremented by 1 only when CIO 0.00 has gone from OFF to ON.

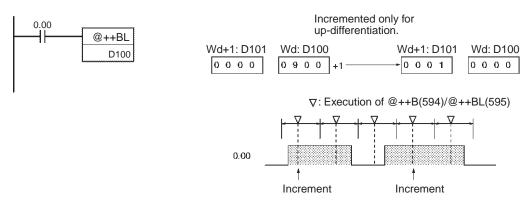

--B/--BL

Instruction	Mnemonic	Variations	Function code	Function
DECREMENT BCD	B	@B	596	Decrements the 4-digit BCD content of the specified word by 1.
DOUBLE DECREMENT BCD	BL	@BL	597	Decrements the 8-digit BCD content of the specified words by 1.

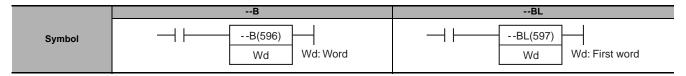

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data	type	Size			
Operanu	Description		-i-L		L		
Wd	B: Word BL: First word	WORD	DWORD	1	2		


Operand Specifications

	Area			Word addresses							Indirect addre		Con-	Registers			Flags		Pulse	TR
			CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
	B	Wd	ок	ОК	ОК	ок	ОК	ОК	ОК	ОК	OK	OK		OK		OK				
	-BL	Wd	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the content of Wd/Wd+1 and Wd is not BCD. OFF in all other cases.
Equals Flag	=	ON if the result is 0000/0000 0000 after execution. OFF in all other cases.
Carry Flag	CY	ON if a digit in Wd/Wd+1 or Wd went from 0 to 9 during execution. OFF in all other cases.

--B

The --B(596) instruction subtracts 1 from the BCD content of Wd. The specified word will be decremented by 1 every cycle as long as the execution condition of --B(596) is ON. When the up-differentiated variation of this instruction (@--B(596)) is used, the specified word is decremented only when the execution condition has gone from OFF to ON.

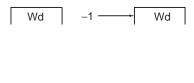

● --BL

The --BL(597) instruction subtracts 1 from the 8-digit BCD content of Wd+1 and Wd. The content of the specified words will be decremented by 1 every cycle as long as the execution condition of --BL(597) is ON. When the up-differentiated variation of this instruction (@--BL(597)) is used, the content of the specified words is decremented only when the execution condition has gone from OFF to ON.




Example Programming

Operation of --B(596)/--BL(597)

In the following example, the BCD content of D100 will be decremented by 1 every cycle as long as CIO 0.00 is ON.



In the following example, the 8-digit BCD content of D101 and D100 will be decremented by 1 every cycle as long as CIO 0.00 is ON.

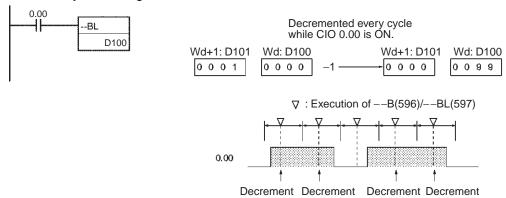


Operation of @--B(596)/@--BL(597)

The up-differentiated variation is used in the following example, so the BCD content of D100 will be decremented by 1 only when CIO 0.00 has gone from OFF to ON.




The up-differentiated variation is used in the following example, so the BCD content of D101 and D100 will be decremented by 1 only when CIO 0.00 has gone from OFF to ON.

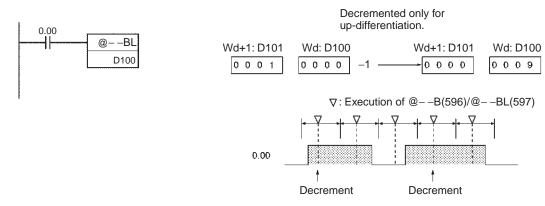

Symbol Math Instructions

+/+L

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY ADD WITHOUT CARRY	+	@+	400	Adds 4-digit (single-word) hexadecimal data and/or constants.
DOUBLE SIGNED BINARY ADD WITHOUT CARRY	+L	@+L	401	Adds 8-digit (double-word) hexadecimal data and/or constants.

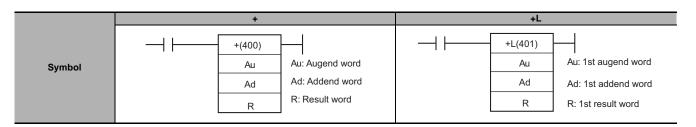

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	+	+L	+	+L		
Au	+: Augend word +L: First augend word	INT	DINT	1	2		
Ad	+: Addend word +L: First addend word	INT	DINT	1	2		
R	+: Result word +L: First result word	INT	DINT	1	2		

Operand Specifications

	Area	Word addresses							DM	Indirect DM/EM addresses Constants			Registers			CF	Pulse bits	TR bits	
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Starits	DR	IR	Indirect using IR			DILO	DILS
+	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
	R	5	5	5	5	5	5	OK	5	OK	OK		5		OK				
+L	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK		ОК	ОК				
TL	R	OK.)K	OK)K	OK.)K	OK)K	OK.	OK.		-2-	OK	OK				


Flags

Name	Label	Oper	ation
Name	Labei	+	+L
Error Flag	ER	OFF	OFF
Equals Flag	=	ON when the result is 0.OFF in all other cases.	ON when the result is 0. OFF in all other cases.
Carry Flag	CY	ON when the addition results in a carry. OFF in all other cases.	ON when the addition results in a carry. OFF in all other cases.
Overflow Flag	OF	ON when the result of adding two positive numbers is in the range 8000 to FFFF hex. OFF in all other cases.	ON when the result of adding two positive numbers is in the range 80000000 to FFFFFFF hex. OFF in all other cases.
Underflow Flag	UF	ON when the result of adding two negative numbers is in the range 0000 to 7FFF hex. OFF in all other cases.	ON when the result of adding two negative numbers is in the range 00000000 to 7FFFFFFF hex. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.	ON when the leftmost bit of the result is 1. OFF in all other cases.

Function

• +

+(400) adds the binary values in Au and Ad and outputs the result to R.

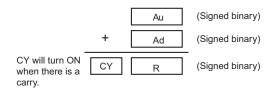


+L


+L(401) adds the binary values in Au and Au+1 and Ad and Ad+1 and outputs the result to R.



Example Programming

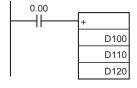


When CIO 0.00 is ON in this example, D100 and D110 will be added as 4-digit signed binary values and the result will be output to D120.

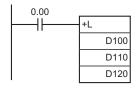

When CIO 0.00 is ON, D101 and D100 and D111 and D110 will be added as 8-digit signed binary values and the result will be output to D121 and D120.

+C/+CL

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY ADD WITH CARRY	+C	@+C	402	Adds 4-digit (single-word) hexadecimal data and/or constants with the Carry Flag (CY).
DOUBLE SIGNED BINARY ADD WITH CARRY	+CL	@+CL	403	Adds 8-digit (double-word) hexadecimal data and/or constants with the Carry Flag (CY).

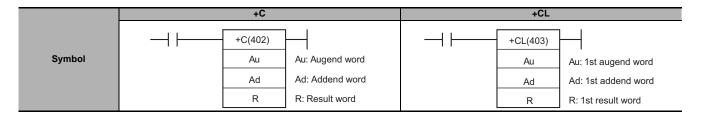

Applicable Program Areas

Area	Function block definitions	definitions Block program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	+C	+CL	+C	+CL		
Au	+C: Augend word +CL: First augend word	INT	DINT	1	2		
Ad	+C: Addend word +CL: First addend word	INT	DINT	1	2		
R	+C: Result word +CL: First result word	INT	DINT	1	2		

Operand Specifications

A	Area	Word addresses							addresses		Con-	Registers			тк	CF	Pulse bits	TR bits	
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			DitS	DITS
+C	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
	R	5	5	5	5	5	5	OIX	5	OK	5		5		Ŏ.				
+CL	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
TOL	R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Lobel	Oper	ation
Name	Label	+C	+CL
Error Flag	ER	OFF	OFF
Equals Flag	=	ON when the addition result is 0.OFF in all other cases.	ON when the result is 0. OFF in all other cases.
Carry Flag	CY	ON when the addition results in a carry. OFF in all other cases.	ON when the results in a carry. OFF in all other cases.
Overflow Flag	OF	ON when the addition result of adding two positive numbers and CY is in the range 8000 to FFFF hex. OFF in all other cases.	ON when the result of adding two positive numbers and CY is in the range 80000000 to FFFFFFFF hex. OFF in all other cases.
Underflow Flag	UF	ON when the addition result of adding two negative numbers and CY is in the range 0000 to 7FFF hex. OFF in all other cases.	ON when the result of adding two negative numbers and CY is in the range 00000000 to 7FFFFFF hex. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.	ON when the leftmost bit of the result is 1. OFF in all other cases.

Function


• +C

+C(402) adds the binary values in Au, Ad, and CY and outputs the result to R.

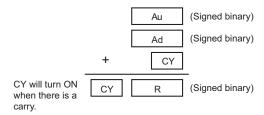

• +CL


+CL(403) adds the binary values in Au and Au+1, Ad and Ad+1, and CY and outputs the result to R.

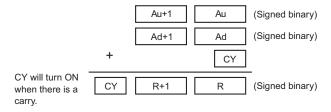


Hint

• To clear the Carry Flag (CY), execute the Clear Carry (CLC(041)) instruction.

Example Programming

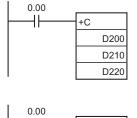


When CIO 0.00 is ON, D200, D210, and CY will be added as 4-digit signed binary values and the result will be output to

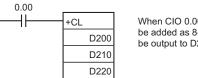

When CIO 0.00 is ON, D201, D200, D211, D210, and CY will be added as 8-digit signed binary values, and the result will be output to D221 and D220.

+B/+BL

Instruction	Mnemonic	Variations	Function code	Function		
BCD ADD WITHOUT CARRY	+B	@+B	404	Adds 4-digit (single-word) BCD data and/or constants.		
DOUBLE BCD ADD WITHOUT CARRY	+BL	@+BL	405	Adds 8-digit (double-word) BCD data and/or constants.		

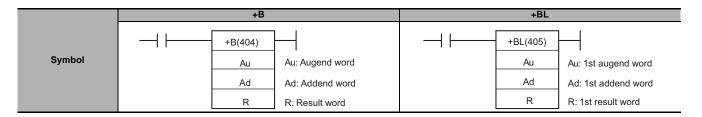

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	+B	+BL	+B	+BL	
Au	+B: Augend word +BL: First augend word	WORD	DWORD	1	2	
Ad	+B: Addend word +BL: First addend word	WORD	DWORD	1	2	
R	+B: Result word +BL: First result word	WORD	DWORD	1	2	


Operand Specifications

A	rea			V	addresses				Con-					CF	Pulse bits	TR bits			
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			DILS	DITS
+B	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
	R	5	OIX	OIX	OIX	OIX	5	5	5	OIX	5		5		Š				
+BL	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
TDL	R	OK	OK.	J.K	OK.	J.K	OK	OK.	OK	OR.	OR		-3-		OK	-3-			- _

Name	Label	Operation						
Name	Labei	+B	+BL					
Error Flag	ER	ON when Au is not BCD. ON when Ad is not BCD. OFF in all other cases.	 ON when Au, Au +1 is not BCD. ON when Ad, Ad +1 is not BCD. OFF in all other cases. 					
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0.OFF in all other cases.					
Carry Flag	CY	ON when the addition results in a carry. OFF in all other cases.	ON when the addition results in a carry. OFF in all other cases.					


● +B

+B(404) adds the BCD values in Au and Ad and outputs the result to R.

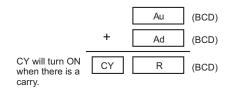


• +BL


+BL(405) adds the BCD values in Au and Au+1 and Ad and Ad+1 and outputs the result to R, R+1.

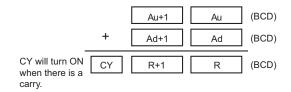

Example Programming

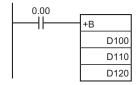


When CIO 0.00 is ON in the following example, D100 and D110 will be added as 4-digit BCD values, and the result will be output to D120.

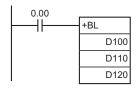

When CIO 0.00 is ON in the following example, D101 and D100 and D111 and D110 will be added as 8-digit BCD values, and the result will be output to D121 and D120.

+BC/+BCL

Instruction	Mnemonic	Variations	Function code	Function
BCD ADD WITH CARRY	+BC	@+BC	406	Adds 4-digit (single-word) BCD data and/or constants with the Carry Flag (CY).
DOUBLE BCD ADD WITH CARRY	+BCL	@+BCL	407	Adds 8-digit (double-word) BCD data and/or constants with the Carry Flag (CY).

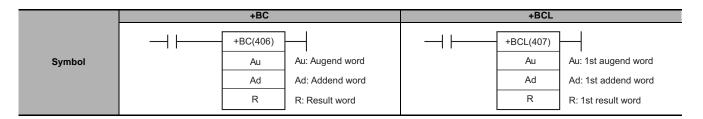

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	+BC	+BCL	+BC	+BCL	
Au	+BC: Augend word +BCL: First augend word	WORD	DWORD	1	2	
Ad	+BC: Addend word +BCL: First addend word	WORD	DWORD	1	2	
R	+BC: Result word +BCL: First result word	WORD	DWORD	1	2	

Operand Specifications

A	rea			v	Vord ad	ldresse	:S			Indirect DM/EM addresses Constants						тк	K CF	Pulse bits	TR bits
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			DILS	DILS
+BC	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
+60	R	OK	OK	5	OK	OK	6	5	6	OK	OK		5		OK .		-		
+BCL	Au, Ad	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			OK				
+BCL	R	OK	OK	OK	OK	OK.	OK.	OK	OK.	OK	OK		-3-	-3-	OK				


Flags

Name	Label	Operation						
Name	Labei	+BC	+BCL					
Error Flag	ER	ON when Au is not BCD. ON when Ad is not BCD. OFF in all other cases.	ON when Au, Au +1 is not BCD. ON when Ad, Ad +1 is not BCD. OFF in all other cases.					
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.					
Carry Flag	CY	ON when the addition results in a carry. OFF in all other cases.	ON when the addition results in a carry. OFF in all other cases.					

Function


◆ +BC

+BC(406) adds BCD values in Au, Ad, and CY and outputs the result to R.

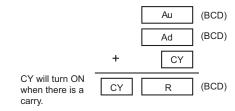

• +BCL


+BCL(407) adds the BCD values in Au and Au+1, Ad and Ad+1, and CY and outputs the result to R, R+1.

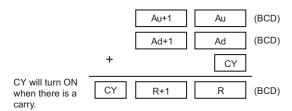


Hint

• To clear the Carry Flay (CY), execute the Clear Carry (CLC(041)) instruction.

Example Programming

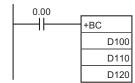


When CIO 0.00 is ON in the following example, D100, D110, and CY will be added as 4-digit BCD values, and the result will be output to D120.

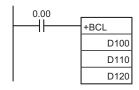

When CIO 0.00 is ON in the following example, D101, D100, D111, D110, and CY will be added as 8-digit BCD values, and the result will be output to D121 and D120.



Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY SUBTRACT WITHOUT CARRY	_	@-	410	Subtracts 4-digit (single-word) hexadecimal data and/or constants.
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L	@-L	411	Subtracts 8-digit (double-word) hexadecimal data and/or constants.

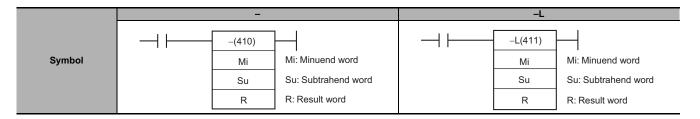

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands

Operand	Description	Data	type	Size			
Operand	Description	-	-L	-	-L		
Mi	-: Minuend word -L: First minuend word	INT	DINT	1	2		
Su	-: Subtrahend word -L: First subtrahend word	INT	DINT	1	2		
R	-: Result word -L: First result word	INT	DINT	1	2		

Operand Specifications

А	Area		Word addresses							Indirect DM/EM addresses		Con-	Registers			тк	CF	Pulse	TR
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			bits	bits
_	MI, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
_	R	OK	OK		OK	OK	OK	OK	OK	OK	OK		OK		OK .				<u> </u>
1	Mi, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК	ОК				
L	R	OK	JK		OK	OK	OK	OK	OK	OK	OK OK			OK	OK .				


Flags

News	Labal	Oper	ration
Name	Label	-	-L
Error Flag	ER	OFF	OFF
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.
Carry Flag	CY	ON when the subtraction results in a borrow. OFF in all other cases.	ON when the subtraction results in a borrow. OFF in all other cases.
Overflow Flag	OF	ON when the result of subtracting a negative number from a positive number is in the range 8000 to FFFF hex. OFF in all other cases.	ON when the result of subtracting a negative number from a positive number is in the range 80000000 to FFFFFFFF hex. OFF in all other cases.
Underflow Flag	UF	ON when the result of subtracting a negative number from a positive number is in the range 0000 to 7FFF hex. OFF in all other cases.	ON when the result of subtracting a positive number from a negative number is in the range 00000000 to 7FFFFFFF hex. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.	ON when the leftmost bit of the result is 1. OFF in all other cases.

Function

• –

-(400) subtracts the binary values in Su from Mi and outputs the result to R. When the result is negative, it is output to R as a 2's complement.

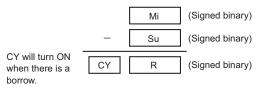

● -L


-L(411) subtracts the binary values in Su and Su+1 from Mi and Mi+1 and outputs the result to R, R+1. When the result is negative, it is output to R and R+1 as a 2's complement.




Hint

• 2's Complement

A 2's complement is the value obtained by subtracting each binary digit from 1 and adding one to the result. For example, the 2's complement for 1101 is calculated as follows: 1111 (F hexadecimal) – 1101 (D hexadecimal) + 1 (1 hexadecimal) = 0011 (3 hexadecimal). The 2's complement for 3039 (hexadecimal) is calculated as follows: FFFF (hexadecimal) – 3039 (hexadecimal) + 0001 (hexadecimal) – CFC7 (hexadecimal). Therefore, in case of 4-digit hexadecimal value, the 2's complement can be calculated as follows: FFFF (hexadecimal) – a (hexadecimal) + 0001 (hexadecimal) = b (hexadecimal). To obtain the true number from the 2's complement b (hexadecimal): a (hexadecimal) = 10000 (hexadecimal) – b (hexadecimal). For example, to obtain the true number from the 2's complement CFC7 (hexadecimal): 10000 (hexadecimal) – CFC7 = 3039.

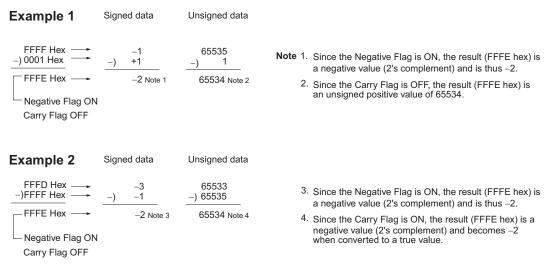

20F55A10 - B8A360E3 = -97AE06D3. (Hexadecimal)

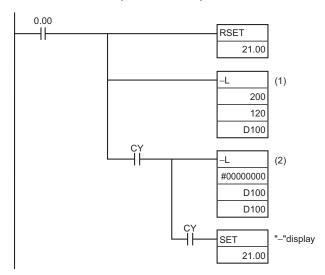

In this example, the eight-digit binary value in CIO 121 and CIO 120 is subtracted from the value in CIO 201 and CIO 200, and the result is output in eight-digit binary to D101 and D100. If the result is negative, the instruction at (2) will be executed, and the actual result will then be output to D101 and D100.

Subtraction at (1)

Su+1: CIO 121 Su: CIO 120

B 8 A 3 6 0 E 3

CY R+1: D101 R+1: D100
1 6 8 5 1 F 9 2 D

The Carry Flag (CY) is ON, so the result is subtracted from 0000 0000 to obtain the actual number.

Subtraction at (2)



Su+1: D101 Su: D100 - 6 8 5 1 F 9 2 D

CY R+1: D101 R+1: D100

1 9 7 A E 0 6 D 3


Final Subtraction Result

Su+1: D101 Su: D100
- 6 8 5 1 F 9 2 D


CY R+1: D101 R+1: D100
1 9 7 A E 0 6 D 3

The Carry Flag (CY) is turned ON, so the actual number is -97AE06D3. Because the content of D101 and D100 is negative, CY is used to turn ON CIO 21.00 to indicate this.

Example Programming

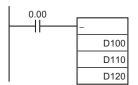

When CIO 0.00 is ON in the following example, D110 will be subtracted from D100 as 4-digit signed binary values and the result will be output to D120.

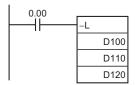


When CIO 0.00 is ON in the following example, D111 and D110 will be subtracted from D101 and D100 as 8-digit signed binary values and the result will be output to D121 and D120.

If the result of the subtraction is a negative number (Mi<Su or Mi+1, Mi <Su+1, Su), the result is output as the 2's complement and the Carry Flag (CY) will turn ON to indicate that the result of the subtraction is negative. To convert the 2's complement to the true number, an instruction which subtracts the result from 0 is necessary using the Carry Flag (CY) as an execution condition.

-C/-CL

Instruction	Mnemonic	Mnemonic Variations		Function			
SIGNED BINARY SUBTRACT WITH CARRY	-C	@-C	412	Subtracts 4-digit (single-word) hexadecimal data and/or constants with the Carry Flag (CY).			
DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL	@-CL	413	Subtracts 8-digit (double-word) hexadecimal data and/or constants with the Carry Flag (CY).			

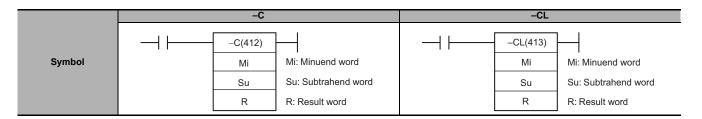

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	-C	-CL	-C	-CL	
Mi	-C: Minuend word -CL: First minuend word	INT	DINT	1	2	
Su	-C: Subtrahend word -CL: First subtrahend word	INT	DINT	1	2	
R	-C: Result word -CL: First result word	INT	DINT	1	2	

Operand Specifications

А	rea	Word addresses						DM	rect /EM esses	Con-	Registers		тк	CF	Pulse bits	TR bits			
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			DIES	DILS
-C	MI, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
	R	5	OK	OK	OK	OK	OK	5	5	OK	OK		5		OK				
-CL	Mi, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
-01	R	ÖK	OIX	OIX	OIX	OIX	OK	OIC	OK	OIC	OK				OK				


Flags

Name	Label	Oper	ation
Name	Labei	-c	-CL
Error Flag	ER	OFF	OFF
Equals Flag	=	ON when the subtraction result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.
Carry Flag	CY	ON when the subtraction results in a borrow. OFF in all other cases.	ON when the results in a borrow. OFF in all other cases.
Overflow Flag	OF	ON when the result of subtracting a negative number and CY from a positive number is in the range 8000 to FFFF hex. OFF in all other cases.	ON when the result of subtracting a negative number and CY from a positive number is in the range 80000000 to FFFFFFFF hex. OFF in all other cases.
Underflow Flag	UF	ON when the result of subtracting a positive number and CY from a negative number is in the range 0000 to 7FFF hex. OFF in all other cases.	ON when the result of subtracting a positive number and CY from a negative number is in the range 00000000 to 7FFFFFF hex. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.	ON when the leftmost bit of the result is 1. OFF in all other cases.

Function


−C

-C(412) subtracts the binary values in Su and CY from Mi, and outputs the result to R. When the result is negative, it is output to R as a 2's complement.

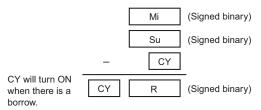

• -CL

-CL(413) subtracts the binary values in Su and Su+1 and CY from Mi and Mi+1, and outputs the result to R, R+1. When the result is negative, it is output to R, R+1 as a 2's complement.

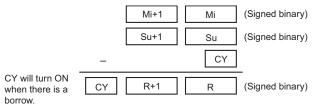

Hint

- To clear the Carry Flag (CY), execute the Clear Carry (CLC(041)) instruction.
- 2's Complement

A 2's complement is the value obtained by subtracting each binary digit from 1 and adding one to the result.

Example: The 2's complement for the binary number 1101 is as follows:

1111 (F hex) - 1101 (D hex) + 1 (1 hex) = 0011 (3 hex).

Example: The 2's complement for the 4-digit hexadecimal number 3039 is as follows:

FFFF hex - 3039 hex + 0001 hex = CFC7 hex.

Accordingly, the 2's complement for the 4-digit hexadecimal value "a" is as follows:

FFFF hex - a hex + 0001 hex = b hex.

And to obtain the true number "a" hex from the 2's complement "b" hex:

a hex + 10000 hex - b hex.


Example: To obtain the true number from the 2's complement CFC& hex:

10000 hex - CFC7 hex = 3039 hex.

Example Programming

0.00 —C —D100 —D110 —D120

When CIO 0.00 is ON in the following example, D110 and CY will be subtracted from D100 as 4-digit signed binary values and the result will be output to D120.

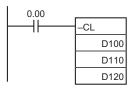


When CIO 0.00 is ON in the following example, D111, D110 and CY will be subtracted from D101 and D100 as 8-digit signed binary values, and the result will be output to D121 and D120.

If the result of the subtraction is a negative number (Mi<Su or Mi+1, Mi <Su+1, Su), the result is output as a 2's complement. The Carry Flag (CY) will turn ON. To convert the 2's complement to the true number, a program which subtracts the result from 0 is necessary, as an input condition of the Carry Flag (CY). The Carry Flag turning ON thus indicates that the result of the subtraction is negative.

-B/-BL

Instruction	Mnemonic	Variations	Function code	Function
BCD SUBTRACT WITHOUT CARRY	-В	@-B	414	Subtracts 4-digit (single-word) BCD data and/or constants.
DOUBLE BCD SUBTRACT WITHOUT CARRY	-BL	@-BL	415	Subtracts 8-digit (double-word) BCD data and/or constants.

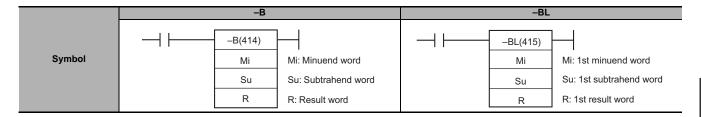

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	-В	-BL	-В	-BL	
Mi	–B: Minuend word –BL: First minuend word	WORD	DWORD	1	2	
Su	–B: Subtrahend word–BL: First subtrahend word	WORD	DWORD	1	2	
R	-B: Result word -BL: First result word	WORD	DWORD	1	2	


Operand Specifications

	Area	Word addresses						DM	rect /EM esses	Con- stants			тк	CF	Pulse bits	TR bits			
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Statits	DR	IR	Indirect using IR			DILS	DILS
<u>-</u> В	MI, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
-Б	R	OK	5	OK	5	5	OK	OK	OK	UK	OK		6		OK				
–BL	Mi, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
-DL	R	OK)K	OK)K)K	OK	OK	OK	JK.	OK.				OK .				

Name	Label	Operation						
Name	Labei	-В	-BL					
Error Flag	ER	ON when Mi is not BCD. ON when Su is not BCD. OFF in all other cases.	ON when Mi and/or Mi +1 are not BCD. ON when Su and/or Su +1 are not BCD. OFF in all other cases.					
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.					
Carry Flag	CY	ON when the subtraction results in a borrow. OFF in all other cases.	ON when the subtraction results in a borrow. OFF in all other cases.					


B

-B(414) subtracts the BCD values in Su from Mi and outputs the result to R. If the result of the subtraction is negative, the result is output as a 10's complement.

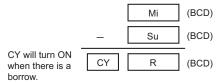

● -BL

-BL(415) subtracts the BCD values in Su and Su+1 from Mi and Mi+1 and outputs the result to R, R+1. If the result is negative, it is output to R, R+1 as a 10's complement.

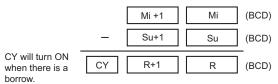


Hint

10's Complement


A 10's complement is the value obtained by subtracting each digit from 9 and adding one to the result. For example, the 10's complement for 7556 is calculated as follows: 9999 - 7556 + 1 = 2444. For a four digit number, the 10's complement of A is 9999 - A + 1 = B. To obtain the true number from the 10's complement B: A = 10000 - B. For example, to obtain the true number from the 10's complement 2444: 10000 - 2444 = 7556.

Example: 9,583,960 - 17,072,641 = -7,488,681. (BCD)

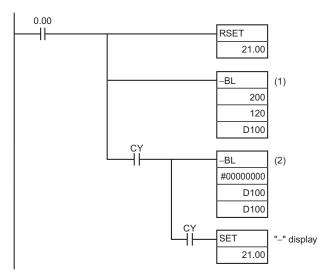


In this example, the eight-digit BCD content of CIO 121 and CIO 120 is subtracted from the content of CIO 201 and CIO 200, and the result is output in eight-digit BCD to D101 and D100. The result is negative, so the instruction at (2) will be executed, and the true value will then be output to D101 and D100.

Subtraction at (1)

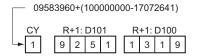


The Carry Flag (CY) is ON, so the result is subtracted from 0000 0000.

Subtraction at (2)

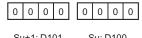




Final Subtraction Result

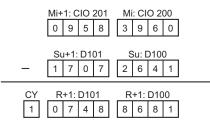


The Carry Flag (CY) will be turned ON, so the actual number is -7,488,681. Because the content of D101 and D100 is negative, CY is used to turn ON CIO 21.00 to indicate this.

Example Programming

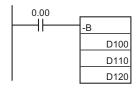

When CIO 0.00 is ON in the following example, D110 is subtracted from D100 as 4-digit BCD values, and the result will be output to D120.

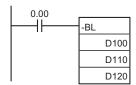


When CIO 0.00 is ON in the following example, D111 and D110 will be subtracted from D101 and D100 as 8-digit BCD values, and the result will be output to D121 and D120.

If the result of the subtraction is a negative number (Mi<Su or Mi+1, Mi <Su+1, Su), the result is output as a 10's complement. The Carry Flag (CY) will turn ON. To convert the 10's complement to the true number, a program which subtracts the result from 0 is necessary, as an input condition of the Carry Flag (CY). The Carry Flag turning ON thus indicates that the result of the subtraction is negative.

-BC/-BCL

Instruction	Mnemonic	Variations	Function code	Function			
BCD SUBTRACT WITH CARRY	–ВС	@-BC	416	Subtracts 4-digit (single-word) BCD data and/or constants with the Carry Flag (CY).			
DOUBLE BCD SUBTRACT WITH CARRY	-BCL	@-BCL	417	Subtracts 8-digit (double-word) BCD data and/or constants with the Carry Flag (CY).			

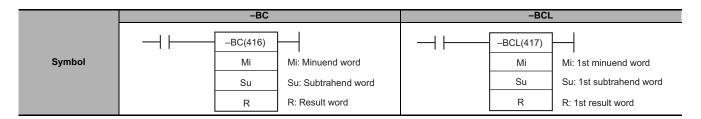

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	-BC	-BCL	-BC	-BCL	
Mi	−BC: Minuend word −BCL: First minuend word	WORD	DWORD	1	2	
Su	−BC: Subtrahend word −BCL: First subtrahend word	WORD	DWORD	1	2	
R	−BC: Result word −BCL: First result word	WORD	DWORD	1	2	


Operand Specifications

Area				v	Vord ad	Idresse	:S			-	rect /EM esses	Con-		Regist	ers	тк	CF	Pulse bits	TR bits
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	Statits	DR	IR	Indirect using IR			DILS	DILS
-BC	MI, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
-60	R	5	5	OK	OK	OK	5	OK	5	OK	OK		5		Ŏ.				
-BCL	Mi, Su	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
-DOL	R	OK	ÖK	OIX	OIX	OIX	ÖK	OIX	ÖK	OIC	OK				OK				

Name	Label	Operation							
Name	Labei	-BC	-BCL						
Error Flag	ER	ON when Mi is not BCD. ON when Su is not BCD. OFF in all other cases.	ON when Mi and/or Mi +1 are not BCD. ON when Su and/or Su +1 are not BCD. OFF in all other cases.						
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.						
Carry Flag	CY	ON when the subtraction results in a borrow. OFF in all other cases.	ON when the subtraction results in a borrow. OFF in all other cases.						


BC

-BC(416) subtracts BCD values in Su and CY from Mi and outputs the result to R. If the result is negative, it is output to R as a 10's complement.

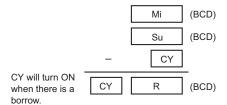

BCL

-BCL(417)subtracts the BCD values in Su, Su+1, and CY from Mi and Mi+1 and outputs the result to R, R+1. If the result is negative, it is output to R, R+1 as a 10's complement.

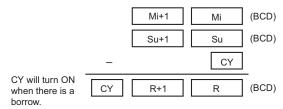


Hint


- To clear the Carry Flay (CY), execute the Clear Carry (CLC(041)) instruction.
- 10's Complement

A 10's complement is the value obtained by subtracting each digit from 9 and adding one to the result. For example, the 10's complement for 7556 is calculated as follows: 9999 - 7556 + 1 = 2444. For a four digit number, the 10's complement of A is 9999 - A + 1 = B. To obtain the true number from the 10's complement B: A = 10000 - B. For example, to obtain the true number from the 10's complement 2444: 10000 - 2444 = 7556.

Example Programming

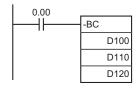

When CIO 0.00 is ON in the following example, D110 and CY will be subtracted from D100 as 4-digit BCD values, and the result will be output to D120.

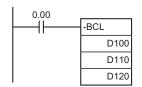


When CIO 0.00 is ON in the following example, D111, D110, and CY will be subtracted from D101 and D100 as 8-digit BCD values, and the result will be output to D121 and D120.

If the result of the subtraction is a negative number (Mi<Su or Mi+1, Mi <Su+1, Su), the result is output as a 10's complement. The Carry Flag (CY) will turn ON. To convert the 10's complement to the true number, a program which subtracts the result from 0 is necessary, as an input condition of the Carry Flag (CY). The Carry Flag turning ON thus indicates that the result of the subtraction is negative.

*/*L

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY MULTIPLY	*	@*	420	Multiplies 4-digit signed hexadecimal data and/or constants.
DOUBLE SIGNED BINARY MULTIPLY	*L	@*L	421	Multiplies 8-digit signed hexadecimal data and/or constants.

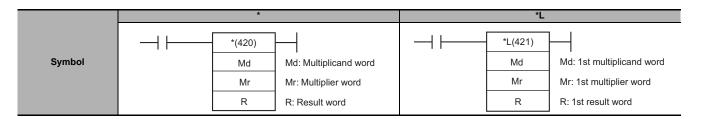

Applicable Program Areas

I	Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Ī	Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	*	*L	*	*L		
Md	*: Multiplicand word *L: First multiplicand word	INT	DINT	1	2		
Mr	*: Multiplier word *L: First multiplier word	INT	DINT	1	2		
R	First result word	DINT	LINT	2	4		

Operand Specifications

A	rea			V	Vord ad	ldresse	:s			Indi DM/ addre	/EM	Con-		Regist	ers	тк	CF	Pulse bits	TR bits
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants DR	DR	IR	Indirect using IR			Dita	DILS
*	Md, Mr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК				
	R	5	5	OK	5	5	OK	5	5	OK	0.0		-	-	OK				
*1	Md, Mr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
	R	5	5	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation							
Name	Label	*	* L						
Error Flag	ER	OFF	OFF						
Equals Flag	=	ON when the result is 0.OFF in all other cases.	ON when the result is 0. OFF in all other cases.						
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.	ON when the leftmost bit of the result is 1. OFF in all other cases.						

• *

*(420) multiplies the signed binary values in Md and Mr and outputs the result to R, R+1.




● *L


*L(421) multiplies the signed binary values in Md and Md+1 and Mr and Mr+1 and outputs the result to R, R+1, R+2, and R+3.



Example Programming

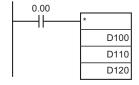


When CIO 0.00 is ON in the following example, D100 and D110 will be multiplied as 4-digit signed hexadecimal values and the result will be output to D120 and D121.

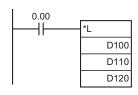

When CIO 0.00 is ON in the following example, D101, D100, D111, and D110 will be multiplied as 8-digit signed hexadecimal values and the result will be output to D123, D122, D121 and D120.


Example in Function Block Definition

In the following example, an array variable is used to get the result from the function block as one word.

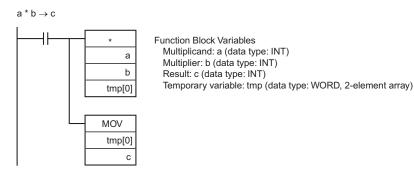

*U/*UL

Instruction	Mnemonic	Variations	Function code	Function
UNSIGNED BINARY MULTIPLY	*U	@*U	422	Multiplies 4-digit unsigned hexadecimal data and/or constants.
DOUBLE UNSIGNED BINARY MULTIPLY	*UL	@*UL	423	Multiplies 8-digit unsigned hexadecimal data and/or constants.

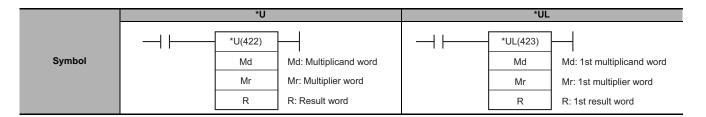

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size			
	Description	*U	*UL	*U	*UL		
Md	*U: Multiplicand word *UL: First multiplicand word	UINT	UDINT	1	2		
Mr	*U: Multiplier word *UL: First multiplier word	UINT	UDINT	1	2		
R	First result word	UDINT	ULINT	2	4		

Operand Specifications

A	Word addresses							Indirect DM/EM addresses Constants			Registers			тк	CF	Pulse bits	TR bits		
			WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR			DILS	Dits
*U	Md, Mr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК				
	R	5	5	OK	OK	5	OK	5	5	OK	0.0		-	-	OK				
*UL	Md, Mr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
	R	OK	OK	OK.	OK.	OK	OK.	OK	OK	OR .	OR				OK .				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0.OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the result is 1. OFF in all other cases.

● *U

*U(420) multiplies the binary values in Md and Mr and outputs the result to R, R+1.




• *UL


*UL(423) multiplies the unsigned binary values in Md and Md+1 and Mr and Mr+1 and outputs the result to R, R+1, R+2, and R+3.



Example Programming

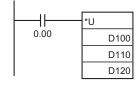


When CIO 0.00 is ON in the following example, D100 and D110 will be multiplied as 4-digit unsigned binary values and the result will be output to D121 and D120.

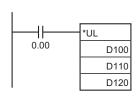

When CIO 0.00 is ON in the following example, D100, D110, D111, and D110 will be multiplied as 8-digit unsigned binary values and the result will be output to D123, D122, D121, and D120.

Example in Function Block Definition

In the following example, an array variable is used to get the result from the function block as one word.

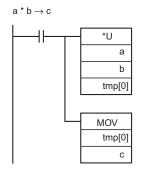


Function Block Variables Multiplicand: a (data type: UINT) Multiplier: b (data type: UINT) Result: c (data type: UINT)

Temporary variable: tmp (data type: WORD, 2-element array)

*B/*BL

Instruction	Mnemonic	Variations	Function code	Function
BCD MULTIPLY	*B	@*B	424	Multiplies 4-digit (single-word) BCD data and/or constants.
DOUBLE BCD MULTIPLY	*BL	@*BL	425	Multiplies 8-digit (double-word) BCD data and/or constants.

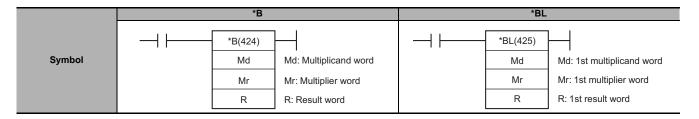

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	*B	*BL	*B	*BL		
Md	*B: Multiplicand word *BL: First multiplicand word	WORD	DWORD	1	2		
Mr	*B: Multiplier word *BL: First multiplier word	WORD	DWORD	1	2		
R	First result word	DWORD	LWORD	2	4		

Operand Specifications

A	Word addresses Area								Indirect DM/EM addresses Constants			Registers			тк	CF	Pulse bits	TR bits	
			WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			DILS	DITS
*B	Md, Mr	ОК	ОК	OK	OK	OK		ОК											
	R	5	5	OK	OK	OK	OK	5	5	OK	5				OK				
*BL	Md, Mr	ОК	ОК	OK	OK			ОК											
	R	5	5	OK	OK	OK	OK	5	5	OK	5				OK				

Name	Label	Oper	Operation						
Name	Label	*B	*BL						
Error Flag	ER	ON when Md is not BCD. ON when Mr is not BCD. OFF in all other cases.	ON when Md and/or Md+1 are not BCD. ON when Mr and/or Mr +1 are not BCD. OFF in all other cases.						
Equals Flag	=	ON when the result is 0. OFF in all other cases.	ON when the result is 0. OFF in all other cases.						

● *B

*B(424) multiplies the BCD content of Md and Mr and outputs the result to R, R+1.




● *BL


*BL(425) multiplies BCD values in Md and Md+1 and Mr and Mr+1 and outputs the result to R, R+1, R+2, and R+3.



Example Programming

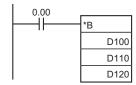


When CIO 0.00 is ON in the following example, D100 and D110 will be multiplied as 4-digit BCD values and the result will be output to D121 and D120.

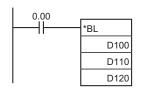

When CIO 0.00 is ON in the following example, D101, D100, D111, and D110 will be multiplied as 8-digit unsigned BCD values and the result will be output to D123, D122, D121 and D120.

• Example in Function Block Definition

In the following example, an array variable is used to get the result from the function block as one word.

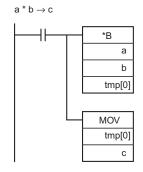

Function Block Variables

Multiplicand: a (data type: WORD)


Multiplier: b (data type: WORD)

Result: c (data type: WORD)

Temporary variable: tmp (data type: WORD, 2-element array)

/, /L

Instruction	Mnemonic	nonic Variations Function code		Function
SIGNED BINARY DIVIDE	/	@/	430	Divides 4-digit (single-word) signed hexadecimal data and/or constants.
DOUBLE SIGNED BINARY DIVIDE	/L	@/L	431	Divides 8-digit (double-word) signed hexadecimal data and/or constants.

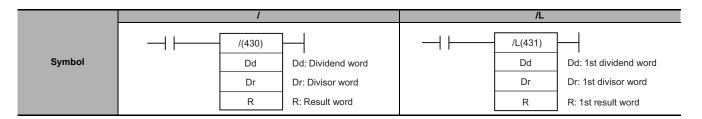

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	1	/L	1	/L		
Dd	/: Dividend word /L: First dividend word	INT	DINT	1	2		
Dr	/: Divisor word /L: First divisor word	INT	DINT	1	2		
R	First result word	DWORD	LWORD	2	4		


Operand Specifications

A	Word addresses							Indirect DM/EM addresses Constants			Registers			тк	CF	Pulse bits	TR bits		
			WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	Stants	DR	IR	Indirect using IR			DILS	DITS
	Dd, Dr	ОК	ОК	ОК	ОК	OK	OK		ОК										
	R	5	5	OK	OK	OK	OK	5	5	OK	0.0		-		OK				
/L	Dd, Dr	ОК	ОК	ОК	ОК	OK			OK										
/L	R	5	5	OK	OK	OK	OK	5	5	OK	0.0				OK				

Name	Label	Operation
Error Flag	ER	ON when the divisor is 0.OFF in all other cases.
Equals Flag	=	 ON when as a result of the division, R/R+1, R is 0. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the R/R+1, R is 1. OFF in all other cases.

• /


/(430) divides the signed binary (16 bit) values in Dd by those in Dr and outputs the result to R, R+1. The quotient is placed in R and the remainder in R+1.

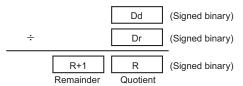

Note Division of hexadecimal #8000 by #FFFF is undefined.


• /L

/L(431) divides the signed binary values in Dd and Dd+1 by those in Dr and Dr+1 and outputs the result to R, R+1, R+2, and R+3. The quotient is output to R and R+1 and the remainder is output to R+2 and R+3.

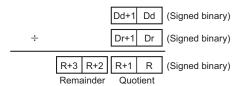


Note Division of hexadecimal #80000000 by #FFFFFFF is undefined.

Example Programming

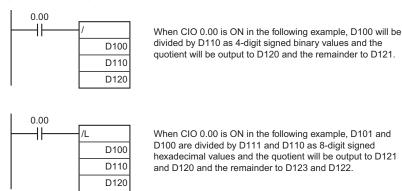


• Example in Function Block Definition

In the following example, an array variable is used to get the quotient and remainder from the function block.

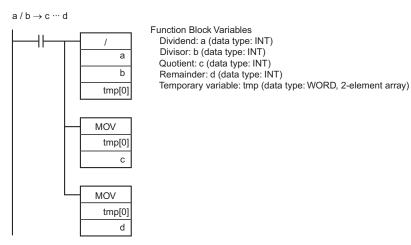

/U, /UL

Instruction	Mnemonic	Variations	Function code	Function
UNSIGNED BINARY DIVIDE	/U	@/U	432	Divides 4-digit (single-word) unsigned hexadecimal data and/or constants.
DOUBLE UNSIGNED BINARY DIVIDE	/UL	@/UL	433	Divides 8-digit (double-word) unsigned hexadecimal data and/or constants.

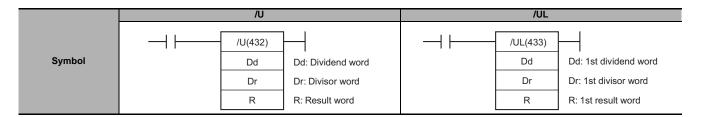

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size			
Operand	Description	/U	/UL	/U	/UL		
Dd	/U: Dividend word /UL: First dividend word	UINT	UDINT	1	2		
Dr	/U: Divisor word /UL: First divisor word	UINT	UDINT	1	2		
R	First result word	DWORD	LWORD	2	4		


Operand Specifications

A	rea		Word addresses						Indirect DM/EM addresses Con-		Registers			тк	CF	Pulse bits	TR bits		
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants DR		IR	Indirect using IR			DILS	DIES
/U	Dd, Dr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК				
	R	5	5	OK	OK	5	OK	5	5	OK	OK		-		OK				
/UL	Dd, Dr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
/OL	R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	ON when the divisor is 0.OFF in all other cases.
Equals Flag	=	 ON when as a result of the division R/R+1, R is 0. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of the R/R+1, R is 1. OFF in all other cases.


/U

/U(432) divides the unsigned binary values in Dd by those in Dr and outputs the quotient to R and the remainder to R+1.

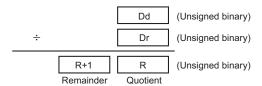


• /UL


/UL(433) divides the unsigned binary values in Dd and Dd+1 by those in Dr and Dr+1 and outputs the quotient to R, R+1 and the remainder to R+2, and R+3.

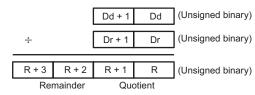

Example Programming

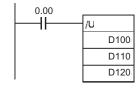


When CIO 0.00 is ON in the following example, D100 will be divided by D110 as 4-digit unsigned binary values and the quotient will be output to D120 and the remainder will be output to D121.

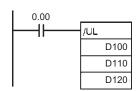

When CIO 0.00 is ON in the following example, D100 and D101 will be divided by D111 and D110 as 8-digit unsigned hexadecimal values and the quotient will be output to D121 and D120 and the remainder to D123 and D122.

• Example in Function Block Definition

In the following example, an array variable is used to get the quotient and remainder from the function block.

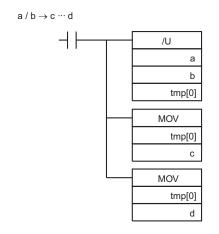

Function Block Variables

Dividend: a (data type: UINT) Divisor: b (data type: UINT)


Quotient: c (data type: UINT)

Remainder: d (data type: UINT)

Temporary variable: tmp (data type: WORD, 2-element array)

/B, /BL

Instruction	Mnemonic	Variations	Function code	Function
BCD DIVIDE	/В	@/B	434	Divides 4-digit (single-word) BCD data and/or constants.
DOUBLE BCD DIVIDE	/BL	@/BL	435	Divides 8-digit (double-word) BCD data and/or constants.

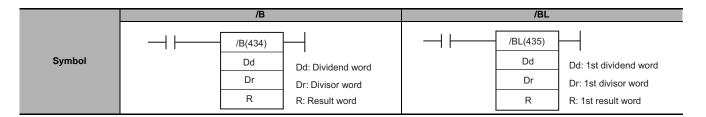

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size			
	Description	/B	/BL	/B	/BL		
Dd	/B: Dividend word /BL: First dividend word	WORD	DWORD	1	2		
Dr	/B: Divisor word /BL: First divisor word	WORD	DWORD	1	2		
R	First result word	DWORD	LWORD	2	4		


Operand Specifications

A	rea		Word addresses						Indi DM/ addre	/EM	VI Ses Con-		Registers			CF	Pulse bits	TR bits	
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants DR		IR	Indirect using IR			DILS	DILS
*B	Dd, Dr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		ОК				
	R	5	5	OK	OK	5	OK	5	5	OK	0.0		-	-	OK				
*BL	Dd, Dr	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
DL	R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation							
Name	Labei	/B	/BL						
Error Flag	ER	ON when Dd is not BCD. ON when Dr is not BCD. ON when the divisor is 0. OFF in all other cases.	 ON when Dd, Dd+1 is not BCD. ON when Dr, Dr +1 is not BCD. ON when the divisor is 0. OFF in all other cases. 						
Equals Flag	=	ON when as a result of the division R is 0. OFF in all other cases.	 ON when as a result of the division R+1, R is 0. OFF in all other cases. 						


/B

/B(434) divides the BCD content of Dd by those of Dr and outputs the quotient to R and the remainder to R+1.

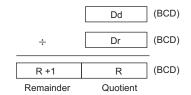


• /BL


/BL(435) divides BCD values in Dd and Dd+1 by those in Dr and Dr+1 and outputs the quotient to R, R+1 and the remainder to R+2, R+3.

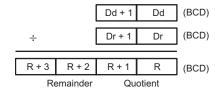

Example Programming

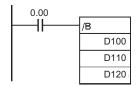


When CIO 0.00 is ON in the following example, D100 will be divided by D110 as 4-digit BCD values and the quotient will be output to D120 and the remainder to D121.

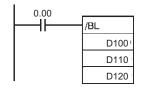

When CIO 0.00 is ON in the following example, D101 and D100 will be divided by D111 and D110 as 8-digit BCD values and the quotient will be output to D121 and D120 and the remainder to D123 and D122.

• Example in Function Block Definition

In the following example, an array variable is used to get the quotient and remainder from the function block.

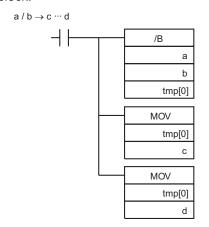


Function Block Variables
Dividend: a (data type: WORD)
Divisor: b (data type: WORD)
Quotient: c (data type: WORD)

Remainder: d (data type: WORD)
Temporary variable: tmp (data type: WORD, 2-element array)

Conversion Instructions

BIN/BINL

Instruction	Mnemonic	Variations	Function code	Function
BCD TO BINARY	BIN	@BIN	023	Converts BCD data to binary data.
DOUBLE BCD TO DOUBLE BINARY	BINL	@BINL	058	Converts 8-digit BCD data to 8-digit hexadecimal (32-bit binary) data.

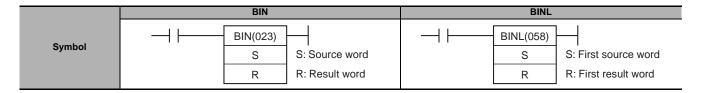

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	BIN	BINL	BIN	BINL		
S	BINL: First source word	WORD	DWORD	1	2		
R	BIN: Results word BINL: First result word	UINT	UDINT	1	2		

Operand Specifications

Area				W	ord ad	Idress	es			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits
BIN	S R	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
BINL	S R	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				

Name	Label	Oper	Operation							
Name	Labei	BIN	BINL							
Error Flag	ER	ON if the content of S is not BCD. OFF in all other cases.	ON if the contents of S+1, S are not BCD. OFF in all other cases.							
Equals Flag	=	ON if the result is 0000. OFF in all other cases.	ON if the result is 0. OFF in all other cases.							
Negative Flag	N	OFF	OFF							

BIN

BIN(023) converts the BCD data in S to binary data and $_{S}$ (BCD) \longrightarrow R (BIN) writes the result to R.


The following diagram shows an example BCD-to-binary conversion.

BINL

BINL(058) converts the 8-digit BCD data in S and S+1 to 8-digit hexadecimal (32-bit binary) data and writes the result to R and R+1





The following diagram shows an example of 8-digit BCD-to-binary conversion.

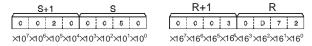

Example Programming


When CIO 0.00 is ON in the following example, the 8-digit BCD value in CIO 0010 and CIO 0011 is converted to hexadecimal and stored in D200 and D201.

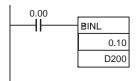

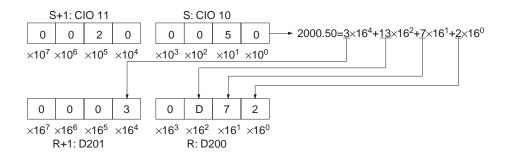


In this example, N words of BCD data is converted to binary data.

If N = 3, the three words of BCD starting from D10 will be converted to binary data one word at a time when CIO 0.00 turns ON. The resulting binary data will be stored starting from D100.

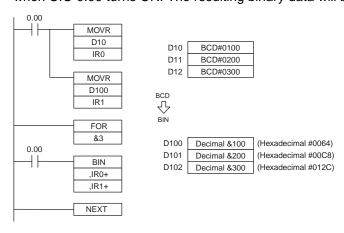

BCD/BCDL

Instruction	Mnemonic	Variations	Function code	Function
BINARY TO BCD	BCD	@BCD	024	Converts a word of binary data to a word of BCD data.
DOUBLE BINARY TO DOUBLE BCD	BCDL	@BCDL	059	Converts 8-digit hexadecimal (32-bit binary) data to 8-digit BCD data.

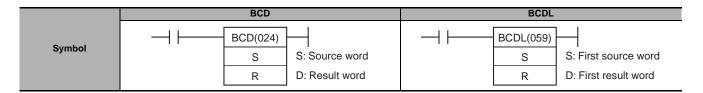

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	BCD	BCDL	BCD	BCDL	
S	BCD: Source word BCDL: First source word	UINT	UDINT	1	2	
R	BCD: Result word BCDL: First result word	WORD	DWORD	1	2	

S: Source Word (BCD)/First Source Word (BCDL)

BCE

S must be between 0000 and 270F hexadecimal (0000 and 9999 decimal).

BCDL

The content of S+1 and S must be between 0000 0000 and 05F5 E0FF hexadecimal (0000 0000 and 9999 9999 decimal).

Note S to S+1 and D to D+1 must each be the same area type.

Operand Specifications

Area			W	ord ad	dresse	es			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR	
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits
BCD	S R	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК	ОК	ОК		OK		ОК				
BCDL	S R	ок	ок	ОК	ок	ОК	ОК	ок	ОК	ОК	OK				ОК				


Name	Label	Oper	ation
Name	Label	BCD	BCDL
Error Flag	ER	ON if the content of S exceeds 270F (9999 decimal). OFF in all other cases.	ON if the contents of S and S+1 exceed 05F5 E0FF (9999 9999 decimal). OFF in all other cases.
Equals Flag	=	ON if the result is 0000. OFF in all other cases.	ON if the result is 0. OFF in all other cases.

• BCD

 $\ensuremath{\mathsf{BCD}}(024)$ converts the binary data in S to BCD data and writes the result to R.



The following diagram shows an example BCD-to-binary conversion.

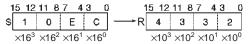

BCDL

BCDL(059) converts the 8-digit hexadecimal (32-bit binary) data in S and S+1 to 8-digit BCD data and writes the result to R and R+1.





The following diagram shows an example of 8-digit BCD-to-binary conversion.



Example Programming


When CIO 0.00 is ON in the following example, the hexadecimal value in CIO 11 and CIO 10 is converted to a BCD value and stored in D100 and D101.

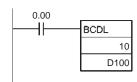


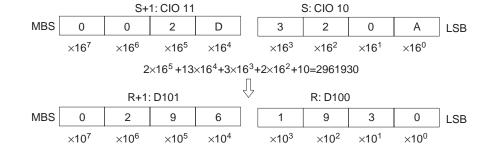

• In this example, N words of binary data is converted to BCD data.


If N = 3, the three words of binary starting from D10 will be converted to binary data one word at a time when CIO 0.00 turns ON. The resulting BCD data will be stored starting from D100.

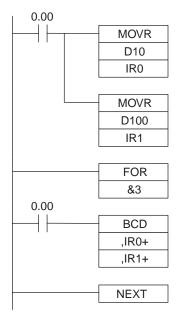

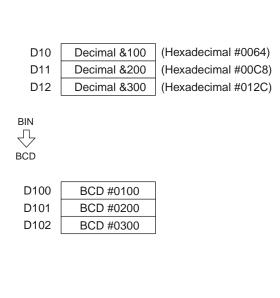

NEG/NEGL

Instruction	Mnemonic	Variations	Function code	Function
2'S COMPLEMENT	NEG	@NEG	160	Calculates the 2's complement of a word of hexadecimal data.
DOUBLE 2'S COMPLEMENT	NEGL	@NEGL	161	Calculates the 2's complement of two words of hexadecimal data.

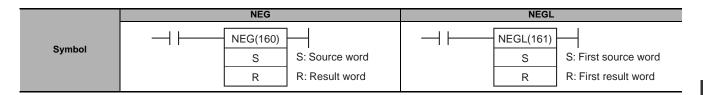

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	ОК	OK	ОК

Operands

Operand	Description	Data	type	Size		
Operand	Description	NEG	NEGL	NEG	NEGL	
S	NEG: Source word NEGL: First source word	WORD	DWORD	1	2	
R	NEG: Result word NEGL: First result word	UINT	UDINT	1	2	

Operand Specifications

Area			w	ord ad	dresse	es			Indirect DM/EM addresses Con		Con-	Registers			Flags		Pulse	TR	
Alea	Area		WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
NEG -	S R	ок	ОК	ОК	ок	ОК	ОК	ОК	ОК	OK	OK	OK 	ОК		ОК				
NEGL	S R	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK	OK 			ОК				

Name	Label	Operation						
Error Flag	ER	OFF						
Equals Flag	=	ON if the result is 0000/0000 0000. OFF in all other cases.						
Negative Flag	N	ON if bit 15 of the result is ON. OFF in all other cases.						

NEG

NEG(160) calculates the 2's complement of S and writes the result to R. The 2's complement calculation basically reverses the status of the bits in S and adds 1.

2's complement (Complement + 1) (S) (R)

Note The result for 8000 hex will be 8000 hex.

NEGL

NEGL(161) calculates the 2's complement of S+1 and S and writes the result to R+1 and R. The 2's complement calculation basically reverses the status of the bits in S+1 and S and adds 1.


Note The result for 8000 0000 hex will be 8000 0000 hex.

Hint


• This operation (reversing the status of the bits and adding 1) is equivalent to subtracting the content of S/S+1 and S from 0000/0000 0000.

Example Programming

When CIO 0.00 is ON in the following example, NEG(160) calculates the 2's complement of the content of D100 and writes the result to D200.

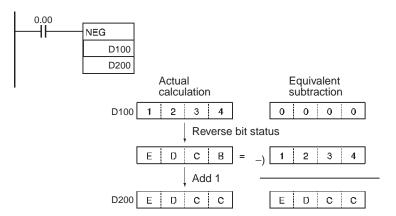


When CIO 0.00 is ON in the following example, NEGL(161) calculates the 2's complement of the content of D101 and D100 and writes the result to D201 and D200.

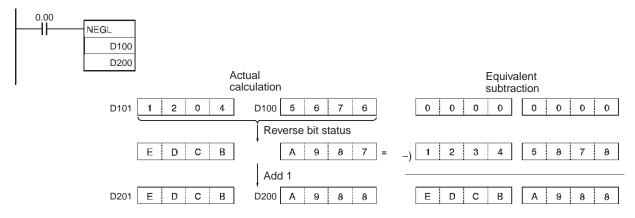

SIGN

Instruction	Mnemonic	Variations	Function code	Function	
16-BIT TO 32-BIT SIGNED BINARY	SIGN	@SIGN	600	Expands a 16-bit signed binary value to its 32-bit equivalent.	

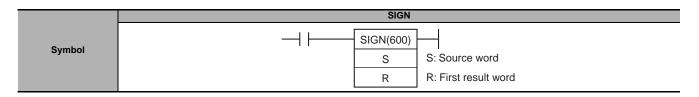

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	Source word	WORD	1		
R	First result word	DINT	2		

R: First result word

R: Contents of S

R+1: #0000 or #FFFF (hex)

Note R and R+1 must be in the same data area.


Operand Specifications

	Area		Word addresses					Indirect addre		Con-	Registers			Flags		Pulse	TR		
	Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
_	S	ОК	ОК	ОК	ОК	ОК	OK	OK	ОК	OK	OK	OK	OK		OK				T
	R	OK.	OK.	OK.	OK.	OK.	OK	OR	OK.	OK	OK				OK				

Name	Label	Operation					
Error Flag	ER	OFF					
Equals Flag	=	ON if the result is 0000 0000. OFF in all other cases.					
Negative Flag	N	ON if bit 15 of R+1 is ON. OFF in all other cases.					


SIGN(600) converts the 16-bit signed binary number in S to its 32-bit signed binary equivalent and writes the result in R+1 and R.

The conversion is accomplished by copying the content of S to R and writing FFFF to R+1 if bit 15 of S is 1 or writing 0000 to R+1 if bit 15 of S is 0.

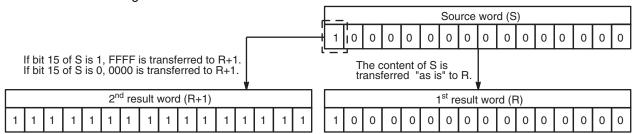


Example Programming

When CIO 0.00 is ON in the following example, SIGN(600) converts the 16-bit signed binary content of D100 (#8000 = -32,768 decimal) to its 32-bit equivalent (#FFFF 8000 = -32,768 decimal) and writes that result to D201 and D200.

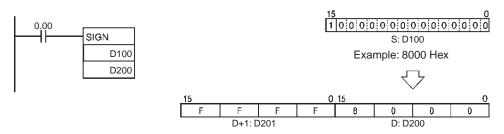

MLPX

Instruction	Mnemonic	Variations	Function code	Function
DATA DECODER	MLPX	@MLPX	076	Reads the numerical value in the specified digit (or byte) in the source word with 4-to 16 conversion (or 8-to-256 conversion), turns ON the corresponding bit in the result word, and turns OFF all other bits in the result word.

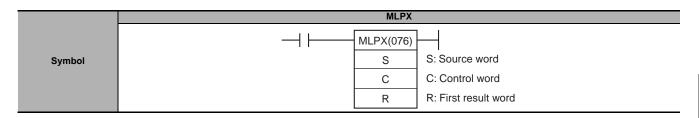

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word	UINT	1
С	Control word	UINT	1
R	First result word	UINT	Variable

• 4-to-16 bit decoder

S: Source Word

	15 12	11 8	7 4	3	0
S	Digit 3	Digit 2	Digit 1	Digit 0	
	Digita fram	the etertine	diait anina	loft are	

Digits from the starting digit going left are decoded

(Returns to digit 3 after digit 0)

R: First Result Word

D: Decoding result of 1st digit of decoded digits


D+1: Decoding result of 2nd digit of decoded digits

D+2: Decoding result of 3rd digit of decoded digits

D+3: Decoding result of 4th digit of decoded digits

Note The result words must be in the same data area.

C: Control Word

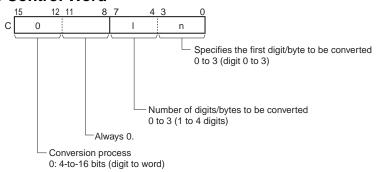

8-to-256 bit conversion

S: Source Word




R: First Result Word

D+15 to D: Decoding result of 1st digit of decoded digits D+31 to D+16:

Decoding result of 2nd digit of decoded digits

Note The result words must be in the same data area.

C: Control Word

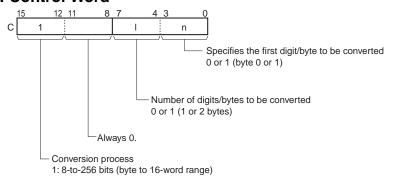

Operand Specifications

Aron		Word addresses						Word addresses Indirect DM/EM addresses Con-				Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S												OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
R																		

Flags


Name	Label	Operation				
Error Flag	ER	ON if C is not within the specified ranges.OFF in all other cases.				

Function

MLPX(076) can perform 4-to-16 bit or 8-to-256 bit conversions. Set the leftmost digit of C to 0 to specify 4-to-16 bit conversion and set it to 1 to specify 8-to-256 bit conversion.


4-to-16 bit Conversion

When the leftmost digit of C is 0, MLPX(076) takes the value of the specified digit in S (0 to F) and turns ON the corresponding bit in the result word. All other bits in the result word will be turned OFF. Up to four digits can be converted.

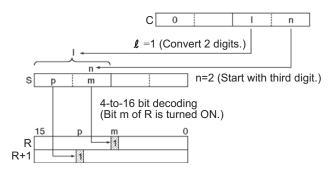

• 8-to-256 bit Conversion


When the leftmost digit of C is 1, MLPX(076) takes the value of the specified byte in S (00 to FF) and turns ON the corresponding bit in the range of 16 result words. All other bits in the result words will be turned OFF. Up to two bytes can be converted.

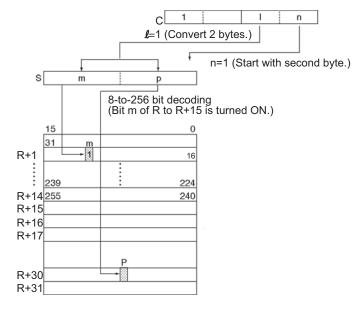

Hint

As shown at right, 4 to 16 decoding consists of taking the 4-bit binary value as the bit number and setting 1 in that bit number and 0 in the other bit numbers of the 16 bits.

As shown at right, 8 to 256 decoding consists of taking the 8-bit binary value as the bit number and setting 1 in that bit number and 0 in the other bit numbers of the 256 bits.

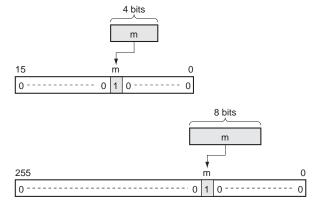

Precaution

4-to-16 bit conversion

When two or more digits are being converted, MLPX(076) will read the digits in S from right to left and will wrap around to the rightmost digit after the leftmost digit, if necessary.


8-to-256 bit conversion


When two bytes are being converted, MLPX(076) will read the bytes in S from right to left and will wrap around to the rightmost byte if the leftmost byte (byte 1) has been specified as the starting byte.

Example Programming

• 4-to-16 bit Conversion


When CIO 0.00 is ON in the following example, MLPX(076) will convert 3 digits in S beginning with digit 1 (the second digit), as indicated by C (#0021). The corresponding bits in D100, D101, and D102 will be turned ON.

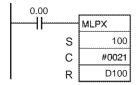


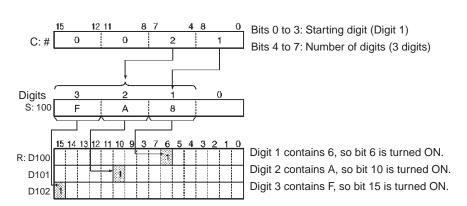

• 8-to-256 bit Conversion


When CIO 0.00 is ON in the following example, MLPX(076) will convert the 2 bytes in S beginning with byte 1 (the leftmost byte), as indicated by C (#1011). The corresponding bits in D100 to D115 and D116 to D131 will be turned ON.

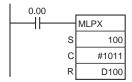

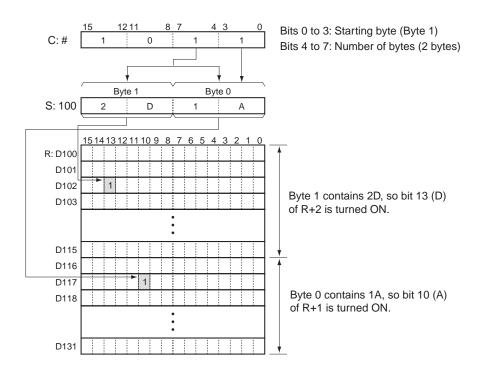


• Example of multi-digit decoding

• Example of 4-to-16 bit decoding

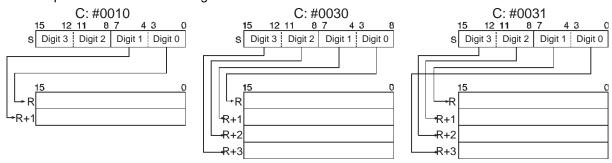


• Example of 8-to-256 bit decoding

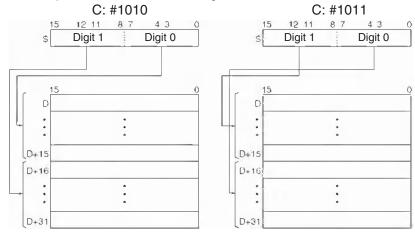

DMPX

Instruction	Mnemonic	Variations	Function code	Function				
DATA ENCODER	DMPX	@DMPX	077	Finds the location of the first or last ON bit within the source word with 16-to-4 conversion (or 256- to-8 conversion), and writes that value to the spec- ified digit (or byte) in the result word.				

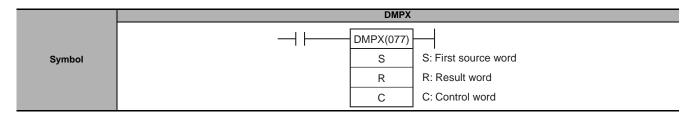

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
R	Result word	UINT	1
С	Control word	UINT	1

• 16-to-4 bit conversion

S: First Source Word

S: 1st digit of digits to be encoded

S+1: 2nd digit of digits to be encoded

S+2: 3rd digit of digits to be encoded

S+3: 4th digit of digits to be encoded


R: Result Word

	15	12	11	8 7	4	3 0
R	Digit	3	Digit 2		Digit 1	Digit 0

The results of encoding of S to S+3 are stored from the starting digit going left (returns to digit 0 after digit 3).

Note The source words must be in the same data area.

C: Control Word

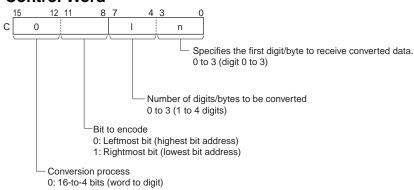


• 256-to-8 bit conversion

S: First Source Word

S+15 to S: 1st digit of digits to be encoded S+31 to S+16: 2nd digit of digits to be encoded


R: Result Word

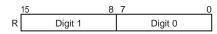

The results of encoding of S to S+15, S+16 to S+31 are stored from the starting digit going left (returns to digit 0 after digit 1).

Note The source words must be in the same data area.

C: Control word

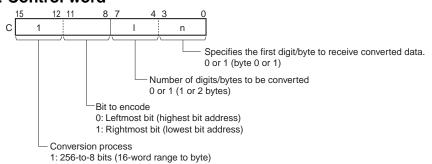

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits k	bits
S																		
R	ОК	OK	OK		OK		OK											
С											OK	OK						

Flags


Name	Label	Operation
Error Flag	ER	 ON if any of the source words contains 0000 hex (i.e., no bit to encode). ON if C is not within the specified ranges. OFF in all other cases.

Function

DMPX(077) can perform 16-to-4 bit or 256-to-8 bit conversions. Set the leftmost digit of C to 0 to specify 16-to-4 bit conversion and set it to 1 to specify 256-to-8 bit conversion.


• 16-to-4 bit Conversion

When the fourth (leftmost) digit of C is 0, DMPX(077) finds the locations of the leftmost or rightmost ON bits in up to 4 source words and writes these locations to R beginning with the specified digit.

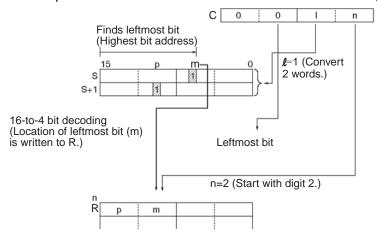

256-to-8 bit Conversion


When the fourth (leftmost) digit of C is 1, DMPX(077) finds the locations of the leftmost (highest bit address) or rightmost (lowest bit address) ON bits in one or two 16-word ranges of source words. The locations of these bits are written to R beginning with the specified byte.

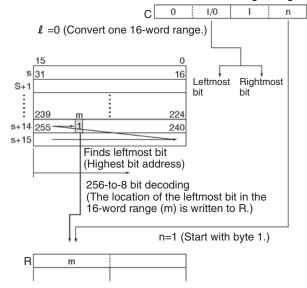

Hint

As shown at right, 16 to 4 encoding consists of converting the bit number (m) of the leftmost or rightmost bit that has 1 set among the 16 bits to a 4-bit binary value.

As shown at right, 256 to 8 encoding consists of converting the bit number (m) of the leftmost or rightmost bit that has 1 set among the 256 bits to an 8-bit binary value.

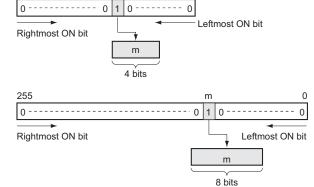

Precaution

• 16-to-4 bit conversion

When two or more digits are being converted, DMPX(077) will write the values to the digits in R from right to left and will wrap around to the rightmost digit after the leftmost digit, if necessary.


• 256-to-8 bit conversion


When two bytes are being converted, DMPX(077) will write the values to the bytes in R from right to left and will wrap around to the rightmost byte if the leftmost byte (byte 1) has been specified as the starting byte.

Example Programming

• 16-to-4 bit Conversion


When CIO 0.00 is ON in the following example, DMPX(077) will find the leftmost ON bits in CIO 100, CIO 101, and CIO 102 and write those locations to 3 digits in R beginning with digit 1 (the second digit), as indicated by C (#0021).

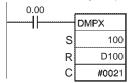


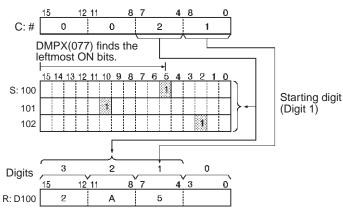



Example of multi-digit decoding

• Example of 16-to-4 bit decoding

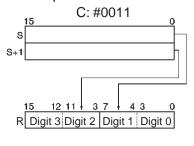


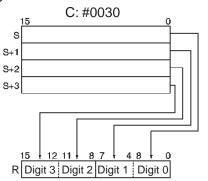

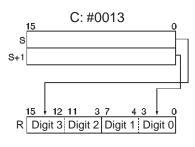

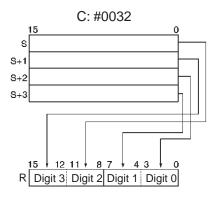

• 256-to-8 bit Conversion

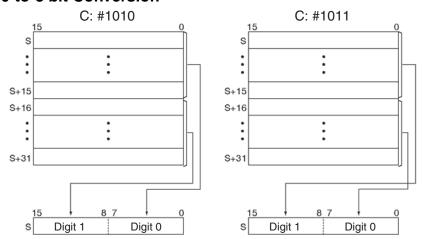

If the conversion data contains 0000 hex, but other data is to be encoded, separate the conversion by using more than one DMPX(077) instructions.

DMPX(077) D0 D100 #0000


DMPX(077) D1 D100 #0001

DMPX(077) D2 D100 #0002

DMPX(077) D3 D100 #0003

ASC

Instruction	Mnemonic	Variations	Function code	Function				
ASCII CONVERT	ASC	@ASC	086	Converts 4-bit hexadecimal digits in the source word into their 8-bit ASCII equivalents.				

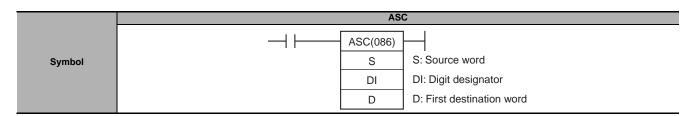

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	Source word	UINT	1
DI	Digit designator	UINT	1
D	First destination word	UINT	Variable

S: Source Word

1	15 12	11 8	7 4	1 3	0
s	Digit 3	Digit 2	Digit 1	Digit 0	

Digits from the starting digit of conversion going left are treated as HEX data and converted to ASCII code (returns to digit 0 after digit 3)

D: First Destination Word


	15 8	7 0
D	Leftmost byte	Rightmost byte
D+1	Leftmost byte	Rightmost byte
D+2	Leftmost byte	Rightmost byte

ASCII code is stored in the left word side. The code is stored from the output starting byte of D in the order rightmost byte, leftmost byte.

Note The destination words must be in the same data area.

DI: Digit Designator

The digit designator specifies various parameters for the conversion, as shown in the following diagram.

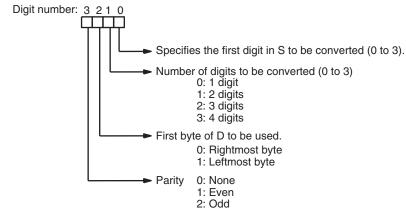

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR							
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits						
S																		ОК						
DI	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK										
D																								


Flags

Name	Label	Operation
Error Flag	ER	ON if the content of Di is not within the specified ranges.OFF in all other cases.

Function

ASC(086) treats the contents of S as 4 hexadecimal digits, converts the designated digit(s) of S into their 8-bit ASCII equivalents, and writes this data into the destination word(s) beginning with the specified byte in D.

A parity specification (bits 12 to 15 of K) is possible in the leftmost bit of the ASCII code data, and this can be converted to an odd or even parity bit (the number of bits that are 1 of the eight bits is adjusted to odd or even).

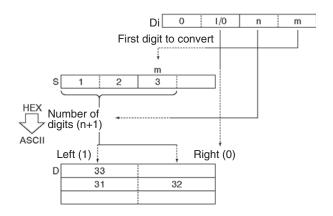

Hint


- The parity bit is appended to the data to enable detection of errors when the data is transmitted. By adding this bit, the number of bits that are 1 in the data can be indicated as odd or even, and if the number of 1s in the received data is not similarly odd or even, it is assumed that an error has occurred.
- With CS1-H/CJ1-H CPU Units with unit version 4.0 or later and CJ2 CPU Units, there are instructions to convert 4, 8, and 16 digits of numeric data to ASCII (STR4(524), STR8(527), and STR16(528)).

Precaution

- When multiple digits are specified in the number of digits to be converted (K), the digits are converted in order from the starting conversion digit going left (returns to digit 0 after digit 3), and the conversion results are stored in order from the output position of D going to the left word side (in units of 8 bits).
- Among the data in the conversion result output word, data in positions that are not to be output are held.
- When converting multiple digits, take care that D+2 and D+2CH do not exceed the area.

Example Programming

When CIO 0.00 is ON in the following example, ASC(086) converts three hexadecimal digits in D100 (beginning with digit 1) into their ASCII equivalents and writes this data to D200 and D201 beginning with the leftmost byte in D200. In this case, a digit designator of #0121 specifies no parity, the starting byte (when writing) = leftmost byte, the number of digits to read = 3, and the starting digit (when reading) = digit 1.

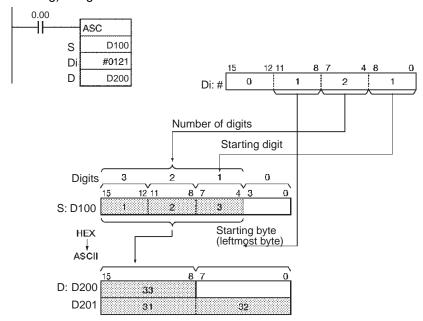

Example of ASCII code conversion

	Content of	conversion	data digits	3		Conversion output data							
Value	Value Bit content				Code	Code (MSB) bit content (LSB)							
0	0	0	0	0	#30	*	0	1	1	0	0	0	0
1	0	0	0	1	#31	*	0	1	1	0	0	0	1
2	0	0	1	0	#32	*	0	1	1	0	0	1	0
3	0	0	1	1	#33	*	0	1	1	0	0	1	1
4	0	1	0	0	#34	*	0	1	1	0	1	0	0
5	0	1	0	1	#35	*	0	1	1	0	1	0	1
6	0	1	1	0	#36	*	0	1	1	0	1	1	0
7	0	1	1	1	#37	*	0	1	1	0	1	1	1
8	1	0	0	0	#38	*	0	1	1	1	0	0	0
9	1	0	0	1	#39	*	0	1	1	1	0	0	1
А	1	0	1	0	#41	*	1	0	0	0	0	0	1
В	1	0	1	1	#42	*	1	0	0	0	0	1	0
С	1	1	0	0	#43	*	1	0	0	0	0	1	1
D	1	1	0	1	#44	*	1	0	0	0	1	0	0
E	1	1	1	0	#45	*	1	0	0	0	1	0	1
F	1	1	1	1	#46	*	1	0	0	0	1	1	0


^{*} Parity bit - changes according to the parity specification.


Parity


It is possible to specify the parity of the ASCII data for use in error control during data transmissions. The leftmost bit of each ASCII character will be automatically adjusted for even, odd, or no parity.


- When no parity (0) is designated, the leftmost bit will always be zero. When even parity (1) is designated, the leftmost bit will be adjusted so that the total number of ON bits is even. When odd parity (2) is designated, the leftmost bit of each ASCII character will be adjusted so that there is an odd number of ON bits. The status of the parity bit does not affect the meaning of the ASCII code.
- Examples of even parity: When adjusted for even parity, ASCII "31" (00110001) will be "B1" (10110001: parity bit turned ON to create an even number of ON bits); ASCII "36" (00110110) will be "36" (00110110: parity bit remains OFF because the number of ON bits is already even).
- Examples of odd parity:
 When adjusted for odd parity, ASCII "36" (00110110) will be "B6" (10110110: parity bit turned ON to create an odd number of ON bits); ASCII "46" (01000110) will be "46" (01000110: parity bit remains OFF because the number of ON bits is already odd).

Examples of Di

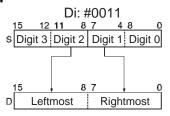

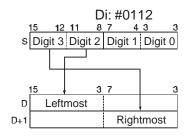


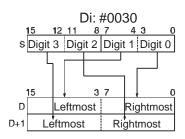

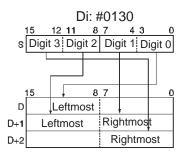

HEX

Instruction	Mnemonic	Variations	Function code	Function
ASCII TO HEX	HEX	@HEX	162	Converts up to 4 bytes of ASCII data in the source word to their hexadecimal equivalents and writes these digits in the specified destination word.

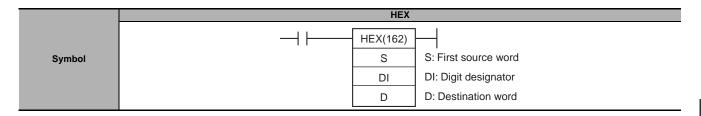

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands


Operand	Description	Data type	Size	
S	First source word	UINT	Variable	
DI	Digit designator	UINT	1	
D	Destination word	UINT	1	

S: First Source Word

15		8 7		0
s	Leftmost byte		Rightmost byte	

The conversion start byte and bytes to the left are treated as ASCII code and converted to hex (returns to the rightmost byte after the leftmost byte.


D: Destination Word

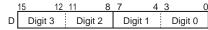

The results of conversion to hex are stored from the starting digit going left (returns to digit 0 after digit 3)

DI: Digit Designator

The digit designator specifies various parameters for the conversion, as shown in the following diagram.

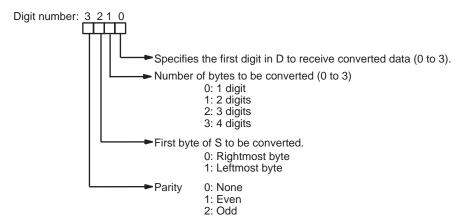

Operand Specifications


Area			W	ord ad	Idresse	es			Indirect DM/EM addresses Con-			Con- Registers				ags	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
DI	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		

Flags

Name	Label	Operation						
Error Flag	ER	 ON if there is a parity error in the ASCII data. ON if the ASCII data in the source words is not equivalent to hexadecimal digits ON if the content of Di is not within the specified ranges. OFF in all other cases. 						

Function

HEX(162) treats the contents of the source word(s) as ASCII data representing hexadecimal digits (0 to 9 and A to F), converts the specified number of bytes to hexadecimal, and writes the hexadecimal data to the destination word beginning at the specified digit. When converting data, the leftmost bit of the ASCII code data can be treated as an odd or even parity bit according to the parity specification.

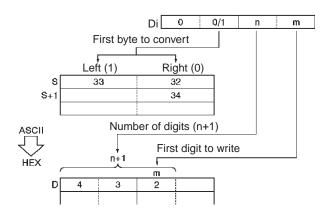

Hint

- The parity bit is appended to the data to enable detection of errors when the data is transmitted. By
 adding this bit, the number of bits that are 1 in the data can be indicated as odd or even, and if the
 number of 1s in the received data is not similarly odd or even, it is assumed that an error has
 occurred.
- With CS1-H/CJ1-H CPU Units with unit version 4.0 or later and CJ2 CPU Units, there are instructions to convert ASCII to 4, 8, and 16 digits of numeric data (NUM4(517), NUM8(520), and NUM16(522)).

Precaution


- When multiple digits are specified in the number of digits to be converted (C), the digits are converted
 in order from the starting conversion position (C) of S going to the left word side, and the conversion
 results are stored in order from the output starting bit (C) of D going to the left (returns to digit 0 after
 digit 3).
- Among the data in the conversion result output word, data of bits that are not to be output are held (kept the same as before).
- The following table shows ASCII data which can be contained in the source word(s) (excluding parity bits) and corresponding hexadecimal digits.

ASCII data (2 hexadecimal digits)	Hexadecimal digits
30 to 39	0 to 9
41 to 46	A to F

Example Programming

When CIO 0.00 is ON in the following example, HEX(162) converts the ASCII data in D100 and D101 according to the settings of the digit designator. (Di=#0121 specifies no parity, the starting byte (when reading) = leftmost byte, the number of bytes to read = 3, and the starting digit (when writing) = digit 1.)

HEX(162) converts three bytes of ASCII data (3 characters) beginning with the leftmost byte of D100 into their hexadecimal equivalents and writes this data to D200 beginning with digit 1.

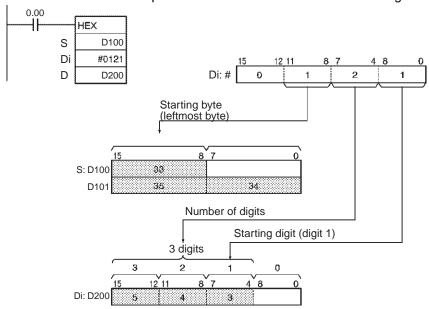

Parity

It is possible to specify the parity of the ASCII data for use in error control during data transmissions. The leftmost bit in each byte is the parity bit. With no parity the parity bit should always be zero, with even parity the status of the parity bit should result in an even number of ON bits, and with odd parity the status of the parity bit should result in an odd number of ON bits.

The following table shows the operation of HEX(162) for each parity setting.

Parity setting (leftmost digit of Di)	Operation of HEX(162)
No parity (0)	HEX(162) will be executed only when the parity bit in each byte is 0. An error will occur if a parity bit is non-zero.
Even parity (1)	HEX(162) will be executed only when there is an even number of ON bits in each byte. An error will occur if a byte has an odd number of ON bits.
Odd parity (2)	HEX(162) will be executed only when there is an odd number of ON bits in each byte. An error will occur if a byte has an even number of ON bits.

407


Output example


	Conversion data										Output result (hex data)			
ASCII code			(MSB) bit co	Value		Bit co	ontent						
#30	*	0	1	1	0	0	0	0	0	0	0	0	0	
#31	*	0	1	1	0	0	0	1	1	0	0	0	1	
#32	*	0	1	1	0	0	1	0	2	0	0	1	0	
#33	*	0	1	1	0	0	1	1	3	0	0	1	1	
#34	*	0	1	1	0	1	0	0	4	0	1	0	0	
#35	*	0	1	1	0	1	0	1	5	0	1	0	1	
#36	*	0	1	1	0	1	1	0	6	0	1	1	0	
#37	*	0	1	1	0	1	1	1	7	0	1	1	1	
#38	*	0	1	1	1	0	0	0	8	1	0	0	0	
#39	*	0	1	1	1	0	0	1	9	1	0	0	1	
#41	*	1	0	0	0	0	0	1	Α	1	0	1	0	
#42	*	1	0	0	0	0	1	0	В	1	0	1	1	
#43	*	1	0	0	0	0	1	1	С	1	1	0	0	
#44	*	1	0	0	0	1	0	0	D	1	1	0	1	
#45	*	1	0	0	0	1	0	1	E	1	1	1	0	
#46	*	1	0	0	0	1	1	0	F	1	1	1	1	


^{*} Parity bit - changes according to the parity specification.

When CIO 0.00 is ON in the following example, HEX(162) converts the ASCII data in D10 beginning with the rightmost byte and writes the hexadecimal equivalents in D300 beginning with digit 1.


The digit designator setting of #1011 specifies even parity, the starting byte (when reading) = rightmost byte, the number of bytes to read = 2, and the starting digit (when writing) = digit 1.)

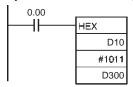


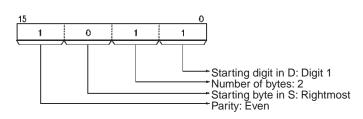


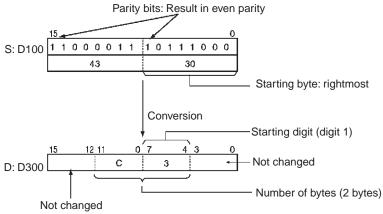

• Example of converting multiple bytes of ASCII code to hex

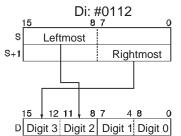


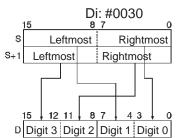

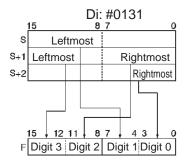

LINE

Instruction	Mnemonic	Variations	Function code	Function
COLUMN TO LINE	LINE	@LINE	063	Converts a column of bits from a 16-word range (the same bit number in 16 consecutive words) to the 16 bits of the destination word.

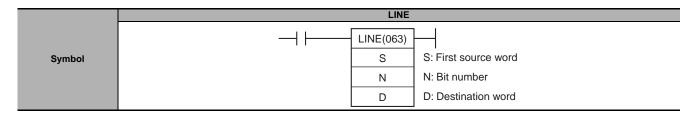


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	WORD	16
N	Bit number	UINT	1
D	Destination word	UINT	1

S: First Source Word

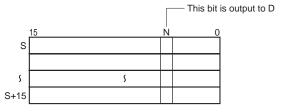


Note S and S+15 must be in the same data area.

N: Bit Number

Specifies the bit number (0000 to 000F or &0 to &15) to be copied from the source words.

D: Destination Word

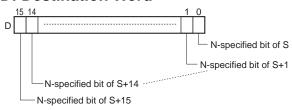

Operand Specifications


Area	Word addresses								Indirect DM/EM addresses Con-		Registers			Flags			TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
D												OK						

Flags

Name	Label	Operation
Error Flag	ER	ON if N is not within the specified range of 0000 to 000F.OFF in all other cases.
Equals Flag	=	ON if D is 0000 after execution. OFF in all other cases.


Function


LINE(063) copies the 16 bits with bit number N from the 16-word range S to S+15 to the destination word D. Bit N of S+m is copied to bit m of D, i.e., bit N of S is copied to bit 00 of D and bit N of S+15 is copied to bit 15 of D.

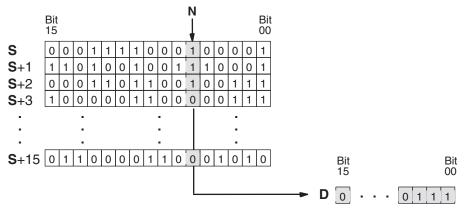

Example Programming


When CIO 0.00 is ON in the following example, LINE(063) copies bit 5 from D100 to D115 to the 16 bits in D200.

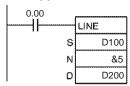

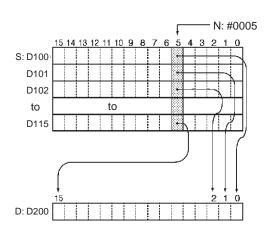

COLM

Instruction	Mnemonic	Variations Function code		Function
LINE TO COLUMN	COLM	@COLM	064	Converts the 16 bits of the source word to a column of bits in a 16-word range of destination words (the same bit number in 16 consecutive words).

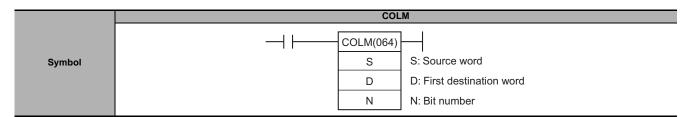

Applicable Program Areas

	Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Ī	Usage	ОК	OK	OK	ОК	OK	OK


Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
D	First destination word	WORD	16
N	Bit number	UINT	1

S: Source word



D: First Destination Word

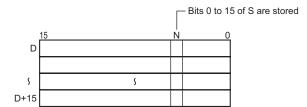

N-specified bit of D: Bit 0 of S is output

N-specified bit of D+1: Bit 1 of S is output

: : :

N-specified bit of D+15: Bit 15 of S is output

N: Bit Number

Specifies the bit number (0000 to 000F or &0 to &15) to be overwritten by the source word. **Note** D and D+15 must be in the same data area.

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con		Registers		Flags		Pulse	TR	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits k	bits
S											OK	OK						
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
N											OK	OK						


Flags

Name	Label	Operation
Error Flag	ER	 ON if N is not within the specified range of 0000 to 000F. OFF in all other cases.
Equal Flag	=	ON if bit N is 0 in all 16 words D to D+15 after execution. OFF in all other cases.

Function


COLM(064) copies the 16 bits from S to the 16 bits with bit number N in the 16-word range D to D+15. Bit m of S is copied to bit N of D+m, i.e., bit 00 of S is copied to bit N of D and bit 15 of S is copied to bit N of D+15.


Data other than the specified bits of the conversion result output word are held (kept the same as before).

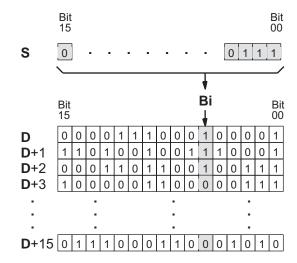

Example Programming


When CIO 0.00 is ON in the following example, COLM(064) copies the 16 bits in D200 (bits 00 through 15) to bit 5 in D100 through D115.

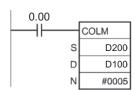

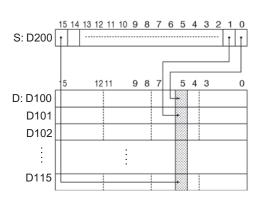

BINS/BISL

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BCD TO BINARY	BINS	@BINS	470	Converts one word of signed BCD data to one word of signed binary data.
DOUBLE SIGNED BCD TO BINARY	BISL	@BISL	472	Converts double signed BCD data to double signed binary data.

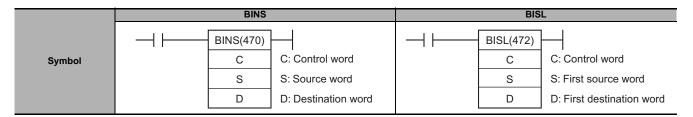

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	BINS	BISL	BINS	BISL	
С	Control word	UINT	UINT	1	1	
S	BINS: Source word BISL: First source word	WORD	DWORD	1	2	
D	BINS: Destination word BISL: First destination word	INT	DINT	1	2	


C: Control Word

Specifies the signed BCD format. C must be 0000 to 0003.


S: Source word

BINS


• C = 0 (Input Data Range: -999 to 999 BCD)

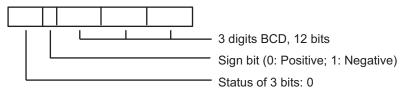


• C = 1 (Input Data Range: -7999 to 7999 BCD)

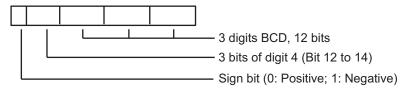

• C = 2 (Input Data Range: -999 to 9999 BCD)

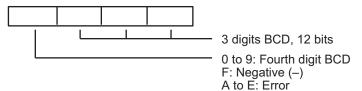


• C = 3 (Input Data Range: -1999 to 9999 BCD)

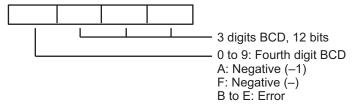


BISL


• C = 0 (Input Data Range: -999 9999 to 999 9999 BCD)

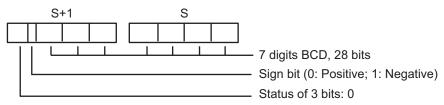


• C = 1 (Input Data Range: -7999 9999 to 7999 9999 BCD)

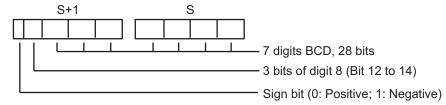

• C = 2 (Input Data Range: -999 9999 to 9999 9999 BCD)

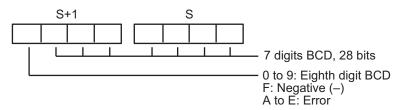

• C = 3 (Input Data Range: -1999 9999 to 9999 9999 BCD)

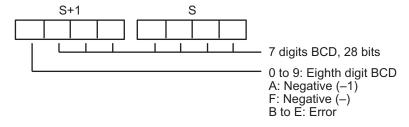

Operand Specifications

BINS

Area			v	Vord ad	ldresse	s			Indirect addre	DM/EM esses	Con-		Regis	ters	Fla	ags		TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF		bits
С											OK							
S	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				
D																		

BISL

Area			v	Vord ad	ldresse	s			Indirect DM/EM addresses Con-				Regis	ters	Fla	ıgs	Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
С											OK	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		


Flags

Name	Label	Operation
Error Flag	ER	 ON if C is not within the specified range of 0000 to 0003. ON if C=0002 and the leftmost digit of S/S+1 is A to E. ON if C=0003 and the leftmost digit of S/S+1 is B to E. ON if the content of S/S+1 and S is not BCD. OFF in all other cases.
Equal Flag	=	ON if D/D+1 contains 0000 0000 after execution. OFF in all other cases.
Negative Flag	N	ON if bit 15 of D/D+1 is ON after execution. OFF in all other cases.

Function

BINS


BINS(470) converts the signed BCD data in S to signed binary data and writes the result in according to the format setting in the control word (C).

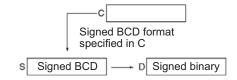

Setting	Signed BCD values	Signed binary values
C=0	−999 to −1 and 0 to 999	FC19 to FFFF and 0000 to 03E7
C=1	−7999 to −1 and 0 to 7999	E0C1 to FFFF and 0000 to 1F3F
C=2	-999 to -1 and 0 to 9999	FC19 to FFFF and 0000 to 270F
C=3	-1999 to -1 and 0 to 9999	F831 to FFFF and 0000 to 270F

BISL

BISL(472) converts the double signed BCD data in S+1 and S to double signed binary data and writes the result in D+1 and D according to the format setting in the control ward (C).

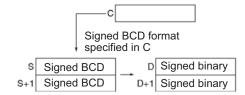

Setting	Signed BCD values	Signed binary values					
C=0	−999 9999 to −1	FF67 6981 to FFFF FFFF					
C=0	0 to 999 9999	0000 0000 to 0098 967F					
C=1	−7999 9999 to −1	FB3B 4C01 to FFFF FFFF					
C=1	0 to 7999 9999	0000 0000 to 04C4 B3FF					
C=2	−999 9999 to −1	FF67 6981 to FFFF FFFF					
C=2	0 to 9999 9999	0000 0000 to 05F5 E0FF					
C=3	−1999 9999 to −1	FECE D301 to FFFF FFFF					
C=3	0 to 9999 9999	0000 0000 to 05F5 E0FF					

Hint


Some Special I/O Units output signed BCD data. Calculations using this data will normally be easier if it is first converted to signed binary data with BINS(470)/B/SL(472).

Example Programming

BINS


BCD Format 0 (C=#0000)

When CIO 0.00 is ON in the following example, the signed BCD data format and range in D100 are checked against the format specified in the control word (0000). The source data is correct, so the signed BCD data in D100 is converted to signed binary and output to D200.

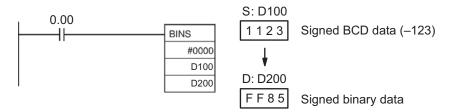

BCD Format 3 (C=#0003)


When CIO 0.01 is ON in the following example, the signed BCD data format and range in D100 are checked against the format specified in the control word (0003). The source data is correct, so the signed BCD data in D300 is converted to signed binary and output to D400.

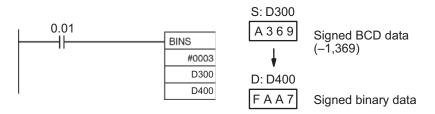

BISL

BCD Format 2 (C=#0002)

When CIO 0.00 is ON in the following example, the double signed BCD data format and range in D101 and D100 are checked against the format specified in the control word (2). The source data is correct, so the double signed BCD data in D101 and D100 is converted to double signed binary and output to D201 and D200.

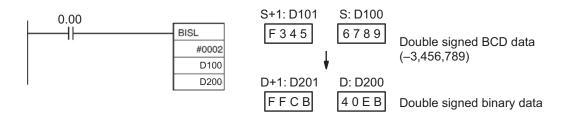

BCDS/BDSL

Instruction	Mnemonic	Variations	Function code	Function
SIGNED BINARY TO BCD	BCDS	@BCDS	471	Converts one word of signed binary data to one word of signed BCD data.
DOUBLE SIGNED BINARY TO BCD	BDSL	@BDSL	473	Converts double signed binary data to double signed BCD data.

		BCDS		BDSL						
Symbol	⊣⊢	BCDS(471)	C: Control word		BDSL(473)	C: Control word				
Symbol										
		S	S: Source word		S	S: First source word				
		D	D: Destination word		D	D: First destination word				
			•			1				

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands

Operand	Description	Data	type	Size			
Operand	Description	BCDS	BDSL	BCDS	BDSL		
С	Control word	UINT	UINT	1	1		
S	BCDS: Source word BDSL: First source word	INT	DINT	1	2		
D	BCDS: Destination word BDSL: First destination word	WORD	DWORD	1	2		

C: Control Word

Specifies the signed BCD format. C must be 0000 to 0003.

S: Source Word

BCDS

Setting	Allowed values for S
C=0	FC19 to FFFF or 0000 to 03E7
C=1	E0C1 to FFFF or 0000 to 1F3F
C=2	FC19 to FFFF or 0000 to 270F
C=3	F831 to FFFF or 0000 to 270F


BDSL

Setting	Allowed values for S+1 and S
C=0	FF67 6981 to FFFF FFFF or 0000 0000 to 0098 967F
C=1	FB3B 4C01 to FFFF FFFF or 0000 0000 to 04C4 B3FF
C=2	FF67 6981 to FFFF FFFF or 0000 0000 to 05F5 E0FF
C=3	FECE D301 to FFFF FFFF or 0000 0000 to 05F5 E0FF


D: Destination Word

BCDS


• C = 0 (Output Data Range: -999 to 999 BCD)

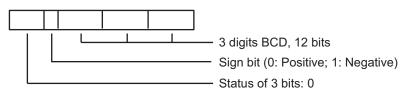


• C = 1 (Output Data Range: -7999 to 7999 BCD)

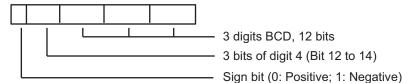

• C = 2 (Output Data Range: -999 to 9999 BCD)

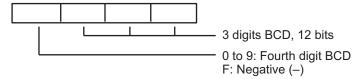


• C = 3 (Output Data Range: -1999 to 9999 BCD)

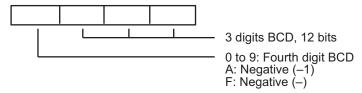


BDSL


• C = 0 (Output Data Range: -999 9999 to 999 9999 BCD)

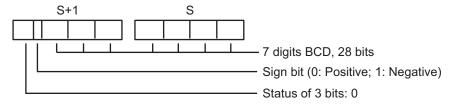


• C = 1 (Output Data Range: -7999 9999 to 7999 9999 BCD)

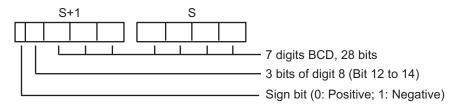

C = 2 (Output Data Range: -999 9999 to 9999 9999 BCD)

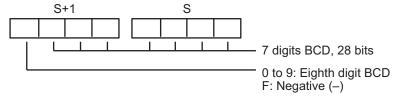

C = 3 (Output Data Range: -1999 9999 to 9999 9999 BCD)

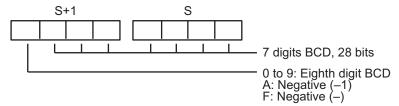

Operand Specifications

BCDS

Area			V	Vord ad	dresse	s			Indirect addre	DM/EM esses	Con-		Regis	ters	Flags		Pulse	TR	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits	
	С											OK							
	S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				
	D																		

BDSL

Area			V	Vord ad	ldresse	s				: DM/EM esses	Con- Registers				Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
С											OK	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		


Flags

Name	Label	Oper	ration
Error Flag	ER	 ON if C is not within the specified range of 0000 to 0003. ON if C=0 and the source data is not within the allowed ranges (FC19 to FFFF or 0000 to 03E7). ON if C=1 and the source data is not within the allowed ranges (E0C1 to FFFF or 0000 to 1F3F). ON if C=2 and the source data is not within the allowed ranges (FC19 to FFFF or 0000 to 270F). ON if C=3 and the source data is not within the allowed ranges (F831 to FFFF or 0000 to 270F). OFF in all other cases. 	ON if C is not within the specified range of 0000 to 0003. Nif C=0 and the source data is not within the range: FF67 6981 to FFFF FFFF or 0000 0000 to 0098 967F. Nif C=1 and the source data is not within the range: FB3B 4C01 to FFFF FFFF or 0000 0000 to 04C4 B3FF. Nif C=2 and the source data is not within the range: FF67 6981 to FFFF FFFF or 0000 0000 to 05F5 E0FF. Nif C=0003 and the source data is not within the range: FECE D301 to FFFF FFFF or 0000 0000 to 05F5 E0FF.
Equal Flag	=	ON if D is 0000 after execution. OFF in all other cases.	
Negative Flag	N	 ON if C=0 or 1 and the result's sign bit is ON after execution ON if C=2 and the leftmost digit of the result is F. ON if C=3 and the leftmost digit of the result is A or F. OFF in all other cases. 	on.

Function

• BCDS

BCDS(471) converts the signed binary data in S to signed BCD data and writes the result in D according to the format setting in the control word (C).

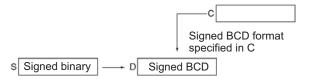


The following table shows the possible signed binary values for each signed BCD format. An error will occur if the source data is not within the allowed range for the specified signed BCD format.

Setting	Signed binary values	Signed BCD values
C=0	FC19 to FFFF and 0000 to 03E7	−999 to −1 and 0 to 999
C=1	E0C1 to FFFF and 0000 to 1F3F	−7999 to −1 and 0 to 7999
C=2	FC19 to FFFF and 0000 to 270F	−999 to −1 and 0 to 9999
C=3	F831 to FFFF and 0000 to 270F	−1999 to −1 and 0 to 9999

BDSL

BDSL(473) converts the double singled binary data in S+1 and S to signed BCD data and writes the result in D+1 and D according to the format setting in the control word (C).

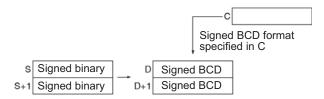

The following table shows the possible signed binary values for each signed BCD format. An error will occur if the source data is not within the allowed range for the specified signed BCD format.

Setting	Signed binary values	Signed BCD values		
C=0000	FF67 6981 to FFFF FFFF	−999 9999 to −1		
C=0000	0000 0000 to 0098 967F	0 to 999 9999		
C=0001	FB3B 4C01 to FFFF FFFF	−7999 9999 to −1		
C=0001	0000 0000 to 04C4 B3FF	0 to 7999 9999		
C=0002	FF67 6981 to FFFF FFFF	−999 9999 to −1		
C=0002	0000 0000 to 05F5 E0FF	0 to 9999 9999		
C=0003	FECE D301 to FFFF FFFF	−1999 9999 to −1		
C=0003	0000 0000 to 05F5 E0FF	0 to 9999 9999		

Precautions

Values of -0 in the source data will be treated as 0 and will not cause an error.


Hint

Some Special I/O Units require signed BCD data inputs. BCDS(471)/BDSL(473) can be used to convert signed binary data for output to these Units.

Example Programming


BCDS

When 0.00 is ON, it is first checked if the data range of D100 is based on the data format specification 0001. Here the check result is okay, so the signed binary data in data memory D100 is converted to signed BCD and output to D200.

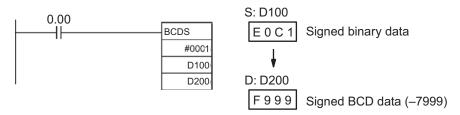


BDSL

When CIO 0.00 is ON in the following example, the double signed binary data in D101 and D100 are checked against the format specified in the control word (0003). The source data is correct, so the double signed binary data in D101 and D100 is converted to double signed BCD and output to D201 and D200.

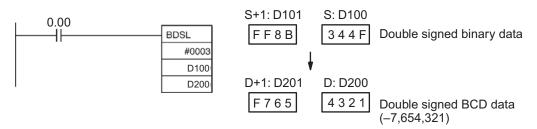

GRY

Instruction	Mnemonic	Variations	Function code	Function
GRAY CODE CONVERT	GRY	@GRY	474	Converts the gray binary code in a specified word to standard binary data, BCD data, or an angle at the specified resolution.

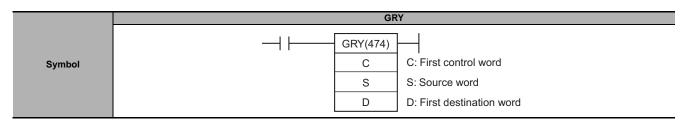


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	

Operands

Operand	Description	Data type	Size
С	First control word		3
S	Source word		1
D	First destination word		2

C: Control Word

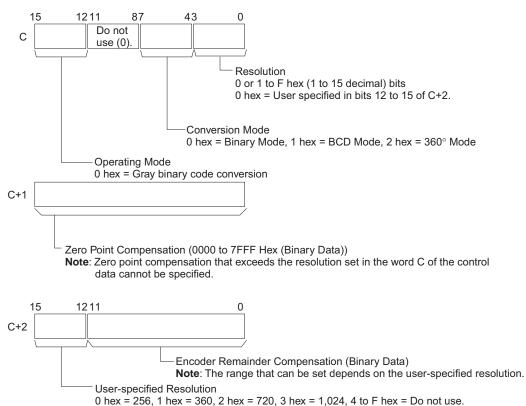

Note : The above setting is valid when the resolution is set to 0 hex in bits 00 to 03 of C.

S: Source Word



Contains the gray binary code to be converted. The range must be within the number of bits determined by the resolution specified in bits 00 to 03 of C. All bits outside of the number of bits for the specified resolution will be ignored.

For example, if the specified resolution is 08 hex and S contains FFFF hex, the gray binary code will be taken as 00FF hex.

D: First destination word

D	Rightmost word
D+1	Leftmost word

Destination words D+1 and D contain the results of converting the gray binary code at the resolution specified in bits 00 to 03 of the control data word C and the conversion mode specified in bits 04 to 07 of the control data word C. The leftmost word is output to D+1 and the rightmost word is output to D. The ranges of data that are output are as follows:

Binary Mode: 0000 0000 to 0000 7FFF hex

BCD Mode: 0000 0000 to 0003 2767 360° Mode: 0000 0000 to 0000 3599

(0.0° to 359.9° in 0.1° increments, BCD)

Operand Specifications

Area			٧	Vord ad	ddresse	es				Indirect DM/EM Registers Flags			Con- Registers			ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D													ĺ					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if bits 12 to 15 of C are not 0 hex (operating mode = gray binary code conversion). ON if the zero point offset in C+1 is not within the specified resolution (including user-specified resolutions). ON if bits 04 to 07 of C are not 0 hex (= Binary Mode), 1 hex (= BCD Mode), or 2 hex (= 360° Mode). ON if the specified encoder remainder compensation exceeds the set user-specified resolution when bits 00 to 03 of C are 0 hex (= user-specified resolution). ON if the converted binary value is less than the encoder remainder compensation when bits 00 to 03 of C are 0 hex (= user-specified resolution). ON if the converted binary value is less than the resolution when bits 00 to 03 of C are 0 hex (= user-specified resolution). OFF in all other cases.
Equal Flag	P_EQ	OFF in all cases.
Negative Flag	P_N	OFF in all cases.

Function

GRY(474) converts the gray binary code in the word specified in S at the resolution specified in C using one of the following conversion modes (binary, BCD, or 360°), also specified in C, and places the results in D and D+1.

Conversion mode	Function
Binary Mode	Gray binary code is converted to binary data between 0000 0000 and 0000 7FFF hex. Zero point offset and remainder compensation is applied and then the result is output to D and D+1.
BCD Mode	Gray binary code is converted to BCD data. Zero point offset and remainder compensation is applied, the data is converted to BCD between 0000 0000 and 0003 2767, and then the result is output to D and D+1.
360° Mode	Gray binary code is converted to BCD data. Zero point offset and remainder compensation is applied, the data is converted to an angle between 0000 0000 and 0000 3599 (0.0° to 359.9° in 0.1° increments), and then the result is output to D and D+1.


Hint

GRY(474) is normally used when inputting, through a DC Input Unit, a parallel signal (2n) from an absolute encoder that outputs a gray binary code.

Note If the word specified for S is allocated to an Input Unit, the input data converted by GRY(474) will be for the gray binary code from the previous CPU Unit cycle, i.e., it will be one cycle time old.


Example Programming

When CIO 0.00 is ON in the following example, the gray binary code in CIO 10 is converted according to the settings in the control data in D0 to D2 and the result is output to D200 and D201.

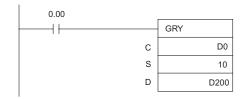


Example 1:

Converting to Binary Data with an 8-bit Resolution and Zero Point Offset of 001A Hex

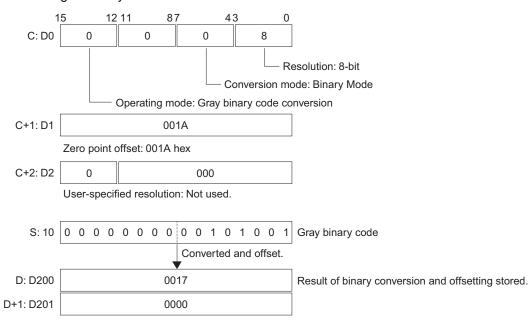


Example 2:

Converting to Angle Data with a 10-bit Resolution and Zero Point Offset of 0151 Hex

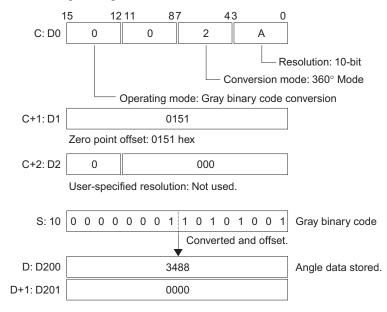


Example 3:

Converting to BCD Data with for an OMRON E6C2-AG5C Absolute Encoder (Resolution: 360/rotation, Encoder Remainder Compensation: 76) and Zero Point Offset of 0000 Hex

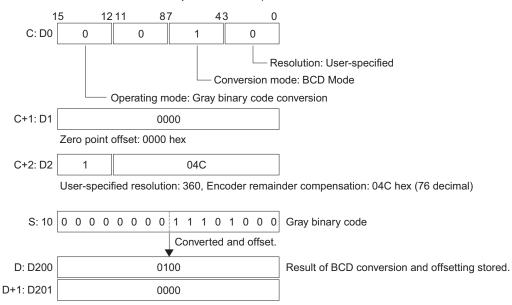


Example 4:

Converting to BCD Data with for an OMRON E6C2-AG5C Absolute Encoder (Resolution: 360/rotation, Encoder Remainder Compensation: 76) and Zero Point Offset of 000A Hex

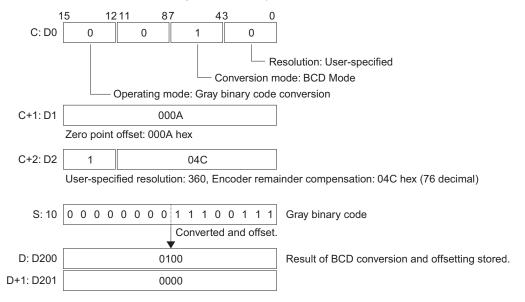

GRAY_BIN/GRAY_BINL

Instruction	Mnemonic	Variations	Function code	Function
GRAY CODE TO BINARY CONVERT	GRAY_BIN	@GRAY_BIN	478	Converts the specified word of gray code to one word of binary data.
DOUBLE GRAY CODE TO BINARY CONVERT	GRAY_BINL	@GRAY_BINL	479	Converts the specified two words of gray code to two words of binary data.

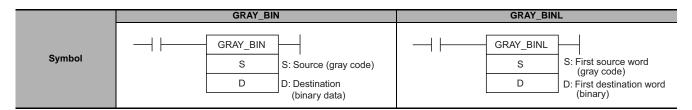

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	

Operands

Operand	Description	Data	type	Size		
Operand	Description	GRAY_BIN	GRAY_BINL	GRAY_BIN	GRAY_BINL	
S	Gray code data	WORD	DWORD	1	2	
D	Binary data	WORD	DWORD	1	2	

Operand Specifications

Area		Word addresses					Indirect addre	Con-	Registers			Fla	ıgs	Pulse	TR			
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		OK				
D	UK	OK	OK	OK	OK	OK	OK	UK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the results of conversion is negative (i.e., if the gray code data is #8000 to #FFFF). OFF in all other cases.
Equal Flag	P_EQ	Unchanged.
Negative Flag	P_N	Unchanged.


Function

GRAY_BIN(478)

GRAY_BIN(478) converts one word of gray code to one word of binary data. S specifies the source word containing the gray code and the binary data is output to D.

GRAY_BINL(479)

GRAY_BINL(479) converts two words of gray code to two words of binary data. S specifies the first of the two words containing the gray code and the binary data is output to D and D+1.

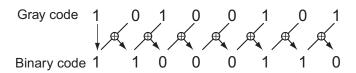

Example Programming

GRAY BIN

When CIO 0.00 turns ON in the following example, the gray code in D0 is converted to binary data and stored in D10.

GRAY_BINL

When CIO 0.00 turns ON in the following example, the gray code in D0 and D1 is converted to binary data and stored in D10 and D11.

```
0.00

GRAY_BINL

D0

D10

Result of executing

GRAY_BINL

D0 and D1 #12150918


Result of executing

GRAY_BINL

D10 and D11 #1C19F1EF
```

BIN_GRAY/BIN_GRAYL

Instruction	Mnemonic	Variations	Function code	Function				
BINARY TO GRAY CODE CONVERT	BIN_GRAY	@BIN_GRAY	480	Converts the specified word of binary data to one word of gray code.				
DOUBLE BINARY TO GRAY CODE CONVERT	BIN_GRAYL	@BIN_GRAYL	481	Converts the specified two words of binary data to two words of gray code.				

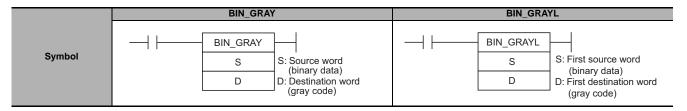

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	BIN_GRAY	BIN_GRAYL	BIN_GRAY	BIN_GRAYL	
S	Binary data	WORD	DWORD	1	2	
D	Gray code data	WORD	DWORD	1	2	

Operand Specifications

Area	Word addresses					Indirect addre	Con-		Regis	ters	Fla	ıgs	Pulse	TR				
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	OK	ОК	OK	ОК	ОК	ОК	OK	OK	ОК		OK				
D	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the binary code is negative (i.e., if the gray code data is #8000 to #FFFF). OFF in all other cases.
Equal Flag	P_EQ	Unchanged.
Negative Flag	P_N	Unchanged.

BIN_GRAY(480)

BIN_GRAY(480) converts one word of binary data to one word of gray code. S specifies the source word containing the binary data and the gray code is output to D.

BIN_GRAYL(481)

BIN_GRAYL(481) converts two words of binary data to two words of gray code. S specifies the first of the two words containing the binary data and the gray code is output to D and D+1.

Example Programming

BIN_GRAY

When CIO 0.01 turns ON in the following example, the binary data in D10 is converted to gray code and stored in D0.


```
0.01
| 1 | BIN_GRAY |
| D10 |
| D0 |
| Result of executing |
| BIN_GRAY |
| D10 | #11DF | D0 | #1930 |
```

BIN_GRAYL

When CIO 0.01 turns ON in the following example, the binary data in D10 and D11 is converted to gray code and stored in D0 and D1.

STR4/STR8/STR16

Instruction	Mnemonic	Variations	Function code	Function
FOUR-DIGIT NUMBER TO ASCII	STR4	@STR4	601	Converts a 4-digit hexadecimal number (#0000 to #FFFF) to ASCII data (4 characters).
EIGHT-DIGIT NUMBER TO ASCII	STR8	@STR8	602	Converts an 8-digit hexadecimal number (#0000 0000 to #FFFF FFFF) to ASCII data (8 characters).
SIXTEEN-DIGIT NUMBER TO ASCII	STR16	@STR16	603	Converts a 16-digit hexadecimal number (#0000 0000 0000 0000 to #FFFF FFFF FFFF) to ASCII data (16 characters).

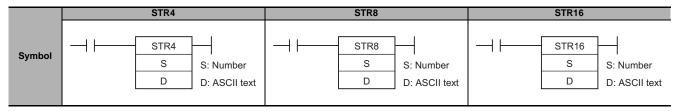

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	

Operands

Operand	Description		Data type		Size			
		STR4	STR8	STR16	STR4	STR8	STR16	
S	Number	UINT	UDINT	ULINT	1	2	4	
D	ASCII text	WORD	WORD	WORD	2	4	8	

Operand Specifications

STR4, STR8

Area		Word addresses							Indirect addre		Con-	Registers		Flags		Pulse	TR	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits bit	bits
S	OK	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			ОК				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			UK					

STR16

Area		Word addresses						Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR		
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	OK	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				OK				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	OFF
Equal Flag	P_EQ	ON if the result is 0.OFF in all other cases.
Negative Flag	P_N	ON when the leftmost bit of the source data is 1. OFF in all other cases.

• STR4

STR4(601) converts the numerical data in S (4-digit hexadecimal, #0000 to #FFFF) to ASCII data (4 characters) and writes the result to D and D+1.

S 12 11 8 7 4 3 0 S 2 3 4

Hexadecimal: #1234

TICAGG	COIIII	ui. 11	1207
\bigcirc			
ASCII		15	
	ח		31

CII	15	8	7		0
D	31			32	
D+1	33			34	

• STR8

STR8(602) converts the numerical data in S and S+1 (8-digit hexadecimal, #0000 0000 to #FFFF FFFF) to ASCII data (8 characters) and writes the result to D, D+1, D+2, and D+3.

	15 1	12 11	8	7	4	3	0
S	5		6	7	7	8	
S+1	1		2	3	3	4	

Hexadecimal: #12345678



ااد	15 8	7 0
D	31	32
D+1	33	34
D+2	35	36
D+3	37	38

• STR16

STR16(603) converts the numerical data in S to S+3 (16-digit hexadecimal, #0000 0000 0000 0000 to #FFFF FFFF FFFF FFFF) to ASCII data (16 characters) and writes the result to D to D+7.

	15 12	11 8	7 4	3 0
S	С	D	Е	F
S+1	8	9	Α	В
S+2 S+3	4	5	6	7
S+3	0	1	2	3

Hexadecimal: #1234567890ABCDEF




OII	15	8	7		0
D	30			31	
D+1	32			33	
D+2	34			35	
D+3	36			37	
D+4	38			39	
D+5	41			42	
D+6	43			44	
D+7	45			46	


Example Programming

Converting 3 Words of Numerical Data to ASCII Data

When CIO 0.00 is ON in the following example, the 3 words of numerical data starting at D10 are converted, one word at a time, to ASCII data. The converted ASCII data is stored in the DM Area starting at D100.

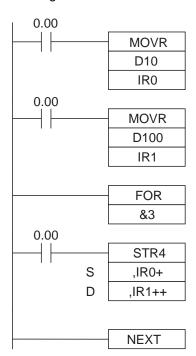

	15 12	11 8	7 4	3 0
S: D10	0	1	2	3
S+1: D11	4	5	6	7
S+2: D12	8	9	Α	В

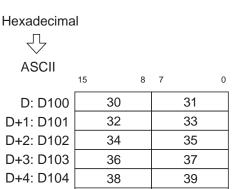


41

42

Converting Decimal Data to ASCII Data in BCD Format


When CIO 0.01 is ON in the following example, the source data in D0 (&1234 in decimal) is converted to BCD data and the result is stored temporarily in D10. Next, the BCD data is converted to ASCII data and the result is output to D100 and D101.

D+5: D105

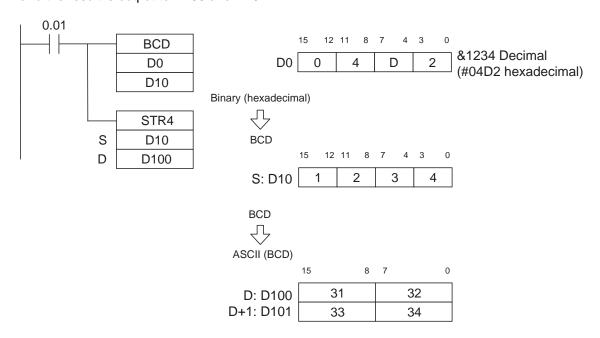

NUM4/NUM8/NUM16

Instruction	Mnemonic	Variations	Function code	Function
ASCII TO FOUR-DIGIT NUMBER	NUM4	@NUM4	604	Converts 4 characters of ASCII data to a 4-digit hexadecimal number.
ASCII TO EIGHT-DIGIT NUMBER	NUM8	@NUM8	605	Converts 8 characters of ASCII data to an 8-digit hexadecimal number.
ASCII TO SIXTEEN-DIGIT NUMBER	NUM16	@NUM16	606	Converts 16 characters of ASCII data to an 16-digit hexadecimal number.

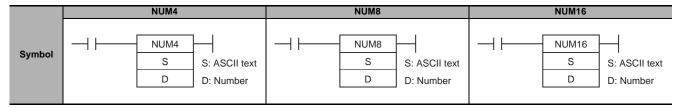

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description		Data type		Size			
	Description	NUM4	NUM8	NUM16	NUM4	NUM8	NUM16	
S	ASCII text	WORD	WORD	WORD	2	4	8	
D	Number	UINT	UDINT	ULINT	1	2	4	

Operand Specifications

Aron		Word addresses					Indirect DM/EM addresses Con-		Registers		Flags		Pulse TF	TR					
	Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
	S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				OK				
	D																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the source words contain any ASCII characters that are not hexadecimal equivalents (0 to 9, a to f, or A to F). OFF in all other cases.
Equal Flag	P_EQ	ON if the result is 0. OFF in all other cases.
Negative Flag	P_N	ON when the leftmost bit of the source data is 1. OFF in all other cases.

NUM4


- NUM4(604) converts the 4 characters of ASCII data in S and S+1 to numerical data (4-digit hexadecimal) and writes the result to D.
- The Error Flag will be turned ON if the ASCII data in S and S+1 contains any characters that are not hexadecimal digits. In this case, the instruction will not be executed.


	N	U	Ν	18	3
_		v			,

- NUM8(605) converts the 8 characters of ASCII data in S to S+3 to numerical data (4digit hexadecimal) and writes the result to D and D+1.
- The Error Flag will be turned ON if the ASCII data contains any characters that are not hexadecimal digits. In this case, the instruction will not be executed.


NUM16

- NUM16(606) converts the 16 characters of ASCII data in S to S+7 to numerical data (4digit hexadecimal) and writes the result to D to D+3.
- The Error Flag will be turned ON if the ASCII data contains any characters that are not hexadecimal digits. In this case, the instruction will not be executed.

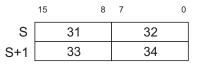


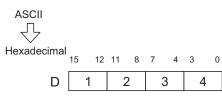

	15 8	7 0
S	31	32
S+1	33	34
S+2	35	36
S+3	37	38

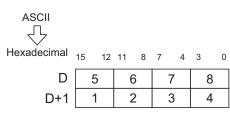


	15	8	7		0
S	30			31	
S+1	32			33	
S+2	34			35	
S+3	36			37	
S+4	38			39	
S+5	41			42	
S+6	43			44	
S+7	45			46	

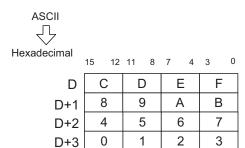

Example Programming

Converting 3 Sets of 4 ASCII Characters to the Equivalent Hexadecimal Digits

When CIO 0.00 is ON in the following example, the 6 words of ASCII data starting at D10 are converted, two words at a time, to numerical data. The converted numerical data is stored in the DM Area starting at D100.

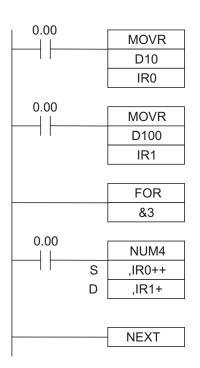


	15	8	7		0
S: D10	31			32	
S+1: D11	41			42	
S+2: D12	38			39	
S+3: D13	45			46	
S+4: D14	30			30	
S+5: D15	30			30	




	15 12	11 8	7 4	3 0
D: D100	1	2	Α	В
D+1: D101	8	9	Е	F
D+2: D102	0	0	0	0

Converting ASCII Data in BCD Format to Hexadecimal Data

When CIO 0.01 is ON in the following example, the ASCII characters in D0 and D1 are converted to BCD data and the result is stored temporarily in D10. Next, the BCD data is converted to hexadecimal and the result is output to D100.

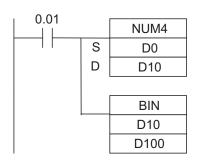

	15	8	7	0
S: D0 S+1: D1	31		32	
S+1: D1	33		34	

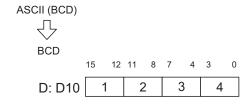

BCD

Binary (hexadecimal)

15 12 11 8 7 4 3 0


D100 0 4 D 2

&1234 Decimal (#04D2 hexadecimal)

Logic Instructions

ANDW/ANDL

Instruction	Mnemonic	Variations	Function code	Function
LOGICAL AND	ANDW	@ANDW	034	Takes the logical AND of corresponding bits in single words of word data and/or constants.
DOUBLE LOGICAL AND	ANDL	@ANDL	610	Takes the logical AND of corresponding bits in double words of word data and/or constants.

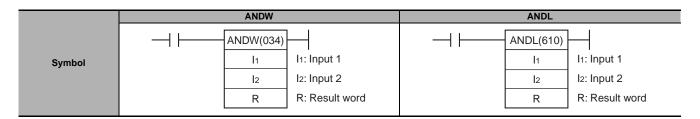

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	ANDW	ANDL	ANDW	ANDL	
I ₁	Input 1	WORD	DWORD	1	2	
l ₂	Input 2	WORD	DWORD	1	2	
R	Result word	WORD	DWORD	1	2	

Operand Specifications

Area			Word addresses							Indirect DM/EM addresses C		Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits I	bits	
VNDW	l ₁ , l ₂	ОК	ок	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
ANDW	ANDW R OF	OK	OK	OK	OK	OK	OK	OK	OK	Ŏ.	OK OK		OK.		Ŏ.				
ANDL	l ₁ , l ₂	ОК	ОК	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
, WDL	R	JIK	JIK	OI.	ÖK	ÖK	OK	OIX	OIC	OK.	510				OK .				

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0.OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of R is 1. OFF in all other cases.

ANDW

ANDW(034) takes the logical AND of data specified in I_1 and I_2 and outputs the result to R.

$I_1,I_2{\to}R$		
I ₁	l ₂	R
1	1	1
1	0	0
0	1	0
0	0	0

ANDL


ANDL(610) takes the logical AND of data specified in I_1 , I_1+1 and I_2 , I_2+1 and outputs the result to R, R+1.

$$(I_1, I_1+1) \bullet (I_2, I_2+1) \rightarrow (R, R+1)$$

I _{1,} I ₁ +1	l _{2,} l ₂ +1	R, R+1
1	1	1
1	0	0
0	1	0
0	0	0

Example Programming

When the execution condition CIO 0.00 is ON, the logical AND is taken of corresponding bits in CIO 11, CIO 10 and CIO 21, CIO 20 and the results will be output to corresponding bits in D201 and D200.

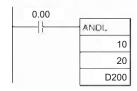


S ₁ : 10 S ₁ +1: 11	CH CH		S ₂ : 20 S ₂ +1: 21	CH CH	 D: I D+1: I	D200 D201
10,00	-0		20.00	1	00	0
10,01	1		20.01	1	01	1
10.02	0		20.02	0	02	0
10,03	1		20.03	0	03	0
10,04	0	Λ	20,04	1	04	0
	\approx			===	****	***
11.13	1		21,13	4	13	1
11,14	1		21,14	0	14	0
11,15	0		21.15	0	15	Ü

Note: The vertical arrow indicates logical AND.

ORW/ORWL

Instruction	Mnemonic	Variations	Function code	Function
LOGICAL OR	ORW	@ORW	035	Takes the logical OR of corresponding bits in single words of word data and/or constants.
DOUBLE LOGICAL OR	ORWL	@ORWL	611	Takes the logical OR of corresponding bits in double words of word data and/or constants.

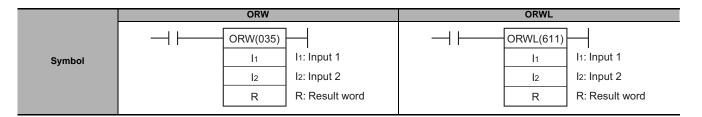

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	ORW	ORWL	ORW	ORWL	
I ₁	Input 1	WORD	DWORD	1	2	
l ₂	Input 2	WORD	DWORD	1	2	
R	Result word	WORD	DWORD	1	2	

Operand Specifications

Area	22	Word addresses						Indirect DM/EM addresses		Con-		Registers		Flags		Pulse	TR		
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits	
ORW	l ₁ , l ₂	OK	ОК	ОК	ок	ок	ОК	ОК	ОК	ОК	OK	OK	ОК		OK				
OKW	R	UK	OK	OK	OK	OK	5	5	5		OK OK		5		5				
ORWL	l ₁ , l ₂	ОК	ОК	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	OK			ОК				
OKWL	R	OK	OK	UK	OK	UK	OK	UK	UK		OK OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0.OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of R is 1. OFF in all other cases.

ORW

ORW(035) takes the logical OR of data specified in I_1 and I_2 and outputs the result to R.

-1, -2		
I ₁	l ₂	R
1	1	1
1	0	1
0	1	1
0	0	0

• ORWL

ORWL(611) takes the logical OR of data specified in I_1 and I_2 as double-word data and outputs the result to R, R+1.


$$(I_1, I_1+1) + (I_2, I_2+1) \rightarrow (R, R+1)$$


I _{1,} I ₁ +1	l _{2,} l ₂ +1	R, R+1
1	1	1
1	0	1
0	1	1
0	0	0

Example Programming

When the execution condition CIO 0.00 is ON, the logical OR is taken of corresponding bits in CIO 21, CIO 20 and CIO 301, CIO 300 and the results will be output to corresponding bits in D501 and D500.

 $I_1, I_2 \rightarrow R$

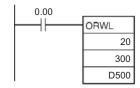


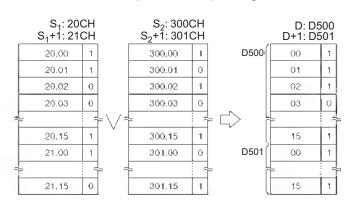

Note: The vertical arrow indicates logical OR.

XORW/XORL

Instruction	Mnemonic	Variations	Function code	Function
EXCLUSIVE OR	XORW	@XORW	036	Takes the logical exclusive OR of corresponding bits in single words of word data and/or constants.
DOUBLE EXCLUSIVE OR	XORL	@XORL	612	Takes the logical exclusive OR of corresponding bits in double words of word data and/or constants.

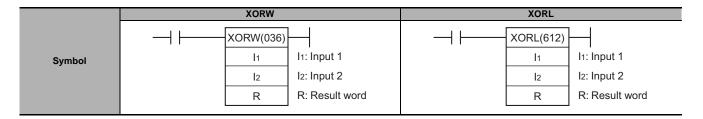

Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	XORW	XORL	XORW	XORL	
I ₁	Input 1	WORD	DWORD	1	2	
l ₂	Input 2	WORD	DWORD	1	2	
R	Result word	WORD	DWORD	1	2	

Operand Specifications

Are				V	Vord a	ddress	ses			Indirect addre		Con-		Regist	ers	Fla	ıgs	Pulse	TR
Ale	CIO		WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
XORW	I ₁ , I ₂	ОК	ОК	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
XOKW	R	OK	OK	OK	OK	OK	OIX	5	5	5	Ö		5		5				
XORL	I ₁ , I ₂	OK	OK	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	OK			ОК				
XORL F	R	OK OK	OK OK		OK	OK OK			UK UK	OK				OK					

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of R is 1. OFF in all other cases.

XORW

XORW(036) takes the logical exclusive OR of data specified in I_1 and I_2 and outputs the result to R.

$I_1 \bullet \overline{I_2} + \overline{I_1} \bullet I_2 \rightarrow R$										
I ₁	l ₂	R								
1	1	0								
1	0	1								
0	1	1								
0	0	0								

XORL


XORL(612) takes the logical exclusive OR of data specified in I_1 and I_2 as double-word data and outputs the result to R, R+1.


$$\frac{(l_1, l_1+1) \bullet (\bar{l}_2, l_2+1) + (\bar{l}_1, l_1+1) \bullet (l_2, l_2+1) \rightarrow (R, R+1)}{l_1 \ l_1+1} \qquad \qquad l_2 \ l_2+1 \qquad \qquad R, R+1$$

I _{1,} I ₁ +1	l _{2,} l ₂ +1	R, R+1		
1	1	0		
1	0	1		
0	1	1		
0	0	0		

Example Programming

When the execution condition CIO 0.00 is ON, the logical exclusive OR is taken of corresponding bits in CIO 901, CIO 900 and D1001, D1000 and the results will be output to corresponding bits in D1201 and D1200.

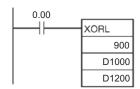


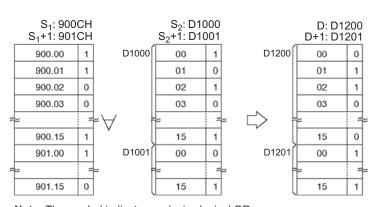

Note: The symbol indicates exclusive logical OR.

XNRW/XNRL

Instruction	Mnemonic	Variations	Function code	Function
EXCLUSIVE NOR	XNRW	@XNRW	037	Takes the logical exclusive NOR of corresponding single words of word data and/or constants.
DOUBLE EXCLUSIVE NOR	XNRL	@XNRL	613	Takes the logical exclusive NOR of corresponding bits in double words of word data and/or constants.

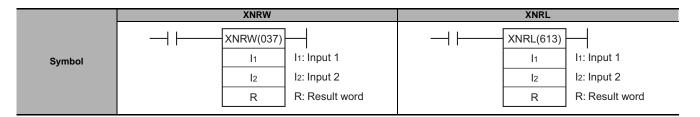

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	XNRW	XNRL	XNRW	XNRL	
I ₁	Input 1	WORD	DWORD	1	2	
l ₂	Input 2	WORD	DWORD	1	2	
R	Result word	WORD	DWORD	1	2	

Operand Specifications

Area			٧	Vord a	ddress	ses			Indirect addre		Con-		Regist	ers	Fla	ıgs	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
XNRW I ₁ , I ₂	ОК	ОК	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	OK	ОК		ОК				
R	OIX	OIC	OIX	OK	OK	5	5	5	5	Ö		5		5				
XNRL I ₁ , I ₂	ОК	ок	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	OK			ОК				
R		OIC	Oit	OK	OK	OIC	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0.OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of R is 1. OFF in all other cases.

XNRW

XNRW(037) takes the logical exclusive NOR of data specified in I_1 and I_2 and outputs the result to R.

$I_1 \bullet I_2 + \overline{I_1} \bullet \overline{I_2}$	$I_1 \bullet I_2 + \overline{I_1} \bullet \overline{I_2} \rightarrow R$											
I ₁	l ₂	R										
1	1	1										
1	0	0										
0	1	0										
0	0	1										

XNRL


XNRL(613) takes the logical exclusive NOR of data specified in I_1 and I_2 and outputs the result to R, R+1.


$$(l_1, l_1+1) \bullet (l_2, l_2+1) + (\overline{l_1}, \overline{l_1+1}) \bullet (\overline{l_2}, \overline{l_2+1}) \rightarrow (R, R+1)$$

I _{1,} I ₁ +1	l _{2,} l ₂ +1	R, R+1				
1	1	1				
1	0	0				
0	1	0				
0	0	1				

Example Programming

When the execution condition CIO 0.00 is ON, the logical exclusive NOR is taken of corresponding bits in CIO 801, CIO 800, and CIO 101, CIO 100 and the results will be output to corresponding bits in D501 and D500.

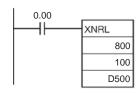


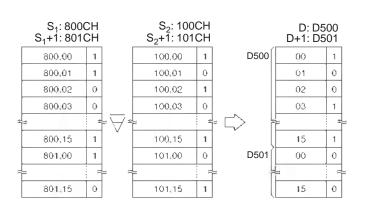

Note: The symbol indicates exclusive logical NOR.

COM/COML

Instruction	Mnemonic	Variations	Function code	Function				
COMPLEMENT	СОМ	@COM	029	Turns OFF all ON bits and turns ON all OFF bits in Wd.				
DOUBLE COMPLEMENT	COML	@COML	614	Turns OFF all ON bits and turns ON all OFF bits in Wd and Wd+1.				

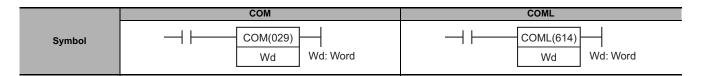

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data	type	Size		
	Description	СОМ	COML	COM	COML	
Wd	Word	WORD	DWORD	1	2	

Operand Specifications

Are			Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Ale	ea .	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
COM	Wd	ок	ОК	ОК	ОК	ок	ОК	ОК	ОК	ОК	OK		OK		OK				
COML	Wd	UK	UK	UK	UK	UK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	ON when the result is 0. OFF in all other cases.
Negative Flag	N	ON when the leftmost bit of R is 1. OFF in all other cases.

Function

COM

COM(029) reverses the status of every specified bit in Wd.

 $\overline{\text{Wd}} \rightarrow \text{Wd}$: 1 \rightarrow 0 and 0 \rightarrow 1

Note When using the COM instruction, be aware that the status of each bit will change each cycle in which the execution condition is ON.

• COML


COML(614) reverses the status of every specified bit in Wd and Wd+1.

 $(\overline{Wd+1}, \overline{Wd}) \rightarrow (Wd+1, Wd)$


Note When using the COML instruction, be aware that the status of each bit will change each cycle in which the execution condition is ON.

Example Programming

When CIO 0.00 is ON in the following example, the status of each bit D100 will be reversed.

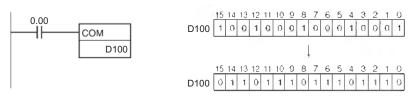


When CIO 0.00 is ON in the following example, the status of each bit in D100 and D101 will be reversed.

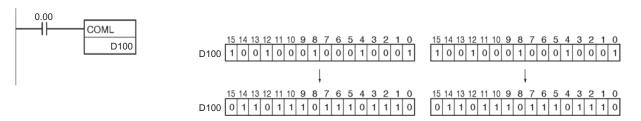

Special Math Instructions

ROTB

Instruction	Mnemonic	Variations	Function code	Function
BINARY ROOT	ROТВ	@ROTB	620	Computes the square root of the 32-bit signed binary contents (positive value) of the specified words and outputs the integer portion of the result to the specified result word.

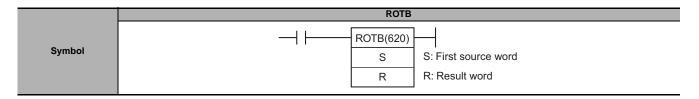

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	UDINT	2
R	Result word	UINT	1

Operand Specifications

Area			٧	Vord a	ddress	ses			Indirect addre		Con-		Regist	ers	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	ОК	ОК	ок	ок	ОК	ОК	ОК	ОК	ОК	OK	OK			OK				
R	OK.	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				


Flags

Name	Label	Operation
Error Flag	ER	ON if bit 15 of S+1 is 1 (ON). OFF in all other cases.
Equals Flag	=	ON if the result is 0000. OFF in all other cases.
Overflow Flag	OF	ON if the content of S+1 and S is 4000 0000 to 7FFF FFFF. OFF in all other cases.
Underflow Flag	UF	OFF
Negative Flag	N	OFF

ROTB(620) computes the square root of the 32-bit binary number in S+1 and S and outputs the integer portion of the result to R.


Note 1 The non-integer remainder is eliminated.


- 2 The range of data that can be specified for words S+1 and S is 0000 0000 to 3FFF FFFF. If a number from 4000 0000 to 7FFF FFFF is specified, it will be treated as 3FFF FFFF for the square root computation.
- 3 The operands of this instruction (S+1, S, and R) are all treated as binary values. If the input data is BCD, use the ROOT(072) instruction.

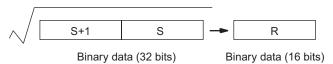

Example Programming


When CIO 0.00 is ON in the following example, ROTB(620) calculates the square root of the data in CIO 2 and CIO 1, and writes the integer portion of the result in D100.

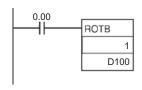

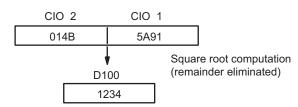

ROOT

Instruction	Mnemonic	Variations	Function code	Function
BCD SQUARE ROOT	ROOT	@ROOT	072	Computes the square root of an 8-digit BCD number and outputs the integer portion of the result to the specified result word.

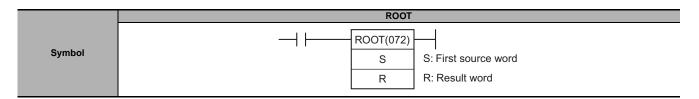

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK OK		OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	First source word	DWORD	2		
R	Result word	WORD	1		

Operand Specifications


I	Area			٧	Vord a	ddress	ses			Indirect DM/EM addresses Con- Registers Fla					ıgs	Pulse	TR		
ı	Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
-	S	ОК	ОК	ОК	ок	ок	OK	ОК	OK	ОК	OK	OK			ОК				
	R	OK	UK	UK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags


Name	Label	Operation
Error Flag ER		 ON if the data in S+1 and S is not BCD. OFF in all other cases.
Equals Flag	=	On if the result is 0000. OFF in all other cases.

Function

ROOT(072) computes the square root of the 8-digit BCD number in S+1 and S and outputs the integer portion of the result to R.

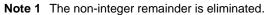


2 The operands of this instruction (S+1, S, and R) are all treated as BCD values. If the input data is binary, use the ROTB(620) instruction.

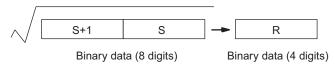


Example Programming

When CIO 0.00 is ON in the following example, ROOT(072) calculates the square root of the data in D1 and D0, and writes the integer portion of the result in D100.

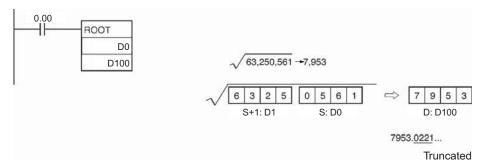


Application example

The following example shows how to take the square root of a 4-digit number and round off the result. This program example calculates the square root of the 4-digit number in CIO 10, rounds off the result, and writes it to CIO 11.

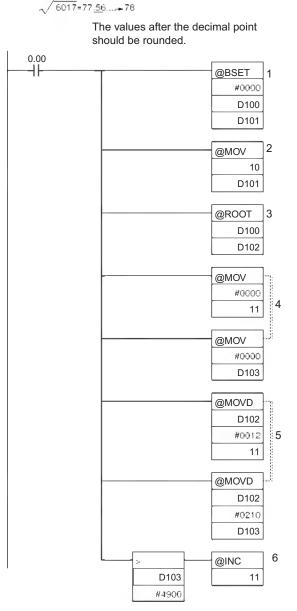


A ROOT instruction applies to 8-digit data, and thus data memory D101 and D100 are used.


- 1. The source words (D101 and D100) are cleared to 0000 0000.
- 2. The 4-digit number is moved to D101.

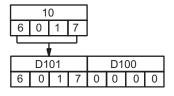

3. ROOT(072) calculates the square root of D101 and D100 and writes the result to D102.

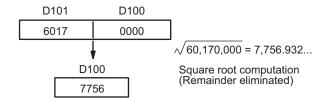

- 4. D103 and the result word, CIO 11, are cleared to 0000.
- 5. The result of the square root calculation is divided by 100, with the integer portion written to CIO 11 and the remainder going to D103.

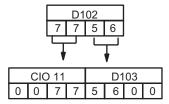


6. If the content of D103 is greater than 4900, CIO 11 is incremented by 1.



In this case, the result is 78.

APR

Instruction	Mnemonic	Variations	Function code	Function
ARITHMETIC PROCESS	APR	@APR	069	Calculates the sine, cosine, or a linear extrapolation of the source data.

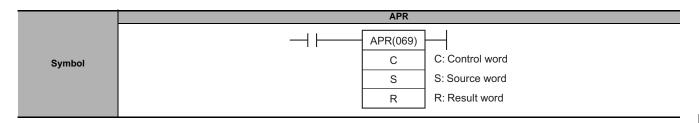

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
С	Control word	UINT	Variable
S	Source data	WORD	1
R	Result word	WORD	1

Sine Function

Operand	Value	Data range		
С	0000 hex			
S	0000 to 0900 (BCD)	0° to 90°		
R	0000 to 0900 (BCD) 9999 (BCD)	0.0000 to 0.9999 1.0000		

• Sine Function (C=0000)

When C is 0000, APR(069) calculates the SIN(S) and writes the result to R. The range for S is 0000 to 0900 BCD (0.0° to 90.0°) and the range for R is 0000 to 9999 BCD (0.0000 to 0.9999). The remainder of the result beyond the fourth decimal place is eliminated.

Cosine Function

Operand	Value	Data range
С	0001 hex	
S	0000 to 0900 (BCD)	0° to 90°
R	0000 to 0900 (BCD) 9999 (BCD)	0.0000 to 0.9999 1.0000

• Cosine Function (C=0001)

When C is 0001, APR(069) calculates the COS(S) and writes the result to R. The range for S is 0000 to 0900 BCD (0.0 $^{\circ}$ to 90.0 $^{\circ}$) and the range for R is 0000 to 9999 BCD (0.0000 to 0.9999). The remainder of the result beyond the fourth decimal place is eliminated.

Note The actual result for SIN(90°) and COS(0°) is 1, but 9999 (0.9999) will be output to R.

Linear Extrapolation Function


•					
Operand	Value	Data range			
С	Data area address				
	16-bit unsigned BCD data	0000 to 9999			
	16-bit unsigned binary data	0 to 65,535			
	16-bit signed binary data	-32,768 to 32,767			
	32-bit signed binary data	-2,147,483,648 to 2,147,483,647			
S	Floating-point data	-∞,			
		-3.402823×10^{38} to			
		-1.175494 × 10 ⁻³⁸ ,			
		1.175494×10^{-38} to			
		3.402823×10^{38}			
		+∞			
	16-bit unsigned BCD data	0000 to 9999			
	16-bit unsigned binary data	0 to 65,535			
	16-bit signed binary data	-32,768 to 32,767			
	32-bit signed binary data	-2,147,483,648 to 2,147,483,647			
R	Floating-point data	-∞,			
		-3.402823×10^{38} to			
		$-1.175494 \times 10^{-38}$			
		1.175494×10^{-38} to			
		3.402823×10^{38}			
		+∞			

Linear Extrapolation (C = Data area address)
 APR(069) linear extrapolation is specified when C is a word address.


The content of word C specifies the number of coordinates in a data table starting at C+2, the form of the source data, and whether data is BCD or binary.

The following 5 kinds of I/O data can be used:


- 16-bit unsigned BCD data
- · 16-bit unsigned binary data
- 16-bit signed binary data (CJ2/CS1-H/CJ1-H/CJ1M/CS1D Only)
- 32-bit signed binary data (CJ2/CS1-H/CJ1-H/CJ1M/CS1D Only)
- Single-precision floating-point data (CJ2/CS1-H/CJ1-H/CJ1M/CS1D Only)
 - · Unsigned Integer Data (Binary or BCD)

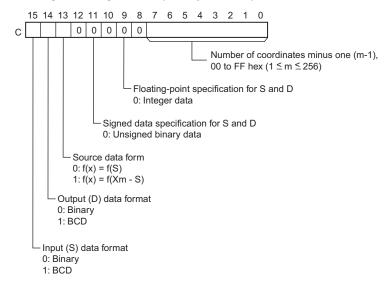


· Signed Integer Data (Binary)

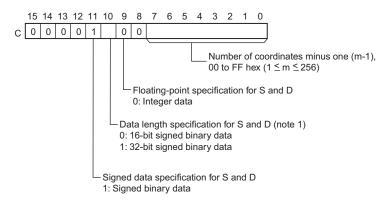

· Single-precision Floating-point Data

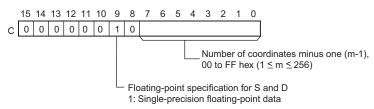

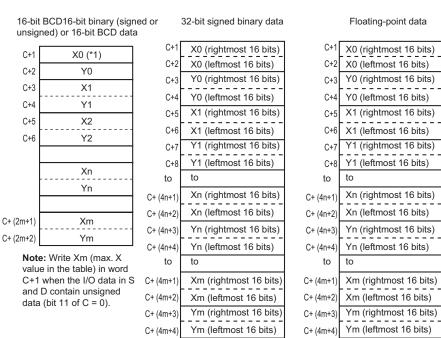

Note: The X coordinates must be in ascending order: $X_1 < X_2 < ... < X_m$. Input all values of (X_n, Y_n) as binary data, regardless of the data format specified in control word C.

Operand Specifications

Aroa	Word addresses		Word addresses		Indirect addre		Con-		Regist	ers	Fla	ıgs	Pulse	TR				
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											ОК							
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
R												OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if C is a constant greater than 0001. ON if C is a word address but the X coordinates are not in ascending order (X₁ ≤ X₂ ≤ ≤ X_m). ON if C is a word address and bits 9, 11, and 15 of C indicate BCD input, but S is not BCD. ON if C is a word address and bit 9 of C indicates floating-point data, but S is a one-word constant. ON if C is 0000 or 0001 but S is not BCD between 0000 and 0900. OFF in all other cases.
Equals Flag	=	ON if the result is 0.OFF in all other cases.
Negative Flag	N	ON if bit 15 of R is ON. OFF in all other cases.

Function


Operation of the Linear Extrapolation Function

APR(069) processes the input data specified in S with the following equation and the line-segment data (X_n, Y_n) specified in the table beginning at C+1. The result is output to the destination word(s) specified with D.


1. For
$$S < X_0$$

Converted value = Y_0

2. For
$$X_0 \le S \le X_{max}$$
, if $X_n < S < X_{n+1}$ Converted value = Y_n +[{ $Y_n + 1 - Y_n$ }/{ $X_n + 1 - X_n$ }] \times {Input data $S - X_n$ }

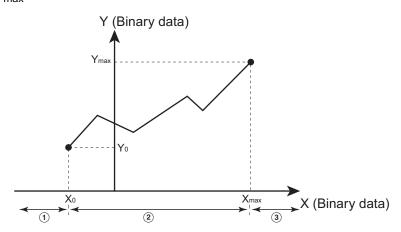

Up to 256 endpoints can be stored in the line-segment data table beginning at C+1.

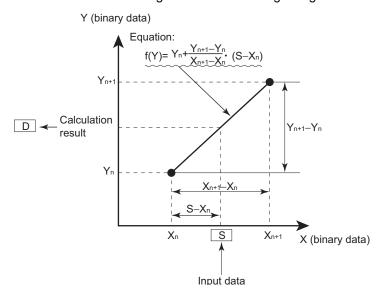

16-bit Unsigned BCD Data

The input data and/or the output data can be 16-bit unsigned BCD data. Also, the linear extrapolation function can be set to operate on the value specified in S directly or on X_m -S. (X_m is the maximum value of X in the line-segment data.)

Setting name	Bit in C	Setting
Input data (S) format	15	0: Binary 1: BCD
Output data (D) format	14	0: Binary 1: BCD
Source data form	13	0: Operate on S 1: Operate on X _m -S
Signed data specification for S and D	11	0: Unsigned data
Data length specification for S and D	10	Invalid (fixed at 16 bits)
Floating-point specification	09	0: Integer data

• 16-bit Unsigned Binary Data

The input data and/or the output data can be 16-bit unsigned binary data. Also, the linear extrapolation function can be set to operate on the value specified in S directly or on X_m -S. (X_m is the maximum value of X in the line-segment data.)

Setting name	Bit in C	Setting
Input data (S) format	15	0: Binary 1: BCD
Output data (D) format	14	0: Binary 1: BCD
Source data form	13	0: Operate on S 1: Operate on X _m -S
Signed data specification for S and D	11	0: Unsigned data
Data length specification for S and D	10	Invalid (fixed at 16 bits)
Floating-point specification	09	0: Integer data

 16-bit Signed Binary Data (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D Only)

Setting name	Bit in C	Setting
Input data (S) format	15	0: Binary
Output data (D) format	14	0: Binary
Source data form	13	0
Signed data specification for S and D	11	1: Signed data
Data length specification for S and D	10	0: 16-bit signed binary data
Floating-point specification	09	0: Integer data

 32-bit Signed Binary Data (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D Only)

Setting name	Bit in C	Setting	
Input data (S) format	15	0: Binary	
Output data (D) format	14	0: Binary	
Source data form	13	0	
Signed data specification for S and D	11	1: Signed data	
Data length specification for S and D	10	0: 32-bit signed binary data	
Floating-point specification	09	0: Integer data	

Note If the "Data length specification for S and D" in bit 10 of C is set to 1 and a 16-bit constant is input for S, the input data will be converted to 32-bit signed binary before the linear extrapolation calculation.

Floating-point Data (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D Only)

Setting name	Bit in C	Setting
Input data (S) format	15	0
Output data (D) format	14	0
Source data form	13	0
Signed data specification for S and D	11	0
Data length specification for S and D	10	0
Floating-point specification	09	1: Floating-point data

Note If the "Floating-point specification" in bit 09 of C is set to 1, a constant cannot be input for S.

Example Programming

• Sine Function (C: #0000)

The following example shows APR(069) used to calculate the sine of 30°.

(SIN(30) = 0.5000)

Source data						
S: D0						
0 ×10 ¹ ×10 ⁰ ×10 ⁻¹						
0 3 0 0						

Set the source data in $\times 10^{-1}$ degrees. (0000 to 0900, BCD)


Result								
R: D100								
×10 ⁻¹	×10 ⁻¹ ×10 ⁻² ×10 ⁻³ ×10 ⁻⁴							
5 0 0 0								

Result data has four significant digits, fifth and higher digits are ignored. (0000 to 9999, BCD)

• Cosine Function (C: #0001)

The following example shows APR(069) used to calculate the cosine of 30°.

(COS(30) = 0.8660)

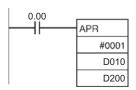

Source data							
S: D10							
0	0 ×10 ¹ ×10 ⁰ ×10 ⁻¹						
0 3 0 0							


Set the source data in ×10⁻¹ degrees. (0000 to 0900, BCD)

	Result										
R: D200											
×10 ⁻¹	×10 ⁻¹ ×10 ⁻² ×10 ⁻³ ×10 ⁻⁴										
8 6 6 0											

Result data has four significant digits, fifth and higher digits are ignored. (0000 to 9999, BCD)

Linear Extrapolation (C: Word Address)


 Using 16-bit Unsigned BCD or Binary Data APR(069) processes the input data specified in S based on the control data in C and the line-segment data specified in the table beginning at C+1. The result is output to D.

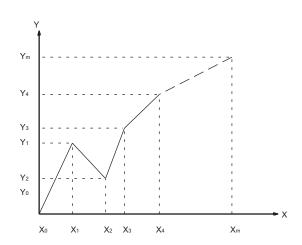


- $Y_n = f(X_n), Y_0 = f(X_0)$
- Be sure that $X_{n-1} < X_n$ in all cases.
- Input all values of (X_n, Y_n) as binary data.

Word	Coordinate
C+1	Xm (max. X value)
C+2	Y ₀
C+3	X ₁
C+4	Y ₁
C+5	X ₂
C+6	Y ₂
<u> </u>	\
C+(2m+1)	X _m (max. X value)
C+(2m+2)	Y _m

This example shows how to construct a linear extrapolation with 12 coordinates. The block of data is continuous, as it must be, from D0 to D26 (C to C + $(2 \times 12 + 2)$). The input data is taken from CIO 10, and the result is output to CIO 11.

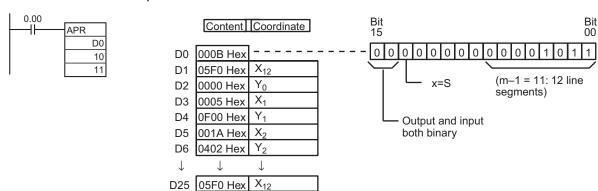

In this case, the source word, CIO 0010, contains 0014, and f(0014) = 0726 is output to R, CIO 0011.

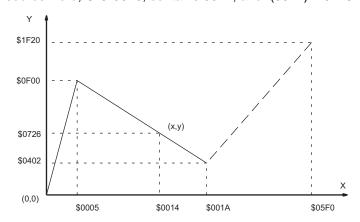

The linear-extrapolation calculation is shown below.


D26 1F20 Hex

$$Y = 0F00 + \frac{0402 - 0F00}{001A - 0005} \times (0014 - 0015)$$


 $= 0F00 - (0086 \times 000F)$

= 0726 Values are all hexadecimal (Hex).

Using 32-bit Signed Binary Data (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D ×Only)
 In this example, APR(069) is used to convert the fluid height in a tank to fluid volume based on the shape of the holding tank.

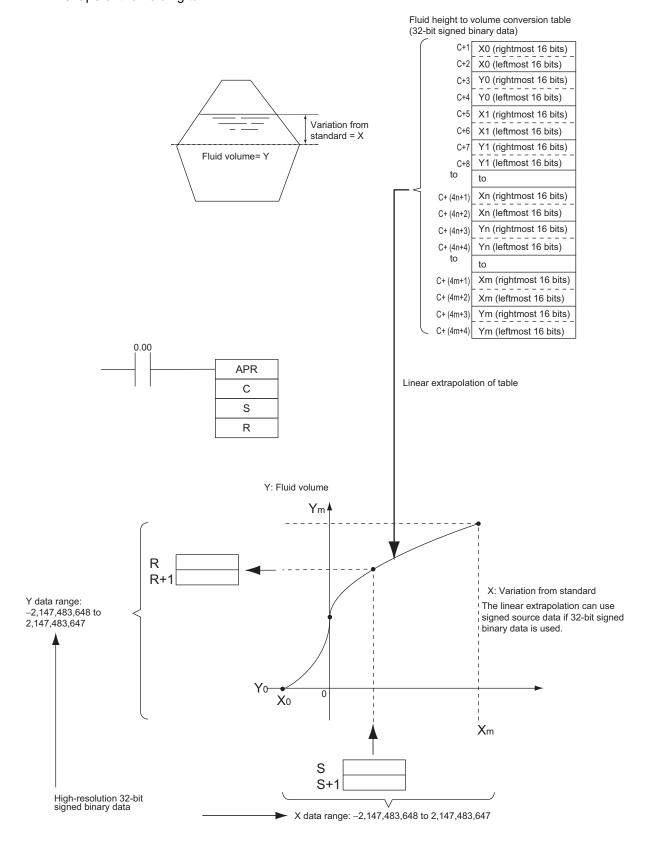


Using Floating-point Data (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D Only)
 In this example, APR(069) is used to convert the fluid height in a tank to fluid volume based on the shape of the holding tank.

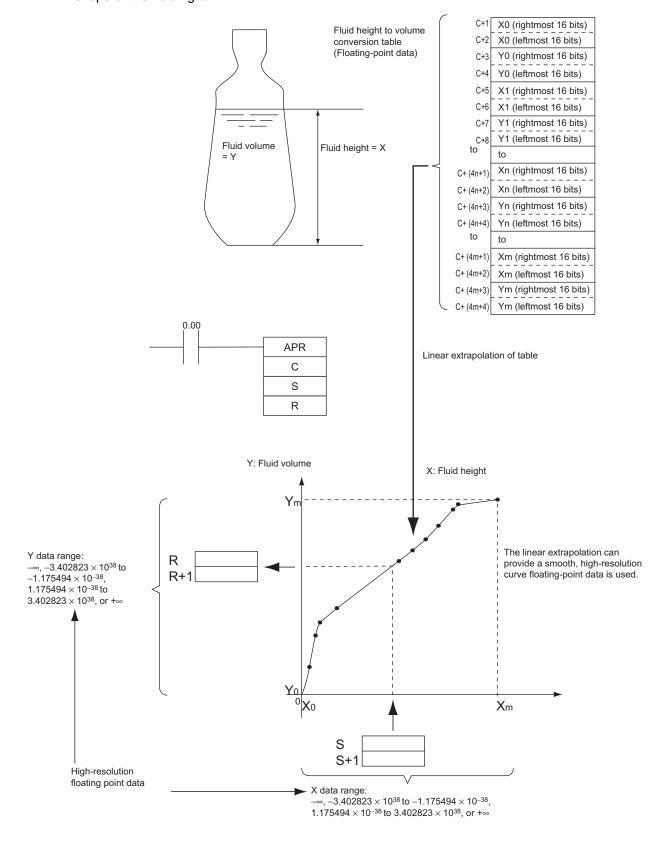

FDIV

Instruction	Mnemonic	Variations	Function code	Function
FLOATING POINT DIVIDE (BCD)	FDIV	@FDIV	079	Divides one 7-digit floating-point number by another. The floating-point numbers are expressed in scientific notation (7-digit mantissa and 1-digit exponent).

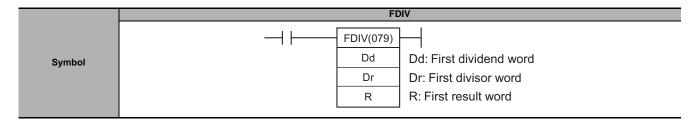

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
Dd	First dividend word	UDINT	2
Dr	First divisor word	UDINT	2
R	First result word	UDINT	2

Operand Specifications


Area			٧	Vord a	ddress	ses			Indirect addre		Con-		Regist	ers	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
Dd																		
Dr	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
R																		1

Flags

Name	Label	Operation
Error Flag	ER	 ON if the mantissa (leftmost 7 digits) in Dd+1 and Dd is not BCD. ON if the mantissa (leftmost 7 digits) in Dr+1 and Dr is not BCD. ON if the divisor (Dr+1 and Dr) is 0. ON if the result is not between 0.1000000 × 10⁻⁷ and 0.9999999 × 10⁷. OFF in all other cases.
Equals Flag	=	On if the result is 0. OFF in all other cases.


Function

FDIV(079) divides the floating-point value in Dd and Dd+1 by that in Dr and Dr+1 and places the result in R and R+1.

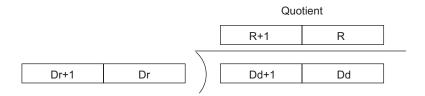

Note The result is expressed as a floating-point value, so it has 7 significant digits. The eighth and higher digits are eliminated.

To represent the floating-point values, the rightmost seven digits are used for the mantissa and the leftmost digit is used for the exponent, as shown in the diagram below. The leftmost digit can range from 0 to F; positive exponents range from 0 to 7 and negative exponents range from 8 to F (0 to -7). The rightmost 7 digits must be BCD.

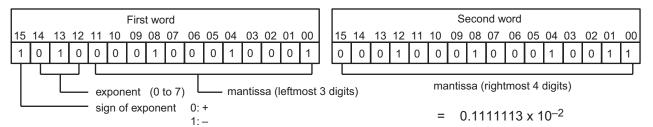

Two more examples of floating-point values are:

6123 4567: 0.1234567×10^6 (6 = 0110 binary)


B123 4567: 0.1234567×10^{-3} (B = 1011 binary)

The following table shows the maximum and minimum values allowed.

Limit	8-digit hexadecimal	Floating-point
Maximum value	7999 9999	0.9999999×10^7
Minimum value (Divisor and dividend)	F000 0001	0.0000001 × 10 ⁻⁷
Minimum value (Result)	F100 0000	0.1000000×10^{-7}

Example Programming

When CIO 0 is ON in the following example, FDIV(079) divides the floating-point number in D101 and D100 by the floating-point number in CIO 21 and CIO 20 and writes the result to D301 and D300.

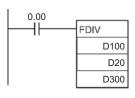


		D1	01		D100				
	Α	5	6	7	0	0	0	0	0.5670000×10^{-2}
		CIC	21			CIC	20		
÷	В	1	2	3	4	5	6	7	0.1234567×10^{-3}
		D3	01			D3	00		
	2	4	5	9	2	7	0	3	0.4592703×10^{2}

Application example


In this example, the 4-digit BCD number in D0 is divided by the 4-digit BCD number in D1 and the floating-point result is written to D3 and D2.

(Example) 0.3452×104÷0.0079×104=0.436962×102

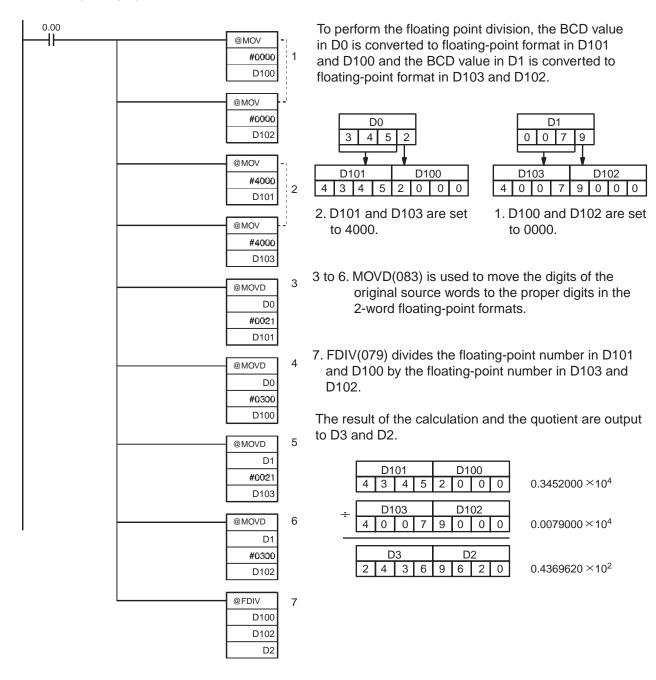

BCNT

Instruction	Mnemonic	Variations	Function code	Function
BIT COUNTER	BCNT	@BCNT	067	Counts the total number of ON bits in the specified word(s).

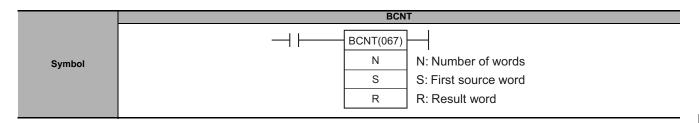

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
N	Number of words	UINT	1
S	First source word	UINT	Variable
R	Result word	UINT	1

N: Number of words

The number of words must be 0001 to FFFF (1 to 65,535 words).

Operand Specifications


	Area	Word addresses								Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
-	N	ок	ОК	ОК		ок	ОК	ОК	ок	ОК	ОК	OK	OK		ОК				
	S				ОК														
_	R												OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if N is 0000. ON if result exceeds FFF. OFF in all other cases.
Equals Flag	=	On if the result is 0000. OFF in all other cases.


Function

BCNT(067) counts the total number of bits that are ON in all words between S and S+(N-1) and places the result in R.

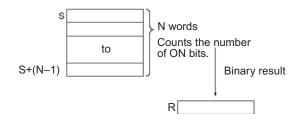


Precautions

Some time will be required to complete BCNT(067) if a large number of words is specified. Even if an
interrupt occurs, execution of this instruction will not be interrupted and execution of the interrupt task
will be started after execution of BCNT(067) has been completed. One BCNT(067) instruction can
be replaced with two BCNT(067) instructions to help avoid this problem.

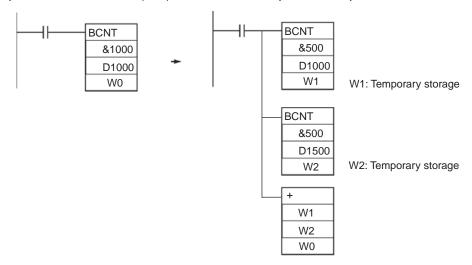

Example Programming

When CIO 0.00 is ON in the following example, BCNT(067) counts the total number of ON bits in the 10 words from CIO 100 through CIO 109 and writes the result to D100.

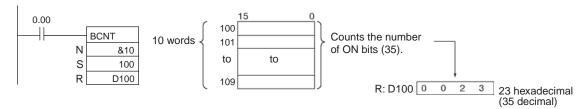

Floating-point Math Instructions

Floating-point Math Instructions

The Floating-point Math Instructions convert data and perform floating-point arithmetic operations.

Data Format

Floating-point data expresses real numbers using a sign, exponent, and mantissa. When data is expressed in floating-point format, the following formula applies.

Real number = $(-1)^{s} 2^{e-127} (1.f)$

- s: Sign
- e: Exponent
- f: Mantissa

The floating-point data format conforms to the IEEE754 standards. Data is expressed in 32 bits, as follows:

Sign	Е	xpone	nt	Mantissa						
s		е			f					
31	30		23	22		0				

Data	No. of bits	Contents
s: sign	1	0: positive; 1: negative
e: exponent	8	The exponent (e) value ranges from 0 to 255. The actual exponent is the value remaining after 127 is subtracted from e, resulting in a range of –127 to 128. "e=0" and "e=255" express special numbers.
f: mantissa	23	The mantissa portion of binary floating-point data fits the formal $2.0 > 1.f \ge 1.0$.


Number of Digits

The number of effective digits for floating-point data is seven digits for decimal.

• Floating-point Data

The following data can be expressed by floating-point data:

- -∞
- $-3.402823 \times 10^{38} \le value \le -1.175494 \times 10^{-38}$
- 0
- $1.175494 \times 10^{-38} \le \text{value} \le 3.402823 \times 10^{38}$
- +∞
- Not a number (NaN)

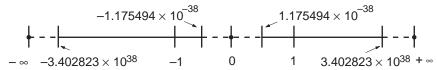

Special Numbers

The formats for NaN, $\pm \infty$, and 0 are as follows:

- NaN*:e = 255, f ≠ 0
- $+\infty$: e = 255, f = 0, s= 0
- $-\infty$: e = 255, f = 0, s= 1
- 0: e = 0
- * NaN (not a number) is not a valid floating-point number. Executing floating-point calculation instructions will not result in NaN.

Writing Floating-point Constants


When writing floating-point constants, include the plus (+) or minus (–) sign.

For example, enter the following: +123, +123.45, or -123.45.

If you enter "&", such as in "&123," the value will be taken as a decimal value, and the floating-point instruction will not function correctly. If you enter "#", such as in "#123," the value will be treated in the following floating-point format: #00000123.

Writing Floating-point Data

When floating-point is specified for the data format in the I/O memory edit display in the CX-Programmer, standard decimal numbers input in the display are automatically converted to the floating-point format shown above (IEEE754-format) and written to I/O Memory. Data written in the IEEE754-format is automatically converted to standard decimal format when monitored on the display.

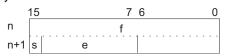

It is not necessary for the user to be aware of the IEEE754 data format when reading and writing floating-point data. It is only necessary to remember that floating point values occupy two words each.

Numbers Expressed as Floating-point Values

The following types of floating-point numbers can be used.

Mantissa (f)	Exponent (e)										
iviaittissa (i)	0	Not 0 and not all 1's	All 1's (255)								
0	0	Normalized number	Infinity								
Not 0	Non-normalized number	Normalized Humber	NaN								

Note A non-normalized number is one whose absolute value is too small to be expressed as a normalized number. Non-normalized numbers have fewer significant digits. If the result of calculations is a non-normalized number (including intermediate results), the number of significant digits will be reduced.

(1) Normalized Numbers

Normalized numbers express real numbers. The sign bit will be 0 for a positive number and 1 for a negative number.

The exponent (e) will be expressed from 1 to 254, and the real exponent will be 127 less, i.e., -126 to 127.

The mantissa (f) will be expressed from 0 to $2^{23} - 1$, and it is assume that, in the real mantissa, bit 2^{23} is 1 and the binary point follows immediately after it.

Normalized numbers are expressed as follows:

$$(-1)$$
(sign s) \times 2(exponent e) $-127 \times (1 + \text{mantissa} \times 2^{-23})$

Example

Sign: -

Exponent: 128 - 127 = 1

Mantissa: $1 + (2^{22} + 2^{21}) \times 2^{-23} = 1 + (2^{-1} + 2^{-2}) = 1 + 0.75 = 1.75$

Value: $-1.75 \times 2^1 = -3.5$

(2) Non-normalized Numbers

Non-normalized numbers express real numbers with very small absolute values. The sign bit will be 0 for a positive number and 1 for a negative number.

The exponent (e) will be 0, and the real exponent will be -126.

The mantissa (f) will be expressed from 1 to $2^{23} - 1$, and it is assume that, in the real mantissa, bit 2^{23} is 0 and the binary point follows immediately after it.

Non-normalized numbers are expressed as follows:

$$(-1)$$
(sign s) \times 2⁻¹²⁶ \times (mantissa x 2⁻²³)

Example

Sign: – Exponent: –126

Mantissa: $0 + (2^{22} + 2^{21}) \times 2^{-23} = 0 + (2^{-1} + 2^{-2}) = 0 + 0.75 = 0.75$

Value: -0.75×2^{-126}

(3) Zero

Values of +0.0 and -0.0 can be expressed by setting the sign to 0 for positive or 1 for negative. The exponent and mantissa will both be 0. Both +0.0 and -0.0 are equivalent to 0.0. Refer to Floating-point Arithmetic Results, below, for differences produced by the sign of 0.0.

(4) Infinity

Values of $+\infty$ and $-\infty$ can be expressed by setting the sign to 0 for positive or 1 for negative. The exponent will be 255 (2⁸ – 1) and the mantissa will be 0.

(5) NaN

NaN (not a number) is produced when the result of calculations, such as 0.0/0.0, ∞/∞ , or $\infty-\infty$, does not correspond to a number or infinity. The exponent will be 255 (2^8-1) and the mantissa will be not 0. **Note** There are no specifications for the sign of NaN or the value of the mantissa field (other than to be not 0).

Floating-point Arithmetic Results

(1) Rounding Results

The following methods will be used to round results when the number of digits in the accurate result of floating-point arithmetic exceeds the significant digits of internal processing expressions.

If the result is close to one of two internal floating-point expressions, the closer expression will be used.

If the result is midway between two internal floating-point expressions, the result will be rounded so that the last digit of the mantissa is 0.

(2) Overflows, Underflows, and Illegal Calculations

Overflows will be output as either positive or negative infinity, depending on the sign of the result. Underflows will be output as either positive or negative zero, depending on the sign of the result.

Illegal calculations will result in NaN. Illegal calculations include adding infinity to a number with the opposite sign, subtracting infinity from a number with the opposite sign, multiplying zero and infinity, dividing zero by zero, or dividing infinity by infinity.

The value of the result may not be correct if an overflow occurs when converting a floating-point number to an integer.

(3) Precautions in Handling Special Values

The following precautions apply to handling zero, infinity, and NaN.

- The sum of positive zero and negative zero is positive zero.
- The difference between zeros of the same sign is positive zero.
- If any operand is a NaN, the results will be a NaN.
- Positive zero and negative zero are treated as equivalent in comparisons.
- Comparison or equivalency tests on one or more NaN will always be true for < > and always be false for all other instructions.


Floating-point Calculation Results

When the absolute value of the result is greater than the maximum value that can be expressed for floating-point data, the Overflow Flag will turn ON and the result will be output as $\pm \infty$. If the result is positive, it will be output as $+\infty$; if negative, then $-\infty$.


The Equals Flag will only turn ON when both the exponent (e) and the mantissa (f) are zero after a calculation. A calculation result will also be output as zero when the absolute value of the result is less than the minimum value that can be expressed for floating-point data. In that case the Underflow Flag will turn ON.

Example

In this program example, the X-axis and Y-axis coordinates (x, y) are provided by 4-digit BCD content of D0 and D1. The distance (r) from the origin and the angle $(\theta, in degrees)$ are found and output to D100 and D101. In the result, everything to the right of the decimal point is truncated.

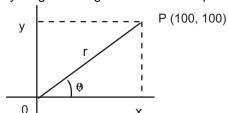

Example Programming

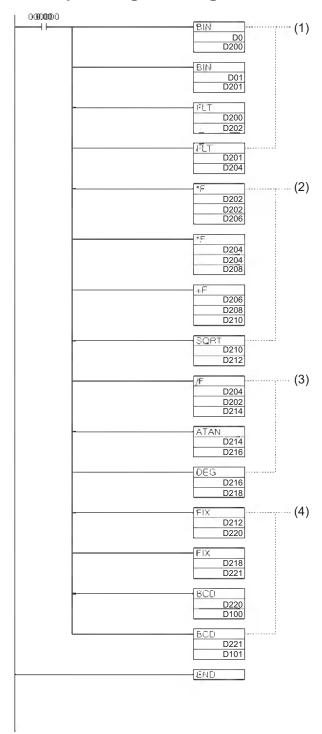

Calculations

Distance
$$r = \sqrt{x^2 + y^2}$$

Angle
$$\theta = \tan^{-1} \left(\frac{y}{x} \right)$$

Example: Given the coordinates (100, 100), the distance r and the angle θ can be calculated from the above equation.

Distance
$$r = \sqrt{100^2 + 100^2} = 141.4214$$


Angle
$$\theta = \tan^{-1} \left(\frac{100}{100} \right) \times 180 \div \pi = 45.0$$

DM Contents

- (1) This section of the program converts the data from BCD to floating-point.
 - The data area from D200 onwards is used as a work area.
 - First BIN(023) is used to temporarily convert the BCD data to binary data, and then FLT(452) is used to convert the binary data to floating-point data.
 - The value of x that has been converted to floatingpoint data is output to D203 and D202.
 - The value of y that has been converted to floatingpoint data is output to D205 and D204.
- (2) In order to find the distance r, Floating-point Math Instructions are used to calculate the square root of x^2+y^2 . The result is then output to D213 and D212 as floating-point data.
- (3) In order to find the angle θ , Floating-point Math Instructions are used to calculate \tan^{-1} (y/x). ATAN(465) outputs the result in radians, so DEG(459) is used to convert to degrees. The result is then output to D219 and D218 as floating-point data.
- (4) The data is converted back from floating-point to BCD.
 - First FIX(450) is used to temporarily convert the floating-point data to binary data, and then BCD(024) is used to convert the binary data to BCD data.
 - The distance r is output to D100.
 - The angle θ is output to D101.

FIX/FIXL

Instruction	Mnemonic	Variations	Function code	Function
FLOATING TO 16-BIT	FIX	@FIX	450	Converts a 32-bit floating-point value to 16-bit signed binary data and places the result in the specified result word.
FLOATING TO 32-BIT	FIXL	@FIXL	451	Converts a 32-bit floating-point value to 32-bit signed binary data and places the result in the specified result words.

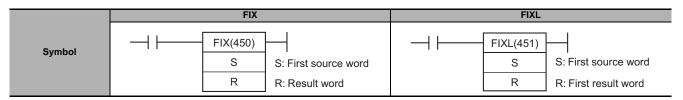

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	FIX	FIXL	FIX	FIXL	
S	First source word	REAL	REAL	2	2	
R	First result word	INT	DINT	1	2	


Operand Specifications

Area			٧	Vord ad	ldresse	s			Indirect DM/EM addresses		Con-		Registers		тк	CF	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	UF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			OK				
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK .		OK		OK .				

Name	Label	Operation
Error Flag	ER	 FIX ON if the integer portion of S+1 and S is not within the range of -32,768 to 32,767. FIXL ON if the integer portion of S+1 and S is not within the range of -2,147,483,648 to 2,147,483,647. ON if the data in S+1 and S is not a number (NaN). OFF in all other cases.
Equals Flag	=	ON if the result is 0000. OFF in all other cases.
Negative Flag	N	ON if bit 15 of the result is ON. OFF in all other cases.

FIX

FIX(450) converts the integer portion of the 32-bit floating-point number in S+1 and S (IEEE754-format) to 16-bit signed binary data and places the result in R.

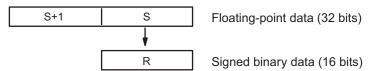

Only the integer portion of the floating-point data is converted, and the fraction portion is truncated.


Example conversions:

A floating-point value of 3.5 is converted to 3.

A floating-point value of -3.5 is converted to -3.

FIXL

FIXL(451) converts the integer portion of the 32-bit floating-point number in S+1 and S (IEEE754-format) to 32-bit signed binary data and places the result in R+1 and R.

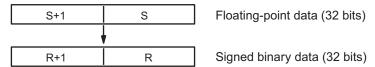

Only the integer portion of the floating-point data is converted, and the fraction portion is truncated.


Example conversions:

A floating-point value of 2,147,483,640.5 is converted to 2,147,483,640.

A floating-point value of -214,748,340.5 is converted to -214,748,340.

FLT/FLTL

Instruction	Mnemonic	Variations	Function code	Function
16-BIT TO FLOATING	FLT	@FLT	452	Converts a 16-bit signed binary value to 32-bit floating-point data and places the result in the specified result words.
32-BIT TO FLOATING	FLTL	@FLTL	453	Converts a 32-bit signed binary value to 32-bit floating-point data and places the result in the specified result words.

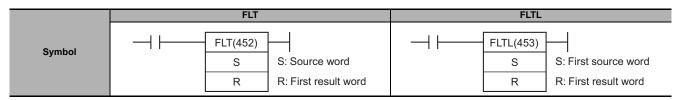

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	FLT	FLTL	FLT	FLTL	
S	First source word	INT	DINT	1	2	
R	First result word	REAL	REAL	2	2	

Operand Specifications

۸۰	Area -			v	Vord ad	ldresse	s			Indirect DM/EM addresses C		Con-	Registers		тк	CF	Pulse	TR	
AI		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		CF	bits	bits
5	S R	ок ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK		OK				
F		5	OK	5			UK	OK OK	OK	OK	OK.				OK				

Name	Label	Operation
Error Flag	ER	OFF
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Negative Flag	N	ON if the result is negative. OFF in all other cases.

• FLT

FLT(452) converts the 16-bit signed binary value in S to 32-bit floating-point data (IEEE754-format) and places the result in R+1 and R. A single 0 is added after the decimal point in the floating-point result.



Only values within the range of -32,768 to 32,767 can be specified for S. To convert signed binary data outside of that range, use FLTL(453).

Example conversions:

A signed binary value of 3 is converted to 3.0. A signed binary value of -3 is converted to -3.0.

• FLTL

FLTL(453) converts the 32-bit signed binary value in S+1 and S to 32-bit floating-point data (IEEE754-format) and places the result in R+1 and R. A single 0 is added after the decimal point in the floating-point result.




Signed binary data within the range of -2,147,483,648 to 2,147,483,647 can be specified for S+1 and S. The floating point value has 24 significant binary digits (bits). The result will not be exact if a number greater than 16,777,215 (the maximum value that can be expressed in 24-bits) is converted by FLTL(453).

Example Conversions:

A signed binary value of 16,777,215 is converted to 16,777,215.0. A signed binary value of -16,777,215 is converted to -16,777,215.0.

+F, -F, *F, /F

Instruction	Mnemonic	Variations	Function code	Function
FLOATING-POINT ADD	+F	@+F	454	Adds two 32-bit floating-point numbers and places the result in the specified result words.
FLOATING-POINT SUBTRACT	_F	@ - F	455	Subtracts one 32-bit floating-point number from another and places the result in the specified result words.
FLOATING-POINT MULTIPLY	*F	@*F	456	Multiplies two 32-bit floating-point numbers and places the result in the specified result words.
FLOATING-POINT DIVIDE	/F	@/F	457	Divides one 32-bit floating-point number by another and places the result in the specified result words.

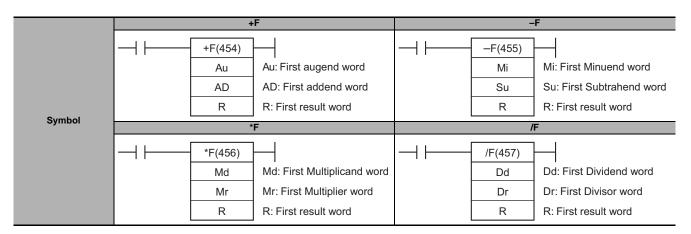

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Ope	rand	Description	Data type	Size	
+F	Au	First augend word	REAL	2	
+1	AD	First addend word	REAL	2	
-F	Mi	First Minuend word	REAL	2	
	Su	First Subtrahend word	REAL		
*F	Md	First Multiplicand word	REAL	2	
r	Mr	First Multiplier word	REAL	2	
/F	Dd	First Dividend word	REAL	2	
/୮	Dr	First Divisor word	REAL	2	
F	R	First result word	REAL	2	

Operand Specifications

Area			V	Vord ad	ldresse	s			Indirect DM/EM addresses Con- Registers TK CF		Regis				CE	Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR IR	Indirect using IR	IK	G	bits	bits
Au, AD, Mi, Su, Md, Mr, Dd, Dr	ОК	ок	ОК	ОК	ОК	ОК	ок	ОК	ОК	ОК	ОК			ОК				
R																		

Refer to Writing Floating-point Constants on page 468 for information on floating-point expressions.


Flags

Name	Label	Operation
Error Flag	ER	ON if Au, AD, Mi, Su, Md, Dd is not recognized as floating-point data. +F • ON if the augend or addend data is not a number (NaN). • ON if +∞ and -∞ are added. -F • ON if the minuend or subtrahend is not a number (NaN). • ON if +∞ is subtracted from +∞. • ON if -∞ is subtracted from -∞. *F • ON if the multiplicand or multiplier is not a number (NaN). • ON if +∞ and 0 are multiplied. • ON if -∞ and 0 are multiplied. /F • ON if the dividend or divisor is not a number (NaN). • ON if the dividend and divisor are both 0. • ON if the dividend and divisor are both +∞ or -∞. OFF in all other cases.
Equals Flag	=	ON if both the exponent and mantissa of the result are 0.OFF in all other cases.
Overflow Flag	OF	ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	ON if the absolute value of the result is too small to be expressed as a 32-bit floating-point value. OFF in all other cases.
Negative Flag	N	ON if the result is negative. OFF in all other cases.


Function

The data specified in Au/Mi/Md/Dd and the data specified in AD/Su/Mr/Dr are added (+F), subtracted (-F), multiplied (*F), or divided (/F) as single-precision floating-point data (32 bits: IEEE754) and output to D+1, D.

● +F

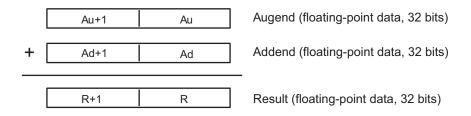

● -F

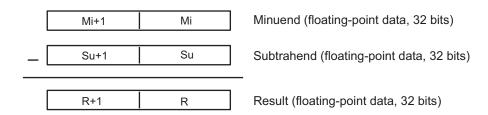

● *F

	Md+1	Md	Multiplicand (floating-point data, 32 bits)
×	Mr+1	Mr	Multiplier (floating-point data, 32 bits)
	R+1	R	Result (floating-point data, 32 bits)

• /F

	Dd+1	Dd	Dividend (floating-point data, 32 bits)
•	Dr+1	Dr	Divisor (floating-point data, 32 bits)
	R+1	R	Result (floating-point data, 32 bits)

- If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the Overflow Flag will turn ON and the result will be output as $\pm \infty$.
- If the absolute value of the result is less than the minimum value that can be expressed as floatingpoint data, the Underflow Flag will turn ON and the result will be output as 0.

Operation rules

The result of an operation is output as shown below depending on the combination of floating-point data.

• FLOATING-POINT ADD (+F)

		Augend							
Addend	0	Numeral	+∞	-∞	NaN				
0	0	Numeral	+∞	-∞					
Numeral	Numeral	See note 1.	+∞ (See note 2.)	-∞ (See note 2.)					
+∞	+∞	+∞ (See note 2.)	+∞	ER					
-∞	-∞	-∞ (See note 2.)	ER						
NaN					ER				

Note 1 The results could be zero (including underflows), a numeral, $+\infty$, or $-\infty$.

2 With CJ1H-CPU□□H-R CPU Units, an undetermined value will be output.

ER The Error Flag will be turned ON and the instruction will not be executed.

FLOATING-POINT SUBTRACT (-F)

	Minuend							
Subtrahend	0	Numeral	+∞	-∞	NaN			
0	0	Numeral	+∞					
Numeral	Numeral	See note 1.	+∞ (See note 2.)	-∞ (See note 2.)				
+∞	-∞ (See note 2.)	$-\infty$ (See note 2.)	ER					
-∞	+∞	+∞	+∞	ER				
NaN					ER			

Note 1 The results could be zero (including underflows), a numeral, $+\infty$, or $-\infty$.

2 With CJ1H-CPU□□H-R CPU Units, an undetermined value will be output.

ER The Error Flag will be turned ON and the instruction will not be executed.

• FLOATING-POINT MULTIPLY (*F)

	Multiplicand							
Multiplier	0	Numeral	+∞	-∞	NaN			
0	0	0	ER	ER				
Numeral	0	See note 1.	+/-∞ (See note 2.)	+/-∞ (See note 2.)				
+∞	ER	+/-∞ (See note 2.)	+∞					
-∞	ER	+/-∞ (See note 2.)		+∞				
NaN		•	•	•	ER			

- **Note 1** The results could be zero (including underflows), a numeral, $+\infty$, or $-\infty$.
 - 2 With CJ1H-CPU□□H-R CPU Units, an undetermined value will be output.
- **ER** The Error Flag will be turned ON and the instruction will not be executed.


• FLOATING-POINT DIVIDE (/F)

	Dividend									
Divisor	0	Numeral	+∞	-∞	NaN					
0	ER	+/-∞ (See note 3.)	+∞ (See note 3.)	-∞ (See note 3.)						
Numeral	0	See note 2.	+/∞	+/-∞						
+∞	0	0 (See note 1 and 3.)	ER	ER						
-∞	0	0 (See note 1 and 3.)	ER	ER						
NaN					- ER					

- Note 1 The results will be zero for underflows.
 - **2** The results could be zero (including underflows), a numeral, $+\infty$, or $-\infty$.
 - 3 With CJ1H-CPU□□H-R CPU Units, an undetermined value will be output.
- **ER** The Error Flag will be turned ON and the instruction will not be executed.

RAD

Instruction	Mnemonic	Variations	Function code	Function
DEGREES TO RADIANS	RAD	@RAD	458	Converts a 32-bit floating-point number from degrees to radians and places the result in the specified result words.

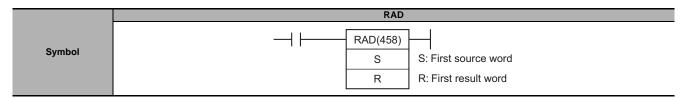

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect DM/EM addresses Con-		Registers			TK	CF	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR I IR I	Indirect using IR	IK C	Cr	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			OK				
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the source data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	 ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	 ON if the absolute value of the result is too small to be expressed as a 32-bit floating-point value. OFF in all other cases.
Negative Flag	N	ON if the result is negative. OFF in all other cases.

RAD(458) converts the 32-bit floating-point number in S+1 and S from degrees to radians and places the result in R and R+1. (The floating point source data must be in IEEE754 format.)

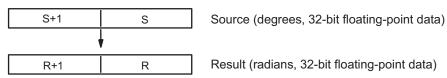


Degrees are converted to radians by means of the following formula:

Degrees $\times \pi/180$ = radians

- Note If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the Overflow Flag will turn ON and the result will be output as ±∞.
 - If the absolute value of the result is less than the minimum value that can be expressed as floating-point data, the Underflow Flag will turn ON and the result will be output as 0.

DEG

Instruction	Mnemonic	Variations	Function code	Function
RADIANS TO DEGREES	DEG	@DEG	459	Converts a 32-bit floating-point number from radians to degrees and places the result in the specified result words.

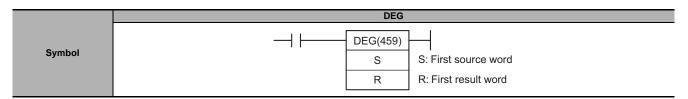

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect DM/EM addresses Con-		Registers			TK	CF	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR I IR I	Indirect using IR	IK C	Cr	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			OK				
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	ON if the source data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	ON if both the exponent and mantissa of the result are 0.OFF in all other cases.
Overflow Flag	OF	 ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	 ON if the absolute value of the result is too small to be expressed as a 32-bit floating-point value. OFF in all other cases.
Negative Flag	N	ON if the result is negative. OFF in all other cases.

DEG(459) converts the 32-bit floating-point number in S+1 and S from radians to degrees and places the result in R+1 and R. (The floating point source data must be in IEEE754 format.)

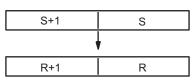

Source (radians, 32-bit floating-point data)

Result (degrees, 32-bit floating-point data)


Radians are converted to degrees by means of the following formula:

Radians \times 180/ π = degrees

- Note If the absolute value
- **Note** If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the Overflow Flag will turn ON and the result will be output as $\pm \infty$.
 - If the absolute value of the result is less than the minimum value that can be expressed as floating-point data, the Underflow Flag will turn ON and the result will be output as 0.

SIN/COS/TAN

Instruction	Mnemonic	Variations	Function code	Function
SINE	SIN	@SIN	460	Calculates the sine of a 32-bit floating-point number (in radians) and places the result in the specified result words.
COSINE	cos	@cos	461	Calculates the cosine of a 32-bit floating-point number (in radians) and places the result in the specified result words.
TANGENT	TAN	@TAN	462	Calculates the tangent of a 32-bit floating-point number (in radians) and places the result in the specified result words.

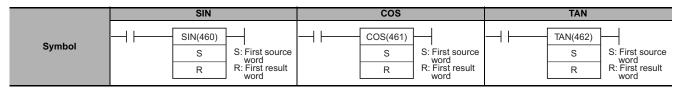

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications


Area			v	Vord ad	ldresse	s			Indirect DM/EM addresses		Con-	Registers		TK	CF	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR IR	Indirect using IR	Ľ	Cr	bits	bits
S	OK	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			OK				
R	R OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the source data is not recognized as floating-point data. ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 65,535. OFF in all other cases.
Equals Flag	=	ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	OFF
Underflow Flag	UF	OFF
Negative Flag	N	ON if the result is negative. OFF in all other cases.

SIN

SIN(460) calculates the sine of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.


(The floating point source data must be in IEEE754 format.)

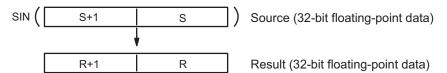

Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S.

For information on converting from degrees to radians, see 3-15-22 LOGARITHM: LOG(468) DEGREES TO RADIANS: RAD(458).


The following diagram shows the relationship between the angle and result.

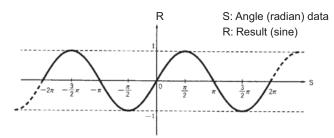

• cos

COS(461) calculates the cosine of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.


(The floating point source data must be in IEEE754 format.)

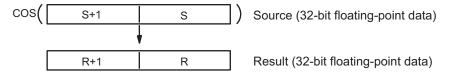

Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S.

For information on converting from degrees to radians, see 3-15-22 LOGARITHM: LOG(468) DEGREES TO RADIANS: RAD(458).

The following diagram shows the relationship between the angle and result.

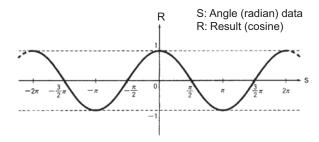

TAN

TAN(462) calculates the tangent of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.

(The floating point source data must be in IEEE754 format.)




Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S.

For information on converting from degrees to radians, see 3-15-22 LOGARITHM: LOG(468) DEGREES TO RADIANS: RAD(458).

• If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the Overflow Flag will turn ON and the result will be output as $\pm \infty$.

The following diagram shows the relationship between the angle and result.

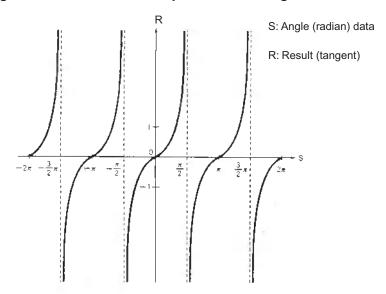

SINQ/COSQ/TANQ

Instruction	Mnemonic	Variations	Function code	Function
HIGH-SPEED SINE	SINQ	@SINQ	475	Calculates the sine of a 32-bit floating-point number (in radians) and places the result in the specified result words.
HIGH-SPEED COSINE	COSQ	@COSQ	476	Calculates the cosine of a 32-bit floating-point number (in radians) and places the result in the specified result words.
HIGH-SPEED TANGENT	TANQ	@TANQ	477	Calculates the tangent of a 32-bit floating-point number (in radians) and places the result in the specified result words.

	SINQ		COSQ		TANQ	
Symbol	SINQ(475) S R	S: First source word R: First result word	 COSQ(476) S R	S: First source word R: First result word	 TANQ(477) S R	S: First source word R: First result word

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2


Operand Specifications

	Area		Word addresses							Indirect DM/EM addresses Con-		Registers			тк	CF	Pulse	TR	
	Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	Ľ	CF	bits	bits
_	S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK	OK			OK				
	R	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

SINQ


SINQ(475) calculates the sine of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.

(The floating point source data must be in IEEE754 format.)

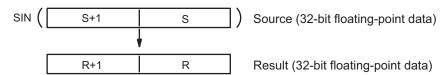

- Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S.
 For information on converting between degrees and radians, see 3-15-9 DEGREES TO RADIANS: RAD(458) and 3-15-10 RADIANS TO DEGREES: DEG(459).
- If the angle is outside of the range -65,535 to 65,535, an unpredictable value will be output, but the Error Flag will not be turned ON.


The following diagram shows the relationship between the input data and result.

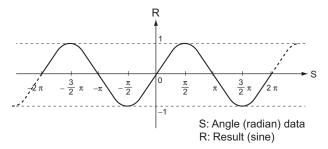

COSQ


COSQ(476) calculates the cosine of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.

(The floating point source data must be in IEEE754 format.)

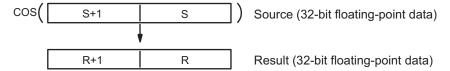

- Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S. For information on converting between degrees and radians, see 3-15-9 DEGREES TO RADIANS: RAD(458) and 3-15-10 RADIANS TO DEGREES: DEG(459).
- If the angle is outside of the range -65,535 to 65,535, an unpredictable value will be output, but the Error Flag will not be turned ON.


The following diagram shows the relationship between the input data and result.

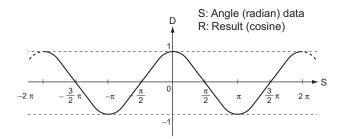

TANQ


TANQ(477) calculates the tangent of the angle (in radians) expressed as a 32-bit floating-point value in S+1 and S and places the result in R+1 and R.

(The floating point source data must be in IEEE754 format.

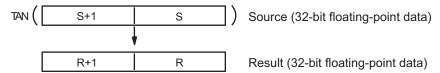

- Specify the desired angle (-65,535 to 65,535) in radians in S+1 and S. For information on converting between degrees and radians, see 3-15-9 DEGREES TO RADIANS: RAD(458) and 3-15-10 RADIANS TO DEGREES: DEG(459).
- If the angle is outside of the range -65,535 to 65,535, an unpredictable value will be output, but the Error Flag will not be turned ON.
- If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the result will be output as $\pm \infty$ or 0.

The following diagram shows the relationship between the input data and result.

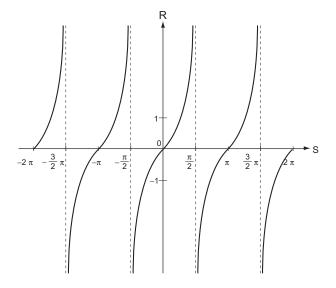

Precautions

• SINQ, COSQ

SINQ(475)/COSQ(476) differs from SIN(460)/COS(461) in the following respects:

- The instruction has improved performance.
- The instruction length is 8 steps.
- The Condition Flags are not refreshed.
- An unpredictable value will be output if the angle data is out-of-range.
- The data cannot be input or output at a Programming Console. A question mark will be displayed.

TANQ

TANQ(477) differs from TAN(462) in the following respects:

- The instruction has improved performance.
- The instruction length is 15 steps.
- The Condition Flags are not refreshed.
- An unpredictable value will be output if the angle data is out-of-range.
- The data cannot be input or output at a Programming Console. A question mark will be displayed.
- An unpredictable value will be output if the angle data is $n\pi/2$ (n =, -3, -1, 1, 3.....).

ASIN/ACOS/ATAN

Instruction	Mnemonic	Variations	Function code	Function
ARC SINE	ASIN	@ASIN	463	Calculates the arc sine of a 32-bit floating-point number and places the result in the specified result words.
ARC COSINE	ACOS	@ACOS	464	Calculates the arc cosine of a 32-bit floating-point number and places the result in the specified result words.
ARC TANGENT	ATAN	@ATAN	@ ATAN 465 Calculates the arc tangent of number and places the resu result words.	

	ASIN		ACOS		ATAN	
Symbol	ASIN(463) S R	S: First source word R: First result word	 ACOS(464) S R	S: First source word R: First result word	 ATAN(465) S R	S: First source word R: First result word

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	ASIN: SIN (sine) data rightmost word number ACOS: COS (cosine) data rightmost word number ATAN: TAN (tangent) data rightmost word number	REAL	2
R	First result word	REAL	2

Operand Specifications

I	Area			v	Vord ad	dresse	s			Indirect addre	DM/EM esses	Con-		Regis	ters	тк	CF	Pulse bits	TR
ı	Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		GF		bits
_	S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK	OK			ОК				
	R	OK	OK	OK	OK	ÖK	ÖK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	ON if the source data is not recognized as floating-point data. • ASIN ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 1.0. • ACOS ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 1.0. • ATAN ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	OFF
Underflow Flag	UF	OFF
Negative Flag	N	ASIN ON if the result is negative. OFF in all other cases. ACOS OFF

Function

ASIN


ASIN(463) computes the angle (in radians) for a sine value expressed as a 32-bit floating-point number in S+1 and S and places the result in R+1 and R.

(The floating point source data must be in IEEE754 format.)



The result is output to words R+1 and R as an angle (in radians) within the range of $-\pi/2$ to $\pi/2$.

The following diagram shows the relationship between the input data and result.

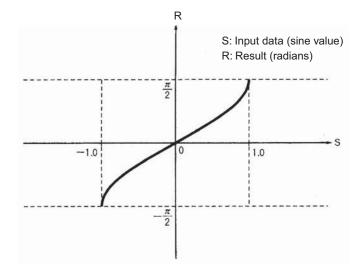


ACOS

ACOS(464) computes the angle (in radians) for a cosine value expressed as a 32-bit floating-point number in S+1 and S and places the result in R+1 and R. (The floating point source data must be in IEEE754 format.)



The result is output to words R+1 and R as an angle (in radians) within the range of 0 to π .

The following diagram shows the relationship between the input data and result.

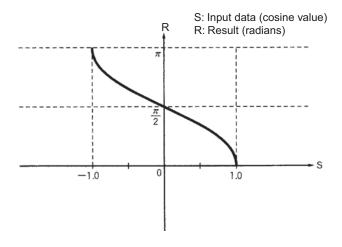


ATAN

ATAN(465) computes the angle (in radians) for a tangent value expressed as a 32-bit floating-point number in S+1 and S and places the result in R+1 and R. (The floating point source data must be in IEEE754 format.)




The result is output to words R+1 and R as an angle (in radians) within the range of $-\pi/2$ to $\pi/2$.

The following diagram shows the relationship between the input data and result.

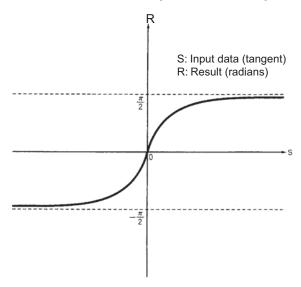

SQRT

Instruction	Mnemonic	Variations	Function code	Function
SQUARE ROOT	SQRT	@SQRT	466	Calculates the square root of a 32-bit floating-point number and places the result in the specified result words.

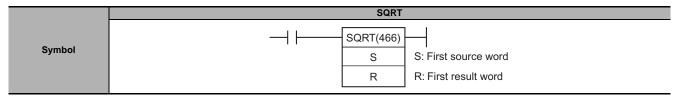

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands


Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications


Area			v	Vord ad	ldresse	s			Indirect addre		Con-	Registers			TK	CF	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR IR	Indirect using IR	IK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК	OK	OK			OK				
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the source data is not recognized as floating-point data. ON if the source data is negative. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	OFF
Negative Flag	N	OFF

SQRT(466) calculates the square root of the 32-bit floating-point number in S+1 and S and places the result in R+1 and R. (The floating point source data must be in IEEE754 format.)

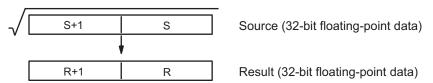


The following diagram shows the relationship between the input data and result.

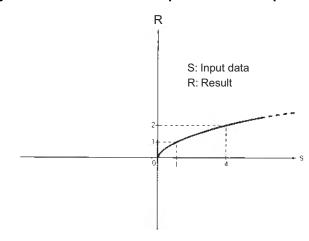

EXP

Instruction	Mnemonic	Variations	Function code	Function
EXPONENT	EXP	@EXP	467	Calculates the natural (base e) exponential of a 32-bit floating-point number and places the result in the specified result words.

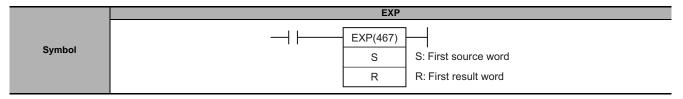

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands


Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect addre		Con-	Registers			TK	CF	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	DR IR	Indirect using IR	IK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК	OK	OK			OK				
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Name	Label	Operation
Error Flag	ER	 ON if the source data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	 ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	 ON if the absolute value of the result is too small to be expressed as a 32-bit floating-point value. OFF in all other cases.
Negative Flag	N	OFF

EXP(467) calculates the natural (base e) exponential of the 32-bit floating-point number in S+1 and S and places the result in R+1 and R. In other words, EXP(467) calculates e^{x} (x = source) and places the result in R+1 and R.

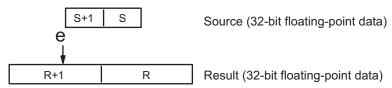


The constant e is 2.718282.

The following diagram shows the relationship between the input data and result.

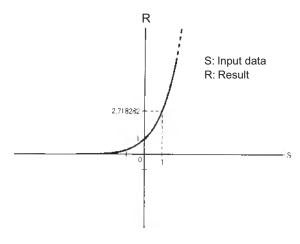

LOG

Instruction	Mnemonic	Variations	Function code	Function
LOGARITHM	LOG	@LOG	468	Calculates the natural (base e) logarithm of a 32-bit floating-point number and places the result in the specified result words.

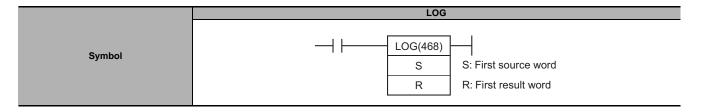

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
S	First source word	REAL	2
R	First result word	REAL	2

Operand Specifications

Area		Word addresses Indirect DM/EM addresses					Con-	Registers			Flags		Pulse	TR				
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	OK	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			OK				
R	OK OK	OK	OK	OK	OK	OK	OK	OK	UK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the source data is not recognized as floating-point data. ON if the source data is negative. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	 ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	OFF
Negative Flag	N	ON if the result is negative. OFF in all other cases.

LOG(468) calculates the natural (base e) logarithm of the 32-bit floating-point number in S+1 and S and places the result in R+1 and R.

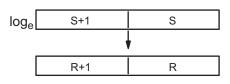


Source (32-bit floating-point data)

Result (32-bit floating-point data)


The constant e is 2.718282.

The following diagram shows the relationship between the input data and result.

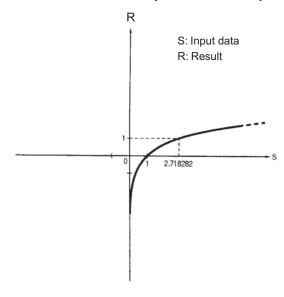

PWR

Instruction	Mnemonic	Variations	Function code	Function	
EXPONENTIAL POWER	PWR	@PWR	840	Raises a 32-bit floating-point number to the power of another 32-bit floating-point number.	

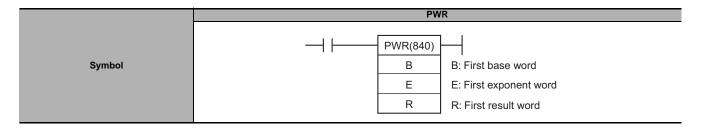

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
В	First base word	REAL	2
E	First exponent word	REAL	2
R	First result word	REAL	2

Operand Specifications

Area			٧	Vord a	ddress	ses			Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits	
B, E	OK	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК					
R	OK OK		OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Name	Label	Operation
Error Flag	ER	 ON if the base (B+1 and B) or exponent (E+1 and E) is not recognized as floating-point data. ON if the base (B+1 and B) or exponent (E+1 and E) is not a number (NaN). ON if the base (B+1 and B) is 0 and the exponent (E+1 and E) is less than 0. (Division by 0) ON if the base (B+1 and B) is negative and the exponent (E+1 and E) is non-integer. (Root of a negative number) OFF in all other cases.
Equals Flag	=	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	OF	 ON if the absolute value of the result is too large to be expressed as a 32-bit floating-point value. OFF in all other cases.
Underflow Flag	UF	 ON if the absolute value of the result is too small to be expressed as a 32-bit floating-point value. OFF in all other cases.
Negative Flag	N	ON if the result is negative. OFF in all other cases.


PWR(840) raises the 32-bit floating-point number in B+1 and B to the power of the 32-bit floating-point number in E+1 and E. In other words, PWR(840) calculates XY (X = B+1 and B; Y = E+1 and E).

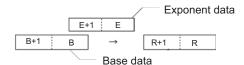

For example, when the base words (B+1 and B) contain 3.1 and the exponent words (E+1 and E) contain 3, the result is 3.1^3 or 29.791.

=F, <>F, <F, <=F, >F, >=F

Instruction	Mnemonic	Variations	Function code	Function
Single-precision Floating-point Comparison	=F		329 330 331 332 333 334	These input comparison instructions compare two single-precision floating point values (32-bit IEEE754 constants and/or the contents of specified words) and create an ON execution condition when the comparison condition is true.

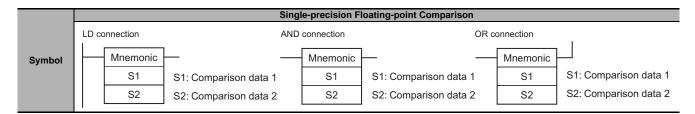

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size		
S1	Comparison data 1	REAL	2		
S2	Comparison data 2	REAL	2		

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	O	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S1 S2	ОК	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		ОК	ОК				

Name	Label	Operation
Error Flag	P_ER	OFF
Greater Than Flag	P_GT	 ON if S1+1, S1 > S2+1, S2. OFF in all other cases.
Greater Than or Equal Flag	P_GE	 ON if S1+1, S1 ≥ S2+1, S2. OFF in all other cases.
Equal Flag	P_EQ	 ON if S1+1, S1 = S2+1, S2. OFF in all other cases.
Not Equal Flag	P_NE	 ON if S1+1, S1 ≠ S2+1, S2. OFF in all other cases.
Less Than Flag	P_LT	 ON if S1+1, S1 < S2+1, S2. OFF in all other cases.
Less Than or Equal Flag	P_LE	 ON if S1+1, S1 ≤ S2+1, S2. OFF in all other cases.
Negative Flag	P_N	Unchanged

Function

The input comparison instruction compares the data specified in S1 and S2 as single-precision floating point values (32-bit IEEE754 data) and creates an ON execution condition when the comparison condition is true.


When the data is stored in words, S1 and S2 specify the first of two words containing the 32-bit data. It is also possible to input the floating-point data as an 8-digit hexadecimal constant.

The input comparison instructions are treated just like the LD, AND, and OR instructions to control the execution of subsequent instructions.

LD: The instruction can be connected directly to the left bus bar.

AND: The instruction cannot be connected directly to the left bus bar.

OR: The instruction can be connected directly to the left bus bar.

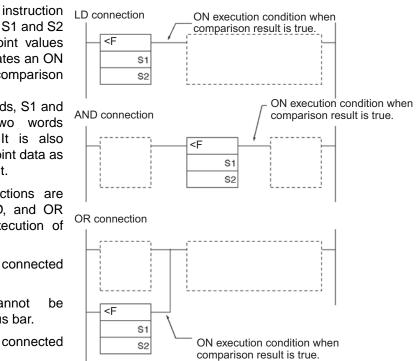

Options

With the three input types and six symbols, there are 18 different possible combinations.

Symbol (LD, AND, and OR cannot be used in a ladder program)

LD=, AND=, OR=, LD<>, AND<>, OR<>, LD<, AND<, OR<, LD<=, AND<=, OR<=, LD>, AND>, OR>, LD>=, AND>=, OR>=

Option (data format)

F: Single-precision floating-point data

Code	Mnemonic	Name	Function
329	LD=F	LOAD FLOATING EQUAL	True if
	AND=F	AND FLOATING EQUAL	C1 = C2
	OR=F	OR FLOATING EQUAL	
330	LD<>F	LOAD FLOATING NOT EQUAL	True if
AND<>F		AND FLOATING NOT EQUAL	C1 ≠ C2
	OR<>F	OR FLOATING NOT EQUAL	
331	LD <f< td=""><td>True if</td></f<>	True if	
	AND <f< td=""><td>AND FLOATING LESS THAN</td><td>C1 < C2</td></f<>	AND FLOATING LESS THAN	C1 < C2
	OR <f< td=""><td>OR FLOATING LESS THAN</td><td></td></f<>	OR FLOATING LESS THAN	
332	LD<=F	LOAD FLOATING LESS THAN OR EQUAL	True if
	AND<=F	AND FLOATING LESS THAN OR EQUAL	C1 ≤ C2
	OR<=F	OR FLOATING LESS THAN OR EQUAL	
333	LD>F	LOAD FLOATING GREATER THAN	True if
	AND>F	AND FLOATING GREATER THAN	C1 > C2
	OR>F	OR FLOATING GREATER THAN	


Code	Mnemonic	Name	Function
325	LD>=F	LOAD FLOATING GREATER THAN OR EQUAL	True if
	AND>=F	AND FLOATING GREATER THAN OR EQUAL	C1 ≥ C2
	OR>=F	OR FLOATING GREATER THAN OR EQUAL	

Precautions


• Input comparison instructions cannot be used as right-hand instructions, i.e., another instruction must be used between them and the right bus bar.

Example Programming

When CIO 0.00 is ON in the following example, the floating point data in D101, D100 is compared to the floating point data in D201, D200. If the content of D101, D100 is less than that of D201, D200, execution proceeds to the next line and CIO 50.00 is turned ON. If the content of D101, D100 is not less than that of D201, D200, execution does not proceed to the next instruction line.

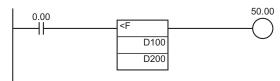


SINGLE FLOATING LESS THAN Comparison (<F)

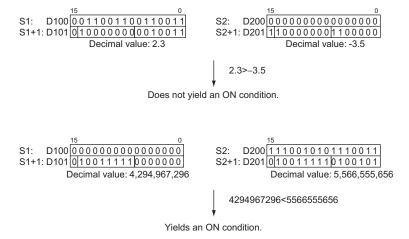

FSTR

Instruction	Mnemonic	Variations	Function code	Function
FLOATING-POINT TO ASCII	FSTR	@FSTR	448	Expresses a 32-bit floating-point value (IEEE754-format) in standard decimal notation or scientific notation and converts that value to ASCII text.

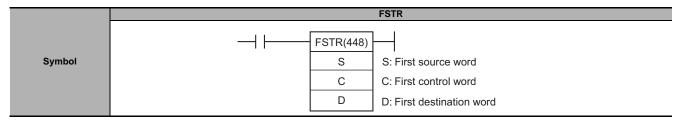


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	REAL	2
С	First control word	UINT	3
D	First destination word	UINT	Variable

C: First Control Word

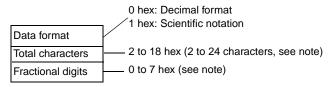

Note There are limits on the total number of characters and the number of fractional digits.

Operand Specifications

Area		Word addresses							Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK							
 С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the data in S+1 and S is not a valid floating-point number (NaN). ON if the data in S+1 and S is +0 or -o. ON if the Data Format setting in C is not 0000 or 0001. ON if the Total Characters setting in C+1 is not within the allowed range. (See 1. Limits on the Total Number of ASCII Characters above for details.) ON if the Fractional Digits setting in C+2 is not within the allowed range. (See 3. Limits on the Number of Digits in the Fractional Part above for details.) OFF in all other cases.
Equals Flag	P_EQ	ON if the conversion result is 0. OFF in all other cases.

Function

FSTR(448) expresses the 32-bit floating-point number in S+1 and S (IEEE754-format) in decimal notation or scientific notation according to the control data in words C to C+2, converts the number to ASCII text, and outputs the result to the destination words starting at D.

- The content of C (Data format) specifies whether to express the number in S+1, S in decimal notation or scientific notation.
 - · Decimal notation

Expresses a real number as an integer and fractional part.

Example: 124.56


· Scientific notation

Expresses a real number as an integer part, fractional part, and exponent part.

Example: 1.2456E-2 (1.2456×10⁻²)

- The content of C+1 (Total characters) specifies the number of ASCII characters after conversion including the sign symbol, numbers, decimal point and spaces.
- The content of C+2 (Fractional digits) specifies the number of digits (characters) below the decimal point.

The ASCII text is stored in D and subsequent words in the following order: leftmost byte of D, rightmost byte of D, leftmost byte of D+1, rightmost byte of D+1, etc.

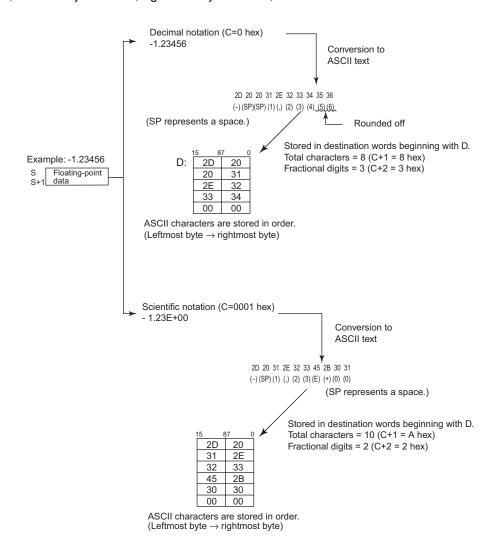


Storage of ASCII Text

After the floating-point number is converted to ASCII text, the ASCII characters are stored in the destination words beginning with D, as shown in the following diagrams. Different storage methods are used for decimal notation and scientific notation.


Decimal notation (C=0 hex)

Total number of characters

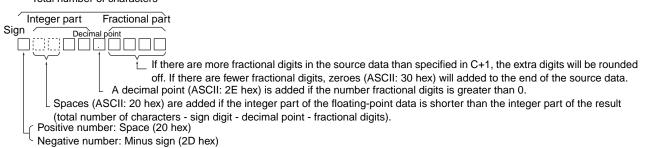

Scientific notation (C=1 hex)

Total number of characters

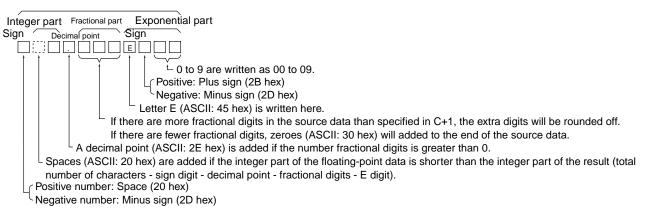

Note Either one or two bytes of zeroes are added to the end of ASCII text as an end code.

- Total number of characters odd: 00 hex is stored after the ASCII text.
- Total number of characters even: 0000 hex is stored after the ASCII text.

Limits on the Number of ASCII Characters

There are limits on the number of ASCII characters in the converted number. The Error Flag will be turned ON if the number of characters exceeds the maximum allowed.


- Limits on the Total Number of ASCII Characters
 - 1) Decimal Notation (C = 0 hex)
 - When there is no fractional part (C+2 = 0 hex):
 2 ≤ Total Characters ≤ 24
 - When there is a fractional part (C+2 = 1 to 7 hex): (Fractional digits + 3) ≤ Total Characters ≤ 24
 - 2) Scientific Notation (C = 1 hex)
 - When there is no fractional part (C+2 = 0 hex):
 6 ≤ Total Characters ≤ 24
 - When there is a fractional part (C+2 = 1 to 7 hex): (Fractional digits + 7) ≤ Total Characters ≤ 24

- · Limits on the Number of Digits in the Integer Part
 - 1) Decimal Notation (C = 0 hex)
 - When there is no fractional part (C+2 = 0 hex):
 1 ≤ Number of Integer Digits ≤ 24
 - When there is a fractional part (C+2 = 1 to 7 hex):
 1 ≤ Number of Integer Digits ≤ (24 Fractional digits 2)
 - 2) Scientific Notation (C = 1 hex) 1 digit (fixed)
- · Limits on the Number of Digits in the Fractional Part
 - 1) Decimal Notation (C = 0 hex)
 - Fractional Digits ≤ 7
 - Also: Fractional Digits ≤ (Total Number of ASCII Characters 3)
 - 2) Scientific Notation (C =1 hex)
 - Fractional Digits ≤ 7
 - Also: Fractional Digits ≤ (Total Number of ASCII Characters 7)

Example Programming


Converting to ASCII Text in Decimal Notation

When CIO 0.00 is ON in the following example, FSTR(448) converts the floating-point data in D1 and D0 to decimal-notation ASCII text and writes the ASCII text to the destination words beginning with D100. The contents of the control words (D10 to D12) specify the details on the data format (decimal notation, 7 characters total, 3 fractional digits).

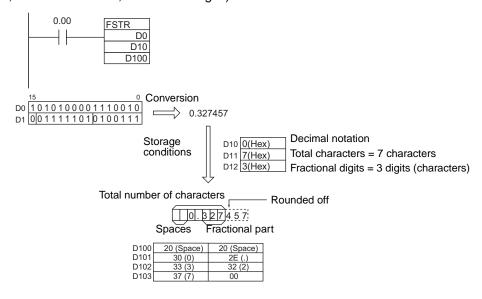


Converting to ASCII Text in Scientific Notation

When CIO 0.00 is ON in the following example, FSTR(448) converts the floating-point data in D1 and D0 to scientific-notation ASCII text and writes the ASCII text to the destination words beginning with D100. The contents of the control words (D10 to D12) specify the details on the data format (scientific notation, 11 characters total, 3 fractional digits).

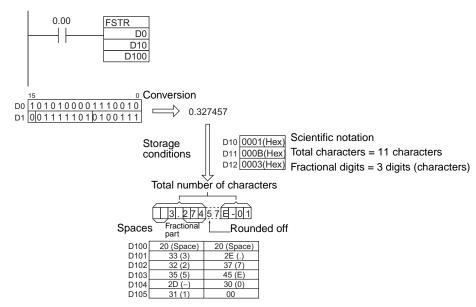

FVAL

Instruction	Mnemonic	Variations Function code		Function				
ASCII TO FLOATING-POINT	FVAL	@FVAL	449	Converts a number expressed in ASCII text (decimal or scientific notation) to a 32-bit floating-point value (IEEE754-format) and outputs the floating-point value to the specified words.				

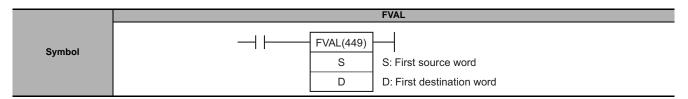

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
D	First destination word	REAL	2

Operand Specifications

Area			v	ord ad	ldresse	s			Indirect DM/EM addresses Con-						TK	CF	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				OK				
D	J OK	UK.	OK.	OK	OK	OK	OK	OK.	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the digits (integer and fractional parts) in the source data starting at S are not 30 to 39 hex (0 to 9). ON if the first two digits of the exponential part do not contain 45 and 2B hex (E+) or 45 and 2D hex (E-). in the source data starting at S are not 30 to 39 hex (0 to 9). ON if there are two or more exponential parts in the source data. ON if the data is +0 or -0 after conversion. ON if there are 0 characters in the text data. ON if a byte containing 00 hex is not found within the first 25 characters. OFF in all other cases.
Equals Flag	P_EQ	ON if the conversion result is 0. OFF in all other cases.

Function

FVAL(449) converts the specified ASCII text number (starting at word S) to a 32-bit floating-point number (IEEE754-format) and outputs the result to the destination words starting at D.

FVAL(449) can convert ASCII text in decimal or scientific notation if it meets the following conditions:

Up to 6 characters are valid, excluding the sign, decimal point, and exponent. Any characters beyond the 6th character will be ignored.

Decimal Notation

Real numbers expressed with an integer and fractional part.

Example: 124.56


· Scientific Notation

Real numbers expressed as an integer part, fractional part, and exponent part.


Example: 1.2456E-2 (1.2456×10⁻²)

The data format (decimal or scientific notation) is detected automatically.

The ASCII text must be stored in S and subsequent words in the following order: leftmost byte of S, rightmost byte of S, leftmost byte of S+1, rightmost byte of S+1, etc.

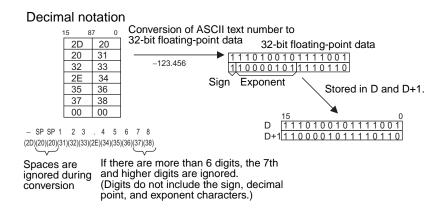


Scientific notation

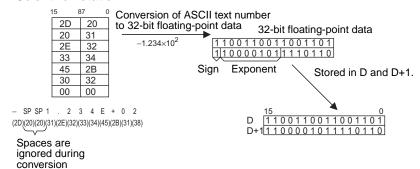


Storage of ASCII Text

The following diagrams show how the ASCII text number is converted to floating-point data. Different conversion methods are used for numbers stored with decimal notation and scientific notation.


ASCII Character Storage

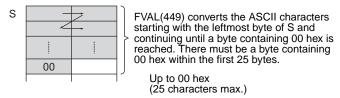

Decimal notation

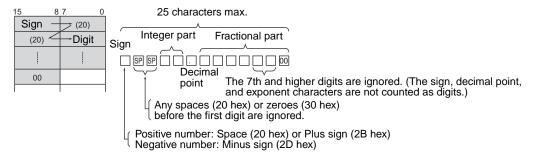


Scientific notation

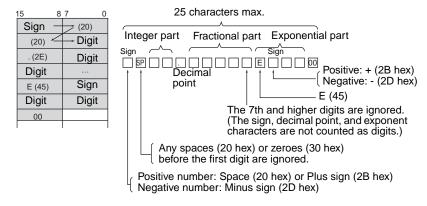

Example Programming


Converting ASCII Text in Decimal Notation to Floating-point Data

When CIO 0.00 is ON in the following example, FVAL(449) converts the specified decimal-notation ASCII text number in the source words starting at D0 to floating-point data and writes the result to destination words D100 and D101.

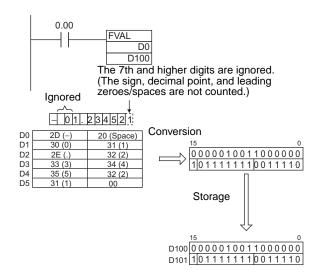


Converting ASCII Text in Scientific Notation

When CIO 0.00 is ON in the following example, FVAL(449) converts the specified scientific-notation ASCII text number in the source words starting at D0 to floating-point data and writes the result to destination words D100 and D101.

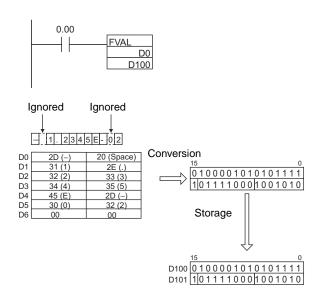

MOVF

Instruction	Mnemonic	Variations	Function code	Function
MOVE FLOATING-POINT (SINGLE)	MOVF	@MOVF	469	Transfers the specified 32-bit floating-point number to the destination words.

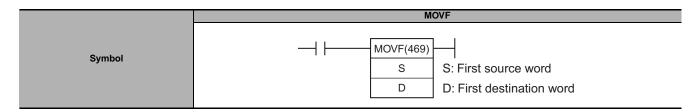

Applicable Program Areas

Area	Function block definitions	Block program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size	
S	First source word	REAL	2	
D	First destination word	REAL	2	

Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			ОК				
D	OIC	OIC	OIX	OIX	OIX	OIC	OIC	OIC	OK	OIC				OK				

Flags


Name	Label	Operation
Error Flag	P_ER	OFF
Equals Flag	P_EQ	ON if the source data is 0. OFF in all other cases.
Negative Flag	P_N	ON if the source data is negative. OFF in all other cases.

Function

MOVF(469) outputs the single-precision floating-point number (32-bit source data in IEEE754 format) from source words S+1 and S to destination words D+1 and D.



Example Programming

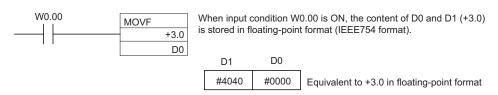

Double-precision Floating-point Instructions

Double-precision Floating-point Instructions

■ Data Format

Floating-point data expresses real numbers using a sign, exponent, and mantissa. When data is expressed in floating-point format, the following formula applies.

Real number = $(-1)^{s} 2^{e-1,023} (1.f)$

- s: Sign
- e: Exponent
- f: Mantissa

The floating-point data format conforms to the IEEE754 standards. Data is expressed in 32 bits, as follows:

,	Sign Exponent			nt		Mantissa	
	s		е			f	
	63	62		52	51		0


Data	No. of bits	Contents
s: sign	1	0: positive; 1: negative
e: exponent	11	The exponent (e) value ranges from 0 to 2,047. The actual exponent is the value remaining after 1,023 is subtracted from e, resulting in a range of -1,023 to 1,024. "e=0" and "e=2,047" express special numbers.
f: mantissa	52	The mantissa portion of binary floating-point data fits the format 2.0 > 1.f ≥1.0.

■ Number of Digits

Fifteen digits are effective for double-precision floating-point data.

■ Floating-point Data

- The following data can be expressed by floating-point data:
 - -∞
 - $-1.79769313486232 \times 10^{308} \le \text{value} \le -2.22507385850720 \times 10^{-308}$
 - 0
 - $2.22507385850720 \times 10^{-308} \le \text{value} \le 1.79769313486232 \times 10^{30}$
 - +∞
 - Not a number (NaN)

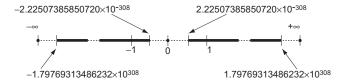

· Special Numbers

The formats for NaN, $\pm \infty$, and 0 are as follows:

- NaN*:e = 2,047 and f ≠ 0
- $+\infty$: e = 2,047, f = 0, and s= 0
- $-\infty$: e = 2,047, f = 0, and s= 1
- 0: e = 0 and f = 0

■ Writing Floating-point Data

When double-precision floating-point is specified for the data format in the I/O memory edit display in the CX-Programmer, standard decimal numbers input in the display are automatically converted to the double-precision floating-point format shown above (IEEE754-format) and written to I/O Memory. Data written in the IEEE754-format is automatically converted to standard decimal format when monitored on the display.



It is not necessary for the user to be aware of the IEEE754 data format when reading and writing double-precision floating-point data. It is only necessary to remember that double-precision floating point values occupy four words each.

■ Numbers Expressed as Floating-point Values

The following types of floating-point numbers can be used.

Mantissa (f)		Exponent (e)						
Mariussa (i)	0	Not 0 and not all 1's (1,024)	All 1's (1,024)					
0	0	Normalized number	Infinity					
Not 0	Non-normalized number		NaN					

Note A non-normalized number is one whose absolute value is too small to be expressed as a normalized number. Non-normalized numbers have fewer significant digits. If the result of calculations is a non-normalized number (including intermediate results), the number of significant digits will be reduced.

(1) Normalized Numbers

Normalized numbers express real numbers. The sign bit will be 0 for a positive number and 1 for a negative number.


The exponent (e) will be expressed from 1 to 2,046, and the real exponent will be 1,023 less, i.e., -1,022 to 1,023.

The mantissa (f) will be expressed from 0 to $(2^{52} - 1)$, and it is assumed that, in the real mantissa, bit 2^{52} is 1 and the decimal point follows immediately after it.

Normalized numbers are expressed as follows:

$$(-1)$$
(sign s) \times 2(exponent e)-1,023 \times (1 + mantissa \times 2-52)

Example

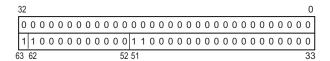

^{*} NaN (not a number) is not a valid floating-point number. Executing Double-precision Floating-point instructions will not result in NaN.

Sign: -

Exponent: 1,024 - 1,023 = 1

Mantissa: $1 + (2^{51} + 2^{50}) \times 2^{-52} = 1 + (2^{-1} + 2^{-2}) = 1 + (0.75) = 1.75$

Value: $-1.75 \times 2^1 = -3.5$

(2) Non-normalized numbers

Non-normalized numbers express real numbers with very small absolute values. The sign bit will be 0 for a positive number and 1 for a negative number.

The exponent (e) will be 0, and the real exponent will be -1,022.

The mantissa (f) will be expressed from 1 to $(2^{52} - 1)$, and it is assumed that, in the real mantissa, bit 2^{52} is 0 and the decimal point follows immediately after it.

Non-normalized numbers are expressed as follows:

$$(-1)(sign s) \times 2^{-1},022 \times (mantissa \times 2^{-52})$$

Example

Sign: -

Exponent: -1,022

Mantissa: $0 + (2^{51} + 2^{50}) \times 2^{-52} = 0 + (2^{-1} + 2^{-2}) = 0 + (0.75) = 0.75$

Value: $-0.75 \times 2^{-1,022} = 1.668805 \times 10^{-308}$

(3) Zero

Values of +0.0 and -0.0 can be expressed by setting the sign to 0 for positive or 1 for negative. The exponent and mantissa will both be 0. Both +0.0 and -0.0 are equivalent to 0.0. Refer to Floating-point Arithmetic Results, below, for differences produced by the sign of 0.0.

(4) Infinity

Values of $+\infty$ and $-\infty$ can be expressed by setting the sign to 0 for positive or 1 for negative. The exponent will be 2,047 (2¹¹ - 1) and the mantissa will be 0.

(5) NaN

NaN (not a number) is produced when the result of calculations, such as 0.0/0.0, ∞/∞ , or $\infty-\infty$, does not correspond to a number or infinity. The exponent will be 255 (2⁸ - 1) and the mantissa will be not 0.

Note There are no specifications for the sign of NaN or the value of the mantissa field (other than to be not 0).

■ Floating-point Arithmetic Results

(1) Rounding Results

The following methods will be used to round results when the number of digits in the accurate result of floating-point arithmetic exceeds the significant digits of internal processing expressions.

• If the result is close to one of two internal floating-point expressions, the closer expression will be used. If the result is midway between two internal floating-point expressions, the result will be rounded so that the last digit of the mantissa is 0.

(2) Overflows, Underflows, and Illegal Calculations

- Overflows will be output as either positive or negative infinity, depending on the sign of the result. Underflows will be output as either positive or negative zero, depending on the sign of the result.
- Illegal calculations will result in NaN. Illegal calculations include adding infinity to a number with the opposite sign, subtracting infinity from a number with the opposite sign, multiplying zero and infinity, dividing zero by zero, or dividing infinity by infinity.
- The value of the result may not be correct if an overflow occurs when converting a floatingpoint number to an integer.

(3) Precautions in Handling Special Values

The following precautions apply to handling zero, infinity, and NaN.

- The sum of positive zero and negative zero is positive zero.
- The difference between zeros of the same sign is positive zero.
- If any operand is a NaN, the results will be a NaN.
- Positive zero and negative zero are treated as equivalent in comparisons.
- Comparison or equivalency tests on one or more NaN will always be true for < > and always be false for all other instructions.

■ Double-precision Floating-point Calculation Results


- When the absolute value of the result is greater than the maximum value that can be expressed
 for floating-point data, the Overflow Flag will turn ON and the result will be output as ±∞. If the
 result is positive, it will be output as +∞; if negative, then -∞.
- The Equals Flag will only turn ON when both the exponent (e) and the mantissa (f) are zero after a calculation. A calculation result will also be output as zero when the absolute value of the result is less than the minimum value that can be expressed for floating-point data. In that case the Underflow Flag will turn ON.

■ Comparing Single-precision and Double-precision Calculations


This example shows the differences in between single-precision and double-precision calculations when the following vector expressed in polar coordinates is converted to rectangular coordinates A (x,y).

$$r = re^{j} \left(\frac{\pi}{360} \right) \theta$$

In this example, the 4-digit BCD angle (θ , in degrees) is read from D0 and the 4-digit BCD distance (r) is read from D1000.

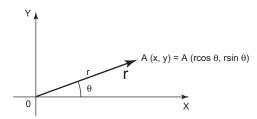


■ Ladder Program for the Single-precision Calculation

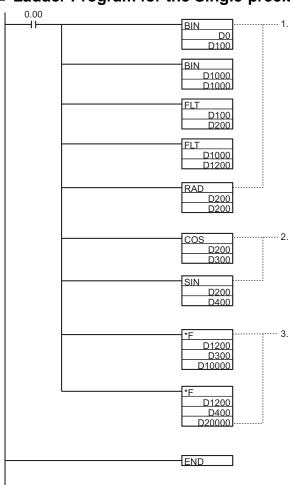

- This program section converts the BCD data to singleprecision floating-point data (32 bits, IEEE754-format).
 - The BIN(023) instructions convert the BCD data to binary and the FLT(452) instructions convert the binary data to single-precision floating-point data.
 - The floating-point data for the angle θ is output to D200 and D201.
 - RAD(458) converts the angle data in D200 and D201 to radians.
 - The floating-point data for the radius r is output to D1200 and D1201.
- 2. This program section calculates the sin θ and the cos θ as single-precision floating-point values.
 - The value for $\cos \theta$ is output to D300 and D301.
 - The value for $\sin \theta$ is output to D400 and D401.
- 3. This program section calculates x ($r \times \cos \theta$) and y ($r \times \sin \theta$).
 - The value for x (r \times cos θ) is output to D10000 and D10001
 - The value for y (r \times sin θ) is output to D20000 and D20001.

Coordinate	Floating-point number	Real number
x	4116 59CF	3.4202015399933
у	405A E495	9.3969259262085



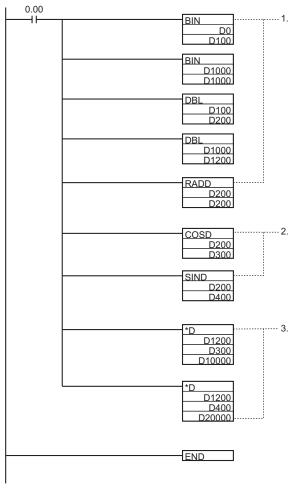

- This program section converts the BCD data to double-precision floating-point data (64 bits, IEEE754-format).
 - The BIN(023) instructions convert the BCD data to binary and the DBL(843) instructions convert the binary data to double-precision floating-point data.
 - The floating-point data for the angle θ is output to D200 and D203.
 - RADD(849) converts the angle data in words D200 and D203 to radians.
 - The floating-point data for the radius r is output to words D1200 and D1203.
- 2. This program section calculates the sin θ and the cos θ as double-precision floating-point values.
 - The value for $\cos \theta$ is output to words D300 and D303.
 - The value for $\sin \theta$ is output to words D400 and D403.
- 3. This program section calculates x ($r \times \cos \theta$) and y ($r \times \sin \theta$).
 - The value for x (r \times cos θ) is output to words D10000 and D10003.
 - The value for y (r × sin θ) is output to D20000 and D20003.


Coordinate	Floating-point number	Real number
х	4022 CB39 E973 5C32	3.4202014332567
у	400B 5C92 91AC 8EEB	9.3969262078591

■ Comparison of the Calculation Results

When the real-number results are compared, it is clear that the double-precision calculation yields a more accurate result.

FIXD/FIXLD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE FLOATING TO 16-BIT	FIXD	@FIXD	841	Converts a double-precision (64-bit) floating-point value to 16-bit signed binary data and places the result in the specified result word.
DOUBLE FLOATING TO 32-BIT	FIXLD	@FIXLD	842	Converts a double-precision (64-bit) floating-point value to 32-bit signed binary data and places the result in the specified result words.

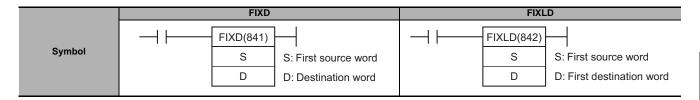

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size		
Operand	Description	FIXD	FIXLD	FIXD	FIXLD	
S	First source word	LREAL	LREAL	4	4	
D	Destination word	INT	DINT	1	2	

■ Operand Specifications

• FIXD

Ī	Area			V	Vord a	ddress	ses			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
ı	Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
-	S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				
	D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

• FIXLD

Area			V	Vord a	ddres	ses			Indirect addre	Con-	Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	OK	OK	OK	ок	ОК	OK	OK	ОК	OK				OK				
D	- OK	OK	OK	OK	OK	JK OK	OK OK	OK OK	OK	OK				OK				


Flags

Name	Label	Oper	ation
Name	Labei	FIXD	FIXLD
Error Flag	P_ER	ON if the source data is not recognized as floating-point data. ON if the source data (S) is not a number (NaN). ON if the integer portion of the source data (S) is not within the range of -32,768 to 32,767. OFF in all other cases.	ON if the source data is not recognized as floating-point data. ON if the data in words S to S+3 is not a number (NaN). ON if the integer portion of words S to S+3 is not within the range of -2,147,483,648 to 2,147,483,647. OFF in all other cases.
Equals Flag	P_EQ	ON if the result is 0000/0000 0000. OFF in all other cases.	
Negative Flag	P_N	ON if bit 15 of the result is ON. OFF in all other cases.	

Function

■ FIXD

FIXD(841) converts the integer portion of the double-precision (64-bit) floating-point number in words S to S+3 (IEEE754-format) to 16-bit signed binary data and places the result in D.

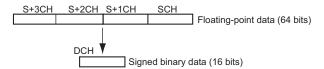

Only the integer portion of the floating-point data is converted, and the fraction portion is truncated.


Example conversions:

A floating-point value of 3.5 is converted to 3.

A floating-point value of -3.5 is converted to -3.

■ FIXD

FIXLD(842) converts the integer portion of the double-precision (64-bit) floating-point number in words S to S+3 (IEEE754-format) to 32-bit signed binary data and places the result in D+1 and D.

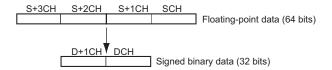

Only the integer portion of the floating-point data is converted, and the fraction portion is truncated.


Example conversions:

A floating-point value of 2,147,483,640.5 is converted to 2,147,483,640.

A floating-point value of -2,147,483,640.5 is converted to -2,147,483,640.

DBL/DBLL

Instruction	Mnemonic	Variations	Function code	Function
16-BIT TO DOUBLE FLOATING	DBL	@DBL	843	Converts a 16-bit signed binary value to double-precision (64-bit) floating-point data and places the result in the specified destination words.
32-BIT TO DOUBLE FLOATING	DBLL	@DBLL	844	Converts a double-precision (64-bit) floating-point value to 32-bit signed binary data and places the result in the specified result words.

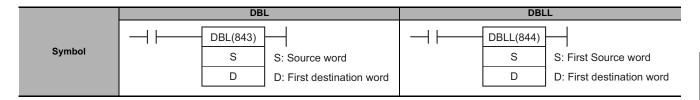

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data	type	Size			
Operand	Description	DBL	DBLL	DBL	DBLL		
S	DBL: Source word DBLL: First source word	INT	DINT	1	2		
D	First destination word	LREAL	LREAL	4	4		

■ Operand Specifications

• DBL

Area			V	Vord a	ddress	ses	addresses		Con-				Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK	OK	OK		OK				
D	ÖK	ÖK	ÖK	OK	OK	5	OK	OK	OK .	Ŏ.				OK				

• DBLL

Area		Word addresses								Indirect DM/EM addresses C			Registers			ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK			ОК				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Label	Operation
Error Flag	P_ER	OFF
Equals Flag	P_EQ	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function

■ DBL

DBL(843) converts the 16-bit signed binary value in S to double-precision (64-bit) floating-point data (IEEE754-format) and places the result in words D to D+3. A single 0 is added after the decimal point in the floating-point result.

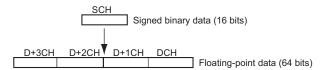

Only values within the range of -32,768 to 32,767 can be specified for S. To convert signed binary data outside of that range, use DBLL(844).

Example conversions:

A signed binary value of 3 is converted to 3.0.

A signed binary value of -3 is converted to -3.0.

■ DBLL

DBLL(844) converts the 32-bit signed binary value in S+1 and S to double-precision (64-bit) floating-point data (IEEE754-format) and places the result in words D to D+3. A single 0 is added after the decimal point in the floating-point result.




Signed binary data within the range of -2,147,483,648 to 2,147,483,647 can be specified for S+1 and S. Example Conversions:

A signed binary value of 16,777,215 is converted to 16,777,215.0.

A signed binary value of -16,777,215 is converted to -15,777,215.0.

+D, -D, *D, /D

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE FLOATING-POINT ADD	+D	@+D	845	Adds two double-precision (64-bit) floating-point numbers and places the result in the specified destination words.
DOUBLE FLOATING-POINT SUBTRACT	-D	@-D	846	Subtracts one double-precision (64-bit) floating-point number from another and places the result in the specified destination words.
DOUBLE FLOATING-POINT MULTIPLY	*D	@*D	847	Multiplies two double-precision (64-bit) floating- point numbers and places the result in the speci- fied result words.
DOUBLE FLOATING-POINT DIVIDE	/D	@/D	848	Divides one double-precision (64-bit) floating-point number by another and places the result in the specified destination words.

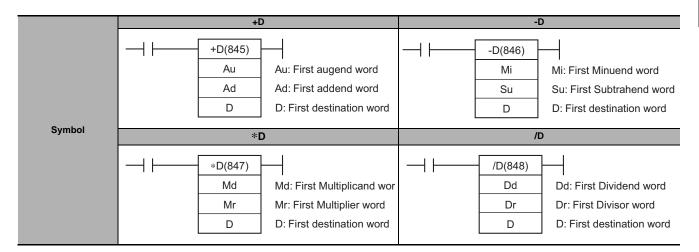

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size	
Au	+D: First augend word			
Mi	-D: First Minuend word	LREAL	4	
Md	*D: First Multiplicand word	LKEAL	4	
Dd	/D: First Dividend word			
Ad	+D: First addend word			
Su	-D: First Subtrahend word	LREAL	4	
Mr	*D: First Multiplier word	LREAL	4	
Dr	/D: First Divisor word			
D	First destination word	LREAL	4	

■ Operand Specifications


Area			W	ord ad	dress	es			Indirect addre		Con-		Regist	ers	Fla	ags	Pulse	TR
Alea	CI O	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
Au, Mi, Md, Dd, Ad, Su, Mr, Dr D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				

Flags

Name	Label	Operation
Error Flag	P_ER	ON when S1 or S2 is not treated as floating-point data. +D ON if the augend or addend data is not a number (NaN). ON if +o is added to -o. -D ON if the minuend or subtrahend is not a number (NaN). ON if +o is subtracted from +o. ON if -o is subtracted from -o. *D ON if the multiplicand or multiplier is not a number (NaN). ON if +o and 0 are multiplied. ON if -o and 0 are multiplied. ON if the dividend or divisor is not a number (NaN). ON if the dividend and divisor are both 0. ON if the dividend and divisor are both +o or -o. OFF in all other cases.
Equals Flag	P_EQ	ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	ON if the absolute value of the result is too large to be expressed as a double-precision floating-point value.
Underflow Flag	P_UF	ON if the absolute value of the result is too small to be expressed as a double-precision floating-point value.
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function

The data specified in S1 and the data specified in S2 are added (+D(845)), subtracted (-D(846)), multiplied (*D(847)), or divided (/D(848)) as double-precision floating-point data (64 bits: IEEE754) and the result is output to D+3, D+2, D+1, and D.

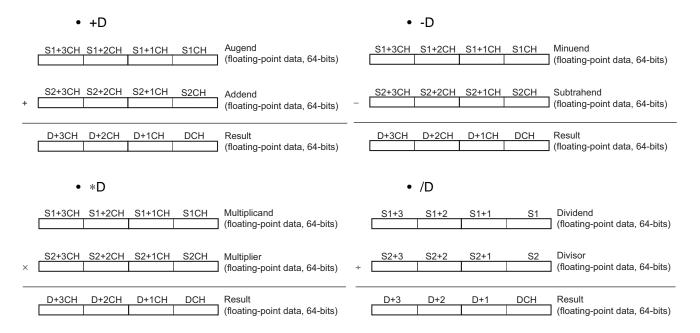

■ Operation rules

The result of an operation is output as shown below depending on the combination of floating-point data.

• DOUBLE FLOATING-POINT ADD (+D)

				Augend		
Addend		0	Numeral	+∞	-∞	NaN
	0	0	Numeral	+∞	-∞	
	Numeral	Numeral	**	+∞	-∞	
	+∞	+∞	+∞	+∞	ER	
	-∞	-∞	-∞	ER	-∞	
	NaN					ER

^{* *:} The results could be zero (including underflows), a numeral, +o, or -o.

• DOUBLE FLOATING-POINT SUBTRACT (-D)

			Minuend								
Subtrahend		0	Numeral	+∞	-∞	NaN					
	0	0	Numeral	+∞	-∞						
	Numeral	Numeral	**	+∞	-∞						
	+∞		-∞	ER	-∞						
	∞	+∞	+∞	+∞	ER						
	NaN					ER					

^{* *:} The results could be zero (including underflows), a numeral, +o, or -o.

● DOUBLE FLOATING-POINT MULTIPLY (*D)

				Multiplicand		
Multiplier		0	Numeral	+∞	-∞	NaN
	0	0	0	ER	ER	
	Numeral	0	**	+/∞	+/∞	
	+∞	ER	+/∞	+∞		
		ER	+/∞	-∞	+∞	
	NaN					ER

^{* *:} The results could be zero (including underflows), a numeral, +o, or -o.

• DOUBLE FLOATING-POINT DIVIDE (/D)

				Dividend		
Divisor		0	Numeral	+∞	-∞	NaN
	0	ER	+/∞	+∞	-∞	
	Numeral	0	**	+/∞	+/∞	
	+∞	0	*	ER	ER	
		0	*	ER	ER	
	NaN					ER

^{* :} The results will be zero for underflows.

ER: The Error Flag will be turned ON and the instruction will not be executed.

ER: The Error Flag will be turned ON and the instruction will not be executed.


ER: The Error Flag will be turned ON and the instruction will not be executed.

^{* *:} The results could be zero (including underflows), a numeral, +o, or -o.

ER: The Error Flag will be turned ON and the instruction will not be executed.

RADD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE DEGREES TO RADIANS	RADD	@RADD	849	Converts a double-precision (64-bit) floating-point number from degrees to radians and places the result in the specified result words.

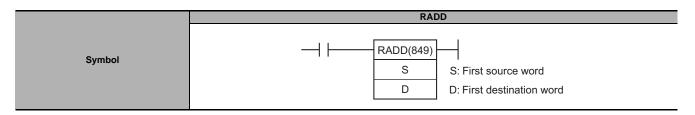

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size	
S	First source word	LREAL	4	
D	First destination word	LREAL	4	

■ Operand Specifications


Area			V	Vord a	ddress	es			Indirect addre		Con-	Con-			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				
D		OK	OK	OK	OK	OK	OK	OK	OK	OK				OK .				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the angle data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	ON if both the exponent and mantissa of the result are 0.OFF in all other cases.
Overflow Flag	P_OF	 ON if the absolute value of the result is too large to be expressed as a double-precision floating-point value. OFF in all other cases.
Underflow Flag	P_UF	 ON if the absolute value of the result is too small to be expressed as a double-precision floating-point value. OFF in all other cases.
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function

RADD(849) converts the double-precision (64-bit) floating-point number in words S to S+3 from degrees to radians and places the result in words D to D+3. (The floating point source data must be in IEEE754 format.)

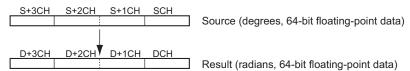


Degrees are converted to radians by means of the following formula:

Degrees $\times \pi/180$ = radians

DEGD

Instruction	Mnemonic	Variations	Function code	Function		
DOUBLE RADIANS TO DEGREES	DEGD	@DEGD	850	Converts a double-precision (64-bit) floating-point number from radians to degrees and places the result in the specified result words.		

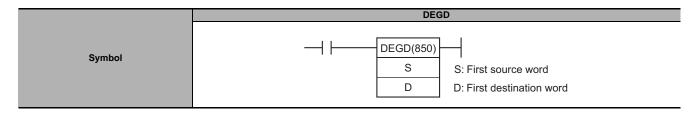

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	LREAL	4
D	First destination word	LREAL	4

■ Operand Specifications

Area			V	Vord a	ddress	es			Indirect addre		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				ОК				
D	J OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the angle data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	ON if both the exponent and mantissa of the result are 0.OFF in all other cases.
Overflow Flag	P_OF	 ON if the absolute value of the result is too large to be expressed as a double-precision floating-point value. OFF in all other cases.
Underflow Flag	P_UF	 ON if the absolute value of the result is too small to be expressed as a double-precision floating-point value. OFF in all other cases.
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function

DEGD(850) converts the double-precision (64-bit) floating-point number in words S to S+3 from radians to degrees and places the result in words D to D+3. (The floating point source data must be in IEEE754 format.)




Radians are converted to degrees by means of the following formula:

Radians $\times \pi 180/p = degrees$

SIND/COSD/TAND

Instruction	Mnemonic	Variations	Function code	Function		
DOUBLE SINE	SIND	@SIND	851	Calculates the sine of a double-precision (64-bit) floating-point number (in radians) and places the result in the specified destination words.		
DOUBLE COSINE	COSD	@COSD	852	Calculates the cosine of a double-precision (64-bit) floating-point number (in radians) and places the result in the specified destination words.		
DOUBLE TANGENT	TAND	@TAND	853	Calculates the tangent of a double-precision (64-bit) floating-point number (in radians) and places the result in the specified destination words.		

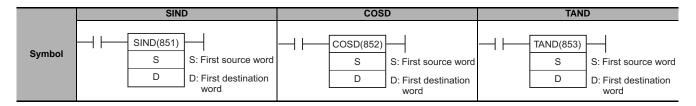

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	LREAL	4
D	First destination word	LREAL	4

■ Operand Specifications

Area			V	Vord a	ddress	ses			Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK				OK				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the source data is not recognized as floating-point data. ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 65,535. OFF in all other cases.
Equals Flag	P_EQ	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	SIND, COSD Unchanged TAND ON if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Underflow Flag	P_UF	Unchanged
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function


■ SIND

SIND(851) calculates the sine of the angle (in radians) expressed as a double-precision (64-bit) floating-point value in words S to S+3 and places the result in words D to D+3.

(The floating point source data must be in IEEE754 format.)

- Specify the desired angle (-65,535 to 65,535) in radians in words S to S+3.
 For information on converting between degrees and radians, see 3-16-9 DOUBLE DEGREES TO RADIANS: RADD(849) or 3-16-10 DOUBLE RADIANS TO DEGREES: DEGD(850).
- If the angle is outside of the range -65,535 to 65,535, an error will occur and the instruction will not be executed.

The following diagram shows the relationship between the angle and result.

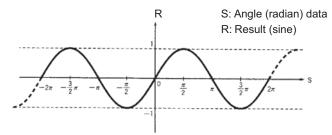


■ COSD

COSD(852) calculates the cosine of the angle (in radians) expressed as a double-precision (64-bit) floating-point value in words S to S+3 and places the result in words D to D+3.

(The floating point source data must be in IEEE754 format.)

- Specify the desired angle (-65,535 to 65,535) in radians in words S to S+3.
 For information on converting between degrees and radians, see 3-16-9 DOUBLE DEGREES TO RADIANS: RADD(849) or 3-16-10 DOUBLE RADIANS TO DEGREES: DEGD(850).
- If the angle is outside of the range -65,535 to 65,535, an error will occur and the instruction will not be executed.

The following diagram shows the relationship between the angle and result.

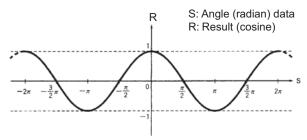

■ TAND


TAND(853) calculates the tangent of the angle (in radians) expressed as a double-precision (64-bit) floating-point value in words S to S+3 and places the result in words D to D+3.

(The floating point source data must be in IEEE754 format.)




- Specify the desired angle (-65,535 to 65,535) in radians in words S to S+3.
 For information on converting between degrees and radians, see 3-16-9 DOUBLE DEGREES TO RADIANS: RADD(849) or 3-16-10 DOUBLE RADIANS TO DEGREES: DEGD(850).
- If the angle is outside of the range -65,535 to 65,535, an error will occur and the instruction will not be executed.
- If the absolute value of the result is greater than the maximum value that can be expressed as floating-point data, the Overflow Flag will turn ON and the result will be output as $\pm \infty$.

• The following diagram shows the relationship between the angle and result.

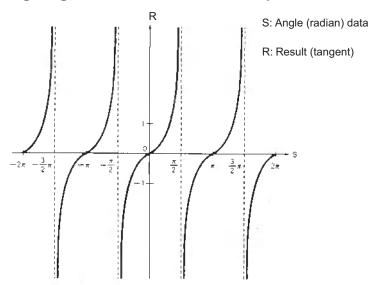

ASIND/ACOSD/ATAND

Instruction	Mnemonic	Variations	Function code	Function		
DOUBLE ARC SINE	ASIND	@ASIND	854	Calculates the arc sine of a double-precision (64-bit) floating-point number and places the result in the specified destination words.		
DOUBLE ARC COSINE	ACOSD	@ACOSD	855	Calculates the arc cosine of a double-precision (64-bit) floating-point number and places the result in the specified result words.		
DOUBLE ARC TANGENT	ATAND	@ATAND	856	Calculates the arc tangent of a double-precision (64-bit) floating-point number and places the result in the specified result words.		

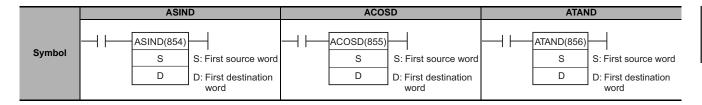

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size		
S	First source word	LREAL	4		
D	First destination word	LREAL	4		

■ Operand Specifications

rea			V	Nord a	ddress	ses			Indirect addre		Con-	Registers			Flags		Pulse	TR
пеа	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
 S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				OK				
D	OK	OK	ÖK	OK	OK	OK	OK	ÖK	OK	6				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the source data is not recognized as floating-point data. ASIND ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 1.0. ACOSD ON if the source data is not a number (NaN). ON if the absolute value of the source data exceeds 1.0. ATAND ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	ON if both the exponent and mantissa of the result are 0.OFF in all other cases.
Overflow Flag	P_OF	Unchanged
Underflow Flag	P_UF	Unchanged
Negative Flag	P_N	ASIND, ATAND ON if the result is negative. OFF in all other cases. ACOSD Unchanged


Function

■ ASIND

ASIND(854) computes the angle (in radians) for a sine value expressed as a double-precision (64-bit) floating-point number in words S to S+3 and places the result in words D to D+3. (The floating point source data must be in IEEE754 format.)

The result is output to words D to D+3 as an angle (in radians) within the range of $-\pi/2$ to $\pi/2$.

 The following diagram shows the relationship between the input data and result.

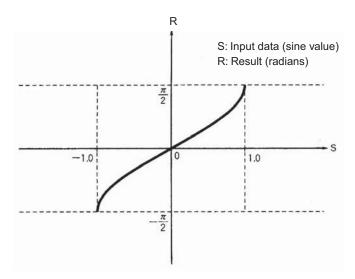


ACOSD

ACOSD(855) computes the angle (in radians) for a cosine value expressed as a double-precision (64-bit) floating-point number in words S to S+3 and places the result in words D to D+3. (The floating point source data must be in IEEE754 format.)

The result is output to words D to D+3 as an angle (in radians) within the range of 0 to π .

The following diagram shows the relationship between the input data and result.

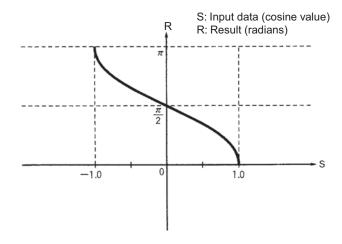


■ ATAND

ATAND(856) computes the angle (in radians) for a tangent value expressed as a double-precision (64-bit) floating-point number in words S to S+3 and places the result in D to D+3. (The floating point source data must be in IEEE754 format.)


The result is output to words D to D+3 as an angle (in radians) within the range of $-\pi/2$ to $\pi/2$.

The following diagram shows the relationship between the input data and result.

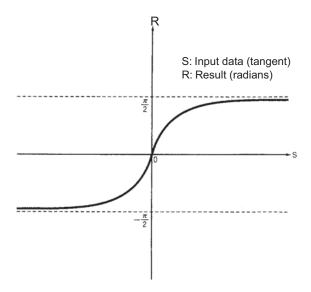

SQRTD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE SQUARE ROOT	SQRTD	@SQRTD	857	Calculates the square root of a double-precision (64-bit) floating-point number and places the result in the specified result words.

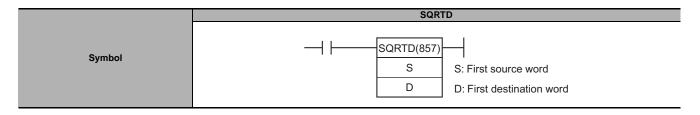

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	First source word	LREAL	4		
D	First destination word	LREAL	4		

■ Operand Specifications


Area		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				
D		OK	OK	OK	OK	OK	OK	OK	OK	OK				OK .				

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if the input data is not recognized as floating-point data. ON if the source data is negative. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	On if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Underflow Flag	P_UF	Unchanged
Negative Flag	P_N	Unchanged

Function

SQRTD(857) calculates the square root of the double-precision (64-bit) floating-point number in words S to S+3 and places the result in words D to D+3. (The floating point source data must be in IEEE754 format.)

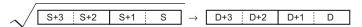


■ The following diagram shows the relationship between the input data and result.

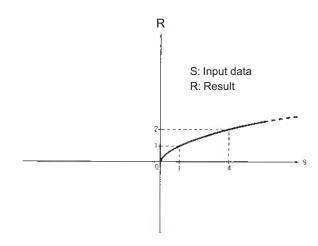

EXPD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE EXPONENT	EXPD	@EXPD	858	Calculates the natural (base e) exponential of a double-precision (64-bit) floating-point number and places the result in the specified result words.

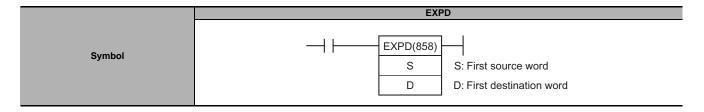

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	ОК	OK	OK	

Operands

Operand	Description	Data type	Size		
S	First source word	LREAL	4		
D	First destination word	LREAL	4		

■ Operand Specifications


Area	Word addresses								Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				ОК				
D		OK	OK				OK .											

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if the input data is not recognized as floating-point data. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	 ON if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Underflow Flag	P_UF	 ON if the absolute value of the result is too small to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Negative Flag	P_N	Unchanged

Function

EXPD(858) calculates the natural (base e) exponential of the double-precision (64-bit) floating-point number in words S to S+3 and places the result in words D to D+3. In other words, EXP(467) calculates ex (x = source) and places the result in words D to D+3.

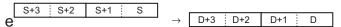


- The constant e is 2.718282.
- The following diagram shows the relationship between the input data and result.

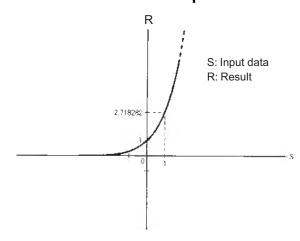

LOGD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE LOGARITHM	LOGD	@LOGD	859	Calculates the natural (base e) logarithm of a double-precision (64-bit) floating-point number and places the result in the specified destination words.

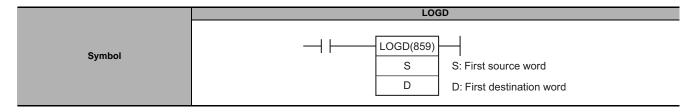

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Op	erand	Description	Data type	Size		
	S	First source word	LREAL	4		
	D	First destination word	LREAL	4		

■ Operand Specifications

Area	Word addresses								ct DM/EM resses Con-		Registers		Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				ОК				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the input data is not recognized as floating-point data. ON if the source data is negative. ON if the source data is not a number (NaN). OFF in all other cases.
Equals Flag	P_EQ	ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	 ON if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Underflow Flag	P_UF	Unchanged
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function


LOGD(859) calculates the natural (base e) logarithm of the double-precision (64-bit) floating-point number in words S to S+3 and places the result in words D to D+3.

- The constant e is 2.718282.
- The following diagram shows the relationship between the input data and result.

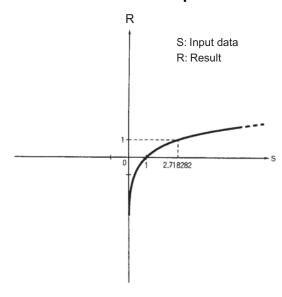

PWRD

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE EXPONENTIAL POWER	PWRD	@PWRD	860	Raises a double-precision (64-bit) floating-point number to the power of another double-precision (64-bit) floating-point number.

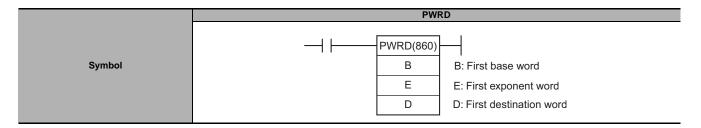

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
В	First base word	LREAL	4
E	First exponent word	LREAL	4
D	First destination word	LREAL	4

■ Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
B, E D	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК				ОК				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the base data (B to B+3) or exponent data (E to E+3) is not recognized as floating-point data. ON if the base data (B to B+3) or exponent data (E to E+3) is not a number (NaN). ON if the base data (B to B+3) is 0 and the exponent data (E to E+3) is less than 0. (Division by 0) ON if the base data (B to B+3) is negative and the exponent data (E to E+3) is non-integer. (Root of a negative number) OFF in all other cases.
Equals Flag	P_EQ	 ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Overflow Flag	P_OF	 ON if the absolute value of the result is too large to be expressed as a double-precision floating-point value. OFF in all other cases.
Underflow Flag	P_UF	 ON if the absolute value of the result is too small to be expressed as a double-precision floating-point value. OFF in all other cases.
Negative Flag	P_N	ON if the result is negative. OFF in all other cases.

Function


PWRD(860) raises the double-precision (64-bit) floating-point number in words B to B+3 to the power of the double-precision (64-bit) floating-point number in words E to E+3. In other words, PWR(840) calculates XY (X = CONT =



For example, when the base words (B to B+3) contain 3.1 and the exponent words (E to E+3) contain 3, the result is 3.13 or 29.791.

=D, <>D, <D, <=D, >D, >=D

Instruction	Mnemonic	Variations	Function code	Function
Double-precision Floating-point Input Comparison	=D		335 336 337 338 339 340	These input comparison instructions compare two double-precision floating point values (64-bit IEEE754 format) and create an ON execution condition when the comparison condition is true.

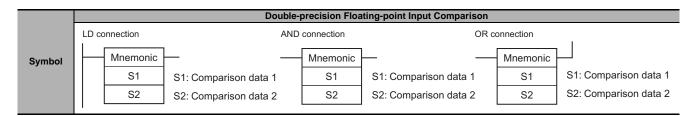

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S1	Comparison data 1	LREAL	4
S2	Comparison data 2	LREAL	4

■ Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S1	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				ОК				
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags


Name	Label	Operation
Error Flag	P_ER	OFF
Greater Than Flag	P_GT	ON if both the exponent and mantissa of the result are 0. OFF in all other cases.
Greater Than or Equal Flag	P_GE	On if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Equal Flag	P_EQ	Unchanged
Not Equal Flag	P_NE	On if the absolute value of the result is too large to be expressed as a double-precision (64-bit) floating-point value. OFF in all other cases.
Less Than Flag	P_LT	Unchanged
Less Than or Equal Flag	P_LE	ON if the result is negative. OFF in all other cases.
Negative Flag	P_N	Unchanged


Function

The input comparison instruction compares the data specified in S1 and S2 as double-precision floating point values (64-bit IEEE754 data) and creates an ON execution condition when the comparison condition is true. When the data is stored in words, S1 and S2 specify the first of four words containing the 64-bit data. The 64-bit floating-point data cannot be input as constants.

The input comparison instructions are treated just like the LD, AND, and OR instructions to control the execution of subsequent instructions

- LD: The instruction can be connected directly to the left bus bar.
- AND: The instruction cannot be connected directly to the left bus bar.
- OR: The instruction can be connected directly to the left bus bar.

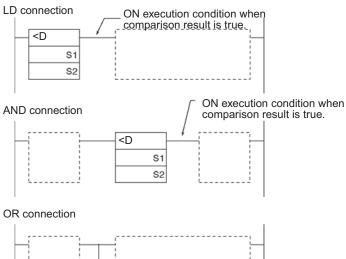

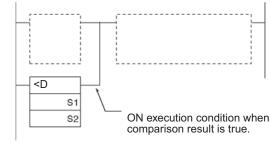

■ Options

With the three input types and six symbols, there are 18 different possible combinations.

Symbol (LD, AND, and OR cannot be used in a ladder program)

LD=, AND=, OR=, LD<>, AND<>, OR<>, LD<, AND<, OR<, LD<=, AND<=, OR<=LD>, AND>, OR>, LD>=, AND>=, OR>=

Option (data format)

D: Double-precision floating-point data

Code	Mnemonic	Name	Function	
335	LD=D	LOAD DOUBLE FLOATING EQUAL	True if	
	AND=D	AND DOUBLE FLOATING EQUAL	C1 = C2	
	OR=D	OR DOUBLE FLOATING EQUAL		
336	LD<>D	LOAD DOUBLE FLOATING NOT EQUAL	True if	
	AND<>D	AND DOUBLE FLOATING NOT EQUAL	C1 ≠ C2	
	OR<>D	OR DOUBLE FLOATING NOT EQUAL		
337	LD <d< td=""><td>LOAD DOUBLE FLOATING LESS THAN</td><td colspan="2">True if</td></d<>	LOAD DOUBLE FLOATING LESS THAN	True if	
	AND <d< td=""><td>AND DOUBLE FLOATING LESS THAN</td><td>C1 < C2</td></d<>	AND DOUBLE FLOATING LESS THAN	C1 < C2	
	OR <d< td=""><td>OR DOUBLE FLOATING LESS THAN</td><td></td></d<>	OR DOUBLE FLOATING LESS THAN		
338	LD<=D	LOAD DOUBLE FLOATING LESS THAN OR EQUAL	True if	
	AND<=D	AND DOUBLE FLOATING LESS THAN OR EQUAL	C1 ≤ C2	
	OR<=D	OR DOUBLE FLOATING LESS THAN OR EQUAL		
339	LD>D	LOAD DOUBLE FLOATING GREATER THAN	True if	
	AND>D	AND DOUBLE FLOATING GREATER THAN	C1 > C2	
	OR>D	OR DOUBLE FLOATING GREATER THAN		


Code	Mnemonic	Name	Function
340	LD>=D	LOAD DOUBLE FLOATING GREATER THAN OR EQUAL	True if
	AND>=D	AND DOUBLE FLOATING GREATER THAN OR EQUAL	C1 ≥ C2
	OR>=D	OR DOUBLE FLOATING GREATER THAN OR EQUAL	

Precautions


Input comparison instructions cannot be used as right-hand instructions, i.e., another instruction must be used between them and the right bus bar.

Example Programming

When CIO 0.00 is ON in the following example, the floating point data in words D100 to D103 is compared to the floating point data in words D200 to D203. If the content of D100 to D103 is less than that of D200 to D203, execution proceeds to the next line and CIO 50.00 is turned ON. If the content of D100 to D103 is not less than that of D200 to D203, execution does not proceed to the next instruction line.

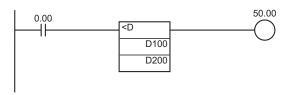

DOUBLE FLOATING LESS THAN Comparison (<D)

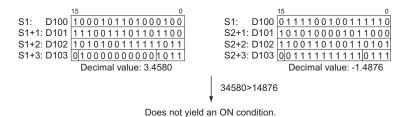

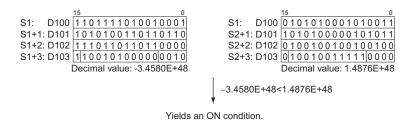


Table Data Processing Instructions

Table Data Processing Instructions


All of these instructions define or operate on a group of words. The group of words in a stack are defined by SSET(630), the group of words in a record-table are defined by DIM(631), and the group of words used in a range instruction are defined independently in each instruction.

Group	Purpose	Instructions
Stack	Operate FIFO (first-in first-out) or LIFO (last-in first-out) data tables.	SSET(630), PUSH(632), FIFO(633), LIFO(634), SREAD(639), SWRIT(640), SINS(641), SDEL(642), and SNUM(638)
Record-table	Operate tables of data made up of records. (Record size is user-defined.)	DIM(631), SETR(635), and GETR(636)
Range	Operates on a range of words to find values such as the checksum, a particular value, the maximum value, or minimum value in the range.	FCS(180), SRCH(181), MAX(182), MIN(183), SUM(184), and SWAP(637)

Stack Instructions


Stack instructions act on specially defined data tables called stacks. The first two words of the stack contain the PLC memory address of the last word in the stack and the second two words contain the stack pointer (the PLC memory address of the word that will be overwritten by the next PUSH(632) instruction).

The following diagram shows the basic structure of a stack.

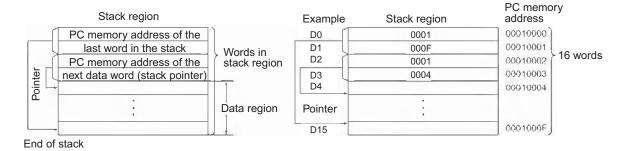


PUSH(632)

Stores data in the address indicated by the stack pointer and increments the pointer by one.

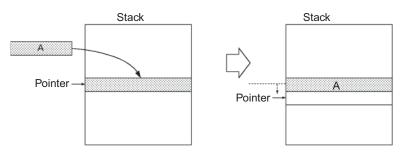


• FIFO(633)

Reads first (oldest) word of data that was stored in the stack, shifts the remaining data down one word, and decrements the pointer by one.

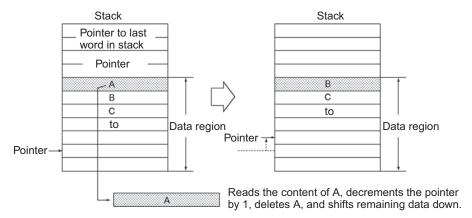

● LIFO(634)

Reads the last (most recent) word of data that was stored in the stack. Decrements the pointer by one and reads the data at this address (the most recent data stored in the stack). The read data will not be cleared.

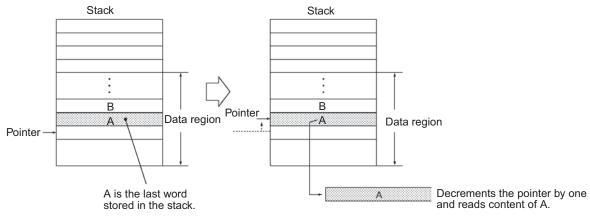

To learn the number of data words in a stack, use an SNUM instruction.


Example: Learning the number of items on a conveyor

To read (reference), change (refresh), insert, or delete a data word within the stack, use SREAD, SWRIT, SINS, and SDEL commands, respectively.

Example: To track items moving on a conveyor, treat the stack words as the items and manage additions, discharges, and changes of the items


• SREAD(639)

Reads the data from the specified data element in the stack. The offset value indicates the location of the desired word (the number of words before the current pointer position).

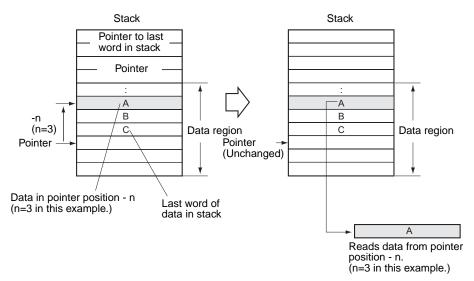


SWRIT(640)

Writes the source data to the specified data element in the stack (overwriting the existing data). The offset value indicates the location of the desired word (the number of words before the current pointer position).

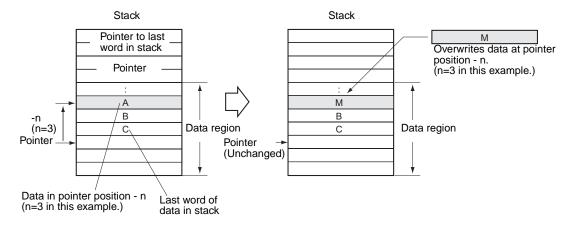


• SINS(641)

Inserts the source data at the specified location in the stack and shifts the rest of the data in the stack downward. The offset value indicates the location of the desired word (the number of words before the current pointer position).

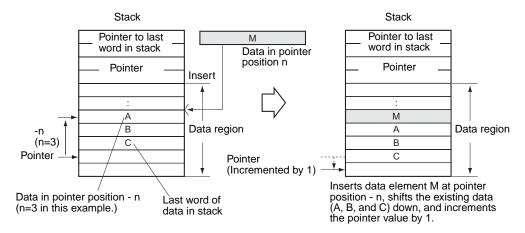


SDEL(642)

Deletes the data element at the specified location in the stack and shifts the rest of the data in the stack upward. The offset value indicates the location of the desired word (the number of words before the current pointer position).

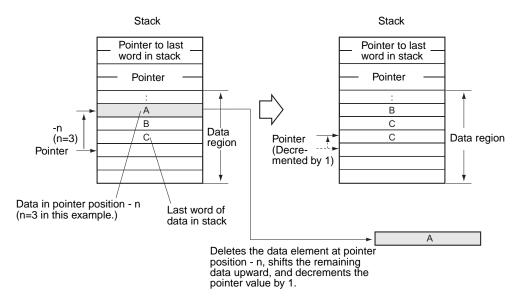


SNUM(638)

Counts the amount of stack data (number of words of data) from the stack pointer to the beginning of the data region.

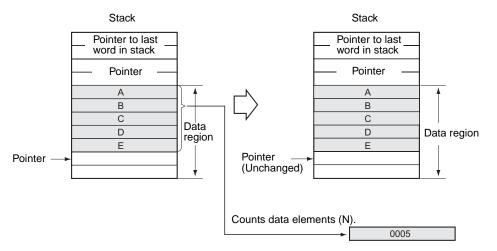


Record-table Instructions

A series of data consisting of more than one record with the same number of words in each record is called table data. Table data stored in the specified I/O memory are can be registered as the table area using the DIM instruction. Up to 16 separate tables can be defined with table numbers 0 to 15.

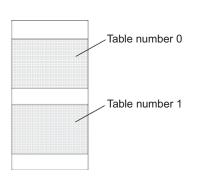

The following diagram shows the basic structure of a record table. Each record in a table has the same number of words.

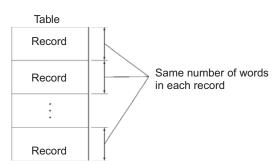

Index Registers (IR) can be used to indirectly reference table data. Address calculation of the record can be easily made by using the SETR(635) (SET RECORD NUMBER) instruction and GETR(636) (GET RECORD NUMBER).


Range Instructions

The range instructions included here act on a specified range of words to find the maximum value (MAX(182)) or minimum value (MIN(183)), search for a particular value (SRCH(181)), calculate the sum (SUM(184)) or FCS (FCS(180)), or swap the contents of the leftmost and rightmost bytes in the words (SWAP(637)).



SSET

Instruction	Mnemonic	Variations	Function code	Function
SET STACK	SSET	@SSET	630	Defines a stack of the specified length beginning at the specified word.

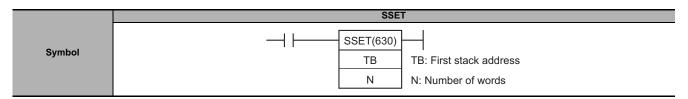

Applicable Program Areas


Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands


Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
N	Number of words	UINT	1


TB: First stack address




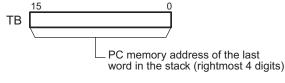

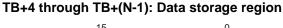

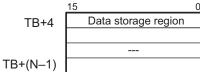

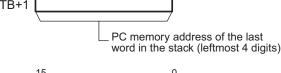

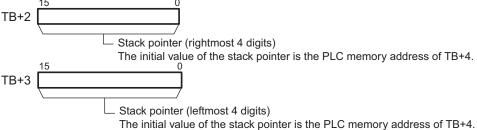

Note TB and TB+(N-1) must be in the same data area.

N: Number of words

This number specifies the stack area that contains the stack control words and the data storage region. N must be between 5 and 65535.

Operand Specifications

Area	Word addresses						direct DM/EM addresses Con-			Registers			Flags		TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ТВ	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				OK				
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags


Name	Label	Operation				
Error Flag ER		ON if N is not within the specified range of 0005 to FFFF.				
		OFF in all other cases.				

Note The minimum value for the number of words in the stack (N) is 5 because N includes the four words that contain the pointer to the last word in the stack and the stack pointer.

Function

SSET(630) secures a stack with N words beginning at TB and ending at TB+(N-1). The first two words of the stack (TB+1 and TB) contain the 8-digit hexadecimal PLC memory address of the last word in the stack. The next two words (TB+3 and TB+2) contain the stack pointer. The stack pointer is the PLC memory address of the next word in the stack that will be overwritten by PUSH(632); its initial value is the address of TB+4.

SSET(630) automatically initializes the data region of the stack (TB+4 through TB+(N-1)) to zeroes. The following diagram shows the basic structure of a stack.

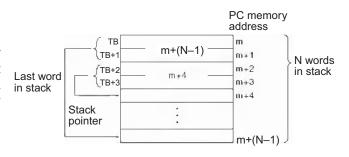

Hint

SSET(630) just establishes and initializes a stack. Use the following instructions to store in the stack and read data from the stack.


- 1. PUSH(632) stores data in the stack one word at a time.
- 2. FIFO(633) and LIFO(634) read data from the stack. FIFO(633) reads the first word that was stored; LIFO(634) reads the last word that was stored.
- 3. The stack pointer value in the stack control word is automatically updated when PUSH(632), FIFO(633), or LIFO(634) is executed. Normally, users need not be concerned about the stack control word. When accessing the contents of the stack other than by using the above instructions, set the stack pointer value using the Index Register (IR) for indirect referencing.

Related instructions

- PUSH (stack data store) instruction: Stores data in the specified stack area.
- FIFO (first in, first out) instruction: Reads the first data word that was stored in the specified stack area.
- LIFO (last in, first out): Reads the last data word that was stored in the stack.


Example Programming

When CIO 0.00 is ON in the following example, SSET(630) secures a 10-word stack from D0 to D9. D0 and D1 contain the PLC memory address of the last word in the stack. D2 and D3 contain the stack pointer. The stack itself begins in D4.

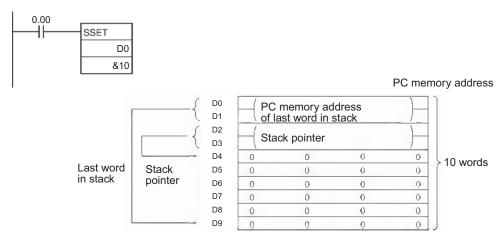

PUSH

Instruction	Mnemonic	Variations	Function code	Function
PUSH ONTO STACK	PUSH	@PUSH	632	Writes one word of data to the specified stack.

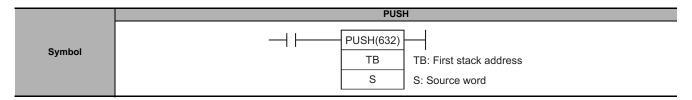

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
S	Source word	UINT	1

TB: First stack address

TB through TB+3: Stack control words

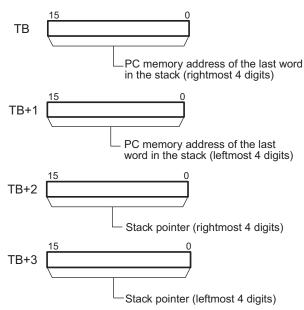

TB+4 through TB+(N-1): Data storage region

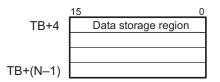

Operand Specifications

Area	Word addresses						irect DM/EM addresses Con-			Registers			Flags		TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits bits	bits
TB	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК				OK				
S	OK	OK	OK	OK	OK	OK	OK	OK	ÜK	OK	OK	OK		OK				


Flags

Name	Label	Operation
Error Flag	ER	ON if the address specified by the stack pointer (TB+3 and TB+2) exceeds the last word in the stack. (This is a stack overflow error.) OFF in all other cases.

Function

PUSH(632) writes the content of S to the address indicated by the stack pointer (TB+3 and TB+2) and increments the stack pointer by one.

The stack must be defined in advance with SSET(630).

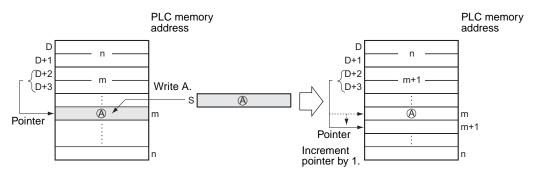


Hint

- After data is stored with this instruction, the stack pointer specifies the next address after the last data word
- After PUSH(632) has been used to write data into a stack, FIFO(633) and LIFO(634) can be used to read data from the stack.


Example Programming

When CIO 0.00 is ON in the following example, PUSH(632) copies the content of D200 to the stack beginning at D0. In this case, the stack pointer indicates D7.

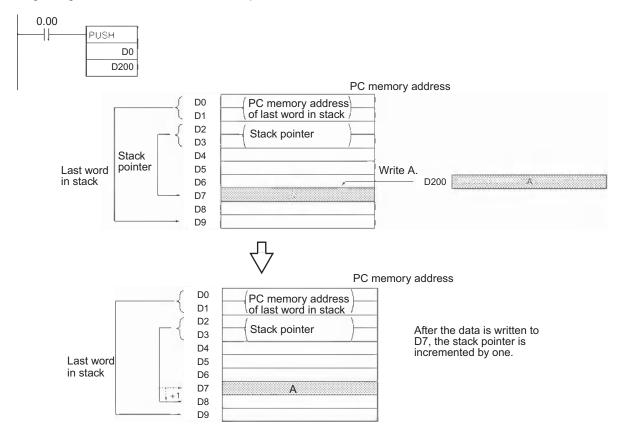

LIFO/FIFO

Instruction	Mnemonic	Variations	Function code	Function
LAST IN FIRST OUT	LIFO	@LIFO	634	Reads the last word of data written to the specified stack (the newest data in the stack).
FIRST IN FIRST OUT	FIFO	@FIFO	633	Reads the first word of data written to the specified stack (the oldest data in the stack).

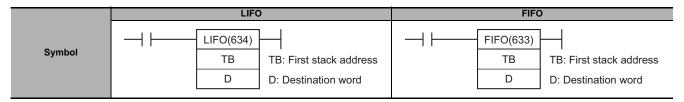

Applicable Program Areas


Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands


Operand	Description	Data type	Size	
ТВ	First stack address	UINT	Variable	
D	Destination word	UINT	1	

TB: First stack address

TB through TB+3: Stack control words

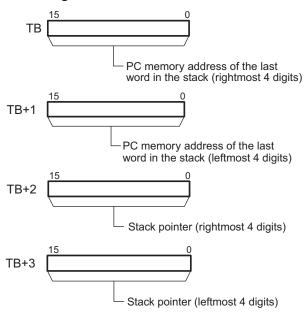

TB+4 through TB+(N-1): Data storage region

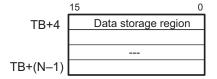

Operand Specifications

Area		Word addresses							Indirect addre	DM/EM esses	Con-		Regis	ters	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ТВ	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK				OK				
D	UK	UK	ŮK.	OK	OK	UK	UK	OK	OK	ÜK		OK		OK				

Flags


Name	Label	Operation
Error Flag	ER	ON if the contents of the stack pointer (TB+3 and TB+2) is less than or equal to the PLC memory address of first word in the data region of the stack (TB+4). (This is a stack underflow error.) OFF in all other cases.

Function

LIFO

LIFO(634) reads the data from the address indicated by the stack pointer (the newest word of data in the stack), decrements the stack pointer by one, and outputs the data to D. The word that was read is left unchanged.


The stack must be defined in advance with SSET(630).

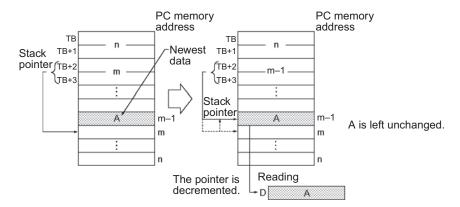

FIFO

FIFO(633) reads the oldest word of data from the stack (TB+4) and outputs that data to D. Next, the stack pointer (TB+3 and TB+2) is decremented by one, all of the remaining data in the stack is shifted downward by one word, and the data read from TB+4 is deleted. The data at the end of the stack (the address that was indicated by the stack pointer) is left unchanged.

The stack must be defined in advance with SSET(630).

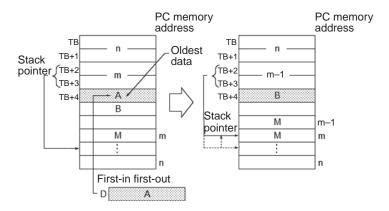

Hint

LIFO

Use LIFO(634) in combination with PUSH(632). After PUSH(632) has been used to write data into a stack, LIFO(634) can be used to read data from the stack on a last-in first-out basis. After data is stored by PUSH(632), the stack pointer indicates the address next to the last data.


FIFO

- Use FIFO(633) in combination with PUSH(632). After PUSH(632) has been used to write data into a stack, FIFO(633) can be used to read data from the stack on a first-in first-out basis.
- FIFO(633) reads the beginning data from the stack and deletes this data to move the next one forward.

Example Programming

LIFO


When CIO 0.00 is ON in the following example, LIFO(634) reads the content of the word indicated by the stack pointer (D6) and writes that data to D300.

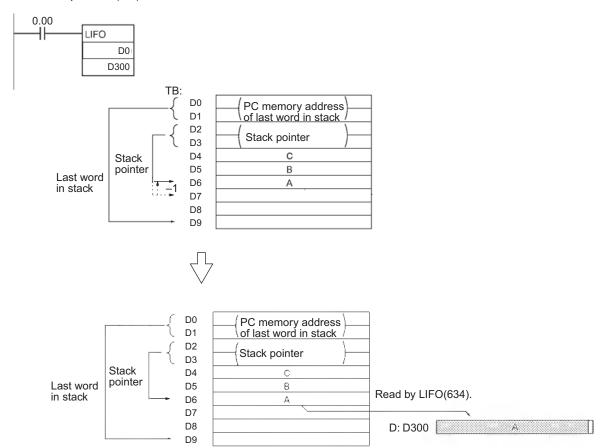

After the data is written to D300, the stack pointer is decremented by one. The content of D6 is left unchanged.

• FIFO


When CIO 0.00 is ON in the following example, FIFO(633) reads the content of D4 (TB+4 for the stack beginning at D0) and writes that data to D300.

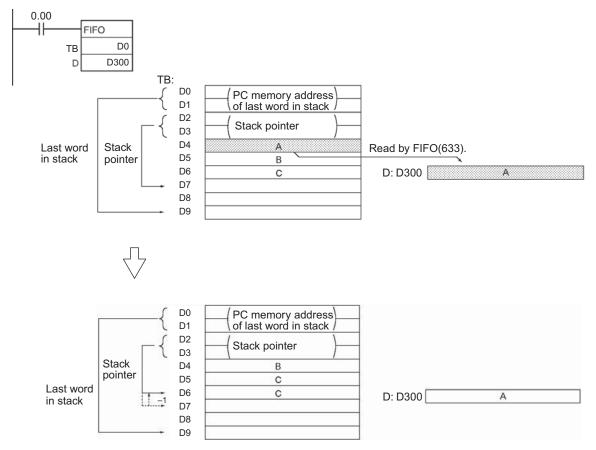

After the data is written to D300, the stack pointer is decremented by one and the remaining data is shifted down. (The content of D5 is shifted to D4 and the content of D6 is shifted to D5.)

SNUM

Instruction	Mnemonic	Variations	Function code	Function
STACK SIZE READ	SNUM	@SNUM	638	Counts the amount of stack data (number of words) in the specified stack.

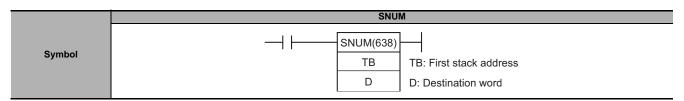

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	ОК	ОК	OK	OK


Operands

Operand	Description	Data type	Size		
ТВ	First stack address	UINT	Variable		
D	Destination word	UINT	1		

TB: First stack address

TB through TB+3: Stack control words

TB+4 through TB+(N-1): Data storage region

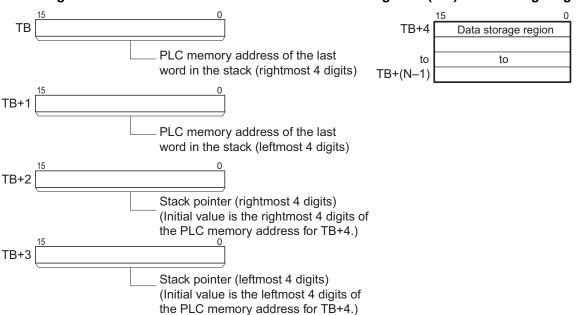

Operand Specifications

Area		Word addresses							Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
ТВ	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK				ОК				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				


Flags

Name	Label	Operation
Error Flag	P_ER	OFF
Equal Flag	P_EQ	 ON if the number of words of data in the stack (the value output to D) is 0. OFF in all other cases.

Function

SNUM(638) counts the number of data words in the specified stack from the beginning of the data region at TB+4 to the address before the one indicated by the stack pointer (TB+3 and TB+2). SNUM(638) does not change the data in the stack or the stack pointer.

The stack must be defined in advance with SSET(630).

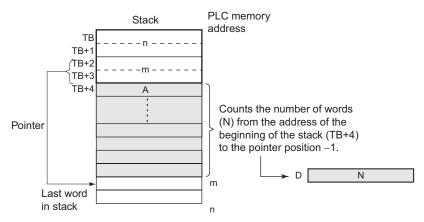


Hint

As an example, this instruction is used to count the number of work pieces currently on a conveyor belt.


Example Programming

When CIO 0.00 is ON in the following example, SNUM(638) counts the number of words from the beginning of the data region at D4 to the stack pointer position - 1 (D6) and outputs the result to D300. (In this case, the stack pointer indicates D7.)

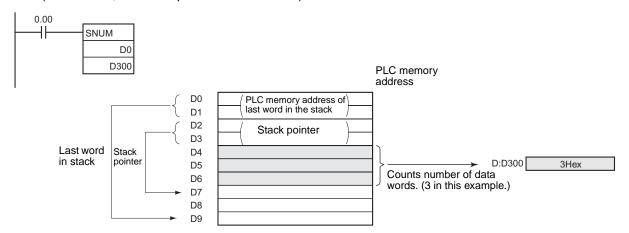

SREAD

Instruction	Mnemonic	Variations	Function code	Function
STACK DATA READ	SREAD	@SREAD	639	Reads the data from the specified data element in the stack. The offset value indicates the location of the desired data element (how many data elements before the current pointer position).

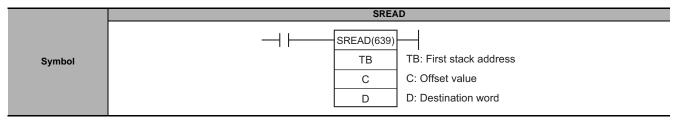

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		


Operands

Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
С	Offset value	UINT	1
D	Destination word	UINT	1

TB: First stack address

TB through TB+3: Stack control words

TB+4 through TB+(N-1): Data storage region

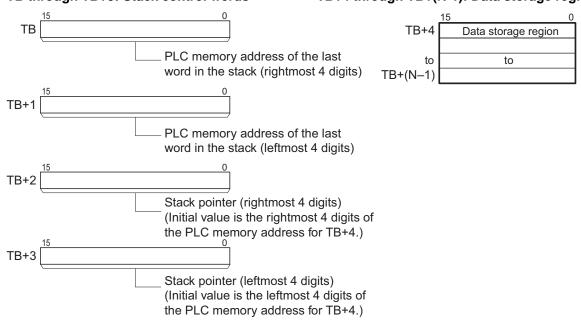

Operand Specifications


Area		Word addresses								Indirect DM/EM addresses Con-			Registers			ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ТВ																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
D												OK						

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified read location is not within the stack area. ON if the offset value specified in C is 0 or greater than the maximum data region size (FFFB hex). ON if the contents of the stack pointer (TB+3 and TB+2) is less than or equal to the PLC memory address of first word in the data region of the stack (TB+4). (This is a stack underflow error.) OFF in all other cases.
Equal Flag	P_EQ	ON if the output data in D is 0. OFF in all other cases.

Function

SREAD(639) reads the data from the address specified by the stack pointer (TB+3 and TB+2) minus the offset value in C. SREAD(639) does not change the data in the stack or the stack pointer. The stack must be defined in advance with SSET(630).

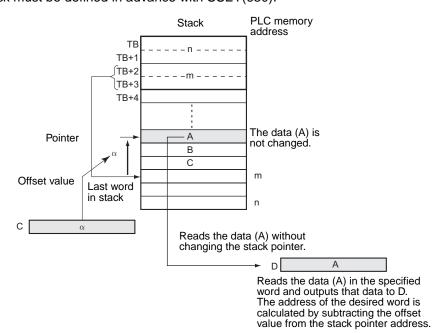


Hint

SREAD(639) can be used to read the data for an item currently on a conveyor. The position of the desired item is simply the number of items back (the offset value) from the most recent item added to the conveyor.


Example Programming

When CIO 0.00 is ON in the following example, SREAD(639) reads the data in the specified word in the stack starting at D0 and outputs the data to D100. In this case, the stack pointer indicates D7 and the offset value is 3, so the data is read from D4.

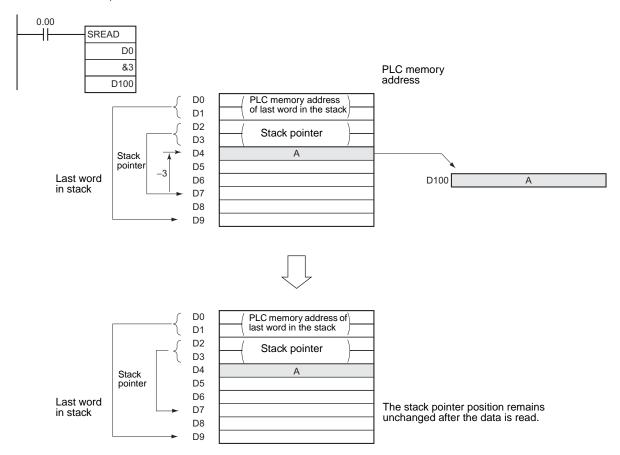

SWRIT

Instruction	Mnemonic	Variations	Function code	Function
STACK DATA OVERWRITE	SWRIT	@SWRIT	640	Writes the source data to the specified data element in the stack (overwriting the existing data). The offset value indicates the location of the desired data element (how many data elements before the current pointer position).

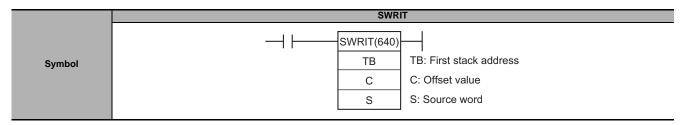

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		


Operands

Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
С	Offset value	UINT	1
S	Source word	UINT	1

TB: First stack address

TB through TB+3: Stack control words

TB+4 through TB+(N-1): Data storage region

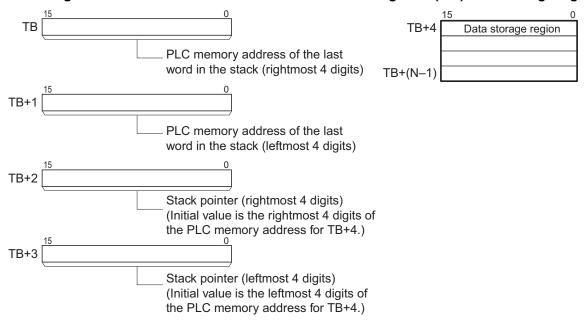

Operand Specifications


Area	Word addresses						Indirect addre	DM/EM esses	Con-	Registers		Flags		Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bit	bits
ТВ																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК	ОК		OK				
S											OK	OK						

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified write location is not within the stack area. ON if the offset value specified in C is 0 or greater than the maximum data region size (FFFB hex). ON if the contents of the stack pointer (TB+3 and TB+2) is less than or equal to the PLC memory address of first word in the data region of the stack (TB+4). (This is a stack under flow error.) OFF in all other cases.

Function

SWRIT(640) overwrites the data in the desired word with the data specified in S. The location of the desired word is calculated by subtracting the offset value in C from the stack pointer (TB+3 and TB+2). SWRIT(640) does not change the stack pointer. The stack must be defined in advance with SSET(630).

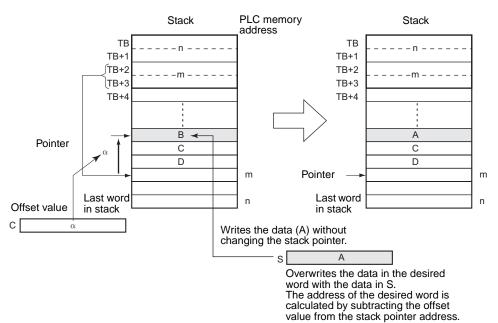


Hint

SWRIT(640) can be used to change the data for an item currently on a conveyor. The position of the desired item is simply the number of items back (the offset value) from the most recent item added to the conveyor.


Example Programming

When CIO 0.00 is ON in the following example, SWRIT(640) writes the data in D100 to the specified word in the stack starting at D0. In this case, the stack pointer indicates D7 and the offset value is 3, so the data in D4 is overwritten. SWRIT(640) does not change the pointer.

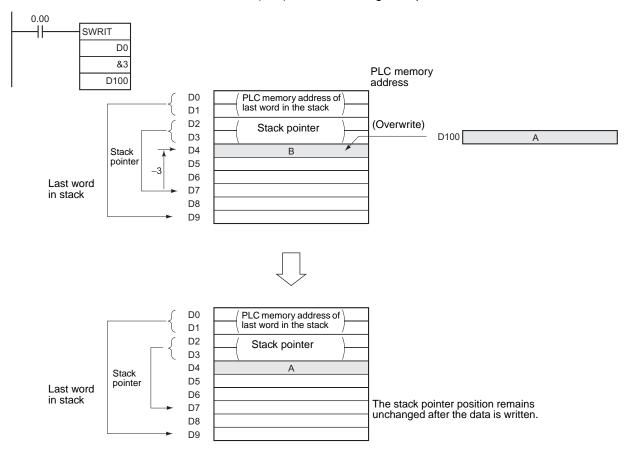

SINS

Instruction	Mnemonic	Variations	Function code	Function
STACK DATA INSERT	SINS	@SINS	641	Inserts the source data at the specified location in the stack and shifts the rest of the data in the stack downward. The offset value indicates the location of the desired data element (how many data elements before the current pointer position).

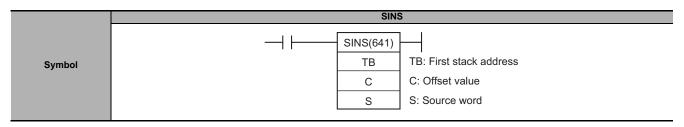

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
С	Offset value	UINT	1
S	Source word	UINT	1

TB: First stack address

TB through TB+3: Stack control words

TB+4 through TB+(N-1): Data storage region

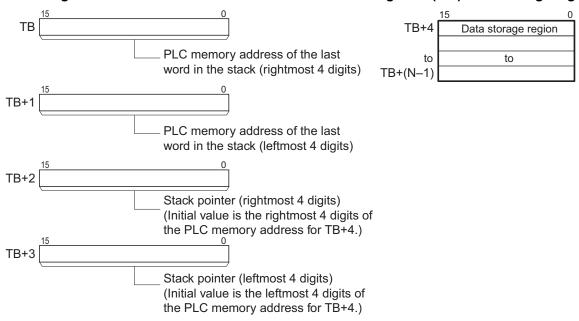

Operand Specifications


Area	Word addresses						Indirect addre		Con-		Registers		Flags		Pulse	TR							
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bi	bits					
ТВ																							
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК	ОК		OK									
S											OK	OK											

Flags

Name	Label	Operation					
Error Flag	P_ER	 ON if the address indicated by the stack pointer (TB+3 and TB+2) is greater than the PLC memory address of last word in the data region of the stack. (This is a stack overflow error.) ON if the offset value specified is greater than the maximum data region size - 1 (FFFA hex). OFF in all other cases. 					

Function

SINS(641) inserts the source data at the desired address and shifts the existing data down one word. At the same time, SINS(641) increments the stack pointer (TB+3 and TB+2) by 1. The location of the desired address is calculated by subtracting the offset value in C from the stack pointer. SINS(641) inserts one word of data into the stack, so there must be at least one available word at the end of the stack. If the stack is full, an error will occur and the source data will not be inserted. The stack must be defined in advance with SSET(630).

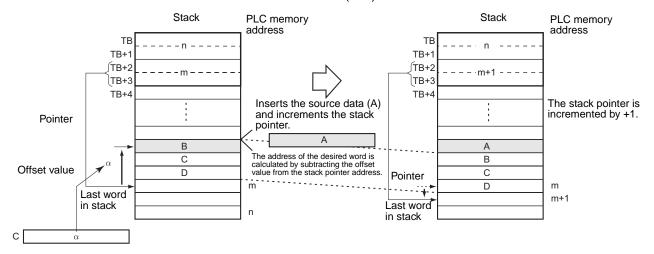



Hint

SINS(641) can be used to insert the data for an item that is inserted in the midst of items already on a conveyor. The position of the insertion point is simply the number of items back (the offset value) from the most recent item added to the conveyor.

Example Programming


When CIO 0.00 is ON in the following example, SINS(641) inserts the source data in D100 at the specified address in the stack starting at D0. In this case, the stack pointer indicates D7 and the offset value is 3, so the source data is inserted in D4. The existing data is shifted down one word and the data in D7 is overwritten. At the same time the stack pointer will be incremented from D7 to D8.

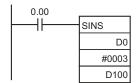

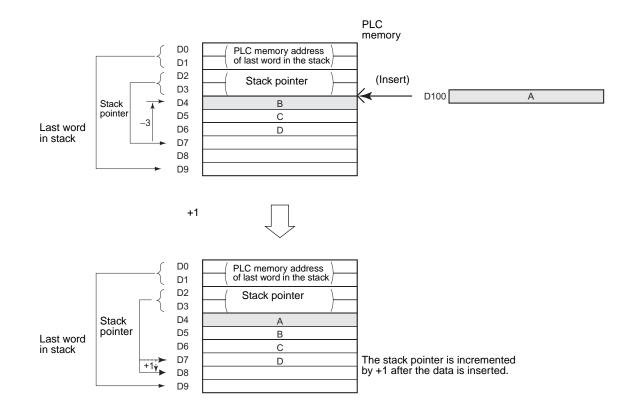

SDEL

Instruction	Mnemonic	Variations	Function code	Function
STACK DATA DELETE	SDEL	@SDEL	642	Deletes the data element at the specified location in the stack, outputs that data to the specified destination word, and shifts the remaining the data in the stack upward. The offset value indicates the location of the desired data element (how many data elements before the current pointer position).

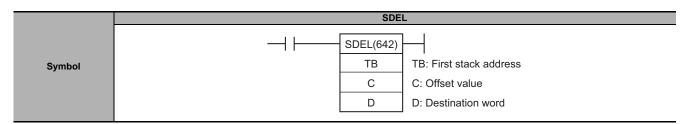

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
ТВ	First stack address	UINT	Variable
С	Offset value	UINT	1
D	Destination word	UINT	1

TB: First stack address

TB through TB+3: Stack control words

TB+4 through TB+(N-1): Data storage region

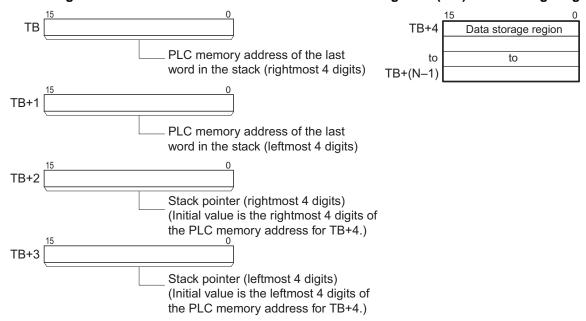

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-			Registers			igs	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
ТВ																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
D												OK						


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the content of the stack pointer (TB+3 and TB+2) is less than or equal to the PLC memory address of first word in the data region of the stack (TB+4). (This is a stack underflow error.) ON if the offset value specified in C is 0 or greater than the maximum data region size (FFFB hex). OFF in all other cases.
Equal Flag	P_EQ	ON if the output data in D is 0000. OFF in all other cases.

Function

SDEL(642) deletes the data at the specified location in the stack, outputs that data to the specified destination word, and shifts the remaining the data in the stack upward. At the same time, SDEL(642) decrements the stack pointer (TB+3 and TB+2) by 1. The location of the desired address is calculated by subtracting the offset value in C from the stack pointer.

The stack must be defined in advance with SSET(630).

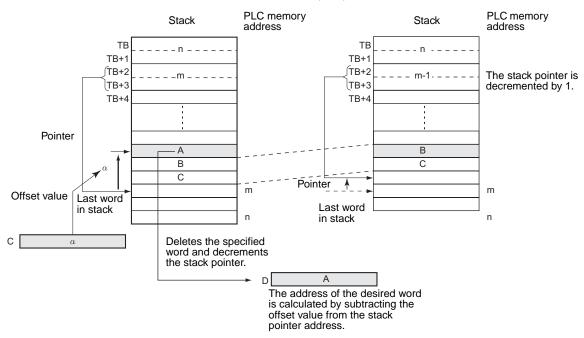


Hint

SDEL(642) can be used to delete the data for an item that is rejected from the items on a conveyor. The position of the deletion point is simply the number of items back (the offset value) from the most recent item added to the conveyor.


Example Programming

In this case, the stack pointer indicates D7 and the offset value is 3, so the data is deleted from D4. The remaining data is shifted up one word and the stack pointer is decremented from D7 to D6.

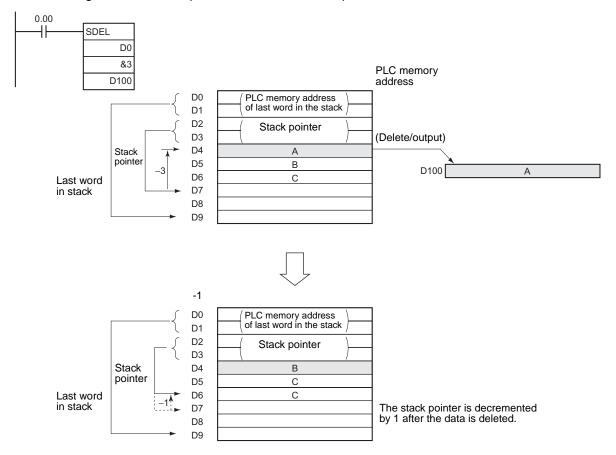

DIM

Instruction	Mnemonic	Variations	Function code	Function
DIMENSION RECORD TABLE	DIM	@DIM	631	Defines the specified I/O memory area as a record table by declaring the length of each record and the number of records. Up to 16 record tables can be defined.

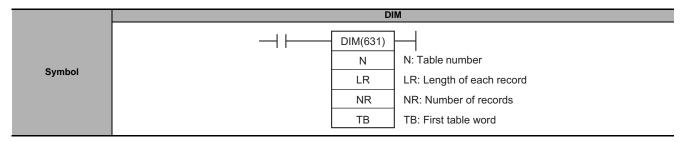

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
N	Table number		1
LR	Length of each record	UINT	1
NR	Number of records	UINT	1
ТВ	First table word	UINT	Variable

N: Table number

Indicates the table number. N must be between 0 and 15.

LR: Length of each record

Indicates the number of words in each record. LR must be 0001 to FFFF hexadecimal (1 to 65,535 words).

NR: Number of records

Indicates the number of records in the table. NR must be 0001 to FFFF hexadecimal (1 to 65,535 words).

Operand Specifications

Aron		Word addresses							Indirect addre	: DM/EM esses	Con-		Regis	ters	Fla	ıgs	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
N											ОК							
LR, NR	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ок	OK	OK		ОК				
D	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Label	Operation
Error Flag	ER	ON if LR or NR is 0. OFF in all other cases.

Function

DIM(631) registers the words from TB to TB+LR×NR-1 as table number N. Table number N has NR records and each record is LR words long. The data within this region cannot be changed once the region has been declared as records.

Records in a registered table are identified by their record numbers, which range from 0 to NR-1.

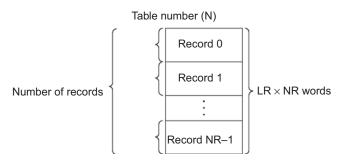

Hint


- Use DIM(631) in combination with SETR(635) (SET RECORD NUMBER) or GETR(636) (GET RECORD NUMBER) to simplify the calculation of addresses in data tables. Use DIM(631) to divide data into records and then use SETR(635) to store the first address of the desired record in an Index Register. The Index Register can then be used as a pointer in other instructions, such as read, write, search, or compare instructions.
- As an example, if temperatures, pressures, or other set values are stored as records and the records for various models are combined into a table, it is easy to read the set values for each models for any particular conditions.

Related instructions

- SETR(635) sets the leading PLC memory address of the specified record number in the specified Index Register.
- GETR(636) outputs the record number of the record that includes the specified Index Register value (PLC memory address).


Example Programming

When CIO 0.00 is ON in the following example, DIM(631) defines record table number 2 with three 10-word records. The table begins at D300.

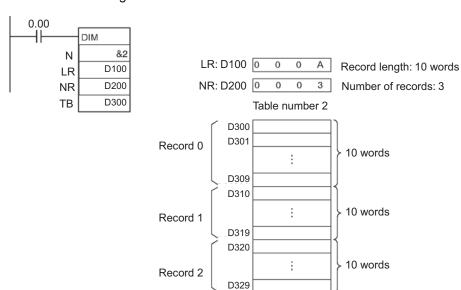

SETR

Instruction	Mnemonic	Variations	Function code	Function
SET RECORD LOCATION	SETR	@SETR	635	Writes the location of the specified record (the PLC memory address of the beginning of the record) in the specified Index Register.

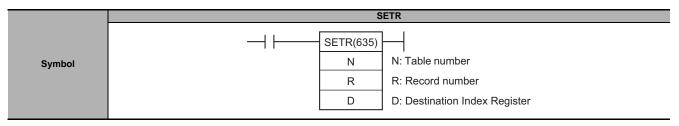

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Table number		1
R	Record number	UINT	1
D	Destination Index Register	WORD	2

N: Table number

Indicates the table number. N must be between 0 and 15.

R: Record number

Indicates the record number of the desired record. R must be 0000 to FFFE hexadecimal (0 to 65,534). Record numbers begin with 0, so the valid record numbers are 0 to NR-1 for a table with NR records.

D: Destination Index Register

Indicates the desired Index Register. D must be IR0 to IR15.

Operand Specifications


Area		Word addresses								: DM/EM esses	Con-		Regis	ters	Fla	ıgs	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											ОК							
R	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	UK	OK		OK				
D													OK					

Flags

Name	Label	Operation
Error Flag	ER	 ON if the specified table number (N) has not been defined with DIM(631). ON if the specified record number (R) exceeds the highest record number in the table (NR-1). OFF in all other cases.

Function

SETR(635) stores the PLC memory address of the first word of the specified record in the specified Index Register.

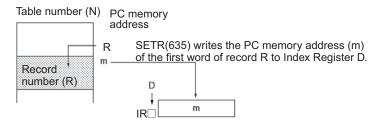


Note • The record table must be defined in advance with DIM(631).

• Valid record numbers range from 0 to NR-1, where NR is the number of records specified when the table was defined with DIM(631).


Example Programming

When CIO 0.00 is ON in the following example, SETR(635) finds the PLC memory address of the first word of record 3 of table number 10 and stores this address in Index Register IR11.

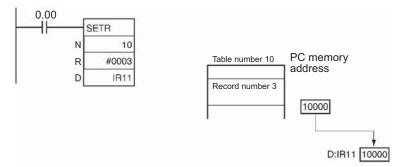

GETR

Instruction	Mnemonic	Variations	Function code	Function
GET RECORD NUMBER	GETR	@GETR	636	Returns the record number of the record at the PLC memory address contained in the specified Index Register.

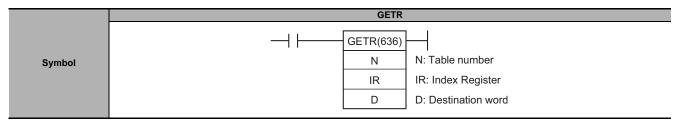

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Table number		1
IR	Index Register	UINT	2
D	Destination word	WORD	1

N: Table number

Indicates the table number. N must be between 0 and 15.

IR: Index Register

Indicates the desired Index Register. IR must be IR0 to IR15.

Operand Specifications


Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											OK							
IR													OK					
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if the PLC memory address in the specified Index Register is not within the specified table (N). ON if the specified table number (N) has not been defined with DIM(631). OFF in all other cases.

Function


GETR(636) finds which record includes the PLC memory address contained in the specified Index Register and writes that record number in D. The PLC memory address contained in the Index Register does not have to be the first word in the record; it can be any word in the record.

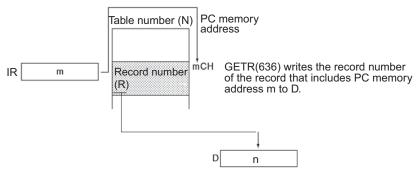


Note The record table must be defined in advance with DIM(631).

Example Programming


When CIO 0.00 is ON in the following example, GETR(636) finds the record number of the record that contains the PLC memory address in Index Register IR11 and writes this record number to D1000.

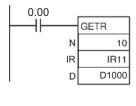

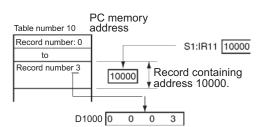

SRCH

Instruction	Mnemonic Variations		Function code	Function
DATA SEARCH	SRCH	@SRCH	181	Searches for a word of data within a range of words.

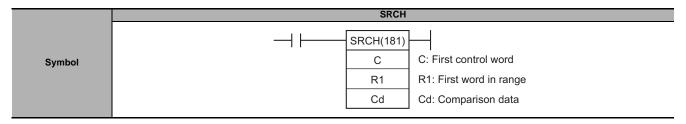


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size		
С	First control word	UDINT	2		
R1	First word in range	UINT	Variable		
Cd	Comparison data	WORD	1		

C: First control word

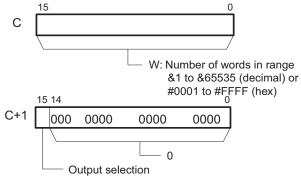

- 0: Does not output number of matches to DR0.
- 1: Outputs number of matches to DR0.

R1: First word in range

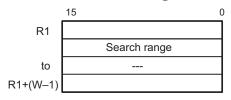

Note C and C+1, R1 and R1+W-1 must be in the same data area.

Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
Cd											OK	OK						

Name	Label	Operation
Error Flag	ER	 ON if the content of C is not within the specified range of 0001 through FFFF. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	 ON if one or more of the words in the search range contain the comparison data. OFF in all other cases.

Related Auxiliary Area Words and Bits


Name	Address	Operation
IR0 Output for Background Execution	A595 and A596	When an index register is specified as the output for an instruction processed in the background, A595 and A596 receive the output instead of IR0. (A595 contains the rightmost digits, and A596 contains the leftmost digits.)
DR0 Output for Background Execution	A597	When a data register is specified as the output for an instruction processed in the background, A597 receives the output instead of DR0.
Equals Flag for Background Execution	A598.01	This flag is turned ON if matching data is found for a SRCH(181) instruction executed in the background.
ER/AER Flag for Background Execution	A395.10	This flag is turned ON if an error or illegal access occurs during background execution.

Function

SRCH(181) searches the range of memory from R1 to R1+W-1 for words that contain the comparison data (Cd). If a match is found, SRCH(181) writes the PLC memory address of the word to IR0 and turns the Equals Flag ON.

(If there are two or more matches, just the address of the first word containing the comparison data is written to IRO.)

When bit 15 of C+1 has been set to 1, SRCH(181) writes the number of matches to DR0. When bit 15 of C+1 is 0, DR0 is left unchanged.

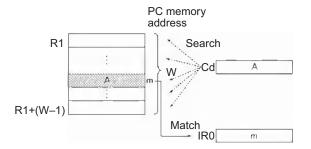

Hint


- SRCH(181) searches table data that contains one word in each record. For searching data that contains more than one word per record, use DIM(631), SETR(635), GETR(636), FOR(512)-NEXT(513), or BREAK(514) together with an Index Register (IR).
- SRCH(181) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Precautions

- The status of the Equals Flag can be checked immediately after execution to determine whether or not there was a match.
- If no match is found, the contents of IR0 and DR0 are left unchanged.
- If background execution is enabled in the PLC Setup, the PLC memory address of the first word containing a match will be output to Auxiliary Area words A595 and A596 instead of IRO.
- If background execution is enabled in the PLC Setup and control word C+1 is set to output the total number of matches to DR0 (C+1 = 8000 hex), the total number of matches will be output to Auxiliary Area word A597 instead of DR0.

Example Programming

When CIO 0.00 is ON in the following example, SRCH(181) searches the 10-word range beginning at D100 for words that have the same content as D200. The PLC memory address of the first word containing a match is written to IR0 and the total number of matches is written to DR0.

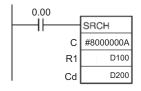


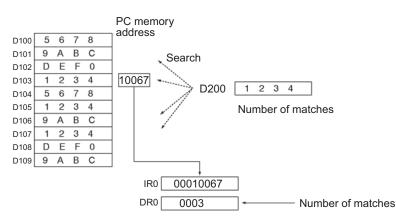

If the table length is specified as &10 (10 decimal) or A hexadecimal, the number of matches will not be output to the data register DR0.

SWAP

Instruction	tion Mnemonic Variatio		Function code	Function	
SWAP BYTES	SWAP	@SWAP	637	Switches the leftmost and rightmost bytes in all of the words in the range.	

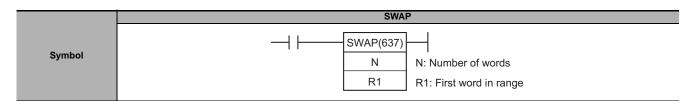

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size		
N	Number of words	UINT	1		
R1	First word in range	UINT	Variable		

N: Number of words

N specifies the number of words in the range and must be 0001 to FFFF hexadecimal (or &1 to &65,535).

R1: First word in range

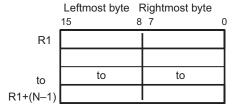

Note R1 and R1+(N-1) must be in the same data area.

Operand Specifications


Area			٧	Vord ad	ldresse	s			Indirect addre		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
N	ОК	ОК	ОК	ОК	ОК	OK	ОК	OK	ОК	OK	OK	OK		ОК				
R1	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if the N is 0. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.

Function

SWAP(637) switches the position of the two bytes in all of the words in the range of memory from R1 to R1+N-1.

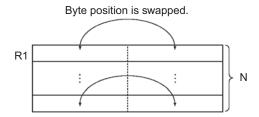


Hint

- This instruction can be used to reverse the order of ASCII-code characters in each word.
- SWAP(637) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


When CIO 0.00 is ON in the following example, SWAP(637) switches the data in the leftmost bytes with the data in the rightmost bytes in each word in the 10-word range from W0 to W9.

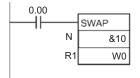

	15	8	7	0			15	8	7	
	10		1				10			
W0	4	1	4	2		W0	4	2	4	1
W1	4	3	4	4	N	W1	4	4	4	3
W2	4	5	4	6		W2	4	6	4	5
to		to)		\neg	to		to)	
W9	3	0	3	1		W9	3	1	3	0

MAX/MIN

Instruction	Mnemonic	Variations	Function code	Function
FIND MAXIMUM	MAX	X @MAX 182		Finds the maximum value in the range.
FIND MINIMUM	MIN	@MIN	183	Finds the minimum value in the range.

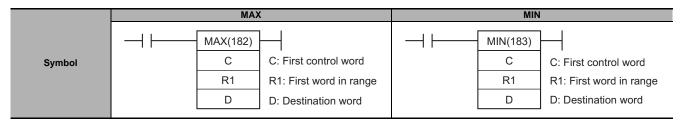


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size		
С	First control word	UDINT	2		
R1	First word in range	UINT	Variable		
D	Destination word	UINT	1		

C: First control word

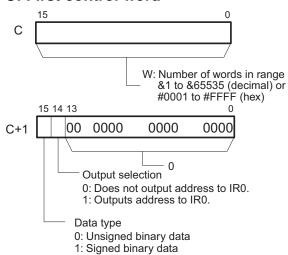

R1: First word in range

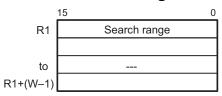

Note C and C+1, R1 and R1+(W-1) must be in the same data area.

Area			V	Vord ad	ldresse	s			Indirect addre	DM/EM esses	Con- Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D												OK						

Name	Label	Oper	ation				
Name	Labei	MAX	MIN				
Error Flag	ER	ON if the content of C is not within the specified rown on if the Communications Port Enabled Flag for Com Port number for Background Execution is Of OFF in all other cases.	the communications port number specified as the				
Equals Flag	=	ON if the maximum value is 0. OFF in all other cases.	ON if the minimum value is 0. OFF in all other cases.				
Negative Flag	N	ON if bit 15 is ON in the word containing the maximum value. OFF in all other cases.	ON if bit 15 is ON in the word containing the minimum value. OFF in all other cases.				

Related Auxiliary Area Words and Bits

Name	Address	Operation
IR0 Output for Background Execution	A595 and A596	When an index register is specified as the output for an instruction processed in the background, A595 and A596 receive the output instead of IR0. (A595 contains the rightmost digits, and A596 contains the leftmost digits.)
ER/AER Flag for Background Execution	A395.10	This flag is turned ON if an error or illegal access occurs during background execution.


Function

MAX

MAX(182) searches the range of memory from R1 to R1+(W-1) for the maximum value in the range and outputs that maximum value to D.

When bit 14 of C+1 has been set to 1, MAX(182) writes the PLC memory address of the word containing the maximum value to IR0. (If two or more words within the range contain the maximum value, the address of the first word containing the maximum value is written to IR0.)

When bit 15 of C+1 has been set to 1, MAX(182) treats the data within the range as signed binary data.

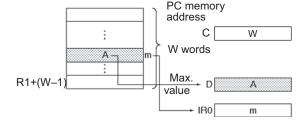


MIN

MIN(183) searches the range of memory from R1 to R1+(W-1) for the minimum value in the range and outputs that minimum value to D.

When bit 14 of C+1 has been set to 1, MIN(183) writes the PLC memory address of the word containing the minimum value to IR0. (If two or more words within the range contain the minimum value, the address of the first word containing the minimum value is written to IR0.)

When bit 15 of C+1 has been set to 1, MIN(183) treats the data within the range as signed binary data.

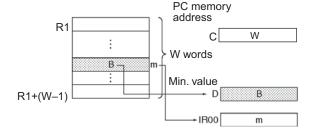

Hint

- When bit 15 of C+1 has been set to 1, the data within the range is treated as signed binary data and hexadecimal values 8000 to FFFF are considered negative. Thus, the results of the search will differ depending on the data-type setting.
- MAX(182)/MIN(183) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

MAX

If background execution is enabled in the PLC Setup, the PLC memory address of the word containing the maximum value will be output to Auxiliary Area words A595 and A596 instead of IR0.


MIN

If background execution is enabled in the PLC Setup, the PLC memory address of the word containing the minimum value will be output to Auxiliary Area words A595 and A596 instead of IR0.

Example Programming


MAX

When CIO 0.00 turns ON in the following example, MAX(182) searches the 10-word range beginning at D200 for the maximum value. The maximum value is written to D300 and the PLC memory address of the word containing the maximum value is written to IR0.

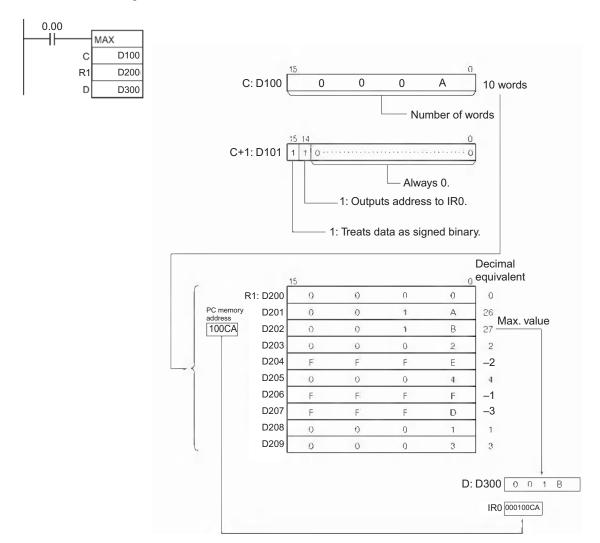


MIN

When CIO 0.00 turns ON in the following example, MIN(183) searches the 10-word range beginning at D200 for the minimum value. The minimum value is written to D300 and the PLC memory address of the word containing the minimum value is written to IR0.

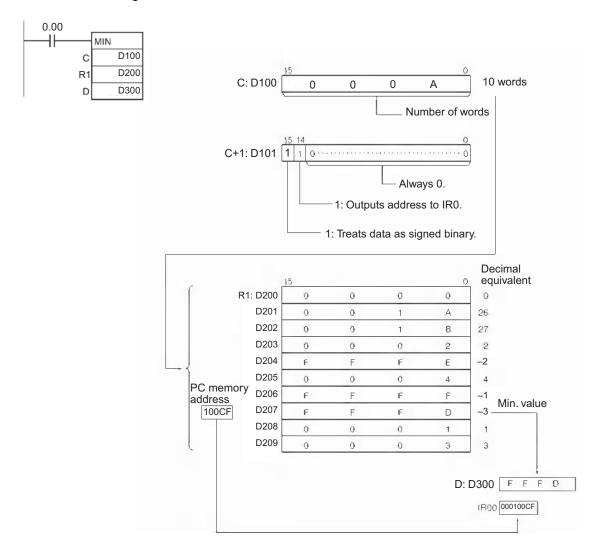

MAXL

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE FIND MAXIMUM	MAXL	@MAXL	174	Treats the specified number of data items as double word table data and outputs the maximum value in the table.

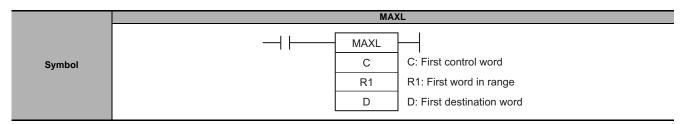


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
С	First control word	UDINT	2
R1	First word in range	UDINT	Variable
D	First destination word	UDINT	2

C: First control word

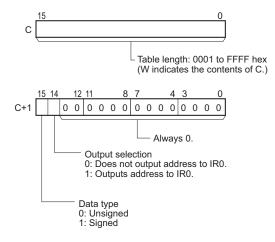

R1: First word in range

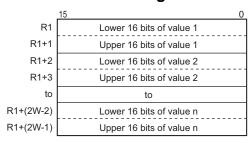

Avec	Word addresses						DM/EM esses	Con-	Registers			Flags		Pulse	TR			
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		


Name	Label	Operation
Error Flag	P_ER	ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. OFF in all other cases.
Equals Flag	P_EQ	ON if the maximum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if bit 15 of D+1 is ON. OFF in all other cases.

Function

MAXL(174) searches the range of memory from R1 to R1+(2W-1) for the maximum double word value in the range and outputs that maximum value to D and D+1.


When bit 14 of C+1 has been set to 1, MAXL(174) writes the PLC memory address of the lower word of the words containing the maximum value to IR0. (If two or more double words within the range contain the same maximum value, the address of lower word of the first double word containing the maximum value is written to IR0.)

When bit 15 of C+1 has been set to 1, MAXL treats the data within the range as signed binary data. (A negative value is given as it's two's complement.)

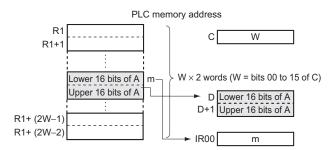

Saving and Restoring Values in Index Registers

MAXL can be used to write the PLC memory address of the lower word of the words containing the maximum value to IR0. If IR0 is being used for other purposes in other places in the program, be sure to save and restore the contents of IR0 before and after MAXL. (This information applies to MAXF, MAXD, MINL, MINF, and MIND as well. For MINL, MINF, and MIND, the PLC memory address of the lower word of the minimum value would be written to IR0.)

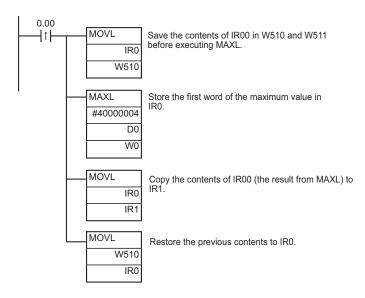

Background Processing

The execution time of MAXL will increase proportionately to the size of the table data. Background processing can be used for MAXL to suppress variations in the cycle time of the CPU Unit when the table data is too large. (This information applies to MAXF, MAXD, MINL, MINF, and MIND as well.)

```
O.00 A202.00

SET

W511.15

MAXL

#4000004

#4000004

D0

W511.15 A202.00


RSET

When A202.00 turns ON, background processing for MAXL has been completed and the result stored in W0 can be used.

Instructions using results of MAXL in W0
```


Example Programming

When CIO 0.00 turns ON in the following example, a table of four double word values starting at D0 is searched for the maximum value. The maximum value is stored in W0 and W1.

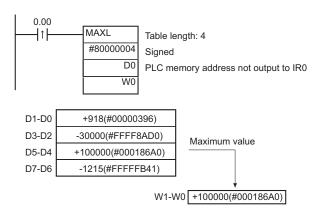

MAXF

Instruction	Mnemonic	Variations	Function code	Function
FIND MAXIMUM FLOATING	MAXF	@MAXF	176	Treats the specified number of data items as a table of single-precision floating-point data and outputs the maximum value in the table.

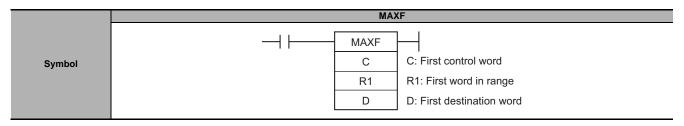


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
С	First control word	DWORD	2
R1	First word in range	REAL	Variable
D	First destination word	REAL	2

C: First control word

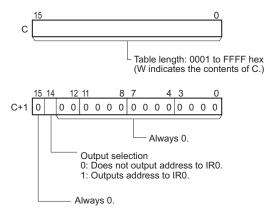

R1: First word in range

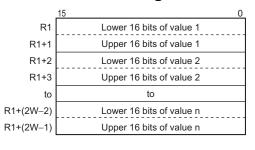


Aroa	Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Area -	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		İ

Name	Label	Operation
Error Flag	P_ER	 ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. ON if the table data is nonnumeric. OFF in all other cases.
Equals Flag	P_EQ	ON if the maximum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if the maximum value is negative. OFF in all other cases.

Function

MAXF(176) searches the range of memory from R1 to R1+(2W-1) for the maximum single-precision floating-point value (32-bit according to IEEE 754) in the range and outputs that maximum value to D and D+1.

When bit 14 of C+1 has been set to 1, MAXF(176) writes the PLC memory address of the lower word of the words containing the maximum value to IR0. (If two or more double words within the range contain the same maximum value, the address of lower word of the first double word containing the maximum value is written to IR0.)

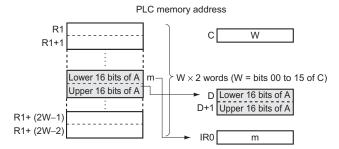


Hint

Refer to the description of MAXL(174) for information on saving and restoring values in Index Registers and information on background processing.

Example Programming


When CIO 0.00 turns ON in the following example, a table of four single-precision floating-point values starting at D0 is searched for the maximum value.

The maximum value is stored in W0 and W1.

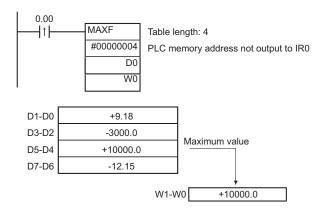

MAXD

Instruction	Mnemonic	Variations	Function code	Function
FIND DOUBLE MAXIMUM FLOATING	MAXD	@MAXD	178	Treats the specified number of data items as a table of double-precision floating-point data and outputs the maximum value in the table.

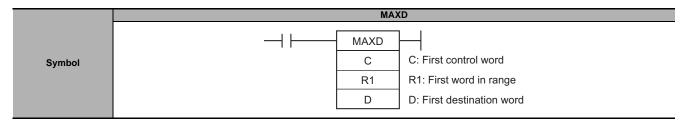


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	First control word	DWORD	2
R1	First word in range	LREAL	Variable
D	First destination word	LREAL	4

C: First control word

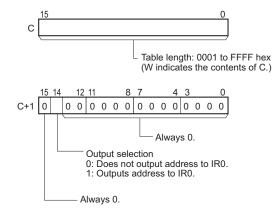

R1: First word in range

	15 0
R1	Lowest 16 bits of value 1
R1+1	Lower 16 bits of value 1
R1+2	Upper 16 bits of value 1
R1+3	Highest 16 bits of value 1
R1+4	Lowest 16 bits of value 2
R1+5	Lower 16 bits of value 2
R1+6	Upper 16 bits of value 2
R1+7	Highest 16 bits of value 2
to	to
R1+(4W-4)	Lowest 16 bits of value n
R1+(4W-3)	Lower 16 bits of value n
R1+(4W-2)	Upper 16 bits of value n
R1+(4W-1)	Highest 16 bits of value n


Area			V	Vord ad	Idresse	s			Indirect DM/EM addresses Con-				Regis	ters	Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Name	Label	Operation
Error Flag	P_ER	 ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. ON if the table data is nonnumeric. OFF in all other cases.
Equals Flag	P_EQ	ON if the maximum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if the maximum value is negative. OFF in all other cases.

Function

MAXD(178) searches the range of memory from R1 to R1+(4W-1) for the maximum double-precision floating-point value (64-bit according to IEEE 754) in the range and outputs that maximum value to D to D+3

When bit 14 of C+1 has been set to 1, MAXD(178) writes the PLC memory address of the lower word of the words containing the maximum value to IR0. (If two or more double words within the range contain the same maximum value, the address of lower word of the first double word containing the maximum value is written to IR0.)

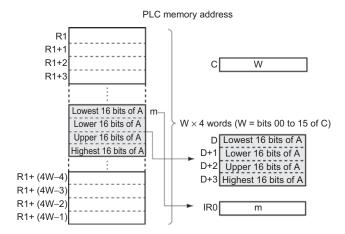


Hint

Refer to the description of MAXL(174) for information on saving and restoring values in Index Registers and information on background processing.

Example Programming


When CIO 0.00 turns ON in the following example, a table of four double-precision floating-point values starting at D0 is searched for the maximum value.

The maximum value is stored in W0 to W3.

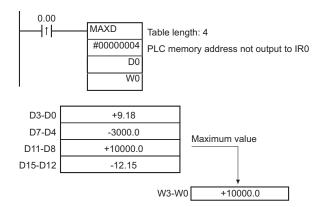

MINL

Instruction	Mnemonic	Variations	Function code	Function
DOUBLE FIND MINIMUM	MINL	@MINL	175	Treats the specified number of data items as double word table data and outputs the minimum value in the table.

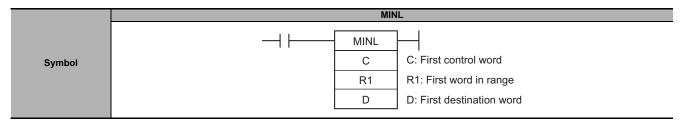


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
С	First control word	UDINT	2
R1	First word in range	UDINT	Variable
D	First destination word	UDINT	2

C: First control word

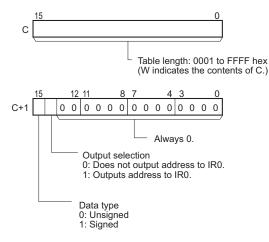

R1: First word in range

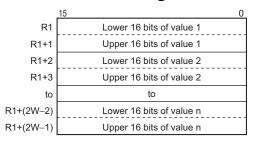

Area			v	Vord ad	dresse	s			Indirect DM/EM addresses Cor			Registers				ıgs	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		


Name	Label	Operation
Error Flag	P_ER	 ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. OFF in all other cases.
Equals Flag	P_EQ	ON if the minimum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if bit 15 of D+1 is ON. OFF in all other cases.

Function

MINL(175) searches the range of memory from R1 to R1+(2W-1) for the minimum double word value in the range and outputs that minimum value to D and D+1.

When bit 14 of C+1 has been set to 1, MINL(175) writes the PLC memory address of the lower word of the words containing the minimum value to IR0. (If two or more double words within the range contain the same minimum value, the address of lower word of the first double word containing the minimum value is written to IR0.)

When bit 15 of C+1 has been set to 1, MINL(175) treats the data within the range as signed binary data. (A negative value is given as it's two's complement.)

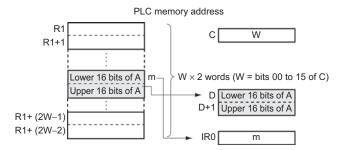


Hint

Refer to the description of MAXL(174) for information on saving and restoring values in Index Registers and information on background processing.

Example Programming


When CIO 0.00 turns ON in the following example, a table of four double word values starting at D0 is searched for the minimum value.

The minimum value is stored in W0 and W1.

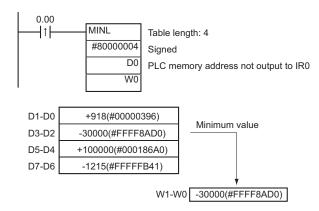

MINF

Instruction	Mnemonic	Variations	Function code	Function
FIND MINIMUM FLOATING	MINF	@MINF	177	Treats the specified number of data items as a table of single-precision floating-point data and outputs the minimum value in the table.

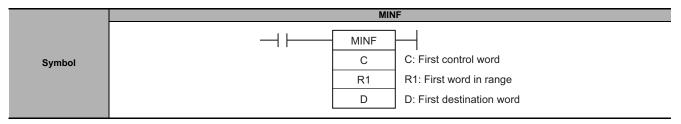


Applicable Program Areas

Area	Function block definitions	Block program areas	ck program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
С	First control word	DWORD	2
R1	First word in range	REAL	Variable
D	First destination word	REAL	2

C: First control word

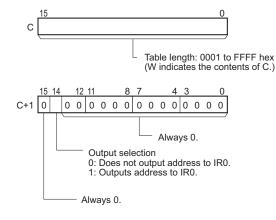

R1: First word in range

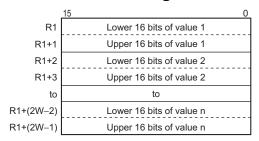


Area			V	Vord ad	ldresse	s			Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Name	Label	Operation
Error Flag	P_ER	 ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. ON if the table data is nonnumeric. OFF in all other cases.
Equals Flag	P_EQ	ON if the minimum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if the minimum value is negative. OFF in all other cases.

Function

MINF(177) searches the range of memory from R1 to R1+(2W-1) for the minimum single-precision floating-point value (32-bit according to IEEE 754) in the range and outputs that minimum value to D and D+1.

When bit 14 of C+1 has been set to 1, MINF(177) writes the PLC memory address of the lower word of the words containing the minimum value to IR0. (If two or more double words within the range contain the same minimum value, the address of lower word of the first double word containing the minimum value is written to IR0.)

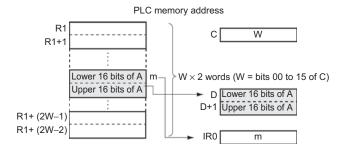


Hint

Refer to the description of MAXL(174) for information on saving and restoring values in Index Registers and information on background processing.

Example Programming


When CIO 0.00 turns ON in the following example, a table of four single-precision floating-point values starting at D0 is searched for the minimum value.

The minimum value is stored in W0 and W1.

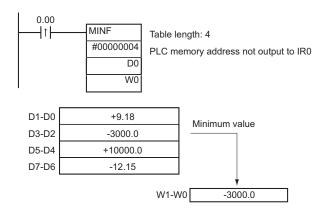

MIND

Instruction	Mnemonic	Variations	Function code	Function				
FIND DOUBLE MINIMUM FLOATING	MIND	@MIND	179	Treats the specified number of data items as a table of double-precision floating-point data and outputs the minimum value in the table.				

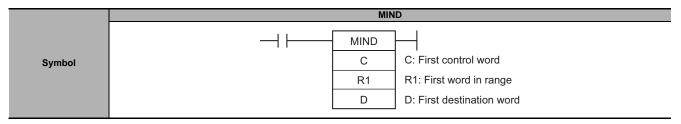


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
С	First control word	DWORD	2		
R1	First word in range	LREAL	Variable		
D	First destination word	LREAL	4		

C: First control word

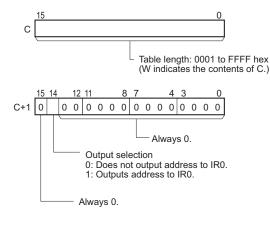

R1: First word in range

i	15 0
R1	Lowest 16 bits of value 1
R1+1	Lower 16 bits of value 1
R1+2	Upper 16 bits of value 1
R1+3	Highest 16 bits of value 1
R1+4	Lowest 16 bits of value 2
R1+5	Lower 16 bits of value 2
R1+6	Upper 16 bits of value 2
R1+7	Highest 16 bits of value 2
to	to
R1+(4W-4)	Lowest 16 bits of value n
R1+(4W-3)	Lower 16 bits of value n
R1+(4W-2)	Upper 16 bits of value n
R1+(4W-1)	Highest 16 bits of value n


Area			V	Vord ad	Idresse	s			Indirect addre		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Name	Label	Operation
Error Flag	P_ER	 ON if the length of the table specified in C (bits 00 to 15) is not between 0001 and FFFF hex. ON if the table data is nonnumeric. OFF in all other cases.
Equals Flag	P_EQ	ON if the minimum value is 0. OFF in all other cases.
Negative Flag	P_N	ON if the minimum value is negative. OFF in all other cases.

Function

MIND(179) searches the range of memory from R1 to R1+(4W-1) for the minimum double-precision floating-point value (64-bit according to IEEE 754) in the range and outputs that minimum value to D to D+3

When bit 14 of C+1 has been set to 1, MIND(179) writes the PLC memory address of the lower word of the words containing the minimum value to IR0. (If two or more double words within the range contain the same minimum value, the address of lower word of the first double word containing the minimum value is written to IR0.)

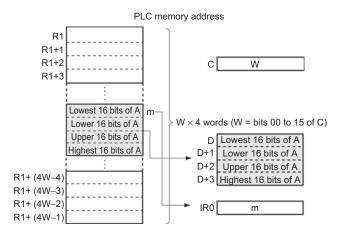


Hint

Refer to the description of MAXL(174) for information on saving and restoring values in Index Registers and information on background processing.

Example Programming


When CIO 0.00 turns ON in the following example, a table of four double-precision floating-point values starting at D0 is searched for the minimum value.

The minimum value is stored in W0 to W3.

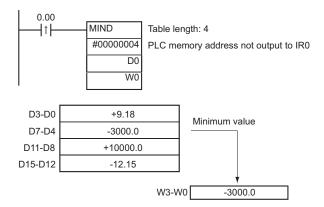

SUM

Instruction	Mnemonic	Variations	Function code	Function		
SUM	SUM	@SUM	184	Adds the bytes or words in the range and outputs the result to two words.		

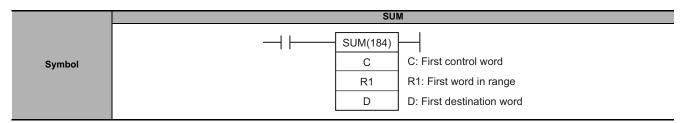


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	OK	OK	ОК	ОК	OK	


Operands

Operand	Description	Data type	Size		
С	First control word	UDINT	2		
R1	First word in range	UINT	Variable		
D	First destination word	UDINT	2		

C: First control word

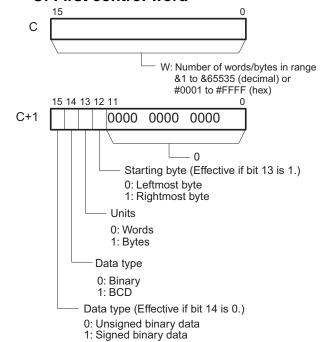

R1: First word in range

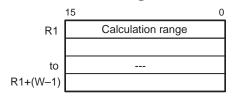

D: First destination word



The leftmost four digits are stored in D+1 and the rightmost four digits are stored in D.

Note C and C+1, all of the words in the calculation range must be in the same data area.

Area		Word addresses					Word addresses					Indirect addre	DM/EM esses	Con-		Regis	ters	Fla	ags	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits			
С											OK										
R1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK							
D																					


Name	Label	Operation						
Error Flag	ER	 ON if the content of C is not within the specified range of 0001 through FFFF. ON if the BCD data has been specified, but the range contains binary data. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases. 						
Equals Flag	=	ON if the result is 0. OFF in all other cases.						
Negative Flag	N	ON if bit 15 is ON in the result. OFF in all other cases.						

Function

SUM(184) adds W units of data beginning with the data in R1 and outputs the result to D+1 and D. The settings in C+1 determine whether the units are words or bytes, whether the data is binary (signed or unsigned) or BCD, and whether to start with the right or left byte of R1 if bytes are being added.

When bit 13 of C+1 has been set to 1, SUM(184) adds bytes of data. In this case, bit 12 determines whether the calculation starts with the rightmost byte of R1 (bit 12 = 1) or the leftmost byte of R1 (bit 12 = 0).

When bit 14 of C+1 has been set to 0, SUM(184) treats the data as binary. In this case, bit 15 determines whether the data is signed (bit 15 = 1) or unsigned (bit 15 = 0).

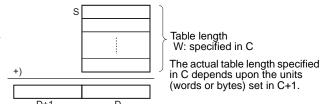



Hint

SUM(184) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


When CIO 0.00 is ON in the following example, SUM(184) adds 10 bytes of unsigned binary data beginning with the rightmost byte of D100 and writes the result to D201 and D200.

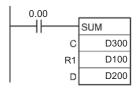

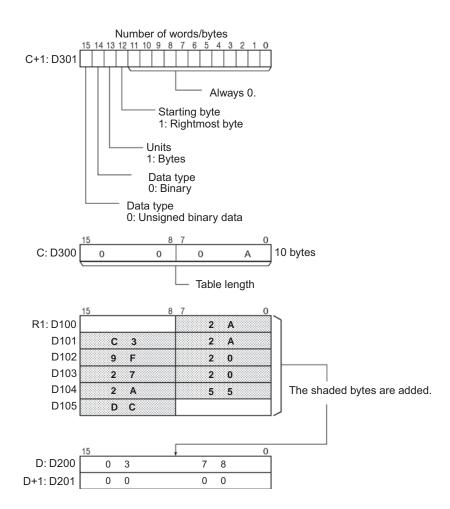

FCS

Instruction	Mnemonic	Variations	Function code	Function			
FRAME CHECKSUM	FCS	@FCS	180	Calculates the FCS value for the specified range and outputs the result in ASCII.			

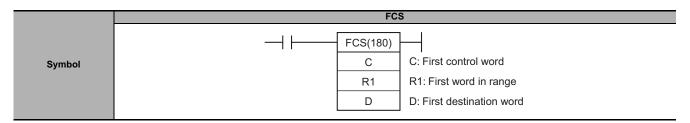


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size		
С	First control word	UDINT	2		
R1	First word in range	UINT	Variable		
D	First destination word	UINT	Variable		


C: First control word

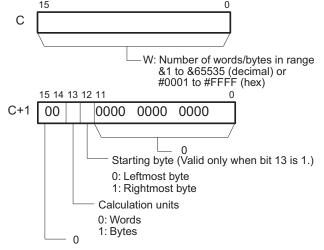

R1: First word in range

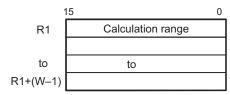

D: First destination word

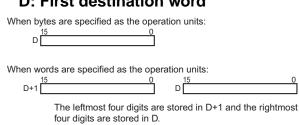

Note C and C+1, all of the words in the calculation range must be in the same data area.


Area	Word addresses							Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
С											OK							
R1	ОК	OK	OK	OK				OK										
D																		

Name	Label	Operation
Error Flag	ER	 ON if the content of C is not within the specified range of 0001 through FFFF. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.

Function

FCS(180) calculates the FCS value for W units of data beginning with the data in R1, converts the value to ASCII code, and outputs the result to D (for bytes) or D+1 and D (for words). The settings in C+1 determine whether the units are words or bytes, whether the data is binary (signed or unsigned) or BCD, and whether to start with the right or left byte of R1 if bytes are being added.

When bit 13 of C+1 has been set to 1, FCS(180) operates on bytes of data. In this case, bit 12 determines whether the calculation starts with the rightmost byte of R1 (bit 12 = 1) or the leftmost byte of R1 (bit 12 = 0).

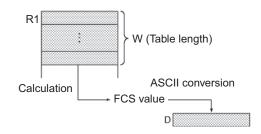



Hint

FCS(180) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming

When CIO 0.00 is ON in the following example, FCS(180) calculates the FCS value for the 10 bytes of data beginning with the rightmost byte of D100 and writes the result to D200.

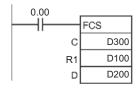

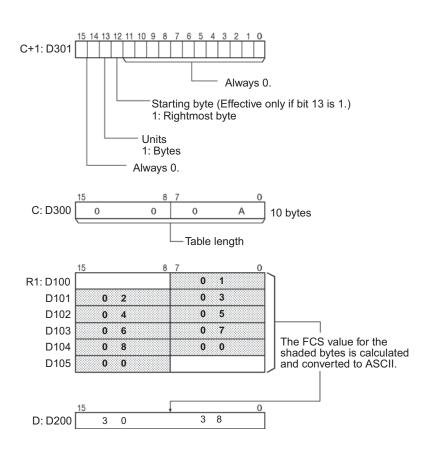

Tracking Instructions

Tracking Instructions

Manufacturing information on workpieces placed into a production line is generally called tracking data. Tracking data includes many pieces of information, such as the product type, model, quantity, manufacturing date, product grade, and manufacturing factory. Each group of information is called a record.

Tracking Instructions can be used to easily search for the necessary records in tracking data or to store tracking data according to the information contained in them.

The following are programming samples that use tracking instructions.


- 1. Finding tracking data that matches certain conditions
- 2. Sorting and then searching tracking data
- 3. Sorting tracking data that contains many records

Sorting and Searching Shelf Numbers and Delivery Codes

Model 1 word
Mfg date 1 word
Shelf No. 1 word
Delivery code 2 words

A tracking data record is invalid if it contains the following.


- A shelf number of 0000 hex
- · A delivery code of FFFF FFFF hex

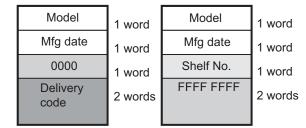

• Finding Tracking Data That Matches Certain Conditions


The table of tracking data is searched for shelf number 0006 hex and the data is stored in another location.

First word of first record	D1000
Record length	5
Number of records	8
First word of search results	D100
Search key	Self number
Setting to end search	Enabled for end data (shelf number = 0000 hex)
Search method	Linear search (i.e., search in order from first record)
Destination index register	IR0

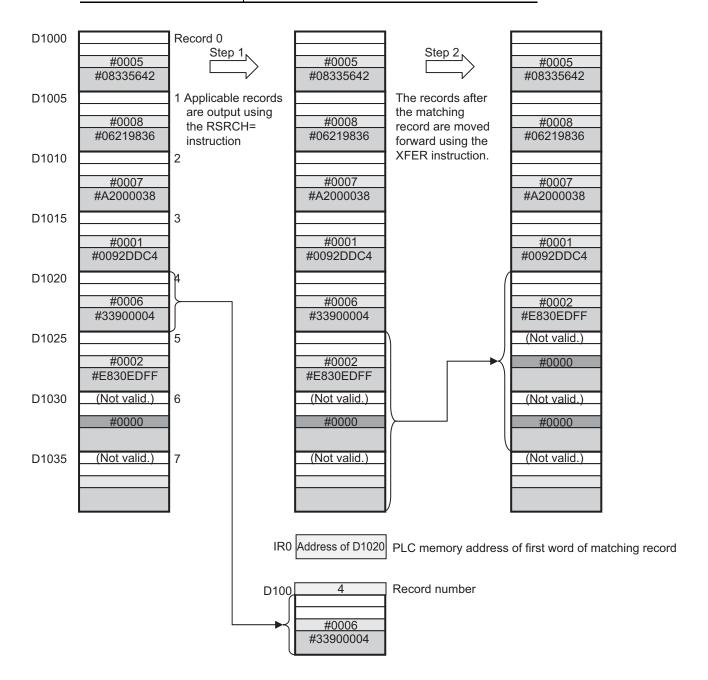


C: D0	0 0 0 8	Number of records = 8
C+1: D1	0 0 0 5	Record length = 5 words
C+2: D2	0 0 0 2	Search data offset = 2 words
C+3: D3	8 0 0 1	Index register output designation: Output Search method = Linear, Setting to end search = Effective end data
C+4: D4	0 0 0 0	End data = 0000 hex
C+5: D5	0 0 0 0	Always 0000 hex.

Step 1: Corresponding records output using the RSRCH= instruction.

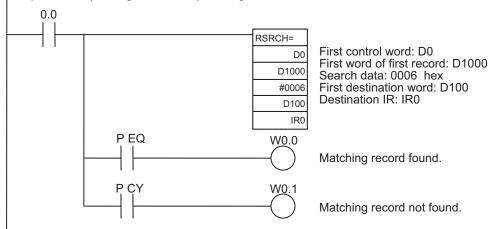


Step 2: Records moved forward with the XFER instruction to fill in the space of the matching record.

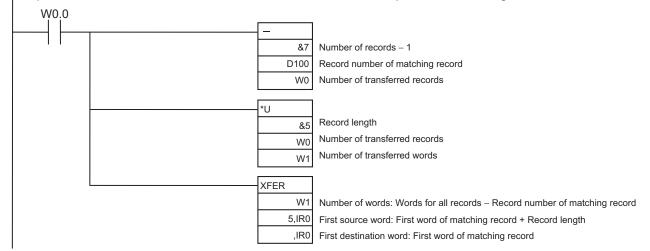

Sorting and Then Searching Tracking Data

The tracking data table is sorted according to the delivery code and then the data is searched for delivery code A200 0038 hex.

First word of first record	D1000
Record length	5
Number of records	8
First word of sorting results	D200
Sort key	Delivery code
Sort options	Ascending order, Split sort disabled (complete in one cycle)
Setting to end sorting	Enabled for end data (delivery code = FFFF FFFF hex)
Sort results output to index register	IR1
First word of search results	D100
Search key	Delivery code
Setting to end search	Enabled for end PLC memory address (search results output)
Search method	Split search
Search results output to index register	Output disabled

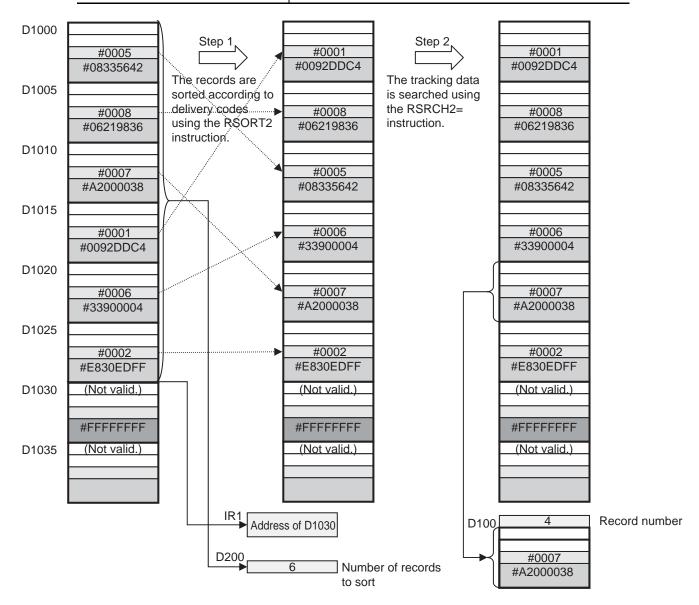


RSORT2

C: D300	0 0 0 8	Number of records = 8
C+1: D301	0 0 0 5	Record length = 5 words
C+2: D302	0 0 0 3	Sorting data offset = 3 words
C+3: D303	0 0 0 0	Split sort setting = Disabled, Ascending
C+4: D304	8 0 0 1	Index register output designation = Output, Setting to end sort = Enabled
C+5: D305	FFFF	End data = FFFF hex
C+6: D306	FFFF	End data = FFFF hex
C+7: D307	System	
to	work	
C+86: D386	area	

RSRCH2

C: D0	0 0:0 8	Number of records = 8
C+1: D1	0 0 0 5	Record length = 5 words
C+2: D2	0 0 0 3	Search data offset = 3 words
C+3: D3	0 0 1 2	Index register output designation: Output Search method = Split search/ascending, Setting to end search = Enabled for PLC memory address
C+4: D4	0 4 0 6	PLC memory address of search end, lower word
C+5: D5	0 0 0 1	PLC memory address of search end, upper word

Step 1: The records are sorted in ascending order according to the delivery code using the RSORT2 instruction.

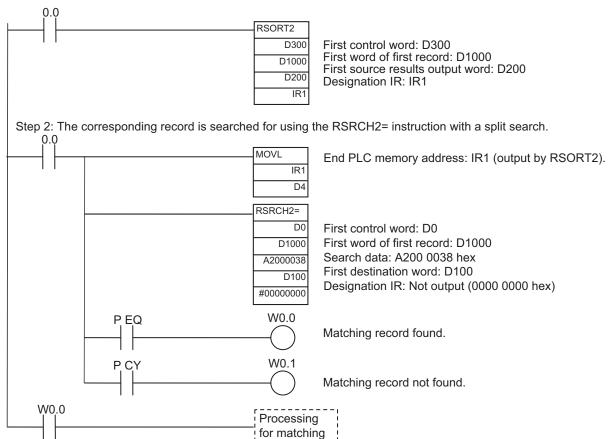


record

Sorting Tracking Data That Contains Many Records Using a Split Sort


Tracking data that contains 2,048 records is sorted according to the delivery code. To shorten the cycle time, the sort is executed over multiple cycles.

First word of first record	D1000
Record length	5
Number of records	2048
First word of sorting results	D200
Sort key	Delivery code
Sort options	Ascending, Split sort
Setting to end sorting	Disabled
Sort results output to index register	Disabled

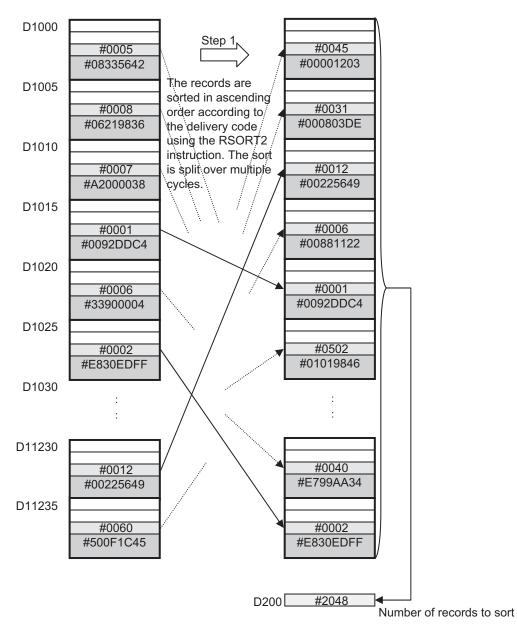


C: D300	2 0 4 8	Number of records = 2,048
C+1: D301	0 0 0 5	Record length = 5 words
C+2: D302	0 0 0 3	Sorting data offset = 3 words
C+3: D303	8 0 0 0	Split sort setting = Enabled, Ascending
C+4: D304	0 0 0 0	Index register output designation = Disabled, Setting to end sort = Disabled
C+5: D305	0 0 0 0	Always 0000 hex.
C+6: D306	0 0 0 0	Always 0000 hex.

Step 1: The records are sorted in ascending order according to the delivery code using the RSORT2 instruction.

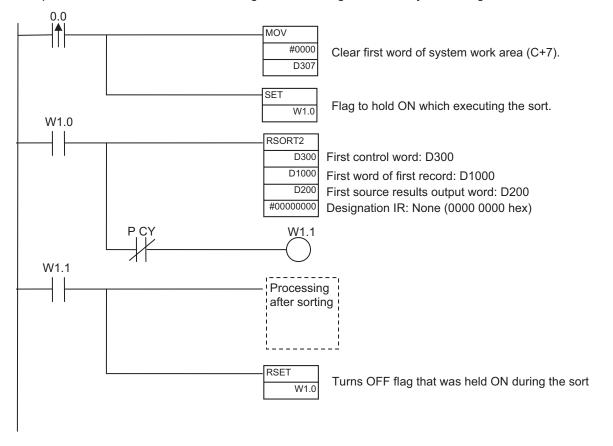

RSRCH<, RSRCH<=, RSRCH=, RSRCH>, RSRCH>=

Instruction	Mnemonic	Variations	Function code	Function
Unsigned One-word Record Search Instructions	RSRCH< RSRCH= RSRCH= RSRCH> RSRCH>=	@RSRCH< @RSRCH<= @RSRCH= @RSRCH>	360 361 362 363 364	An Unsigned One-word Record Search Instruction searches the specified table of records for a record with the specific data (1 word) in the specified location. When a record matching the specified condition is found, its record number and data are output.

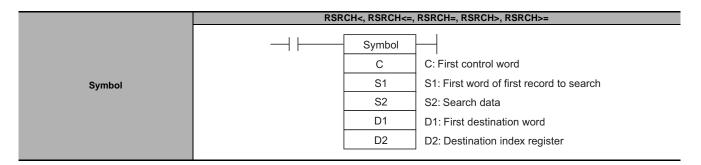

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
С	First control word	WORD	6
S1	First word of first record to search	WORD	Variable
S2	Search data	WORD	1
D1	First destination word	WORD	Variable
D2	Destination index register	DWORD	2


S1: First word of first record to search




S2: Search data

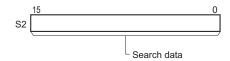


C: First control word

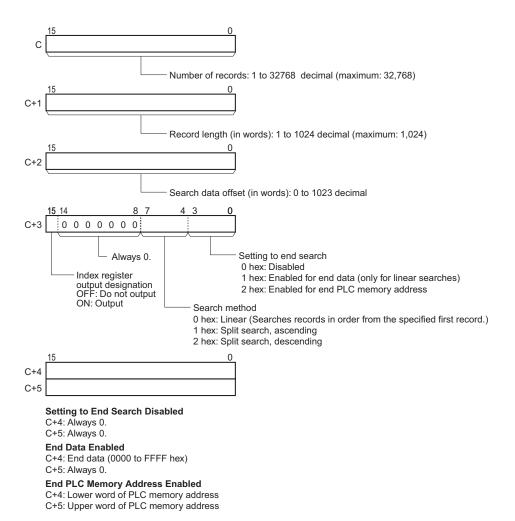

D1: First destination word

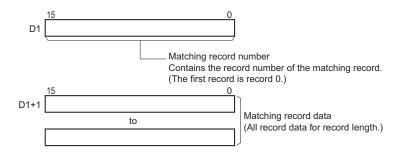

D2: Destination index register

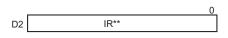

The PLC memory address of the first word of the matching record is stored in the specified index register. If index register output is not specified in C+3, then 0000 0000 hex is stored in D2.

Operand Specifications

Area			V	Vord a	ddress	es			Indirect addre	DM/EM esses	Con-		Registe	ers	Fla	ngs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S1	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				OK				
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D1																		
D2											OK		OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 1 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the search data offset in C+2 is greater than one less than the record length in C+1. OFF in all other cases.
Equals Flag	P_EQ	ON when the search data is found. OFF when the search data is not found.
Carry Flag	P_CY	Linear Search ON when a matching record is found before the final record and before the condition for the setting to end the search is met. OFF when the search is completed through the final record or until the condition for the setting to end the search is met. Split Search Always OFF.

Function

The number of records specified by C starting from the record specified by S1 are searched for the data specified by S2. If a record that matches the search conditions is found, the Equals Flag will turn ON, the record number of the matching record will be output to D1 and the matching record data will be output starting from D1+1. If outputting to an index register is specified in C+3, the PLC memory address of the first word of the matching record is output to the specified index register. If more than one matching record is found, the record closest to the first record that is searched will be output.

If a matching record is not found, nothing will be output starting from D1 (the previous values will be maintained).

The search is performed by the method specified in C+3. There are two search methods.


- Linear Search
 - For a linear search, the records are searched in order from the specified first record. Linear searching is used when the search data has not been sorted. If a matching record is found before the maximum number of records specified in C is searched, the Carry Flag will be turned ON. (This is to indicate that there are records that were not searched.)
- Split Search (Ascending or Descending)
 If the records that are being searched have been sorted in ascending or descending order, a split search can be used to reduce the instruction execution time.

Precautions

- If the records being searched have not been sorted in ascending or descending order when a split search is specified, the results of the search will not be accurate.
- A split search cannot be specified if using search end data has been enabled. If using search end
 data is enabled, a linear search will be performed even if a split search is specified.


• Searching with the Setting to End the Search Disabled

The search is performed for the number of records specified in C.

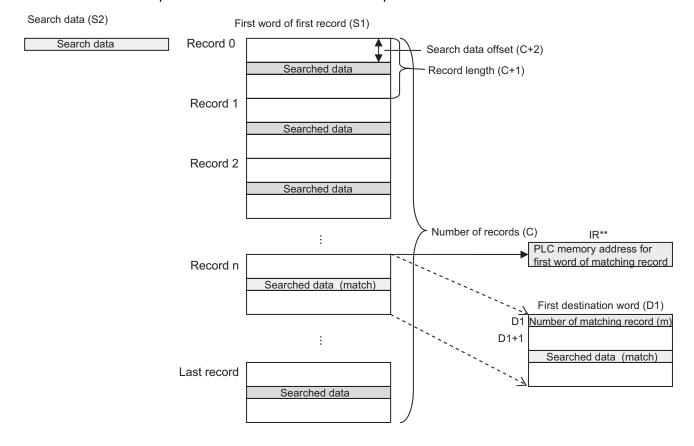


Searching with End Data Enabled to End the Search

If the setting to end the search is enabled in C+3 for end data, records will be searched until the record just before the record in which the end data specified in C+4 is found. If the end data is not found, the number of records specified in C will be searched.

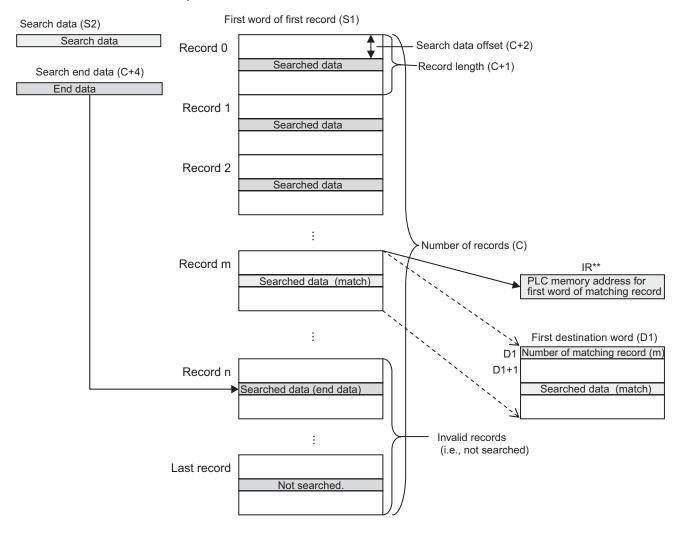


• Searching with End PLC Memory Address Enabled to End the Search

If the setting to end the search is enabled in C+3 for a PLC memory address, records will be searched until the PLC memory address specified in C+4 and C+5. No records past the end PLC memory address will be searched. If the end PLC memory address is not found, the number of records specified in C will be searched.

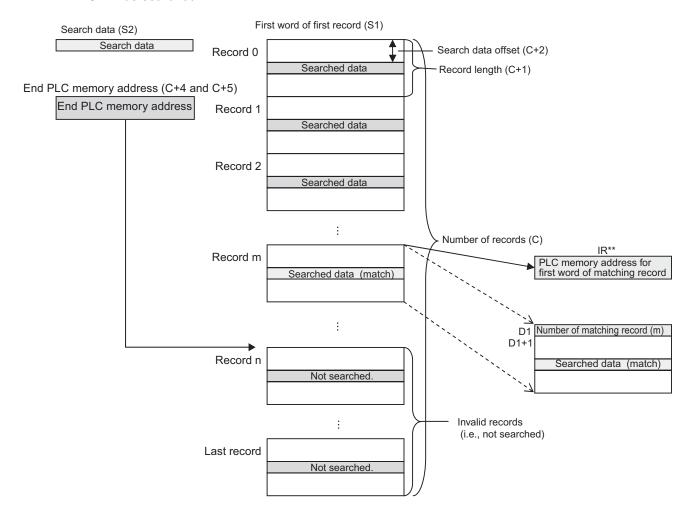

RSRCH2<, RSRCH2<=, RSRCH2=, RSRCH2=, RSRCH2>, RSRCH2>=

Instruction	Mnemonic	Variations	Function code	Function
Unsigned Two-word Record Search Instructions	RSRCH2< RSRCH2= RSRCH2= RSRCH2> RSRCH2>=	@RSRCH2< @RSRCH2<= @RSRCH2= @RSRCH2> @RSRCH2>=	370 371 372 373 374	An Unsigned Two-word Record Search Instruction searches the specified table of records for a record with the specific data (2 words) in the specified location. When a record matching the specified condition is found, its record number and data are output.

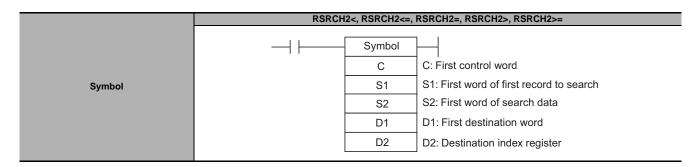

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	ОК	


Operands

Operand	Description	Data type	Size
С	First control word	WORD	6
S1	First word of first record to search	WORD	Variable
S2	First word of search data	DWORD	2
D1	First destination word	WORD	Variable
D2	Destination index register	DWORD	2


S1: First word of first record to search



S2: First search data word

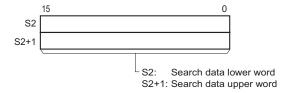


C: First control word

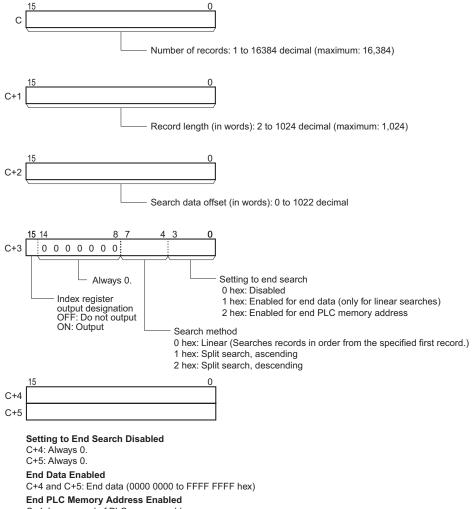


C+4: Lower word of PLC memory address

C+5: Upper word of PLC memory address

D1: First destination word

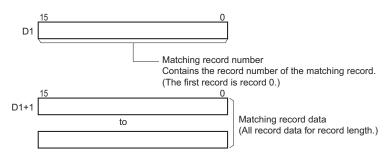

D2: Destination index register

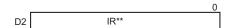

The PLC memory address of the first word of the matching record is stored in the specified index register. If index register output is not specified in C+3, then 0000 0000 hex is stored in D2.

Operand Specifications

Area			V	Vord a	ddress	es			Indirect addre	DM/EM esses	Con-	Con- Registers		Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S1	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				OK				
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D1											OK							
D2													OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 2 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the search data offset in C+2 is greater than two less than the record length in C+1. OFF in all other cases.
Equals Flag	P_EQ	ON when the search data is found. OFF when the search data is not found.
Carry Flag	P_CY	Linear Search ON when a matching record is found before the final record and before the condition for the setting to end the search is met. OFF when the search is completed through the final record or until the condition for the setting to end the search is met. Split Search Always OFF.

Function

The number of records specified by C starting from the record specified by S1 are searched for the data specified by S2 and S2+1. If a record that matches the search conditions is found, the Equals Flag will turn ON, the record number of the matching record will be output to D1 and the matching record data will be output starting from D1+1. If outputting to an index register is specified in C+3, the PLC memory address of the first word of the matching record is output to the specified index register. When this happens, the Equals Flag is turned ON. If more than one matching record is found, the record closest to the first record that is searched will be output.

If a matching record is not found, nothing will be output starting from D1 (the previous values will be maintained).

The search is performed by the method specified in C+3. There are two search methods.


- Linear Search
 - For a linear search, the records are searched in order from the specified first record. Linear searching is used when the search data has not been sorted. If a matching record is found before the maximum number of records specified in C is searched, the Carry Flag will be turned ON. (This is to indicate that there are records that were not searched.)
- Split Search (Ascending or Descending)
 If the records that are being searched have been sorted in ascending or descending order, a split search can be used to reduce the instruction execution time.

Precautions

- If the records being searched have not been sorted in ascending or descending order when a split search is specified, the results of the search will not be accurate.
- A split search cannot be specified if using search end data has been enabled. If using search end data is enabled, a linear search will be performed even if a split search is specified.

RSRCH4<, RSRCH4<=, RSRCH4=, RSRCH4>, RSRCH4>=

Instruction	Mnemonic	Variations	Function code	Function
Unsigned Four-word Record Search Instructions	RSRCH4< RSRCH4= RSRCH4= RSRCH4> RSRCH4>=	@RSRCH4< @RSRCH4= @RSRCH4= @RSRCH4>	380 381 382 383 384	An Unsigned Four-word Record Search Instruction searches the specified table of records for a record with the specific data (4 words) in the specified location. When a record matching the specified condition is found, its record number and data are output.

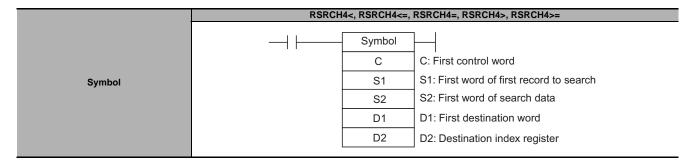

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
С	First control word	WORD	8
S1	First word of first record to search	WORD	Variable
S2	First word of search data	LWORD	4
D1	First destination word	WORD	Variable
D2	Destination index register	DWORD	2

S1: First word of first record to search




S2: First search data word

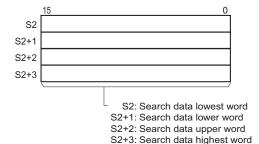


The data would be set as follows to search for #0123456789ABCDEF.

S2	#CDEF
S2+1	#89AB
S2+2	#4567
S2+3	#0123

C: First control word

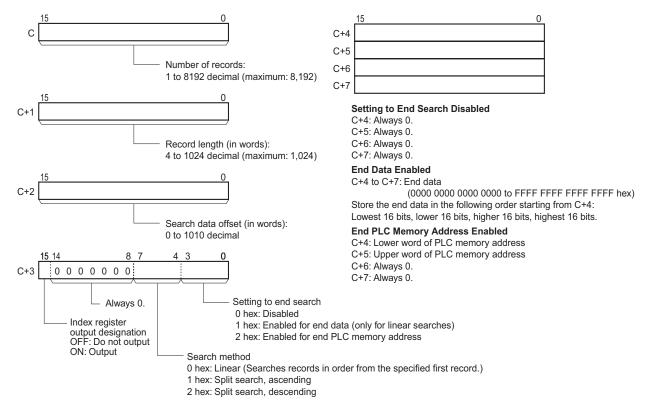

D1: First destination word

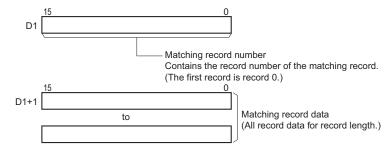

D2: Destination index register



The PLC memory address of the first word of the matching record is stored in the specified index register. If index register output is not specified in C+3, then 0000 0000 hex is stored in D2.

Operand Specifications

Area			V	Vord a	ddress	ses			Indirect addre		Con- Reg			gisters		ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S1	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК	ОК	ОК				OK				
S2	OK	OK	OK	OK	OK	OK	OK	OK	UK	OK				OK				
D1																		
D2											OK		OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 4 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the search data offset in C+2 is greater than four less than the record length in C+1. OFF in all other cases.
Equals Flag	P_EQ	ON when the search data is found. OFF when the search data is not found.
Carry Flag	P_CY	Linear Search ON when a matching record is found before the final record and before the condition for the setting to end the search is met. OFF when the search is completed through the final record or until the condition for the setting to end the search is met. Split Search Always OFF.

Function

The number of records specified by C starting from the record specified by S1 are searched for the data specified by S2 to S2+3. If a record that matches the search conditions is found, the Equals Flag will turn ON, the record number of the matching record will be output to D1 and the matching record data will be output starting from D1+1. If outputting to an index register is specified in C+3, the PLC memory address of the first word of the matching record is output to the specified index register. When this happens, the Equals Flag is turned ON. If more than one matching record is found, the record closest to the first record that is searched will be output. *

If a matching record is not found, nothing will be output starting from D1 (the previous values will be maintained).

The search is performed by the method specified in C+3. There are two search methods.


- · Linear Search
 - For a linear search, the records are searched in order from the specified first record. Linear searching is used when the search data has not been sorted. If a matching record is found before the maximum number of records specified in C is searched, the Carry Flag will be turned ON. (This is to indicate that there are records that were not searched.)
- Split Search (Ascending or Descending)
 If the records that are being searched have been sorted in ascending or descending order, a split search can be used to reduce the instruction execution time.

Precautions

- If the records being searched have not been sorted in ascending or descending order when a split search is specified, the results of the search will not be accurate.
- A split search cannot be specified if using search end data has been enabled. If using search end data is enabled, a linear search will be performed even if a split search is specified.

RSORT

Instruction	Mnemonic	Variations	Function code	Function		
UNSIGNED ONE-WORD RECORD SORT	RSORT	@RSORT	203	Sorts the records in the specified table according to the data (1 word) at the specified position in the records.		

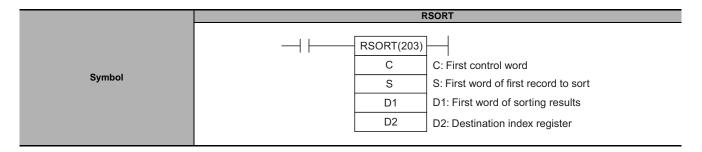


Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands


Operand	Description	Data type	Size
С	First control word	WORD	87
S1	First word of first record to sort	WORD	Variable
D1	First word of sorting results	WORD	1
D2	Destination index register	DWORD	2

S: First word of first record to sort

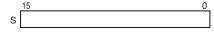

C: First control word

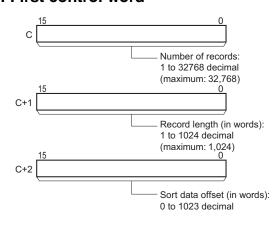


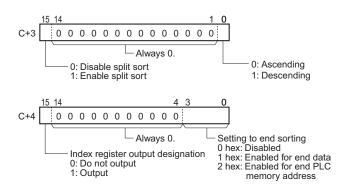

System word area

starting to sort records.

Always clear C+7 to 0 before

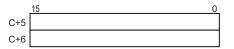

Searching with the Setting to End the Sort Disabled

C+5: Always 0.

C+6: Always 0.

Searching with End Data Enabled to End the Sort

C+5: Sort end data (0000 to FFFF hex)


C+6: Always 0.

Searching with End Data Enabled to End the Sort


C+5: Lower word of end PLC memory address

C+6: Upper word of end PLC memory address

D1: First word of sorting results

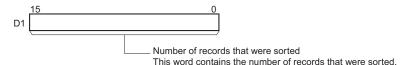

D2: Destination index register

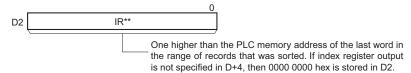

Operand Specifications

Area			٧	Vord a	ddress	ses			Indirect DM/EM addresses Con-			ers	Fla	igs	Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D1												OK						
D2											OK		OK					

C+7 to C+86

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 1 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the sort data offset in C+2 is greater than one less than the record length in C+1. OFF in all other cases.
Carry Flag	P_CY	ON while the records are being sorted. OFF when the sort operation has been completed.


Function

The number of records specified by C starting from the record specified by S are sorted according to the data in the specified location (1 word). When the sort operation has been completed, the Carry Flag will turn OFF and the number of records that were sorted will be output to D1. If outputting to an index register is specified in C+4, one address higher than the PLC memory address of the last word in the sorted records is output to the specified index register. The sort direction is specified as ascending or descending in C+3.

If split sorting is enabled in C+3, the sort will be executed over multiple cycles. The Carry Flag will be ON while the sort operation is being executed and will turn OFF when the sort operation has been completed. If the execution condition of RSORT turns OFF before the sort operation has been finished, the sort will be continued the next time the execution condition turns ON.


Sorting with the Setting to End Sorting Disabled

The sort operation is performed for the number of records specified in C.

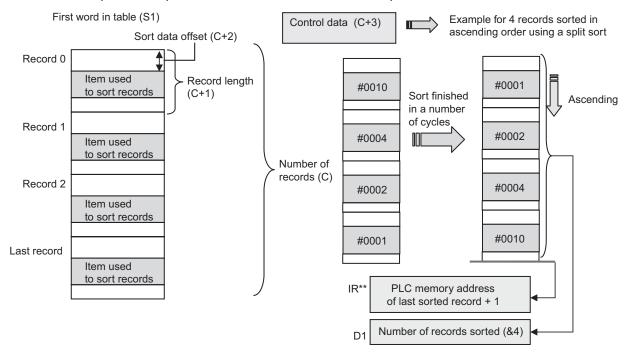


Sorting with End Data Enabled to End the Sort

If the setting to end the sort is enabled in C+4 for end data, records will be sorted through the record just before the record in which the end data specified in C+5 is found. If the end data is not found, the number of records specified in C will be sorted.

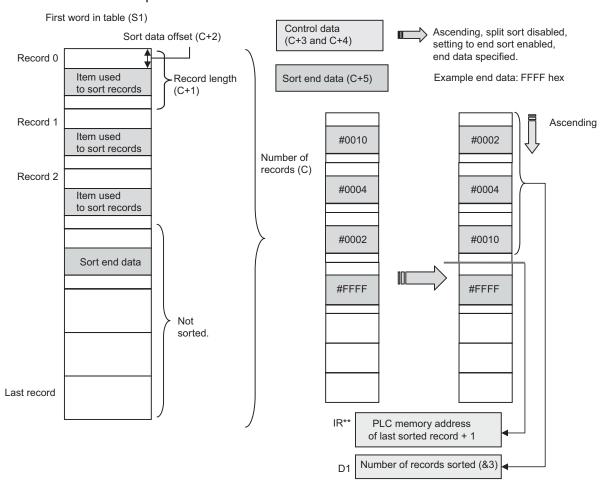

• Searching with End PLC Memory Address Enabled to End the Search

If the setting to end the search is enabled in C+3 for a PLC memory address, records will be searched until the PLC memory address specified in C+4 and C+5. No records past the end PLC memory address will be searched. If the end PLC memory address is not found, the number of records specified in C will be searched.

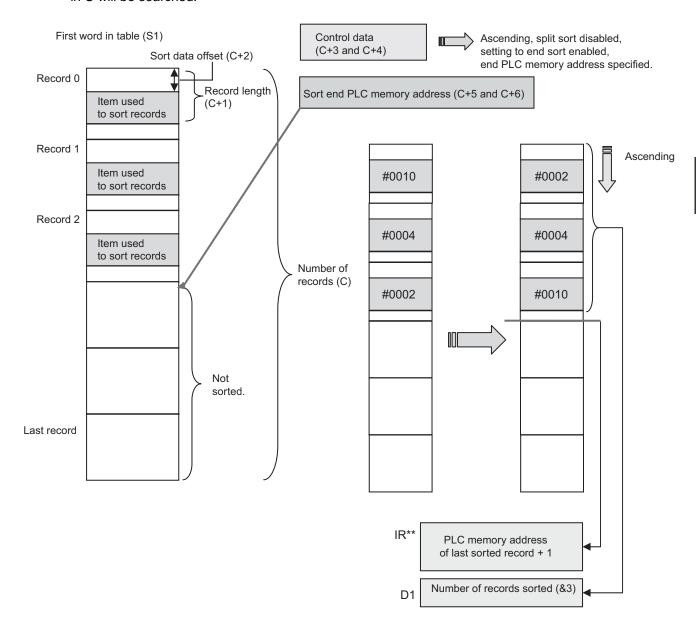


Precautions

Always clear C+7 to 0 before starting to sort.

RSORT2

Instruction	Mnemonic	Variations	Function code	Function
UNSIGNED TWO-WORD RECORD SORT	RSORT2	@RSORT2	204	Sorts the records in the specified table according to the data (2 words) at the specified position in the records.

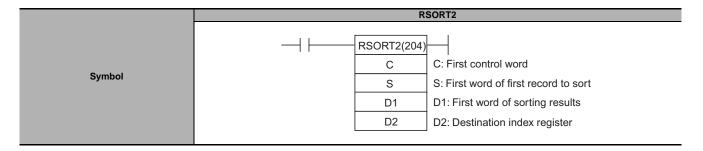


Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
С	First control word	WORD	87
S1	First word of first record to sort	WORD	Variable
D1	First word of sorting results	WORD	1
D2	Destination index register	DWORD	2

S: First word of first record to sort

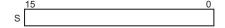

C: First control word

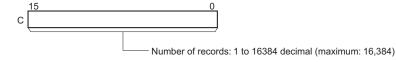




Record length (in words): 2 to 1024 decimal (maximum: 1,024)



Sort data offset (in words): 0 to 1022 decimal

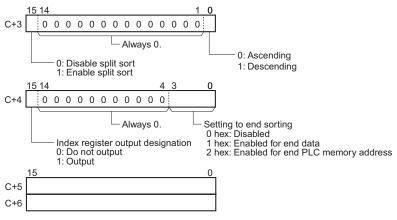

Searching with the Setting to End the Sort Disabled

C+6: Always 0.


Searching with End Data Enabled to End the Sort

C+5: Sort end data (0000 0000 to FFFF FFFF hex)


C+6: Sort end data (0000 0000 to FFFF FFFF hex)

Searching with PLC Memory Address Enabled to End the Sort


C+5: Lower word of end PLC memory address C+6: Upper word of end PLC memory address

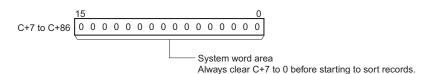

D1: First word of sorting results

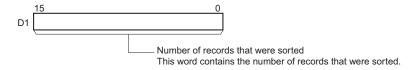

D2: Destination index register

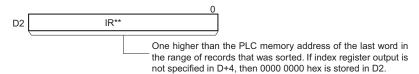

Operand Specifications

Area			V	Vord a	ddress	es			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D1												OK						
D2											OK		OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 2 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the sort data offset in C+2 is greater than two less than the record length in C+1. OFF in all other cases.
Carry Flag	P_CY	ON while the records are being sorted.OFF when the sort operation has been completed.

Function

The number of records specified by C starting from the record specified by S are sorted according to the data in the specified location (2 words). When the sort operation has been completed, the Carry Flag will turn OFF and the number of records that were sorted will be output to D1. If outputting to an index register is specified in C+4, one address higher than the PLC memory address of the last word in the sorted records is output to the specified index register. The sort direction is specified as ascending or descending in C+3.


If split sorting is enabled in C+3, the sort will be executed over multiple cycles. The Carry Flag will be ON while the sort operation is being executed and will turn OFF when the sort operation has been completed. If the execution condition of RSORT2 turns OFF before the sort operation has been finished, the sort will be continued the next time the execution condition turns ON.

Precautions

Always clear C+7 to 0 before starting to sort.

RSORT4

Instruction	Mnemonic	Variations	Function code	Function
UNSIGNED FOUR-WORD RECORD SORT	RSORT4	@RSORT4	205	Sorts the records in the specified table according to the data (4 words) at the specified position in the records.

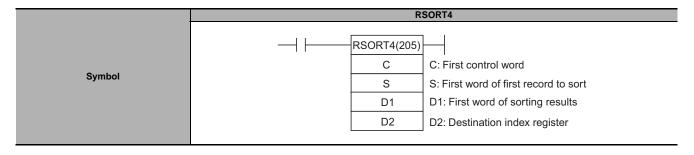

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
С	First control word	WORD	89
S1	First word of first record to sort	WORD	Variable
D1	First word of sorting results	WORD	1
D2	Destination index register	DWORD	2


S: First word of first record to sort



C: First control word

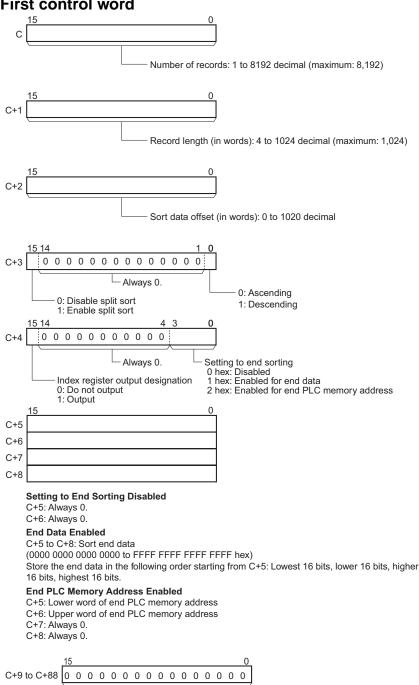


D1: First word of sorting results

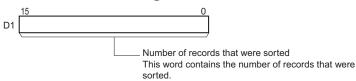

System word area

Always clear C+7 to 0 before starting to sort records.

D2: Destination index register

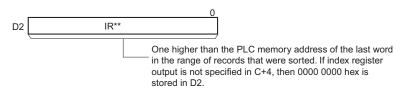

Operand Specifications

Aron			V	Vord a	ddress	ses			Indirect addre	-	Con-	Registers				ags	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bi	bits
С																		
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D1												OK						
D2											OK		OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON when the record length in C+1 is not between 4 and 1,024, inclusive. ON when the number of records specified in C times the record length in C+1 is greater than 32,768. ON when the number of records specified in C times the record length in C+1 is 0. ON when the sort data offset in C+2 is greater than four less than the record length in C+1. OFF in all other cases.
Carry Flag	P_CY	ON while the records are being sorted. OFF when the sort operation has been completed.

Function

The number of records specified by C starting from the record specified by S are sorted according to the data in the specified location (4 words). When the sort operation has been completed, the Carry Flag will turn OFF and the number of records that were sorted will be output to D1. If outputting to an index register is specified in C+4, one address higher than the PLC memory address of the last word in the sorted records is output to the specified index register. The sort direction is specified as ascending or descending in C+3.

If split sorting is enabled in C+3, the sort will be executed over multiple cycles. The Carry Flag will be ON while the sort operation is being executed and will turn OFF when the sort operation has been completed. If the execution condition of RSORT4 turns OFF before the sort operation has been finished, the sort will be continued the next time the execution condition turns ON.


Precautions

Always clear C+7 to 0 before starting to sort.

Data Control Instructions

PID

Instruction	Mnemonic	Variations	Function code	Function		
PID CONTROL	PID		190	Executes PID control according to the specified parameters.		

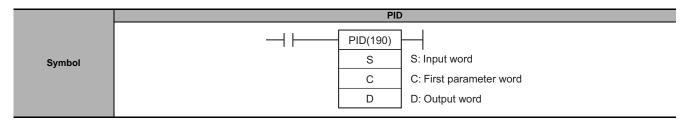


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	Not allowed	OK	

Operands

Operand	Description	Data type	Size		
S	Input word	UINT	1		
С	First parameter word	WORD	39		
D	Output word	UINT	1		

C: First Parameter Word

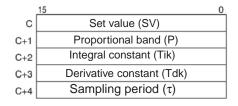

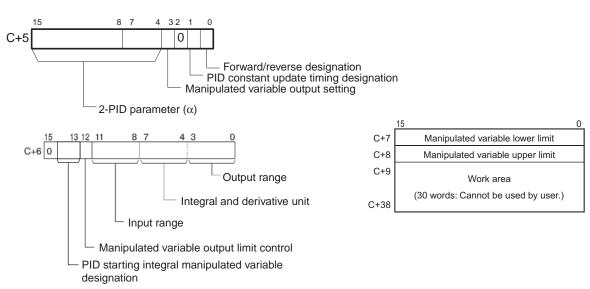

Operand Specifications

Area			V	Vord ad	ldresse	s			Indirect addre	: DM/EM esses	Con-	Registers			Flags			TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S												OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D												OK						

Flags

Name	Label	Operation					
Error Flag	ER	 ON if the C data is out of range. ON if the actual sampling period is more than twice the designated sampling period. OFF in all other cases. 					
Greater Than Flag	>	ON if the manipulated variable after the PID action exceeds the upper limit. OFF in all other cases.					
Less Than Flag	<	ON if the manipulated variable after the PID action is below the lower limit. OFF in all other cases.					
Carry Flag	CY	ON while PID control is being executed. OFF in all other cases.					


Function

When the execution condition is ON, PID(190) carries out target value filtered PID control with two degrees of freedom according to the parameters designated by C (set value, PID constant, etc.). It takes the specified input range of binary data from the contents of input word S and carries out the PID action according to the parameters that are set. The result is then stored as the manipulated variable in output word D.

The parameters are obtained when the execution condition turns from OFF to ON, and the Error Flag will turn ON if the settings are outside of the permissible range.

If the settings are within the permissible range, PID processing will be executed using the initial values. Bumpless operation is not performed at this time. It will be used for manipulated variables in subsequent PID processing execution. (Bumpless operation is processing that gradually and continuously changes the manipulated variable in order to avoid the adverse effects of sudden changes.)

When the execution condition turns ON, the PV for the specified sampling period is entered and processing is performed.

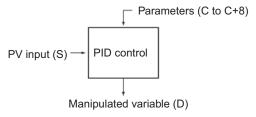

- The number of valid input data bits within the 16 bits of the PV input (S) is designated by the input range setting in C+6, bits 08 to 11. For example, if 12 bits (4 hex) is designated for the input range, the range from 0000 hex to 0FFF hex will be enabled as the PV. (Values greater than 0FFF hex will be regarded as 0FFF hex.)
- The set value range also depends on the input range.
- Measured values (PV) and set values (SV) are in binary without sign, from 0000 hex to the maximum value of the input range.
- The number of valid output data bits within the 16 bits of the manipulated variable output is designated by the output range setting in C+6, bits 00 to 03. For example, if 12 bits (4 hex) is designated for the output range, the range from 0000 hex to 0FFF hex will be output as the manipulated variable.

- For proportional operation only, the manipulated variable output when the PV equals the SV can be designated as follows:
 - 0: Output 0%
 - 1: Output 50%.
- The direction of proportional operation can be designated as either forward or reverse.
- The upper and lower limits of the manipulated variable output can be designated.
- The sampling period can be designated in units of 10 ms (0.01 to 99.99 s), but the actual PID action is determined by a combination of the sampling period and the time of PID(190) instruction execution (with each cycle).
- The timing of enabling changes made to PID constants can be set to either 1) the beginning of PID instruction execution or 2) the beginning of PID instruction execution and each sampling period. Only the proportional band (P), integral constant (Tik), and derivative constant (Tdk) can be changed each sampling cycle (i.e., during PID instruction execution). The timing is set in bit 1 of C+5.

Performance Specifications

	Item		Specifications			
PID control method			Target value filter-type two-degrees-of-freedom PID method (forward/reverse)			
Number of PID control loops			Unlimited (1 loop per instruction)			
Sampling period		τ	0.01 to 99.99 s			
PID constant	Proportional band	Р	0.1 to 999.9%			
	Integral constant	Tik	1 to 8191, 9999 (No integral action for sampling period multiple, 9999.)			
	Derivative constant	Tdk	0 to 8191 (No derivative action for sampling period multiple, 0.)			
Set value		SV	0 to 65535 (Valid up to maximum value of input range.)			
Measured value		PV	0 to 65535 (Valid up to maximum value of input range.)			
Manipulated vari	able	MV	0 to 65535 (Valid up to maximum value of output range.)			


Calculation Method


Calculations in PID control are performed by the target value filtered control with two degrees of freedom.

Block Diagram for Target Value PID with Two Degrees of Freedom

When overshooting is prevented with simple PID control, stabilization of disturbances is slowed (1). If stabilization of disturbances is speeded up, on the other hand, overshooting occurs and response toward the target value is slowed (2).

When target-value PID control with two degrees of freedom is used, on the other hand, there is no overshooting, and response toward the target value and stabilization of disturbances can both be speeded up (3).

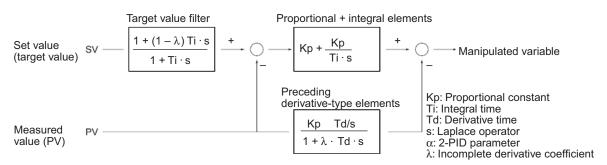

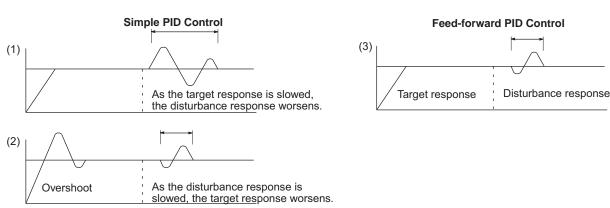

PID Parameter Settings

Control data	Item	Contents	Setting range	Change with ON input condition		
С	Set value (SV)	The target value of the process being controlled.	Binary data (of the same number of bits as specified for the input range)	Allowed		
C+1	Proportional band	The parameter for P action expressing the proportional control range/total control range.	0001 to 270F hex (1 to 9999); (0.1% to 999.9%, in units of 0.1%)	Can be changed with input condition ON if bit 1 of C+5 is 1.		
C+2	Tik Integral Constant	A constant expressing the strength of the integral action. As this value increases, the integral strength decreases.	0001 to 1FFF hex (1 to 8191); (9999 = Integral operation not executed) When "1" is specified for the integral/differential constant: 1 to 8191 When "9" is specified: 0.1 to 819.1 s (See note 1.)			
C+3	Tdk Derivative Constant	A constant expressing the strength of the derivative action. As this value increases, the derivative strength decreases.	0001 to 1FFF hex (1 to 8191); (0000 = Derivative operation not executed) When "1" is specified for the integral/differential constant: 1 to 8191 When "9" is specified: 0.1 to 819.1 s (See note 1.)			
C+4	Sampling period (τ)	Sets the period for executing the PID action.	0001 to 270F hex (1 to 9999); (0.01 to 99.99 s, in units of 10 ms)	Not allowed		
Bits 04 to 15 of C+5	2-PID parameter (α)	The input filter coefficient. Normally use 0.65 (i.e., a setting of 000). The filter efficiency decreases as the coefficient approaches 0.	000 hex: α = 0.65 Setting from 100 to 163 hex means that the value of the rightmost two digits is set from α = 0.00 to α = 0.99. (See note 2.)			
Bit 03 of C+5	Manipulated variable output designation	Designates the manipulated variable output when the PV equals the SV. This setting is enabled when there is no integral operation.	0: Output 0% 1: Output 50%			
Bit 01 of C+5	PID constant change enable setting	The timing of enabling changes made to the proportional band (P), integral constant (Tik), and derivative constant (Tdk) for use in PID calculations.	O: At start of PID instruction execution 1: At start of PID instruction execution and each sampling period	Allowed		
Bit 00 of C+5	PID forward/reverse designation	Determines the direction of the proportional action.	0: Reverse action 1: Forward action	Not allowed		
Bits 13 to 14 of C+6	ID starting integral manipulated variable designation (unit version 4.0 or later only)	manipulated variable variable when PID control is started (i.e., designation (unit version when the input turns ON). Start from same integrated value as manipulated value as manipulated				
Bit 12 of C+6	Manipulated variable output limit control	Determines whether or not limit control will apply to the manipulated variable output.	0: Disabled (no limit control) 1: Enabled (limit control)			
Bits 08 to 11 of C+6	Input range	The number of input data bits.	0: 8 bits 5: 13 bits 1: 9 bits 6: 14 bits 2: 10 bits 7: 15 bits 3: 11 bits 8: 16 bits 4: 12 bits			
Bits 04 to 07 of C+6	Integral and derivative unit	Determines the unit for expressing the integral and derivative constants.	1: Sampling period multiple 9: Time (unit: 100 ms) (See note 1.)			
Bits 00 to 03 of C+6	Output range	The number of output data bits.	0: 8 bits 5: 13 bits 1: 9 bits 6: 14 bits 2: 10 bits 7: 15 bits 3: 11 bits 8: 16 bits 4: 12 bits			
C+7	Manipulated variable output lower limit	The lower limit for when the manipulated variable output limit is enabled.	0000 to FFFF (binary) (See note 3.)			
C+8	Manipulated variable output upper limit	The upper limit for when the manipulated variable output limit is enabled.	0000 to FFFF (binary) (See note 3.)			

- **Note 1** When the unit is designated as 1, the range is from 1 to 8,191 times the period. When the unit is designated as 9, the range is from 0.1 to 819.1 s. When 9 is designated, set the integral and derivative times to within a range of 1 to 8,191 times the sampling period.
 - **2** Setting the 2-PID parameter (α) to 000 yields 0.65, the normal value.
 - 3 When the manipulated variable output limit control is enabled (i.e., set to "1"), set the values as follows: 0000 ≤ MV output lower limit ≤ MV output upper limit ≤ Max. value of output range


Sampling Period and Cycle Time

The sampling period can be designated in units of 10 ms (0.01 to 99.99 s), but the actual PID action is determined by a combination of the sampling period and the time of PID instruction execution (with each cycle). The relationship between the sampling period and the cycle time is as follows:

- If the sampling period is less than the cycle time, PID control is executed with each cycle and not with each sampling period.
- If the sampling period is greater than or equal to the cycle time, PID control is not executed with each
 cycle, but PID(190) is executed when the cumulative value of the cycle time (the time between PID
 instructions) is greater than or equal to the sampling period. The surplus portion of the cumulative
 value (i.e., the cycle time's cumulative value minus the sampling period) is carried forward to the next
 cumulative value.

For example, suppose that the sampling period is 100 ms and that the cycle time is consistently 60 ms. For the first cycle after the initial execution, PID(190) will not be executed because 60 ms is less than 100 ms. For the second cycle, 60 ms + 60 ms is greater than 100 ms, so PID(190) will be executed. The surplus of 20 ms (i.e., 120 ms – 100 ms = 20 ms) will be carried forward.

For the third cycle, the surplus 20 ms is added to 60 ms. Because the sum of 80 ms is less than 100 ms, PID(190) will not be executed. For the fourth cycle, the 80 ms is added to 60 ms. Because the sum of 140 ms is greater than 100 ms, PID(190) will be executed and the surplus of 40 ms (i.e., 120 ms - 100 ms = 20 ms) will be carried forward. This procedure is repeated for subsequent cycles.

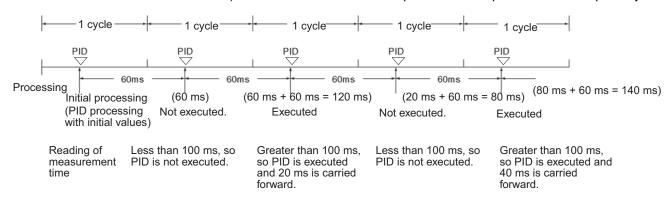


PID control

Proportional Action (P)

Proportional action is an operation in which a proportional band is established with respect to the set value (SV), and within that band the manipulated variable (MV) is made proportional to the deviation. An example for reverse operation is shown in the following illustration.


If the proportional action is used and the present value (PV) becomes smaller than the proportional band, the manipulated variable (MV) is 100% (i.e., the maximum value). Within the proportional band, the MV is made proportional to the deviation (the difference between from SV and PV) and gradually decreased until the SV and PV match (i.e., until the deviation is 0), at which time the MV will be at the minimum value of 0% (or 50%, depending on the setting of the manipulated variable output designation parameter). The MV will also be 0% when the PV is larger than the SV.

The proportional band is expressed as a percentage of the total input range. The smaller the proportional band, the larger the proportional constant and the stronger the corrective action will be. With proportional action an offset (residual deviation) generally occurs, but the offset can be reduced by making the proportional band smaller. If it is made too small, however, hunting will occur.

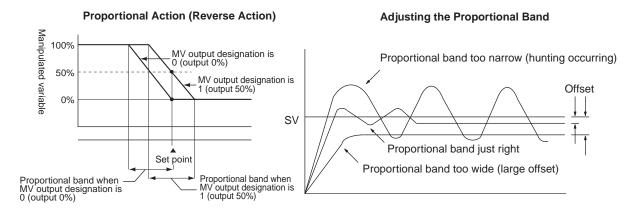

Integral Action (I)


Combining integral action with proportional action reduces the offset according to the time that has passed, so that the PV will match the SV. The strength of the integral action is indicated by the integral time, which is the time required for the manipulated variable of the integral action to reach the same level as the manipulated variable of the proportional action with respect to the step deviation, as shown in the following illustration. The shorter the integral time, the stronger the correction by the integral action will be. If the integral time is too short, the correction will be too strong and will cause hunting to occur.

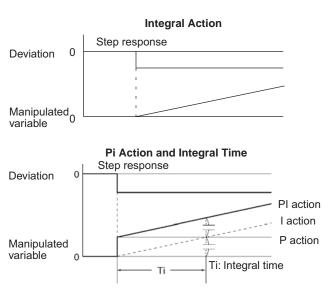

Derivative Action (D)


Proportional action and integral action both make corrections with respect to the control results, so there is inevitably a response delay. Derivative action compensates for that drawback. In response to a sudden disturbance it delivers a large manipulated variable and rapidly restores the original status. A correction is executed with the manipulated variable made proportional to the incline (derivative coefficient) caused by the deviation.

The strength of the derivative action is indicated by the derivative time, which is the time required for the manipulated variable of the derivative action to reach the same level as the manipulated variable of the proportional action with respect to the step deviation, as shown in the following illustration. The longer the derivative time, the stronger the correction by the derivative action will be.

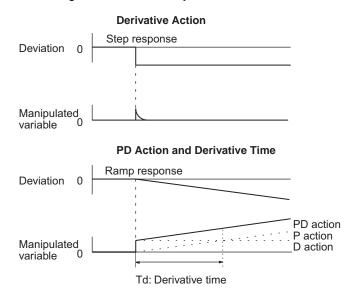

PID Action


PID action combines proportional action (P), integral action (I), and derivative action (D). It produces superior control results even for control objects with dead time. It employs proportional action to provide smooth control without hunting, integral action to automatically correct any offset, and derivative action to speed up the response to disturbances.

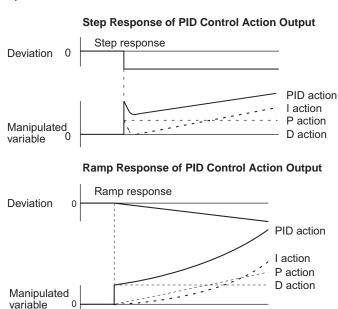

Direction of Action

When using PID control, select either of the following two control directions. In either direction, the MV increases as the difference between the SV and the PV increases.


- Forward action: MV is increased when the PV is larger than the SV.
- · Reverse action: MV is increased when the PV is smaller than the SV.

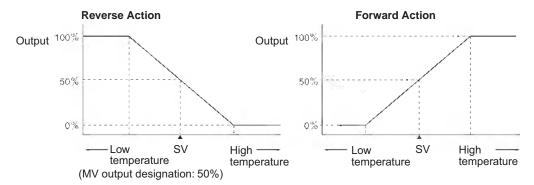


Adjusting PID Parameters

The general relationship between PID parameters and control status is shown below.


 When it is not a problem if a certain amount of time is required for stabilization (settlement time), but it is important not to cause overshooting, then enlarge the proportional band.

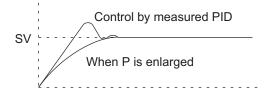


 When there is broad hunting, or when operation is tied up by overshooting and undershooting, it is probably because integral action is too strong. The hunting will be reduced if the integral time is increased or the proportional band is enlarged.

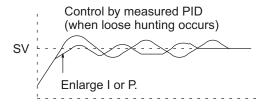

 When overshooting is not a problem but it is desirable to quickly stabilize control, then narrow the proportional band. If the proportional band is narrowed too much, however, then hunting may occur.

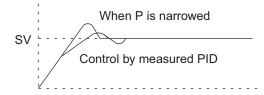

 If the period is short and hunting occurs, it may be that the control system response is quick and the derivative action is too strong. In that case, set the derivative action lower.

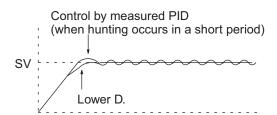


Hint

- The setting in bit 1 of C+5 is supported only by CJ2, CJ1, CS1-H, CJ1-H CPU Units and CS1 CPU Units with lot numbers of 001201□□□□ or later (manufactured December 1, 2000 or later).
- The number of valid input data bits for the measured value is designated by the input range setting in C+6, bits 08 to 11, and the number of valid output data bits for the manipulated variable output is designated by the output range setting in C+6, bits 0 to 3. These ranges are shown in the following table.

C+6, bits 08 to 11 or C+6, bits 00 to 03	Number of valid bits	Range					
0	8	0000 to 00FF hex					
1	9	0000 to 01FF hex					
2	10	0000 to 03FF hex					
3	11	0000 to 07FF hex					
4	12	0000 to 0FFF hex					
5	13	0000 to 1FFF hex					
6	14	0000 to 3FFF hex					
7	15	0000 to 7FFF hex					
8	16	0000 to FFFF hex					

If the range of data handled by an Analog Input Unit or Analog Output Unit cannot be set accurately by setting the number of valid bits, APR(069) (ARITHMETIC PROCESS) can be used to convert to the proper ranges before and after PID(190).


The following program section shows an example for a DRT1-AD04 Analog Input Unit and DRT1-DA02 Analog Output Unit operating as DeviceNet slaves. The data ranges for these two Units is 0000 to 1770 hex, which cannot be specified merely by setting the valid number of digits. APR(069) is thus used to convert the 0000 to 1770 hex range of the Analog Input Unit to 0000 to FFFF hex for input to PID(190) and then the manipulated variable output from PID(190) is converted back to the range 0000 to 1770 hex, again using APR(069), for output from the Analog Output Unit.

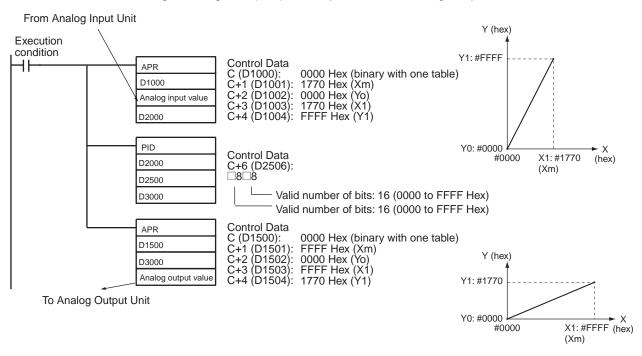


Precautions

- If PID(190) is used between IL(002) and ILC(003), between JMP(004) and JME(005), or in a subroutine, operation will not be consistent depending on the input condition.
- Within the PID parameters (C to C+38), the only value that can be changed while the input condition is ON is the set value for C. If any other value is changed, be sure to turn the input condition from OFF to ON to enable the new value.
- PID(190) is executed as if the execution condition was a STOP-RUN signal. PID calculations are
 executed when the execution condition remains ON for the next cycle after C+9 to C+38 are
 initialized. Therefore, when using the Always ON Flag (ON) as an execution condition for PID(190),
 provide a separate process where C+9 to C+38 are initialized when operation is started.
- A PID parameter storage word cannot be shared by multiple PID instructions. Even when the same parameter is used in multiple PID instructions, separate words must be specified.

Example Programming

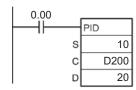


- At the rising edge of CIO 0.00 (OFF to ON), the work area in D209 to D238 is initialized according to the parameters (shown below) set in D200 to D208. After the work area has been initialized, PID control is executed and the manipulated variable is output to CIO 20.
- When CIO 0.00 is turned ON, PID control is executed at the sampling period intervals according to the parameters set in D200 to D208. The manipulated variable is output to CIO 20.
- The PID constants used in PID calculations will not be changed if the proportional band (P), integral constant (Tik), or derivative constant is changed after CIO 0.00 turns ON.

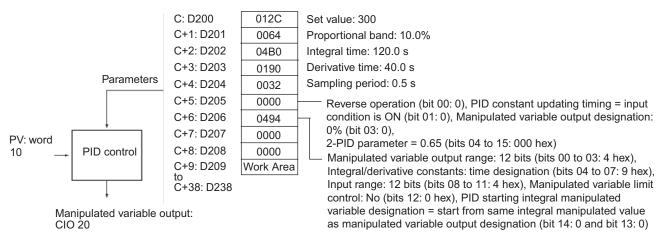

Note When CIO 0.00 is OFF, operation can be the same as manual operation by writing to CIO 20. When changing from manual operation to automatic operation by executing PID(190), extreme changes in the manipulated value are restricted. (The manipulated variable after switching to automatic operation will start at the previous value of the integral manipulated variable.)

PIDAT

Instruction	Mnemonic	Variations	Function code	Function
PID CONTROL WITH AUTOTUNING	PIDAT		191	Executes PID control according to the specified parameters. The PID constants can be autotuned.

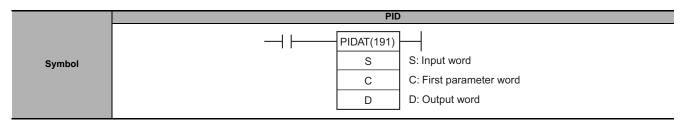


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	Not allowed	OK	ОК	Not allowed	ОК


Operands


Operand	Description	Data type	Size		
S	Input word	UINT	1		
С	First parameter word	WORD	41		
D	Output word	UINT	1		

C: First Parameter Word

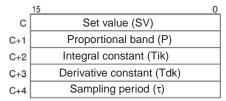

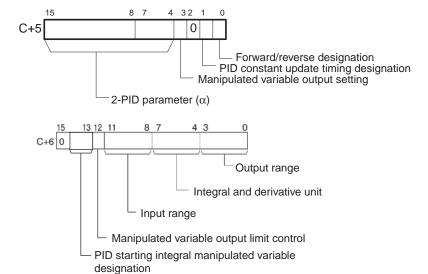

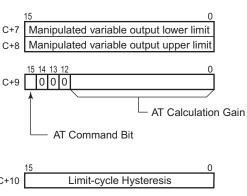

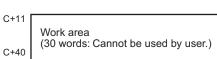

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR													
	CIO	WR	HR	AR	Т	С	DM	ЕМ	@DM @EM	*DM *EM	stants	DR I IR Ia	Indirect using IR	тк	CF	bits bit	bits														
S																									OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK																	
D												OK																			

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the C data is out of range. ON if the actual sampling period is more than twice the designated sampling period. ON if an error occurred during autotuning. OFF in all other cases.
Greater Than Flag	P_GT	ON if the manipulated variable after the PID action exceeds the upper limit. OFF in all other cases.
Less Than Flag	P_LT	ON if the manipulated variable after the PID action is below the lower limit. OFF in all other cases.
Carry Flag	P_CY	ON while PID control is being executed. OFF in all other cases.


Function

When the execution condition is ON, PIDAT(191) carries out target value filtered PID control with two degrees of freedom according to the parameters designated by C (set value, PID constant, etc.). It takes the specified input range of binary data from the contents of input word S and carries out the PID action according to the parameters that are set. The result is then stored as the manipulated variable in output word D.

The parameter settings are read when the execution condition turns from OFF to ON, and the Error Flag will turn ON if the settings are outside of the permissible range.

If the settings are within the permissible range, PID processing will be executed using the initial values. Bumpless operation is not performed at this time. It will be used for manipulated variables in subsequent PID processing execution. (Bumpless operation is processing that gradually and continuously changes the manipulated variable in order to avoid the adverse effects of sudden changes.)

When the execution condition turns ON, the PV for the specified sampling period is entered and processing is performed.

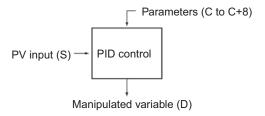

Autotuning


The status of the AT Command Bit (bit 15 of C+9) is checked every cycle. If this control bit is turned ON in a given cycle, PIDAT(191) will begin autotuning the PID constants. (The changes in the SV will not be reflected while autotuning is being performed.)

The limit-cycle method is used for autotuning. PIDAT(191) forcibly changes the manipulated variable (max. manipulated variable \leftrightarrow min. manipulated variable) and monitors the characteristics of the controlled system. The PID constants are calculated based on the characteristics that were observed, and the new P, I, and D constants are stored automatically in C+1, C+2, and C+3. At this point, the AT Command Bit (bit 15 of C+9) is turned OFF and PID control resumes with the new PID constants in C+1, C+2, and C+3.

• If the AT Command Bit is ON when PIDAT(191) execution begins, autotuning will be performed first and then PID control will start with the calculated PID constants.

If the AT Command Bit is turned ON during PIDAT(191) execution, PIDAT(191) interrupts the PID
control being performed with the user-set PID constants, performs autotuning, and then resumes PID
control with the calculated PID constants.

The following flowchart shows the autotuning procedure:

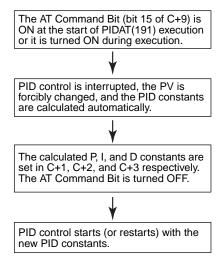

- **Note 1** If autotuning is interrupted by turning OFF the AT Command Bit during autotuning, PID control will start with the PID constants that were being used before autotuning began.
 - 2 Also, if an AT execution error occurs, PID control will start with the PID constants that were being used before autotuning began.

In both cases described in notes 1 and 2, the PID constants will be enabled if they were already calculated when autotuning was interrupted.

PID Control

- The number of valid input data bits within the 16 bits of the PV input (S) is designated by the input range setting in C+6, bits 08 to 11. For example, if 12 bits (4 hex) is designated for the input range, the range from 0000 hex to 0FFF hex will be enabled as the PV. (Values greater than 0FFF hex will be regarded as 0FFF hex.)
- The set value range also depends on the input range.
- Measured values (PV) and set values (SV) are in binary without sign, from 0000 hex to the maximum value of the input range.
- The number of valid output data bits within the 16 bits of the manipulated variable output is designated by the output range setting in C+6, bits 00 to 03. For example, if 12 bits (4 hex) is designated for the output range, the range from 0000 hex to 0FFF hex will be output as the manipulated variable.
- For proportional operation only, the manipulated variable output when the PV equals the SV can be designated as follows:
 - 0: Output 0%
 - 1: Output 50%.
- The direction of proportional operation can be designated as either forward or reverse.
- The upper and lower limits of the manipulated variable output can be designated.
- The sampling period can be designated in units of 10 ms (0.01 to 99.99 s), but the actual PID action is determined by a combination of the sampling period and the time of PIDAT(191) instruction execution (with each cycle).
- The timing of enabling changes made to PID constants can be set to either 1) the beginning of PIDAT(191) instruction execution or 2) the beginning of PID instruction execution and each sampling period. Only the proportional band (P), integral constant (Tik), and derivative constant (Tdk) can be changed each sampling cycle (i.e., during PID instruction execution). The timing is set in bit 1 of C+5.

Hint

- The PIDAT(191) instruction is the same as the PID(190) instruction with the added autotuning (AT) function, so the PID control operations are identical. Refer to 3-19-1 PID CONTROL: PID(190) for details on PID control operations and examples.
- PIDAT(191) is executed as if the execution condition was a STOP-RUN signal. PID calculations are executed when the execution condition remains ON for the next cycle after C+11 to C+40 are initialized. Therefore, when using the Always ON Flag (ON) as an execution condition for PIDAT(191), provide a separate process where C+11 to C+40 are initialized when operation is started.

Precautions

- If PIDAT(191) is used between IL(002) and ILC(003), between JMP(004) and JME(005), or in a subroutine, operation will not be consistent depending on the input condition.
- A PID parameter storage word cannot be shared by multiple PIDAT instructions. Even when the same parameter is used in multiple PIDAT instructions, separate words must be specified.
- When changing the PID constants manually, set the PID constant change enable setting (bit 1 of C+5) to 1 so that the values in C+1, C+2, and C+3 are refreshed each sampling period in the PID calculation. This setting also allows the PID constants to be adjusted manually after autotuning.
- Of the PID parameters (C to C+38), only the following parameters can be changed when the execution condition is ON. When any other values have been changed, be sure to change the execution condition from OFF to ON to enable the new settings.
 - Set value (SV) in C
 (Can be changed during PID control only. An SV change during autotuning will not be reflected.)
 - PID constant change enable setting (bit 1 of C+5)
 - P, I, and D constants in C+1, C+2, and C+3
 (Changes to these constants will be reflected each sampling period only if the PID constant change enable setting (bit 1 of C+5) is set to 1.)
 - AT Command Bit (bit 15 of C+9)
 - AT Calculation Gain (bits 0 to 14 of C+9) and Limit-cycle Hysteresis (C+10) (These values are read when autotuning starts.)

PID Parameter Settings


Control data	Item	Contents	Setting range	Change with ON input condition	
С	Set value (SV)	The target value of the process being controlled.	Binary data (of the same number of bits as specified for the input range)	Allowed	
C+1	Proportional band	The parameter for P action expressing the proportional control range/total control range.	0001 to 270F hex (1 to 9999); (0.1% to 999.9%, in units of 0.1%)	Can be changed with input condition	
C+2	Tik Integral Constant	A constant expressing the strength of the integral action. As this value increases, the integral strength decreases.	0001 to 1FFF hex (1 to 8191); (9999 = Integral operation not executed) (See note 1.)	ON if bit 1 of C+5 is 1.	
C+3	Tdk Derivative Constant	A constant expressing the strength of the derivative action. As this value increases, the derivative strength decreases.	0001 to 1FFF hex (1 to 8191); (0000 = Derivative operation not executed) (See note 1.)		
C+4	Sampling period (τ)	Sets the period for executing the PID action.	0001 to 270F hex (1 to 9999); (0.01 to 99.99 s, in units of 10 ms)	Not allowed	
Bits 04 to 15 of C+5	2-PID parameter (α)	The input filter coefficient. Normally use 0.65 (i.e., a setting of 000). The filter efficiency decreases as the coefficient approaches 0.	000 hex: α = 0.65 Setting from 100 to 163 hex means that the value of the rightmost two digits is set from α = 0.00 to α = 0.99. (See note 2.)		
Bit 03 of C+5	Manipulated variable output designation	Designates the manipulated variable output for when the PV equals the SV.	0: Output 0% 1: Output 50%		
Bit 01 of C+5	PID constant change enable setting	The timing of enabling changes made to the proportional band (P), integral constant (Tik), and derivative constant (Tdk) for use in PID calculations.	O: At start of PID instruction execution 1: At start of PID instruction execution and each sampling period	Allowed	

Control data	Item	Contents	Setting range	Change with ON input condition
Bit 00 of C+5	PID forward/reverse designation	Determines the direction of the proportional action.	0: Reverse action 1: Forward action	Not allowed
Bits 13 to 14 of C+6	ID starting integral manipulated variable designation (unit version 4.0 or later only)	Determines the initial integral manipulated variable when PID control is started (i.e., when the input turns ON) .	Bit 14 = 0 and bit 13=0: Start from same integral manipulated value as manipulated variable output designation (Pre-Ver. 4.0 operation). Bit 14 = 0 or 1 and bit 13 = 1: Bumpless operation (i.e., start from an integral manipulated variable that will not abruptly change the manipulated variable output and result in a continuous change). Bit 14 = 1 and bit 13 = 0: Start with integral manipulated variable = 0.	
Bit 12 of C+6	Manipulated variable output limit control	Determines whether or not limit control will apply to the manipulated variable output.	Disabled (no limit control) Enabled (limit control)	
Bits 08 to 11 of C+6	Input range	The number of input data bits.	0: 8 bits 5: 13 bits 1: 9 bits 6: 14 bits 2: 10 bits 7: 15 bits 3: 11 bits 8: 16 bits 4: 12 bits	
Bits 04 to 07 of C+6	Integral and derivative unit	Determines the unit for expressing the integral and derivative constants.	1: Sampling period multiple 9: Time (unit: 100 ms)	
Bits 00 to 03 of C+6	Output range	The number of output data bits. (The number of output bits is automatically the same as the number of input bits.)	0: 8 bits 5: 13 bits 1: 9 bits 6: 14 bits 2: 10 bits 7: 15 bits 3: 11 bits 8: 16 bits 4: 12 bits	
C+7	Manipulated variable output lower limit	The lower limit for when the manipulated variable output limit is enabled.	0000 to FFFF (binary) (See note 3.)	
C+8	Manipulated variable output upper limit	The upper limit for when the manipulated variable output limit is enabled.	0000 to FFFF (binary) (See note 3.)	
Bit 15 of C+9	AT Command Bit	This control bit starts autotuning. Set the AT Command Bit to 1 to perform autotuning. (Autotuning can be started while PIDAT(191) is being executed.) This bit is turned OFF automatically when autotuning is completed. Autotuning will be interrupted if the AT Command Bit is turned OFF manually. In this case, the PID constants will be enabled if they were already calculated when autotuning was interrupted.	As a Control Bit: • 0 → 1: Executes autotuning. • 1 → 0: Interrupts autotuning. (PID(191) turns the bit OFF automatically when autotuning is completed. As a Flag: 0: Autotuning is not being executed. 1: Autotuning is being executed.	Allowed
Bits 00 to 11 of C+9	AT Calculation Gain	Set this parameter to adjust the contribution of the PID calculation results to the stored values. Normally, leave this parameter set to its default (0000). Increase the value when emphasizing stability. Decrease the value when emphasizing responsiveness.	0000 hex: 1.00 (Default) 0001 to 03E8 hex (1 to 1000); (0.01 to 10.00, in units of 0.01)	Allowed (These parameters are read when autotuning starts.)
C+10	Limit-cycle Hysteresis	Sets the hysteresis when the limit cycle is generated. The default setting for reverse operation turns ON the MV with a hysteresis of SV–20%. Increase this setting if a proper limit cycle cannot be generated because the PV is unstable. However, the AT accuracy will decline if the Limit-cycle Hysteresis is higher than necessary.	0000 hex: 0.20% (Default) 0001 to 03E8 hex: 0.01 to 10.00% in units of 0.01% FFFF hex: 0.00% Note The percentage is with respect to the input range.	


- **Note 1** When the unit is designated as 1, the range is from 1 to 8,191 times the period. When the unit is designated as 9, the range is from 0.1 to 819.1 s. When 9 is designated, set the integral and derivative times to within a range of 1 to 8,191 times the sampling period.
 - 2 Setting the 2-PID parameter (α) to 000 yields 0.65, the normal value.
 - 3 When the manipulated variable output limit control is enabled (i.e., set to "1"), set the values as follows: $0000 \le MV$ output lower limit $\le MV$ output upper limit $\le MX$. value of output range


Example Programming

Interrupting PID Control to Perform Autotuning

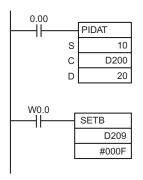


- At the rising edge of CIO 0.00 (OFF to ON), the work area in D211 to D240 is initialized according to the parameters (shown below) set in D200 to D208. After the work area has been initialized, PID control is executed and the manipulated variable is output to CIO 20.
- While CIO 0.00 is ON, PID control is executed at the sampling period intervals according to the parameters set in D200 to D210. The manipulated variable is output to CIO 20.
- The PID constants used in PID calculations will not be changed even if the proportional band (P), integral constant (Tik), or derivative constant is changed after CIO 0.00 turns ON.
- At the rising edge of W 0.0 (OFF to ON), SETB(532) turns ON bit 15 of D209 (C+9) and starts autotuning. When autotuning is completed, the calculated P, I, and D constants are written to C+1, C+2, and C+3. PID control is then restarted with the new PID constants.

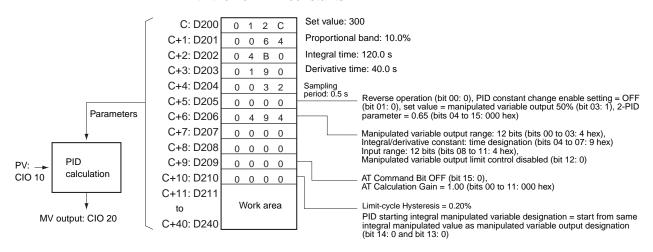


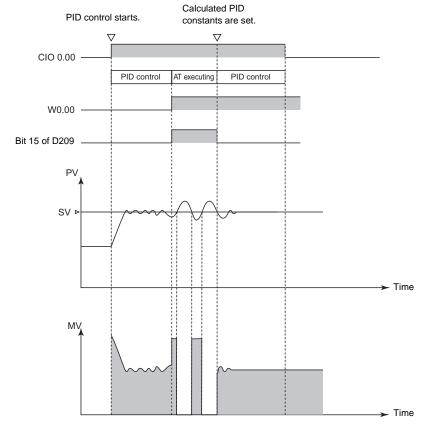

Starting PIDAT(191) with Autotuning

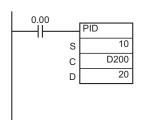


At the rising edge of CIO 0.00 (OFF to ON), autotuning will be performed first if bit 15 of D209 (C+9) is ON. When autotuning is completed, the calculated P, I, and D constants are written to C+1, C+2, and C+3. PID control is then started with the calculated PID constants.

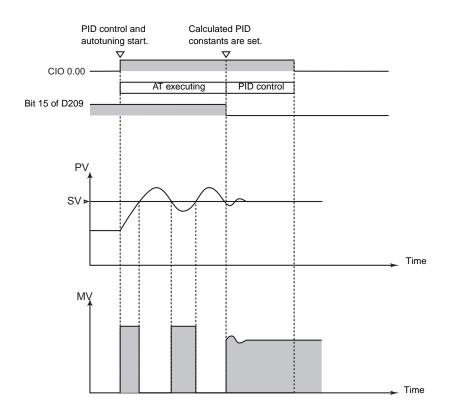


Interrupting Autotuning Before Completion

Autotuning can be interrupted by turning bit 15 of D209 (C+9) from ON to OFF. PID control will be restarted with the P, I, and D constants that were in effect before autotuning was started.

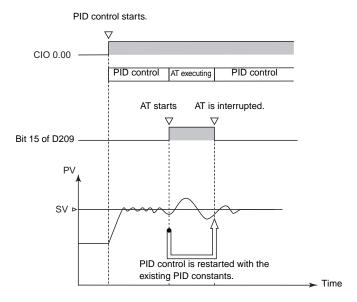

LMT

Instruction	Mnemonic	Variations	Function code	Function
LIMIT CONTROL	LMT	@LMT	680	Controls output data according to whether or not input data is within upper and lower limits.

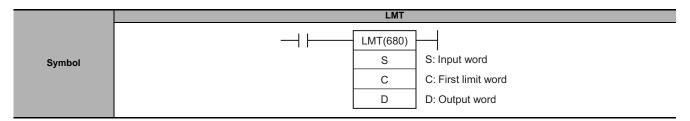


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Input word	INT	1
С	First limit word	DINT	2
D	Output word	INT	1

C: First Limit Word

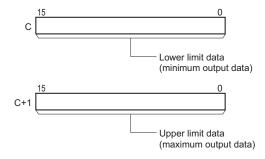

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect DM/EM addresses Con- Registers Flags						Registers Flags		Pulse	TR						
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits						
S																	OK	OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK										
D												OK												

Flags

Name	Label	Operation
Error Flag	ER	ON if the upper limit is less than the lower limit. OFF in all other cases.
Greater Than Flag	>	ON if the input data (S) is greater than the upper limit.OFF in all other cases.
Equals Flag	=	ON if the result is 0. OFF in all other cases.
Less Than Flag	<	ON if the input data (S) is less than the lower limit. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the result is "1." OFF in all other cases.


Function

When the execution condition is ON, LMT(680) controls output data according to whether or not the specified input data (signed 16-bit binary) is within the upper and lower limits.

If the input data (S) is less than the lower limit (C), the lower limit data will be output to D and the Less Than Flag will turn ON.

If the input data (S) is greater than the upper limit (C+1), the upper limit data will be output to D and the Greater Than Flag will turn ON.

If the input data (S) is greater than or equal to the lower limit (C) and less than or equal to the upper limit (C+1), the input data (S) will be output to D.

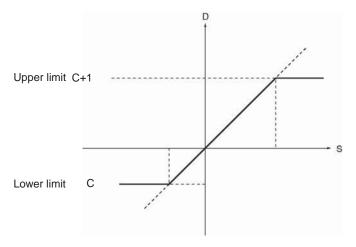



Example Programming

If D100 is 0050 hex (80), then 0064 hex (100) will be output to D300 because 80 is less than the lower limit of 100.

If D100 is 00C8 hex (200), then 0064 hex (100) will be output to D300 because 200 is within the upper and lower limits.


If D100 is 012C hex (300), then 015E hex (350) will be output to D300 because 350 is greater than the upper limit of 300.

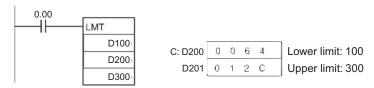

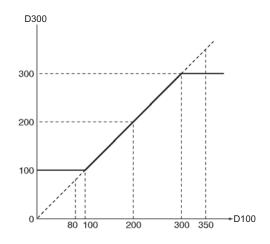

BAND

Instruction	Mnemonic	Variations	Function code	Function
DEAD BAND CONTROL	BAND	@BAND	681	Controls output data according to whether or not input data is within the lower and upper limits of the range (dead band range.)

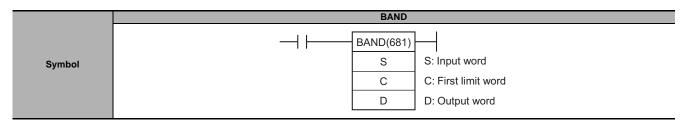


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	Input word	INT	1		
С	First limit word	UINT	2		
D	Output word	UINT	1		

C: First Limit Word

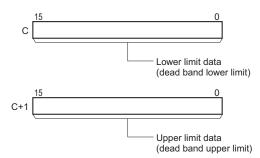

Operand Specifications

Area	Word addresses						ect DM/EM dresses Con-		Registers			Flags		Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S											OK	OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D												OK						

Flags

Name	Label	Operation
Error Flag	ER	ON if the upper limit is less than the lower limit. OFF in all other cases.
Greater Than Flag	>	ON if the input data (S) is greater than the upper limit.OFF in all other cases.
Equals Flag	=	ON if the result is 0. OFF in all other cases.
Less Than Flag	<	ON if the input data (S) is less than the lower limit. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the result is "1." OFF in all other cases.


Function

When the execution condition is ON, BAND(681) controls output data according to whether or not the specified input data (signed 16-bit binary) is within the upper and lower limits (dead band).

If the input data (S) is greater than or equal to the lower limit (C) and less than or equal to the upper limit (C+1), 0000 (hex) will be output to D and the Equals Flag will turn ON.

If the input data (S) is less than the lower limit (C), the difference between the input data minus the lower limit data will be output to D and the Less Than Flag will turn ON.

If the input data (S) is greater than the upper limit (C+1), the difference between the input data minus the upper limit data will be output to D and the Greater Than Flag will turn ON.

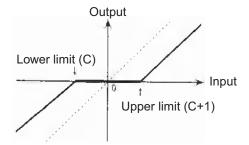


If the output data is smaller than the 8000 (hex) or if is greater than 7FFF, the sign will be reversed. For example, for a lower limit of 0100 (hex) and input data of 8000 (hex), the output data will be as follows: 8000 (hex) [-32768] - 0100 (hex) [256] = 7F00 (hex) [32512]


Example Programming

If D100 is 00B4 hex (180), then 180–200=FFEC hex (–20) will be output to D300 because 180 is less than the lower limit of 200.

If D100 is 00E6 hex (230), then 0 will be output to D300 because 230 is within the upper and lower limits.


If D100 is 015E hex (350), then 350–300=0032 hex (50) will be output to D300 because 350 is greater than the upper limit of 300.

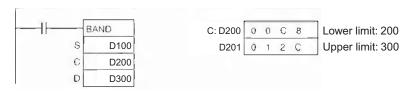

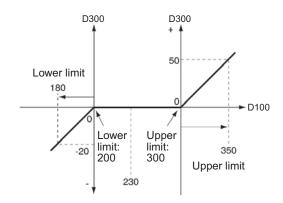

ZONE

Instruction	Mnemonic	Variations	Function code	Function	
DEAD ZONE CONTROL	ZONE	@ZONE	682	Adds the specified bias to input data and outputs the result.	

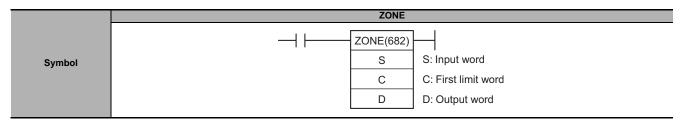


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	Input word	INT	1		
С	First limit word	UDINT	2		
D	Output word	UINT	1		

C: First Limit Word

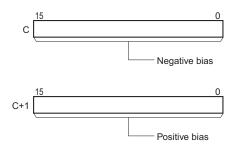

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bit	bits
S											OK	OK						
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D												OK						

Flags

Name	Label	Operation
Error Flag	ER	ON if the upper limit is less than the lower limit. OFF in all other cases.
Greater Than Flag	>	ON if the input data (S) is greater than the upper limit.OFF in all other cases.
Equals Flag	=	ON if the result is 0.OFF in all other cases.
Less Than Flag	<	ON if the input data (S) is less than the lower limit. OFF in all other cases.
Negative Flag	N	ON if the leftmost bit of the result is "1." OFF in all other cases.


Function

When the execution condition is ON, ZONE(682) adds the specified bias to the specified input data (signed 16-bit binary) and places the result in a specified word.

If the input data (S) is less than zero, the input data plus the negative bias will be output to D and the Less Than Flag will turn ON.

If the input data (S) is greater than zero, the input data plus the positive bias will be output to D and the Greater Than Flag will turn ON.

If the input data (S) is equal to zero, 0 will be output to D and the Equals Flag will turn ON.

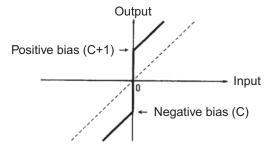

If the output data is smaller than the 8000 (hex) or if is greater than 7FFF, the sign will be reversed. For example, for a negative bias value of FF00 (hex) and input data of 8000 (hex), the output data will be as follows:


8000 (hex) [-32768] - FF00 (hex) [-256] = 7F00 (hex) [32512]

Example Programming

When CIO 0.00 is ON, a bias of –100 will be applied to the value of D100 if that value is less than 0, and the resulting value will be stored in D300.


If the value of D100 is 0, then 0000 hex will be stored in D300.

If the value of D100 is greater than 0, then a bias of +100 will be applied and the resulting value will be stored in D300.

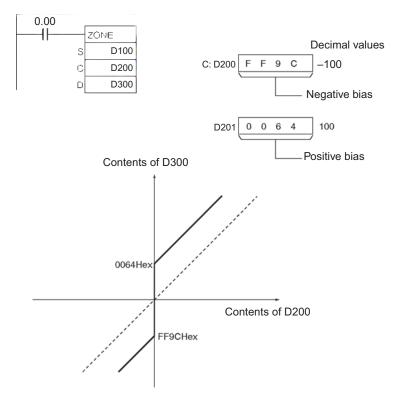

TPO

Instruction	Mnemonic	Variations	Function code	Function
TIME-PROPORTIONAL OUTPUT	ТРО		685	Inputs the duty ratio or manipulated variable from the specified word, converts the duty ratio to a time-proportional output based on the specified parameters, and outputs the result from the specified output.

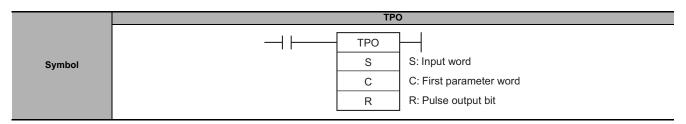

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Not allowed	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Input word	UINT	1
С	First parameter word	WORD	7
R	Pulse output bit	BOOL	

S: Input Word

Specifies the input word containing the input duty ratio or manipulated variable.


- Input duty ratio: 0000 to 2710 hex (0.00% to 100.00%)
- Input manipulated variable (See note.): 0000 to FFFF hex (0 to 65,535 max.) (Bits 00 to 03 of C specify the manipulated variable range, i.e., the number of valid bits in the manipulated variable. Specify the same number of bits as specified for the output range setting in PID(190).)

Note If S is a manipulated variable, specify the word containing the manipulated variable output from a PID(190) or PIDAT(191) instruction.

C: First Parameter Word

Bits 04 to 07 of C specify the input type, i.e., whether the input word contains an input duty ratio or manipulated variable. (Set these bits to 0 hex to specify a input duty ratio or to 1 hex to specify a manipulated variable.)

The following diagram shows the locations of the parameter data. For details on the parameters, refer to *Parameter Settings* in this section.

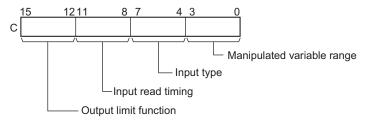

C+1 Control period
C+2 Output lower limit
C+3 Output upper limit
C+4
C+5 (3 words, cannot be used by user)
C+6

Note For details, see the description of each parameter.

R: Pulse Output Bit

Specifies the destination output bit for the pulse output.

Normally, specify an output bit allocated to a Transistor Output Unit and connect a solid state relay to the Transistor Output Unit.

Operand Specifications

	Area			V	Vord ad	ldresse			Con-	Registers			Flags		Pulse	TR			
	Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
-	S					ОК	ОК	ОК	ОК	ОК	OK	OK	OK						
-	С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
-	R																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the input data in S is out of range. (The input data setting range depends on the input type setting.) ON if the C data is out of range. (The manipulated variable range will cause an error only when the input type is set to manipulated variable.) ON if the control period in C+1 is out of range. ON if the output limit function is enabled but the output lower limit (C+2) or output upper limit (C+3) is out of range. ON if the output limit function is enabled but the output lower limit (C+2) is less than or equal to the output upper limit (C+3). OFF in all other cases.

Function


Receives a duty ratio or manipulated variable input from the word address specified by S, converts the duty ratio to a time-proportional output (see note) based on the parameters specified in words C to C+3, and outputs a pulse output to the bit specified by R.

Note A time-proportional output is changed proportionally based on the ON/OFF ratio in input word S. The period in which the ON and OFF status changes is known as the control period and is set in parameter word C+1. Example: When the control period is 1 s and the input value is 50%, the bit is ON for 0.5 s and OFF for 0.5 s. When the control period is 1 s and the input value is 80%, the bit is ON for 0.8 s and OFF for 0.2 s.

Generally, TPO(685) is used together with PID(190) or PIDAT(191) and the PID instruction's manipulated variable result word (D) is specified as the input word (S) for the TPO(685) instruction. Also, an output bit allocated to a Transistor Output Unit is generally specified as R and a solid state relay is connected to the Transistor Output Unit to perform time-proportional control of a heater (proportional control of the ON/OFF ratio).

Combining TPO(685) with a PID Control Instruction


When combining TPO(685) with a PID control instruction, the manipulated variable input is divided by the manipulated variable range to calculate the duty ratio, that duty ratio is converted to a time-proportional output, and pulses are output.

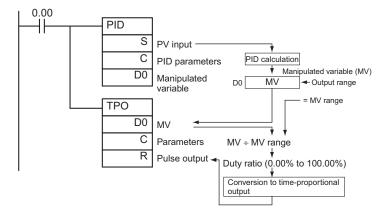

In this case, set the same value for the PID Control instruction's output range and the TPO(685) instruction's manipulated variable range. For example, when the PID Control instruction's output range and the TPO(685) instruction's manipulated variable range are both set to 12 bits (0000 to 0FFF hex), the duty ratio is calculated by dividing the manipulated variable from the PID Control instruction by 0FFF hex and TPO(685) converts that duty ratio to a time-proportional output.

External Wiring Example

Connect the Transistor Output Unit to a solid state relay (SSR) as shown in the following diagram.

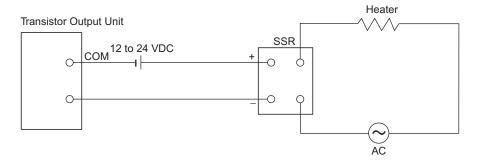

Parameter Settings

Con	trol data				Change with
Word	Bits	Item	Contents	Setting range	ON input condition
С	00 to 03	Manipulated variable range	Specifies the number of input data bits.	0 hex: 8 bits 5 hex: 13 bits 1 hex: 9 bits 6 hex: 14 bits 2 hex: 10 bits 7 hex: 15 bits 3 hex: 11 bits 8 hex: 16 bits 4 hex: 12 bits	Allowed
	04 to 07	Input type	Specifies whether S contains a duty ratio or manipulated variable.	0 hex: Duty ratio Setting range for S: 0000 to 2710 hex (0.00 to 100.00%) 1 hex: Manipulated variable Setting range for S: 0000 to FFFF hex (0 to 65,535) (The maximum setting depends on the MV range set with bits 00 to 03 of C.)	Allowed
	08 to 11	Input read timing	Specifies the input read timing.	O hex: Use the beginning value of the control period hex: Use lower value hex: Use higher value hex: Continuous adjustment	Allowed
	12 to 15	Output limit control	Specifies whether the output limit function is enabled or disabled.	0 hex: Disabled 1 hex: Enabled (See note.)	Allowed
C+1	00 to 15	Control period	Control period (Time period in which the ON/OFF changes are made.)	0064 to 270F hex (1.00 to 99.99 s) Note: For example, 1.00 s is set as 0064 hex, and not 0001 hex.	Allowed
C +2	00 to 15	Output lower limit	Specifies the lower limit when the output limit is enabled.	0000 to 2710 hex (0 to 100.00%)	Allowed
C +3	00 to 15	Output upper limit	Specifies the upper limit when the output limit is enabled.	0000 to 2710 hex (0 to 100.00%)	Allowed
C+4	00 to 15	Work area	This work area is used by the system. It	Cannot be used.	
C+5	00 to 15		cannot be used by the user.		
C+6	00 to 15				

Note When the output limit control function is enabled, set the lower and upper limits as follows: $0000 \text{ hex} \le \text{lower limit} \le \text{upper limit} \le 2710 \text{ hex}.$

Execution


- The instruction is executed while the input condition is ON.
- When instruction execution starts, the output bit (R) is turned ON/OFF according to the duty ratio.
- The parameters (in C to C+3) are read in real time each time that the instruction is executed. When
 changing the parameters, change all of them at the same time so that different sets of parameters are
 not mixed.

- The output (R) is turned ON/OFF when the instruction is executed and the accuracy of the output's ON/OFF timing is 10 ms max.
- Execution of the instruction stops when the input condition goes OFF. At that time, the elapsed time value will be reset and the control period will be initialized.
- The input type setting (bits 04 to 07 of C) determines whether the input word (S) contains a duty ratio or manipulated variable. When S contains the manipulated variable, the duty ratio is calculated by dividing the manipulated variable input by the manipulated variable range (bits 00 to 03 of C).
- The input read timing setting (bits 08 to 11 of C) specifies when the input word (S) is read, as shown in the following table:


Input read timing	Description
0: Use the beginning value of the control period	The duty ratio input is read at the beginning of the control period and the ratio cannot be changed during the control period.
1: Use lower value	If the duty ratio input falls below the duty ratio at the beginning of the control period, the lower value will take precedence and the output ON time will be reduced accordingly.
2: Use higher value	If the duty ratio input rises above the duty ratio at the beginning of the control period, the higher value will take precedence and the output ON time will be increased accordingly.
3: Continuous adjustment	The duty ratio will be read in real time each time the instruction is executed and the ON/OFF operation will be repeated within the control period.

The following diagrams show the operation of each input read timing setting.


• Input time setting = 0 (Use the beginning value of the control period.)

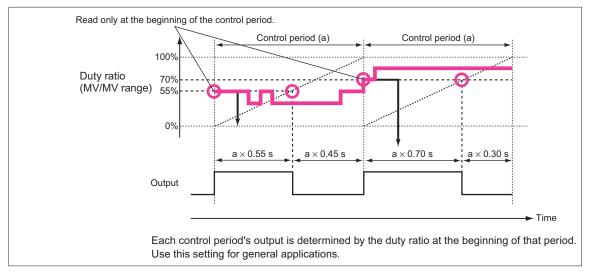


• Input time setting = 1 (Use lower value.)

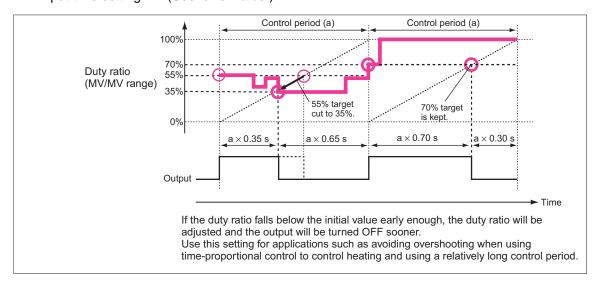

• Input time setting = 2 (Use higher value.)

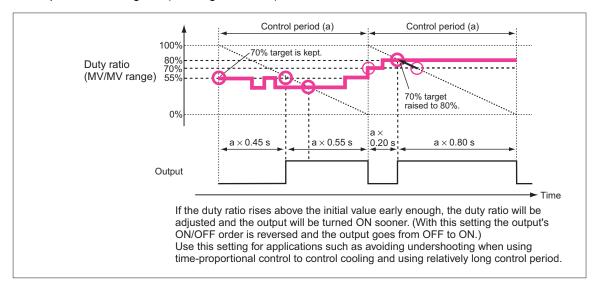

• Input time setting = 3 (Continuous adjustment)

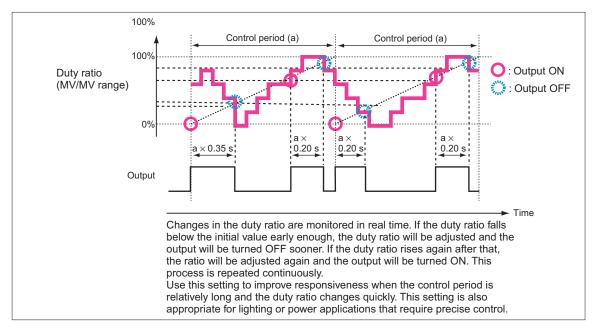


• The output limiter function (bits 12 to 15 of C) can be enabled to restrict (saturate) output when it is outside the range between the output limiter lower limit (C + 2) and output limiter upper limit (C + 3).

Precautions

When using TPO(685) in combination with PID(190) in a cyclic task and also using an interrupt task, temporarily disable interrupts by executing DI(693) (DISABLE INTERRUPTS) ahead PID(190) and TPO(685). If interrupts are not disabled and an interrupt occurs between the PID(190) and TPO(685), the control period may be shifted.

Cyclic task

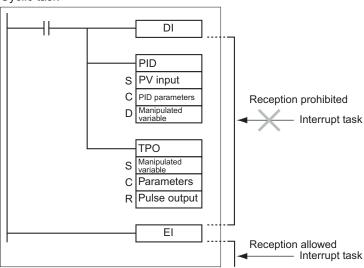


Example Programming

Combining TPO(685) with PID(190)

When CIO 0.00 is ON, TPO(685) takes the manipulated variable output from PID(190) (contained in D0), calculates the duty ratio from that manipulated variable value (Duty ratio = $MV \div MV$ range), converts the duty ratio to a time-proportional output, and outputs the pulses to CIO 2001.


In this case, CIO 20 is allocated to a Transistor Output Unit and bit CIO 2001 is connected to a solid state relay for heater control.

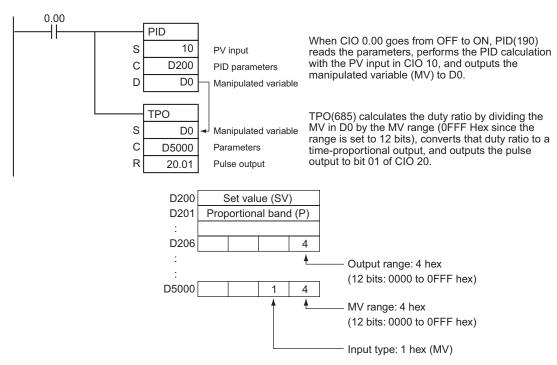

• Using TPO(685) Alone


When CIO 0.00 is ON, TPO(685) takes the duty ratio in D10, converts the duty ratio to a time-proportional output, and outputs the pulses to CIO 100.

In this case, the control period is 1 s and the output limit function is enabled with a lower limit 20.00% and an upper limit of 80.00%.

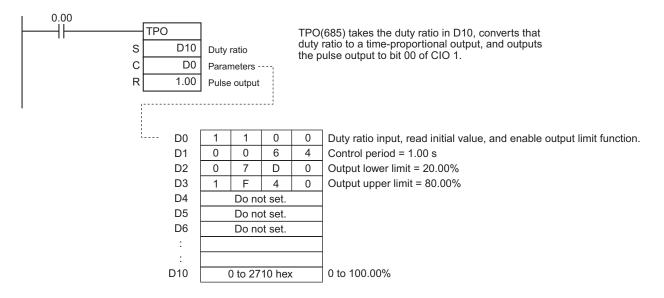

SCL

Instruction	Mnemonic	Variations	Function code	Function
SCALING	SCL	@SCL	194	Converts unsigned binary data into unsigned BCD data according to the specified linear function.

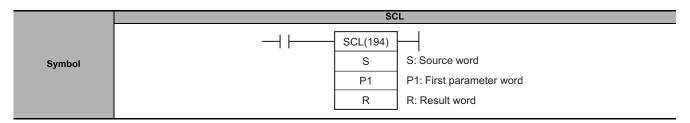


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word	UINT	1
P1	First parameter word	LWORD	4
R	Result word	WORD	1

P1: First Parameter Word

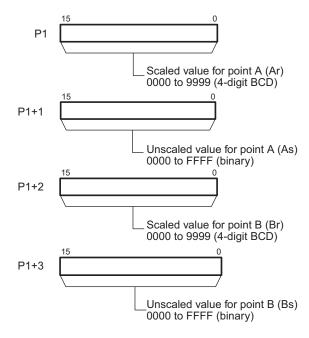

Note P1 to P1+3 must be in the same area.

Operand Specifications

Area	Word addresses									Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S												OK						
P1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
R												OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if the contents of C (Ar) or C+1 (Br) is not BCD. ON if the contents of C+1 (As) and C+3 (Bs) are equal. OFF in all other cases.
Equals Flag	=	ON if the result is 0. OFF in all other cases.

Function


SCL(194) is used to convert the unsigned binary data contained in the source word S into unsigned BCD data and place the result in the result word R according to the linear function defined by points (As, Ad) and (Bs, Bd). The address of the first word containing the coordinates of points (As, Ar) and (Bs, Br) is specified for the first parameter word P1. These points define by 2 values (As and Bs) before scaling and 2 values (Ar and Br) after scaling.

The following equations are used for the conversion.

$$R = Bd - \frac{(Bd - Ad)}{BCD \text{ conversion of } (Bs - As)} \times BCD \text{ conversion of } (Bs - S)$$

Points A and B can define a line with either a positive or negative slope. Using a negative slope enables reverse scaling.

- The result will be rounded to the nearest integer. If the result is less than 0000, 0000 will be output as the result.
- If the result is greater than 9999, 9999 will be output.

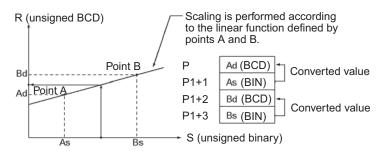


Hint

- SCL(194) can be used to scale the results of analog signal conversion values from Analog Input
 Units according to user-defined scale parameters. For example, if a 1 to 5-V input to an Analog Input
 Unit is input to memory as 0000 to 0FA0 hexadecimal, the value in memory can be scaled to 50 to
 200°C using SCL(194).
- SCL(194) converts unsigned binary to unsigned BCD. To convert a negative value, it will be necessary to first add the maximum negative value in the program before using SCL(194) (see example).
 - SCL(194) cannot output a negative value to the result word, R. If the result is a negative value, 0000 will be output to R.

Example Programming


In the following example, it is assume that an analog signal from 1 to 5 V is converted and input to D0 as 0000 to 0FA0 hexadecimal. SCL(194) is used to convert (scale) the value in CIO 200 to a value between 0 and 300 BCD.

When CIO 0.00 is ON, the contents of D0 is scaled using the linear function defined by point A (0000, 0000) and point B (0FA0, 0300). The coordinates of these points are contained in D100 to D103, and the result is output to D200.

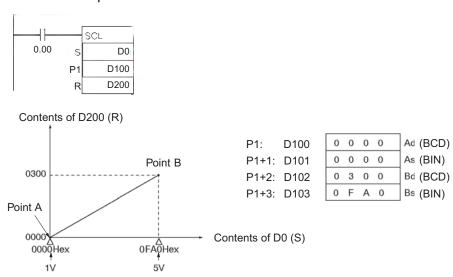

Reference:


An Analog Input Unit actually inputs values from FF38 to 1068 hexadecimal for 0.8 to 5.2 V. SCL(194), however, can handle only unsigned binary values between 0000 and FFFF hexadecimal, making it impossible to use SCL(194) directly to handle signed binary values below 1 V (0000 hexadecimal), i.e., FF38 to FFFF hexadecimal. In an actual application, it is thus necessary to add 00C8 hexadecimal to all values so that FF38 hexadecimal is represented as 0000 hexadecimal before using SCL(194), as shown in the following example.

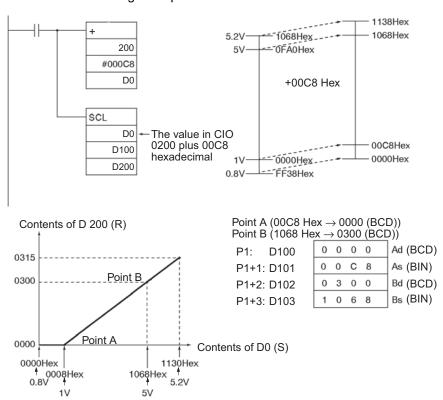


In this example, values from 0000 to 00C8 hexadecimal will be converted to negative values. SCL(194), however, can output only unsigned BCD values from 0000 to 9999, so 0000 BCD will be output whenever the contents of D0.00 is between 0000 and 00C8 hexadecimal.

Reverse Scaling

Reverse scaling can also be used by setting As < Bs and Ar > Br. The following relationship will result.

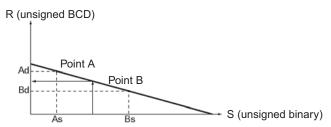


Reverse scaling can be used, for example, to convert (reverse scale) 1 to 5 V (0000 to 0FA0 hexadecimal) to 0300 to 0000, respectively, as shown in the following diagram.

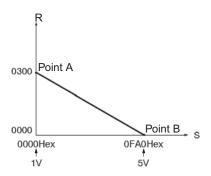

SCL₂

Instruction	Mnemonic	Variations	Function code	Function
SCALING 2	SCL2	@SCL2	486	Converts signed binary data into signed BCD data according to the specified linear function. An offset can be input in defining the linear function.

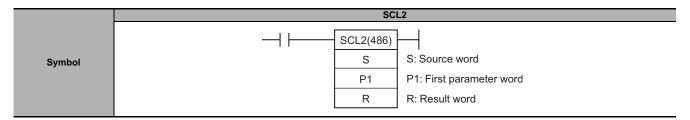


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word	INT	1
P1	First parameter word	WORD	3
R	Result word	WORD	1

P1: First Parameter Word

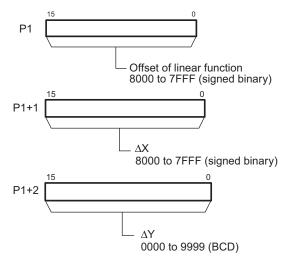

Note P1 to P1+2 must be in the same area.

Operand Specifications

Area		Word addresses							Word addresses Indirect DM/EM addresses Con-						Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits			
S												OK									
P1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK							
R												OK									

Flags

Name	Label	Operation
Error Flag	ER	 ON if the contents of C+1 (ΔX) is 0000. ON if the contents of C+2 (ΔY) is not BCD. OFF in all other cases.
Equals Flag	=	ON if the result is 0. OFF in all other cases.
Carry Flag	CY	ON if the result is negative. OFF if the result is zero or positive.

Function

SCL2(486) is used to convert the signed binary data contained in the source word S into signed BCD data (the BCD data contains the absolute value and the Carry Flag shows the sign) and place the result in the result word R according to the linear function defined by the slope (ΔX , ΔY) and an offset. The address of the first word containing ΔX , ΔY , and the offset is specified for the first parameter word P1. The sign of the result is indicated by the status of the Carry Flag (ON: negative, OFF: positive).


The following equations are used for the conversion.


$$R = \frac{\Delta Y}{BCD \text{ conversion of } \Delta X} \times ((BCD \text{ conversion of S}) - (BCD \text{ conversion of offset})$$

Note: The slope of the line is $\Delta Y/\Delta X$.

The offset and slope can be a positive value, 0, or a negative value. Using a negative slope enables reverse scaling.

- The result will be rounded to the nearest integer.
- The result in R will be the absolute BCD conversion value and the sign will be indicated by the Carry Flag. The result can thus be between –9999 and 9999.
- If the result is less than -9999, -9999 will be output as the result. If the result is greater than 9999, 9999 will be output.

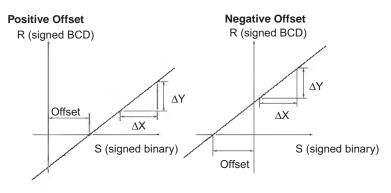

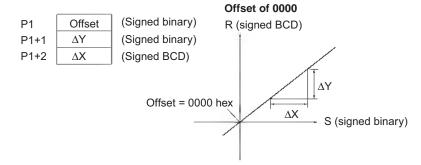

Hint


- SCL2(486) can be used to scale the results of analog signal conversion values from Analog Input
 Units according to user-defined scale parameters. For example, if a 1 to 5-V input to an Analog Input
 Unit is input to memory as 0000 to 0FA0 hexadecimal, the value in memory can be scaled to -100 to
 200°C using SCL2(486).
- SCL2(486) converts signed binary to signed BCD. Negative values can thus be handled directly for S.
 The result of scaling in R and the Carry Flag can also be used to output negative values for the scaling result.

Example Programming

Scaling 1 to 5-V Analog Input to 0 to 300

In the following example, it is assumed that an analog signal from 1 to 5 V is converted and input to CIO 205 as 0000 to 0FA0 hexadecimal. SCL2(486) is used to convert (scale) the value in CIO 205 to a value between 0000 and 0300 BCD.


When CIO 0.00 is ON, the contents of CIO 205 is scaled using the linear function defined by ΔX (0FA0), ΔY (0300), and the offset (0). These values are contained in D100 to D102, and the result is output to D200.

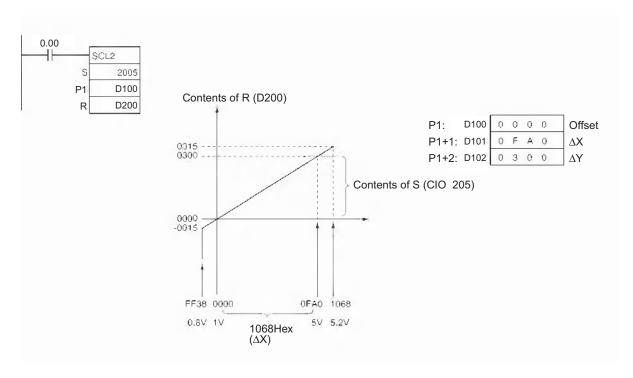

Scaling 1 to 5-V Analog Input to −200 to 200


In the following example, it is assume that an analog signal from 1 to 5 V is converted and input to CIO 2005 as 0000 to 0FA0 hexadecimal. SCL2(486) is used to convert (scale) the value in CIO 2005 to a value between -0200 and 0200 BCD.

When CIO 0.00 is ON, the contents of CIO 2005 is scaled using the linear function defined by ΔX (0FA0), ΔY (0400), and the offset (07D0). These values are contained in D100 to D102, and the result is output to D200.

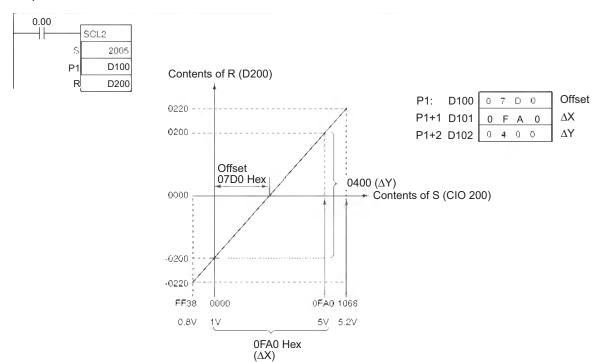

SCL3

Instruction	Mnemonic	Variations	Function code	Function
SCALING 3	SCL3	@SCL3	487	Converts signed BCD data into signed binary data according to the specified linear function. An offset can be input in defining the linear function.

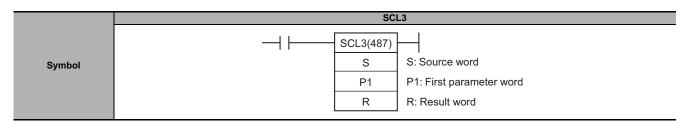


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
P1	First parameter word	WORD	5
R	Result word	INT	1

P1: First Parameter Word

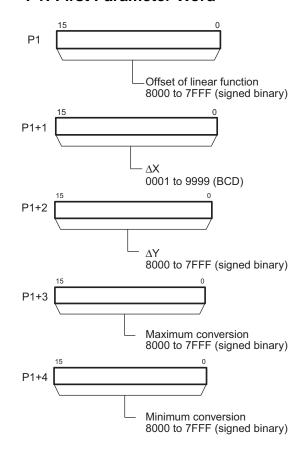

Note P1 to P1+4 must be in the same area.

Operand Specifications

Avan		Word addresses							Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S												OK						
P1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
R												OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if the contents of S is not BCD. ON if the contents of C+1 (ΔX) is not between 0001 and 9999 BCD. OFF in all other cases.
Equals Flag	=	ON if the result is 0. OFF in all other cases.
Negative Flag	N	ON when the MSB of the R (the result) is 1. OFF in all other cases.

Function

SCL3(487) is used to convert the signed BCD data (the BCD data contains the absolute value and the Carry Flag shows the sign) contained in the source word S into signed binary data and place the result in the result word R according to the linear function defined by the slope (ΔX , ΔY) and an offset. The maximum and minimum conversion values are also specified. The address of the first word containing ΔX , ΔY , the offset, the maximum conversion, and the minimum conversion is specified for the first parameter word P1.


The sign of the result is indicated by the status of the Carry Flag (ON: negative, OFF: positive). Use STC(040) and CLC(041) to turn the Carry Flag ON and OFF.

The following equations are used for the conversion.


$$R = \frac{\Delta Y}{Binary \ conversion \ of \ \Delta X} \ \times ((Binary \ conversion \ of \ S) + (Offset))$$

Note: The slope of the line is $\Delta Y/\Delta X$.

- The offset and slope can be a positive value, 0, or a negative value. Using a negative slope enables reverse scaling.
- The result will be rounded to the nearest integer.
- The source value in S is treated as an absolute BCD value and the sign is indicated by the Carry Flag. The source value can thus be between –9999 and 9999.
- If the result is less than the minimum conversion value, the minimum conversion value will be output
 as the result. If the result is greater than the maximum conversion value, the maximum conversion
 value will be output.

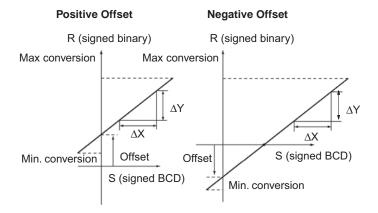

Offset of 0000

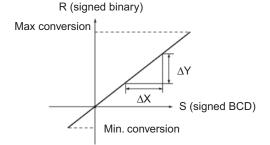


Hint

SCL3(487) is used to convert data using a user-defined scale to signed binary for Analog Output Units. For example, SCL3(487) can convert 0 to 200 °C to 0000 to 0FA0 (hex) and output an analog output signal 1 to 5 V from the Analog Output Unit.


Example Programming

When a value from 0 to 200 is scaled to an analog signal (1 to 5 V, for example), a signed BCD value of 0000 to 0200 is converted (scaled) to signed binary value of 0000 to 0FA0 for an Analog Output Unit. When CIO 0.00 turns ON in the following example, the contents of D0 is scaled using the linear function defined by ΔX (0200), ΔY (0FA0), and the offset (0). These values are contained in D100 to D102. The sign of the BCD value in D0 is indicated by the Carry Flag. The result is output to CIO 2011.

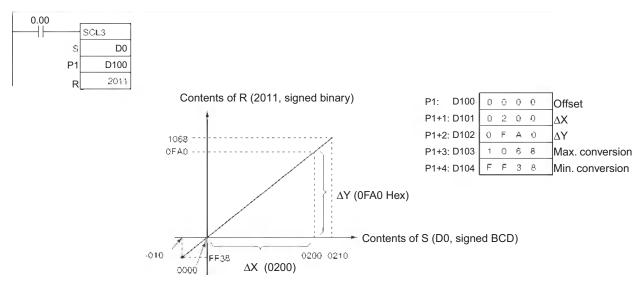

AVG

Instruction	Mnemonic	Variations	Function code	Function		
AVERAGE	AVG		195	Calculates the average value of an input word for the specified number of cycles.		

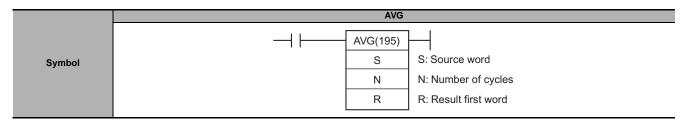

Applicable Program Areas

Area	Function block definitions Block program		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	ОК	OK	OK	OK	OK	OK		


Operands

Operand	Description	Data type	Size
S	Source word	UINT	1
N	Number of cycles	UINT	1
R	Result first word	UINT	Variable

N: Number of Cycles

The number of cycles must be between 0001 and 0040 hexadecimal (0 to 64 cycles).

R: Result First Word and R+1: First Work Area Word

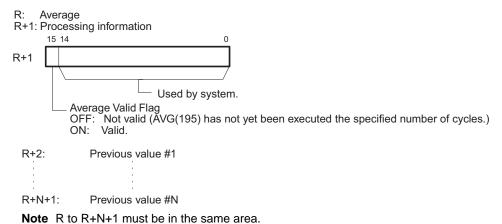

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR		
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits		
S, N	ОК	ОК	ок	ОК	OK	ОК	ОК	ОК	ОК	ок ок	OK	ок ок	OK	OK		OK				
R			OK	OK	5	OK	OK	. OR		OK			-		OK					

Flags

Name	Label	Operation						
Error Flag	ER	ON if the contents of N is 0. OFF in all other cases.						

Function


For the first N-1 cycles when the execution condition is ON, AVG(195) writes the values of S in order to words starting with R+2. The Previous Value Pointer (bits 00 to 07 of R+1) is incremented each time a value is written. Until the Nth value is written, the contents of S will be output unchanged to R and the Average Value Flag (bit 15 of R+1) will remain OFF.

When the Nth value is written to R+N+1, the average of all the values that have been stored will be computed, the average will be output to R as an unsigned binary value, and the Average Value Flag (bit 15 of R+1) will be turned ON. For all further cycles, the value in R will be updated for the most current N values of S.

The maximum value of N is 64. If a value greater than 64 is specified, operation will use a value of 64.

The Previous Value Pointer will be reset to 0 after N-1 values have been written.

The average value output to R will be rounded to the nearest integer.

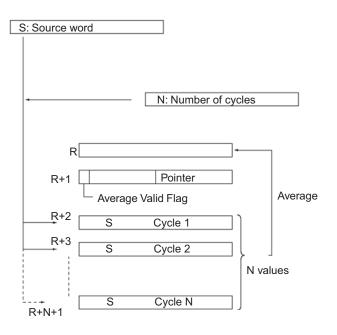


Precautions

The processing information (R+1) is cleared to 0000 each time the execution condition changes from OFF to ON.


But the processing information (R+1) will not be cleared to 0000 the first time the program is executed at the start of operation. If AVG(195) is to be executed in the first program scan, clear the First Work Area Word from the program.


Example Programming

When CIO 0.00 is ON in the following example, the contents of D100 will be stored one time each scan for the number of scans specified in D200. The contents will be stored in order in the ten words from CIO 302 to CIO 311. The average of the contents of these ten words will be placed in CIO 300 and then bit 15 of CIO 301 will be turned ON.

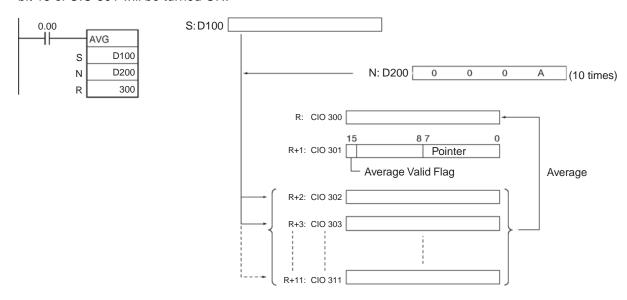

- In the following example, the content of CIO 40 is set to #0000 and then incremented by 1 each cycle.
- For the first two cycles, AVG(195) moves the content of CIO 40 to D1002 and D1003. The contents of D1001 will also change (which can be used to confirm that the results of AVG(195) has changed).
- On the third and later cycles AVG(195) calculates the average value of the contents of D1002 to D1004 and writes that average value to D1000.

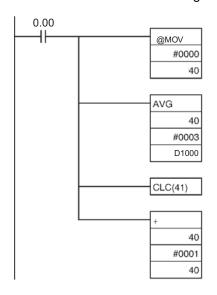

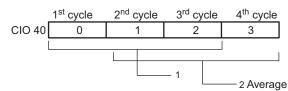

D1000	0	1	1	2
D1001	1	2	8000	8001
D1002	0	0	0	3
D1003		1	1	1
D1004			2	2

Average Pointer

3 previous values of IR 40

Subroutines

Subroutine instruction

In the CS/CJ Series, function blocks and subroutines can be used as a means of structuring programs.

The advantages and disadvantages of each are as follows:

• Differences between function blocks and subroutines

	Function blocks	Subroutines				
Unit versions of CPU Units that can be used	CS1-H, CJ1-H, CJ1M CPU Units: Unit version 3.0 or later CJ2 CPU Units: All unit versions	All unit versions				
Process names	Instance names can be assigned.	Names cannot be assigned				
Clarification of input and output	Clarification as FB input variable or output variable is possible	Clarification is not possible				
Variable names	Names can be assigned to variables	Variable names can be assigned				
Internal variables	Yes When instance names are the same, the same variable is accessed. When instance names are different, different variables are accessed. As such, data can be stored separately for each call (instance) in a function block. Using timers in function blocks does not result in duplicated use.	No All subroutines are accessed using the same variables. For this reason, data cannot be stored separately for each call in a subroutine. If timers are used in a subroutine, duplicated timer use will result.				
Program writing method	Variable programming by ladder or ST language	Address programming by ladder				
Indication by diagram	Processing content and input/output parameters are easier to understand (visibility can be heightened) Control of heater A Processing content can be clarified Control of heater A Present radius read (BOOL) EN Control of heater A Present value read (BOOL) Input/output parameters can be clarified Lorent number Control of heater A Present value read (BOOL) Present value read (BOOL) Set value D100 Lorent number Lorent number Lorent number Lorent number D100 Lorent number D100 Lorent number Lorent number D100 Lorent number D100 Lorent number D100 Lorent number Lorent number D100 Lorent number D100 Lorent number D100 Lorent number D100 Lorent number Lorent num	Address programming by ladder Input/output parameters cannot be clarified MOV &10 Temperature control number MOV D1 Set value SBS 10 Wov Current temperature D100 MOV &11 Temperature control number MOV 2 Set value SBS 10 MOV Current temperature D102				
Protection	Read protect can be set for each function block (Supported from CX-Programmer 6.1)	No protect function				
Storing	Can be stored by function block	Storing is not possible by subroutine.				


The subroutine function has two types of subroutines: regular subroutines and global subroutines. The differences between the two types are as follows.

• Differences between regular subroutines and global subroutines

	Regular subroutines	Global subroutines
Functions	A subroutine within the same task can be called. For example, a subroutine in task 0 cannot be called from task 1.	Global subroutines can be called from all tasks. A subroutine in interrupt task 0 can be called from any task.
Combined-use instructions	SBS (subroutine call) instruction SBN (subroutine entry) instruction RET (subroutine return) instruction	GSBS (global subroutine call) instruction GSBN (global subroutine entry) instruction GRET (global subroutine return) instruction
Entry in subroutine program	Entered at the end of the task that uses the subroutine (before the END instruction).	Entered at the end of interrupt task 0 (before the END instruction).

SBS

Instruction	Mnemonic	Variations	Function code	Function				
SUBROUTINE CALL	SBS	@SBS	091	Calls the subroutine with the specified subroutine number and executes that program.				

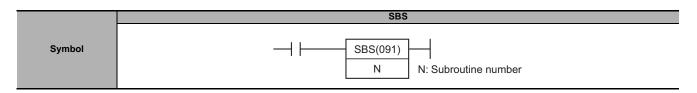

Applicable Program Areas

Area	Function block definitions Block program areas		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	OK	OK	OK	Not allowed

Operands

Operand	Description	Data type	Size
N	Subroutine number		1

N: Subroutine number

Specifies the subroutine number between 0 and 1023 decimal.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the subroutine number must be between the range &0 to &255 decimal.

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits
N											OK							

Combined-use instructions

SBN (subroutine entry) instructions and RET (subroutine return) instructions


Flags

Name	Label	Operation
Error Flag	ER	 ON if nesting exceeds 16 levels. ON if the specified subroutine number does not exist. ON if a subroutine calls itself. ON if a subroutine being executed is called. ON if the specified subroutine is not defined in the current task. OFF in all other cases.


Function


SBS(091) calls the subroutine with the specified subroutine number. The subroutine is the program section between SBN(092) and RET(093). When the subroutine is completed, program execution continues with the next instruction after SBS(091).

A subroutine can be called more than once in a program.

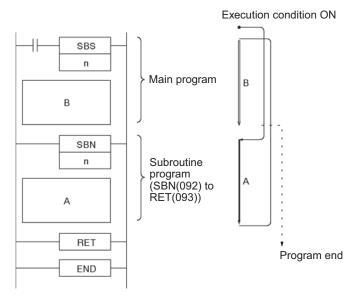

Subroutines can be nested up to 16 levels. Nesting is when another subroutine is called from within a subroutine program, such as shown in the following example, which is nested to 3 levels.

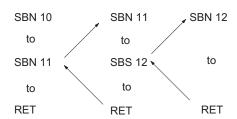


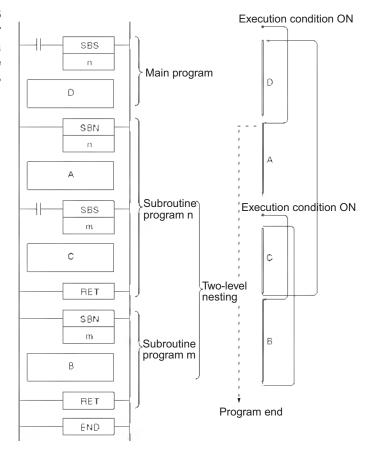


Precautions

- The subroutine number must be unique for each subroutine. You cannot use the same number for more than one subroutine.
- Each subroutine must have a unique subroutine number. Do not use the same subroutine number for more than one subroutine.
- Observe the following precautions when using differentiated instructions (DIFU(013), DIFD(014), or up/down differentiated instructions) in subroutines.
 - operation of differentiated The instructions in a subroutine is unpredictable if a subroutine is executed more than once in the same cycle. In the following example, subroutine 1 is executed when CIO 0.00 is ON 1.00 is turned ON by and CIO DIFU(013) when CIO 0.01 has gone from OFF to ON. If CIO 0.01 is ON in the same cycle, subroutine 1 will be executed again but this time DIFU(013) will turn CIO 1.00 OFF without checking the status of CIO 0.01.
 - In contrast, a differentiated instruction (UP, DOWN, DIFU(013) or DIFD(014)) would maintain the ON status if the instruction was executed and the output was turned ON but the same subroutine was not called a second time.
 - In the following example, subroutine


 is executed if CIO 0.00 is ON.
 Output CIO 1.00 is turned ON by DIFU(013) when CIO 0.01 has gone from OFF to ON. If CIO 0.00 is OFF in the following cycle, subroutine 1 will not be executed again and output CIO 1.00 will remain ON
 - SBS(091) will be treated as NOP(000) when it is within a program section interlocked by IL(002) and ILC(003).

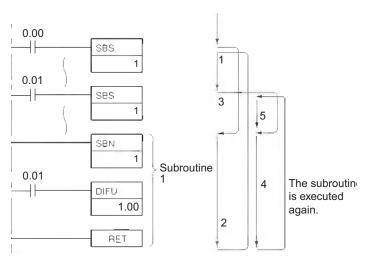

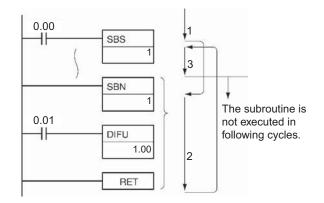


Example Programming

• Sequential (Non-nested) Subroutines

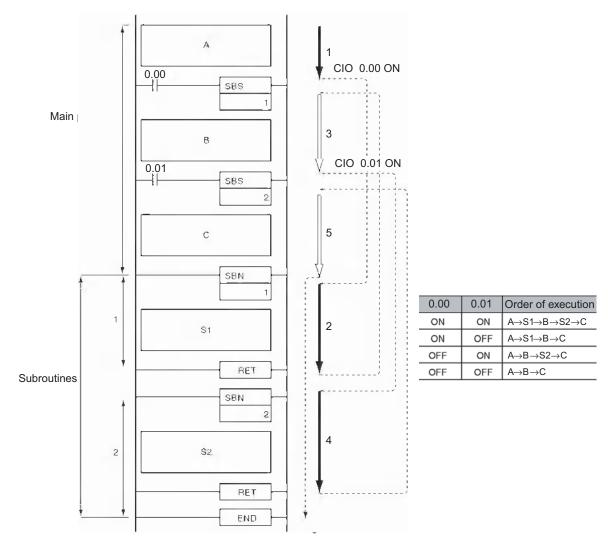


When CIO 0.00 is ON in the following example, subroutine 1 is executed and program execution returns to the next instruction after SBS(091) 1. When CIO 0.01 is ON, subroutine 2 is executed and program execution returns to the next instruction after SBS(091) 2.

Nested Subroutines

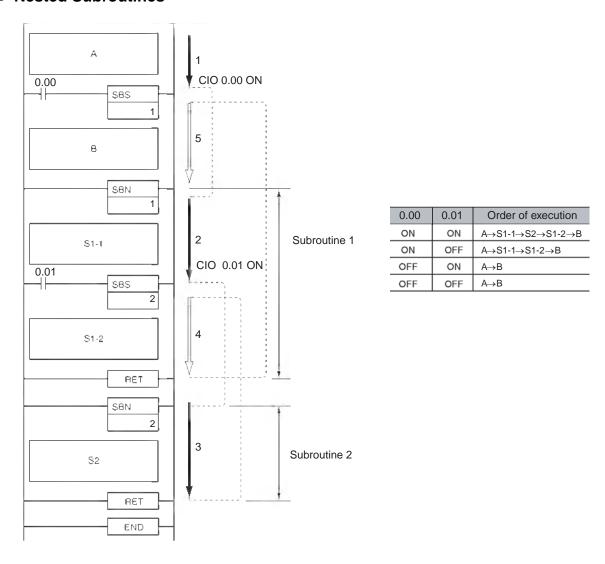

When CIO 0.00 is ON in the following example, subroutine 1 is executed. If CIO 0.01 is ON, subroutine 2 is executed from within subroutine 1 and program execution returns to the next instruction after SBS(091) 2 when subroutine 2 is completed. Execution of subroutine 1 continues and program execution returns to the next instruction after SBS(091) 1 when subroutine 1 is completed.

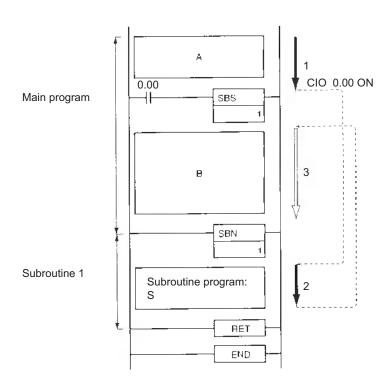


When CIO 0.00 is ON in the following example, subroutine 1 is executed and program execution returns to the next instruction after SBS(091). The remainder of the main program (through the instruction just before SBN(092) 1) is then executed.

0.00	Order of execution
ON	$A \rightarrow S \rightarrow B$
OFF	A→B

MCRO

Instruction	Mnemonic	Variations	Function code	Function
MACRO	MCRO	@MCRO	099	Calls the subroutine with the specified subroutine number and executes that program using the input parameters in S to S+3 and the output parameters in D to D+3.

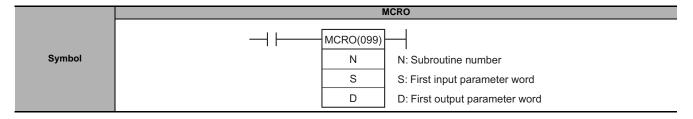

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	OK	OK	OK	Not allowed

Operands

Operand	Description	Data type	Size
N	Subroutine number		1
S	First input parameter word		4
D	First output parameter word		4

N: Subroutine number

Specifies the subroutine number between 0 and 1023 decimal.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the subroutine number must be between the range 0 to 255 decimal.

Operand Specifications

Area		Word addresses Indirect DM/EM addresses Con- Registers Flags						l i Rec		ıgs	Pulse	TR						
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											OK							
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК				ОК				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Combined-use instructions

SBN (subroutine entry) instructions and RET (subroutine return) instructions

Flags

Name	Label	Operation
Error Flag	ER	ON if nesting exceeds 16 levels. ON if the specified subroutine number does not exist. ON if a subroutine calls itself. ON if a subroutine being executed is called. ON if the specified subroutine is not defined in the current task. OFF in all other cases.


Related Auxiliary Area Words and Bits

Name	Address	Operation
Macro area input words	A600 to A603	When MCRO(099) is executed the four words from S to S+3 are copied to A600 to A603. These input words are passed to the subroutine.
Macro area output words	A604 to A607	After the subroutine specified in MCRO(099) has been executed, the output data in these output words are copied to D to D+3.

Function

MCRO(099) calls the subroutine with the specified subroutine number just like SBS(091). Unlike SBS(091), MCRO(099) operands S and D can be used to change bit and word addresses in the subroutine, although the structure of the subroutine is constant.

When MCRO(099) is executed, the contents of S through S+3 are copied to A600 through A603 (macro area inputs) and the specified subroutine is executed. When the subroutine is completed, the contents of A604 through A607 (macro area outputs) are copied to D through D+3 and program execution continues with the next instruction after MCRO(099).

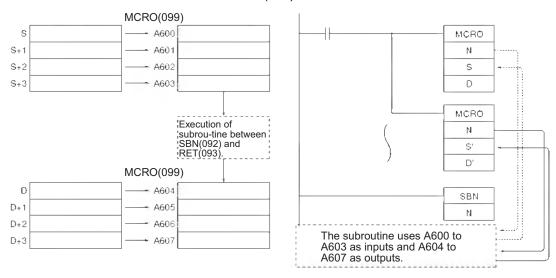

Hint

When MCRO(099) is executed, the specified input and output data is transferred to the specified subroutine.

MCRO(099) can be used to consolidate two or more subroutines with the same structure but different input and output addresses into a single subroutine program.

However, only subroutines that differ by address but are otherwise exactly the same can be consolidated by a MCRO (macro) instruction.

Precautions

- The four words of input data (words or bits) in A600 to A603 and the four words of output data (words
 or bits) in A604 to A607 must be used in the subroutine called by MCRO(099). It is not possible to
 pass more than four words of data.
- It is possible to nest MCRO(099) instructions, but the data in the macro area input and output words (A600 to A607) must be saved before calling another subroutine because all MCRO(099) instructions use the same 8 words.
- When a MCRO instruction is used in an interrupt task, there is a possibility that the input words (A600 to A603C) and output words (A604 to A607CH) will be overwritten. For this reason, programming to save the data is necessary.

Example Programming


MCRC

0.00


| (Equivalent)

When CIO 0.00 is ON in the following example, two MCRO(099) instructions pass different input and output data to subroutine 1.

- The first MCRO(099) instruction passes the input data in CIO 100 to CIO 103 and executes the subroutine. When the subroutine is completed, the output data is stored in CIO 300 to CIO 303.
- 2. The second MCRO(099) instruction passes the input data in CIO 200 to CIO 203 and executes the subroutine. When the subroutine is completed, the output data is stored in CIO 400 to CIO 403.

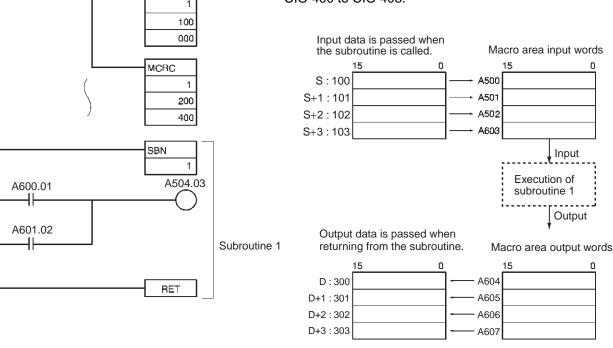


The second MCRO(099) instruction operates in the same way, but the input data in CIO 200 to CIO 203 is passed to A600 to A603 and the output data in A604 to A607 is passed to CIO 400 to CIO 403.

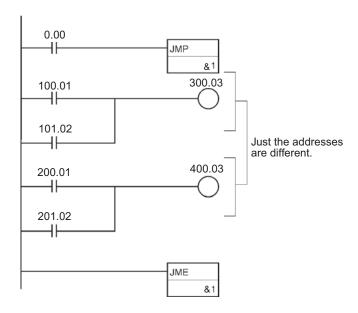

SBN/RET

Instruction	Mnemonic	Variations	Function code	Function
SUBROUTINE ENTRY	SBN		092	Indicates the beginning of the subroutine program with the specified subroutine number.
SUBROUTINE RETURN	RET		093	Indicates the end of a subroutine program.

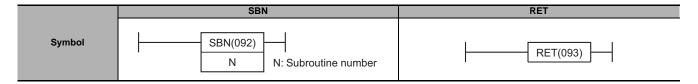

Applicable Program Areas

• SBN

Area	Function block definitions	Block program areas	Step program areas Subroutines		Interrupt tasks	SFC action or transition programs
Usage	Not allowed	Not allowed	Not allowed	Not allowed	OK	Not allowed
• RF	Т					

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	Not allowed	Not allowed	ОК	OK	Not allowed

Operands

Operand	Description	Description Data type	
Operand	Description	SBN	Size
N	Subroutine number		1

SBN

N: Subroutine number

Specifies the subroutine number between 0 and 1023 decimal.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the subroutine number must be between the range 0 to 255 decimal.

Operand Specifications

Δ=	Area			W	ord ad	dresse	s			Indirect addre		Con-	Registers		ers	Flags		Pulse	TR
All	ea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
SBN	N											OK							

Combined-use instructions

SBS (subroutine call) instruction or MCRO (macro) instruction

les

Flags

SBN/RET


There are no flags affected by this instruction.

Function

SBN

SBN(092) indicates the beginning of the subroutine with the specified subroutine number. The end of the subroutine is indicated by RET(093).

The region of the program beginning at the first SBN(092) instruction is the subroutine region. A subroutine is executed only when it has been called by SBS(091) or MCRO(099).

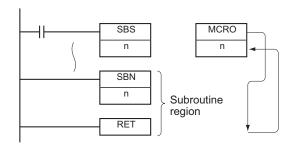


RET


When program execution reaches RET(093), it is automatically returned to the next instruction after the SBS(091) or MCRO(099) instruction that called the subroutine. When the subroutine has been called by MCRO(099), the output data in A604 through A607 is written to D through D+3 before program execution is returned.

Precautions


• Place the subroutine program area (SBN(092) to RET(093)) in the same task as the SBS(091) or MCRO(099) instruction of the same number. Subroutines in other tasks cannot be called.

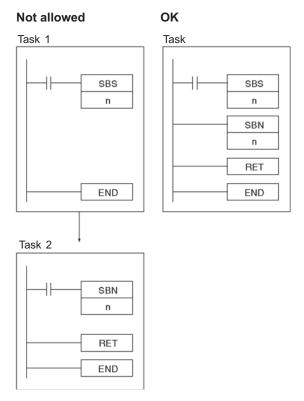

• The step instructions, STEP(008) and SNXT(009) cannot be used in subroutines.

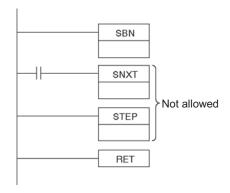


• Place the subroutines after the main program and just before the END(001) instruction in the program for each task. If part of the main program is placed after the subroutine region, that program section will be ignored.

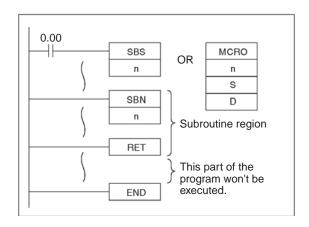

Note: The input method for the subroutine number, N, is different for the CX-Programmer and a Programming Console. Input #0 to #1023 on the CX-Programmer and 0000 to 1023 on a Programming Console.


Example Programming

When CIO 0.00 is ON in the following example, subroutine 10 is executed and program execution returns to the next instruction after the SBS(091) or MCRO(099) instruction that called the subroutine.

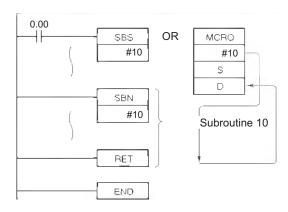

GSBS

Instruction	Mnemonic	Variations	Function code	Function
GLOBAL SUBROUTINE CALL	GSBS	@GSBS	750	Calls the global subroutine with the specified subroutine number and executes that program.

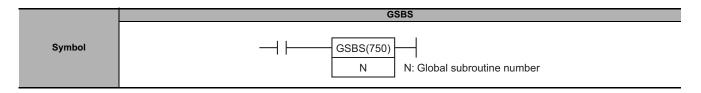

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	OK	OK	OK	Not allowed

Operands

Operand	Description	Data type	Size
Орегани	Description	SBN	Size
N	Global subroutine number		1

N: Subroutine number

Specifies the subroutine number between 0 and 1023 decimal.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the subroutine number must be between the range 0 to 255 decimal.

Note Global subroutine numbers and regular subroutine numbers (SBS instructions and MCRO instruction operands) are shared (do not use the same number for a global subroutine and a regular subroutine).

Operand Specifications

	Area			W	ord ad	dresse	s			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
,	N											OK							

Combined-use instructions

GSBS(750) is used in combination with GSBN(751) and GRET(752), the GLOBAL SUBROUTINE ENTRY and GLOBAL SUBROUTINE RETURN instructions.

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if nesting exceeds 16 levels (counting both regular and global subroutines). ON if the specified global subroutine does not exist. ON if a global subroutine calls itself. ON if a global subroutine being executed is called. ON if the specified subroutine is not defined in interrupt task 0. OFF in all other cases.

Function


GSBS(750) calls the global subroutine with the specified global subroutine number. The global subroutine is the program section between GSBN(751) and GRET(752). When the global subroutine is completed, program execution continues with the next instruction after GSBS(750).

The same global subroutine region (GSBN(751) to GRET(752)) can be called more than once.


This instruction can be written into multiple tasks with the same global subroutine number to call that program from the different tasks. The program can be modularized by making global subroutines into standard subroutines that are common to many tasks.

The global subroutine region (between GSBN(751) and GRET(752)) must be defined in interrupt task 0. If it is defined in another task, an error will occur and the Error Flag will be turned ON when the GSBS(750) instruction is executed.

The GSBS(750) instruction can be written in both cyclic tasks (including extra cyclic tasks) and interrupt tasks.

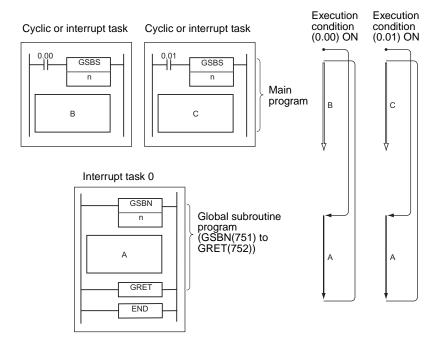


Multiple global subroutine regions (GSBN(751) to GRET(752)) can be defined in interrupt task 0.

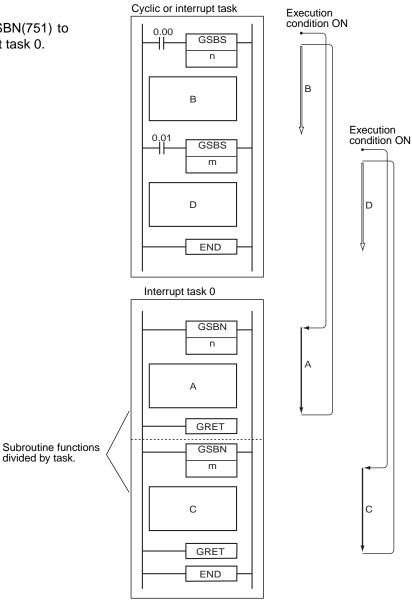

An SBS(091) or GSBS(750) instruction can be written within a subroutine region (SBN(092) to RET(093)) or global subroutine region (GSBN(751) to GRET(752)) to "nest" subroutines. Subroutines can be nested up to 16 levels.

Interrupt task 0

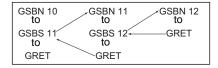


Precautions

The regular SUBROUTINE CALL instruction, SBS(091), cannot call a global subroutine region (GSBN(751) to GRET(752)).

GSBS(750) will not be executed when it is within a program section interlocked by IL(002) and ILC(003), so interlocks are not allowed within global subroutine regions.


• Observe the following precautions when using differentiated instructions (UP, DOWN, DIFU(013), DIFD(014), or up/down differentiated instructions) in subroutines.

The operation of differentiated instructions in a global subroutine is unpredictable if a subroutine is executed more than once in the same cycle. In the following example, global subroutine 1 is executed when CIO 0.00 is ON and CIO 1.00 is turned ON by DIFU(013) when CIO 0.01 has gone from OFF to ON. If CIO 0.01 is ON in the same cycle, global subroutine 1 will be executed again but this time DIFU(013) will not detect the rising edge of CIO 0.01 and CIO 1.00 will be turned OFF.

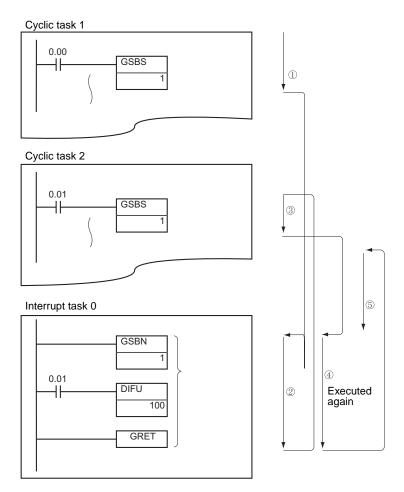


• In contrast, the output of a differentiated instruction (DIFU(013) or DIFD(014)) would remain ON if the instruction was executed and the output was turned ON but the same global subroutine was not called a second time.

In the following example, global subroutine 1 is executed if CIO 0.00 is ON. Output CIO 1.00 is turned ON by DIFU(013) when CIO 0.01 has gone from OFF to ON. If CIO 0.00 is OFF in the following cycle, subroutine 1 will not be executed again and output CIO 1.00 will remain ON.

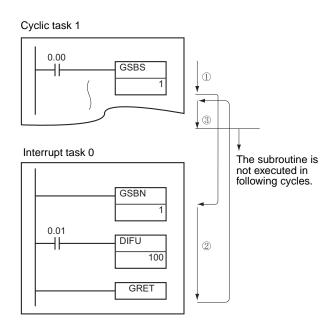

Example Programming

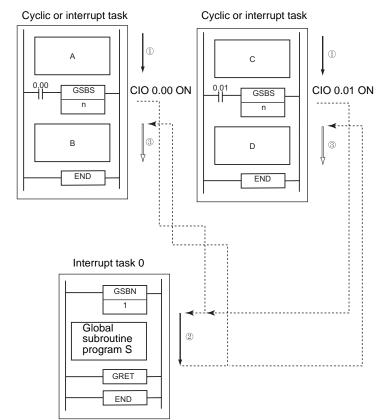


When CIO 0.00 is ON in the following example, global subroutine 1 is executed and program execution returns to the next instruction after GSBS(750).

Status of CIO 0.00	Order of program execution
ON	$A\toS\toB$
OFF	$A \rightarrow B$

When CIO 0.01 is ON in the following example, global subroutine 1 is executed and program execution returns to the next instruction after GSBS(750).


Status of CIO 0.01	Order of program execution
ON	$C\toS\toD$
OFF	$C \to D$

Two or more global subroutine programs can be programmed in interrupt task 0. In this case, interrupt task 0 can be divided and used as the subroutine function's task.

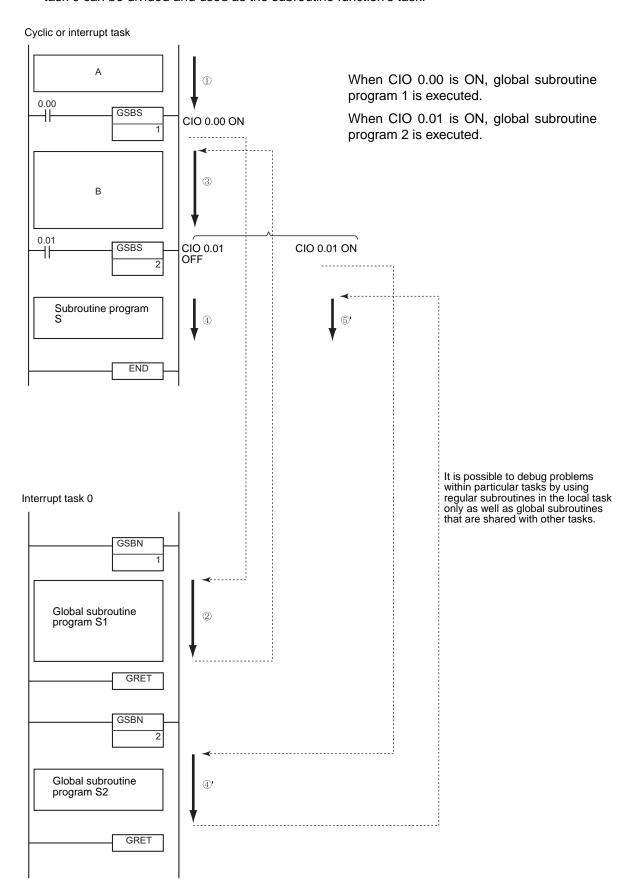

GSBN/GRET

Instruction	Mnemonic	Variations	Function code	Function
GLOBAL SUBROUTINE ENTRY	GSBN		751	Indicates the beginning of the global subroutine program with the specified subroutine number.
GLOBAL SUBROUTINE RETURN	GRET		752	Indicates the end of a subroutine program.

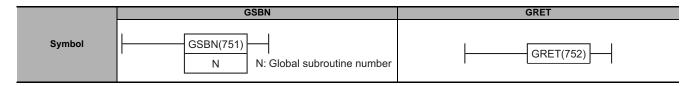

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	Not allowed	Not allowed	Not allowed	OK	Not allowed

Operands

Operand	Description	Data type	Size
Operanu	Description	GSBN	Size
N	Global subroutine number		1

N: Subroutine number

Specifies the subroutine number between 0 and 1023 decimal.

Note For CJ1M-CPU11 and CJ1M-CPU21 CPU Units, the subroutine number must be between the range 0 to 255 decimal.

Operand Specifications

	Area			W	ord ad	dresse	s			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR
	Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
-	N											OK							

Combined-use instructions

GSBN/GRET

GSBN(751) and GRET(752) are used in combination with GSBS(750), the GLOBAL SUBROUTINE CALL.

Flag

GSBN/GRET

There are no flags affected by this instruction.

Function


GSBN

GSBN(751) indicates the beginning of the global subroutine with the specified subroutine number.

The region of the program beginning at the first GSBN(751) instruction is the subroutine region. A subroutine is executed only when it has been called by GSBS(750).


GRET

GRET(752) indicates the end of a global subroutine. When program execution reaches GRET(752) it is automatically returned to the next instruction after the GSBS(750) instruction that called the global subroutine.

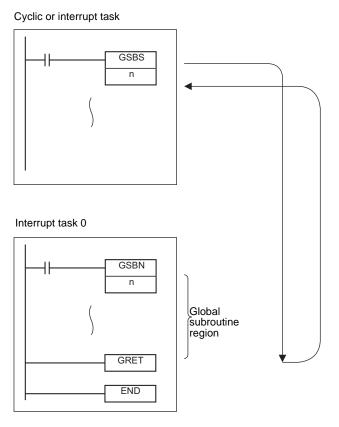


Precautions

• Always place the global subroutines in interrupt task 0.

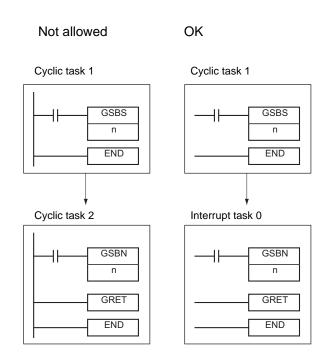


 The step instructions, STEP(008) and SNXT(009) cannot be used in global subroutines.

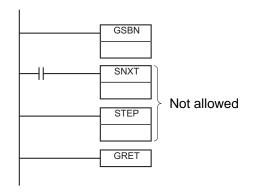

 Place the global subroutine region (GSBN(751) to GRET(752)) in interrupt task 0 just before the END(001) instruction. When two or more global subroutines are being used, group them together in interrupt task 0 after the end of the main program. If part of the main program is placed after the global subroutine region, that program section will be ignored.

Interrupt task 0

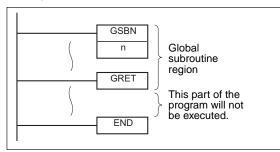


Note: The input method for the global subroutine number, N, is different for the CX-Programmer and a Programming Console. Input #0 to #1023 on the CX-Programmer and 0 to 1023 on a Programming Console.

Example Programming

When CIO 0.00 is ON in the following example, global subroutine 10 is executed and program execution returns to the next instruction after the GSBS(750) instruction that called the subroutine.

Cyclic or interrupt task

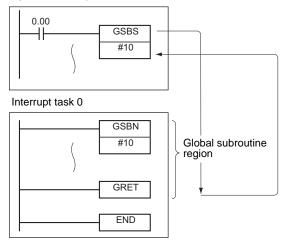

Interrupt Control Instructions

Interrupt Control Instructions

The CS/CJ-series CPU Units support the following interrupts.

Туре	Execution condition	Setting procedure
I/O Interrupts	Interrupt input from the Interrupt Input Unit on the CPU Rack turns ON/OFF.	Use the MSKS instruction to assign inputs from Interrupt Input Units on the CPU Rack.
Scheduled Interrupts	Scheduled (fixed intervals)	Use the MSKS instruction to set the interrupt interval. See Scheduled Interrupt Time Units in PLC Setup.
Power OFF Interrupt	When power turns OFF (After the default power OFF detection time + power OFF detection delay time)	See Power OFF Interrupt Task and Power OFF Detection Delay Time in PLC Setup.
External Interrupts	When requested by an Special I/O Unit or CPU Bus Unit on the CPU Rack or by an Inner Board (CS Series only)	The interrupt conditions and interrupt task numbers are specified in the settings for Special I/O Units, CPU Bus Units, and Inner Boards that support interrupts. MSKS(690) is not used.
Input Interrupts	When interrupt inputs built into the CPU Unit turn ON or OFF (CJ2M-CPU□□ with CJ2M-MD21□ Pulse I/O Module mounted or CJ1M-CPU2□ Only)	Use the MSKS(690) instruction to assign built-in inputs as interrupt inputs.
High-speed Counter Interrupts	When high-speed counter inputs built into the CPU Unit meet conditions for target-value comparison or range comparison (CJ2M-CPU□□ with CJ2M-MD21□ Pulse I/O Module mounted or CJ1M-CPU2□ Only)	Use the CTBL (COMPARISON TABLE LOAD) instruction to specify the target value and interrupt task number. MSKS(690) cannot be used.

Outline of Interrupt Control Instructions

• SET INTERRUPT MASK: MSKS(690)

I/O interrupts, input interrupts, and scheduled interrupts are masked (disabled) when the PLC enters RUN mode. MSKS(690) can be used to unmask or mask interrupt inputs for I/O interrupts/input interrupts and to start/stop the internal timers for scheduled interrupts.

CLEAR INTERRUPT: CLI(691)

CLI(691) clears or retains recorded interrupt inputs for I/O interrupts/input interrupts or sets the time to the first scheduled interrupt for scheduled interrupts. It also clears or retains causes of high-speed counter interrupts for CJ1M and CJ2M CPU Units.

READ INTERRUPT MASK: MSKR(692)

MSKR(692) reads the current interrupt processing settings that were set with MSKS(690).

DISABLE INTERRUPTS: DI(693)

Temporarily disables execution of all interrupt tasks except the power OFF interrupt. All interrupt causes that occur while interrupts are disabled will be recorded.

ENABLE INTERRUPTS: EI(694)

Enables execution of all interrupt tasks (excluding power OFF interrupt task) that were disabled with DI(693). If interrupt causes were recorded while interrupts were disabled, the corresponding interrupt tasks are executed.

Precautions in Using Interrupt Tasks

Precautions for All Interrupts

When IORF(097), FIORF(225), IORD(222), or IOWR(223) is being executed within an interrupt task
to refresh I/O in a Special I/O Unit, cyclic refreshing with that Special I/O Unit must be disabled in the
PLC Setup.

If cyclic refreshing with the Special I/O Unit is enabled in the PLC Setup and one of the following operations occurs during an interrupt task, a non-fatal Duplicate Refresh Error will occur and the Interrupt Task Error Flag (A402.13) will be turned ON.

- I/O refreshing is performed for the same Special I/O Unit by IORF(097) or FIORF(225).
- The same Special I/O Unit's data area is read by IORD(222) or written by IOWR(223).
- When using a CS-series PLC, be sure that the interrupt task does not require more than 10 ms if a C200H Special I/O Unit is mounted or SYSMAC BUS Remote I/O Slave Rack is connected. If an interrupt task longer than 10 ms is executed during I/O refreshing with the Special I/O Unit or Slave Rack, a non-fatal will occur and the Interrupt Task Error Flag (A40213) will be turned ON.

Precautions for I/O Interrupts

- Only interrupt inputs from CS/CJ-series Interrupt Input Units and C200H Interrupt Input Units are supported as causes to trigger I/O interrupt tasks. Interrupt inputs from Inner Boards and Special I/O Units are not supported.
- Interrupt Input Units must be mounted in one of the following slots on the CPU Rack. I/O interrupt tasks will not be executed if the Interrupt Input Unit is mounted in any other slot.
 - CJ2 CPU Units

CJ2H-CPU6□-EIP: Slots 0 to 3
CJ2H-CPU6□: Slots 0 to 4

CJ2M CPU Units: Slots 0 to 4
CJ1H CPU Units: Slots 0 to 3
CJ1M CPU Units: Slots 0 to 2

- Words are allocated to Interrupt Input Units in the order that they are mounted from left to right.
- The CS1W-INT01 and the C200HS-INT01 cannot be used at the same time.
- All interrupt inputs that have been detected will be cleared when the interrupt mask is cleared.
- Furthermore, the recorded interrupt cause is not cleared until the corresponding interrupt task has been completed, so a new interrupt input will be ignored if it is received while the corresponding interrupt task is being executed.

Precautions for Scheduled Interrupts

- Be sure that the scheduled interrupt set time interval is longer than the time required to execute the scheduled interrupt task.
- For scheduled interrupts, MSKS(690) is used only to set the scheduled interrupt interval and does not set the time to the first scheduled interrupt. To accurately control the time to the first scheduled interrupt, program CLI(691) to set the time to the first scheduled interrupt just before programming MSKS(690). If MSKS(690) is used to restart a scheduled interrupt for a CJ1M or CJ2M CPU Unit, however, the time to the first scheduled interrupt will be accurate even if CLI(691) is not used.
- The time unit for the scheduled interrupt is set in the PLC Setup as the Scheduled Interrupt Interval.
- Scheduled interrupt tasks cannot be used for CJ2H CPU Units if synchronous unit operation is being used.

Related Memory Area Words

Name	Address	Operation
Maximum Interrupt Task Processing Time	A440	The maximum processing time for an interrupt task is stored in binary data in 0.1-ms units and is cleared at the start of operation.
Interrupt Task with Maximum Processing Time	A441	The interrupt task number with maximum processing time is stored in binary data. Here, 8000 to 80FF Hex correspond to task numbers 00 to FF Hex. A441.15 will turn ON when the first interrupt occurs after the start of operation. The maximum processing time for subsequent interrupt tasks will be stored in the rightmost two digits in hexadecimal and will be cleared at the start of operation.
Interrupt Task Error Flag Duplicate Refresh Error Flag	A402.13	 ON in the following cases: An interrupt task longer than 10 ms was executed during I/O refreshing with a C200H Special I/O Unit or Remote I/O Slave Rack. (CS Series only) Interrupt Task Error Detection is enabled in the PLC Setup, and one of the following conditions occurs for the same Special I/O Unit. There is a conflict between an IORF(097), FIORF(225), IORD(222), or IOWR(223) instruction executed in the interrupt task and an IORF(097), FIORF(225), IORD(222), or IOWR(223) instruction executed in the cyclic task. There is a conflict between an IORF(097), FIORF(225), IORD(222), or IOWR(223) instruction executed in the interrupt task and the CPU Unit's I/O refreshing (END refreshing). Note When a Special I/O Unit's Cyclic Refreshing is enabled in the PLC Setup, and an IORF(097), FIORF(225) (CJ1-H-R and CJ2 only), IORD(222), or IOWR(223) instruction is executed for the same Special I/O Unit, there will be duplicate refreshing and an Interrupt Task Error will occur.
Interrupt Task Error Cause Flag	A426.15	Indicates whether Interrupt Task Error 1 or 2 occurred.
Interrupt Task Error Task Number	A426.00 to A426.11	For error 1: Indicates the interrupt task number. For error 2: Indicates the unit number of the Special I/O Unit where the multiple I/O refreshing occurred.

Related PLC Setup Settings

• Scheduled Interrupts


Name	Description	Settings
Scheduled Interrupt Interval	Specify the time unit to use to specify the scheduled interrupt time. The scheduled interrupt time is set using MSKS(690).	10 ms (default) 1.0 ms 0.1 ms

Power OFF Interrupt

Name	Description	Settings
Power OFF Interrupt Task	If the Power OFF Interrupt Task setting is turned ON, then a power OFF interrupt task will start if power turns OFF.	OFF (default) ON
Power OFF Detection Delay Time	Power OFF is recognized when this time plus the default power OFF detection time (10 to 25 ms for AC power supplies and 2 to 25 ms for DC power supplies) expires.	0 to 10 ms (1-ms units)

MSKS

Instruction	Mnemonic	Variations	Function code	Function		
SET INTERRUPT MASK	MSKS	@MSKS	690	Controls interrupts.		

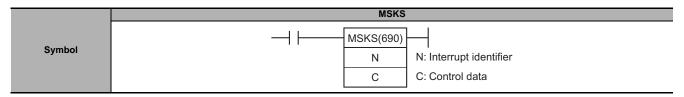

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Interrupt identifier		1
С	Control data	UINT	1

(1) Disabling/Enabling Input Interrupts for I/O Interrupt Tasks

Operand		Contents						
N	Interrupt input	Interrupt identifier						
	Inputs to a CS1W-INT01/CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	O: Unit number 0 I/O interrupts 0 to 15 (interrupt tasks 100 to 115) 1: Unit number 1 I/O interrupts 16 to 31 (interrupt tasks 116 to 131)						
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	0: Unit number 0 I/O interrupts 0 to 7 (interrupt tasks 100 to 107) 1: Unit number 1 I/O interrupts 8 to 15 (interrupt tasks 108 to 115) 2: Unit number 2 I/O interrupts 16 to 23 (interrupt tasks 116 to 123) 3: Unit number 3 I/O interrupts 24 to 31 (interrupt tasks 124 to 131)						
	Inputs to a CJ1M CPU Unit's Built-in Inputs (4 inputs/Unit)	6: Interrupt input 0 (interrupt task 140) 7: Interrupt input 1 (interrupt task 141) 8: Interrupt input 2 (interrupt task 142) 9: Interrupt input 3 (interrupt task 143)						
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	100: Input interrupt 0 (Block 0) (interrupt task 140) 101: Input interrupt 1 (Block 0) (interrupt task 141) 102: Input interrupt 2 (Block 0) (interrupt task 142) 103: Input interrupt 3 (Block 0) (interrupt task 143) 104: Input interrupt 4 (Block 1) (interrupt task 144) 105: Input interrupt 5 (Block 1) (interrupt task 145) 106: Input interrupt 6 (Block 1) (interrupt task 146) 107: Input interrupt 7 (Block 1) (interrupt task 147) Note For input interrupts 0 to 3, 6 to 9 can also be used as the interrupt number.						
С	Interrupt input	Interrupt mask						
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	Set to 0000 to FFFF hex Bits 0 to 15 correspond to each interrupt task. Individual bit settings are as follows: 0: Enable (unmask) the interrupt. 1: Disable (mask) the interrupt.						
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	Set to 0000 to 00FF hex Bits 0 to 7 correspond to each interrupt task. Individual bit settings are as follows: 0: Enable (unmasks) the interrupt. 1: Disable (mask) the interrupt.						
	Inputs to a CJ1M-CPU2□ CPU Unit's Built-in Inputs (4 inputs/Unit) CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	0000 hex: Enable (unmask) the interrupt (direct mode). 0001 hex: Disable (mask) the interrupt (direct mode). 0002 hex: Start decrementing counter and enable interrupt (counter mode). 0003 hex: Start incrementing counter and enable interrupt (counter mode).						

(2) Specifying Up/Down Differentiation of Interrupt Inputs for I/O Interrupts and Input Interrupts (Except when Using a C200HS-INT01 Interrupt Input Unit)

Operand	Contents								
N	Interrupt input	Interrupt identifier							
	Inputs to a CS1W-INT01/CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	2: Unit number 0 I/O interrupts 0 to 15 (interrupt tasks 100 to 115) 3: Unit number 1 I/O interrupts 16 to 31 (interrupt tasks 116 to 131)							
	Inputs to a CJ1M CPU Unit's Built-in Inputs (4 inputs/Unit)	10: Interrupt input 0 (interrupt task 140) 11: Interrupt input 1 (interrupt task 141) 12: Interrupt input 2 (interrupt task 142) 13: Interrupt input 3 (interrupt task 143)							
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	110: Input interrupt 0 (Block 0) (interrupt task 140) 111: Input interrupt 1 (Block 0) (interrupt task 141) 112: Input interrupt 2 (Block 0) (interrupt task 142) 113: Input interrupt 3 (Block 0) (interrupt task 143) 114: Input interrupt 4 (Block 1) (interrupt task 144) 115: Input interrupt 5 (Block 1) (interrupt task 145) 116: Input interrupt 6 (Block 1) (interrupt task 146) 117: Input interrupt 7 (Block 1) (interrupt task 147)							
		Note For input interrupts 0 to 3, 10 to 13 can also be used as the interrupt number.							
С	Interrupt input	Up/down differentiation specification							
	Inputs to a CS1W-INT01/CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	Set to 0000 to FFFF hex. Bits 0 to 15 correspond to each interrupt task. Individual bit settings are as follows: 0: Up-differentiation (Detect rising edge.) 1: Down-differentiation (Detect falling edge.)							
	Inputs to a CJ1M CPU Unit's Built-in Inputs (4 inputs/Unit)	0000 hex: Up-differentiation (Detect rising edge.) 0001 hex: Down-differentiation (Detect falling edge.)							
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)								

Note When the up/down differentiation setting is changed, all detected interrupt inputs will be cleared.

(3) Disabling/Enabling a Scheduled Interrupt Task's Timer Interrupt

Operand		Contents										
N	Scheduled Interrupt No.											
	4: Interrupt task 0 (interrupt task 2) 5: Interrupt task 1 (interrupt task 3)											
	Note 1 Only scheduled interrupt 0	can be used with the CJ1M-CPU11/21.										
	The scheduled interrupts (0 and 1) cannot be used with a CJ2H CPU Unit if the synchronous unit operation function is enabled. Scheduled interrupt time units (Set in the PLC Setup.) Scheduled interrupt set time											
С	Scheduled interrupt time units (Set in the PLC Setup.)	Scheduled interrupt set time										
	Any time unit setting	0 decimal (0000 hex): Disable interrupt. (Stop internal timer.)										
	10 ms	1 to 9,999 decimal (0001 to 270F hex): Enable interrupt. (Start internal timer with interrupt interval between 10 and 99,990 ms.)										
	1 ms	1 to 9,999 decimal (0001 to 270F hex): Enable interrupt. (Start internal timer with interrupt interval between 1 and 9,999 ms.)										
	0.1 ms	CJ1M CPU Units 5 to 9,999 decimal (0005 to 270F hex): Enable interrupt. (Start internal timer with interrupt interval between 0.5 and 999.9 ms.) Note Settings 0001 to 0004 cannot be used. An error will occur if one of these settings is used.										
		CJ1-H-R and CJ2 CPU Units 2 to 9,999 decimal (0002 to 270F hex): Enable interrupt. (Start internal timer with interrupt interval between 0.2 and 999.9 ms.)										
		Note Setting 0001 cannot be used. An error will occur if 0001 is set. (See note.) CJ2M CPU Units 4 to 9,999 decimal (0004 to 270F hex): Enable interrupt. (Start internal timer with interrupt interval between 0.4 and 999.9 ms.)										
		Note Settings 0001 to 0003 decimal (0001 to 0003 hex) cannot be used. An error will occur if one of these settings is used.										

Note High-speed interrupt function can be used with CJ2 CPU Units with unit version 1.1 or later to set an interrupt interval of 0.1 ms (&1 decimal or #0001 hex) for scheduled interrupt 1 (interrupt task 2). This setting cannot be used for other interrupts.

(4) Resetting and Starting Scheduled Interrupts (CJ1M and CJ2M CPU Units Only)

Operand		Contents							
N	Scheduled Interrupt No.								
	14: Scheduled interrupt 0 (interrupt 15: Scheduled interrupt 1 (interrupt	,							
	Note Only scheduled interrupt 0 can be used with the CJ1M-CPU11/21.								
С	Scheduled interrupt time units (Set in the PLC Setup.)	Scheduled interrupt set time							
	Any time unit setting	0 decimal (0000 hex): Disable interrupt. (Stop internal timer.)							
	10 ms	1 to 9,999 decimal (0001 to 270F hex): Enable interrupt. (Reset internal timer value, and then start the timer with an interrupt interval between 10 and 99,990 ms.)							
	1 ms	1 to 9,999 decimal (0001 to 270F hex): Enable interrupt. (Reset internal timer value, and then start timer with an interrupt interval between 1 and 9,999 ms.)							
	0.1 ms	5 to 9,999 decimal (0005 to 270F hex): Enable interrupt. (Reset internal timer value, and then start timer with interrupt interval between 0.5 and 999.9 ms.)							
		Note Settings 0001 to 0004 cannot be used. An error will occur if one of these settings is used.							
		CJ2M CPU Units 4 to 9,999 decimal (0004 to 270F hex): Enable interrupt. (Reset internal timer and then start internal timer with interrupt interval between 0.4 and 999.9 ms.)							
		Note Settings 0001 to 0003 decimal (0001 to 0003 hex) cannot be used. An error will occur if one of these settings is used.							

Operand Specifications

	Area		Word addresses							Indirect DM/EM addresses		Con-	Registers		Flags		Pulse	TR	
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
	N											OK							T
	С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is not within the specified range (0 to 15 for the CJ1M CPU Unit, 0 to 15, 100 to 107, or 110 to 117 for the CJ2M CPU Unit; and 0 to 5 for other CPU Units). Errors when specifying I/O Interrupts: I/O interrupt specified: When using C200HS-INT01 interrupt inputs, the Error Flag will go ON if C is not between 0000 and 00FF hex. I/O interrupt specified: When using the CJ1M or CJ2M CPU Unit's built-in interrupt inputs, the Error Flag will go ON if C is not between 0 and 3. Errors when specifying Scheduled Interrupts: I/O interrupt specified: For a CJ2M CPU Unit, ON for any function that uses inputs on the Interrupt Input Unit even if a CJ1W-INT01 Interrupt Input Unit is not mounted. I/O interrupt specified: ON if using input interrupts is not enabled for the port specified with N when enabling/disabling the input interrupt or changing the differentiation specification (edge) for a CJ1M/CJ2M CPU Unit built-in input. I/O interrupt specified: ON if using interrupts is enabled/disabled or the differentiation specification (edge) is changed while executing interrupt feeding (IFEED(892)) using the specified interrupt input for a CJ2M CPU Unit built-in interrupt input. Scheduled interrupt specified: When the time units are set to 10 ms or 1 ms, the Error Flag will go ON if C is not between 0 and 9,999 decimal (0000 to 270F hex). Scheduled interrupt specified: When using a CJ1-H-R or CJ2H CPU Unit with the time units set to 0.1 ms, the Error Flag will go ON if C is not between 5 and 9,999 decimal (0000 to 270F hex). Scheduled interrupt specified: When using a CJ1-H-R or CJ2H CPU Unit with the time units set to 0.1 ms, the Error Flag will go ON if C is not o between 4 and 9,999 decimal (0000 or 0002 to 270F hex). Scheduled interrupt specified: When using a CJ2M CPU Unit with the time unit set to 0.1 ms, the Error Flag will go ON if C is not 0 or between 4 and 9,999 decimal (0000 or 0004 to 270F hex). ON if N is set to
Equals Flag	P_EQ	OFF
Negative Flag	PΝ	OFF

Note If high-speed interrupt function is enabled for a CJ2 CPU Unit with unit version 1.1 or later, an error will not occur and the Error Flag will remain OFF even if the time unit is set to 0.1 ms for scheduled interrupt 0 (N = 4).

Related PLC Setup Settings

Name	Description	Settings
Scheduled Interrupt	Specifies the time unit to use to specify the scheduled interrupt time. Set the time unit when executing scheduled	10 ms (default)
Interval	interrupts.	1.0 ms
	The scheduled interrupt time is set using MSKS(690).	0.1 ms

Related Auxiliary Area Flags and Words

Name	Address	Operation
Duplicate Refresh Error Flag	A402.13	ON in the following cases: 1. If Interrupt Task Error Detection is enabled in the PLC Setup, the Interrupt Task Error Flag will turn ON if the following conditions occur for the same Special I/O Unit. •There is a conflict between an IORF, FIORF, IORD, or IOWR instruction executed in the interrupt task and an IORF, FIORF, IORD, or IOWR instruction executed in the cyclic task. •There is a conflict between an IORF, FIORF, IORD, or IOWR instruction executed in the interrupt task and the CPU Unit's I/O refreshing (END refreshing). 2. An interrupt task longer than 10 ms was executed during I/O refreshing with a C200H Special I/O Unit or Remote I/O Slave Rack. (CS Series only)
Duplicate Refresh Error Cause Flag	A426.15	This stores the cause when A402.13 (Duplicate Refresh Error Flag) is ON. 1: Duplicate refresh 0: Execute interrupt task for at least 10 ms during refresh of I/O with a C200H Special I/O Unit or SYSMAC BUS Remote I/O Slave Rack (CS Series only)
Duplicate Refresh Error Unit Number	A426.00 to A426.11	When A402.13 (Duplicate Refresh Error Flag) is ON, the information below is stored as 12 bits of binary data depending on the status of A426.15 (Duplicate Refresh Cause Flag). • When A426.15 is 1 (ON), the unit number of the duplicate-refreshed special I/O unit • When A426.15 is 0 (OFF), the task number of the interrupt task executed for 10 ms or more (CS Series only)

Function

When the program execution starts, the interrupt inputs that generate I/O interrupts/input interrupts are masked (disabled), and the internal timers creating the timer interrupts that generate scheduled interrupt tasks are stopped.

Use MSKS(690) to enable the I/O interrupts/input interrupts and timer interrupts, so that the corresponding interrupt tasks can be executed.

MSKS(690) controls the execution of interrupt tasks. The value of N specifies the interrupt task and the kind of processing that will be performed.

(1) Enabling/Disabling the I/O Interrupts and Input Interrupts (N = 0 to 3, 6 to 9, or 100 to 107)

- Enables or disables the interrupt inputs specified by N, based on the status of the bits in C. With this function, MSKS(690) can control whether or not each I/O interrupt task and input interrupt task is executed.
- When an interrupt input is enabled, any interrupts detected up to that point will be cleared.

(2) Specifying the Differentiation for I/O Interrupts and Input Interrupts (N = 2, 3, 10 to 13, or 110 to 117)

- Specifies whether the interrupt inputs specified by N are up-differentiated or down-differentiated, based on the status of the bits in C.
- Use the differentiation specification together with the enabling/disabling function. If MSKS(690) is not executed to specify up or down differentiation, the interrupt inputs are up-differentiated (the default setting).
- When MSKS(690) is executed to specify an interrupt input's up or down differentiation, any interrupts detected up to that point will be cleared.

(3) Starting and Stopping Internal Timers for Scheduled Interrupts (N = 4 or 5)

• Sets the scheduled interrupt interval (specified by C) for the specified scheduled interrupt (specified by N) and starts the internal timer. The internal timer can also be stopped. With this function, MSKS(690) can control whether or not each scheduled task is executed.

When MSKS(690) is used to restart the internal timer, the time from the execution of MSKS(690)
to the start of the first scheduled interrupt task is uncertain, because the existing internal timer PV
is used.

When you want to specify the interrupt start time, use CLI(691) together with MSKS(690).

(4) Resetting Internal Timers for Scheduled Interrupts (N = 14 or 15)

- Sets the time interval (specified by C) for the specified scheduled interrupt task (specified by N), resets the internal timer's PV, and starts the internal timer. Since the internal timer's PV is reset, this function maintains the proper interval from the execution of MSKS(690) until the start of the first interrupt. (This operation is different from item (3), above.) (CJ1M and CJ2M CPU Units Only)
- Note 1 The CJ1M-CPU11/21 supports only one scheduled interrupt task, interrupt task 2 for scheduled interrupt 0.
 - 2 The time unit for the scheduled interrupt time is set as the Schedule Interrupt Interval in the PLC Setup (default: 10 ms).

Hint

The longest interrupt task processing time is stored in A440 (Maximum Interrupt Task Processing Time). At the same time, the task number of the interrupt task with the longest interrupt task processing time is stored in A441 (Interrupt Task with Maximum Processing Time).


Precaution


- Be sure that the scheduled interrupt set time interval is longer than the time required to execute the scheduled interrupt task.
- For scheduled interrupts, MSKS(690) is used only to set the scheduled interrupt interval and does not set the time to the first scheduled interrupt after execution of MSKS(690). The internal timer when MSKS(690) is executed will continue from the value where is previously stopped. This means that the time to the first scheduled interrupt will not be consistent. To accurately control the time to the first interrupt and the interrupt interval, program CLI(691) to set the time to the first scheduled interrupt just before programming MSKS(690). If MSKS(690) is used to restart a scheduled interrupt for a CJ1M or CJ2M CPU Unit, however, the time to the first scheduled interrupt will be accurate even if CLI(691) is not used.
- Scheduled interrupt tasks cannot be used for CJ2H CPU Units if synchronous unit operation is being used. An instruction error will occur if the MSKS(690) instruction is executed with N (interrupt identifier) set to 4 or 5.

Example Programming


Examples for CS1W-INT01/CJ1W-INT01


When CIO 0.00 turns ON in the following example, MSKS(690) unmasks (enables) interrupt inputs in Interrupt Input Unit 0.

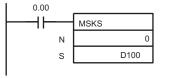

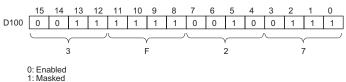


When CIO 0.01 turns ON in the following example, MSKS(690) sets the rising/falling edge designations for Interrupt Input Unit 0.

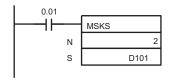

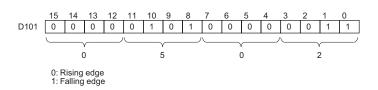


Example for Scheduled Interrupts

- 1. When W0.00 goes from OFF to ON in the following example, MSKS(690) sets a 15 ms time interval for scheduled interrupt 0, and starts the internal timer. (In this case, the scheduled time interval units are set to 1 ms.)
- 2. When W0.01 goes from OFF to ON, the internal timer is stopped for scheduled interrupt 0, which stops the generation of timer interrupts.

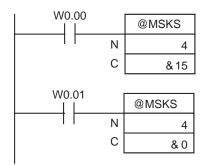


Scheduled interrupt task number 2

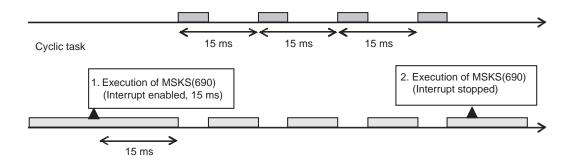

MSKR

Instruction	Mnemonic	Variations	Function code	Function
READ INTERRUPT MASK	MSKR	@MSKR	692	Reads the current interrupt control settings that were set with MSKS(690).

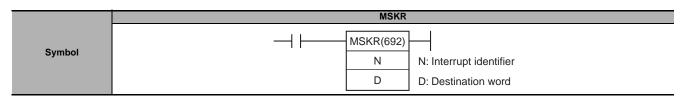

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Interrupt identifier		1
D	Destination word	UINT	1

(1) Reading the Interrupt Mask Settings Set for I/O Interrupts and Input Interrupts

Operand	Contents		
N	Interrupt input	Interrupt identifier	
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	O: Interrupt Input Unit 0 I/O interrupts 0 to 15 (interrupt tasks 100 to 115) 1: Interrupt Input Unit 1 I/O interrupts 16 to 31 (interrupt tasks 116 to 131)	
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	O: Interrupt Input Unit 0 I/O interrupts 0 to 7 (interrupt tasks 100 to 107) 1: Interrupt Input Unit 1 I/O interrupts 8 to 15 (interrupt tasks 108 to 115) 2: Interrupt Input Unit 2 I/O interrupts 16 to 23 (interrupt tasks 116 to 123) 3: Interrupt Input Unit 3 I/O interrupts 24 to 31 (interrupt tasks 124 to 131)	
	Inputs to a CJ1M-CPU2□ CPU Unit's Built-in Inputs (4 inputs/Unit)	6: Input interrupt 0 (interrupt task 140) 7: Input interrupt 1 (interrupt task 141) 8: Input interrupt 2 (interrupt task 142) 9: Input interrupt 3 (interrupt task 143)	
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	100: Input interrupt 0 (interrupt task 140) 101: Input interrupt 1 (interrupt task 141) 102: Input interrupt 2 (interrupt task 142) 103: Input interrupt 3 (interrupt task 143) 104: Input interrupt 4 (interrupt task 144) 105: Input interrupt 5 (interrupt task 145) 106: Input interrupt 6 (interrupt task 146) 107: Input interrupt 7 (interrupt task 147) Note For input interrupts 0 to 3, 6 to 9 can also be used as the interrupt number.	

Operand		Contents		
D	Interrupt input	Read interrupt mask status		
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	Range: 0000 to FFFF hex Bits 0 to 15 correspond to each interrupt task. The meaning of the individual flags is as follows: 1: Disable (mask) the interrupt. 0: Enable (unmask) the interrupt.		
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	Range: 0000 to 00FF hex Bits 0 to 7 correspond to each interrupt task. The meaning of the individual flags is as follows: 1: Disable (mask) the interrupt. 0: Enable (unmask) the interrupt.		
Inputs (4 inputs/Unit) 0001 C.I2M CPU Unit inputs (when Pulse I/O 0002	0000 hex: Interrupts enabled (unmasked) in direct mode. 0001 hex: Interrupts disabled (masked) in direct mode.			
	• ,	0002 hex: Interrupts enabled for decrementing counter in counter mode. 0003 hex: Interrupts enabled for incrementing counter in counter mode.		

(2) Reading the Differentiation Settings Set for I/O Interrupts and Input Interrupts (Except when Using a C200HS-INT01 Interrupt Input Unit)

Operand		Contents
N	Interrupt input	Interrupt identifier
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	2: Unit number 0 (interrupt tasks 100 to 115) I/O interrupts 0 to 15 (interrupt tasks 100 to 115) 3: Unit number 1 (interrupt tasks 116 to 131) I/O interrupts 16 to 31 (interrupt tasks 116 to 131)
	Inputs to a CJ1M-CPU2□ CPU Unit's Built-in Inputs (4 inputs/Unit)	10: Interrupt input 0 (interrupt task 140) 11: Interrupt input 1 (interrupt task 141) 12: Interrupt input 2 (interrupt task 142) 13: Interrupt input 3 (interrupt task 143)
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	110: Input interrupt 0 (Block 0) (interrupt task 140) 111: Input interrupt 1 (Block 0) (interrupt task 141) 112: Input interrupt 2 (Block 0) (interrupt task 142) 113: Input interrupt 3 (Block 0) (interrupt task 143) 114: Input interrupt 4 (Block 1) (interrupt task 144) 115: Input interrupt 5 (Block 1) (interrupt task 145) 116: Input interrupt 6 (Block 1) (interrupt task 146) 117: Input interrupt 7 (Block 1) (interrupt task 147) Note For input interrupts 0 to 3, 10 to 13 can also be used as the interrupt number.
D	Interrupt Input	Read interrupt input differentiation setting
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	Range: 0000 to FFFF hex. Bits 0 to 15 correspond to each interrupt task. The meaning of the individual flags is as follows: 0: Up-differentiation (Detect rising edge.) 1: Down-differentiation (Detect falling edge.)
	Inputs to a CJ1M-CPU2□ CPU Unit's Built-in Inputs (4 inputs/Unit)	0000 hex: Up-differentiation (Detect rising edge.) 0001 hex: Down-differentiation (Detect falling edge.)
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	

(3) Reading the Set Value of a Scheduled Interrupt Task's Internal Timer

Operand	Contents			
N	Scheduled Interrupt No.			
	4: Interrupt task 0 (interrupt task 2) 5: Interrupt task 1 (interrupt task 3)			
	Note Only scheduled interrupt 0 car	n be used with the CJ1M-CPU11/21.		
D	Scheduled interrupt time units (Set in the PLC Setup.) Scheduled interrupt set time			
	Any time unit setting	0 decimal (0000 hex): Interrupt disabled. (Internal timer stopped.)		
	10 ms	1 to 9,999 decimal (0001 to 270F hex): Interrupt enabled. (Internal timer started with interrupt interval between 10 and 99,990 ms.)		
	1 ms	1 to 9,999 decimal (0001 to 270F hex): Interrupt enabled. (Internal timer started with interrupt interval between 1 and 9,999 ms.)		
	0.1 ms	1 to 9,999 decimal (0001 to 270F hex): Interrupt enabled. (Internal timer started with interrupt interval between 0.1 and 999.9 ms.)		

(4) Reading the Present Value of a Scheduled Interrupts Internal Timer (CJ1M and CJ2M CPU Units Only)

Operand	Contents							
N	Interrupt identifier							
	15: Scheduled interrupt 1 (interrupt	: Scheduled interrupt 0 (interrupt task 2) : Scheduled interrupt 1 (interrupt task 3) ote Only scheduled interrupt 0 can be used with the CJ1M-CPU11/21.						
D	Scheduled interrupt time units (Set in the PLC Setup.)	Read internal timer PV						
	10 ms	0 to 9,999 decimal (0000 to 270F hex): Interrupt timer PV between 0 and 99,990 ms						
	1 ms	0 to 9,999 decimal (0000 to 270F hex): Interrupt timer PV between 1 and 9,999 ms.						
	0.1 ms	0 to 9,999 decimal (0000 to 270F hex): Interrupt timer PV between 0.0 and 999.9 ms.						

Operand Specifications

Area			W	ord ad	dresse	es			Indirect addre	DM/EM esses	Con-		Registe	ers	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N											OK							
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if N is not within the specified range (0 to 15 for the CJ1M CPU Unit, 0 to 15, 100 to 107, or 110 to 117 for the CJ2M CPU Unit; and 0 to 5 for other CPU Units). I/O interrupt specified: For a CJ2M CPU Unit, ON for any function that uses inputs on the Interrupt Input Unit even if a CJ1W-INT01 Interrupt Input Unit is not mounted. I/O interrupt specified: ON if using input interrupts is not enabled for the port specified with N when the mask status or differentiation (edge) specification is read for a CJ1M/CJ2M CPU Unit built-in input. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

MSKR(692) reads the interrupt task settings that were set with MSKS(690). The value of N specifies the interrupt task and the kind of information that will be read.

(1) Interrupt Mask Status for I/O Interrupts and Input Interrupts (N = 0 to 3, 6 to 9, or 100 to 107)

Reads the masked/unmasked status of the input interrupts specified by N, and outputs that information to the bits in D.

(2) Specifying the Interrupt Input Differentiation for I/O Interrupts and Input Interrupts (N = 2, 3, 10 to 13, or 110 to 117)

Reads the up/down differentiation settings of the interrupt inputs specified by N, and outputs that information to the bits in D.

(3) Setting Internal Timers for Scheduled Interrupts (N = 4 or 5)

Reads the time set for the internal timer of the scheduled interrupt specified by N, and outputs that information to D.

(4) N = 14 or 15: Reading a Scheduled Interrupt's Internal Timer PV


Reads the internal timer PV of the scheduled interrupt specified by N, and outputs that information to D. The internal timer's PV is the time that has elapsed since the scheduled interrupt started (when MSKS(690) was executed), or the time that has elapsed since the last scheduled interrupt started. (CJ1M and CJ2M CPU Units Only)


- Note 1 The CJ1M-CPU11/21 supports only one scheduled interrupt task, interrupt task 2 for scheduled interrupt 0.
 - 2 The time unit for the scheduled interrupt set time and PV is set as the Schedule Interrupt Interval in the PLC Setup (default:10 ms).
 - 3 MSKR(692) can be executed in the main program or in interrupt tasks.

Example Programming

Specifying I/O Interrupts for the CS1W-INT01 or CJ1W-INT01


When CIO 0.00 turns ON in the following example, MSKR(692) reads the current mask status of Interrupt Input Unit 0 and stores it in D100.

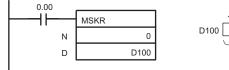


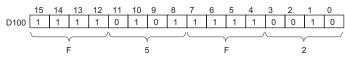

0: Interrupt enabled 1: Interrupt masked

When CIO 0.01 turns ON in the following example, MSKS(690) reads the upward/downward differentiation for Interrupt Input Unit 0 and stores it in D101.

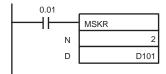

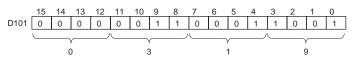


0: Upward differentiation


1: Downward differentiation

• Example for Scheduled Interrupts


When W0.00 goes from OFF to ON while the internal timer is operating for scheduled interrupt 1, MSKR(692) reads the interrupt time interval setting and outputs the setting to D100.

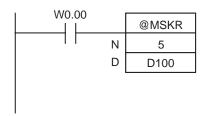

Scheduled interrupt 1 (interrupt task 3)

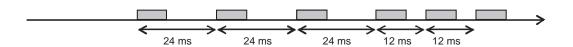




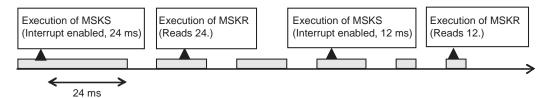

CLI

Instruction	Mnemonic	Variations	Function code	Function
CLEAR INTERRUPT	CLI	@CLI	691	Clears/retains recorded interrupt inputs, sets the time to the first scheduled interrupt for scheduled interrupt tasks.

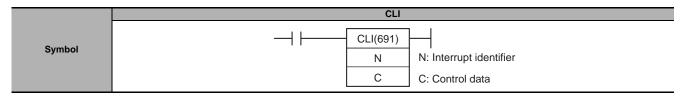

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
N	Interrupt number		1		
С	Control data	UINT	1		

(1) Clearing/Retaining Recorded Interrupt Causes for I/O Interrupts or Input Interrupts

Operand		Contents							
N	Interrupt input	Interrupt identifier							
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	O: Unit number 0 I/O interrupts 0 to 15 (interrupt tasks 100 to 115) 1: Unit number 1 I/O interrupts 16 to 31 (interrupt tasks 116 to 131)							
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	0: Unit number 0 I/O interrupts 0 to 7 (interrupt tasks 100 to 107) 1: Unit number 1 I/O interrupts 8 to 15 (interrupt tasks 108 to 115) 2: Unit number 2 I/O interrupts 16 to 23 (interrupt tasks 116 to 123) 3: Unit number 3 I/O interrupts 24 to 31 (interrupt tasks 124 to 131)							
	Inputs to a CJ1M-CPU2□ CPU Unit's Built-in Inputs (4 inputs/Unit)	6: Interrupt input 0 (interrupt task 140) 7: Interrupt input 1 (interrupt task 141) 8: Interrupt input 2 (interrupt task 142) 9: Interrupt input 3 (interrupt task 143)							
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)	, , , , ,							

Operand		Contents					
С	Interrupt input	Control data (cause processing data)					
	Inputs to a CS1W-INT01 or CJ1W-INT01 Interrupt Input Unit (16 inputs/Unit)	Set to 0000 to FFFF hex. Bits 0 to 15 correspond to each interrupt task. Individual bit settings are as follows: 0: Retain the recorded interrupt. 1: Clear the recorded interrupt.					
	Inputs to a C200HS-INT01 Interrupt Input Unit (8 inputs/Unit)	Set to 0000 to 00FF hex Bits 0 to 7 correspond to each interrupt task. Individual bit settings are as follows: 0: Retain the recorded interrupt. 1: Clear the recorded interrupt.					
	Inputs to a CJ1M-CPU2 CPU Unit's Built-in Inputs (4 inputs/Unit)	0001 hex: Clear the recorded interrupt. 0000 hex: Retain the recorded interrupt.					
	CJ2M CPU Unit inputs (when Pulse I/O Module is mounted) (4 inputs/Block)						

(2) Setting the Time to the First Scheduled Interrupts

Operand		Contents									
N	Interrupt identifier										
	, ,										
С	Scheduled interrupt time units (Set in the PLC Setup.)	Scheduled interrupt set time									
	10 ms	0 to 9,999 decimal (0000 to 270F hex): Sets time to first interrupt between 10 and 99,990 ms.									
	1 ms	0 to 9,999 decimal (0000 to 270F hex): Sets time to first interrupt between 1 and 9,999 ms.)									
	0.1 ms 0 to 9,999 decimal (0000 to 270F hex): Sets time to first interrupt between 0.1 and 999.9 ms.)										

(3) Clearing/Retaining High-speed Counter Interrupt Causes (CJ1M or CJ2M CPU Units Only)

Operand	Contents								
N	Interrupt identifier								
	10: High-speed counter input 0								
	11: High-speed counter input 1								
	12: High-speed counter input 2								
	13: High-speed counter input 3								
С	Recorded Interrupt								
	0001 hex: Clear the recorded interrupt. 0000 hex: Retain the recorded interrupt.								

Operand Specifications

	Area			W	ord ad	ldresse	es			Indirect addre	DM/EM esses	Con-	Registers			Fla	ıgs	Pulse	TR
	Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
_	N											ОК							I
	С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK.	OK		OK				

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if N is not within the specified range (0, 1, or 4 to 11 for CJ1M CPU Unit; 0, 1, 4 to 13, or 100 to 107 for CJ2M CPU Unit; or 0 to 5 for other CPU Units). ON if C is not within the specified range of 0000 to 00FF hex when N is 0 to 3 (for I/O interrupts and C200HS-INT only). ON if C is not 0 or 1 (for I/O interrupts and CJ1M/CJ2M CPU Unit built-in input interrupt or high-speed counter interrupt). ON if C is not within the specified range of 0 to 9,999 decimal (0000 to 270F hex) for scheduled interrupts. I/O interrupt specified: For a CJ2M CPU Unit, ON for any function that uses inputs on the Interrupt Input Unit even if a CJ1W-INT01 Interrupt Input Unit is not mounted. I/O interrupt specified: ON if using input interrupts is not enabled for the port specified with N when input interrupts are cleared or saved for a CJ1M/CJ2M CPU Unit built-in input. High-speed counter specified: ON if using a high-speed counter is not enabled for the port specified with N when input interrupts are cleared or saved for a CJ1M/CJ2M CPU Unit built-in high-speed counter. ON when 4 or 5 (scheduled interrupt specification) is set for N when synchronous unit operation is enabled for a CJ2H CPU Unit. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

Depending on the value of N, CLI(691) clears/retains the specified recorded causes of I/O interrupts or input interrupts, sets the time before execution of the first scheduled interrupt, or clears/retains the specified recorded causes of high-speed counter interrupts (CJ1M or CJ2M CPU Unit built-in high-speed counter inputs only).

(1) Clearing/Retaining Recorded Interrupt Causes for I/O Interrupts or Input Interrupts (N = 0 to 3. 6 to 9. or 100 to 107)

CLI(691) clears a recorded cause of the interrupt input specified by N when the corresponding bit of C is ON, and retains the recorded cause of the interrupt input when the corresponding bit is OFF.

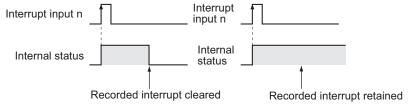


If an interrupt task is being executed and an interrupt input with a different interrupt number is received, execution of the corresponding interrupt task is placed on hold and that interrupt cause is recorded internally. The interrupt tasks for the recorded I/O interrupt causes are executed after execution of the current interrupt task has been completed in order of their priority.

If you want to cancel execution of I/O interrupt tasks or input interrupt tasks that are on hold, use CLI(691) to clear the recorded interrupt causes before the interrupt tasks are executed.

(2) Setting the Time to the First Scheduled Interrupt (N = 4 or 5)

When N is 4 or 5, the contents of C specifies the time interval to the first scheduled interrupt.

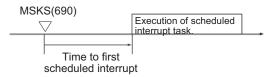

- Note 1 The CJ1M-CPU11/21 supports only one scheduled interrupt task for scheduled interrupt 0 (interrupt task 2).
 - 2 The time unit for the time to the first interrupt is set as the Schedule Interrupt Interval in the PLC Setup (default: 10 ms).

(3) Clearing or Holding High-speed Counter Interrupt Causes (N = 10 or 13)

When N is 10 or 13, CLI(691) clears or retains the recorded high-speed counter interrupt cause (either target-value or range comparison) for the built-in high-speed counter interrupt specified by N. (CJ1M and CJ2M CPU Units Only)

Note CJ1M CPU Units support only high-speed counter inputs 0 and 1.


Precautions


 Scheduled interrupt tasks cannot be used for CJ2H CPU Units if synchronous unit operation is being used. An instruction error will occur if the CLI instruction is executed with N set to 4 or 5.

Example Programming

Specifying I/O Interrupts for the CS1W-INT01 or CJ1W-INT01


When CIO 0.00 is ON in this example, CLI(691) clears or holds the recorded causes for the interrupt inputs from Interrupt Input Unit 0.

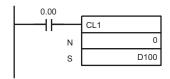

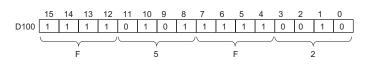


0: Recorded interrupt input retained 1: Recorded interrupt input cleared

Setting the Time to the First Scheduled Interrupt

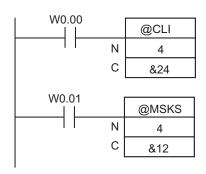

- 1 When W0.00 goes from OFF to ON, CLI(691) sets the time to the first execution of scheduled interrupt 0 to 24 ms. (In this case, the scheduled interval time unit is set to 1 ms in the PLC Setup.)
- When W0.01 goes from OFF to ON, CLI(691) sets the time to the first execution of scheduled interrupt 0 to 12 ms, and starts the internal timer. (In this case, the scheduled time interval units are set to 1 ms in the PLC Setup.)

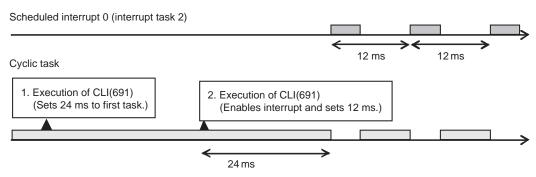

DI

Instruction	Mnemonic	Variations	Function code	Function
DISABLE INTERRUPTS	DI	@DI	693	Disables execution of all interrupt tasks except the power OFF interrupt task for part of a program.

	DI
Symbol	DI(693)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	Not allowed	OK

Flags

Name	Label	Operation
Error Flag ER		ON if DI(693) is executed from an interrupt task.
		OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Contents
Disable Setting for Power OFF Interrupts	A530	A5A5 hex: Enables the Disable Setting for Power OFF Interrupts. Power OFF processing (excluding execution of the Power OFF interrupt task) is masked between the DI(694) and EI(694) instructions, so instructions up to EI(694) are executed. Other than hex #A5A5: Disable power OFF interrupt processing

Function

DI(693) is executed from the main program to disable all interrupt tasks except the power OFF interrupt (I/O interrupt tasks, scheduled interrupt tasks, external interrupt tasks, input interrupt tasks, and high-speed counter tasks) until EI(694) is executed. DI(693) is used when you do not what to execute interrupt tasks during program execution in cyclic tasks. Interrupt causes that occur while interrupts are disabled are recorded internally, the corresponding interrupt tasks are executed when interrupt tasks are enabled again.

When a CJ2, CS1-H, CJ1-H, CJ1M and CS1D (for Single-CPU System) CPU Unit is being used, power OFF interrupt processing can be disabled simultaneously when A503 (the Disable Setting for Power OFF Interrupts) is set to A5A5 hex. Even if a power interruption is detected after DI(693) has been executed, the CPU Unit will be reset after the program's instructions have been executed in order up to EI(694) or the END(001) instruction in the last task.


If the power OFF interrupt task is enabled, the CPU Unit will be reset after execution of the power OFF interrupt task. For details, refer to information on the power OFF interrupt task in the CS/CJ Series Programming Manual or the CJ2 CPU Unit Software Operation Manual (W473).

Precautions

All interrupt tasks will remain disabled until EI(694) is executed.

DI(693) cannot be executed from an interrupt task.

Example Programming

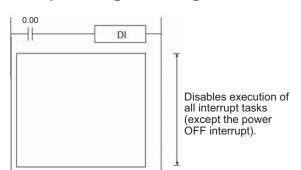

When CIO 0.00 is ON in the following example, DI(693) disables all interrupt tasks other than the power OFF interrupt task.


Note With CS1D CPU Units for Single-CPU Systems or CJ2, CS1-H, CJ1-H, or CJ1M CPU Units:

Power OFF interrupt processing can be disabled at the same time if the power OFF interrupt task is disabled.

When execution of all interrupts other than power OFF interrupt tasks is prohibited by this instruction


DI(693) cannot be executed for more than one cyclic task. To disable more than one cycle execution task, insert DI(693) in each cyclic task.

However, interrupt tasks are always enabled at the end of a cyclic task, and interrupt tasks for any recorded interrupt causes will be executed at that time.

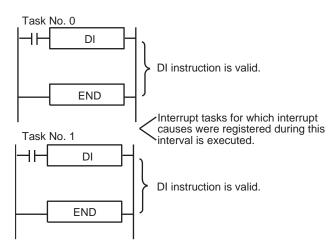

When using DI(693) to disable Power OFF Interrupt Processing

It is possible to disable the processing through the cyclic tasks. (The disabled condition is released after the completion of all tasks that were started.)

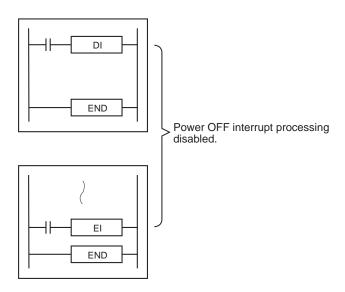

Note When a CS1D CPU Unit for Single-CPU System or a CJ2, CS1-H, CJ1-H, or CJ1M CPU Unit is being used, the power OFF interrupt task is disabled, and A530 is set to A5A5 hex, the CPU Unit will be reset after execution of EI(694) in the event that a power interruption is detected during execution of the instructions between DI(693) and EI(694).

EI

Instruction	Mnemonic	Variations	Function code	Function
ENABLE INTERRUPTS	EI		694	Enables execution of all interrupt tasks that were disabled with DI(693).

	El
Symbol	EI(694)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	Not allowed	OK

Flags

Name	Label	Operation
Error Flag	ER	ON if El(694) is executed from an interrupt task. OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Contents
Disable Setting for Power OFF Interrupts	A530	A5A5 hex: Enables the Disable Setting for Power OFF Interrupts. Power OFF processing (excluding execution of the Power OFF interrupt task) is masked between the DI(694) and EI(694) instructions, so instructions up to EI(694) are executed. Any other value: Disables the Power OFF Processing mask.


Function

- EI(694) is executed from the main program to temporarily enable all interrupt tasks that were disabled by DI(693). DI(693) disables all interrupts except the power OFF interrupt (I/O interrupts, scheduled interrupts, and external interrupts).
- When a CJ2, CS1-H, CJ1-H, CJ1M and CS1D CPU Unit for Single-CPU System Unit is being used and power OFF interrupt processing has been disabled with DI(693), EI(694) will also release the hold on power OFF interrupt processing. After DI(593) has been executed, the CPU Unit will not be reset even if a power interruption is detected. The CPU Unit will be reset after all of the instructions between DI(693) and EI(694) have been executed. Refer to 3-21-4 DISABLE INTERRUPTS: DI(693) for details on using DI(693) to disable power OFF interrupt processing.


Precautions

- EI(694) does not require an execution condition. It is always executed with an ON execution condition.
- EI(694) enables the interrupt tasks that were disabled by DI(693). It cannot unmask I/O interrupts that have not been unmasked by MSKS(690) or set scheduled interrupts that have not been set by MSKS(690).
- EI(694) cannot be executed in an interrupt task.

Example Programming

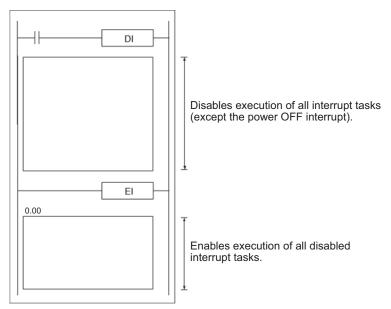


Note When the power OFF interrupt task is disabled for a CJ2, CS1-H, CJ1-H, CJ1M CPU Unit, or CS1D CPU Unit for Single-CPU System, power OFF processing will also be enabled at the same time.

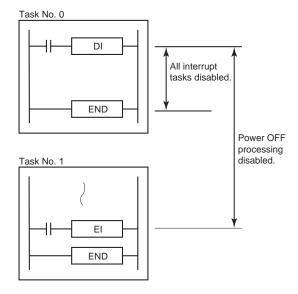

High-speed Counter/Pulse Output Instructions

INI

Instruction	Mne- monic	Varia- tions	Function code	Function
MODE CONTROL	INI	@INI	880	INI(880) is used to start and stop comparison for a comparison table, to change the present value (PV) of a high-speed counter, to change the PV of an input interrupt in counter mode, to change the maximum value of the ring counter (CJ2M only), to change the PV of a pulse output (e.g., to 0 to establish the origin), to stop pulse output, or to change the settings for origin searches/returns (CJ2M only).

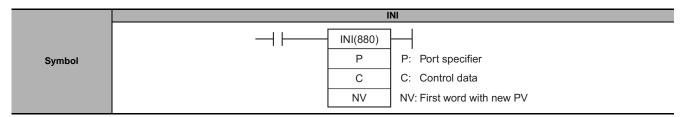

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
Р	Port specifier		1
С	Control data		1
NV	First word with new PV	DWORD	Variable

P: Port Specifier

Р	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)
0010 hex	High-speed counter 0
0011 hex	High-speed counter 1
0012 hex	High-speed counter 2 (CJ2M only)
0013 hex	High-speed counter 3 (CJ2M only)
0100 hex	Interrupt input 0 in counter mode
0101 hex	Interrupt input 1 in counter mode
0102 hex	Interrupt input 2 in counter mode
0103 hex	Interrupt input 3 in counter mode
0104 hex	Input interrupt 4 in counter mode (CJ2M only)
0105 hex	Input interrupt 5 in counter mode (CJ2M only)
0106 hex	Input interrupt 6 in counter mode (CJ2M only)
0107 hex	Input interrupt 7 in counter mode (CJ2M only)
1000 hex	PWM(891) output 0
1001 hex	PWM(891) output 1
1002 hex	PWM output 2 (CJ2M only)
1003 hex	PWM output 3 (CJ2M only)


C: Control Data


С	INI(880) function
0000 hex	Starts comparison.
0001 hex	Stops comparison.
0002 hex	Changes the PV.
0003 hex	Stops pulse output.
0005 hex	Changes origin search/return settings (CJ2M only)
0006 hex	Changes the maximum value of the ring counter (CJ2M only)

NV: First Word with New PV

This operand is used only for changing the PV, changing the maximum ring value, and changing origin search/return settings.

- Changing the PV
 (C = 0002 hex) or Changing
 the Maximum Ring Value
 (C = 0006 hex) (CJ2M Only)
- Changing Origin Search/Return Settings (C = 0005 hex) (CJ2M Only)

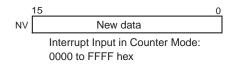

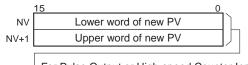

For Pulse Output or High-speed Counter Input: 0000 0000 to FFFF FFFF hex

	15	0		
NV	Origin Search/Return	Rightmost 4 digits	0 to	
NV+1	Initial Speed	Leftmost 4 digits] (000	
NV+2	Origin Search High	Rightmost 4 digits	1 to	
NV+3	Speed	Leftmost 4 digits	J (000	
NV+4	Origin Search	Rightmost 4 digits	1 to	
NV+5	Proximity Speed	Leftmost 4 digits	J (000	
NV+6	Origin Search Origin	Rightmost 4 digits	-2,1	
NV+7	Compensation Value	Leftmost 4 digits	J (800	
NV+8	Origin Search Accelera	rch Acceleration Rate		
NV+9	Origin Search Decelera	tion Rate	1 to	
NV+10	Origin Return Target	Rightmost 4 digits	1 to	
NV+11	Speed	Leftmost 4 digits] (000	
NV+12	+12 Origin Return Acceleration Rate			
NV+13 Origin Return Deceleration Rate				

0 to 100,000 pps (100 kpps) (0000 0000 to 0001 86A0 hex)

1 to 100,000 pps (100 kpps) (0000 0001 to 0001 86A0 hex)

1 to 100,000 pps (100 kpps) (0000 0001 to 0001 86A0 hex)

-2,147,483,648 to 2,147,483,647 (8000 0000 to 7FFF FFFF hex)

1 to 65,535 pps/4 ms (0001 to FFFF hex) 1 to 65,535 pps/4 ms (0001 to FFFF hex)

1 to 100,000 pps (100 kpps) (0000 0001 to 0001 86A0 hex)

1 to 65,535 pps/4 ms (0001 to FFFF hex)

1 to 65,535 pps/4 ms (0001 to FFFF hex)

Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR					
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits		
P, C											OK									
NV	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			-			OK				

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the specified range for P, C, or NV is exceeded.
		ON if the combination of P and C is not allowed.
		ON if a comparison table has not been registered but starting comparison is specified.
		ON if changing the ring counter maximum value is specified for a high-speed counter that is not set to Ring Mode.
		ON if the maximum ring value is changed while comparison is being executed.
		ON if a value that exceeds the ring counter maximum value is registered in the comparison table.
		ON if changing the PV of a high-speed counter is specified for a port that is not specified for a high-speed counter.
		ON if a value that exceeds the ring counter maximum value is specified when changing the PV of a high-speed counter in Ring Mode.
		ON if INI(880) is executed in an interrupt task for a high-speed counter and an interrupt occurs when CTBL(882) is executed.
		ON if a value that is out of range is specified as the PV for an input interrupt in counter mode.
		ON if executed for a port not set for an input interrupt in counter mode.
		ON if a new PV is specified for a port that is currently outputting pulses.
		ON if parameters are out of range when changing the settings for origin searches and origin returns.
		ON if an origin search or origin return setting is charged during an origin search or origin return operation.
		• For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted.
		OFF in all other cases.

Function

INI(880) performs the operation specified in C for the port specified in P. The possible combinations of operations and ports are shown in the following table.

	C: Control data								
P: Port specifier	0000 hex: Start comparison comparison		0002 hex: Change PV	0003 hex: Stop pulse output	Changing the origin search/return settings (0005 hex) (CJ2M only)	Changing the maximum ring value (0006 hex) (CJ2M only)			
0000 or 0001 hex: Pulse output	Not allowed.	Not allowed.	ОК	ОК	ОК	Not allowed.			
0010 or 0013 hex: High-speed counter input	ОК	ОК	ОК	Not allowed.	Not allowed.	ОК			
0100 to 0107 hex: Input interrupt in counter mode	Not allowed.	Not allowed.	ОК	Not allowed.	Not allowed.	Not allowed.			
1000 or 1001 hex: PWM (891) output	Not allowed.	Not allowed.	Not allowed.	ОК	Not allowed.	Not allowed.			

Starting Comparison (C = 0000 hex)

If C is 0000 hex, INI(880) starts comparison of a high-speed counter's PV to the comparison table registered with CTBL(882).

Note A target value comparison table must be registered in advance with CTBL(882). If INI(880) is executed without registering a table, the Error Flag will turn ON.

Stopping Comparison (C = 0001 hex)

If C is 0001 hex, INI(880) stops comparison of a high-speed counter's PV to the comparison table registered with CTBL(882).

Changing a PV (C = 0002 hex)

	Port and mod	de	Operation	Setting range
Pulse output (P = 0	000 0003 hex)		The present value of the pulse output is changed. The new value is specified in NV. Note: This instruction can be executed only when pulse output is stopped. An error will occur if it is executed during pulse output.	8000 0000 to 7FFF FFFF hex (-2,147,483,648 to 2,147,483,647)
High-speed	Linear Mode	Differential inputs, increment/decre- ment pulses, or pulse + direction inputs	The present value of the high-speed counter is changed. The new value is specified in NV.	8000 0000 to 7FFF FFFF hex (-2,147,483,648 to 2,147,483,647)
counter input (P = 0010 to 0013 hex)		Increment pulse input	Note: An error will occur for the instruction if the specified port is not set for a high-speed counter.	0000 0000 to FFFF FFFF hex (0 to 4,294,967,295)
	Ring Mode		- Godinon	0000 0000 to FFFF FFFF hex (0 to 4,294,967,295)
Interrupt inputs in counter mode (P = 0100 to 0107 hex)			The present value of the interrupt input is changed. The new value is specified in NV.	0000 to FFFF hex (0 to 65,535) Note: An error will occur if a value outside this range is specified.

Stopping Pulse Output (C = 0003 Hex)

If C is 0003 hex, INI(880) immediately stops pulse output for the specified port. If this instruction is executed when pulse output is already stopped, then the pulse amount setting will be cleared.

Changing Origin Search/Return Settings (C = 0005 Hex) (CJ2M Only)

If C is 0007 hex, INI(880) changes the settings for origin searches/returns during operation. The initial settings for origin searches/returns are set in the PLC Setup. INI(880) is used to temporarily change a speed or acceleration/deceleration rate in an application.

Note The settings in the PLC Setup are not changed. When power is turned ON, the settings in the PLC Setup will be used.

The following parameters can be changed with INI(880).

All of these parameters can be changed at the same time. All parameters must be specified even when changing only one of them.

If invalid parameters are specified, an instruction error will occur and the parameters will not be changed. If an origin search or origin return is executed after such an error occurs, the previous parameters will be used in the operation.

Origin search/return parameters	NV (first word with new value)		
Basic setting	Origin Search/Return Initial Speed	NV+1, NV	
Origin search settings	High Speed	NV+3, NV+2	
	Proximity Speed	NV+5, NV+4	
	Origin Compensation	NV+7, NV+6	
	Acceleration Rate	NV+8	
	Deceleration Rate	NV+9	
Origin return settings	Target Speed	NV+11, NV+10	
	Acceleration Rate	NV+12	
	Deceleration Rate	NV+13	

Changing the Maximum Ring Value (C = 0006 Hex) (CJ2M Only)

If C is 0006 hex, INI(880) changes the maximum ring value of the high-speed counter during operation. The initial value for the maximum ring value is set in the PLC Setup. INI(880) is used to temporarily change the maximum ring value in an application.

The following restrictions apply.

- The maximum ring value can be changed only when the comparison operation is stopped.
- CTBL(882) must be executed again to restart the comparison operation after the maximum ring value is changed.

Note The settings in the PLC Setup are not changed. When power is turned ON, the settings in the PLC Setup will be used.

When the maximum ring value is changed, the PV of the high-speed counter will be cleared to zero.

Example Programming

Example: Changing the PV for Pulse Output (C = 0002 Hex)

When CIO 0.00 turns ON in the following example, INI(880) changes the PV of pulse output 0 to 0.

```
0.00

#0000

#0002

Change PV


First word with new value NV: D0 #0000

NV+1: D1 #0000

Sets PV of pulse output to 0.
```

Example: Stopping Pulse Output (C = 0003 Hex)

When CIO 0.00 turns ON in the following example, SPED(885) starts outputting pulses from pulse output 0 in Continuous Mode at 500 pps. When CIO 0.01 turns ON, pulse output is stopped by INI(880).

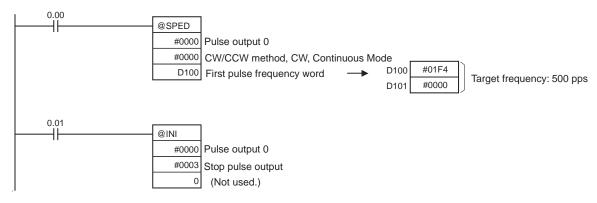

Example: Changing Origin Search/Return Settings (C = 0005 Hex) (CJ2M Only)

When CIO 0.00 turns ON in the following example, INI(880) changes the origin search/return settings. Then an origin return is executed with ORG(889).

```
#0064
0.00
                                                                                              Origin Search/Return Initial Speed: 100 pps
                                                                                   #0000
                        @INI
                                                                   NV+1:
                                                                          D1
                           #0000
                                    Pulse output 0
                                                                  NV+2:
                                                                                   #2710
                                                                                              Origin Search High Speed: 10,000 pps
                                    Change origin search/return settings. NV+3:
                           #0005
                                                                          D3
                                                                                   #0000
                               D0
                                                                                   #0064
                                    First word with new value -
                                                                 NV+4: D4
                                                                                              Origin Search Proximity Speed: 100 pps
                                                                                   #0000
                                                                  NV+5: D5
                                                                                   #000A
                                                                  NV+6: D6
                         @ORG
                                    Origin return
                                                                                              Search Compensation Value: 10
                                                                                   #0000
                                                                  NV+7: D7
                           #0000
                                   Pulse output 0
                                                                                   #0032
                                                                                              Origin Search Acceleration Rate: 50 pps/4 ms
                                                                  NV+8: D8
                           #1000
                                    Origin return, CW/CCW outputs
                                                                                   #0032
                                                                                              Origin Search Deceleration Rate: 50 pps/4 ms
                                                                  NV+9: D9
                                                                                   #2710
                                                                  NV+10: D10
                                                                                              Origin Return Target Speed: 10,000 pps
                                                                                   #0000
                                                                  NV+11: D11
                                                                                   #0032
                                                                  NV+12: D12
                                                                                            Origin Search Acceleration Rate: 50 pps/4 ms
                                                                  NV+13: D13
                                                                                   #0032
                                                                                            Origin Search Deceleration Rate: 50 pps/4 ms
```

Example: Changing the Maximum Ring Value (C = 0006 Hex) (CJ2M Only)

When CIO 0.00 turns ON in the following example, INI(880) changes the maximum ring value.

```
0.00

#0010
#0010
#0006

Change maximum ring value

D0


First word with new value

NV: D0
#2710
NV+1: D1
#0000

Sets maximum ring value to 10,000.
```

PRV

Instruction	Mnemonic	Variations	Function code	Function
HIGH-SPEED COUNTER PV READ	PRV	@PRV	881	PRV(881) reads the High-speed counter PV and pulse output PV and interrupt input PV in counter mode.

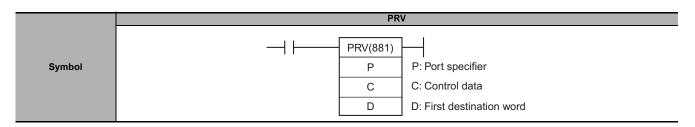

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
Р	Port specifier		1
С	Control data		1
D	First destination word	WORD	Variable


P: Port Specifier

Р	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)
0010 hex	High-speed counter 0
0011 hex	High-speed counter 1
0012 hex	High-speed counter 2 (CJ2M only)
0013 hex	High-speed counter 3 (CJ2M only)
0100 hex	Interrupt input 0 in counter mode
0101 hex	Interrupt input 1 in counter mode
0102 hex	Interrupt input 2 in counter mode
0103 hex	Interrupt input 3 in counter mode
0104 hex	Input interrupt 4 in counter mode (CJ2M only)
0105 hex	Input interrupt 5 in counter mode (CJ2M only)
0106 hex	Input interrupt 6 in counter mode (CJ2M only)
0107 hex	Input interrupt 7 in counter mode (CJ2M only)
1000 hex	PWM(891) output 0
1001 hex	PWM(891) output 1
1002 hex	PWM output 2 (CJ2M only)
1003 hex	PWM output 3 (CJ2M only)

C: Control Data

С	PRV(881) function
0000 hex	Reads the PV.
0001 hex	Reads status.
0002 hex	Reads range comparison results.
00 □ 3 hex	P = 0000 to 0003: Reads the output frequency of pulse output 0 to 3. C = 0003 hex: Standard operation P = 0010: Reads the frequency of high-speed counter input 0 (high-speed counter 0 only). C = 0003 hex: Standard operation C = 0013 hex: 10-ms sampling method for high frequency (supported only by CJ1M CPU Units with unit version 3.0 or later or CJ2M CPU Units) C = 0023 hex: 100-ms sampling method for high frequency (supported only by CJ1M CPU Units with unit version 3.0 or later or CJ2M CPU Units) C = 0033 hex: 1-s sampling method for high frequency (supported only by CJ1M CPU Units with unit version 3.0 or later or CJ2M CPU Units)

D: First Destination Word

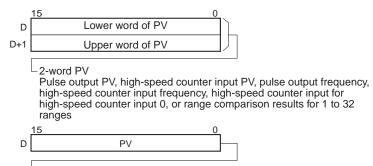

Interrupt input PV in counter mode, status, range comparison results

for 8 ranges Operand Specifications

Area			W	ord ad	dresse	s			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bits			
P, C											OK									
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK						OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P or C is exceeded. ON if the combination of P and C is not allowed. ON if reading range comparison results is specified even though range comparison is not being executed. ON if reading the output frequency is specified for anything except for high-speed counter 0. ON if specified for a port not set for a high-speed counter. ON if executed for a port not set for an input interrupt in counter mode. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.
Carry Flag (CJ2M CPU Units Only)	P_CY	 ON if a high-frequency method is specified for reading the frequency of high-speed counter 0 and the data could not be read dependably within the sampling time because the counter value was reset. OFF in all other cases.

Function

PRV(881) reads the data specified in C for the port specified in P. The possible combinations of data and ports are shown in the following table.

	C: Control data						
P: Port specifier	0000 hex: Read PV	0001 hex: Read sta- tus	0002 hex: Read range comparison results	00⊡3 hex: Read frequency			
(0000 to 0003 hex): Pulse output	ОК	ОК	Not allowed.				
(0010 to 0013 hex): High-speed counter input	ОК	ОК	ОК	Refer to the following			
(0100 to 0107 hex): Interrupt input in counter mode	ОК	Not allowed.	Not allowed.	table.			
(1000 to 1003 hex): PWM (891) output	Not allowed.	ОК	Not allowed.				

	00□3 hex: Read frequency							
P: Port specifier	0003 hex: Pulse output read high-speed counter frequency	0013 hex: 10-ms sampling method	0013 hex: 100-ms sampling method	0013 hex: 1-s sampling method				
(0000 to 0003 hex): Pulse output	OK (See note.)	Not allowed.	Not allowed.	Not allowed.				
(0010 to 0013 hex): High-speed counter input	OK (high-speed counter 0 only)	OK (See note.) (high-speed counter 0 only)	OK (See note.) (high-speed counter 0 only)	OK (See note.) (high-speed counter 0 only)				
(0100 to 0107 hex): Interrupt input in counter mode	Not allowed.	Not allowed.	Not allowed.	Not allowed.				
(1000 to 1003 hex): PWM (891) output	Not allowed.	Not allowed.	Not allowed.	Not allowed.				

Note This function is supported only by CJ1M CPU Units with unit version 3.0 or later and CJ2M CPU Units.

• Reading a PV (C = 0000 hex)

Port and me	ode	Operation	Setting range		
Pulse output (P = 0000 to 0003 hex)		The present value of the pulse output is stored in D and D+1.	8000 0000 to 7FFF FFFF hex (-2,147,483,648 to 2,147,483,647)		
High-speed counter input (P = 0010 to 0013	Linear Mode	The present value of the high-speed counter is stored in D and D+1.	8000 0000 to 7FFF FFFF hex (-2,147,483,648 to 2,147,483,647)		
hex)	Ring Mode		0000 0000 to FFFF FFFF hex (0 to 4,294,967,295)		
Input interrupt in counter mode (P = 0100 to 0107 hex)		The present value of the input interrupt is stored in D.	0000 to FFFF hex (0 to 65,535)		


• Reading Status (C = 0001 hex)

Port and mode	Operation	Results of reading
Pulse output	The pulse output status is stored in D.	Pulse Output Status Flag OFF: Constant speed ON: Accelerating/decelerating PV OverflowUnderflow Flag OFF: Normal ON: Error Pulse Output Amount Set Flag OFF: Not set ON: Set Pulse Output Completed Flag OFF: Output not completed ON: Output in progress Flag OFF: Stopped ON: Output in progress Flag OFF: Stopped ON: Output ing No origin Flag OFF: Origin established At-origin Flag OFF: Norigin on testablished ON: Stopped at origin ON: Stopped at origin ON: Stopped at origin ON: Stopped at origin ON: Pulse output Stopped due to error Interrupt Feeding In-progress Flag (CJZM only) OFF: Interrupt feeding not in progress ON: Interrupt feeding in progress
High-speed counter input	The high-speed counter status is stored in D.	15 D D O O O O O O O O O O O O O O O O O
PWM(891) output	The PWM(891) output is stored in D.	15 D 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

Reading the Results of Range Comparison (C = 0002 hex)

If C is 0002 hex, PRV(881) reads the results of range comparison and stores it in D as shown in the following diagram.

Results for Eight Ranges

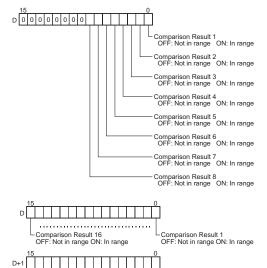

Note: The comparison result will be OFF for any of the 32 counter input ranges that are not specified.

Comparison Result 17 OFF: Not in range ON: In range

Comparison Result 32 OFF: Not in range ON: In range

Results for 1 to 32 Ranges (CJ2M Only)

Reading Pulse Output or High-speed Counter Frequency (C = 00□3 hex)

If C is $00\Box 3$ hex, PRV(881) reads the frequency being output from pulse output 0 to 3 or the frequency being input to high-speed counter 0 and stores it in D and D+1.

0000 or 0001 hex (Reading the frequency of pulse output 0 to 3)

0000 0000 to 0001 86A0 hex (0 to 100,000)

0010 hex (Reading the frequency of high-speed counter 0) Counter input method: Any input method other than 4× differential phase mode:

Result = 0000 0000 to 0001 86A0 hex (0 to 100,000)

Note If a frequency higher than 100 kHz has been input, the output will remain at the maximum value of 0001 86A0 hex.

Counter input method: 4× differential phase mode:

Result = 0000 0000 to 0003 0D40 hex (0 to 200,000)

Note If a frequency higher than 200 kHz has been input, the output will remain at the maximum value of 200,000 decimal.

Pulse Frequency Calculation Methods

• Pulse Output:

The output frequency can be read by executing the PRV(881) instruction.

• High-speed Counter:

When the CPU Unit is a CJ1M CPU Unit with unit version 3.0 or later or a CJ2M CPU Unit, there are two ways to calculate the frequency of pulses input to high-speed counter 0.

 Standard Calculation Method (Earlier Method): The count is calculated by counting each pulse regardless of the frequency. At high frequencies, the rising or falling edges of some pulses will be corrupted, resulting in errors (roughly 1% error max. at 100 kHz). High-frequency Calculation Method: In this case, the counting method is switched at high and low frequencies.

At high frequencies (above 1 kHz), the function counts the number of pulses within a fixed interval (the sampling time) and calculates the frequency from that count. One of the following three sampling times can be selected by setting the rightmost two digits of C.

Sampling time	Value of C	Description	
10 ms	0013 hex	Counts the number of pulses every 10 ms. The error is 10% max. at 1 kHz.	
100 ms 0023 hex Counts the number of pulses ev		Counts the number of pulses every 100 ms. The error is 1% max. at 1 kHz.	
1 s 0033 hex Counts the number of pulses every 1 s. The error is 0.19		Counts the number of pulses every 1 s. The error is 0.1% max. at 1 kHz.	

At frequencies below 1 kHz, the Standard Calculation Method is used, regardless of the sampling time setting.

The update period for the frequency is the same as the sampling time. Following characteristics for changes in the frequency will deteriorate as the sampling time increases.

Precautions


If the counter is reset when P is 0010 hex (high-speed counter 0) and C is 0013, 0023, or 0033 hex (sampling method for high frequency), the data read during the sampling time when the counter was reset will not be dependable.

When this is performed for a CJ2M CPU Unit, the Carry Flag (P_CY) will turn ON when the PRV(881) instruction is executed.

Example Programming


When CIO 0.00 turns ON in the following programming example, CTBL(882) registers a range comparison table for high-speed counter 0 and starts comparison. When CIO 0.01 turns ON, PRV(881) reads the range comparison results at that time and stores them in CIO 0100.

When CIO 1.00 turns ON in the following programming example, PRV(881) reads the frequency of the pulse being input to high-speed counter 0 at that time and stores it as a hexadecimal value in D200 and D201.

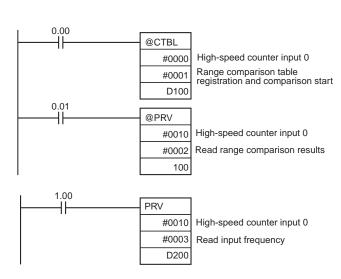

PRV2

Instruction	Mnemonic	Variations	Function code	Function
COUNTER FREQUENCY CONVERT	PRV2	@PRV2	883	Reads the pulse frequency input from a high-speed counter and either converts the frequency to a rotational speed (number of revolutions) or converts the counter PV to the total number of revolutions. The result is output to the destination words as 8-digit hexadecimal. The frequency measurement function can be used with high-speed counter 0 only.

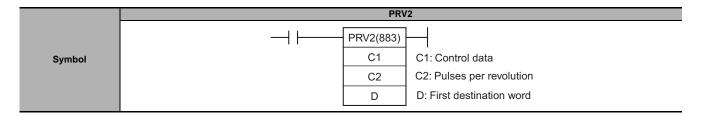

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
C1	Control data		1
C2	Pulses per revolution	UINT	1
D	First destination word	UDINT	2

C1: Control data

C1	PRV2(883) function
0□*0 hex	Converts frequency to rotation speed. (The second digit of C () specifies the units and the third digit (*) specifies the frequency calculation method.)
0001 hex	Converts counter PV to total number of revolutions.

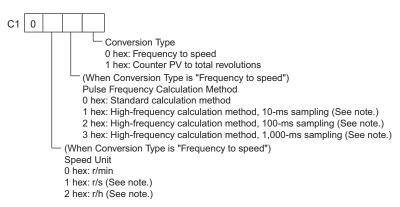

Note Supported by CJM1 CPU Unit Ver. 3.0 or later only.

C2: Pulses per Revolution

Specifies the number of pulses per revolution (0001 to FFFF hex).

D: First Destination Word

	15	0
D	Conversion result (Rightmost 4 digits)	
D+1	Conversion result (Leftmost 4 digits)	

Operand Specifications

Area	Word addresses						Indirect addre	DM/EM esses	Con-		Regist	ers	Fla	ıgs	Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
C1											ОК							
C2	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	UK	OK		OK				
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if high-speed counter 0 is disabled in the settings. ON if C1 is not in the specified range (0000 or 0001). ON if the pulses/revolution setting in C2 is 0000. ON when functions are specified for inputs on a Pulse I/O Module when a Pulse I/O Module is not mounted to the CJ2M CPU Unit. OFF in all other cases.
Carry Flag (CJ2M CPU Units Only)	P_CY	On if a high-frequency method is specified for reading the frequency of high-speed counter 0 and the data could not be read dependably within the sampling time because the counter value was reset. OFF in all other cases.

Function

PRV2(883) converts the pulse frequency input from high-speed counter 0, according to the conversion method specified in C1 and the pulses/revolution coefficient specified in C2, and outputs the result to D and D+1.

Select one of the following conversion methods by setting C1 to 0000 hex or 0001 hex.

Converting Frequency to Rotation Speed (C1 = 0□*0 hex)

If C1 is $0\Box^*0$ hex, PRV2(883) calculates the rotation speed (r/min) from the frequency data and pulses/revolution setting. The second digit of C (\Box) specifies the units and the third digit (*) specifies the frequency calculation method.

(1) Rotation Speed Units:

Rotation Speed Units = r/min

When the second digit of C (\square) is 0, PRV2(883) calculates the rotation speed in r/min from the frequency data and pulses/revolution setting.

Rotation speed (r/min) = (Frequency \div Pulses/revolution) \times 60

• Rotation Speed Units = r/s (CJM1 CPU Unit Ver. 3.0 or later only)

When the second digit of C (\square) is 1, PRV2(883) calculates the rotation speed in r/s from the frequency data and pulses/revolution setting.

Rotation speed (r/s) = Frequency ÷ Pulses/revolution

Rotation Speed Units = r/h (CJM1 CPU Unit Ver. 3.0 or later only)

When the second digit of C (\Box) is 2, PRV2(883) calculates the rotation speed in r/h from the frequency data and pulses/revolution setting.

Rotation speed (r/h) = (Frequency \div Pulses/revolution) \times 60 \times 60

- · Range of Conversion Results
 - Counter input method: Any method besides 4× differential phase mode Frequency = 00000000 to 000186A0 hex (0 to 100,000)

Note If a frequency that exceeds 100 kHz is input, the maximum output value (100,000 decimal) will be held.

• Counter input method: 4× differential phase mode Frequency = 00000000 to 00030D40 hex (0 to 200,000)

Note If a frequency that exceeds 200 kHz is input, the maximum output value (200,000 decimal) will be held.

(2) Frequency Calculation Method

CS/CJ/NSJ Series Instructions Reference Manual (W474)

When the CPU Unit is a CJ1M CPU Unit with unit version 3.0 or later or a CJ2M CPU Unit, there are two ways to calculate the frequency of pulses input to high-speed counter 0.

- Standard Calculation Method (C1 = 0□00)
 The count is calculated by counting each pulse regardless of the frequency. At high frequencies, the rising or falling edges of some pulses will be corrupted, resulting in errors (about 1% error max. at 100 kHz).
- High-frequency Calculation Method
 In this case, the counting method is switched at high and low frequencies. (Supported by CJ1M CPU Units with unit version 3.0 or later or CJ2M CPU Units only)

At high frequencies (above 1 kHz), the function counts the number of pulses within a fixed interval (the sampling time) and calculates the frequency from that count. One of the following three sampling times can be selected by the third digit of C1.

Sampling time	Value of C1	Description
10 ms	0□10 hex	Counts the number of pulses every 10 ms. The error is 10% max. at 1 kHz.
100 ms	0□20 hex	Counts the number of pulses every 100 ms. The error is 1% max. at 1 kHz.
1 s	0□30 hex	Counts the number of pulses every 1 s. The error is 0.1% max. at 1 kHz.

At frequencies below 1 kHz, the Standard Calculation Method is used, regardless of the sampling time setting.

The update period for the frequency is the same as the sampling time. Following characteristics for changes in the frequency will deteriorate as the sampling time increases.

• Converting Counter PV to Total Number of Revolutions (C1 = 0001 hex)

If C1 is 0001 hex, PRV2(883) calculates the cumulative number of revolutions from the counter PV and pulses/revolution setting.

Conversion result = Counter PV ÷ Pulses/revolution


Precautions

If the counter is reset when C1 specifies frequency-rotational speed conversion for a high frequency, the data read during the sampling time when the counter was reset will not be dependable. When this is performed for a CJ2M CPU Unit, the Carry Flag (P_CY) will turn ON when the PRV2(883) instruction is executed.

Example Programming


When CIO 1.00 is ON in the following programming example, PRV2(883) reads the present pulse frequency at high-speed counter 0, converts that value to rotation speed (r/min), and outputs the hexadecimal result to D201 and D200.

When CIO 1.00 is ON in the following programming example, PRV2(883) reads the counter PV, converts that value to number of revolutions, and outputs the hexadecimal result to D301 and D300.

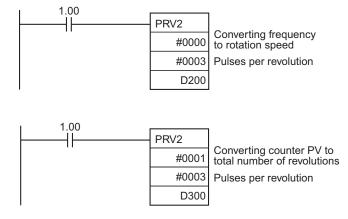

CTBL

Instruction	Mnemonic	Variations	Function code	Function
REGISTER COMPARISON TABLE	CTBL	@CTBL	882	CTBL(882) is used to register a comparison table and perform comparisons for a high-speed counter PV.

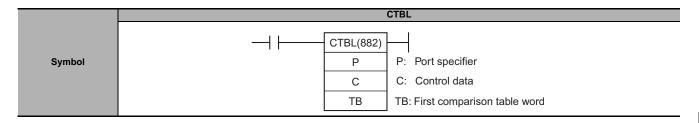

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
Р	Port specifier		1
С	Control data		1
ТВ	First comparison table word	LWORD	Variable

P: Port specifier

Р	Port
0000 hex	High-speed counter 0
0001 hex	High-speed counter 1
0002 hex	High-speed counter 2 (CJ2M only)
0003 hex	High-speed counter 3 (CJ2M only)


C: Control data

С	CTBL(882) function
0000 hex	Registers a target value comparison table and starts comparison.
0001 hex	Registers a range comparison table with 8 ranges and starts comparison.
0002 hex	Registers a target value comparison table. Comparison is started with INI(880).
0003 hex	Registers a range comparison table with 8 ranges, but does not perform comparison.
0004 hex	Registers a range comparison table with 1 to 32 ranges, and starts comparison (CJ2M only).
0005 hex	Registers a range comparison table with 1 to 32 ranges, but does not perform comparison (CJ2M only).

TB: First comparison table word


Specifying a Target Value Comparison Table (C = 0000 or 0002 Hex)

For target value comparison, the length of the comparison table is determined by the number of target values specified in TB. The table can be between 4 and 145 words long, as shown below.

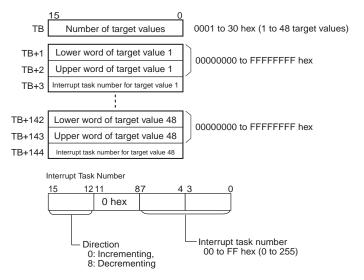


Specifying a Range Comparison Table with 8 Ranges (C = 0001 or 0003 Hex)

For range comparison, the comparison table always contains eight ranges. The table is 40 words long, as shown below. If it is not necessary to set eight ranges, set the interrupt task number to FFFF hex for all unused ranges. The ranges are set using upper and lower limits.

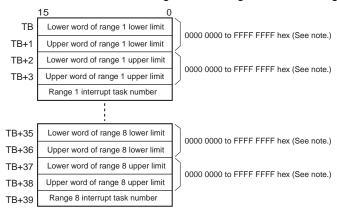

Interrupt task number

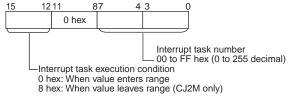


AAAA hex: Do not execute interrupt task. (Flag output only) FFFF hex: Ignore the settings for this range.

Note Always set the upper limit greater than or equal to the lower limit for any one range.

Specifying a Range Comparison Table with 1 to 32 Ranges (C = 0004 or 0005 Hex) (CJ2M Only)

The length of the comparison table is determined by the number of target values specified in TB. The table can be between 6 and 161 words long. Set valid values for the entire table specified by TB. (It is not possible to skip settings for any ranges.)

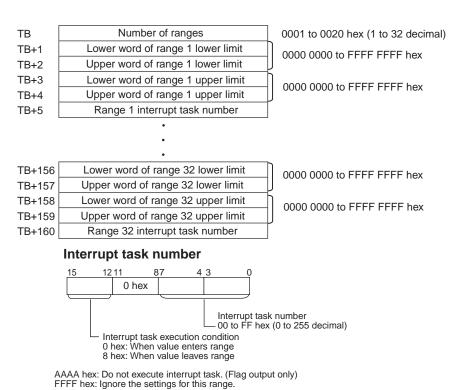

Note Always set the upper limit greater than or equal to the lower limit for any one range.

Operand Specifications

Area	Word addresses								Indirect addre	DM/EM esses	Con-	Registers			Registers Flags				
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits	
P, C											OK								
ТВ	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P or C is exceeded. ON if the number of target values specified for target value comparison is set to 0. ON if the number of target values specified for target value comparison exceeds 48. ON if the same target value is specified more than once in the same comparison direction for target comparison. ON if the upper value is less than the lower value for any range. ON if the set values for all ranges are disabled during a range comparison. ON if the number of ranges specified for range comparison (1 to 32) is set to 0. ON if the number of ranges specified for range comparison (1 to 32) is set to a value higher than 32. ON if the high-speed counter is set for incremental pulse mode and decrementing is set in the table as the direction for comparison. ON if an instruction is executed when the high-speed counter is set to Ring Mode and the specified value exceeds the maximum ring value. ON if specified for a port not set for a high-speed counter. ON if executed for a different comparison method while comparison is already in progress. ON if CTBL(882) is executed in the interrupt task when an interrupt occurs during CTBL(882) execution. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

CTBL(882) registers a comparison table and starts target-value or range comparison for the high-speed counter specified in P and the method specified in C.

■ Registering a Comparison Table (C = 0002, 0003, 0005 Hex)

If C is set to 0002 or 0003 hex, a comparison table will be registered, but comparison will not be started. Comparison is started with INI(880).

Registering a Comparison Table and Starting Comparison (C = 0000, 0001, 0004 Hex)

If C is set to 0000 or 0001 hex, a comparison table will be registered, and comparison will be started.

- Once a comparison table is registered, it is valid until a different table is registered or until the CPU Unit is switched to PROGRAM mode.
- Each time CTBL(882) is executed, comparison is started under the specified conditions. It is thus normally sufficient to use the differentiated version (@SPED(885)) of the instruction or an execution condition that is turned ON only for one scan.
- Comparison is stopped with INI(880). It makes no difference what instruction was used to start comparison.

Target Value Comparison

The corresponding interrupt task is called and executed when the PV matches a target value.

- The same interrupt task number can be specified for more than one target value.
- The direction can be set to specify whether the target value is valid when the PV is being incremented or decremented. If bit 15 in the word used to specify the interrupt task number for the range is OFF, the PV will be compared to the target value only when the PV is being incremented. If bit 00 is ON, the PV will be compared to the target value only when the PV is being decremented.
- The comparison table can contain up to 48 target values, and the number of target values is specified in TB (i.e., the length of the table depends on the number of target values that is specified).
- Comparisons are performed for all target values registered in the table.
- **Note 1** An error will occur if the same target value with the same comparison direction is registered more than once in the same table.
 - 2 If the high-speed counter is set for incremental pulse mode, an error will occur if decrementing is set in the table as the direction for comparison.
 - 3 If the count direction changes while the PV equals a target value that was reached in the direction opposite to that set as the comparison direction, the comparison condition for that target value will not be met. Do not set target values at peak and bottom values of the count value.

Range Comparison

The PV of the high-speed counter is compared to the specified ranges and the result is output to flags. Also, a specified interrupt can be executed when the PV is outside a range (CJ2M only) or in a range.

- The range comparison table contains 1 to 32 ranges (CJ2M only) or 8 ranges. Overlapping ranges can be specified. An interrupt task number is set for each range.
- The same interrupt task number can be specified for more than one target value.
- The interrupt task is executed either when the PV enters the range or leaves the range. (This is specified with the MSB when specifying the interrupt task number. The interrupt task is executed only once when the PV enters or leaves the range.
 - If the PV is within more than one range when the comparison is made, the interrupt task for the range closest to the beginning of the table will be given priority and other interrupt tasks will be executed in following cycles.


Note An error will occur if the upper limit is less than the lower limit for any one range.

• If there is no reason to execute an interrupt task, specify AAAA hex as the interrupt task number. The range comparison results can be read with PRV(881) or using the Range Comparison In-progress Flags in the Auxiliary Area.

- For range comparisons, the interrupt task for any one range will be executed only once each time the
 comparison value enters or leaves the range. It will not be executed again until the condition for
 execution is no longer met and then met again. The Range Comparison Condition Met Flag, however,
 will be ON whenever the comparison value is within the range regardless of the out of range/in range
 specification.
- Set the interrupt task number to FFFF hex to disable the range. Any range set to FFFF hex will be ignored.

Example Programming


When CIO 0.00 turns ON in the following programming example, CTBL(882) registers a target value comparison table and starts comparison for high-speed counter 0. The PV of the high-speed counter is counted incrementally and when it reaches 500, it equals target value 1 and interrupt task 1 is executed. When the PV is incremented to 1000, it equals target value 2 and interrupt task 2 is executed.

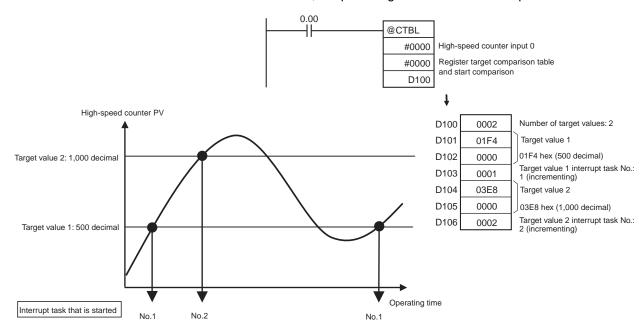

Example for Range Comparison with Eight Ranges


When CIO 0.00 turns ON in the following programming example, CTBL(882) registers a range comparison table using upper and lower limits for high-speed counter 0 and starts comparison.

The corresponding interrupt task is called and executed when the PV is within the limits set for range 1 or 2.

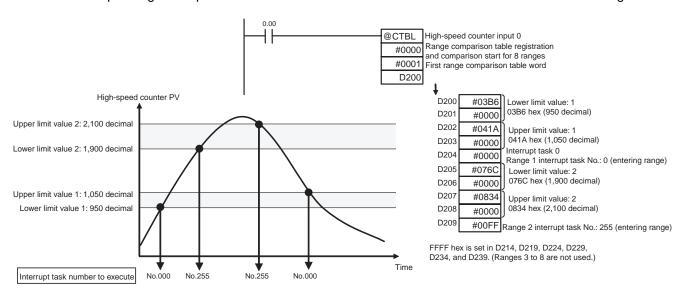


Example for Range Comparison for 1 to 32 Ranges (CJ2M Only)

When CIO 0.00 turns ON in the following programming example, CTBL(882) registers a range comparison table using upper and lower limits for high-speed counter 0 and starts comparison. When the PV of the high-speed counter leaves the upper/lower limits for range 1, interrupt task 0 is executed. When the PV leaves the upper/lower limits for range 2, interrupt task 5 is executed.

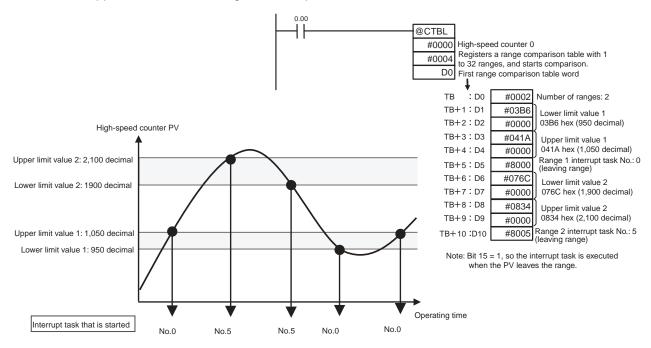

SPED

Instruction	Mnemonic	Variations	Function code	Function
SPEED OUTPUT	SPED	@SPED	885	SPED(885) is used to set the output pulse frequency for a specific port and start pulse output without acceleration or deceleration.

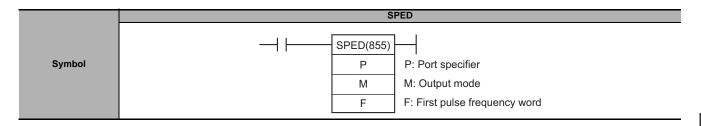

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
Р	Port specifier		1
M	Output mode		1
F	First pulse frequency word	UDINT	2

P: Port specifier


Р	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)

M: Output mode

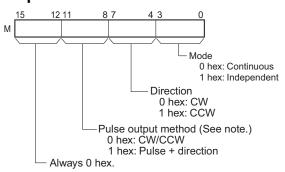

Note Use the same pulse output method when using pulse outputs 0 and 1 at the same time and when using 2 and 3 at the same time.

F: First pulse frequency word

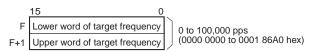

The value of F and F+1 sets the pulse frequency in pps.

Operand Specifications


Area	Word addresses					Indirect DM/EM addresses Con-		Con-	Registers		Flags		Pulse	TR				
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
P, M											ОК							
F	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, M, or F is exceeded. ON if ACC(888), PLS2(887), ORG(889) or IFEED(892) is already being executed to control pulse output for the specified port. ON if SPED(885) is used to change the mode between continuous and independent output during pulse output. ON if SPED(885) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. ON if SPEC(885) is executed in independent mode with an absolute number of pulses and the origin has not been established. ON if SPED(885) is executed in independent mode and the number of pulses is not set. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

SPED(885) starts pulse output on the port specified in P using the method specified in M at the frequency specified in F. Pulse output will be started each time SPED(885) is executed. It is thus normally sufficient to use the differentiated version (@SPED(885)) of the instruction or an execution condition that is turned ON only for one scan.

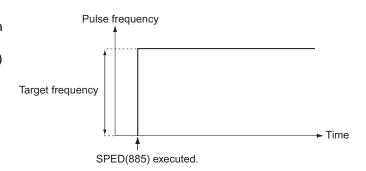

In continuous mode, pulse output will continue until stopped from the program. In independent mode, pulse output will stop automatically when the number of pulses set with PULS(886) in advance have been output.

An error will occur if the mode is changed between independent and continuous mode while pulses are being output.

Continuous Mode Speed Control

When continuous mode operation is started, pulse output will be continued until it is stopped from the program.

Note Pulse output will stop immediately if the CPU Unit is changed to PROGRAM mode.

Operation	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Starting pulse output	To output with specified speed	Changing the speed (frequency) in one step	Pulse frequency Target frequency Time	Outputs pulses at a specified frequency.	SPED(885) (Continuous)
			Execution of SPED(885)		
Changing settings	To change speed in one step	Changing the speed during operation	Pulse frequency Target frequency Present frequency Time Execution of SPED(885)	Changes the frequency (higher or lower) of the pulse output in one step.	SPED(885) (Continuous) ↓ SPED(885) (Continuous)

Operation	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Stopping pulse output	Stop pulse output	Immediate stop	Pulse frequency Present frequency Time Execution of INI(880)	Stops the pulse output immediately.	SPED(885) (Continuous) ↓ INI(880)
	Stop pulse output	Immediate stop	Pulse frequency Present frequency Time Execution of SPED(885)	Stops the pulse output immediately.	SPED(885) (Continuous) ↓ SPED(885), ACC(888) (Continuous, Target frequency of 0 pps)

Independent Mode Positioning

When independent mode operation is started, pulse output will be continued until the specified number of pulses has been output.

Note • Pulse output will stop immediately if the CPU Unit is changed to PROGRAM mode.


- The number of output pulses must be set each time output is restarted.
- The number of output pulses must be set in advance with PULS(881). Pulses will not be output for SPED(885) if PULS(881) is not executed first.
- The direction set in the SPED(885) operand will be ignored if the number of pulses is set with PULS(881) as an absolute value.

Operation	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Starting pulse output	To output with specified speed	Positioning without acceleration or deceleration	Pulse frequency Target frequency Target frequency Time Execution of SPED(885) Outputs the specified number of pulses (Specified with PULS(886).) Time Execution of SPED(885) and then stops.	Starts outputting pulses at the specified frequency and stops immediately when the specified number of pulses has been output. Note The target position (number of pulses) cannot be changed during positioning (pulse output).	PULS(886) ↓ SPED(885) (Independent)
Changing settings	To change speed in one step	Changing the speed in one step during operation	Pulse Specified number of pulses (Specified with (Specified with PULS(886).) Puls(886).) Original target frequency Original target frequency SPED(885) (independent mode) SPED(885) (independent mode) executed again to change the target frequency. (The target position is not changed.)	SPED(885) can be executed during positioning to change (raise or lower) the pulse output frequency in one step. The target position (specified number of pulses) is not changed.	PULS(886) ↓ SPED(885) (Independent) ↓ SPED(885) (Independent)

Operation	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Stopping pulse output	To stop pulse output (Number of pulses setting is not preserved.)	Immediate stop	Present frequency Present frequency Time Execution of Execution SPED(885) of INI(880)	Stops the pulse output immediately and clears the number of output pulses setting.	PULS(886) ↓ SPED(885) (Independent) ↓ INI(880)
	Stop pulse output (Number of pulses setting is not preserved.)	Immediate stop	Present frequency Present frequency Time Execution of Execution of SPED(885) SPED(885)	Stops the pulse output immediately and clears the number of output pulses setting.	PULS(886) \$PED(885) (Independent) \$\$SPED(885), ACC(888) (Independent, Target frequency of 0 pps)


Example Programming

When CIO 0.00 turns ON in the following programming example, PULS(886) sets the number of output pulses for pulse output 0. An absolute value of 5,000 pulses is set. SPED(885) is executed next to start pulse output using the CW/CCW method in the clockwise direction in independent mode at a target frequency of 500 pps.

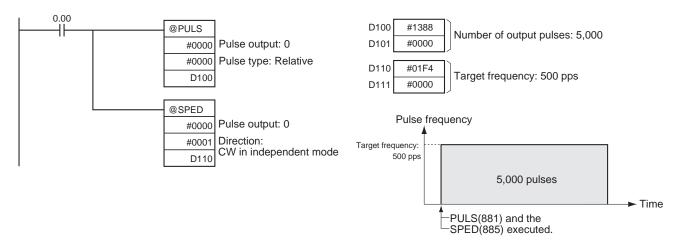

PULS

Instruction	Mnemonic	Variations	Function code	Function					
SET PULSES	PULS	@PULS	886	PULS(886) is used to set the pulse output amount (number of output pulses).					

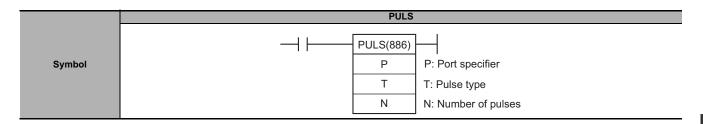

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	OK	OK	ОК	OK	OK	

Operands

Operand	Description	Data type	Size
Р	Port specifier		1
Т	Pulse type		1
N	Number of pulses	DINT	2


P: Port specifier

Р	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)

T: Pulse type

Т	Pulse type
0000 hex	Relative
0001 hex	Absolute

N and N+1: Number of pulses

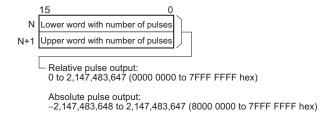

The actual number of movement pulses that will be output are as follows:
 For relative pulse output, the number of movement pulses = the set number of pulses.
 For absolute pulse output, the number of movement pulses = the set number of pulses - the PV.

Operand Specifications

Area			W	ord ad	dresse	s			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR	
	еа	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
P,	Т											ОК							
- 1	7	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, T, or N is exceeded. ON if PULS(886) is executed for a port that is already outputting pulses. ON if PULS(886) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function


PULS(886) sets the pulse type and number of pulses specified in T and N for the port specified in P. Actual output of the pulses is started later in the program using SPED(885) or ACC(888) in independent mode.

Note

- An error will occur if PULS(886) is executed when pulses are already being output. Use the differentiated version (@PULS(886)) of the instruction or an execution condition that is turned ON only for one scan to prevent this.
- The calculated number of pulses output for PULS(886) will not change even if INI(880) is used to change the PV of the pulse output.
- The direction set for SPED(885) or ACC(888) will be ignored if the number of pulses is set with PULS(881) as an absolute value.


Example Programming

When CIO 0.00 turns ON in the following programming example, PULS(886) sets the number of output pulses for pulse output 0. An absolute value of 5,000 pulses is set. SPED(885) is executed next to start pulse output using the CW/CCW method in the clockwise direction in independent mode at a target frequency of 500 pps.

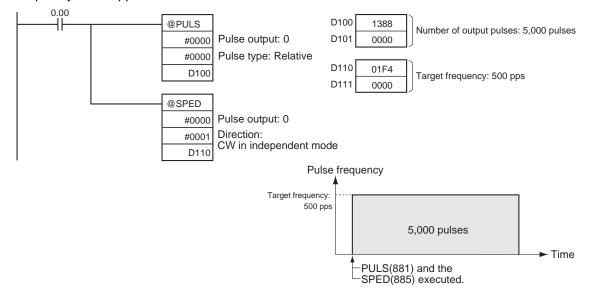

PLS2

Instruction	Mnemonic	Variations	Function code	Function
PULSE OUTPUT	PLS2	@PLS2	887	PLS2(887) outputs a specified number of pulses to the specified port. Pulse output starts at a specified startup frequency, accelerates to the target frequency at a specified acceleration rate, decelerates at the specified deceleration rate, and stops at approximately the same frequency as the startup frequency.

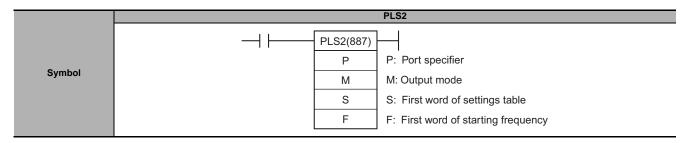

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	OK	OK	OK	OK	ОК	


Operands

Operand	Description	Data type	Size
Р	Port specifier		1
M	Output mode		1
S	First word of settings table	WORD	6
F	First word of starting frequency	UDINT	2

P: Port Specifier


P	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)

M: Output Mode

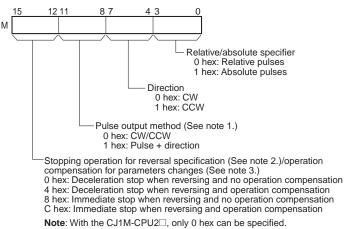

- Note 1 Use the same pulse output method when using both pulse outputs 0 and 1.
 - 2 The stopping method to use when reversing operation can be specified.
 - **3** If a constant speed cannot be achieved after parameters are changed, operation compensation can be set to continue operation.

S: First Word of Settings Table

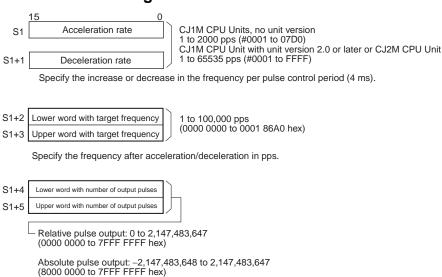


The actual number of movement pulses that will be output are as follows:

- For relative pulse output, the number of movement pulses = the set number of pulses.
- For absolute pulse output, the number of movement pulses = the set number of pulses the PV.

F: First Word of Starting Frequency

The starting frequency is given in F and F+1.

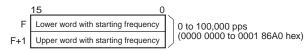

Specify the starting frequency in pps.

Operand Specifications

Area			W	ord ad	dresse	s			Indirect DM/EM addresses		Con-	Registers			Flags		Pulse	TR	
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits	
P, M											OK								
S	ок ок	OK	ОК	ОК	ОК	ОК	OK	ок ок	ОК	OK				OK					
F		OK	OK	OK	OK	OK	OK		\ OK	OK	OK			OK					

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, M, S, or F is exceeded. ON if PLS2(887) is executed for a port that is already outputting pulses for SPED(885), ORG(889) or IFEED(892). ON if PLS2(887) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. ON if PLS2(887) is executed for an absolute pulse output but the origin has not been established. ON if bit 14 (parameter change operation compensation) of M is ON and a constant speed cannot be achieved when changing the parameters. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function


PLS2(887) starts pulse output on the port specified in P using the mode specified in M at the start frequency specified in F (1 in diagram).

The frequency is increased every pulse control period at the acceleration rate specified in S until the target frequency specified in S is reached (2 in diagram).

When the target frequency has been reached, acceleration is stopped and pulse output continues at a constant speed (3 in diagram).

The deceleration point is calculated from the number of output pulses and deceleration rate set in S and when that point is reached, the frequency is decreased every pulse control period at the deceleration rate specified in S until the starting frequency specified in S is reached, at which point pulse output is stopped (4 in diagram).

Pulse output is started each time PLS2(887) is executed. It is thus normally sufficient to use the differentiated version (@PLS2(887)) of the instruction or an execution condition that is turned ON only for one scan.

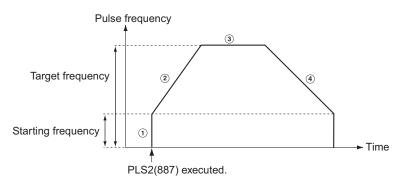

PLS2(887) can be used for positioning only in independent mode.

PLS2(887) can also be used to change settings during pulse output. With the CJ1M and CJ2M CPU Units, PLS2(887) can be executed during pulse output for ACC(888) in either independent or continuous mode, and during acceleration, constant speed, or deceleration. (See note.)

ACC(888) can also be executed during pulse output for PLS2(887) during acceleration, constant speed, or deceleration.

Note Executing PLS2(887) during speed control with ACC(888) (continuous mode) with the same target frequency as ACC(888) can be used to achieve interrupt feeding of a fixed distance. Acceleration will not be performed by PLS2(887) for this application, but if the acceleration rate is set to 0, the Error Flag will turn ON and PLS2(887) will not be executed. Always set the acceleration rate to a value other than 0.

• Independent Mode Positioning

Note Pulse output will stop immediately if the CPU Unit is changed to PROGRAM mode.


Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Starting pulse output	Complex trapezoidal control	Positioning with trapezoidal acceleration and deceleration (Separate rates used for acceleration; starting speed) The number of pulses can be changed during positioning.	Pulse frequency Specified number of pulses Target frequency	Accelerates and decelerates at a fixed rates. The pulse output is stopped when the specified number of pulses has been output. Note The target position (specified number of pulses) can be changed during positioning.	PLS2(887)

Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Changing settings	To change speed smoothly (with unequal acceleration and deceleration rates)	Changing the target speed (frequency) during positioning (different acceleration and deceleration rates)	Pulse frequency Pulses (Specified number of pulses (Specified with Pulse) (Specified with P	PLS2(887) can be executed during positioning to change the acceleration rate, deceleration rate, and target frequency. Note To prevent the target position from being changed intentionally, the original target position must be specified in absolute coordinates.	PLS2(887) ↓ PLS2(887) PULS(886) ↓ ACC(888) (Independent) ↓ PLS2(887)
	To change target position	Changing the target position during positioning (multiple start function)	Pulse frequency Specified number of pulses changed with PLS2(887). Target frequency Acceleration of PLS2(887) Execution of PLS2(887) executed to change the target position. (The target frequency and acceleration/deceleration rates are not changed.)	PLS2(887) can be executed during positioning to change the target position (number of pulses), acceleration rate, deceleration rate, and target frequency. Note With the CJ1M or when operation compensation for parameter changes is not enabled with the CJ2M, an error will occur and the original operation will continue to the original target position if a constant speed cannot be maintained after changing the settings.	PLS2(887) ↓ PLS2(887) PULS(886) ↓ ACC(888) (Independent) ↓ PLS2(887)
	To change target position and speed smoothly	Changing the target position and target speed (frequency) during positioning (multiple start function)	Pulse frequency Number of changed with PLS2(887). Changed target frequency Target frequency Target frequency PLS2(887) PLS2(887) PLS2(887) executed to change the target frequency, acceleration rate and deceleration rate.	PLS2(887) can be executed during positioning to change the target position (number of pulses), acceleration rate, deceleration rate, and target frequency. Note With the CJ1M or when operation compensation for parameter changes is not enabled with the CJ2M, an error will occur and the original operation will continue to the original target position if a constant speed cannot be maintained after changing the settings.	PULS(886) ↓ ACC(888) (Independent) ↓ PLS2(887) PLS2(887) ↓ PLS2(887)

Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Changing settings, continued	To change target posi- tion and speed smoothly, continued	Changing the acceleration and deceleration rates during positioning (multiple start function)	Pulse frequency Acceleration rate n Number of pulses specified by PLS2(887) #N. Acceleration rate n PLS2(887) #N. Acceleration rate n PLS2(887) #N. Execution of PLS2(887) #N Execution of PLS2(887) #N Execution of PLS2(887) #3 Execution of PLS2(887) #2	PLS2(887) can be executed during positioning (acceleration or deceleration) to change the acceleration rate or deceleration rate.	PULS(886) ↓ ACC(888) (Independent) ↓ PLS2(887) PLS2(887) ↓ PLS2(887)
	To change direction	Changing the direction during positioning	Pulse number of frequency pulses Target Change of direction at the specified deceleration rate frequency (position) changed by PLS2(887) Execution of PLS2 (887) Execution of PLS2(887)	PLS2(887) can be executed during positioning with absolute pulse specification to change to absolute pulses and reverse direction.	PLS2(887) ↓ PLS2(887) PULS(886) ↓ ACC(888) (Independent) ↓ PLS2(887)
Stopping pulse output	Stop pulse output (Number of pulses setting is not preserved.)	Immediate stop	Pulse frequency Present frequency Time Execution of Execution SPED(885) of INI(880)	Stops the pulse output immediately and clears the number of output pulses.	PLS2(887) ↓ INI(880)
	Stop pulse output smoothly. (Number of pulses setting is not preserved.)	Decelerate to a stop	Pulse frequency Present frequency Target frequency = 0 Execution of PLS2(887) Execution of PLS2(888)	Decelerates the pulse output to a stop.	PLS2(887) ↓ ACC(888) (Independent, target frequency of 0 pps)

Note Triangular Control

If the specified number of pulses is less than the number required to reach the target frequency and return to zero, the function will automatically reduce the acceleration/deceleration time and perform triangular control (acceleration and deceleration only.) An error will not occur.

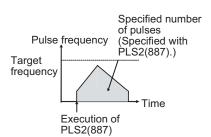

Switching from Continuous Mode Speed Control to Independent Mode Positioning


Example application	Frequency changes	Description	Procedure/ instruction
Change from speed control to fixed distance positioning during operation	Outputs the number of pulses specified in PLS2(887) (Both relative and absolute pulse specification can be used.) Target frequency Target frequency Time Execution of ACC(888) (continuous Execution of mode) PLS2(887)	PLS2(887) can be executed during a speed control operation started with ACC(888) to change to positioning operation. Note If a constant speed cannot be maintained after changing the settings, an error will occur and the original operation will continue to the original target position.	ACC(888) (Continuous) ↓ PLS2(887)
Fixed distance feed interrupt	Present frequency Present frequency Execution of ACC(888) (continuous mode) Execution of PLS2(887) with the following settings Number of pulses = number of pulses until stop Relative pulse specification Target frequency = present frequency		

• Stopping Operation for Reversal Specifications

The stop method can be set to a deceleration stop or an immediate stop when changing the specified number of output pulses and reversing operation.

- When the stop operation for reversal specification (bit 15 of M) is set to 0 to set a deceleration stop, the direction will be changed using the specified deceleration rate. (This is indicated by the dotted line in the figure.)
- When the stop operation for reversal specification (bit 15 of M) is set to 1 to set an immediate stop, the direction will be changed after an immediate stop. (This is indicated by the solid line in the figure.)
- If the specified number of output pulses is less than the number of pulses that has been moved, reverse operation is performed.

Note On the CJ1M-CPU2 \square , only a deceleration stop can be specified.

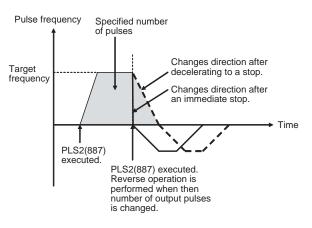

Operation Compensation When Parameters Are Changed


If a constant speed cannot be achieved or the target position is exceeded after parameters are changed, operation can be compensated and continued.

Note On the CJ1M-CPU2□, operation compensation cannot be used.

Target Frequency Not Reached
 If operation compensation for parameter changes is enabled by setting bit 14 of M to 1, triangular control will be performed to approach the target frequency as much as possible. (The acceleration and deceleration rates will not be changed.)


If operation compensation for parameter changes is disabled by setting bit 14 of M to 0, an instruction error will occur and PLS2(887) will not be executed.


Exceeding Target Position with Specified
Deceleration Rate
If operation compensation for parameter
changes is enabled by setting bit 14 of M to 1,
the deceleration rate will be changed to enable
stopping at the target position.
If operation compensation for parameter
changes is disabled by setting bit 14 of M to 0,
an instruction error will occur and PLS2(887)

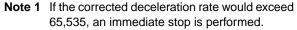


will not be executed.

- 2 If the corrected number of output pulses is smaller than the number of pulses that has been moved, reverse operation is performed instead of deceleration rate compensation. In this case, movement will stop and then movement to the target position will start again.
- 3 If the corrected deceleration rate is not an integer, it will be rounded up. The error that would occur from the decimal portion is compensated for at a constant speed and then deceleration is started.

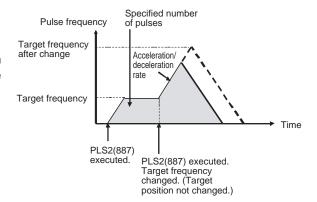

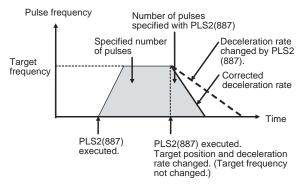

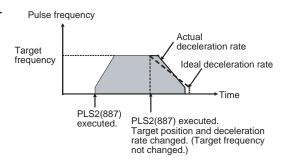


Precautions for Correct Use

If PLS2(887) is executed within one cycle where pulse output stops (Output In-progress Flag would be ON), the system waits for pulse output to stop and then pulse output is restarted in the next cycle. If pulse output is stopped with INI(880), however, pulse output instructions executed within one cycle of stopped will not be executed. Wait for the Output In-progress Flag to turn OFF before executing the next instruction.


Example Programming

When CIO 0.00 turns ON in the following programming example, PLS2(887) starts pulse output from pulse output 0 with an absolute pulse specification of 100,000 pulses. Pulse output is accelerated at a rate of 500 pps every 4 ms starting at 200 pps until the target speed of 50 kpps is reached. From the deceleration point, the pulse output is decelerated at a rate of 250 pps every 4 ms starting until the starting speed of at 200 pps is reached, at which point pulse output is stopped.

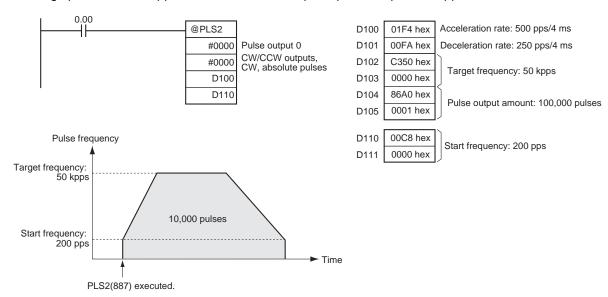

ACC

Instruction	Mnemonic	Variations	Function code	Function
ACCELERATION CONTROL	ACC	@ACC	888	ACC(888) outputs pulses to the specified output port at the specified frequency using the specified acceleration and deceleration rate.

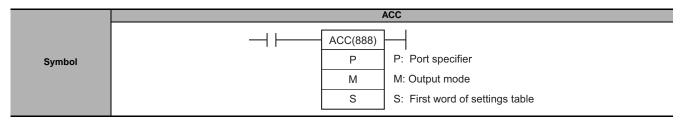

Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
Р	Port specifier		1
M	Output mode		1
S	First word of settings table	WORD	3

P: Port Specifier

P	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)

M: Output Mode

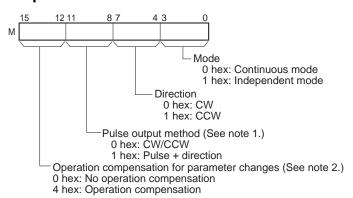

Note 1 Use the same pulse output mode when using pulse outputs 0 and 1 at the same time and when using 2 and 3 at the same time.

2 If a constant speed cannot be achieved after parameters are changed, operation compensation can be set to continue operation. (CJ2M Only)

S: First Word of Settings Table

15 0 CJ1M CPU Units, no unit version
1 to 2000 pps (#0001 to 07D0)
CJ1M CPU Unit with unit version 2.0 or later or CJ2M CPU Unit
1 to 65535 pps (#0001 to FFFF)

Specify the increase or decrease in the frequency per pulse control period (4 ms).

S+1 Lower word with target frequency S+2 Upper word with target frequency (0000 0000 to 0001 86A0 hex)

Specify the frequency after acceleration or deceleration in pps.

Operand Specifications

Aron		Word addresses							rect DM/EM Registers Flags					Pulse	TR			
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
P, M											OK							
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, M, or S is exceeded. ON if pulses are being output using ORG(889) or IFEED(892) for the specified port. ON if ACC(888) is executed to switch between independent and continuous mode for a port that is outputting pulses for SPED(885), ACC(888), or PLS2(887). ON if ACC(888) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. ON if ACC(888) is executed for an absolute pulse output in independent mode but the origin has not been established. ON if bit 14 (parameter change operation compensation) of M is ON to specify not using parameter change operation compensation and a constant speed cannot be achieved when changing the parameters. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

ACC(888) starts pulse output on the port specified in P using the mode specified in M using the target frequency and acceleration/deceleration rate specified in S. The frequency is increased every pulse control period (4 ms) at the acceleration rate specified in S until the target frequency specified in S+1 and S+2 is reached.

Pulse output is started each time ACC(888) is executed. It is thus normally sufficient to use the differentiated version (@ACC(888)) of the instruction or an execution condition that is turned ON only for one scan.

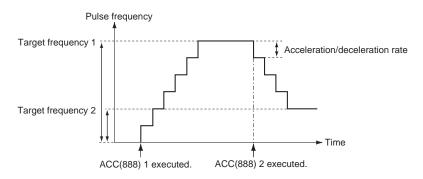

In continuous mode, pulse output will continue until stopped from the program.

In independent mode, pulse output will stop automatically when the number of pulses set with PULS(886) in advance have been output.

An error will occur if the mode is changed between independent and continuous mode while pulses are being output.

ACC(888) can also be used to change settings during pulse output. ACC(888) in independent mode can also be executed during pulse output for PLS2(887) during acceleration, constant speed, or deceleration. With the CJ1M and CJ2M CPU Units, PLS2(887) can be executed during pulse output for ACC(888) in either independent or continuous mode, and during acceleration, constant speed, or deceleration. (See note 1.)

Note Executing PLS2(887) during speed control with ACC(888) (continuous mode) with the same target frequency as ACC(888) can be used to achieved interrupt feeding of a fixed distance. Acceleration will not be performed by PLS2(887) for this application, but if the acceleration rate is set to 0, the Error Flag will turn ON and PLS2(887) will not be executed. Always set the acceleration rate to a value other than 0.

Continuous Mode Speed Control

Pulse output will continue until it is stopped from the program.

Note Pulse output will stop immediately if the CPU Unit is changed to PROGRAM mode.

Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Starting pulse output	To output with specified acceleration and speed	Accelerating the speed (frequency) at a fixed rate	Pulse frequency Target frequency Acceleration/ deceleration rate Time Execution of ACC(888)	Outputs pulses and changes the frequency at a fixed rate.	ACC(888) (Continuous)
Changing settings	To change speed smoothly	Changing the speed smoothly during operation	Pulse frequency Target frequency Acceleration/ deceleration/ rate Time Execution of ACC(888)	Changes the frequency from the present frequency at a fixed rate. The frequency can be accelerated or decelerated.	ACC(888) or SPED(885) (Continuous) ↓ ACC(888) (Continuous)
		Changing the speed in a polyline curve during operation	Pulse frequency Target frequency Acceleration rate n Acceleration rate n Acceleration rate 1 Present frequency Execution of ACC(888) Execution of ACC(888) Execution of ACC(888)	Changes the acceleration or deceleration rate during acceleration or deceleration.	ACC(888) (Continuous) ACC(888) (Continuous)
		Decelerating to a stop	Pulse frequency Present frequency Target frequency = 0 Execution of ACC(888) The acceleration/ deceleration rate is changed while decelerating. Note If the target frequency is set to 0 pps, the current acceleration/ deceleration rate will be used.	ACC(888) (Continuous) ↓ ACC(888) (Continuous) ↓ ACC(888) (Continuous, target frequency of 0 pps)	
Stopping pulse output	To stop pulse output	Immediate stop	Pulse frequency Present frequency Time Execution of ACC(888) Execution of INI(880)	Immediately stops pulse output.	ACC(888) (Continuous) ↓ INI(880) (Continuous)
	To stop pulse output smoothly	Decelerating to a stop	Pulse frequency Present frequency Acceleration/deceleration rate (value set when starting) Target frequency = 0 Execution of ACC(888) Execution of ACC(888)	Decelerated pulse output to a stop. Note If the target frequency of the second ACC(888) instruction is 0 pps, the acceleration/decel eration rate from the first ACC(888) instruction will be used.	ACC(888) (Continuous) ↓ ACC(888) (Continuous, target frequency of 0 pps)

Independent Mode Positioning

When independent mode operation is started, pulse output will be continued until the specified number of pulses has been output.

The deceleration point is calculated from the number of output pulses and deceleration rate set in S and when that point is reached, the frequency is decreased every pulse control period at the deceleration rate specified in S until the specified number of points has been output, at which point pulse output is stopped.


- Note 1 Pulse output will stop immediately if the CPU Unit is changed to PROGRAM mode.
 - 2 The number of output pulses must be set each time output is restarted.
 - 3 The number of output pulses must be set in advance with PULS(881). Pulses will not be output for ACC(888) if PULS(881) is not executed first.
 - 4 The direction set in the ACC(888) operand will be ignored if the number of pulses is set with PULS(881) as an absolute value.

Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Starting and stopping pulse output	Simple trapezoidal control	Positioning with trapezoidal acceleration and deceleration (Same rate used for acceleration; no starting speed) The number of pulses cannot be changed during positioning.	Pulse frequency Fulse frequency Target frequency Acceleration rate Execution of ACC(888) Outputs the specified number of pulses and then stops.	Accelerates and decelerates at the same fixed rate and decelerates to a stop when the specified number of pulses has been output. (See note.) Note The target position (specified number of pulses) cannot be changed during positioning.	PULS(886) ↓ ACC(888) (Independent)
Changing settings	To change speed smoothly (with the same acceleration and deceleration rates)	Changing the target speed (frequency) during positioning (acceleration rate = deceleration rate)	Specified number of pulses (Specified with PULS(886).) Changed target frequency Target frequency Acceleration/ deceleration of ACC(888) (independent mode) Execution of ACC(888) (independent mode) executed again to change the target frequency. (The target position is not changed, but the acceleration/deceleration rate is changed.)	ACC(888) can be executed during positioning to change the acceleration/deceleration rate and target frequency. The target position (specified number of pulses) is not changed.	PULS(886) ↓ ACC(888) ↓ ACC(888) (Independent) PLS2(887) ↓ ACC(888) (Independent)
Stopping pulse output	To stop pulse output. (Number of pulses setting is not preserved.)	Immediate stop	Pulse frequency Present frequency Time Execution of Execution of ACC(888) INI(880)	Pulse output is stopped immediately and the remaining number of output pulses is cleared.	PULS(886) ↓ ACC(888) (Independent) ↓ INI(880)

Opera- tion	Purpose	Application	Frequency changes	Description	Procedure/ instruction
Stopping pulse output, continued	To stop pulse output smoothly. (Number of pulses setting is not preserved.)	Decelerating to a stop	Present frequency Present frequency Target frequency = 0 Execution of Execution of PLS2(887) ACC(888)	Decelerates the pulse output to a stop. Note If ACC(888) started the operation, the original acceleration/decel eration rate will remain in effect.	PULS(886) ↓ ACC(888) (Independent) ↓ ACC(888) (Independent, independent, target frequency of 0 pps) PLS2(887) ↓ ACC(888) (Independent, target frequency of 0 pps)

Note Triangular Control

If the specified number of pulses is less than the number required to reach the target frequency and return to zero, the function will automatically reduce the acceleration/deceleration time and perform triangular control (acceleration and deceleration only.) An error will not occur.

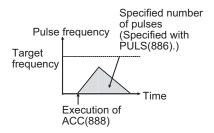



Operation Compensation When Parameters Are Changed


If a constant speed cannot be achieved or the target position is exceeded after parameters are changed in independent mode, operation can be compensated and continued.

Note On the CJ1M-CPU2, operation compensation cannot be used.

- Target Frequency Not Reached
 If operation compensation for parameter changes is enabled by setting bit 14 of M to 1, triangular control will be performed to approach the target frequency as much as possible.
 - If operation compensation for parameter changes is disabled by setting bit 14 of M to 0, an instruction error will occur and ACC(888) will not be executed.
- Exceeding Target Position with Specified Acceleration/Deceleration Rate
 If operation compensation for parameter
 changes is enabled by setting bit 14 of M to
 1, the deceleration rate will be changed to
 enable stopping at the target position.
 If operation compensation for parameter
 changes is disabled by setting bit 14 of M
 to 0, an instruction error will occur and
 ACC(888) will not be executed.
- Note 1 If the corrected deceleration rate would exceed 65,535, an immediate stop is performed
 - 2 If the corrected deceleration rate is not an integer, it will be rounded up. The error that would occur from the decimal portion is compensated for at a constant speed and then deceleration is started.

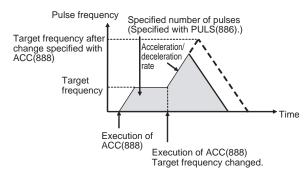

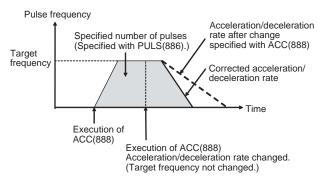

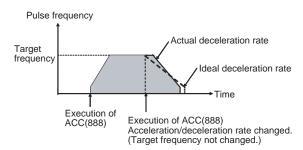


Precautions for Correct Use

If ACC(888) or PLS2(887) is executed within one cycle where pulse output stops (Output In-progress Flag would be ON), the system waits for pulse output to stop and then pulse output is restarted in the next cycle. If pulse output is stopped with INI(880), however, pulse output instructions executed within one cycle of stopped will not be executed. Wait for the Output In-progress Flag to turn OFF before executing the next instruction.

If pulse output that is being executed for SPED(885) is stopped by setting the target frequency to 0 pps with SPED(885) or ACC(888), operation will be the same as when pulse output is stopped with INI(880). Wait for the Output In-progress Flag to turn OFF before executing the next positioning instruction.


Example Programming

When CIO 0.00 turns ON in the following programming example, ACC(888) starts pulse output from pulse output 0 in continuous mode in the clockwise direction using the CW/CCW method. Pulse output is accelerated at a rate of 20 pps every 4 ms until the target frequency of 500 pps is reached. When CIO 0.01 turns ON, ACC(888) changes to an acceleration rate of 10 pps every 4 ms until the target frequency of 1,000 pps is reached.

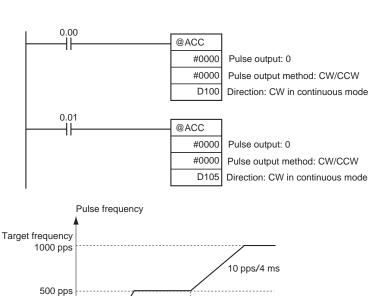


, 20 pps/4 ms

ACC(888) executed. ACC(888) executed.

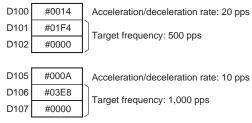

ORG

Instruction	Mnemonic	Variations	Function code	Function
ORIGIN SEARCH	ORG	@ORG	889	ORG(889) performs an origin search or origin return operation.

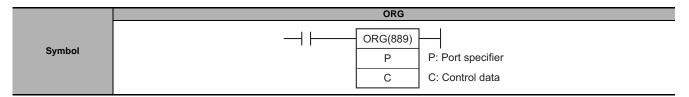

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
Р	Port specifier		1
С	Control data		1

P: Port Specifier

P	Port
0000 hex	Pulse output 0
0001 hex	Pulse output 1
0002 hex	Pulse output 2 (CJ2M only)
0003 hex	Pulse output 3 (CJ2M only)

C: Control Data

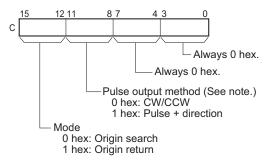

Note Use the same pulse output method when using both pulse outputs 0 and 1.

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
P,C											OK							

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P or C is exceeded. ON if ORG(889) is specified for a port during pulse output for SPED(885), ACC(888), PLS2(887) or IFEED(892). ON if ORG(889) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. ON if the origin search or origin return parameters are not within range. ON if the Origin Search High Speed is less than or equal to the Origin Search Proximity Speed or the Origin Search Proximity Speed is less than or equal to the Origin Search Initial Speed. ON if an origin return is specified and the origin has not been established. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

ORG(889) performs an origin search or origin return operation for the port specified in P using the method specified in C.

The following parameters must be set in the PLC Setup before ORG(889) can be executed.

Origin search	Origin return
Origin Search Function Enable/Disable Origin Search Operating Mode Origin Search Operation Setting Origin Detection Method Origin Search Direction Setting Origin Search High Speed Origin Search High Speed Origin Search Proximity Speed Origin Search Acceleration Rate Origin Search Deceleration Rate Origin Compensation Origin Proximity Input Signal Type Origin Input Signal Type Limit Input Signal Type Positioning Monitor Time	Origin Return Target Speed Origin Search/Return Initial Speed Origin Return Acceleration Rate Origin Return Deceleration Rate

An origin search or origin return is started each time ORG(889) is executed. It is thus normally sufficient to use the differentiated version (@ORG(889)) of the instruction or an execution condition that is turned ON only for one scan.

Origin Search (Bits 12 to 15 of C = 0 hex)

ORG(889) starts outputting pulses using the specified method at the Origin Search Initial Speed (1 in diagram).


Pulse output is accelerated to the Origin Search High Speed using the Origin Search Acceleration Rate (2 in diagram).

Pulse output is then continued at constant speed until the Origin Proximity Input Signal turns ON (3 in diagram), from which point pulse output is decelerated to the Origin Search Proximity Speed using the Origin Search Deceleration Rate (4 in diagram).

Pulses are then output at constant speed until the Origin Input Signal turns ON (5 in diagram).

Pulse output is stopped when the Origin Input Signal turns ON (6 in diagram).

When the origin search operation has been completed, the Error Counter Reset Output will be turned ON.

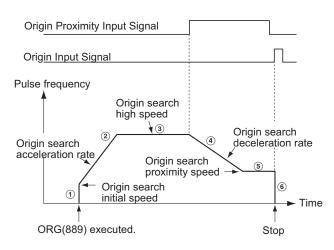


The above operation, however, depends on the operating mode, origin detection method, and other parameters.

Origin Return (Bits 12 to 15 of C = 1 hex)

ORG(889) starts outputting pulses using the specified method at the Origin Return Initial Speed (1 in diagram).

Pulse output is accelerated to the Origin Return Target Speed using the Origin Return Acceleration Rate (2 in diagram) and pulse output is continued at constant speed (3 in diagram).

The deceleration point is calculated from the number of pulses remaining to the origin and the deceleration rate and when that point is reached, the pulse output is decelerated at the Origin Return Deceleration Rate (4 in diagram) until the Origin Return Start Speed is reached, at which point pulse output is stopped at the origin (5 in diagram).

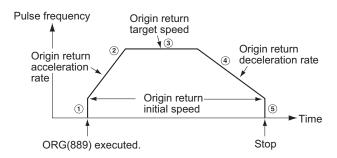


Hint

For the CJ2M, INI(880) can be executed to change some of the origin search/return parameters during operation, such as the Starting Speed, Target Speed, or Acceleration/Deceleration Rate, by setting C to 0005 hex.

Example Programming

When CIO 0.00 turns ON in the following programming example, ORG(889) starts an origin return operation for pulse output 0 by outputting pulses using the CW/CCW method. According to the PLC Setup, the initial speed is 100 pps, the target speed is 200 pps, and the acceleration and deceleration rates are 50 pps/4 ms.

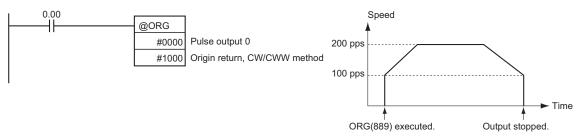


The PLC Setup parameters are as follows:

Parameter	Setting
Pulse Output 0 Starting Speed for Origin Search and Origin Return	100 pps
Pulse Output 0 Origin Return Target Speed	200 pps
Pulse Output 0 Origin Return Acceleration Rate	50 pps/4 ms
Pulse Output 0 Origin Return Deceleration Rate	50 pps/4 ms

PWM

Instruction	Mnemonic	Variations	Fun No.	Function
PWM outputs	PWM	@PWM	891	PWM(891) is used to output pulses with a variable duty factor.

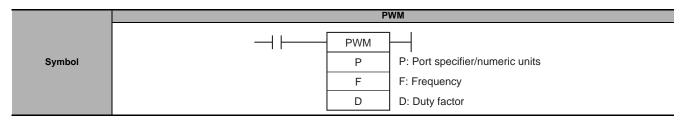

Applicable Program Areas


Area	Function block definitions	Block program areas Step program ar		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
Р	Port specifier/numeric units		1
F	Frequency	UNIT	1
D	Duty factor	UNIT	1

P: Port specifier/numeric units

Set value	Fraguency unit	Duty ratio unit	Setting support				
Set value	Frequency unit	Duty ratio unit	CJ1M-CPU2□	CJ2M+MD21□			
#000□	0.1 Hz	1%	OK	OK			
#100□	0.1 Hz	0.1%	OK	OK			
#110□	1 Hz	0.1%	Not allowed.	OK			

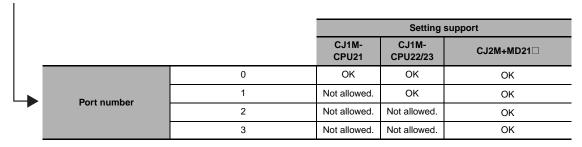

F: Frequency

Numeric unit	Setting range	Setting support				
Numeric unit	Setting range	CJ1M-CPU2□	CJ2M+MD21□			
0.1 Hz	0.1 to 6,553.5 Hz 1 to 65,535 (0001 to FFFF hex)	OK	OK			
1 Hz	1 to 32,800 Hz 1 to 32,800 (0001 to 8020 hex)	Not allowed.	ОК			

D: Duty factor

		Setting support				
Numeric unit	Setting range	CJ1M-CPU2□ (pre-version 2.0)	CJ1M-CPU2□ with unit version 2.0 or later or CJ2M + MD21□			
1%	0% to 100% 0 to 100 (0000 to 0064 hex)	OK	ОК			
0.1%	0.0% to 100.0% 0 to 1,000 (0000 to 03E8 hex)	Not allowed.	ОК			

Operand Specifications

Aron			W	ord ad	dresse	s			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
Р											ОК							
F, D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	UK -	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, F, or D is exceeded. ON if the origin search function is assigned to the PWM output terminal in the PLC Setup. ON if PWM(891) is executed in an interrupt task for the same port number when PWM(891) is already being executed. For a CJ2M CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function

PWM(891) outputs the frequency specified in F at the duty factor specified in D from the port specified in P.

PWM(891) can be executed during duty-factor PWM output to change the duty factor without stopping PWM output. Any attempts to change the frequency will be ignored. PWM output is started each time PWM(891) is executed. It is thus normally sufficient to use the differentiated version (@PWM(891)) of the instruction or an execution condition that is turned ON only for one scan.


The PWM output will continue until stopped using one of the following occurs:


- (1) INI(880) is executed to stop it (C = 0003 hex: stop PWM output).
- (2) The CPU Unit is switched to PROGRAM mode.

Example Programming

When CIO 0.00 turns ON in the following programming example, PWM(891) starts pulse output from PWM output 0 at 200 Hz with a duty factor of 50%.


When CIO 0.01 turns ON, the duty factor is changed to 25% from the next output pulse.

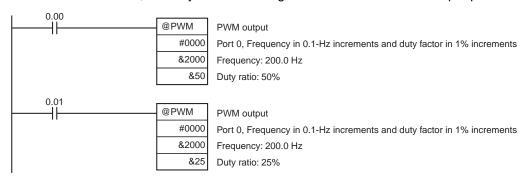

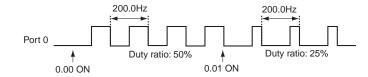

IFEED

Instruction	Instruction Mnemonic		Function code	Function
INTERRUPT FEEDING	IFEED	@IFEED	892	IFEED(892) uses an input interrupt as a trigger to switch from speed control to position control and move the specified number of pulses. IFEED(892) is supported only by the CJ2M.

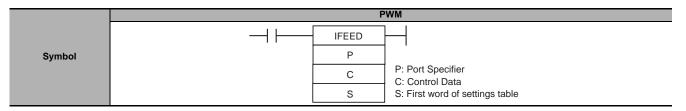

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	ОК	OK	OK	

Operands


Operand	Description	Data type	Size
Р	Port specifier		1
С	Control word		1
S	First word of settings table	WORD	6

P: Port Specifier

Р	
0000 hex	Input interrupt 0 – Pulse output 0
0001 hex	Input interrupt 1 – Pulse output 1
0002 hex	Input interrupt 4 – Pulse output 2
0003 hex	Input interrupt 5 – Pulse output 3

Note The input interrupt and pulse output combinations given above must be used. They cannot be changed.

C: Control Data

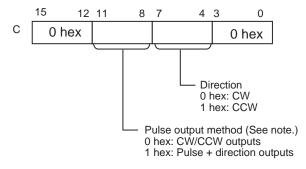

Note: Use the same pulse output method when using pulse outputs 0 and 1 at the same time and when using 2 and 3 at the same time.

S: First word of settings table

S	Acceleration Rate	1 to 65,535 pps/4 ms (0001 to FFFF hex)
S+1	Deceleration Rate	1 to 65,535 pps/4 ms (0001 to FFFF hex)
S+2	Lower word of target frequency	0 to 100 kpps (0000 0000 to 0001 86A0 hex)
S+3	Upper word of target frequency	0 to 100 kpps (0000 0000 to 0001 86A0 flex)
S+4	Lower word with number of pulses	1 14d111501 01 0dtpdt pd1505. 0 to 2,147,400,047
S+5	Upper word with number of pulses	

Operand Specifications

Aron			W	ord ad	dresse	s			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
P, C											OK							
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified range for P, C, or S is exceeded. ON if an input that is being used for an input interrupt is not set as an input interrupt in the PLC Setup. ON if IFEED(892) is executed in an interrupt task when an instruction controlling pulse output is being executed in a cyclic task. ON if pulse output is already being performed for the pulse output port. ON if using interrupts is enabled for the specified input interrupt. ON if the number of output pulses specified in S is less than the number of pulses required to decelerate to a stop for the specified operation. For a CJZM CPU Unit, ON for any function that uses I/O on the Pulse I/O Module even if a Pulse I/O Module is not mounted. OFF in all other cases.

Function


IFEED(892) starts pulse output from the port specified in P using the method specified in C. Movement accelerates at the acceleration rate specified in S to the target frequency specified in S and speed control is performed in continuous mode. Then, when the input interrupt specified in C occurs (see note), the system switches to position control, outputs the number of pulses specified by S and decelerates at the deceleration rate specified by S.

Note Direct mode interrupts for the interrupt inputs are enabled by IFEED(892). It is not necessary to execute MSKS(690). Even if an interrupt task exists, it will not be executed. However, to create an input interrupt when the interrupt input turns OFF, execute MSKS(690) before IFEED(892) to specify downward differentiation. Unless MSKS(690) is used to specify downward differentiation, an input interrupt will be generated for IFEED(892) when the interrupt input turns ON.

IFEED(892) performs control by combining a specific pulse output with an input interrupt. It does not use an interrupt task. Rather, interrupt feeding is set and executed separately for each IFEED(892) instruction.

This achieves faster interrupt response than starting an interrupt task and executing PLS2(887) in the interrupt task. The input interrupt and pulse output combinations given above must be used. They cannot be changed. Once pulse output has been started with IFEED(892), no other pulse output instructions except for INI(880) can be executed, and INI(880) can be used only to stop pulse output. If INI(880) is executed to stop pulse output, pulse output will be stopped and the input interrupt will be masked. If IFEED(892) is executed again, pulse output will be started from the beginning.

To use other combinations of pulse outputs and input interrupts or to change settings during pulse output, use ACC(888) and PLS2(887).

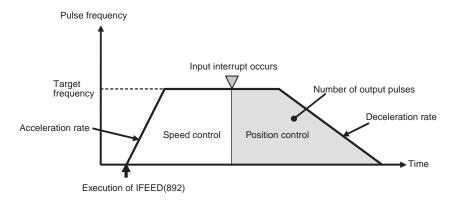


Precautions for Correct Use

An instruction error will occur if a constant speed cannot be achieved for the number of pulses specified by S. If that occurs, set the number of output pulses so that it is greater than the number of pulses found from the target frequency and deceleration rate using the following formula.


Number of output pulses for no error = Number of pulses in 1 pulse control cycle at the target frequency* \times 4 + Number of pulses required to decelerate from the target frequency*

* Round up below the decimal point.

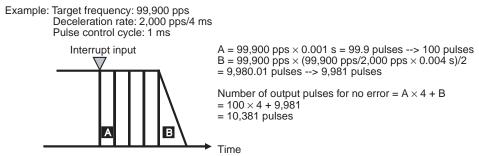

Example Programming

When CIO 0.00 turns ON, pulse output from pulse output 0 is started. The system accelerates at 50 pps/4 ms to a target frequency of 500 pps and then performs speed control in continuous mode. When input interrupt 0 occurs, the system switches to position control and then decelerates at 20 pps/4 ms to stop after outputting the specified number of pulses.

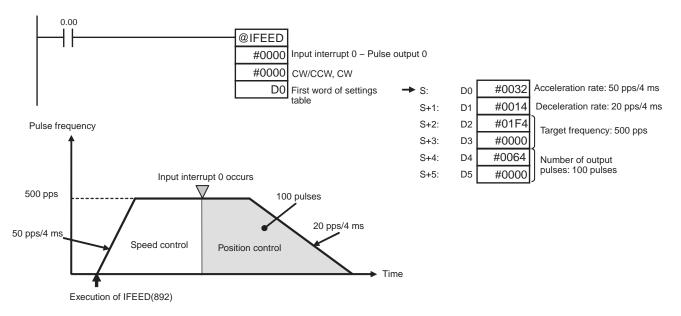


Step Instructions

Step Instructions

In CS/CJ-series PLCs, STEP(008)/SNXT(009) can be used together to create step programs.


Instruction	Operation	Diagram
SNXT(009): STEP START	Controls progression to the next step of the program.	Step Ladder section start instruction Equivalent to
STEP(008): STEP DEFINE	Indicates the start of a step. Repeats the same step program until the conditions for progression to the next step are established.	Step Ladder section start instruction Equivalent to Step

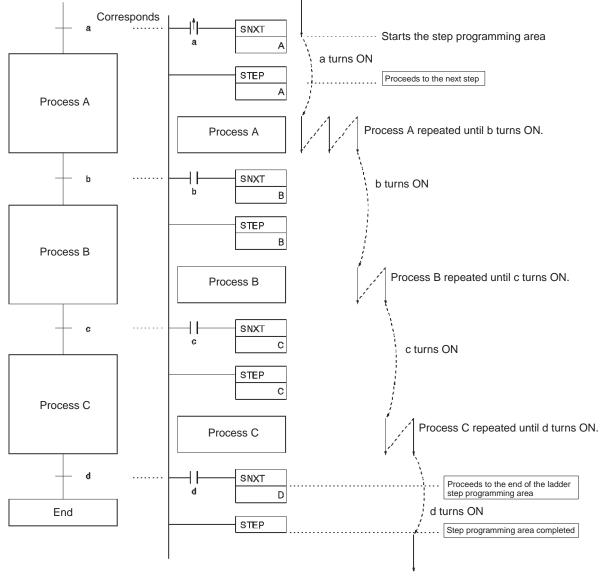

Note Work bits are used as the control bits for A, B, C and D.

SNXT/STEP

Instruction	Mnemonic	Variations	Function code	Function
STEP START	SNXT		009	SNXT(009) is used to control progression of step execution in the step program area.
STEP DEFINE		008	STEP(008) is used to define the beginning and the end of the step program area.	

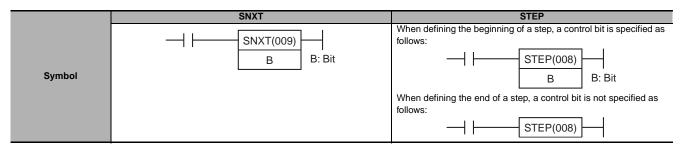

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed Not allowed		OK	Not allowed	Not allowed	Not allowed

Operands

Operand	Description	Data type	Size	
В	Bit		1	

Operand Specifications

Avas	Word addresses				Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR					
Area	CIO	WR	HR	AR	Т	С	DM	ЕМ	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
В		OK												OK				

Flags

Name	Label	Operation					
Name	Labei	SNXT	STEP				
Error Flag	ER	 ON when the specified bit B is not in the WR area. ON when SNXT(009) is used in an interrupt program. OFF in all other cases. 	 ON when the specified bit B is not in the WR area. ON when STEP(008) is used in an interrupt program. OFF in all other cases. 				

Function

• SNXT(009)

SNXT(009) is used in the following three ways:

- 1.To start step programming execution.
- 2. To proceed to the next step control bit.
- 3. To end step programming execution.

The step program area is from the first STEP(008) instruction (which always takes a control bit) to the last STEP(008) instruction (which never takes a control bit).

Starting Step Execution

SNXT(009) is placed at the beginning of the step program area to start step execution. It turns ON the control bit specified for B for the next STEP(008) and proceeds to step B (all instructions after STEP(008) B). A differentiated execution condition must be used for the SNXT(009) instruction that starts step programming area execution, or step execution will last for only one cycle.

Proceeding to the Next Step

When SNXT(009) occurs in the middle of the step program area, it is used to proceed to the next step. It turns OFF the previous control bit and turns ON the next control bit B, for the next step, thereby starting step B (all instructions after STEP(008) B).

Ending the Step Programming Area

When SNXT(009) is placed at the very end of the step program area, it ends step execution and turns OFF the previous control bit. The control bit specified for B is a dummy bit. This bit will however be turned ON, so be sure to select a bit that will not cause problems.

STEP(008)

STEP(008) functions in following 2 ways, depending on its position and whether or not a control bit has been specified.

- 1. Starts a specific step.
- 2. Ends the step program area (i.e., step execution).

Starting a Step

STEP(008) is placed at the beginning of each step with an operand, B, that serves as the control bit for the step.

The control bit B will be turned ON by SNXT(009) and the instruction in the step will be executed from the one immediately following STEP(008). A200.12 (Step Flag) will also turn ON when execution of a step begins.

After the first cycle, step execution will continue until the conditions for changing the step are established, i.e., until the SNXT(009) instruction turns ON the control bit in the next STEP(008).

When SNXT (009) turns ON the control bit for a step, the control bit B of the current instruction will be reset (turned OFF) and the step controlled by bit B will become interlocked.

Handling of outputs and instructions in a step will change according to the ON/OFF status of the control bit B. (The status of the control bit is controlled by SNXT(009)). When control bit B is turned OFF, the instructions in the step are reset and are interlocked. Refer to the following tables.

Control bit status	Handling					
ON	Instructions in the step are executed normally.					
ON→OFF	Bits and instructions in the step are interlocked as shown in the next table.					
OFF	All instructions in the step are processed as NOPs.					

Interlock Status (IL)

Instruction output	Status	
Bits specified for OUT, OUT NOT	All OFF	
TIM, TIMX(551), TIMH(015), TIMHX(551), TMHH(540),	PV	0000 hex (reset)
TIMHHX(552), TIML(542), and TIMLX(553)	Completion Flag	OFF (reset)
TIMU(541), TIMUX(556), TMUH(544), and TMUHX(557)*1	Cannot be read.	
Bits or words specified for other instructions (see note)	Holds the previous status (but the instructions are not executed)	

Note Indicates all other instructions, such as TTIM(087), TTIMX(555), MTIM(543), MTIMX(554), SET, REST, CNT, CNTX(546), CNTR(012), CNTRX(548), SFT(010), and KEEP(011).

*1 CJ1-H-R and CJ2 CPU Units only

The STEP(008) instruction must be placed at the beginning of each step. STEP(008) is placed at the beginning of a step area to define the start of the step.


Ending the Step Program Area

STEP(008) is placed at the end of the step program area without an operand to define the end of step programming.

When the control bit preceding a SNXT(009) instruction is turned OFF, step execute is stopped by SNXT(009).


Hint

A200.12 (Step Flag) is turned ON for one cycle when STEP(008) is executed. This flag can be used to conduct initialization once the step execution has started.

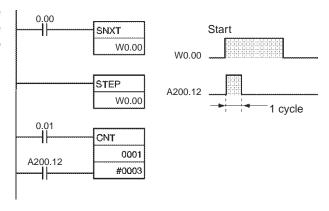

Related Bits

Name	Address	Details			
Step Flag	A200.12	ON for one cycle when a step program is started using STEP(008). Can be used to			
		timers and perform other processing when starting a new step.			

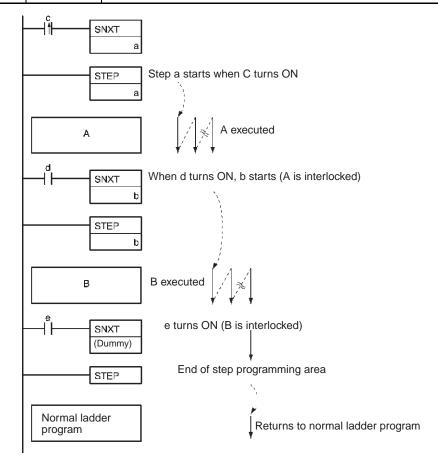


Precaution

- The control bit, B, must be in the Work Area for STEP(008)/SNXT(009).
- A control bit for STEP(008)/SNXT(009) cannot be use anywhere else in the ladder diagram. If the same bit is used twice, as duplication bit error will occur.
- If SBS(091) is used to call a subroutine from within a step, the subroutine outputs and instructions will not be interlocked when the control bit turns OFF.
- SNXT(009) is executed when the execution condition is ON.
- Input SNXT(009) at the end of the step program area and make sure that the control bit is a dummy bit in the Work Area. If a control bit for a step is used in the last SNXT(009) in the step program area, the corresponding step will be started when SNXT(009) is executed.


- STEP(008) and SNXT(009) cannot be used inside of subroutines, interrupt programs, or block programs.
- The instructions that cannot be used within step programs are listed in the following table.


Function	Mnemonic	Name			
Sequence	END(001)	END			
Control Instructions	IL(002)	INTERLOCK			
o dollorio	ILC(003)	INTERLOCK CLEAR			
	JMP(004)	JUMP			
	JME(005)	JUMP END			
	CJP(510)	CONDITIONAL JUMP			
	CJPN(511)	CONDITIONAL JUMP NOT			
	JMP0(515)	MULTIPLE JUMP			
	JME0(516)	MULTIPLE JUMP END			
Subroutine	SBN(092)	SUBROUTINE ENTRY			
Instructions	RET(093)	SUBROUTINE RETURN			

Example Programming

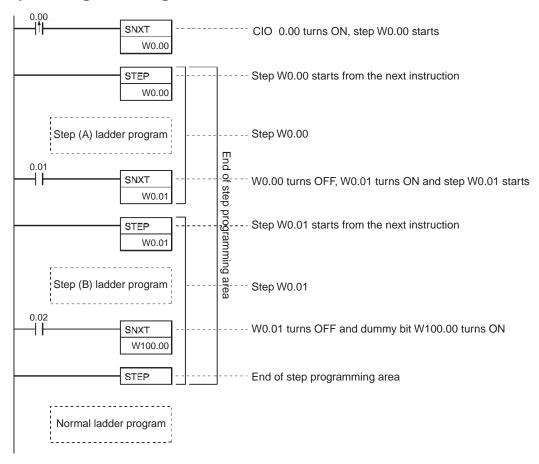



(1) Sequential Control

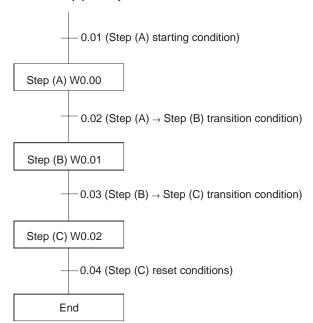

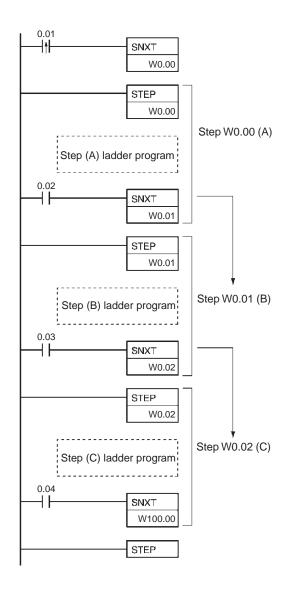

(2) Branching Control

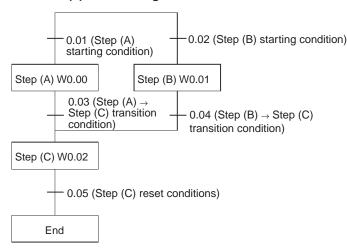


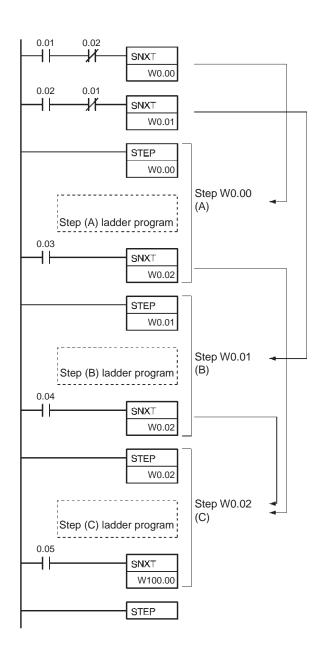


• Additional Information:

- In the above example, where SNXT(009) is executed for W0.02, the branching moves onto the next steps even though the same control bit is used twice. This is not picked up as an error in the program check using the CX-Programmer. A duplicate bit error will only occur in a step ladder program only when a control bit in a step instructions is also used in the normal ladder diagram.
- The above programming is used when steps A and B cannot be executed simultaneously. For simultaneous execution of A and B, delete the execution conditions illustrated below.


(3) Parallel Control

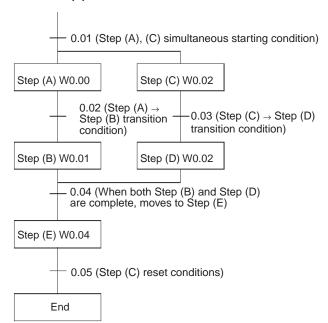


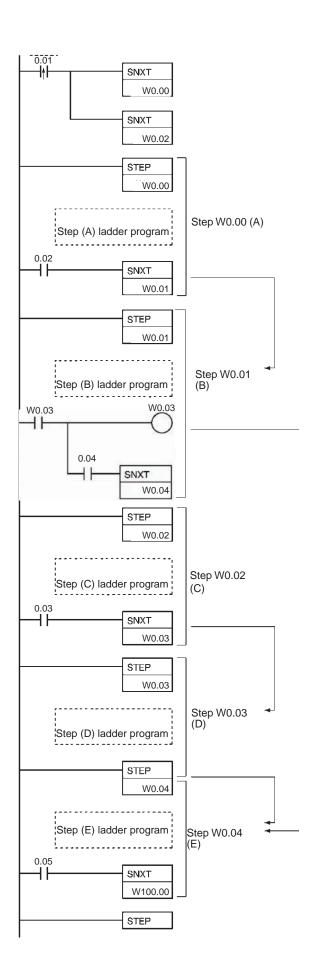

Application Examples

(1) Sequential Execution

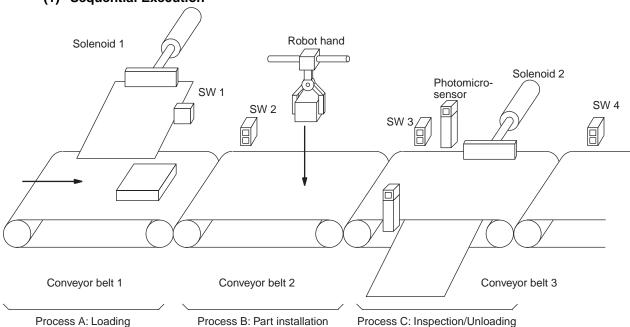

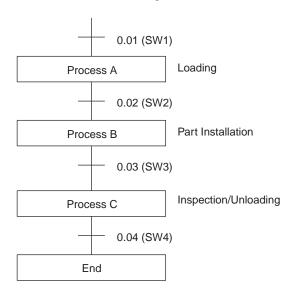

Explanation of operation

- (1) SW1 ON:
 - Solenoid 1 operates Process A Conveyor 1 operates
- (2) SW2 ON stops the previous process Robot hand operates
 - Process B Conveyor 2 operates
- (3) SW3 ON stops the previous process


Photo microsensor operates (for part inspection) Conveyor 3 operates Process C

Solenoid 2 operates (removal of defective items)


(4) SW4 ON stops the previous process


Additional Information

When another process is started from within a process (when an SNXT instruction turns ON), all outputs of the current process are turned OFF within that cycle.

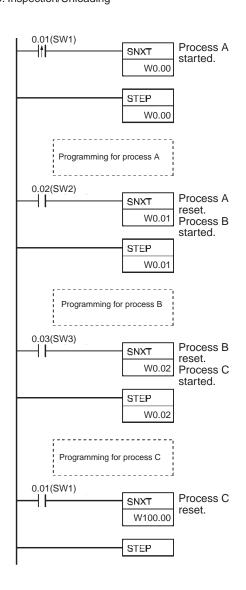



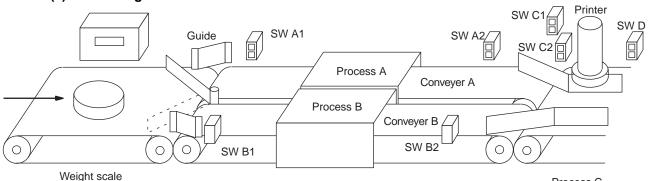

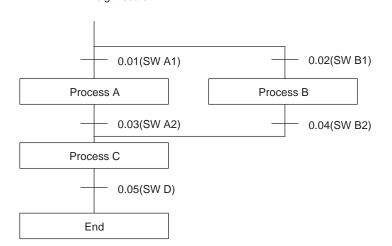

Explanation of operation

Products are sorted by the guides by weight.

(1) SWA1 ON:

Conveyor (A) operates
Machine (A) operates
Process A


(2) SWB1 ON:

Conveyor (B) operates Machine (B) operates


(3) SWA2 ON stops process A
Printing machine operates (down)
UP by SWC2 ON
Process C


(4) SWB2 ON stops process B
Printing machine operates (down)
UP by SWC2 ON
Process C

(5) SWD ON stops the printing machine

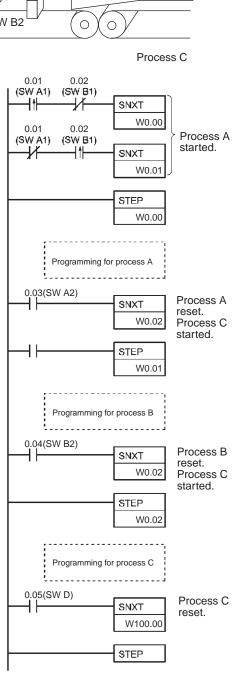

(3) Parallel Execution

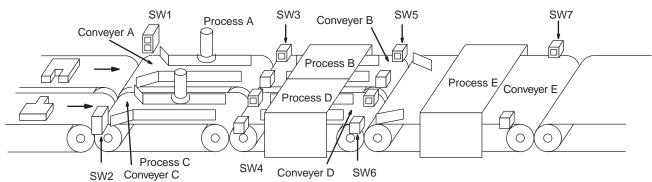

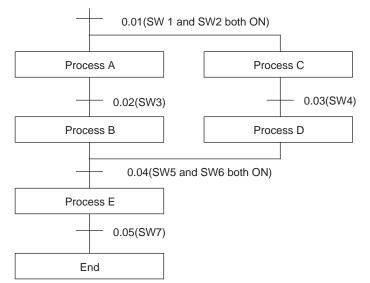

Explanation of operation

(1) SW1, SW2 ON:

Conveyor (A) operates
Work (A) operates
Conveyor (C) operates
Process C

Work (C) operates

(2) SW3 ON:

Process (A) stops Conveyor (B) operates Work (B) operates

(3) SW4 ON:

Process (C) stops Conveyor (D) operates Work (D) operates

(4) SW5, SW6 ON:

Process (B) stops
Process (D) stops
Conveyor (E) operates

Process E

Work (E) operates (5) SW7 ON:


Process (E) stops

Note: When processes (B) and (D) are in operation and SW5 and SW6 turn ON, it is judged that processes (B) and (D) are finished. Execution of SNXT W0.04 turns OFF the outputs of process (B) and W0.03 turns OFF.

STEP W0.03 judges ON to OFF and turns OFF the outputs of process (D).

Additional Information


The STEP instruction turns all outputs in its process OFF when ON changes to OFF.

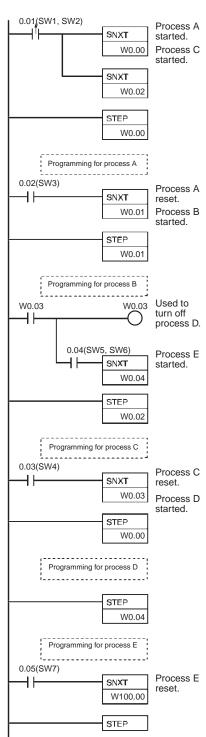

Basic I/O Unit Instructions

IORF

Instruction	Mnemonic	Variations	Function code	Function
I/O REFRESH	IORF	@IORF	097	Refreshes the specified I/O words.

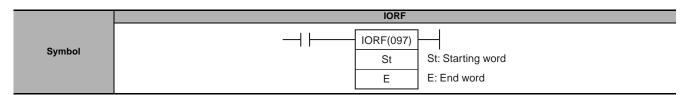

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	Not allowed	OK	OK	OK	OK	Not allowed	

Operands

Operand	Description	Data type	Size		
St	Starting word		Variable		
E	End word		Variable		

St: Starting Word

CIO 0000 to CIO 0999 (I/O Area) or CIO 2000 to CIO 2959 (Special I/O Unit Area)

E: End Word

CIO 0000 to CIO 0999 (I/O Area) or CIO 2000 to CIO 2959 (Special I/O Unit Area)

Note St and E must be in the same memory area.

Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
St, E	OK													OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if St is greater than E. ON if St and E are in different memory areas. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.

Units Refreshed by IORF(097)

Unit position	On the CPU rack o	r an expansion rack (excluding SYSMAC BUS Slave Racks)	Refreshable by FIORF(255)				
Unit Type	Basic I/O Units	CS series Basic I/O Units Yes					
		C200H Basic I/O Units (CS Series only)	Yes				
		C200H Group-2 High-density Basic I/O Units (CS Series only)	Yes				
		CJ-Series Basic I/O Units	Yes				
	Special I/O units (CIO words	of all special I/O units, including high-density I/O units)	Yes				


Note The Units that can be refreshed with IORF(097) are not necessarily the same as the Units that can be refreshed with immediate refreshing specifications (!).


Function

IORF(097) refreshes the I/O words between St and E, inclusively. IORF(097) is used to refresh words allocated to Basic I/O Units or Special I/O Units mounted on the CPU Rack or Expansion Racks. Basic I/O Units are allocated words between CIO 0000 and CIO 0999, and Special I/O Units are allocated words between CIO 2000 and CIO 2959.

When refreshing words for a Special I/O Unit, always include the first word allocated to the Unit in the range of words being refreshed. All words allocated to the Special I/O Unit will be refreshed even if they are not included in the refresh range.

For example, a High-speed Counter Unit that is set to unit number 1 and that uses four unit numbers would be allocated the 40 words from CIO 2010 to CIO 2049. To refresh words allocated to this Unit, CIO 2010 must be specified in IORF(097). All words from CIO 2010 to CIO 2049 will be refreshed.

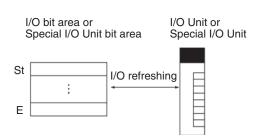

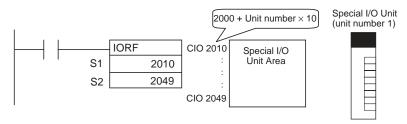

Hint

The following table shows how IORF(097) differs from FIORF(225) and DLNK(226).

Instruction	Operation								
IORF(097)	 I/O refreshing of words used by Basic I/O Units I/O refreshing of the CIO words and DM words used by Special I/O Units 								
FIORF(225)	I/O refreshing of the CIO words and DM words used by a Special I/O Unit								
DLNK(226)	 I/O refreshing of the CS1 CPU Bus Unit Area in the CIO Area (25 words) I/O refreshing of the CS1 CPU Bus Unit Area in the DM Area (100 words) Refreshing of data specific to the CPU Bus Unit, such as data link data or DeviceNet Remote I/O Communications data 								


Precaution

- IORF(097) can be used in an interrupt task, which allows high-speed processing of specific I/O data
 with an interrupt. If IORF(097) is used in an interrupt task, always disable cyclic refreshing of the
 specified Special I/O Unit by turning ON the corresponding Special I/O Unit Cyclic Refreshing
 Disable Bit in the PLC Setup.
- When cyclic refreshing of the specified Special I/O Unit is enabled in the PLC Setup (the corresponding Special I/O Unit Cyclic Refreshing Disable Bit is OFF), a non-fatal Duplicate Refresh Error will occur and the Interrupt Task Error Flag (A40213) will go ON in the following cases.
 - Words allocated to the same Special I/O Unit were already refreshed by IORF(097) or FIORF(225).
 - Words allocated to the same Special I/O Unit were read or written by IORD(222) or IOWR(223).
- When cyclic refreshing of a Special I/O Unit is disabled, execute IORF(097) or FIORF(225) to refresh
 the Unit's data within 11 seconds after program execution starts. If IORF(097) or FIORF(225) is not
 executed within 11 seconds to refresh the Unit's data, a CPU Unit Monitor Error will occur in the
 Special I/O Unit and the ERH and RUN Indicators will be lit.
- If words for which there is no Unit mounted exist between St and E, nothing will be done for those words and only the words allocated to Units will be refreshed.
- An error will occur if words in both the I/O Area (CIO 0000 to CIO 0999) and the Special I/O Unit Area (CIO 2000 to CIO 2959) are specified for the same instruction.
- Both C200H Special I/O Units and CS Special I/O Units can be refreshed using the same instruction. (CS Series only)
- All of the words allocated to C200H Group-2 High-density I/O Units must be refreshed at one time.
 The Unit's I/O words will be refreshed if the first word allocated to the Unit is in the specified range of I/O words. (The Unit's words will not be refreshed if the starting word is after the first word allocated to the Unit, but they will be refreshed even if the end word is before the last word allocated to the Unit.) (CS Series only)
- I/O refreshing will not be performed for Units for which an I/O table error has occurred. (CS Series only)
- The I/O refreshing initiated by IORF(097) will be stopped midway if an I/O bus error occurs during I/O refreshing.

Example Programming


Refreshing Words in the I/O Area

The following example shows how to refresh 16 words from CIO 15 to CIO 30 when CIO 0.00 turns ON.

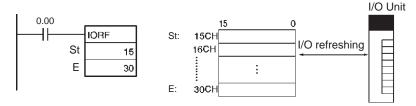


Refreshing Words in the Special I/O Unit Area

The following example shows how to refresh 30 words from CIO 2000 to CIO 2029 when CIO 0.00 turns ON.

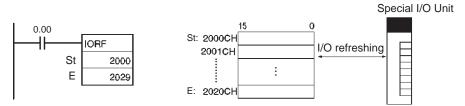

FIORF

Instruction	Mnemonic	Mnemonic Variations Function code		Function			
SPECIAL I/O UNIT I/O REFRESH	FIORF	@FIORF	225	Performs I/O refreshing immediately for the specified Special I/O Unit's allocated CIO Area and DM Area words with the specified unit number.			

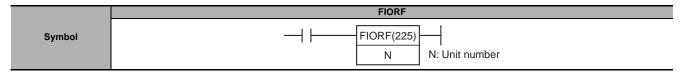

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
N	Unit number	UINT	1		

N: Unit number

Specifies the Special I/O Unit's unit number (0000 to 005F hex or 0 to 95 decimal).

Note If the Special I/O Unit uses more than one unit number, specify the lowest unit number.

Operand Specifications

Aroa			W	ord ad	ldresse	es			Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the specified unit number is not between 0000 and 005F hex (between 0 and 95 decimal). ON if the PLC does not have a Special I/O Unit with the unit number specified by N. ON if the specified Special I/O Unit uses more is allocated words for two or more unit numbers, but the unit number specified by N is not the lowest of those unit numbers. OFF in all other cases.
Equals Flag	P_EQ	On if the I/O refreshing was completed normally. OFF if FIORF(225) was executed while the specified Special I/O Unit was being refreshed during cyclic refreshing.


Units Refreshed by FIORF(225)

Rack	Unit type	Refreshable by FIORF(255)	
CPU Rack or Expansion I/O Rack	Basic I/O Units	No	
(Not applicable to Units on SYSMAC BUS Slave Racks.)	The following areas allocated to a Special I/O Unit (The words allocated to the specified Unit are refreshed together.) • Allocated CIO Area words • Allocated DM Area words	Yes	
	CPU Bus Units	No	

Function

FIORF(225) performs immediate I/O refreshing of the CIO Area words and DM Area words allocated to the Special I/O Unit with the unit number specified by N. Refer to the Special I/O Unit's Operation Manual for details on the data area words that are immediately refreshed.

A Special I/O Unit's regular cyclic I/O refreshing can be disabled in the PLC Setup (by turning ON the Unit's Special I/O Unit Cyclic Refresh Disable Bit), and I/O refreshing can be performed with the Unit only when necessary by executing FIORF(225). This function allows a particular Special I/O Unit's data to be refreshed when necessary, without increasing the cyclic I/O refreshing time at other times.

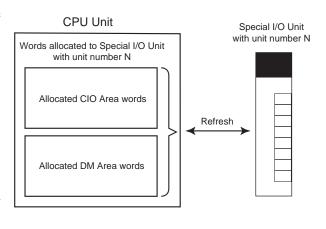

Hint

The following table shows how FIORF(225) differs from IORF(097) and DLNK(226).

Instruction	Operation
IORF(097)	I/O refreshing of words used by Basic I/O Units I/O refreshing of the CIO words and DM words used by Special I/O Units
FIORF(225)	I/O refreshing of the CIO words and DM words used by a Special I/O Unit
DLNK(226)	 I/O refreshing of the CPU Bus Unit Area in the CIO Area (25 words) I/O refreshing of the CPU Bus Unit Area in the DM Area (100 words) Refreshing of data specific to the CPU Bus Unit, such as data link data or DeviceNet Remote I/O Communications data

FIORF(225) and IORF(097) both refresh the words allocated to Special I/O Units, but differ in the following ways.


- FIORF(225) has a faster instruction execution time.
- With FIORF(225), the relevant words are specified by the unit number rather than word addresses.


Precaution

- FIORF(225) can be used in an interrupt task, which allows high-speed processing of specific I/O data with an interrupt. If FIORF(225) is used in an interrupt task, always disable cyclic refreshing of the specified Special I/O Unit by turning ON the corresponding Special I/O Unit Cyclic Refreshing Disable Bit in the PLC Setup.
- When cyclic refreshing of the specified Special I/O Unit is enabled in the PLC Setup (the corresponding Special I/O Unit Cyclic Refreshing Disable Bit is OFF), a non-fatal Duplicate Refresh Error will occur and the Interrupt Task Error Flag (A402.13) will go ON in the following cases.
 - Words allocated to the same Special I/O Unit were already refreshed by IORF(097) or FIORF(225).
 - Words allocated to the same Special I/O Unit were read or written by IORD(222) or IOWR(223).
- When cyclic refreshing of a Special I/O Unit is disabled, execute IORF(097) or FIORF(225) to refresh
 the Unit's data within 11 seconds after program execution starts. If IORF(097) or FIORF(225) is not
 executed within 11 seconds to refresh the Unit's data, a CPU Unit Monitor Error will occur in the
 Special I/O Unit and the ERH and RUN Indicators will be lit.
- I/O refreshing by FIORF(225) will be stopped if an I/O Bus Error occurs while during I/O refreshing.

Example Programming


When CIO 0.00 is ON, FIORF(225) immediately refreshes the CIO Area and DM Area words allocated to the Special I/O Unit set as unit number 0.

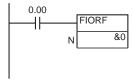

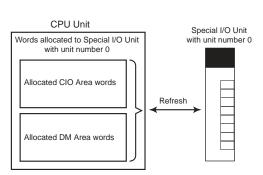

DLNK

Instruction Mnemonic		Variations Function code		Function	
CPU BUS UNIT I/O REFRESH	DLNK	@DLNK	226	Performs I/O refreshing immediately for the CPU Bus Unit with the specified unit number.	

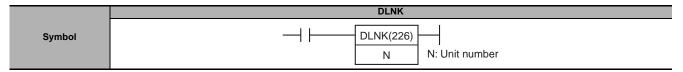

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	ОК	OK

Operands

Operand	Description	Data type	Size	
N	Unit number	UINT	1	

N: Unit number

Specifies the CPU Bus Unit's unit number (0000 to 000F hex or 0 to 15 decimal).

Operand Specifications

Aroa	Area		Word addresses			Indirect addre		Con-		Regist	ers	Fla	igs	Pulse	TR			
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if the specified unit number is not between 0000 and 000F hex (between 0 and 15 decimal). ON if the PLC does not have a CPU Bus Unit with the specified unit number. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.
Equals Flag	P_EQ	 OFF if the I/O refreshing could not be performed because the CPU Bus Unit was refreshing data. OFF if there was a CPU Bus Unit Error or CPU Bus Unit Setup Error in the specified CPU Bus Unit. OFF if DLNK(226) was executed in an interrupt task, there was a conflict with regular I/O refreshing, and overlapping refreshing occurred. ON if the I/O refreshing was completed normally.

Function

DLNK(226) performs immediate I/O refreshing for the CPU Bus Unit with the specified unit number. The data listed below is refreshed. Refer to the *Hint* below for details on the execution conditions to use for immediate refreshing.

- 1. The words allocated to the CPU Bus Unit in the PLC's CPU Bus Unit Areas (25 words in the CIO Area and 100 words in the DM Area)
- 2. Data specific the CPU Bus Unit such as data link data or DeviceNet Remote I/O Communications data (refreshed together with the data in the CPU Bush Unit Areas)

CPU Bus Unit	Data refreshing specific to the Unit		
Controller Link Unit or SYSMAC Link Unit	Data link refreshing		
DeviceNet Unit (Does not include C200H DeviceNet Master Units.)	Remote I/O communications refreshing		

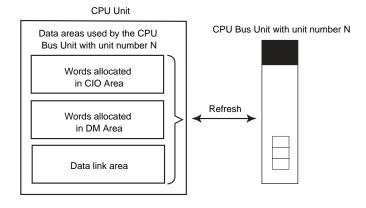

Hint

The following table shows how DLNK(226) differs from FIORF(225) and IORF(097).


Instruction	Operation
IORF(097)	I/O refreshing of words used by Basic I/O Units I/O refreshing of the CIO words and DM words used by Special I/O Units
FIORF(225)	I/O refreshing of the CIO words and DM words used by a Special I/O Unit
DLNK(226)	I/O refreshing of the CS1 CPU Bus Unit Area in the CIO Area (25 words) I/O refreshing of the CS1 CPU Bus Unit Area in the DM Area (100 words) Refreshing of data specific to the CPU Bus Unit, such as data link data or DeviceNet Remote I/O Communications data

DLNK(226) refreshes data between the CPU Unit and specified CPU Bus Unit. There are two special factors to consider when using DLNK(226):

- When exchanging data through a data link or DeviceNet remote I/O communications, the data exchange is not performed with the other Units at the same time that DLNK(226) is executed. The data exchange will be performed when the network communications cycle reaches the Unit in question and data is exchanged with that Unit. Consequently, the actual data exchange may be delayed by as much as the communications cycle time of the network.
- DLNK(226) cannot perform I/O refreshing with a CPU Bus Unit if that Unit is currently exchanging data. If DLNK(226) is executed too frequently, I/O refreshing will not be performed. We recommend allowing a delay between executions of DLNK(226) that is longer than the communications cycle time.

Precaution

- DLNK(226) refreshes data between the CPU Unit and specified CPU Bus Unit. Some time is required for the data exchange with the CPU Bus Unit (for example, a data link with a Controller Link Unit).
- If the specified CPU Bus Unit is exchanging data, DLNK(226) will not be executed and the Equals Flag will be turned OFF. We recommend programming the execution conditions shown below so that the execution of DLNK(226) will be retried automatically.

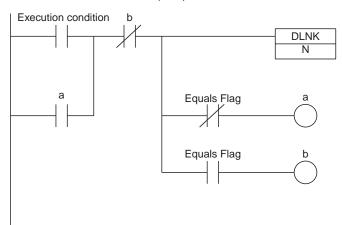


- I/O refreshing will not be performed if a CPU Bus Unit Error (A402.07) or CPU Bus Unit Setup Error (A402.03) has occurred in the specified CPU Bus Unit.
- I/O refreshing will be stopped if an I/O Bus Error occurs while I/O refreshing is being performed by DLNK(226).

Example Programming

When CIO 0.00 is ON in the following example, DLNK(226) performs immediate I/O refreshing (in this case, data link refreshing within the PLC) for the CPU Bus Unit with unit number 1 (in this case, a Controller Link Unit).

If I/O refreshing cannot be performed because the Controller Link Unit is refreshing data, the Equals Flag will be turned OFF causing W0.01 to be turned ON so that the instruction execution will be retried in the next cycle. When the I/O refreshing is completed normally, the Equals Flag will be turned ON and the instruction will not be retried in the next cycle.

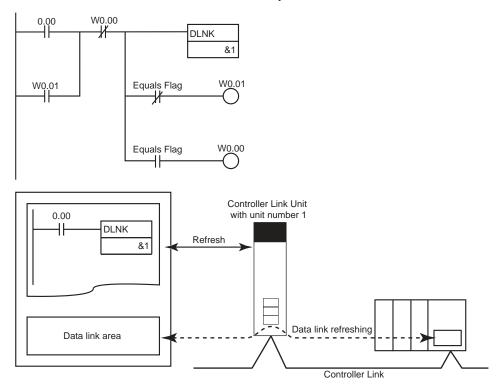


The actual timing for data link area refreshing in this example is as follows:


- When transmitting: Data is transmitted over the network the next time that the token right is acquired. (The transmitted data is delayed up to 1 communications cycle time max.)
- When receiving: The data that is input was received from the network the last time that the token right was acquired. (The data received is delayed up to 1 communications cycle time max.)

Examples of Data Transfer Processing:

· Transferring Data from the Previous I/O Refreshing

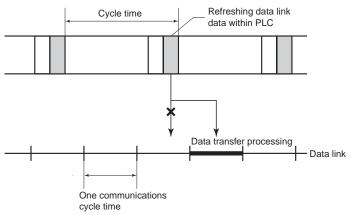


• Transferring Data with Execution of DLNK(226)

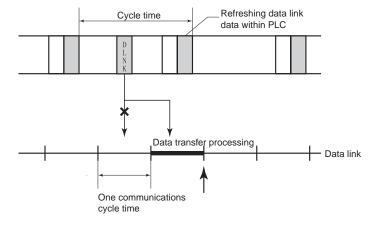

SDEC

Instruction	Mnemonic	Variations	Function code	Function
7-SEGMENT DECODER	SDEC	@SDEC	078	Converts the hexadecimal contents of the designated digit(s) into 8-bit, 7-segment display code and places it into the upper or lower 8-bits of the specified destination words.

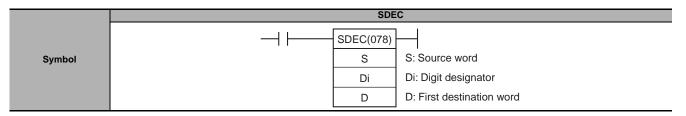


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
S	Source word	UINT	1
Di	Digit designator	UINT	1
D	First destination word	UINT	Variable

Di: Digit designator

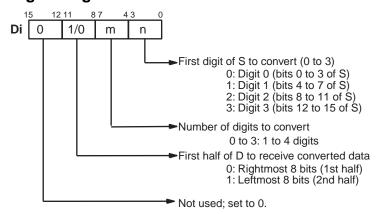

Operand Specifications


Area -		Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S												ОК						
Di	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		

Flags

Name	Label	Operation
Error Flag	ER	ON if settings in Di are not within the specified ranges.OFF in all other cases.

Function

SDEC(078) regards the data specified by S as 4-digit hexadecimal data, converts the digits specified in S by Di (first digit and number of digits) to 7-segment data and outputs the results to D in the bits specified in Di.

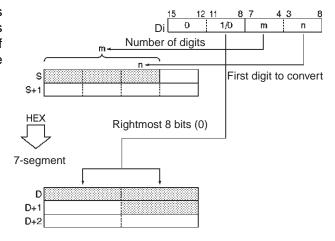



Precaution

- If more than one digit is specified for conversion in Di, digits are converted in order toward the most-significant digit. Digit 0 is the next digit after digit 3.
- Results are stored in D in order from the specified portion toward higher-address words. If just one of the bytes in a destination word receives converted data, the other byte is left unchanged.

Example Programming

When CIO 0.00 turns ON in the following example, the contents of the 3 digits beginning with digit 1 in D100 will be converted from hexadecimal data to 7-segment data, and the results will be output to the upper byte of D200 and both bytes of D201. The specifications of the bytes to be converted and the location of the output bytes are made in CIO 100.

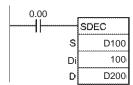

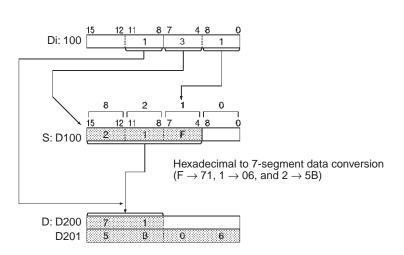


• 7-segment Data

The following table shows the data conversions from a hexadecimal digit (4 bits) to 7-segment code (8 bits).

	Origi	nal da	ıta				Con	verte	d cod	e (seç	gment	s)			Display Original data
Digit		В	its		ı	g	f	е	d	С	b	а	Hex		Display Original data
0	0	0	0	0	0	0	1	1	1	1	1	1	3F	0	
1	0	0	0	1	0	0	0	0	0	1	1	0	06	1	
2	0	0	1	0	0	1	0	1	1	0	1	1	5B	2	1.00
3	0	0	1	1	0	1	0	0	1	1	1	1	4F	3	LSB 1 a
4	0	1	0	0	0	1	1	0	0	1	1	0	66	Ч	_a_
5	0	1	0	1	0	1	1	0	1	1	0	1	6D	5	1 b
6	0	1	1	0	0	1	1	1	1	1	0	1	7D	δ	$1 \longrightarrow c$ f g b
7	0	1	1	1	0	0	1	0	0	1	1	1	27	ų	1 d
8	1	0	0	0	0	1	1	1	1	1	1	1	7F	8	1 → e e C
9	1	0	0	1	0	1	1	0	1	1	1	1	6F	٩	1 f
Α	1	0	1	0	0	1	1	1	0	1	1	1	77	8	d d
В	1	0	1	1	0	1	1	1	1	1	0	0	7C	Ь	l
С	1	1	0	0	0	0	1	1	1	0	0	1	39	3	0
D	1	1	0	1	0	1	0	1	1	1	1	0	5E	d	MSB
Е	1	1	1	0	0	1	1	1	1	0	0	1	79	8	
F	1	1	1	1	0	1	1	1	0	0	0	1	71	۶	

DSW

Instruction	Mnemonic	Variations	Function code	Function
DIGITAL SWITCH INPUT	DSW		210	Reads the value set on a external digital switch (or thumbwheel switch) connected to an I/O Unit and stores the 4-digit or 8-digit value in the specified words.

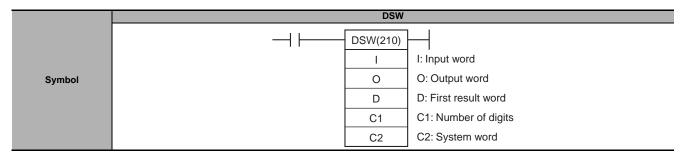

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
I	Input word	UINT	1
0	Output word	UINT	1
D	First result word	WORD	Variable
C1	Number of digit	UINT	1
C2	System word	WORD	1


I: Input Word (Data Line D0 to D3 Inputs)

Specify the input word allocated to the Input Unit and connect the digital switch's D0 to D3 data lines to the Input Unit as shown in the following diagram.

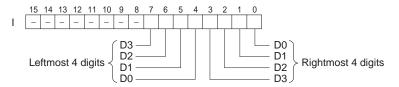


O: Output Word (CS/RD Control Signal Outputs)

Specify the output word allocated to the Output Unit and connect the digital switch's control signals (CS and RD signals) to the Output Unit as shown in the following diagram.

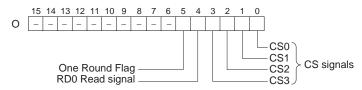

D: First Result Word

Specifies the leading word address where the external digital switch's set values will be stored.

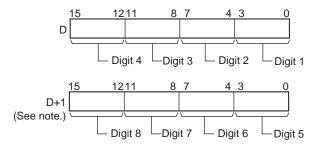


Note: Only when C1 = 0001 hex to read 8 digits.

C1: Number of Digits

Specifies the number of digits that will be read from the external digital switch. Set C1 to 0000 hex to read 4 digits or 0001 hex to read 8 digits.

C2: System Word

Specifies a work word used by the instruction. This word cannot be used in any other application.

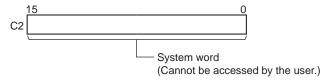

Operand Specifications

Area			W	ord ad	Idresse	es			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
I, O	ОК	ОК	ОК	ОК	ОК	ОК	ок	ОК	ОК	ОК		OK		ОК				
D	OI.	OIX	Š	Ś	OIX	OIX	OIX	OIX	OIX	Oit				Ö				
C1			-	-							OK							
C2	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	OFF


Function

DSW(210) outputs control signals to bits 00 to 04 of O, reads the specified number of digits (either 4-digit or 8-digit, specified in C1) of digital switch data line data from I, and stores the result in D and D+1. (If 4 digits are read, the result is stored in D. If 8 digits are read, the result is stored in D and D+1.)

DSW(210) reads the 4-digit or 8-digit switch data once every 16 cycles, and then starts over and continues reading the data. The One Round Flag (bit 05 of O) is turned ON once every 16 CPU Unit cycles.

External Connections


Connect the digital switch or thumbwheel switch to Input Unit contacts 0 to 7 and Output Unit contacts 0 to 4, as shown in the following diagram. The following example illustrates connections for an A7B Thumbwheel Switch.

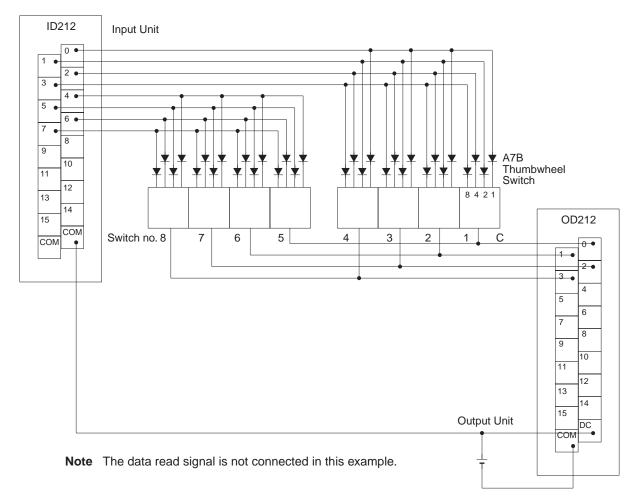

The inputs and outputs can be connected to the following kinds of Basic I/O Units and High-density I/O Units as long as they are not mounted in a SYSMAC BUS Remote I/O Rack.

- DC Input Units with 8 or more input points
- Transistor Output Units with 8 or more output points

Timing Chart

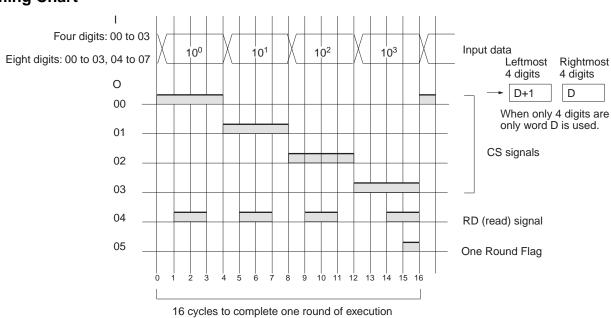


Precaution

- Do not read or write the system word (C2) from any other instruction. DSW(210) will not operate
 correctly if the system word is accessed by another instruction. The system word is not initialized by
 DSW(210) in the first cycle when program execution starts. If DSW(210) is being used from the first
 cycle, clear the system word from the program.
- I/O refreshing must be performed with the I/O Unit connected to the digital switch or thumbwheel switch after each DSW(210) instruction is executed. If the cycle time is short, operation may not be correct depending on the ON/OFF response time of the I/O Unit. If necessary, use an I/O Unit with a short ON/OFF response time or use the minimum cycle time function to adjust the cycle time. Do not connect the digital switch or thumbwheel switch to the following Units.
 - Basic I/O Units or High-density I/O Units mounted in a SYSMAC BUS Remote I/O Slave Rack
 - Communications Slaves (DeviceNet or CompoBus/S Slaves)
- DSW(210) reads the 4-digit or 8-digit data once in 16 cycles, and then starts over and reads the data again in the next 16 cycles.
- When executed, DSW(210) begins reading the switch data from the first of the sixteen cycles, regardless of the point at which the last instruction was stopped.
- There is no restriction on the number of times that DSW(210) can appear in the program (unlike the C200HX/HG/HE and CQM1H Series).

Example Programming


In this example, DSW(210) is used to read an 8-digit number from a digital switch and outputs the resulting value constantly to D0 and D1. The digital switch is connected through CIO 100 (allocated to a CS1W-ID211 16-point DC Input Unit) and CIO 200 (allocated to a CS1W-OD211 16-point Transistor Output Unit).

D32000 is used as the system word.

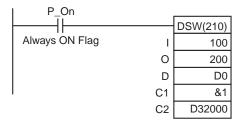

TKY

Instruction	Mnemonic	Variations	Function code	Function
TEN KEY INPUT	TKY	@TKY	211	Reads numeric data from a ten-key keypad connected to an Input Unit and stores up to 8 digits of BCD data in the specified words.

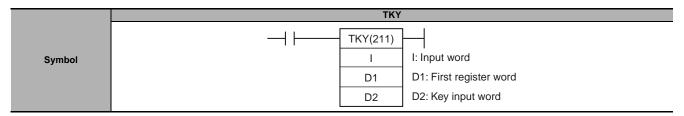

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
1	Input word	UINT	1
D1	First register word	UDINT	2
D2	Key input word	UINT	1


I: Input Word (Data Line Inputs)

Specify the input word allocated to the Input Unit and connect the ten-key keypad's 0 to 9 data lines to the Input Unit as shown in the following diagram.

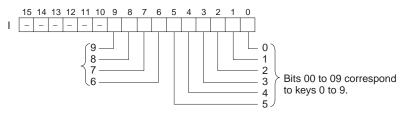


D1: First Register Word

Specifies the leading word address where the ten-key keypad's numeric input (up to 8 digits) will be stored.

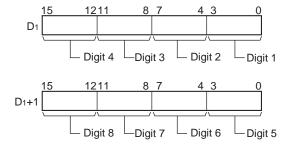

D2: Key Input Word

Bits 00 to 10 of D2 indicate key inputs. When one of the keys on the keypad (0 to 9) has been pressed, the corresponding bit of D2 (0 to 9) is turned ON. Bit 10 of D2 will be ON while any key is being pressed.

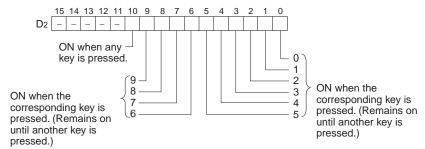

Note TKY(211) does not require a system word, unlike other I/O instructions such as HKY(212).

Operand Specifications

Area			W	ord ad	Idresse	es			Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
1												OK						
D1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D2												OK						

Flags


Name	Label	Operation				
Error Flag	P_ER	OFF				

Function

TKY(211) reads numeric data from input word I, which is allocated to a ten-key keypad connected to an Input Unit, and stores up to 8 digits of BCD data in register words D1 and D1+1. In addition, each time that a key is pressed, the corresponding bit in D2 (0 to 9) will be turned ON and remains ON until another key is pressed. Bit 10 of D2 will be ON while any key is being pressed and OFF when no key is being pressed.

External Connections


Connect the ten-key keypad so that the switches for keys 0 through 9 are input to contacts 0 through 9 of the Input Unit, as shown in the following diagram.

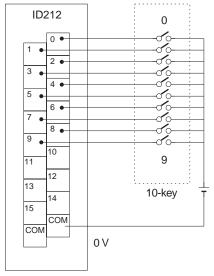

DC Input Unit

The Input Unit must be a DC Input Unit or High-density Input Unit with at least 16 inputs and the Input Unit cannot be mounted in a SYSMAC BUS Remote I/O Rack.

Timing Chart

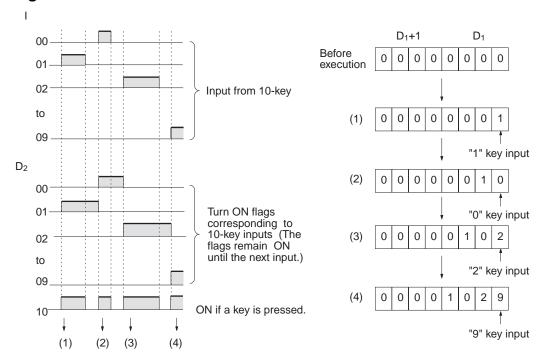

Precaution

- I/O refreshing must be performed with the I/O Unit connected to the ten-key pad after each TKY(211) instruction is executed. If the cycle time is short, operation may not be correct depending on the ON/OFF response time of the I/O Unit. If necessary, use an I/O Unit with a short ON/OFF response time or use the minimum cycle time function to adjust the cycle time. Do not connect the ten-key keypad to the following Units.
 - · Basic I/O Units or High-density I/O Units mounted in a SYSMAC BUS Remote I/O Slave Rack
 - Communications Slaves (DeviceNet or CompoBus/S Slaves)
- The two-word register in D1 and D1+1 operates as an 8-digit shift register. When a key is pressed on the ten-key keypad, the corresponding BCD digit is shifted into the least significant digit of D1. The other digits of D1, D1+1 are shifted left and the most significant digit of D1+1 is lost.
- When executed, TKY(211) begins reading the key input data from the first cycle, regardless of the point at which the last instruction was stopped.
- When one of the keypad keys is being pressed, input from the other keys is disabled.
- There is no restriction on the number of times that TKY(211) can appear in the program (unlike the C200HX/HG/HE and CQM1H Series).


Example Programming

In this example, TKY(211) reads key inputs from a ten-key keypad and stores the inputs in CIO 200 and CIO 201. The ten-key keypad is connected to CIO 100 (allocated to a CS1W-ID211 16-point DC Input Unit).



HKY

Instruction	Mnemonic	Variations	Function code	Function
HEXADECIMAL KEY INPUT	НКҮ		212	Reads numeric data from a hexadecimal keypad connected to an Input Unit and Output Unit and stores up to 8 digits of hexadecimal data in the specified words.

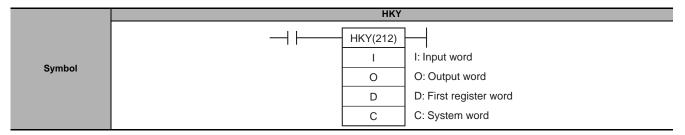

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
1	Input word	UINT	1
0	Output word	UINT	1
D	First register word	WORD	3
С	System word	WORD	1


I: Input Word (Data Line D0 to D3 Inputs)

Specify the input word allocated to the Input Unit and connect the hexadecimal keypad's D0 to D3 data lines to the Input Unit as shown in the following diagram.

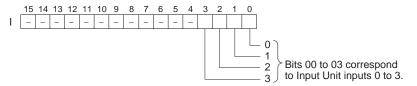


O: Output Word (Selection Signal Outputs)


Specify the output word allocated to the Output Unit and connect the hexadecimal keypad's selection signals to the Output Unit as shown in the following diagram.

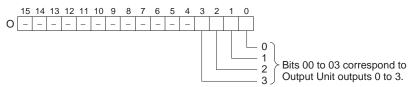

D: First Register Word


Specifies the leading word address where the hexadecimal keypad's numeric input (up to 8 digits) will be stored.

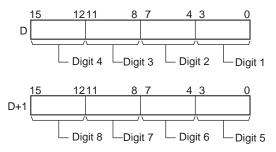

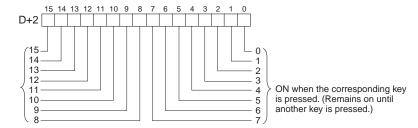

C: System Word

Specifies a work word used by the instruction. This word cannot be used in any other application.

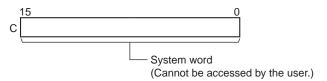

Operand Specifications

Area			W	ord ad	ldresse	es			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
I, O												OK						
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
С												OK						

Flags

Name	Label	Operation
Error Flag	P_ER	OFF


Function

HKY(212) outputs the selection signals to bits 00 to 03 of O, reads the data in order from bits 00 to 03 of I, and stores up to 8 digits of hexadecimal data in register words D and D+1.

HKY(212) inputs each digit in 3 to 12 cycles, and then starts over and continues inputting. In addition, each time that a key is pressed, the corresponding bit in D+2 (0 to F) will be turned ON and remains ON until another key is pressed.

External Connections


Connect the hexadecimal keypad to Input Unit contacts 0 to 3 and Output Unit contacts 0 to 3, as shown in the following diagram.

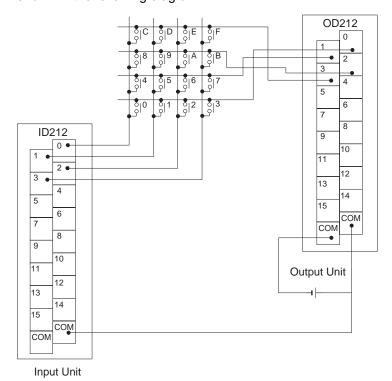

The inputs and outputs can be connected to the following kinds of Basic I/O Units and High-density I/O Units as long as they are not mounted in a SYSMAC BUS Remote I/O Rack.

- DC Input Units with 8 or more input points
- Transistor Output Units with 8 or more output points

Timing Chart

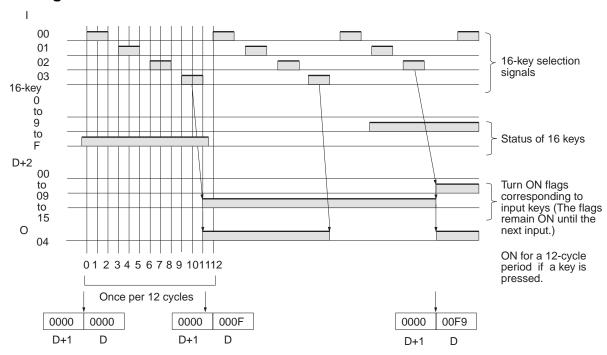


Precaution

- Do not read or write the system word (C) from any other instruction. HKY(212) will not operate correctly if the system word is accessed by another instruction. The system word is not initialized by HKY(212) in the first cycle when program execution starts. If HKY(212) is being used from the first cycle, clear the system word from the program.
- I/O refreshing must be performed with the I/O Unit connected to the hexadecimal keypad after each HKY(212) instruction is executed. If the cycle time is short, operation may not be correct depending on the ON/OFF response time of the I/O Unit. If necessary, use an I/O Unit with a short ON/OFF response time or use the minimum cycle time function to adjust the cycle time. Do not connect the hexadecimal keypad to the following Units.
 - Basic I/O Units or High-density I/O Units mounted in a SYSMAC BUS Remote I/O Slave Rack
 - Communications Slaves (DeviceNet or CompoBus/S Slaves)
- HKY(212) determines which key is pressed by identifying which input is ON when a given selection signal is ON, so it can take anywhere from 3 to 12 cycles for one hexadecimal digit to be read. After the key input is read, HKY(212) starts over and reads another digit in the next 3 to 12 cycles.
- When executed, HKY(212) begins reading the key input data from the first selection signal, regardless of the point at which the last instruction was stopped.
- The two-word register in D1 and D1+1 operates as an 8-digit shift register. When a key is pressed on the ten-key keypad, the corresponding hexadecimal digit is shifted into the least significant digit of D1. The other digits of D1, D1+1 are shifted left and the most significant digit of D1+1 is lost.
- When one of the keypad keys is being pressed, input from the other keys is disabled.
- There is no restriction on the number of times that HKY(212) can appear in the program (unlike the CQM1H Series).


Example Programming

In this example, HKY(212) reads up to 8 digits of hexadecimal data from a hexadecimal keypad and stores the data in D0 and D1. The hexadecimal keypad is connected through CIO 100 (allocated to a CS1W-ID211 16-point DC Input Unit) and CIO 200 (allocated to a CS1W-OD211 16-point Transistor Output Unit). D32000 is used as the system word.

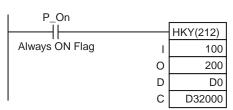

MTR

Instruction	Mnemonic	Variations	Function code	Function
MATRIX INPUT	MTR		213	Inputs up to 64 signals from an 8×8 matrix connected to an Input Unit and an Output Unit (using 8 input points and 8 output points) and stores that 64-bit data in the 4 destination words.

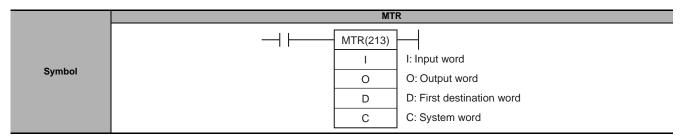

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size		
1	Input word	UINT	1		
0	Output word	UINT	1		
D	First destination word	ULINT	4		
С	System word	WORD	1		


I: Input Word

Specify the input word allocated to the Input Unit and connect the 8 input signal lines to the Input Unit as shown in the following diagram.

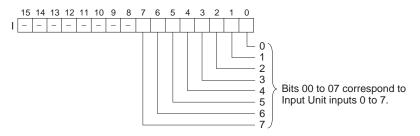


O: Output Word (Selection Signal Outputs)

Specify the output word allocated to the Output Unit and connect the 8 selection signals to the Output Unit as shown in the following diagram.

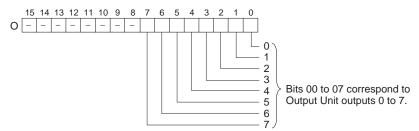


D: First Register Word

Specifies the leading word address of the 4 words that contain the data from the 8×8 matrix.

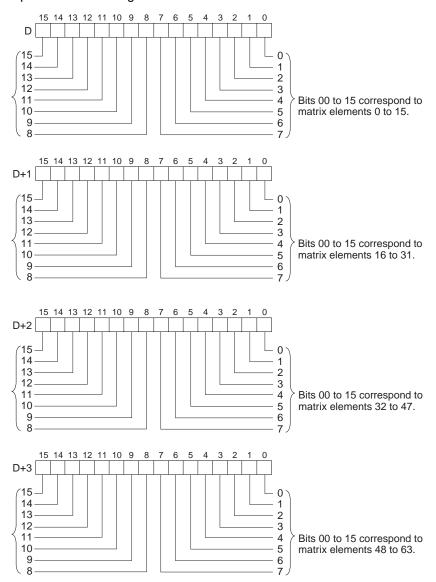

C: System Word

Specifies a work word used by the instruction. This word cannot be used in any other application.

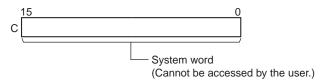

Operand Specifications

Λ-	rea	Word addresses						rect DM/EM ddresses Con-		Registers			Flags			TR			
AI	ea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
I,	0												OK						
	O	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
(O												OK						

Flags


Name	Label	Operation
Error Flag	P_ER	OFF

Function

MTR(213) outputs the selection signals to bits 00 to 07 of O, reads the data in order from bits 00 to 07 of I, and stores the 64 bits of data in the 4 words D through D+3. MTR(213) reads the status of the 64-bit matrix every 24 CPU Unit cycles. The One Round Flag (bit 08 of O) is turned ON for one cycle in every 24 cycles after each of the selection signals has been turned ON.

External Connections


Connect the hexadecimal keypad to Input Unit contacts 0 to 7 and Output Unit contacts 0 to 7, as shown in the following diagram.

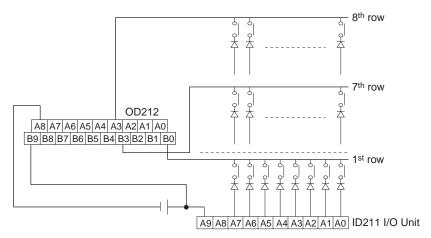

The inputs and outputs can be connected to the following kinds of Basic I/O Units and High-density I/O Units as long as they are not mounted in a SYSMAC BUS Remote I/O Rack.

- · DC Input Units with 8 or more input points
- · Transistor Output Units with 8 or more output points

Timing Chart

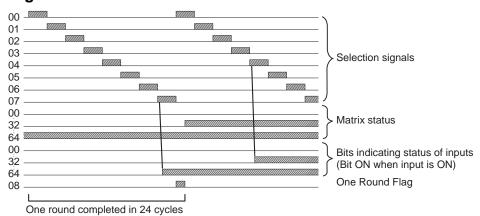


Precaution

- Do not read or write the system word (C) from any other instruction. MTR(213) will not operate correctly if the system word is accessed by another instruction. The system word is not initialized by MTR(213) in the first cycle when program execution starts. If MTR(213) is being used from the first cycle, clear the system word from the program.
- I/O refreshing must be performed with the I/O Unit connected to the external matrix after each MTR(213) instruction is executed. If the cycle time is short, operation may not be correct depending on the ON/OFF response time of the I/O Unit. If necessary, use an I/O Unit with a short ON/OFF response time or use the minimum cycle time function to adjust the cycle time. Do not connect the external matrix to the following Units.
 - Basic I/O Units or High-density I/O Units mounted in a SYSMAC BUS Remote I/O Slave Rack
 - Communications Slaves (DeviceNet or CompoBus/S Slaves)
- When executed, MTR(213) begins reading the matrix status from the beginning of the matrix, regardless of the point at which the last instruction was stopped.
- There is no restriction on the number of times that MTR(213) can appear in the program (unlike the C200HX/HG/HE and CQM1H Series).


Example Programming

In this example, MTR(213) reads the 64 bits of data from the 8×8 matrix and stores the data in W0 to W3. The 8×8 matrix is connected through CIO 100 (allocated to a CS1W-ID211 16-point DC Input Unit) and CIO 200 (allocated to a CS1W-OD211 16-point Transistor Output Unit). D32000 is used as the system word.

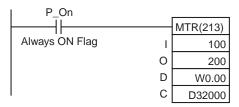

7SEG

Instruction	Mnemonic	Variations	Function code	Function			
7-SEGMENT DISPLAY OUTPUT	7SEG		214	Converts the source data (either 4-digit or 8-digit BCD) to 7-segment display data, and outputs that data to the specified output word.			

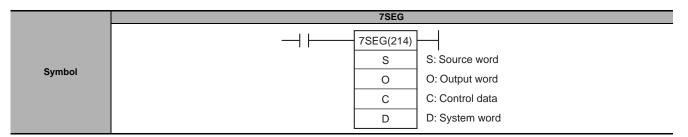

Applicable Program Areas


Area	Function block definitions	I Block program areas I		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Not allowed	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
S	Source word	WORD	Variable
0	Output word	UINT	1
С	Control word	#+10 decimal only	1
D	System word	WORD	1

S: Source Word


Specify the first source word containing the data that will be converted to 7-segment display data.

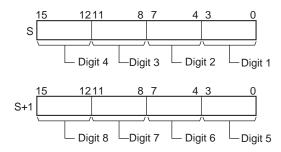


O: Output Word (Data and Latch Outputs)

Specify the output word allocated to the Output Unit and connect the 7-segment display to the Output Unit as shown in the following diagram.

· Converting 4 digits

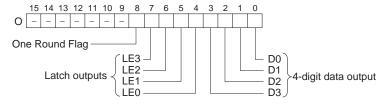

· Converting 8 digits

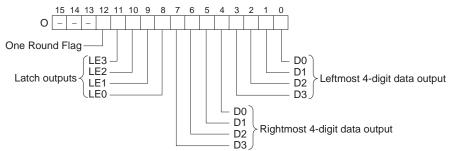


C: Control Data

The value of C (0000 to 0007 hex) indicates the number of digits of source data and the logic for the Input and Output Units, as shown in the following table. (The logic refers to the transistor output's NPN or PNP logic.)

Source data	Display's data input logic	Display's latch input logic	С
4 digits (S)	Same as Output Unit	Same as Output Unit	0000
		Different from Output Unit	0001
	Different from Output Unit	Same as Output Unit	0002
		Different from Output Unit	0003
8 digits (S, S+1)	Same as Output Unit	Same as Output Unit	0004
		Different from Output Unit	0005
	Different from Output Unit	Same as Output Unit	0006
		Different from Output Unit	0007

D: System Word

Specifies a work word used by the instruction. This word cannot be used in any other application.

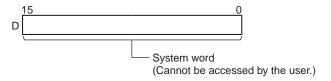

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК				OK				
0	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				
С											OK							
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	OFF

Function


7SEG(214) reads the source data, converts it to 7-segment display data, and outputs that data (as leftmost 4 digits D0 to D3, rightmost 4 digits D0 to D3, latch output signals LE0 to LE3) to the 7-segment display connected to the output indicated by O. The value of C indicates the number of digits of source data (either 4-digit or 8-digit) and the logic for the Input and Output Units.

7SEG(214) displays the 4-digit or 8-digit data in 12 cycles, and then starts over and continues displaying the data.

The One Round Flag (bit 08 of O when converting 4 digits, bit 12 of O when converting 8 digits) is turned ON for one cycle in every 12 cycles after 7SEG(214) has turned ON each of the latch output signals.

External Connections

Connect the 7-segment display to the Output Unit as shown in the following diagram. This example shows an 8-digit display. With a 4-digit display, the data outputs (D0 to D3) would be connected to outputs 0 to 3 and the latch outputs (LE0 to LE3) would be connected to outputs 4 to 7. Output point 12 (for 8-digit display) or output point 8 (for 4-digit display) will be turned ON when one round of data has been output, but it is not necessary to connect them unless required by the application.

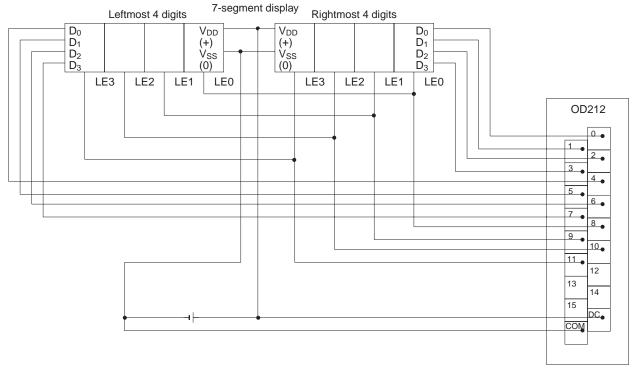


Output Unit

The inputs and outputs can be connected to the following kinds of Basic I/O Units and High-density I/O Units as long as they are not mounted in a SYSMAC BUS Remote I/O Rack.

- 4-digit display: Transistor Output Units with 8 or more output points
- · 8-digit display: Transistor Output Units with 16 or more output points

Timing Chart

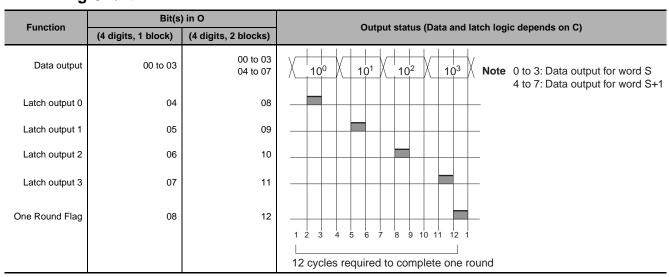


Precaution

- Do not read or write the system word (D) from any other instruction. 7SEG(214) will not operate correctly if the system word is accessed by another instruction. The system word is not initialized by 7SEG(214) in the first cycle when program execution starts. If 7SEG(214) is being used from the first cycle, clear the system word from the program.
- I/O refreshing must be performed with the Output Unit connected to the 7-segment display after each 7SEG(214) instruction is executed. If the cycle time is short, operation may not be correct depending on the ON/OFF response time of the I/O Unit. If necessary, use an I/O Unit with a short ON/OFF response time or use the minimum cycle time function to adjust the cycle time. Do not connect the 7segment display to the following Units.
 - Basic I/O Units or High-density I/O Units mounted in a SYSMAC BUS Remote I/O Slave Rack
 - Communications Slaves (DeviceNet or CompoBus/S Slaves)
- After the 7-segment data is output in 12 cycles, 7SEG(214) starts over and converts the present contents of the source word(s) in the next 12 cycles.
- When executed, 7SEG(214) begins on latch output 0 at the beginning of the round, regardless of the point at which the last instruction was stopped.
- Even if the connected 7-segment display has fewer than 4 digits or 8 digits in its display, 7SEG(214) will still output 4 digits or 8 digits of data.

Example Programming


In this example, 7SEG(214) converts the 8 digits of BCD data in D100 and D101 and outputs the data through CIO 100 to a 7-segment display connected to a CS1W-OD211 16-point Transistor Output Unit.

There are 8 digits of data being output and the 7-segment display's logic is the same as the Output Unit's logic, so the control data (C) is set to 4. D32000 is used as the system word, D.

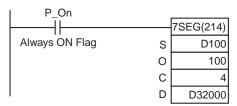

AIDC

Instruction	Mnemonic	Variations	Function code	Function
ANALOG INPUT DIRECT CONVERSION	AIDC	@AIDC	216	Reads the input conversion value of the specified analog input number from the CJ1W-AD042 Analog Input Unit in Direct Conversion Mode.

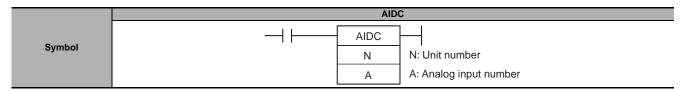

Applicable Program Areas

Area	Function block definitions Block program a		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
N	Unit number	UNIT	1
А	Analog input number	UINT	1

N: Unit number

Specify the unit number between 0 and 95 using &0 to &95 decimal or #0000 to #005F hex.

A: Analog input number

Specify the analog input or inputs using a constant between &0 and &4 decimal or #0000 and #0004 hex.

&0 (#0000): Analog input 1 to the last analog input

&1 (#0001): Analog input 1 &2 (#0002): Analog input 2 &3 (#0003): Analog input 3 &4 (#0004): Analog input 4

Operand Specifications

Aroa	Word addresses								Indirect addre		Con-		Regist	Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	O	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
Α											OK							

Flags

Name	Label	Operation
Error Flag	ER	 ON if the unit number in N is not between &0 and &95 decimal (#0000 and #005F hex). ON if the specified unit is not a CJ1W-AD042 Analog Input Unit. ON if the specified CJ1W-AD042 Analog Input Unit is being initialized or restarted. ON if there is no Unit with the unit number specified in N. ON if AIDC(216) is executed in an interrupt task when it is also being executed in a cyclic task. ON if an analog input that is not being used is specified in A. ON if the specified CJ1W-AD042 Analog Input Unit is not in Direct Conversion Mode. ON if there is a DM parameter setting error for specified CJ1W-AD042 Analog Input Unit. (The ERC indicator will be lit.) ON if there is an analog converter error. OFF in all other cases.
Equals Flag	=	On if reading the data was completed normally. On if reading the data was not completed normally.

Related Auxiliary Area Words and Bits


Name	Addresses	Operation
Special I/O Unit Initialization Flags	A330.00 to A335.15	ON when a Special I/O Unit is being initialized. OFF: Not being initialized. ON: Being initialized.

Function

AIDC(216) executes digital conversion for the analog input or inputs specified in A for the CJ1W-AD042 Analog Input Unit with the unit number specified in N, reads the conversion results immediately, and stores them in the Special I/O Unit Area in the CIO Area.

If 0 is specified for A, four words of data are stored. If 1 to 4 is specified for A, one word of data is stored. If 0 is specified for A, 0 will be stored for unused analog inputs.


The specified CJ1W-AD042 Analog Input Unit must be in Direct Conversion Mode before AIDC(216) is executed. Refer to the SYSMAC CS/CJ-series Analog I/O Units Operation Manual (Cat. No. W345) for details on the Direct Conversion Mode and the number of analog inputs.

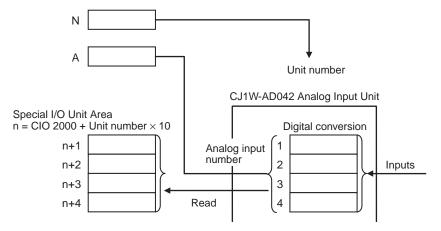

Precaution


- Use AIDC(216) only for a CJ1W-AD042 Analog Input Unit. If it is executed for any other Special I/O
 Unit, the instruction execution time may be approx. 1 ms or the Unit may stop operating (i.e., the ERH
 indicator will light).
- The specified CJ1W-AD042 Analog Input Unit must be placed in Direct Conversion Mode before AIDC(216) is executed. If it is not in Direct Conversion Mode, the instruction will not be executed and the Error Flag will turn ON.
- Do not execute this instruction in both a cyclic task and an interrupt task. If it is executed both in a
 cyclic task and an interrupt task, the instruction in the interrupt task will not be executed and the Error
 Flag will turn ON.

• If an attempt is made to execute this instruction while the CJ1W-AD042 Analog Input Unit is being initialized, it will not be executed and the Error Flag will turn ON. To ensure that the Unit is not being initialized when this instruction is executed, use the High-speed I/O Unit Initialization Flag in a normally closed condition for the instruction.

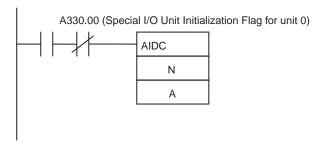


Example Programming

When CIO 0.00 is ON in the following example, the digital conversion of the input value of analog input 1 is read from the CJ1W-AD042 Analog Input Unit with unit number 3 and stored in CIO 2031 (in the words allocated to Special I/O Unit with unit number 3 in the Special I/O Unit Area).

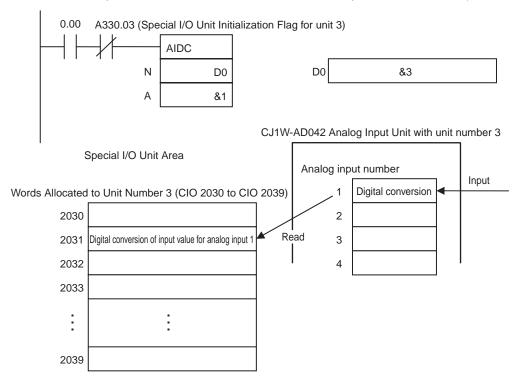

AODC

Instruction	Mnemonic	Variations	Function code	Function
ANALOG OUTPUT DIRECT CONVERSION	AODC	@AODC	217	Outputs the output set value for the specified analog output number to the CJ1W-DA042V Analog Output Unit in Direct Conversion Mode.

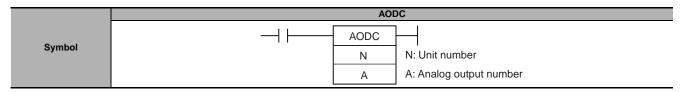

Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Unit number	UNIT	1
A	Analog output number	UINT	1

N: Unit number

Specify the unit number between 0 and 95 using &0 to &95 decimal or #0000 to #005F hex.

A: Analog output number

Specify the analog output or outputs using a constant between &0 and &4 decimal or #0000 and #0004 hex.

&0 (#0000): Analog output 1 to the last analog output

&1 (#0001): Analog output 1

&2 (#0002): Analog output 2

&3 (#0003): Analog output 3

&4 (#0004): Analog output 4

Operand Specifications

Area			W	ord ad	dresse	es			Indirect addre		Con-	Registers			Flags		Pulse TR	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
Α											OK							

Flags


Name	Label	Operation
Error Flag	ER	 ON if the unit number in N is not between &0 and &95 decimal (#0000 and #005F hex). ON if the specified unit is not a CJ1W-DA042V Analog Output Unit. ON if the specified CJ1W-DA042V Analog Output Unit is being initialized or restarted. ON if there is no Unit with the unit number specified in N. ON if AODC(217) is executed in an interrupt task when it is also being executed in a cyclic task. ON if an analog output that is not being used is specified in A. ON if the specified CJ1W-DA042V Analog Output Unit is not in Direct Conversion Mode. ON if the output SV in the Special I/O Unit Area for the specified analog output is out of range. If outputting all analog outputs is specified in A, the Error Flag will turn ON if the output SV for even one of them is out of range. ON if there is a DM parameter setting error for specified CJ1W-DA042V Analog Output Unit. (The ERC indicator will be lit.) OFF in all other cases.
Equals Flag	=	On if output the data was completed normally. On if outputting the data was not completed normally.

Related Auxiliary Area Words and Bits

Name	Addresses	Operation
Special I/O Unit Initialization Flags	A330.00 to A335.15	ON when a Special I/O Unit is being initialized. OFF: Not being initialized. ON: Being initialized.

Function


AODC(217) executes analog conversion for the CJ1W-DA042V Analog Output Unit with the unit number specified in N and outputs the conversion results immediately to the analog output or outputs specified in A. If 0 is specified for A, four words of data are stored. If 1 to 4 is specified for A, one word of data is stored. The specified CJ1W-DA042V Analog Output Unit must be in Direct Conversion Mode before AODC(217) is executed. Refer to the SYSMAC CS/CJ-series Analog I/O Units Operation Manual (Cat. No. W345) for details on the Direct Conversion Mode and the number of analog outputs.

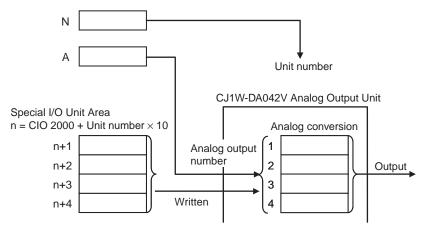

Precaution


- Use AODC(217) only for a CJ1W-DA042V Analog Output Unit. If it is executed for any other Special I/O Unit, the instruction execution time may be approx. 1 ms or the Unit may stop operating (i.e., the ERH indicator will light).
- The specified CJ1W-DA042V Analog Output Unit must be placed in Direct Conversion Mode before AODC(217) is executed. If it is not in Direct Conversion Mode, the instruction will not be executed and the Error Flag will turn ON.
- Do not execute this instruction in both a cyclic task and an interrupt task. If it is executed both in a
 cyclic task and an interrupt task, the instruction in the interrupt task will not be executed and the Error
 Flag will turn ON.

• If an attempt is made to execute this instruction while the CJ1W-DA042V Analog Output Unit is being initialized, it will not be executed and the Error Flag will turn ON. To ensure that the Unit is not being initialized when this instruction is executed, use the High-speed I/O Unit Initialization Flag in a normally closed condition for the instruction.

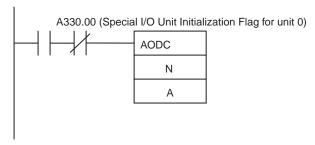

Example Programming

When CIO 0.00 is ON in the following example, the output SV for analog output 1 stored in CIO 2031 (in the words allocated to Special I/O Unit with unit number 3 in the Special I/O Unit Area) is output from analog output 1 of the CJ1W-DA042V Analog Output Unit with unit number 3.

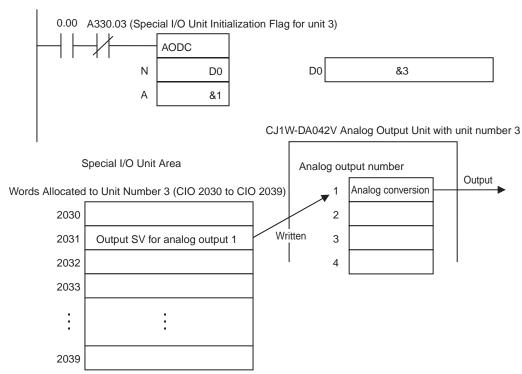

NCDMV

Instruction	Mnemonic	Variations	Function code	Function
PCU HIGH-SPEED POSITIONING	NCDMV	@NCDMV	218	NCDMV(218) starts absolute or relative high- speed point-to-point positioning for the specified axis of a CJ1W-NC□□4, CJ1W-NC□81, or CJ1W- NC□82 Position Control Unit.

		NCDMV
Symbol	NCDM\ C A	C: Control word A: First word of Direct Operation Command Area

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	ОК	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	Control word	DWORD	2
А	First word of Direct Operation Command Area	WORD	Variable

C: Control Data

C: High-speed PTP Command and Axis Number

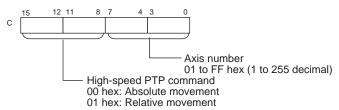

C+1: Position Control Unit

- CJ1W-NC 4 (Special I/O Unit)
 0000 to 005F hex (unit number 0 to 95)
- CJ1W-NC□81/NC□82 (CPU Bus Unit) 8000 to 800F hex (unit number 0 to F)

A: First Word of Direct Operation Command Area

Specify the first word of the Direct Operation Command Area that is set in the common parameters of the Position Control Unit.

Operand Specifications

Area			W	ord ad	Idress	es			Indirect addre		Con-	Registers			Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				T
А	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if a Unit with the number C+1 is not in range. ON if the Unit specified in C+1 is not a CJ1W-NC214, CJ1W-NC234, CJ1W-NC414, CJ1W-NC434, CJ1W-NC281, CJ1W-NC481, CJ1W-NC881, CJ1W-NC881, CJ1W-NC482, or CJ1W-NC882 Position Control Unit. ON if a Unit with the number C+1 is not in the PLC. ON if the axis number in C is 00. OFF in all other cases.
Equals Flag	P_EQ	ON if positioning was started normally by the Position Control Unit. OFF if the high-speed PTP command in C is not allowed for the specified Position Control Unit. OFF if the axis number in C is not allowed for the specified Position Control Unit. OFF if the axis number in C is disabled for the specified Position Control Unit. OFF if NCDMV(218) is executed for a Position Control Unit that is not ready.

Related Auxiliary Area Words and Bits


Name	Addresses	Operation
Special I/O Unit Initialization Flags	A330.00 to A335.15	Turns ON when the Special I/O Unit is being initialized. OFF: Not initializing. ON: Initializing.
CPU Bus Unit Initializing Flags	A302.00 to A302.15	Turns ON when the CPU Bus Unit is being initialized. OFF: Not initializing. ON: Initializing.

Function

NCDMV(218) starts absolute or relative high-speed point-to-point positioning for the axis specified in C of the Position Control Unit specified in C+1.

Positioning can be started for only one axis at a time with each NCDMV(218) instruction.

The Equals Flag in the Conditions Flags is turned ON if positioning is started normally in the Position Control Unit.

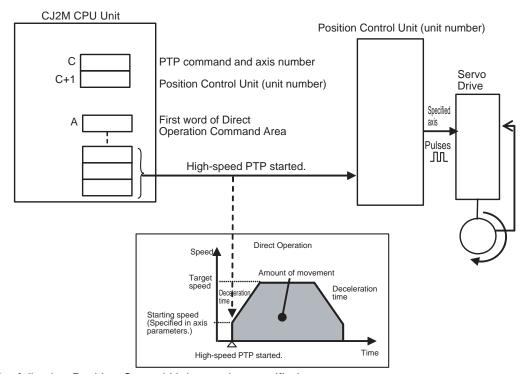

The following Position Control Units can be specified.


CJ1W-NC214, CJ1W-NC234, CJ1W-NC414, and CJ1W-NC434 (Special I/O Units)

CJ1W-NC281, CJ1W-NC481, CJ1W-NC881, CJ1W-NCF81, CJ1W-NC482, or CJ1W-NC882 (CPU Bus Units)


Refer to the *CJ-series Position Control Unit Operation Manual* (Cat. No. W426) for details on using direct operation.

Precautions for Correct Use

- The Position Control Unit can execute only one command for one NCDMV(218) instruction each
 control cycle. If high-speed PTP movements are started continuously, the Position Control Unit may
 not be able to accept all of them. (In this case, the Equals Flag will be OFF.) Use the Equals Flag to
 create a self-maintaining program, as shown below, so that NCDMV(218) will not be executed until
 the Equals Flag turns ON, as shown below.
- NCDMV(218) will not be executed when the Position Control Unit is being initialized. Use the
 following Unit Initializing Flags in NC conditions as execution conditions for NCDMV(218). (The Unit
 Initializing Flags are A330.00 to A335.15 for Special I/O Units and A302.00 to A302.15 for CPU Bus
 Units.)

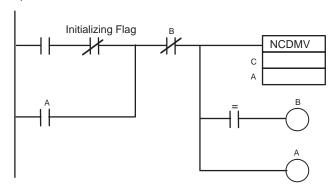


 When starting high-speed PTP positioning, pulse output will start as soon as NCDMV(218) is executed. Updating axis status, such as the Axis Busy Flag, will be performed in the next I/O refresh period.

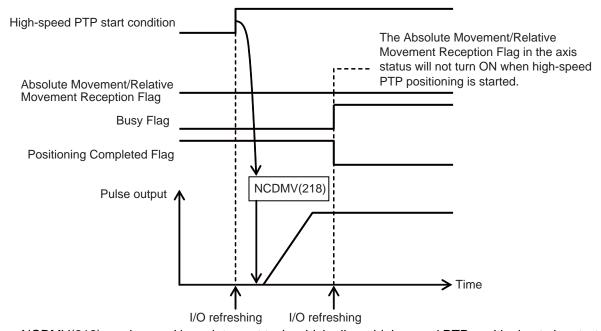


NCDMV(218) can be used in an interrupt task, which allows high-speed PTP positioning to be started
with an interrupt. However, do not execute NCDMV(218) in a cyclic task for the same Unit if
NCDMV(218) is executed in an interrupt task. (The same thing applies to IORD(222) and
IOWR(223).) If an attempt is made to execute NCDMV(218) in an interrupt task when it is already
being executed for the same Unit in a cyclic task, it will cause a duplicate refresh error (non-fatal) and
A402.13 will turn ON.

Example Programming


When CIO 0.00 turns ON in the following example, an relative movement is executed using direct operation for axis 2 of the CJ1W-NC2 \square 4 Position Control Unit (a Special I/O Unit) with unit number 3. If the first word of the Direct Operation Command Area is D0, the direct operation command settings in D12 to D23 are used to start high-speed PTP positioning.

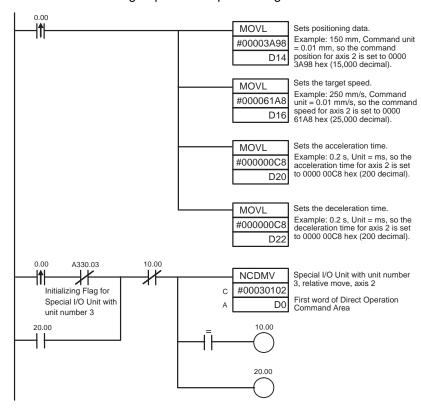

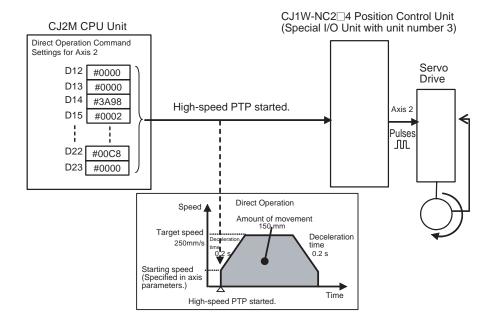

NCDTR

Instruction	Mnemonic	Variations	Function code	Function
PCU POSITIONING TRIGGER	NCDTR	@NCDTR	219	NCDTR(219) is used to start a sequence for Memory Operation of a CJ1W-NC□81/NC□82 Position Control Unit when the start condition for the sequence is waiting for a command from NCDTR(219).

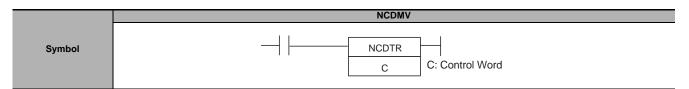

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	ОК	ОК	OK	ОК

Operands

Operand	Description	Data type	Size		
С	Control data	DWORD	2		

C: Control data

C: Task number in Position Control Unit

Specify the task that is set in the Memory Operation Parameters of the Position Control Unit between 0001 and 00FF hex (1 to 255 decimal).

C+1: Position Control Unit

Specify 8000 to 800F hex (unit number 0 to F).

Operand Specifications

Area			W	ord ad	dresse	es			Indirect addre		Con-	Registers			Fla	ags	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if a Unit with the number C+1 is not in range. ON if the Unit specified in C+1 is not a CJ1W-NC281, CJ1W-NC481, CJ1W-NC881, CJ1W-NCF81, CJ1W-NC482, or CJ1W-NC882 Position Control Unit. ON if there is no Unit with the unit number specified in C+1. OFF in all other cases.
Equals Flag	P_EQ	 ON if positioning was started normally by the Position Control Unit. OFF if the task number in C is out of range for the specified Position Control Unit. OFF if the task number in C is not waiting to be started by NCDTR(219) for the specified Position Control Unit. OFF if NCDTR(219) is executed for a Position Control Unit that is not ready.


Related Auxiliary Area Words and Bits

Name	Addresses	Operation
CPU Bus Unit Initializing Flags	A302.00 to A302.15	Turns ON when the CPU Bus Unit is being initialized. OFF: Not initializing. ON: Initializing.

Function

NCDTR(219) starts a sequence that is waiting for a command input from NCDTR(219) for the task specified in C for Memory Operation in the Position Control Unit specified in C+1.

The Equals Flag in the Conditions Flags is turned ON if the sequence is started normally in the Position Control Unit.

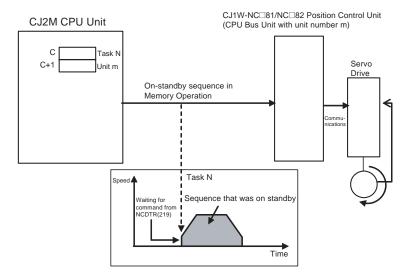


The following Position Control Units can be specified.

CJ1W-NC281, CJ1W-NC481, CJ1W-NC881, CJ1W-NC781, CJ1W-NC482, and CJ1W-NC882 (CPU Bus Units)

Refer to the *CJ-series Position Control Unit Operation Manual* (Cat. No. W426) for specifications on Memory Operation.

Precaution


- The Position Control Unit can execute only one command for one NCDTR(219) instruction each control cycle.
 - If NCDTR(219) is executed continuously for different tasks, the Position Control Unit may not be able to accept all of them. (In this case, the Equals Flag will be OFF.)
 - Use the Equals Flag to create a self-maintaining program, as shown below, so that NCDTR(219) will not be executed until the Equals Flag turns ON, as shown below.
- NCDTR(219) will not be executed when the Position Control Unit is being initialized.
 Use the following Unit Initializing Flags in NC conditions as execution conditions for NCDTR(219).
 (The Unit Initializing Flags are A302.00 to A302.15 for CPU Bus Units.)

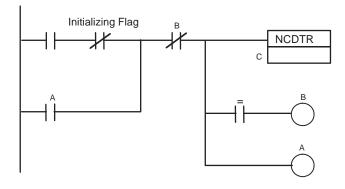


NCDTR(219) can be used in interrupt tasks.
 However, do not execute NCDTR(219) in a cyclic task for the same Unit if NCDTR(219) is executed in an interrupt task. (The same thing applies to IORD(222) and IOWR(223).)
 If an attempt is made to execute NCDTR(219) in an interrupt task when it is already being executed for the same Unit in a cyclic task, it will cause a duplicate refresh error (non-fatal) and A402.13 will turn ON.

Example Programming


When CIO 0.00 turns ON in the following example, the sequence that is waiting for a command input from NCDTR(219) is started for task 1 of the Position Control Unit with unit number 3.

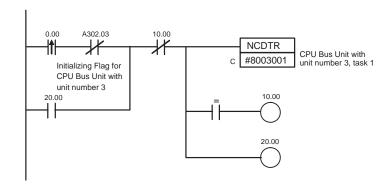

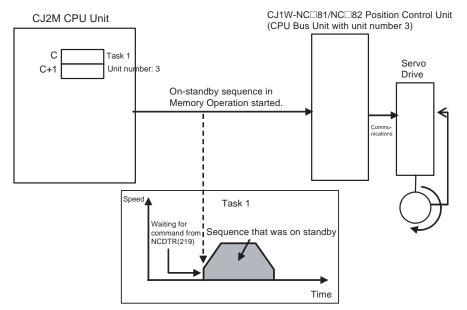

IORD

Instruction	Mnemonic Variations		Function code	Function		
INTELLIGENT I/O READ	IORD	@IORD	222	Reads the contents of memory area of a Special I/O Unit or CPU Bus Unit.		

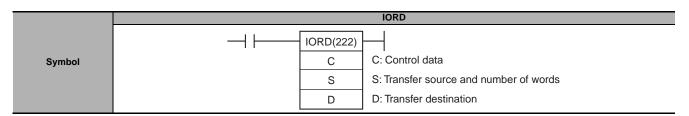

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size	
С	Control data	UINT	1	
S	Transfer source and number of words	UDINT	2	
D	Transfer destination	UINT	Variable	

Note If IORD(222) is executed for a CPU Bus Unit running under a CPU Unit that does not support using IORD(222) for CPU Bus Units, an error will occur and the ER Flag will turn ON.

C: Depends on Special I/O Unit or CPU Bus Unit.

S: Special I/O Unit: 0000 to 005F hex


(to specify unit numbers 0 to 95)

CPU Bus Unit: 8000 to 800F hex

(to specify unit numbers 0 to F hex)

S+1: Number of words to transfer

(0001 to 0080 Hex, depends on Special I/O Unit or CPU Bus Unit)

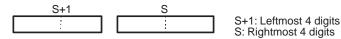

Operand Specifications


Area		Word addresses							Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											ОК	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				
D																		

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the number of words to transfer (S) is outside the range of 0001 to 0080 hex. ON if the unit number (S) is outside the range of 0000 to 005F hex or 8000 to 800F hex. ON if the designated Special I/O Unit is on SYSMAC BUS. ON if a Special I/O Unit or CPU Bus Unit not affected by IORD(222) is designated. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.
Equals Flag	P_EQ	ON if reading operation is completed normally. OFF if reading operation is not completed normally.


Function

IORD(222) reads the number of words designated in S+1 from the memory area of the Special I/O Unit or CPU Bus Unit whose unit number is designated by S and outputs the data to D. Only Special I/O Units or CPU Bus Units mounted on CPU Racks or Expansion I/O Racks can be designated. Refer to the operation manual of the Special I/O Unit or CPU Bus Unit from which data is being read for specific details for each Unit.

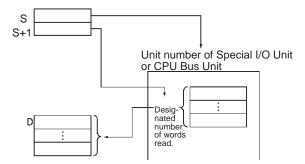

Hint

- When IORD(222) is executed, the execution results are reflected in the condition flags. In particular, the Equals Flag turns ON when reading is completed. Input the condition flags such as the Equals Flag with output branching from the same input conditions as the IORD(222) instruction.
- If the Special I/O Unit or CPU Bus Unit is busy, the reading operation will not be executed. Use the Equals Flag to create a self-maintaining program, as shown below, so that IORD(222) will be executed with each cycle until the reading operation is executed.

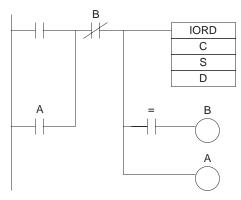


- When the input condition is met, self maintenance is performed by output A and IORD(222) is executed with each cycle until the Equals Flag turns ON. When the reading is completed and the Equals Flag turns ON, output B turns ON and the self maintenance is cleared.
- Be sure to place condition flags directly after IORD(222) instructions, and not after any other instructions. If a condition flag is placed after another instruction, it will be affected by the execution results of that instruction.

Precaution


- IORD(222) can be used in an interrupt task, which allows high-speed processing of specific I/O data
 with an interrupt. If IORD(222) is used in an interrupt task, always disable cyclic refreshing of the
 specified Special I/O Unit by turning ON the corresponding Special I/O Unit Cyclic Refreshing
 Disable Bit in the PLC Setup.
- When cyclic refreshing of the specified Special I/O Unit is enabled in the PLC Setup (the corresponding Special I/O Unit Cyclic Refreshing Disable Bit is OFF), a non-fatal Duplicate Refresh Error will occur and the Interrupt Task Error Flag (A402.13) will go ON in the following cases.
 - Words allocated to the same Special I/O Unit were already refreshed by IORF(097) or FIORF(225).
 - Words allocated to the same Special I/O Unit were read or written by IORD(222) or IOWR(223).

Example Programming


In this example, IORD(222) is used to read data.

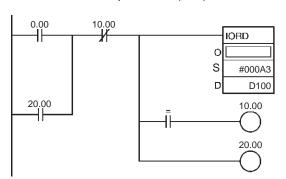

When CIO 0.00 is turned ON, 10 words are read from the Special I/O Unit with unit number 3, and are stored in D100 to D109.

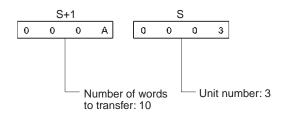

The control code (C) varies depending on the Special I/O Unit.

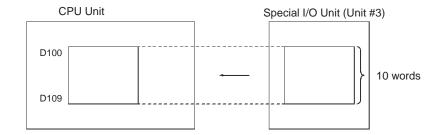

IOWR

Instruction	Mnemonic	Variations	Function code	Function			
INTELLIGENT I/O WRITE	IOWR	@IOWR	223	Outputs the contents of the CPU Unit's I/O memory area to a Special I/O Unit or CPU Bus Unit.			

	IOWR						
	⊣ ⊢—-	IOWR(223)					
Symbol		С	C: Control data				
		S	S: Transfer source and number of words				
		D	D: Transfer destination and number of words				

Applicable Program Areas

	Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Ī	Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	Control data	UINT	1
S	Transfer source and number of words	WORD	Variable
D	Transfer destination and number of words	UDINT	2

Note If IOWR(223) is executed for a CPU Bus Unit running under a CPU Unit that does not support using IOWR(223) for CPU Bus Units, an error will occur and the ER Flag will turn ON.

C: Depends on Special I/O Unit or CPU Bus Unit.

D: Special I/O Unit: 0000 to 005F hex

(to specify unit numbers 0 to 95)

CPU Bus Unit: 8000 to 800F hex

(to specify unit numbers 0 to F hex)

D+1: Number of words to transfer

(0000 to 0080 Hex, depends on Special I/O Unit or CPU Bus Unit)

D+1	D	
		D+1: Leftmost 4 digits D: Rightmost 4 digits
		D. Mightinost 4 digits

Operand Specifications

Area		Word addresses							Indirect addre		Con-	Registers			Flags		Pulse TF	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С												OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				
D																		

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the number of words to transfer (D) is outside the range of 0001 to 0080 hex. ON if the unit number (D) is outside the range of 0000 to 005F hex or 8000 to 800F hex. ON if S is designated by a constant when the number of words to be transferred (D+1) is not 0001 hex. ON if the designated Special I/O Unit is on SYSMAC BUS. ON if a Special I/O Unit or CPU Bus Unit not affected by IOWR(223) is designated. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.
Equals Flag	P_EQ	ON if writing operation is completed normally. OFF if writing operation is not completed normally.


Note

- When "0001" is designated for the number of words to be transferred (D+1), the data for S can be designated by a constant. If a constant is designated for S when the number of words to be transferred is not "0001," an error will occur and the Error Flag will turn ON.
- The Equals Flag will turn OFF if the writing operation cannot be completed normally due to the Special I/O Unit or CPU Bus Unit being busy.
- An error will occur if there is an I/O Unit verification error, Special I/O Unit setting error, CPU Bus Unit setting error, Special I/O Unit error, or CPU Bus Unit error in a Special I/O Unit or CPU Bus Unit.

Function


IOWR(223) writes the designated number of words (D) from the first source word (designated by S) onwards and outputs them to the Special I/O Unit or CPU Bus Unit that has the unit number designated by D. Only Special I/O Units or CPU Bus Units mounted on CPU Racks or Expansion I/O Racks can be designated.

For details on using the IOWR instruction, see the manual of the special I/O unit (or CPU special unit) to be written to.

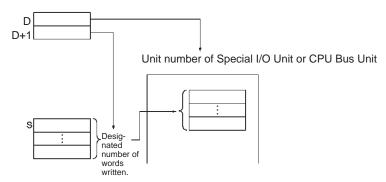

Hint

- When IOWR(223) is executed, the execution results are reflected in the condition flags. In particular, the Equals Flag turns ON when reading is completed. Input the condition flags such as the Equals Flag with output branching from the same input conditions as the IOWR(223) instruction.
- If the Special I/O Unit or CPU Bus Unit is busy, the writing operation will not be executed. Use the Equals Flag to create a self-maintaining program, as shown below, so that IOWR(223) will be executed with each cycle until the writing operation is executed.

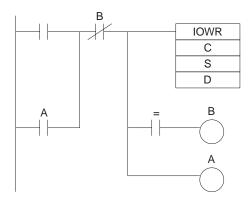


- When the input condition is met, self maintenance is performed by output A and IOWR(223) is executed with each cycle until the Equals Flag turns ON. When the writing is completed and the Equals Flag turns ON, output B turns ON and the self maintenance is cleared.
- Be sure to place condition flags directly after IOWR(223) instructions, and not after any other instructions. If a condition flag is placed after another instruction, it will be affected by the execution results of that instruction.

Precaution


- IOWR(223) can be used in an interrupt task, which allows high-speed processing of specific I/O data with an interrupt. If IOWR(223) is used in an interrupt task, always disable cyclic refreshing of the specified Special I/O Unit by turning ON the corresponding Special I/O Unit Cyclic Refreshing Disable Bit in the PLC Setup.
- When cyclic refreshing of the specified Special I/O Unit is enabled in the PLC Setup (the corresponding Special I/O Unit Cyclic Refreshing Disable Bit is OFF), a non-fatal Duplicate Refresh Error will occur and the Interrupt Task Error Flag (A40213) will go ON in the following cases.
 - Words allocated to the same Special I/O Unit were already refreshed by IORF(097) or FIORF(225).
 - Words allocated to the same Special I/O Unit were read or written by IORD(222) or IOWR(223).

Example Programming


In this example, IOWR(223) is used to write data.

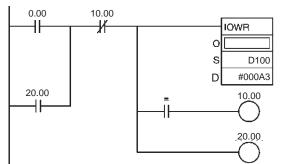

When CIO 0.00 is turned ON, the 10 words in D100 to D109 are written to the Special I/O Unit.

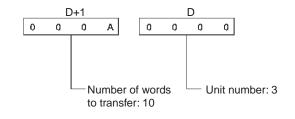

The control code (C) varies depending on the Special I/O Unit.

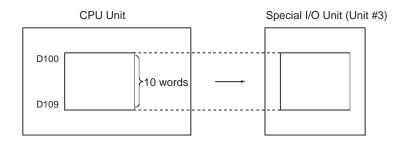

Serial Communications Instructions


Serial Communications Instructions

There are two types of serial communications instruction. The TXD(236), RXD(235), TXDU(256), RXDU(255), DTXDU(262), and DRXDU(261) instructions send and receive data in no-protocol (custom) communications with an external device. PMCR(260)/PMCR2(264) sends and receives data using user-defined protocols with an external device. The difference is shown in the following tables.

Note • TXD(236) and RXD(235) are used for built-in CPU Unit serial ports and serial ports on Serial Communications Boards with unit version 1.2 or later.

- TXDU(256) and RXDU(255) are used for serial ports on Serial Communications Units with unit version 1.2 or later.
- DTXDU(262) and DRXDU(261) are used for serial ports on CJ1W-SCU22/SCU32/SCU42 Serial Communications Units mounted to CJ2H CPU Units with unit version 1.1 or later. These instructions enable high-speed data communications.
- PMCR(260) and PMCR2(264) can be used only for the serial ports on Serial Communications Units/Boards.

	Office Dourds.	
Instructions	Communications frames	Function
TXD(236), RXD(235), TXDU(256), RXDU(255), DTXDU(262), and DRXDU(261)	Any of the following can be used. No Start or End Code Data Start and End Code ST Data ED Only Start Code CR+LF End Code ST Data CR LF	Sends or receives data in one direction only. A send delay can be set.
PMCR(260) and PMCR2(264)	Only End Code Data ED Start and CR+LF End Code ST Data CR LF The following type of frames (messages) can be created to meet the requirements of the external device. Header Address Data Error check Terminator	Up to 16 steps can be defined for sending and receiving. Steps can be changed and retry processing
	Read/write Communications steps Can be created. I/O memory Read/write I/O memory I/	performed based on responses. Communications monitoring times can be set. Symbols can be read/written for the PLC. Repeat symbols can be used. Other.

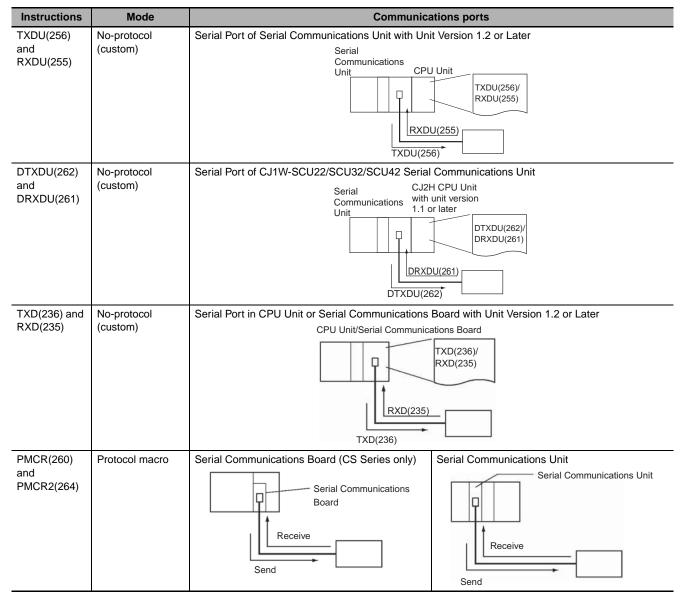

Communications Port Allocations

Although the communications port (see note) was specified in the operands of previous Serial Communications Instructions, the Network Communications Instructions use automatic port allocation with new communications ports (8 to 71) to enable executing up to 64 of the Network Communications Instruction simultaneously. With these instructions, there is no need for the user to keep track of the communications ports.

Each time one of these instructions is executed, the number of ports stored in A211 (Number of Ports Available) will be decremented. Each time a response is returned for a communications port, the value in A211 will be incremented. This system enables monitoring communications performance.

Communications ports	Application	Assignment method
0 to 7	Network Communications Instructions, Serial Communications Instructions, easy backup (SEND, CMND, PMCR, TXDU, etc.)	Specified in operand. 0 to 7: The specified communications port is assigned. F: The communications port is automatically assigned between 0 and 7.
8 to 71	New Serial Communications Instructions (PMCR2)	Automatically assigned, with the number of available ports stored in A211.

Note The communications ports are internal logical ports (virtual ports) used to manage simultaneous execution of communications instructions over multiple cycles (including communications processing, file handling, etc.).


Auxiliary Area Words and Bits

The Network Communications Instructions use the communications information in operand I in place of the Communications Port Enabled Flags in A202 used by previous instructions.

Auxiliary Area	Network Communications Instructions for CJ1/CS1/CJ2	CJ2 Network Communications Instructions
A202.00 to A202.07	Communications Port Enabled Flag (communications ports 0 to 7)	Instruction operand I Bit 0 (Turns ON when execution has started, and not when execution is enabled.)
A202.08	Not used.	CJ2 Instructions Enabled Flag (default: ON)
A203 to 210	Communications completion codes for communications ports 0 to 7	Instruction operand I+1
A211	Not used.	Number of ports available for CJ2 Network Communications Instruction (A202.08 turns OFF when the value in A211 reaches 0.)
A214.00 to A214.07	First Cycle Flags after Communications Finished	
A215.00 to A215.07	First Cycle Flags after Communications Error	
A216 and A217	Communications Port Completion Code Storage Address	
A218	Used Communications Port Numbers	
A219	Communications Port Error Flags	Instruction operand I Bit 1

PMCR

Instruction	Mnemonic	Variations	Function code	Function
PROTOCOL MACRO	PMCR	@PMCR	260	Starts a communications sequence (protocol data) that is registered in a Serial Communications Board (CS Series only) or Serial Communications Unit.

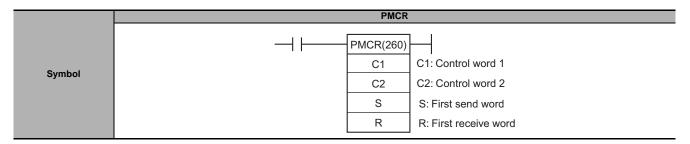


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
C1	Control word 1	UINT	1
C2	Control word 2	UINT	1
S	First send word	UINT	Variable
R	First receive word	UINT	Variable

C1: Control word 1

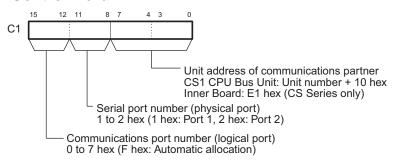

Note Automatic allocation can only be used on CJ2 CPU Units and Lot No. 020601 (manufactured June 1, 2002) or later of CS1-H, CJ1-H, CJ1M, and CS1D (for Single CPU System) CPU Units.


C2: Control word 2



Send area specification

S: First Send Word and Send Area

The first word of the words required to send data is specified. S contains the number of words to be sent +1 (i.e., including the S word) and send data starts in S+1. Between 0000 and 00FA hex (0 and 250 decimal) words can be sent.

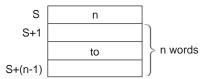

If there is no operand specified in the execution sequence, such as a direct or linked word, specify the constant #0000 for S. If a word address or register is specified, the data in the word or register must always be 0000. An error will occur and the Error Flag will turn ON if any other constant or a word address is given and PMCR(260) will not be executed.

Receive area specification


R: First Receive Word and Receive Area

• Setting Before Executing PMCR


Set the data specified by m (beginning with D) as the initial data for the receive buffer (backup data for receive failure). Data m can be set to 0002 to 00FA (hex) (2 to 255). If 0000 (hex) or 0001 (hex) is specified for m, the receive area will be cleared to 0 on receive failure.

· When execution of the protocol macro ends

Received data is automatically stored in words starting with R+1 and the number of words received plus R (i.e., including R) is automatically written to R between 0000 and 00FA hex (0 and 250 decimal).

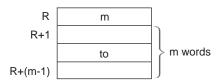

If there is no operand specified in the execution sequence, such as a direct or linked word, specify the constant #0000 for R. If a word address or register is specified, the data in the word or register must always be 0000.

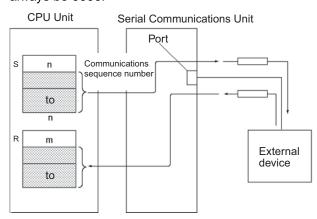

Operand Specifications

Aron	Word addresses				Indirect DM/EM addresses		Con-		Registers		тк	CF	Pulse	TR				
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		CF	bits	bits
C1, C2												OK						
S	OK	OK	OK*1	OK	OK	OK	OK	OK*2	OK	OK	OK			OK				
R																		

^{*1} H512 to H1535 cannot be used.

Flags

Name	Label	Operation
Error Flag	ER	 ON if the Communications Port Enabled Flag is OFF for the specified logical port when PMCR(260) is executed. ON if C1 is not within the specified ranges. ON if the number of words of S or R exceeds 249 (when words are specified). ON if PMCR(260) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Contents
Communications Port Enabled Flag	A202.00 to A202.07	ON when network communications are enabled (including PMCR(260). Bits 00 to 07 correspond to logical ports 0 to 7, respectively. A Communications Port Enabled Flag will turn OFF when network communications are started and will turn ON when they are completed (regardless of whether communications end normally or in error.
Communications Port Error Flag	A219.00 to A219.07	ON when an error occurs in network communications. Bits 00 to 07 correspond to logical ports 0 to 7, respectively. Flag status will be maintained until the next network communications start. The flag will turn OFF when communications start again even if an error occurred for the last execution.
Communications Port Completion Codes	A203 to A210	Contains the completion code stored when network communications are performed. Words A203 to A210 correspond to logical ports 0 to 7, respectively. The completion code will be 00 while the communications instruction is being executed. The new response code will be stored when execution has been completed. The contents of these words is cleared when operation is started.

Communications Responses

Code	Contents
1106 (hex)	No corresponding program number • Specified Send/Receive Sequence No. that has not been registered. • Modify the Send/Receive Sequence No. or add the number using the CX-Programmer.
2201 (hex)	Not operable due to protocol execution Since one protocol macro has already been executed, no further execution is accepted. Add NC condition to program for the Protocol Macro Execution Flag.
2202 (hex)	Not operable due to stoppage Since the protocol is being switched, no further execution is accepted. Add NC condition to program for the Serial Setting Change Flag.
2401 (hex)	No registration table • An error has occurred in the protocol macro data or data is being transmitted. • Transmit the protocol macro data using the CX-Programmer.

Note Refer to the CS/CJ-series Communications Commands Reference Manual (W342) for other response codes.

Inner Board Area (CS Series Only)

Name	Address	Contents
Port 1 Protocol Macro Execution Flag	CIO 1909.15	ON when PMCR(260) is executed. The flag will remain OFF if execution fails.
Port 2 Protocol Macro Execution Flag	CIO 1919.15	The flag will turn OFF when the communications sequence has been completed (either an end or abort).

^{*2} In the EM Area, bank D and higher cannot be used.

CPU Bus Unit Area

n = 1500 + 25 x unit number

Name	Address	Contents
Port 1 Protocol Macro Execution Flag	Bit 15 of CIO n+9	ON when PMCR(260) is executed. The flag will remain OFF if execution fails. The flag will turn OFF when the communications sequence has been completed
Port 2 Protocol Macro Execution Flag	Bit 15 of CIO n+19	(either an end or abort).

Function

PMCR(260) will execute the communications sequence specified in C2 using the logical port specified in bits 12 to 15 of C1 and the physical port specified in bits 8 to 11 of C1 for the unit address specified in bits 0 to 7 of C1.

If a symbol is specified as the operand for a send message, the number of send words specified in S and beginning from S+1 will be used as the send area. If a symbol is specified as the operand for a receive message, receive data is placed in memory staring with R+1 and the number of words received is automatically written to R if the transmission is successful.

If the transmission fails, the data (R+1 onward) set before PMCR(260) was executed will be read from the receive buffer and stored in the R+1 onward again. (By means of this function, instead of the present value data being cleared to zero when reception fails, the previously received data is retained.)

Note For information on using automatic allocation ("F") for the communication port (logical port) number, see "Automatic Allocation of Communications Ports" on page 3-370.

Hint


Holding the Receive Area


The receive buffer is cleared to all zeros immediately before a communications sequence is executed for PMCR(260). If programming such as that shown below is used to periodically read PV data or other values and data cannot be read due to a reception error or other cause, the data being read will be cleared until the next successful read.

A function is provided to maintain the data in the receive area even when a reception error occurs. If this function is used, data will be transferred from the first m words of the receive area to the receive buffer after the buffer is cleared to all zeros but before the communications sequence is executed. This prevents the receive area from being temporarily cleared to all zeros by writing the most recent receive data when new receive data is not successfully obtained.

Specify the number of words of the receive area to be maintained as the value m. If 0 or 1 is specified, the holding function will be disabled and the receive area will be cleared to all zeros.

Example: The following programming example shows the instructions used to constantly or periodically execute PMCR(260) to read data through a single receive operation.

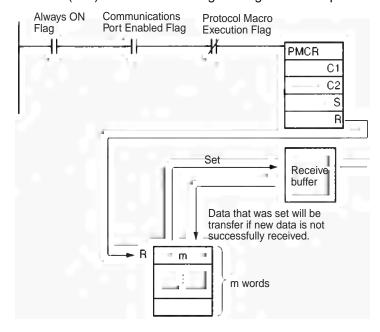

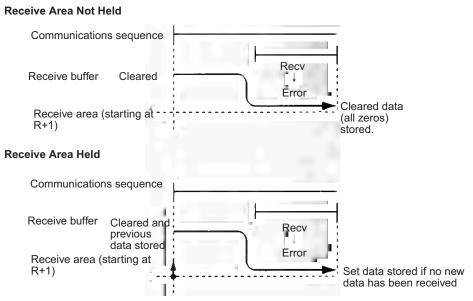


Precautions


- The data in the send area specified with S is actually sent using the symbol read option, R(), in a send message.
- Data is actually received to the receive area specified by R using the symbol write option, W(), in a
 receive message.
- Refer to the CX-Protocol Operation Manual (W344) for procedures for designating symbols R() and W().
- PMCR(260) can be executed for a serial communications port on a Serial Communications Board (CS Series only) or Serial Communications Unit. Up to 16 Serial Communications Units can be mounted to the CPU Rack and Expansion I/O Racks. The Unit address of the communications partner must be set in bits 0 to 7 of C1 to specify which Unit/Board is to be used and the serial port number must be set in bits 8 to 11. Unit addresses are specified as shown in the following table.

Unit/Board	Unit address
Serial Communications Board (CS Series only)	E1 hex
Serial Communications Unit	Unit number + 10 hex




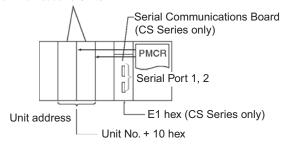

• The corresponding Protocol Macro Execution Flag will turn ON at the start of PMCR(260) execution. It will turn OFF after the communications sequence has been completed and data has been written to the specified receive area. A N.C. input for the corresponding Protocol Macro Execution Flag should be used as part of the execution condition whenever executing PMCR(260) to be sure that only one communications sequence is being executed at the same time for the same physical port. An example is shown below.

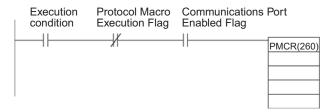


• SEND(090), RECV(098), and CMND(490) also use the logical ports 0 to 7 to execution communications sequences through Serial Communications Unit and Boards (internally using FINS commands). PMCR(260) cannot be executed for a logical port that is already being used by SEND(090), RECV(098), CMND(490)or PMCR(260). To prevent more than one communications sequence from being executed for the same logical port, the corresponding Communications Port Enable Flag (A20200 to A20207) should be used as a NO input in the execution condition for PMCR(260), as shown in the above diagram.

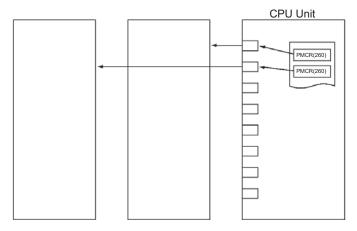

• An error flag will not turn ON when the data of C2 is outside the range. A completion code will be stored in "Network Communications Completion Code" (A203 to A210) of the Auxiliary.


Example Programming

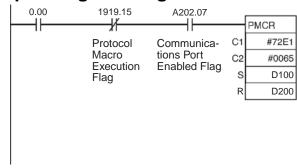

When CIO 0.00 is ON in the following example, communications sequence No. 101 (0065 hex) will be executed as long as the Communications Port Enabled Flag for port 7 (A20207) is ON and the Port 1 Protocol Macro Execution Flag (CIO 1909.15) is OFF.

If an operand is specified for the symbol in a send message, 2 words of data starting from D101 will be used as the send area (because the contents of D100 is #0003).


If an operand is specified for the symbol in a receive message, 2 words of data will be stored starting from D201 and the number of words received +1 will be written to D200.

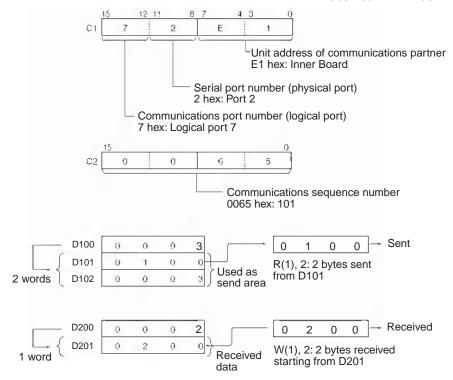

Note As shown above, the symbol read option, R(), in the send message or the symbol write option, W(), actually sends/receives data.

TXD

Instruction	Mnemonic	Variations	Function code	Function
TRANSMIT	TXD	@TXD	236	Outputs the specified number of bytes of data from the CPU Unit's built-in RS-232C port or one of the Serial Communications Board's serial ports. (The Serial Communications Board must be Ver. 1.2 or later).

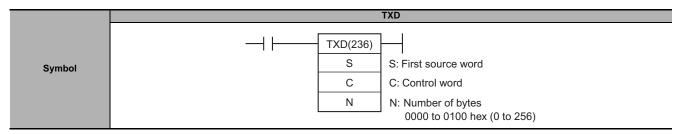


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
С	Control word	UINT	1
N	Number of bytes 0000 to 0100 hex (0 to 256)	UINT	1

C: Control word

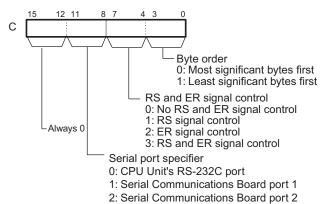

Operand Specifications

Aron			V	Vord ad	Idresse	s			Indirect DM/EM addresses		Con-		Registers		TK	CF	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		CF	bits	bits
S																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК	ОК		OK				
N											OK	OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if the CPU Unit's RS-232C port is specified as the send port, but no-protocol mode is not set in the PLC Setup. ON if one of the Serial Communication Board's serial ports is specified as the send port, but no-protocol mode is not set in the port's allocated DM Setup Area. ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. ON if a send is attempted when the Send Ready Flag is OFF. (The Send Ready Flag is A39205 for the CPU Unit's RS-232C port, A35605 for Serial Communications Board port 1, or A35613 for Serial Communications Board port 2.) ON (ER Flag in interrupt tasks) if a TXD(236) or RXD(235) instruction is being executed for the Serial Communications Board in the cyclic task, the cyclic task is interrupted, and another TXD(236) or RXD(235) instruction is executed for the Serial Communications Board in the interrupt task. ON if a TXD(236) was executed for a serial port on a Serial Communications Board that was being restarted. OFF in all other cases.

Related Auxiliary Area Words and Bits

• RS-232C incorporated in the CPU Unit

Port	Address	Contents
CPU Bus Unit's built-in RS-232C Port	A392.05	ON when data can be sent in the no-protocol mode.

Port 1 of Serial Communications Board (Unit Version 1.2 or Later)

Port	Address	Contents
Serial Communications Board port 1	A356.05	ON when data can be sent in the no-protocol mode.


Port 2

Port	Address	Contents		
Serial Communications Board port 2	A356.13	ON when data can be sent in the no-protocol mode.		

Na	me	Address	Contents			
Ports 1 and 2	Inner Board Service	A424.04	ON when TXD(236) is executed for a Serial Communications Board that			
	Disabled Flag		does not support no-protocol mode (a Board without a version number).			

Related PLC Setup Settings for the CPU Unit's Built-in RS-232C Port

CX Programmer settings

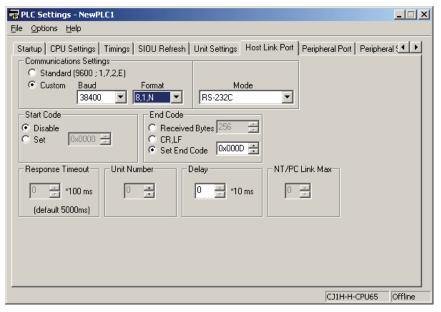

PLC Setup Settings

Programming (Console address	Name	Cattings		
Word	Bit	name	Settings		
162	0 to 15	No-protocol Mode Send Delay	0000 to 210F hex, 0 to 99,990 ms decimal (in 10-ms units)		
8 to 15		No-protocol Mode Start Code	00 to FF hex		
104	0 to 7	No-protocol Mode End Code	00 to FF hex		
	12	No-protocol Mode Start Code Specifier	0: None 1: Use start code.		
165	8 and 9	No-protocol Mode End Code Specifier	0 hex: None 1 hex: Use end code. 2 hex: Use CR+LF.		
	0 to 7	No-protocol Mode Number of Bytes of Data	00 hex: 256 bytes (default) 01 to FF hex: 1 to 255 bytes		

DM Setup Area Settings for Serial Communication Board's Ports


Setup A	rea word	Bit	Name	Cattings	
Port 1	Port 2	ыт	Name	Settings	
D32002	D32012	15	No-protocol Mode Send Delay Specifier	0: Default (0 ms) 1: Use delay in bits 1 to 14.	
D32002	D32012	0 to 14	No-protocol Mode Send Delay Time	0000 to 7530 hex 0 to 300,000 ms decimal (in 10-ms units)	
D32004	D32014	8 to 15	No-protocol Mode Start Code	00 to FF hex	
D32004		0 to 7	No-protocol Mode End Code	00 to FF hex	
	D32015	12 to 15	No-protocol Mode Start Code Specifier	0 hex: None 1 hex: Use start code.	
D32005		8 to 11	No-protocol Mode End Code Specifier	0 hex: None 1 hex: Use end code. 2 hex: Use CR+LF.	
		0 to 7	Number of Bytes of Data	00 hex: 256 bytes (default) 01 to FF hex: 1 to 255 bytes	

Function

- TXD(236) reads N bytes of data from words S to S+(N÷2)-1 and outputs the raw data in no-protocol
 mode from the CPU Unit's built-in RS-232C port or one of the Serial Communications Board's serial
 ports. (The output port is specified with bits 8 to 11 of C.)
 - The start and end codes specified for no-protocol mode are added to the data before the data is output. The start and end codes are specified in the PLC Setup (for the CPU Unit's RS-232C port) or the allocated DM Setup Area (for the Serial Communications Board's ports).
- The following send-message frame format can be set in the PLC Setup (for the CPU Unit's RS-232C port) or the allocated DM Setup Area (for the Serial Communications Board's ports).
 - 1) Start code: None or 00 to FF hex.
 - 2) End code: None, CR+LF, or 00 to FF hex.

The data will be sent with any start and/or end codes specified in the PLC Setup or the allocated DM Setup Area. If start and end codes are specified, the codes will be added to the send data (N). In this case, the maximum number of bytes that can be specified for N is 256 bytes.

- · Data is sent in the order specified in C.
- If RS signal control is specified in C, bit 15 of S will be used as the RS signal.
- If ER signal control is specified in C, bit 15 of S will be used as the ER signal.
 If RS and ER signal control is specified in C, bit 15 of S will be used as the RS signal and bit 14 of S will be used as the ER signal.
 - If 1, 2, or 3 hex is specified for RS and ER signal control in C, TXD(236) will be executed regardless of the status of the Send Ready Flag (A392.05, A356.05, or A356.13 depending on the port being used).
- Up to 259 bytes can be sent, including the send data (N = 256 bytes max.), the start code, and the end code.
- Specify the size of the send data, not including the start code and end code, in N.

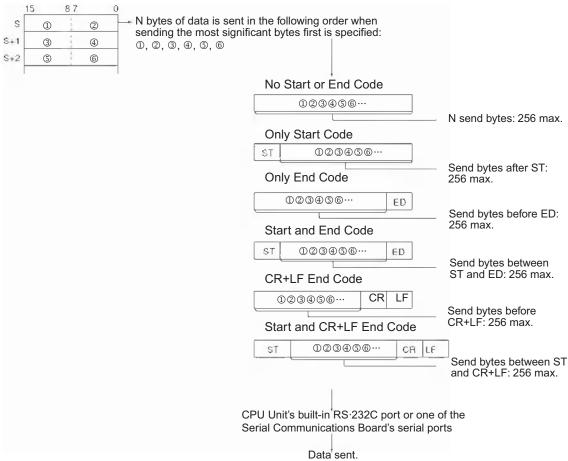

Start code / end code settings and send data

Hint

 When sending data to another device by TXD instruction, the device may require that the data be sent at certain intervals. In that case, a transmission delay time can be set to adjust the transmission intervals.

Precautions


- Do not program TXD(236)/RXD(235) for a Serial Communications Board's port (port 1 or 2) in both the cyclic task and interrupt task. A TXD(236)/RXD(235) instruction cannot be executed for the Serial Communications Board in the interrupt task if a TXD(236)/RXD(235) instruction is being executed for the Serial Communications Board in the cyclic task. An error will occur and the ER Flag will be turned ON if a TXD(236)/RXD(235) instruction is executed for the Serial Communications Board in the interrupt task when another TXD(236)/RXD(235) instruction was being executed for the Serial Communications Board in the cyclic task. (These instructions cannot be programmed in both the cyclic and interrupt tasks even if they are executed for different ports in the Serial Communications Board.)
- TXD(236) can be used only for the CPU Unit's RS-232C port or one of the Serial Communications Board's serial ports. In addition, the port must be set to no-protocol mode.
- Data can be sent only when the port's Send Ready Flag is ON. (The Send Ready Flag is A392.05 for the CPU Unit's RS-232C port, A356.05 for Serial Communications Board port 1, or A356.13 for Serial Communications Board port 2.)
- Nothing will be sent if 0 is specified for N.
- If the TXD(236) instruction is executed for a Board that does not support no-protocol mode (a Serial Communications Board without a version number), the Inner Board Service Disabled Flag (A424.04) and the Error Flag will turn ON.

Example Programming

Sending Data to a Code Reader

This example shows how to send data to the V530-R150V3 2D Code Reader as an example of communicating with an external device.

Hardware Configuration

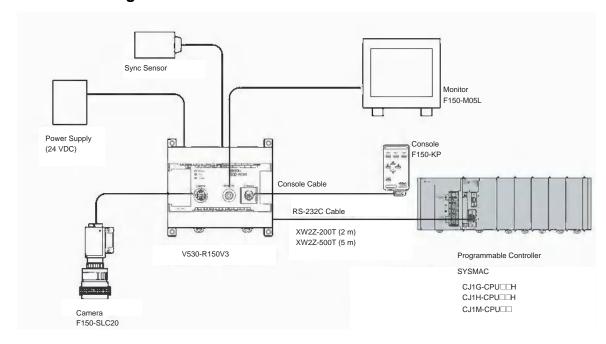

In this example, the external device is connected to the RS-232C port built into the CPU Unit.

First, set the reading conditions for the Code Reader.

Communications Settings


The communications settings of the Code Reader are given in the following table. These are the default settings.

Item	Setting				
Communications mode	No-protocol				
Baud rate	38,400 bps				
Data bit length	8 bits				
Parity	None				
Stop bits	1				
Start code	None				
End code	#000D (CR)				


Set the PLC communications settings to the same values in the PLC Setup. Only the end code needs to be set.

Programming Example

If CIO 0.01 turns ON while the RS-232C Port Send Ready Flag (A392.05) is ON, three bytes of data starting from the upper byte of D10 are sent without conversion to the Code Reader connected to the CPU Unit's built-in RS-232C port. These three bytes contain "@GL", which is the normal read command used as a trigger input to the Code Reader from the RS-232C line.

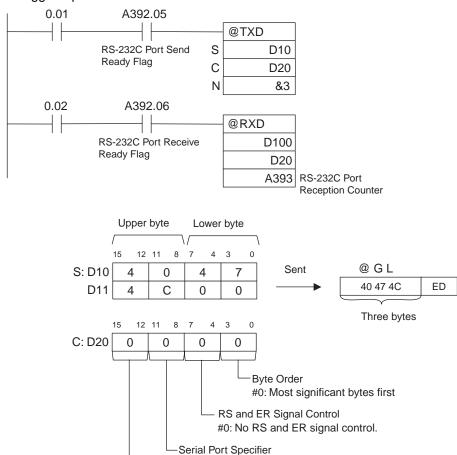

Controlling Signals

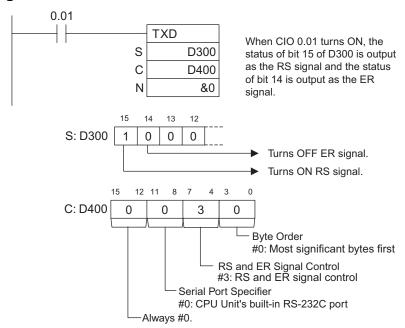


#0: CPU Unit's built-in RS-232C port

-Always #0.

RXD

Instruction	Mnemonic	Variations	Function code	Function
RECEIVE	RXD	@RXD	235	Reads the specified number of bytes of data from the CPU Unit's built-in RS-232C port or one of the Serial Communications Board's serial ports. (The Serial Communications Board must be Ver. 1.2 or later).

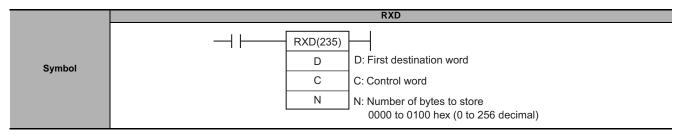


Applicable Program Areas

Area	Function block definitions	I Block program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size	
D	First destination word	UINT	Variable	
С	Control word	UINT	1	
N	Number of bytes to store 0000 to 0100 hex (0 to 256 decimal)	UINT	1	

C: Control Word

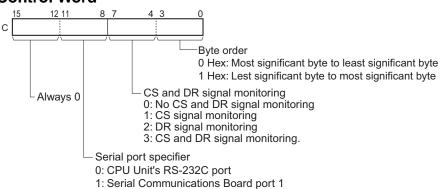

- 2: Serial Communications Board port 2

Operand Specifications

Area			v	Vord ad	dresse	s				Indirect DM/EM addresses Con- Registers				Registers			Registers			Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		CF	bits	bits			
D																					
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК	ОК		OK							
N											OK .	5									

Flags

Name	Label	Operation
Error Flag	ER	 ON if the CPU Unit's RS-232C port is specified as the send port, but no-protocol mode is not set in the PLC Setup. ON if one of the Serial Communication Board's serial ports is specified as the send port, but no-protocol mode is not set in the port's allocated DM Setup Area. ON if one of the Serial Communications Board's serial ports is specified, but the Board does not support no-protocol mode (the Board does not have a version number). ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. When using CS1D CPU Units, ON if active and standby CPU Units could not be synchronized. ON (ER Flag in interrupt tasks) if a TXD(236) or RXD(235) instruction is being executed for the Serial Communications Board in the cyclic task, the cyclic task is interrupted, and another TXD(236) or RXD(235) instruction is executed for the Serial Communications Board in the interrupt task. ON if a RXD(235) was executed for a serial port on a Serial Communications Board that was being restarted. OFF in all other cases.

Related Auxiliary Area Words and Bits

● Auxiliary Area Flags for CPU Unit's RS-232C Port


Name	Address	Contents				
RS-232C Port Reception Completed Flag	A392.06	ON when no-protocol reception is completed. Number of Receive Bytes Specified: The flag will turn ON when the specified number of bytes has been received. End Code Specified: The flag will turn ON when the end code is received or when 256 bytes have been received.				
RS-232C Port Reception Overflow Flag	A392.07	ON when more than the expected number of receive bytes has been received. Number of Receive Bytes Specified: The flag will turn ON when anything is received after reception has been completed and execution of the next RXD(235). End Code Specified: The flag will turn ON when anything is received after the end code has been received and execution of the next RXD(235) or when the 257th byte of data is received before the end code is received.				
RS-232C Port Reception Counter	A393	Counts in hexadecimal the number of bytes received in no-protocol mode.				

Auxiliary Area Flags for Serial Communication Board's Ports

Port	Name	Address	Contents
Port 1	Reception Completed Flag	A356.06	ON when no-protocol reception is completed. Number of Receive Bytes Specified: The flag will turn ON when the specified number of bytes has been received. End Code Specified: The flag will turn ON when the end code is received or when 256 bytes have been received.
	Reception Overflow Flag	A356.07	ON when more than the expected number of receive bytes has been received in no-protocol mode. Number of Receive Bytes Specified: The flag will turn ON when more data is received after reception was completed but before the received data was not read from the buffer with RXD(235). End Code Specified: The flag will turn ON when 257 or more bytes of data are received without an end code.
	Reception Counter	A357	Counts in hexadecimal the number of bytes received in no-protocol mode (0 to 256 decimal).
	Overrun Error Flag	CIO 1908 bit 04	ON when 260 or more bytes of data are received in the buffer before RXD(235) is executed.
Port 2	Reception Completed Flag	A356.14	ON when no-protocol reception is completed. Number of Receive Bytes Specified: The flag will turn ON when the specified number of bytes has been received. End Code Specified: The flag will turn ON when the end code is received or when 256 bytes have been received.
	Reception Overflow Flag	A356.15	ON when more than the expected number of receive bytes has been received in no-protocol mode. Number of Receive Bytes Specified: The flag will turn ON when more data is received after reception was completed but before the received data was not read from the buffer with RXD(235). End Code Specified: The flag will turn ON when 257 or more bytes of data are received without an end code.
	Reception Counter	A358	Counts in hexadecimal the number of bytes received in no-protocol mode (0 to 256 decimal).
	Overrun Error Flag	CIO 1918 bit 04	ON when 260 or more bytes of data are received in the buffer before RXD(235) is executed.
Ports 1 and 2	Inner Board Service Disabled Flag	A424.04	ON when RXD(235) is executed for a Serial Communications Board that does not support no-protocol mode (a Board without a version number).

Related PLC Setup Settings for the CPU Unit's Built-in RS-232C Port

CX-Programmer Settings

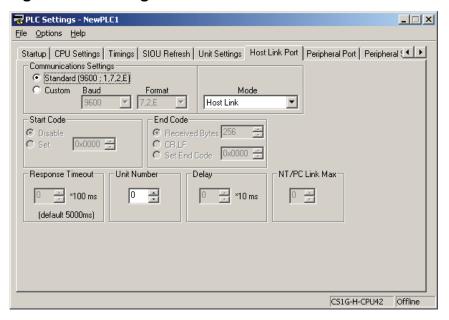

PLC Setup Settings for CPU Unit's RS-232C Port

Programming Console address Word Bit		Name	Settings	
		name		
162	0 to 15	No-protocol Mode Send Delay	0000 to 210F hex, 0 to 99,990 ms decimal (in 10-ms units)	
8 to 15		No-protocol Mode Start Code	00 to FF hex	
164	0 to 7	No-protocol Mode End Code	00 to FF hex	
	12	No-protocol Mode Start Code Specifier	0: None 1: Use start code.	
165	8 and 9	No-protocol Mode End Code Specifier	0 hex: None 1 hex: Use end code. 2 hex: Use CR+LF.	
	0 to 7	No-protocol Mode Number of Bytes of Data	00 hex: 256 bytes (default) 01 to FF hex: 1 to 255 bytes	

• DM Setup Area Settings for Serial Communication Board's Ports

Setup Area word		Bit	Name	Settings	
Port 1	Port 2	Біі	Name	Settings	
D32002	D32012	15	No-protocol Mode Send Delay Specifier	0: Default (0 ms) 1: Use delay in bits 1 to 14.	
D32002		0 to 14	No-protocol Mode Send Delay Time	0000 to 7530 hex 0 to 300,000 ms decimal (in 10-ms units)	
D32004	D32014	8 to 15	No-protocol Mode Start Code	00 to FF hex	
D32004		0 to 7	No-protocol Mode End Code	00 to FF hex	
		12 to 15	No-protocol Mode Start Code Specifier	0 hex: None 1 hex: Use start code.	
D32005	D32015	8 to 11	No-protocol Mode End Code Specifier	0 hex: None 1 hex: Use end code. 2 hex: Use CR+LF.	
		0 to 7	Number of Bytes of Data	00 hex: 256 bytes (default) 01 to FF hex: 1 to 255 bytes	

Function

- RXD(235) reads data that has been received in no-protocol mode at the CPU Unit's built-in RS-232C port or one of the Serial Communications Board's serial ports (the port is specified with bits 8 to 11 of C) and stores N bytes of data in words D to D+(N÷2)-1. If N bytes of data has not been received at the port, then only the data that has been received will be stored.
- The following receive message frame format can be set in the PLC Setup (for the CPU Unit's RS-232C port) or the allocated DM Setup Area (for the Serial Communications Board's ports).
 - 1) Start code: None or 00 to FF hex
 - 2) End code: None, CR+LF, or 00 to FF hex. If no end code is specified, the number of bytes to received is set from 00 to FF hex (1 to 256 decimal; 00 specifies 256 bytes).
- Data will be stored in memory in the order specified in C.
- Cases where the reception completion flag turns ON

The Reception Completed Flag (note (a)) will turn ON when the number of bytes specified in the PLC Setup (for the CPU Unit's RS-232C port) or the allocated DM Setup Area (for the Serial Communications Board's ports) has been received. When the Reception Completed Flag turns ON, the number of bytes in the Reception Counter (note (b)) will have the same value as the number of receive bytes specified in the PLC Setup or the allocated DM Setup Area. If more bytes are received than specified, the Reception Overflow Flag (note (c)) will turn ON.

If an end code is specified in the PLC Setup or the allocated DM Setup Area, the Reception Completed Flag (note (a)) will turn ON when the end code is received or when 256 bytes of data have been received.

Reception will be stopped if 259 bytes of data are received. If more data is input after that, the
Overrun Error Flag (note (e)) and Transmission Error Flag (note (f)) will turn ON. If an overrun error,
framing error, or parity error occurs on the CPU Unit's built-in serial port, serial port reception will
stop. The serial port must be restarted to begin reception again.

- When more data is input to the Serial Communications Board's serial port than is specified in N, that
 data will be discarded when RXD(235) is executed. In contrast, extra data input to the CPU Unit's RS232C port will not be discarded when RXD(235) is executed.
- When RXD(235) is executed, data is stored in memory starting at D, the Reception Completed Flag (note (a)) will turn OFF (even if the Reception Overflow Flag (note (c)) is ON).
- With the CPU Unit's built-in RS-232C port, if the RS-232C Port Restart Bit (note (d)) is turned ON, the Reception Completed Flag (note (a)) will be turned OFF (even if the Reception Overflow Flag is ON), and the Reception Counter (note (b)) will be cleared to 0.
- Specification of monitor in bits 4 to 7 of C for the CS and DR signals takes effect as follows:
 - 1) If CS signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D.
 - 2) If DR signal monitoring is specified in C, the status of the DR signal will be stored in bit 15 of D.
 - 3) If CS and DR signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D and the status of the DR signal will be stored in bit 14 of D.
- If 1, 2, or 3 hex is specified for CS and DR signal control in C, RXD(235) will be executed regardless of the status of the Receive Completed Flag (note (a)).
- Receive data will not be stored if CS or DR signal monitoring is specified.
- Up to 259 bytes can be received, including the receive data (N = 256 bytes max.), the start code, and the end code.
- Specify the size of the receive data, not including the start code and end code, in N.

Note Related Auxiliary Area and CIO Area Addresses

(a) Reception Completed Flags

Built-in RS232C port	A392.06
Serial Communications Board port 1:	A356.06
Serial Communications Board port 2:	A356.14

(b) Reception Counters

Built-in RS232C port	A393
Serial Communications Board port 1:	A357
Serial Communications Board port 2:	A358

(c) Reception Overflow Flags

Built-in RS232C port	A392.07
Serial Communications Board port 1:	A356.07
Serial Communications Board port 2:	A356.15

(d) RS-232C Port Restart Bit

Built-in RS232C port A526.00

(e) Overrun Error Flags

Serial Communications Board port 1:	CIO 1908.04
Serial Communications Board port 2:	CIO 1918.04

(f) Transmission Error Flags

Serial Communications Board port 1: CIO 1908.15
Serial Communications Board port 2: CIO 1918.15

(g) Inner Board Service Disabled Flag

Serial Communications Board ports 1 and 2: A424.04

No Start or End Code 1234560... Receive bytes: Specified in the PC Setup Only Start Code 1234560... Receive bytes after ST: Specified in the PC Setup Only End Code 1234560... ED Receive bytes before ED: 256 max. Start and End Code ST 1234560... Receive bytes between CR+LF End Code ST and ED: 256 max. 1234560... CR LF Receive bytes before CR+LF: 256 max. Start and CR+LF End Code CR LF 1234560... Receive bytes between ST and CR+LF: 256 max. Received CPU Unit's RS-232C port When receiving the most significant bytes first is specified (0): Bytes Most signifi- Least significant bytes cant bytes 2 N bytes 3 stored in the D specified 4 4 3 = Max: 256 bytes order. D+1 5 5 6 When receiving the least significant bytes first is specified (1): Most signifi- Least signifcant bytes icant bytes

Start Code/End Code Settings and Receive Data

Hint

 When RXD(235) is used to read data that was received at the CPU Unit's RS-232C port, the remaining data in the port's reception buffer is not cleared, so RXD(235) can be executed repeatedly to read a block of data in parts.

D

D+1 D+2 2

4

In contrast, when RXD(235) is used to read data that was received at one of the Serial Communications Board's ports (Serial Communications Board version 1.2 or later), the port's reception buffer is cleared after RXD(235) is executed. Consequently, RXD(235) can not be executed repeatedly to read a block of data in parts.

Precautions


- Do not enter a TXD instruction or RXD instruction for a serial port (port 1 or 2) of the serial communication board in both a cyclic task and an interrupt task. If an interrupt task is started during the execution of a TXD instruction or RXD instruction for a serial port (port 1 or 2) of the serial communication board in a cyclic task, the TXD instruction or RXD instruction for a serial port (port 1 or 2) of the serial communication board cannot be executed in the interrupt task. An error will occur and the error flag immediately after the TXD or RXD instruction in the interrupt task will turn ON. (No combination of TXD and RXD instructions and ports 1 and 2 in a cyclic task and interrupt task is possible.)
- RXD(235) can be used only for the CPU Unit's RS-232C port or one of the Serial Communications Board's serial ports. In addition, the port must be set to no-protocol mode.
- Execute this instruction when the reception completion flag (RS-232C incorporated in the CPU Unit: A392.06, serial communication port 1: A356.06, or port 2: A356.14) is 1 (ON) to receive data (from the reception buffer).
- When data is received, the data must be read by an RXD instruction or the next data cannot be received. When the reception completion flag turns ON, read the received data with an RXD instruction before the next reception
- Specify the size of the receive data, not including the start code and end code, in N.
- If 0 is specified for N, the Reception Completed Flag and Reception Overflow Flag will be turned OFF, the Reception Counter will be cleared to 0, and nothing will be stored in memory.
- If the RXD(235) instruction is executed for a Board that does not support no-protocol mode (a Serial Communications Board without a version number), the Inner Board Service Disabled Flag (A424.04, non-fatal error) and the Error Flag will turn ON.

Example Programming

Receiving data

This example shows how to receive data from the V530-R150V3 2D Code Reader as an example of communicating with an external device.

Hardware Configuration

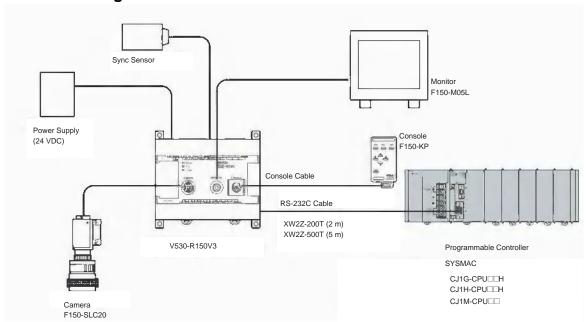

In this example, the external device is connected to the RS-232C port built into the CPU Unit.

First, set the reading conditions for the Code Reader.

Communications Settings


The communications settings of the Code Reader are given in the following table. These are the default settings.


Setting	
No-protocol	
38,400 bps	
8 bits	
None	
1	
None	
#000D (CR)	

Set the PLC communications settings to the same values in the PLC Setup. Only the end code needs to be set.


Programming Example

If CIO 0.02 turns ON while the RS-232C Port Send Ready Flag (A392.05) is ON, the number of bytes of reading results specified in the RS-232C Port Reception Counter (A393) are read from the Code Reader connected to the CPU Unit's built-in RS-232C port and stored starting from the upper byte of D100.

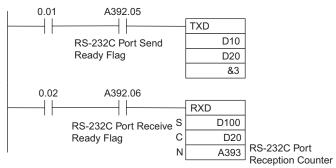


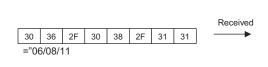


	Uppe	r byte	Lowe	r byte	
					١
	15 12	11 8	7 4	3 0	
S: D100	3	0	3	6	
D101	2	F	3	0	
D102	3	8	2	F	
D103	3	1	3	1	

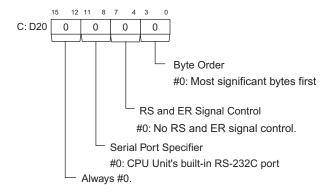


Controlling Signals

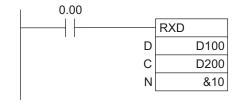


When CIO 0.00 turns ON, the status of the CS signal is output to bit 15 of D100 and the status of the DR signal is output to bit 14 of D100.

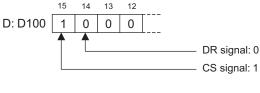

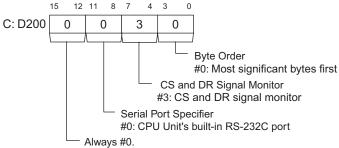

TXDU

Instruction	Mnemonic	Variations	Function code	Function
TRANSMIT VIA SERIAL COMMUNICATIONS UNIT	TXDU	@TXDU	256	Outputs the specified number of bytes of data from one of the Serial Communications Unit's serial ports. (The Serial Communications Unit must be Ver. 1.2 or later).

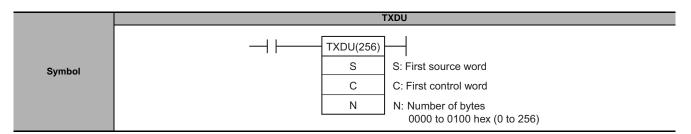


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	ОК	ОК	OK	ОК

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
С	Control word	UDINT	2
N	Number of bytes 0000 to 0100 hex (0 to 256)	UINT	1

C: Control word

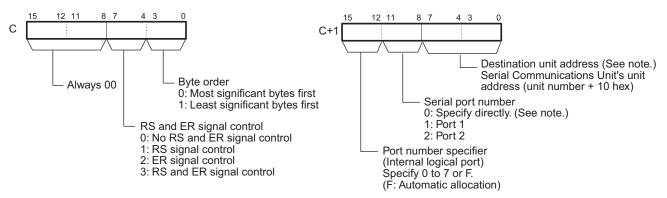

Operand Specifications

Area	Word addresses								Con- Registers			TK	TK CF	Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	CF	bits	bits
S																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК			OK				
N											OK	OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if all of the logical ports are being used or the Communications Port Enabled Flag for the specified logical port is OFF when the instruction is executed. ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. ON if TXDU(256) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.

DM Setup Area Settings

• (m = D30000 + 100 × unit number)

Setup A	rea word	Bit	Name	Settings		
Port 1	Port 2	ы	Name	Settings		
m.i.2	m. 12	15	No-protocol Mode Send Delay Specifier	0: Default (0 ms) 1: Use delay in bits 1 to 14.		
m+2 m+12		0 to 14	No-protocol Mode Send Delay Time	0000 to 7530 hex 0 to 300,000 ms decimal (in 10-ms units)		
m+4	m+4 m+14		No-protocol Mode Start Code	00 to FF hex		
111+4	111+14	0 to 7	No-protocol Mode End Code	00 to FF hex		
		12 to 15	No-protocol Mode Start Code Specifier	0: None 1: Use start code.		
m+5	m+15	8 to 11	No-protocol Mode End Code Specifier	0: None 1: Use end code. 2: Use CR+LF.		
		0 to 7	Size of receive data	#00 hex (default value): 256 bytes		
		0 10 7		#01 to FF hex: 1 to 256 bytes		

Related Auxiliary Area Words and Bits

Name	Address	Description
Communications Port Enabled Flags	A202.00 to A202.07	ON when a communications instruction (including TXDU(256) can be executed with the corresponding port number. Bits 00 to 07 correspond to communications ports 0 to 7. The flag is OFF when a communications instruction is being executed and ON when the execution is completed (normal end or error end).
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding port numbers when communications instructions have been executed. Words A203 to A210 correspond to communications ports 0 to 7. The code is 00 while the instruction is being executed and contains the relevant code when execution is completed. These words are cleared to 0000 when PLC operation starts.
Communications Port Error Flags	A219.00 to A219.07	ON when an error occurred during execution of a communications instruction. When a flag is ON, check the completion code in A203 to A210 to troubleshoot the error. OFF when execution has been finished normally. Bits 00 to 07 correspond to communications ports 0 to 7. The flag status is retained until the next communications instruction is executed. Even if an error has occurred, a flag will be reset to 0 the next time that a communications instruction is executed for that port.

Completion Codes

-	
Code	Meaning
0205 hex	Response timeout (This error can occur when the communications mode is set to host link mode.)
0401 hex	Undefined command (This error can occur when the communications mode is set to protocol macro, NT Link, echoback test, or serial gateway mode.)
1001 hex	The command is too long.
1002 hex	The command is too short.
1003 hex	The specified number of data elements does not match the actual amount of send data.
1004 hex	The command format is incorrect.
110C hex	Other parameter error
2201 hex	Operation could not be performed during operation. (Operation disabled because Unit is busy sending.)
2202 hex	Operation could not be performed when stopped. (Operation disabled because Unit is switching protocols.)

Related Flags in the CPU Bus Unit Area

• (n = CIO 1500 + 25 × unit number)

Word		Bit	Name	Status			
Port 1	Port 2	DIL	Name	Sidtus			
n+9	n+19	05	TXDU Instruction Executing Flag	0: TXDU(256) is not being executed. 1: TXDU(256) is being executed.			


Function

- TXDU(256) reads N bytes of data from words S to S+(N+2)-1 and outputs the raw data in no-protocol mode to the Serial Communications Unit with the unit address specified in bits 0 to 7 of C+1, through the port specified with bits 8 to 11 of C+1. The logical port number can be set to any value between 0 and 7 and is specified with bits 12 to 15 of C+1.
- The following send-message frame formats can be set in the allocated DM Setup Area.
 - 1) Start code: None or 00 to FF hex.
 - 2) End code: None, CR+LF, or 00 to FF hex.


The data will be sent with any combination of start and/or end codes specified in the allocated DM Setup Area. If start and end codes are specified, the codes will be added to the send data (N). In this case, the maximum number of bytes that can be specified for N is 256 bytes.

- · Data is sent in the order specified in C.
- The control specification for RS and ER signals specified in bits 4 to 7 of C takes effect as shown below.
 - 1) If RS signal control is specified in C, bit 15 of S will be used as the RS signal.
 - 2) If ER signal control is specified in C, bit 15 of S will be used as the ER signal.
 - 3) If RS and ER signal control is specified in C, bit 15 of S will be used as the RS signal and bit 14 of S will be used as the ER signal.
- The maximum number of bytes that can be sent is 259 (send data: maximum of 256 bytes, start code: 1 byte, end code: CR+LF specification 2 bytes).
- Specify the size of the send data, not including the start code and end code, in N.
- The logical port number can be allocated automatically by setting bits 12 to 15 of C+1 to F. For details, refer to *Automatically Allocating Communications Ports* (i.e., Internal Logical Ports) on page 1115.

Start code / end code settings and send data

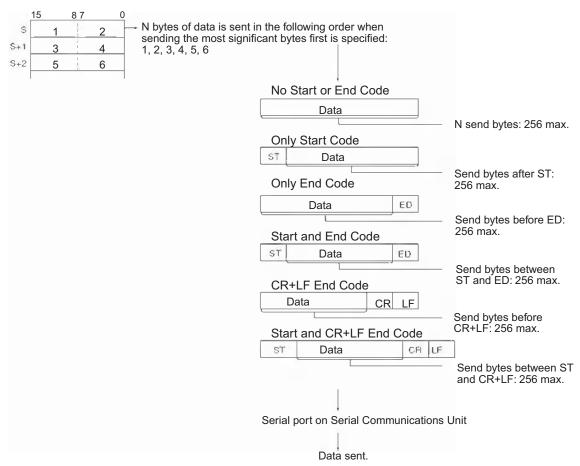

Flag operation

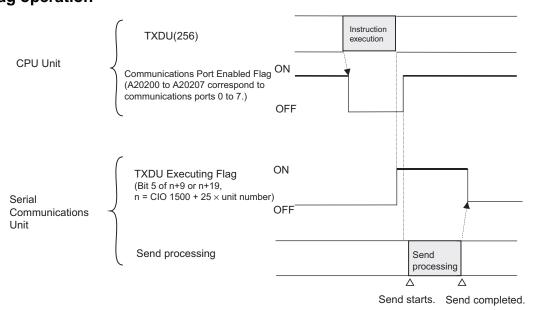


Hint

• Depending on the external device, it might be necessary to set a send delay when sending data with TXDU(256). If a send delay is required, set or adjust the delay time in the allocated DM Setup Area.

Precautions


- TXDU(256) can be used only for a Serial Communications Unit's serial port that has been set to noprotocol mode.
- Transmission is only possible when the Communications Port Enabled Flag corresponding to the communication port number that is used (A202.00 to 202.07) is 1 (ON) and the TXDU Instruction Executing Flag (allocated DM setup area) is 0 (OFF).)
- Nothing will be sent if 0 is specified for N.
- TXDU(256) uses a logical port (because it sends an internal FINS command) to output a send sequence command to the Serial Communications Unit (version number 1.2 or later). Since SEND(090), RECV(098), CMND(490), PMCR(260), and RXDU(255) also use logical ports 0 to 7.
- TXDU(256) cannot be executed for a logical port if that logical port is already being used by one of those instructions or another TXDU(256) instruction.
 To ensure that TXDU(256) is not executed while the logical port is busy, program the port's Communications Port Enabled Flag (A202.00 to A202.07) as a normally open condition.

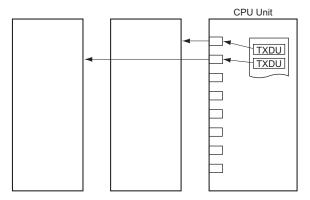

TXDU(256) can not be executed while the TXDU Instruction Executing Flag (bit 5 of n+9 or n+19, where n = CIO 1500 + 25 × unit number) is ON. To ensure that another TXDU(256) is not executed for the port before the first TXDU(256) is completed, program the port's TXDU Instruction Executing Flag as a normally closed condition.


Example Programming

When CIO 0.00 is ON, A202.03 (the Communications Port Enabled Flag) is ON, and CIO 1559.05 (the TXDU Instruction Executing Flag for port 1) is OFF in the following example, TXDU(256) outputs data through serial port 1 of the Serial Communications Unit with unit number 2. The 5 bytes of output data are read from the DM Area beginning at the rightmost byte of D100 and output through logical port 3 to a general-purpose device such as a printer.

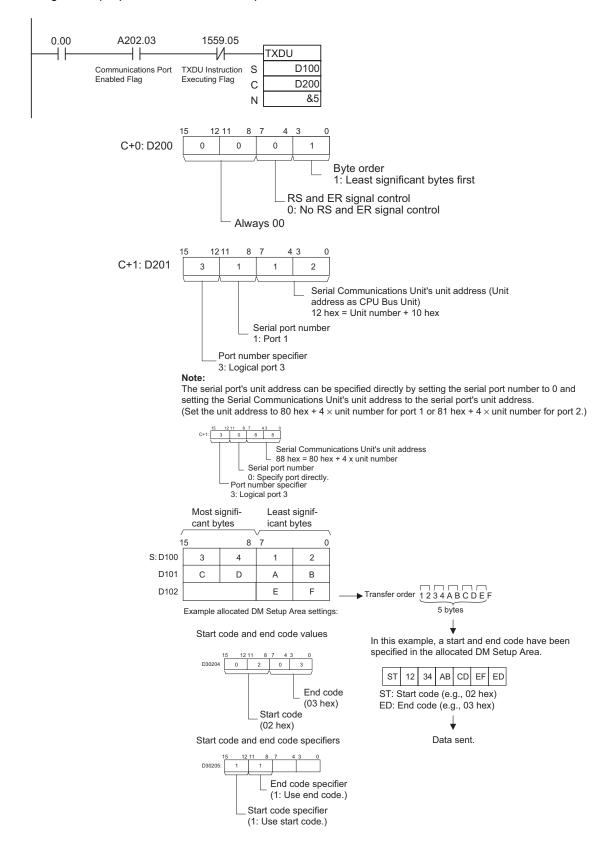

RXDU

Instruction	Mnemonic	Variations	Function code	Function
RECEIVE VIA SERIAL COMMUNICATIONS UNIT	RXDU	@RXDU	255	Reads the specified number of bytes of data from one of the Serial Communications Unit's serial ports. (The Serial Communications Unit must be Ver. 1.2 or later).

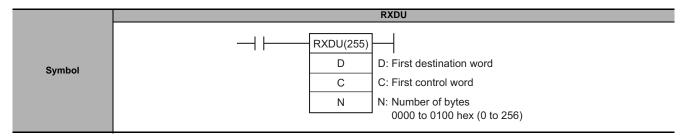


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	ОК	

Operands

Operand	Description	Data type	Size
D	First destination word	UINT	Variable
С	First control word	UDINT	2
N	Number of bytes 0000 to 0100 hex (0 to 256)	UINT	1

C: Control word

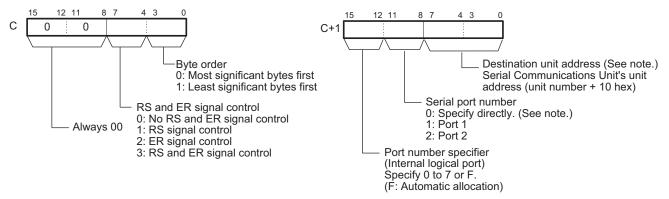

Note The serial port's unit address can be specified directly by setting the serial port number to 0 and setting the destination unit address to the serial port's unit address. (Set the destination unit address to 80 hex + $4 \times$ unit number for port 1 or 81 hex + $4 \times$ unit number for port 2.)

Operand Specifications

Area			V	Vord ad	ldresse	s			Indirect addre		Con-		Regis	ters	TK	CF	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	CF	bits	bits
D																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК			OK				
N											OK	OK						

Flags

Name	Label	Operation
Error Flag	ER	 ON if all of the logical ports are being used or the Communications Port Enabled Flag (A202.00 to A202.07) for the specified logical port is OFF when the instruction is executed. ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. ON if RXDU(255) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.

DM Setup Area Settings

• (m = D30000 + 100 × unit number)

Setup A	Setup Area word		Name	Settings		
Port 1	Port 2	Bit	Name	Settings		
m+4 m+14		8 to 15	No-protocol Mode Start Code	00 to FF hex		
111+4	111+14	0 to 7	No-protocol Mode End Code	00 to FF hex		
		12 to 15	No-protocol Mode Start Code Specifier	0: None 1: Use start code.		
m+5	m+15	8 to 11	No-protocol Mode End Code Specifier	0: None 1: Use end code. 2: Use CR+LF.		
		0 to 7	Size of receive data	#00 hex (default value): 256 bytes #01 to FF hex: 1 to 256 bytes		

Related Auxiliary Area Words and Bits

Name	Address	Description				
Communications Port Enabled Flags	A202.00 to A202.07	ON when a communications instruction (including RXDU(255)) can be executed with the corresponding port number. Bits 00 to 07 correspond to communications ports 0 to 7. The flag is OFF when a communications instruction is being executed and ON when the execution is completed (normal end or error end).				
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding port numbers when communications instructions have been executed. Words A203 to A210 correspond to communications ports 0 to 7. The code is 00 while the instruction is being executed and contains the relevant code when execution is completed. These words are cleared to 0000 when PLC operation starts.				
Communications Port Error Flags	A219.00 to A219.07	ON when an error occurred during execution of a communications instruction. When a flag is ON, check the completion code in A203 to A210 to troubleshoot the error. OFF when execution has been finished normally. Bits 00 to 07 correspond to communications ports 0 to 7. The flag status is retained until the next communications instruction is executed. Even if an error has occurred, a flag will be reset to 0 the next time that a communications instruction is executed for that port.				

Completion Codes

Code	Meaning
0205 hex	Response timeout (This error can occur when the communications mode is set to host link mode.)
0401 hex	Undefined command (This error can occur when the communications mode is set to protocol macro, NT Link, echoback test, or serial gateway mode.)
1001 hex	The command is too long.
1002 hex	The command is too short.
1003 hex	The specified number of data elements does not match the actual amount of send data.
1004 hex	The command format is incorrect.
110C hex	Other parameter error
2201 hex	Operation could not be performed during operation. (Operation disabled because Unit is busy sending.)
2202 hex	Operation could not be performed when stopped. (Operation disabled because Unit is switching protocols.)

Related Flags in the CPU Bus Unit Area

• (n = CIO 1500 + 25 × unit number)

W	Word		Function			
Port 1	Port 2	Bit	Function			
n+8	n+18	04	Overrun Error Flag 1: The reception buffer contained more than 259 bytes of data before RXDU(255) was executed. Note: Once this error flag goes ON, it can be turned OFF only by turning the power OFF and then ON again or restarting the Board.			
n+9	n+19	06	Reception Completed Flag 0: No data received or currently receiving data 1: Reception completed 0 → 1:The Board or Unit has received the specified number of bytes. 1 → 0:RXD(235) or RXDU(255) was executed to write the data from the buffer to a CPU Unit data area.			
n+9	n+19	07	Reception Overflow Flag 0: The Board or Unit has not received more than the specified number of bytes. 1: The Board or Unit has received more than the specified number of bytes. 0 → 1:The Board or Unit received more data after data reception was completed. 1 → 0:RXD(235) or RXDU(255) was executed to write the data from the buffer to a CPU Unit data area.			
n+10	n+20	00 to 15	Reception Counter Indicates the number of bytes received in hexadecimal, between 0000 and 0100 hex (0 to 256 decimal).			

Function

- RXDU(255) reads data that has been received in no-protocol mode at the Serial Communications
 Unit with the unit address specified in bits 0 to 7 of C+1, through the port specified with bits 8 to 11 of
 C+1, and stores that data starting at D. If fewer than N bytes of data have been received at the port,
 then only the data that has been received will be stored.
- The following receive-message frame formats can be set in the allocated DM Setup Area.
 - 1) Start code: None or 00 to FF hex.
 - 2) End code: None, CR+LF, or 00 to FF hex. If no end code is specified, the number of bytes to be received is set from 00 to FF hex (1 to 256 decimal; 00 specifies 256 bytes).
- Data will be stored in memory in the order specified in C.
- Cases where the Reception Completion Flag (*1) turns ON
 - 1) The Reception Completed Flag (note (a)) will turn ON when the number of bytes specified in the allocated DM Setup Area has been received. When the Reception Completed Flag turns ON, the number of bytes in the Reception Counter (note (b)) will have the same value as the number of receive bytes specified in the allocated DM Setup Area.
 - 2) If an end code is specified in the allocated DM Setup Area, the Reception Completed Flag (note (a)) will turn ON when the end code is received or when 256 bytes of data have been received.
- Cases where the Reception Completion Flag (*1) turns ON
 - 1) If more data is received before RXDU(255) is executed after the Reception Completed Flag (note (a)) turns ON, the Reception Overflow Flag (note (c)) will turn ON.
 - 2) If more bytes than specified in the allocated DM Setup Area are received than specified, the Reception Overflow Flag (note (c)) will turn ON.
- Reception will be stopped if 259 bytes of data are received. If more data is input after that, the Overrun Error Flag (note (d)) and Transmission Error Flag (note (e)) will turn ON.
- When more data is input to the Serial Communications Board's serial port than is specified in N, that data will be discarded when the next RXDU(255) instruction is executed.
- When RXDU(255) is executed, data is stored in memory starting at D, the Reception Completed Flag (note (a)) will turn OFF (even if the Reception Overflow Flag (note (c)) is ON), and the Reception Counter (note (b)) will be cleared to 0.
- Specification of monitor in bits 4 to 7 of C for the CS and DR signals takes effect as follows:
 - 1) If CS signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D.
 - 2) If DR signal monitoring is specified in C, the status of the DR signal will be stored in bit 15 of D.

- 3) If CS and DR signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D and the status of the DR signal will be stored in bit 14 of D.
- If 1, 2, or 3 hex is specified for RS and DR signal control in C, RXDU(255) will be executed regardless of the status of the Receive Completed Flag (note (a)).
- Receive data will not be stored if CS or DR signal monitoring is specified.
- Up to 259 bytes can be received, including the receive data (N = 256 bytes max.), the start code, and the end code.
- Specify the size of the receive data, not including the start code and end code, in N.
- The logical port number can be set to any value between 0 and 7 and is specified with bits 12 to 15 of C+1.
- The logical port number can be allocated automatically by setting bits 12 to 15 of C+1 to F. For details, refer to *Automatically Allocating Communications Ports* (i.e., Internal Logical Ports) on page 1115.

Note Related Auxiliary Area and CIO Area Addresses

(a) Reception Completed Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 6 of n+9
Port 2: Bit 6 of n+19

(b) Reception Counters (n = CIO 1500 + 25 \times unit number)

Port 1: n+10 Port 2: n+20

(c) Reception Overflow Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 7 of n+9
Port 2: Bit 7 of n+19


(d) Overrun Error Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 4 of n+8
Port 2: Bit 4 of n+18


(e) Transmission Error Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 15 of n+8
Port 2: Bit 15 of n+18

Start Code/End Code Settings and Send Data

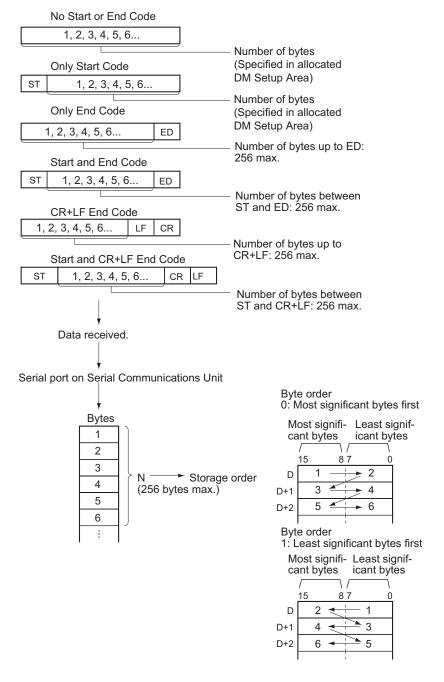

Flag Operation

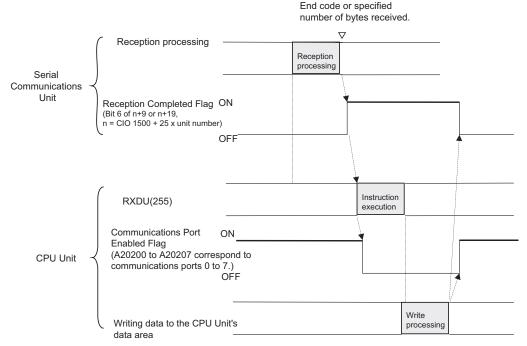


Hint

 Execute RXDU(255) to read the received data from the buffer when the Reception Completed Flag (in the allocated DM Setup Area) is ON.

Precautions

- Further data cannot be received until the received data is read from the buffer with RXDU(255). When the Reception Completed Flag goes ON, read that data promptly with RXDU(255) before more data is input to the port.
- When RXDU(255) is used to read data that was received at one of the Serial Communications Unit's
 ports, the port's reception buffer is cleared after RXDU(255) is executed. Consequently, RXDU(255)
 can not be executed repeatedly to read a block of data in parts.
- RXDU(255) can be used only for a Serial Communications Unit's serial port that has been set to noprotocol mode.
- If 0 is specified for N, the Reception Completed Flag and Reception Overflow Flag will be turned OFF, the Reception Counter will be cleared to 0, and nothing will be stored in memory.
- RXDU(255) uses a logical port (because it sends an internal FINS command) to output a receive sequence command to a Serial Communications Unit or CS-series Serial Communications Board. Since SEND(090), RECV(098), CMND(490), PMCR(260), and TXDU(256) also use logical ports 0 to 7, RXDU(255) cannot be executed for a logical port if that logical port is already being used by one of those instructions or another RXDU(255) instruction.


To ensure that RXDU(255) is not executed while the logical port is busy, program the port's Communications Port Enabled Flag (A202.00 to A202.07) as a normally open condition.

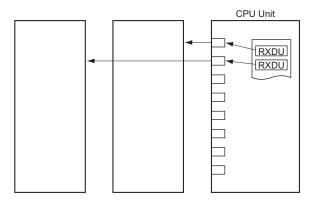

RXDU(255) can not be executed when the Reception Completed Flag (bit 6 of n+9 or n+19, where n = CIO 1500 + 25 × unit number) is OFF. Program the Reception Completed Flag as a normally open condition of RXDU(255).

Example Programming


When CIO 0.00 is ON, A202.03 (the Communications Port Enabled Flag) is ON, and CIO 1559.06 (the Reception Completed Flag for port 1) is ON in the following example, RXDU(255) reads the data received through serial port 1 of the Serial Communications Unit with unit number 2. (Logical communications port number 3 is used to receive the data from a general-purpose device such as a bar-code reader.) The 10 bytes of received data are written to the DM Area beginning at the rightmost byte of D100.

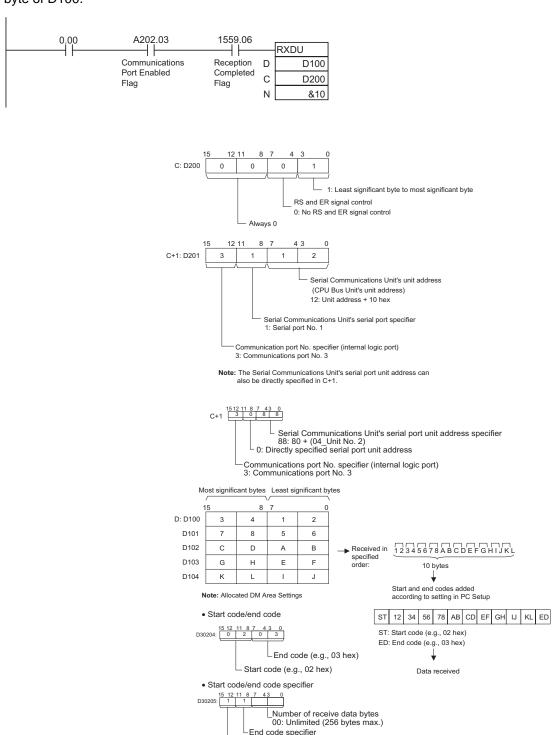

1: Use end code Start code specifier 1: Use start code

DTXDU

Instruction	Mnemonic	Variations	Function code	Function
DIRECT TRANSMIT VIA SERIAL COMMUNICATIONS UNIT	DTXDU	@DTXDU	262	Outputs the specified number of bytes of data from the serial port of a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. The data is output in no-protocol mode from the specified first word with the start code and end code (if any) specified in the allocated DM Setup Area. This instruction sends the data to the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data transmission.

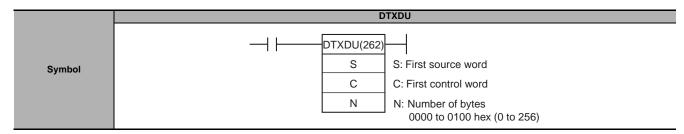


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
С	Control word	UDINT	2
N	Number of bytes 0000 to 0100 hex (0 to 256)	UINT	1

C: Control word

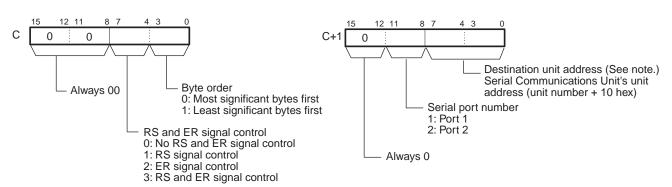

Operand Specifications

Aroa	Word addresses					Indirect DM/EM addresses Con-		Registers			TK CF	Pulse	TR					
Area -	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	GF	bits	bits
S																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК			OK				
N											OK	OK						1

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. ON if execution of DRXDU(261)/DTXDU(262) in a cyclic task is interrupted by an interrupt task and DTXDU(262) is also executed in the interrupt task. ON if the specified Unit is not a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. (In this case, up to 1 ms will be required to execute the instruction.) ON if the specified Serial Communications Unit is being initialized. ON if the specified port on the Serial Communications Unit is not in No-protocol Mode. ON if DTXDU(262) is executed when the DTXDU Send Ready Flag is OFF. OFF in all other cases.

DM Setup Area Settings

• (m = D30000 + 100 × unit number)

Setup A	rea word	Bit	Name	Settings	
Port 1	Port 2	Bit	Name	Settings	
m+2	m+12	15	No-protocol Mode Send Delay Specifier	0: Default (0 ms) 1: Use delay in bits 1 to 14.	
m+2	111+12	0 to 14	No-protocol Mode Send Delay Time	0000 to 7530 hex 0 to 300,000 ms decimal (in 10-ms units)	
m 4		8 to 15	No-protocol Mode Start Code	00 to FF hex	
m+4	m+14	0 to 7	No-protocol Mode End Code	00 to FF hex	
		12 to 15	No-protocol Mode Start Code Specifier	0: None 1: Use start code.	
m+5	m+15	8 to 11	No-protocol Mode End Code Specifier	0: None 1: Use end code. 2: Use CR+LF.	
		0.40.7	Size of Data	#00 hex (default value): 256 bytes	
		0 to 7		#01 to FF hex: 1 to 256 bytes	

Related Flags in the CPU Bus Unit Area

● (n = CIO 1500 + 25 × unit number)

W	Word Port 1 Port 2		Name	Status			
Port 1			Name	Status			
n+9	n+19	04	DTXDU Send Ready Flag	ON: Ready to send, OFF: Sending not possible			


Function

- DTXDU(262) reads N bytes of data from words S to S+(N+2)-1 and outputs the raw data in noprotocol mode to the CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit with the unit address specified in bits 0 to 7 of C+1, through the port specified with bits 8 to 11 of C+1. The logical port number can be set to any value between 0 and 7 and is specified with bits 12 to 15 of C+1.
- This instruction sends the specified data to the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data transmission.
- The following send-message frame formats can be set in the allocated DM Setup Area.
 - 1) Start code: None or 00 to FF hex.
 - 2) End code: None, CR+LF, or 00 to FF hex.


The data will be sent with any combination of start and/or end codes specified in the allocated DM Setup Area. If start and end codes are specified, the codes will be added to the send data (N). In this case, the maximum number of bytes that can be specified for N is 256 bytes.

- · Data is sent in the order specified in C.
- The control specification for RS and ER signals specified in bits 4 to 7 of C takes effect as shown below.
 - 1) If RS signal control is specified in C, bit 15 of S will be used as the RS signal.
 - 2) If ER signal control is specified in C, bit 15 of S will be used as the ER signal.
 - 3) If RS and ER signal control is specified in C, bit 15 of S will be used as the RS signal and bit 14 of S will be used as the ER signal.
- The maximum number of bytes that can be sent is 259 (send data: maximum of 256 bytes, start code: 1 byte, end code: CR+LF specification 2 bytes).
- Specify the size of the send data, not including the start code and end code, in N.



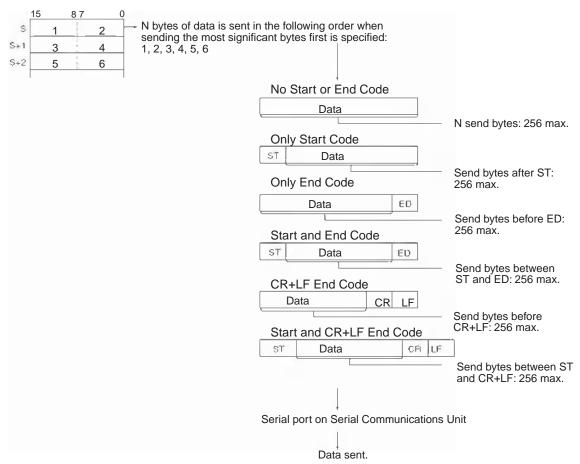

Flag operation

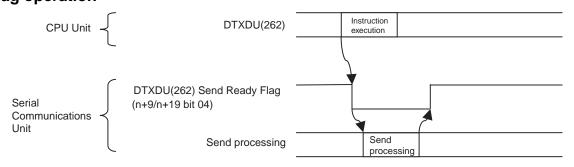

Note Sending processing will always be started immediately when DTXDU(262) is executed.

Hint

• Depending on the external device, it might be necessary to set a send delay when sending data with DTXDU(262). If a send delay is required, set or adjust the delay time in the allocated DM Setup Area.


Precautions

- DTXDU(262) can be executed only for serial ports on a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. If it is executed for any other CPU Bus Unit, approximately 1 ms will be required to execute the instruction, increasing the cycle time.
- DTXDU(262) can be used only for serial ports set to No-protocol Mode on a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit mounted to a CJ2H CPU Unit with unit version 1.1 or later.
- Nothing will be sent if 0 is specified for N.

 DTXDU(262) will not be executed while the DTXDU(262) Send Ready Flag (n+9/n+19 bit 04) is OFF (n = CIO 1500 + 25 × unit number). Use the DTXDU(262) Send Ready Flag in an NO input condition for DTXDU(262).


Example Programming

In the following sample, if CIO 0.00 is turned ON while the DTXDU(262) Send Ready Flag (CIO 1559.04) is ON, 5 bytes of data starting from the lower byte of D100 will be sent to the external device connected to port 1 of the Serial Communications Unit with unit number 2 without converting the data in any way.

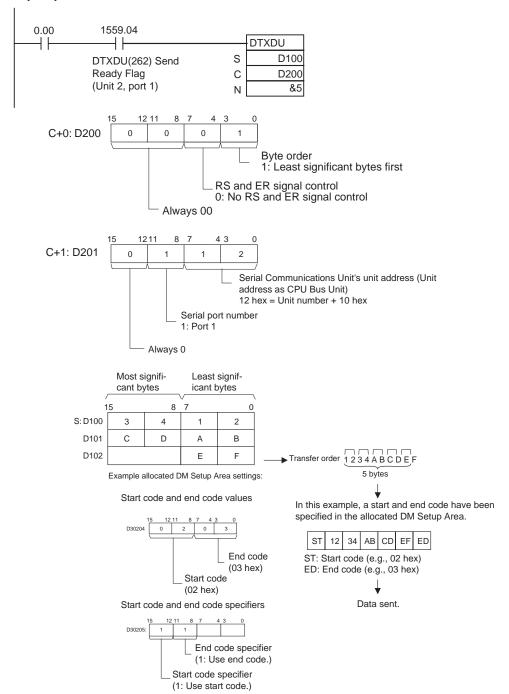

DRXDU

Instruction	Mnemonic	Variations	Function code	Function
DIRECT RECEIVE VIA SERIAL COMMUNICATIONS UNIT	DRXDU	@DRXDU	261	Reads the specified number of bytes of data from the serial port of a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit to CPU Unit memory starting at the specified first word. The data is read in no-protocol mode with the start code and end code (if any) specified in the allocated DM Setup Area. This instruction reads the data from the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data reception.

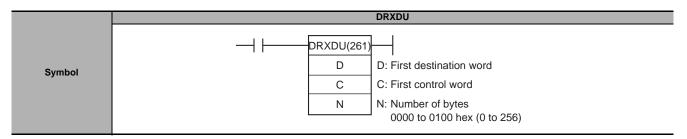


Applicable Program Areas

Area	Function block definitions	Block program areas Step program area		Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
D	First destination word	UINT	Variable
С	First control word	UDINT	2
N	Number of bytes 0000 to 0100 hex (0 to 256)	UINT	1

C: Control word

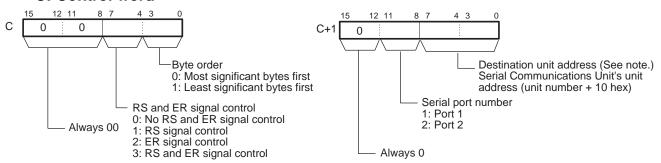

Operand Specifications

Area			v	Vord ad	ldresse	s			Indirect addre	DM/EM esses	Con-		Regis	ters	тк	CF	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	Cr	bits	bits
D																		
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК			OK				
N											OK	OK						

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the value of C is not within range. ON if the value for N is not between 0000 and 0100 hex. ON if execution of DTXDU(262)/DRXDU(261) in a cyclic task is interrupted by an interrupt task and DRXDU(261) is also executed in the interrupt task. ON if the specified Unit is not a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. (In this case, up to 1 ms will be required to execute the instruction.) ON if the specified Serial Communications Unit is being initialized. ON if the specified port on the Serial Communications Unit is not in No-protocol Mode. OFF in all other cases.

DM Setup Area Settings

• (m = D30000 + 100 × unit number)

Setup A	rea word	Bit	Name	Sottings		
Port 1	Port 2	DIT	Name	Settings		
		8 to 15	No-protocol Mode Start Code	00 to FF hex		
m+4	m+14	0 to 7	No-protocol Mode End Code	00 to FF hex		
		12 to 15	No-protocol Mode Start Code Specifier	0: None 1: Use start code.		
m+5	m+15	8 to 11	No-protocol Mode End Code Specifier	0: None 1: Use end code. 2: Use CR+LF.		
		0 to 7	Size of receive data	#00 hex (default value): 256 bytes #01 to FF hex: 1 to 256 bytes		
		8 to 15	Number of External Interrupt Task to Start for Interrupt Notification	00 to FF hex: 0 to 255		
		5 to 7	Reserved.			
m+25	m+35	4	Interrupt Notification for CPU Unit for Data Reception	0: No interrupt notification 1: Interrupt notification		
		1 to 3	Reserved.			
		0	Reception Buffer Clear after DRXDU(261) Execution	0: Do not clear 1: Clear		

Related Flags in the CPU Bus Unit Area

• (n = CIO 1500 + 25 × unit number)

W	ord ord	Bit	Function
Port 1	Port 2	BIT	Function
n+8	n+18	04	Overrun Error Flag 1: The reception buffer contained more than 259 bytes of data before RXD(235), RXDU(255), or DRXDU(261) was executed. Note: Once this error flag goes ON, it can be turned OFF only by turning the power OFF and then ON again or restarting the Board.
n+9	n+19	06	Reception Completed Flag 0: No data received or currently receiving data 1: Reception completed 0 → 1:The Board or Unit has received the specified number of bytes. 1 → 0: RXDU(255) or DRXDU(261) was executed and has written the data from the buffer to a CPU Unit data area.
n+9	n+19	07	Reception Overflow Flag 0: The Board or Unit has not received more than the specified number of bytes. 1: The Board or Unit has received more than the specified number of bytes. 0 → 1:The Board or Unit received more data after data reception was completed. 1 → 0: RXDU(255) or DRXDU(261) was executed and has written the data from the buffer to a CPU Unit data area.
n+10	n+20	00 to 15	Reception Counter Indicates the number of bytes received in hexadecimal, between 0000 and 0100 hex (0 to 256 decimal).

Function

- DRXDU(261) reads data that has been received in no-protocol mode at the CJ1W-SCU22/32/42
 Serial Communications Unit with the unit address specified in bits 0 to 7 of C+1, through the port
 specified with bits 8 to 11 of C+1, and stores that data starting at D. If fewer than N bytes of data have
 been received at the port, then only the data that has been received will be stored.
- This instruction reads the data from the Serial Communications Unit as soon as the instruction is executed to achieve high-speed data reception.
- The following receive-message frame formats can be set in the allocated DM Setup Area.
 - 1) Start code: None or 00 to FF hex.
 - 2) End code: None, CR+LF, or 00 to FF hex. If no end code is specified, the number of bytes to be received is set from 00 to FF hex (1 to 256 decimal; 00 specifies 256 bytes).
- Data will be stored in memory in the order specified in C.
- Cases where the Reception Completion Flag (*1) turns ON
 - 1) The Reception Completed Flag (note (a)) will turn ON when the number of bytes specified in the allocated DM Setup Area has been received. When the Reception Completed Flag turns ON, the number of bytes in the Reception Counter (note (b)) will have the same value as the number of receive bytes specified in the allocated DM Setup Area.
 - 2) If an end code is specified in the allocated DM Setup Area, the Reception Completed Flag (note (a)) will turn ON when the end code is received or when 256 bytes of data have been received.
- Cases where the Reception Completion Flag (*1) turns ON
 - 1) If more data is received before RXDU(255) or DRXDU(261) is executed after the Reception Completed Flag (note (a)) turns ON, the Reception Overflow Flag (note (c)) will turn ON.
 - 2) If more bytes than specified in the allocated DM Setup Area are received than specified, the Reception Overflow Flag (note (c)) will turn ON.
- Reception will be stopped if 259 bytes of data are received. If more data is input after that, the Overrun Error Flag (note (d)) and Transmission Error Flag (note (e)) will turn ON.
- When more data is input to the Serial Communications Board's serial port than is specified in N, that
 data will be cleared or will be maintained when the next DRXDU(261) instruction is executed
 depending on the setting of the Reception Buffer Clear after DRXDU(261) Execution parameter.
- When DRXDU(261) is executed, data is stored in memory starting at D, the Reception Completed Flag (note (a)) will turn OFF (even if the Reception Overflow Flag (note (c)) is ON), and the Reception Counter (note (b)) will be cleared to 0.

- Specification of monitor in bits 4 to 7 of C for the CS and DR signals takes effect as follows:
 - 1) If CS signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D.
 - 2) If DR signal monitoring is specified in C, the status of the DR signal will be stored in bit 15 of D.
 - 3) If CS and DR signal monitoring is specified in C, the status of the CS signal will be stored in bit 15 of D and the status of the DR signal will be stored in bit 14 of D.
- If 1, 2, or 3 hex is specified for RS and DR signal control in C, DRXDU(261) will be executed regardless of the status of the Receive Completed Flag (note (a)).
- Receive data will not be stored if CS or DR signal monitoring is specified.
- Up to 259 bytes can be received, including the receive data (N = 256 bytes max.), the start code, and the end code.
- Specify the size of the receive data, not including the start code and end code, in N.
- Clearing the reception buffer immediately after DRXDU(261) execution can be enabled or disabled in the allocated DM Area words (m+25/m+35 bit 00).

Note Related Auxiliary Area and CIO Area Addresses

(a) Reception Completed Flags (n = CIO 1500 + $25 \times$ unit number)

Port 1: Bit 6 of n+9
Port 2: Bit 6 of n+19

(b) Reception Counters (n = CIO 1500 + 25 \times unit number)

Port 1: n+10 Port 2: n+20

(c) Reception Overflow Flags (n = CIO 1500 + $25 \times$ unit number)

Port 1: Bit 7 of n+9
Port 2: Bit 7 of n+19


(d) Overrun Error Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 4 of n+8
Port 2: Bit 4 of n+18


(e) Transmission Error Flags (n = CIO 1500 + 25 \times unit number)

Port 1: Bit 15 of n+8
Port 2: Bit 15 of n+18

Start Code/End Code Settings and Send Data

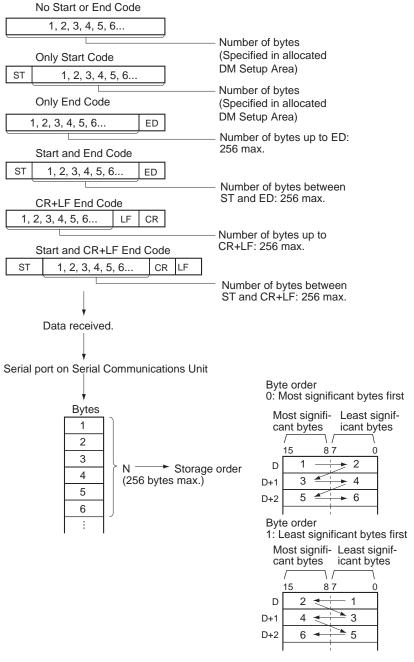

Flag Operation

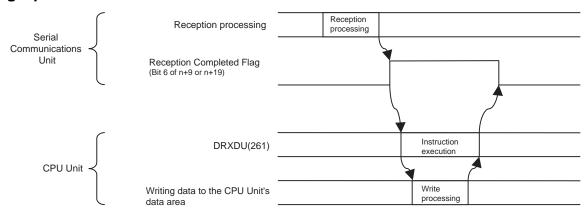

Hint

 Execute RXDU(255) to read the received data from the buffer when the Reception Completed Flag (in the allocated DM Setup Area) is ON.


Precautions

- DRXDU(261) can be executed only for serial ports on a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit. If it is executed for any other CPU Bus Unit, approximately 1 ms will be required to execute the instruction, increasing the cycle time.
- Further data cannot be received until the received data is read from the buffer with RXDU(255) or DRXDU(261). When the Reception Completed Flag goes ON, read that data promptly with RXDU(255) or DRXDU(261) before more data is input to the port.
- DRXDU(261) can be used only for serial ports set to No-protocol Mode on a CJ1W-SCU22/SCU32/SCU42 Serial Communications Unit mounted to a CJ2H CPU Unit with unit version 1.1 or later.
- If 0 is specified for N, the Reception Completed Flag and Reception Overflow Flag will be turned OFF, the Reception Counter will be cleared to 0, and nothing will be stored in memory.
- Program the Reception Completed Flag as a normally open condition of DRXDU(261) when executing it in a cyclic task. The Reception Completed Flag cannot be used when programming DRXDU(261) in an interrupt task. (If an external interrupt occurs, then data reception will have been completed, so the Reception Completed Flag is not required in an interrupt task.)
- Do not restart the Serial Communications Unit during interrupt notification from the Serial Communications Unit to the CPU Unit. Otherwise, system operation may not be stable.

Example Programming

Using DRXDU(261) in Cyclic Tasks


When CIO 0.00 is ON and CIO 1559.06 (the Reception Completed Flag for port 1) is ON in the following example, DRXDU(255) reads the data received from the general-purpose device connected to serial port 1 of the Serial Communications Unit with unit number 2. The 10 bytes of received data are written to the DM Area beginning at the rightmost byte of D100.

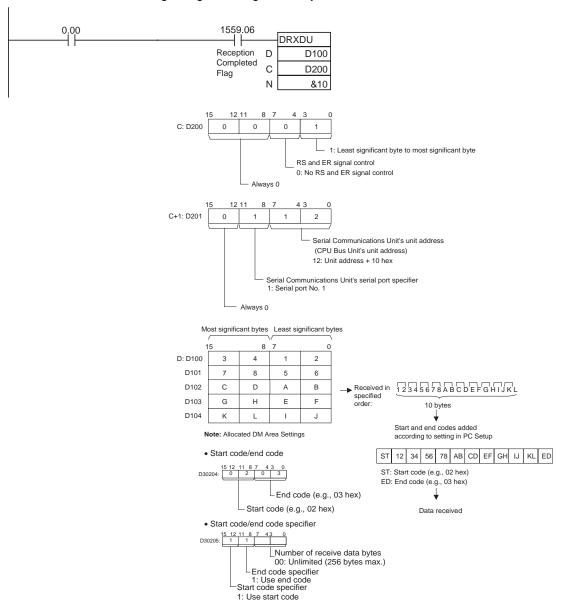


Using DRXDU(261) in Interrupt Tasks

This example shows how to start interrupt task 5 in the CPU Unit when 10 bytes of data is received from an external device (e.g., a barcode reader) connected to the Serial Communications Unit with unit number 2 and store the data in memory starting from the lower byte of D00100.

Settings in the DM Area Words Allocated to the Serial Communications Unit
 The following settings would be made in the allocated DM Area words m+25 or m+35.

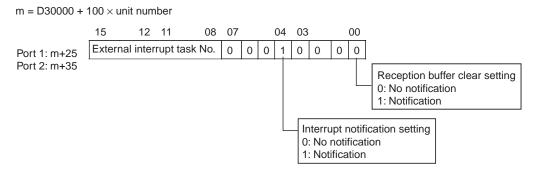


Example: The following settings would be made to use task 5 as the external interrupt task with the Serial Communications Unit with unit number 0.

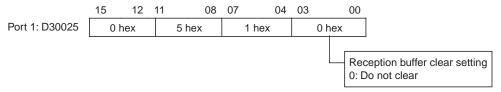

The above settings in the allocated DM Area words can also be made by editing the CPU Bus Unit settings of the Serial Communications Unit in the I/O tables of the CX-Programmer.

2. The program to be assigned to the external interrupt task is right-clicked in the project tree in the CX-Programmer and *Properties* is selected. Interrupt task 05 is selected for the task type in this example.

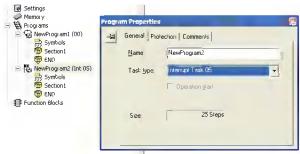


3. The following instructions are placed in the program assigned to the external interrupt task.



Note The Reception Completed Flag is not used in an interrupt task.

STUP

Instruction	Instruction Mnemonic		Function code	Function
CHANGE SERIAL PORT SETUP	STUP	@STUP	237	Changes the communications parameters of a serial port on the CPU Unit, Serial Communications Board (CS Series only), or Serial Communications Unit (CPU Bus Unit).

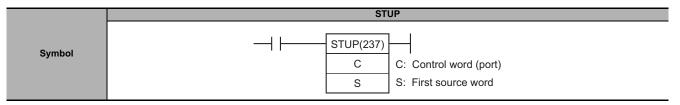


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	Not allowed	OK	

Operands

Operand	Description	Data type	Size
С	Control word (port)	UINT	1
S	First source word	UINT	10

C: Control word (port)

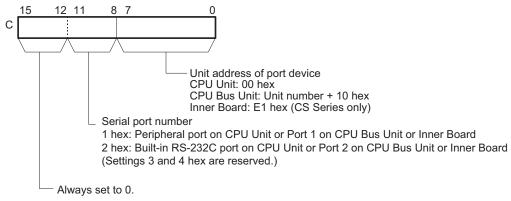

Operand Specifications

Area	Word addresses						Indirect addre	Con-				ΤĽ	TK CF	Pulse	TR			
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR		Cr	bits	bits
С	ОК	ОК	ОК	OK	ОК	ОК	ОК	ОК	ОК	OK	ОК	OK		OK				
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if the values in C are not within range. ON if STUP(237) is executed for a port whose Communications Parameter Changing Flag is already ON. ON if STUP(237) is executed in an interrupt task. OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Contents				
Peripheral Port Parameters Changing Flag	A619.01	ON when the communications parameters are being changed for the peripheral port.				
RS-232C Port Parameters Changing Flag	A619.02	ON when the communications parameters are being changed for the RS-232C port.				
Port Parameters Changing Flags for ports 1 to 4 on Serial Communications Units 1 to 15.	A620 bit 01 to bit 04 to A635 bit 01 to bit 04	ON when the communications parameters are being changed for a port on a Serial Communications Unit.				
Port Parameters Changing Flags for ports 1 to 4 on the Serial Communications Board (CS Series only)	A636.01 to A636.04	ON when the communications parameters are being changed for a port on the Serial Communications Board.				

Note The Settings Changing Flags for port 3 and port 4 are reserved for future use.

Function

STUP(237) writes 10 words of data from S to S+9 to the communications setup area of the Unit with the specified unit address, as shown in the following table. When the constant #0000 is designated to S, the communications settings of the corresponding port will be set to default.

Unit address	Unit	Port No.	Serial port	Serial port communications setup area		
00 hex	CPU Unit	1 hex	Peripheral Port	Communications parameters for the peripheral port in the PLC Setup (Cannot be specified for a CJ2 CPU Unit.)		
		2 hex	RS-232C Port	Communications parameters for the RS-232C port in the PLC Setup		
Unit No. + 10 hex	Serial Communications Unit (CPU	1 hex	Port 1	10 words starting from D30000 + 100 × Unit No.		
	Bus Unit)	2 hex	Port 2	10 words starting from D30000 + 100 × Unit No. + 10		
E1 hex	Serial Communications Board (Inner	1 hex	Port 1	10 words starting from D32000		
	Board) (CS Series only)	2 hex	Port 2	10 words starting from D32010		

The following data is stored in the 10 words from S to S+9.

Peripheral port on CPU Unit	PLC Setup settings in Programming Console addresses +144 to +153	
RS-232C port built into CPU Unit	PLC Setup settings in Programming Console addresses +160 to +169	
Serial Communications Unit port 1	m to m+9 (m = D30000 \times unit number)	
Serial Communications Unit port 2	m+10 to m+19 (m = D30000 ¥ unit number)	
Serial Communications Board port 1	D32000 to D32009	
Serial Communications Board port 2	D32010 to D32019	

When STUP(237) is executed, the corresponding Port Parameters Changing Flag (A619.01, A619.02, or A619 to A636) will turn ON. The flag will remain ON until changing the parameters has been completed.

Note If the PLC is turned OFF and then ON again after STUP(237) has been used to change the communications parameters, the new parameters will be retained or will revert to the previous parameters, depending on the CPU Unit.

CPU Unit	Status of communications parameters
CJ2, CS1-H, CJ1-H, CJ1M, or CS1D	If the PLC is turned OFF and then ON again, the communications parameters revert to the settings that existed before they were changed with STUP(237).
CS1/CJ1	If the PLC is turned OFF and then ON again, the communications parameters set with STUP(237) are retained.

Hint

- Use STUP(237) to change communications parameter for a port during operation based on specified conditions. For example, STUP(237) can be used to change to Host Link communications for monitoring and programming from a host computer when specified conditions are meet while execution a communications sequence for a modem connection.
- Communications parameters consist of the protocol mode, baud rate, data format (protocol macro transmission method and protocol macro maximum communications data length), and other parameters.

Refer to the following manuals for details.


- SYSMAC CS/CJ/NSJ Series Programmable Controllers Programming Manual (W394) "6-3 Serial Communications"
- SYSMAC CJ Series Programmable Controllers Operation Manual (W393) "7-1 PLC Setup"
- SYSMAC CS/CJ Series Serial Communications Boards/Units Operation Manual (W336)
- CJ-series CJ2 CPU Unit Software User's Manual (W473)


"4-2 PLC Setup"

"11-2 Serial Communications"

Example Programming

When CIO 0.00 turns ON in the following example, the communications parameters for serial port 1 of the Serial Communications Board (Inner Board) are changed to the settings contained in the 10 words from D100 to D109. In this example, the setting are changed from the protocol mode to the protocol macro mode.

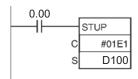

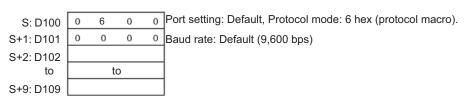




DM words allocated to the communications setup of the Serial Communications Board.

D32000	0	6	0	0		
D32001	0	0	0	0		
D32002						
to	to					
D32009						

PMCR2

Instruction	Mnemonic	Variations	Function code	Function
PROTOCOL MACRO 2	PMCR2	@PMCR2	264	Starts a communications sequence (protocol data) that is registered in a Serial Communications Unit.

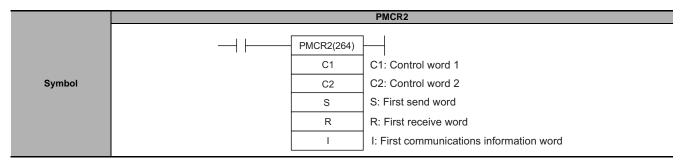


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
C1	Control word 1	WORD	1
C2	Control word 2	WORD	1
S	Control word 1	WORD	Variable
R	First receive word	WORD	Variable
I	First communications information word	WORD	2


C: Control word 1

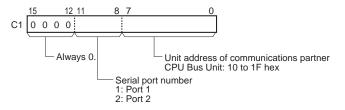

C: Control word 2




Send Area SpecificationS: First send word

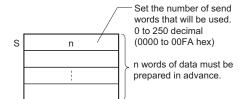


If there is no operand specified in the execution sequence, such as a direct or linked word, specify the constant 0000 hex for S. If a word address or register is specified, the data in the word or register must always be 0000 hex. An error will occur and the Error Flag will turn ON if any other constant or a word address is given and PMCR2(264) will not be executed.

Receive Area Specification R: First receive word


· Executing a Protocol Macro

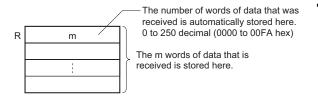

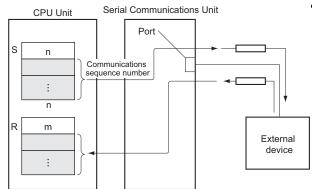

- Setting before Executing PMCR2
 - Set the data specified by m (beginning with R) as the initial data for the receive buffer (backup data for receive failure).
 - Data m can be set to 2 to 250 decimal (0002 to 00FA hex). If 0000 or 0001 hex is specified for m, the initial value of the receive buffer will be cleared to 0.
- If there is no operand specified in the execution sequence, such as a direct or linked word, specify the constant 0000 hex for R. If a word address or register is specified, the data in the word or register must always be 0000 hex.

I: First communications information word

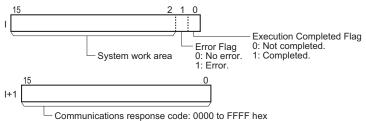

Operand Specifications

Area		Word addresses								DM/EM esses	Con-		Regis	ters	TK	CF	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	Cr	bits	bits
C1																		
C2											ОК	ОК						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
R																		
1																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if C1 or C2 is not within the specified ranges. ON if the number of words of S or R exceeds 249 (when word addresses are specified). ON if there is no communications port (i.e., internal logical port) available (i.e., if A211 = 0). OFF in all other cases.

Communications Responses

Code	Contents
1106 (hex)	No corresponding program number • Specified Send/Receive Sequence No. that has not been registered. • Modify the Send/Receive Sequence No. or add the number using the CX-Programmer.
2201 (hex)	Not operable due to protocol execution Since one protocol macro has already been executed, no further execution is accepted. Add NC condition to program for the Protocol Macro Execution Flag.
2202 (hex)	Not operable due to stoppage Since the protocol is being switched, no further execution is accepted. Add NC condition to program for the Serial Setting Change Flag.
2401 (hex)	No registration table • An error has occurred in the protocol macro data or data is being transmitted. • Transmit the protocol macro data using the CX-Programmer.

Note Refer to the CS/CJ-series Communications Commands Reference Manual (W342) for other response codes.

CPU Bus Unit Area

n = 1500 + 25 x unit number

Name	Address	Contents						
Port 1 Protocol Macro Execution Flag	Bit 15 of CIO n+9	ON when PMCR(260) is executed. The flag will remain OFF if execution fails.						
Port 2 Protocol Macro Execution Flag	Bit 15 of CIO n+19	The flag will turn OFF when the communications sequence has been complet (either an end or abort).						

Function

PMCR2 calls and executes a communications sequence (protocol data) registered in a Serial Communications Board or Serial Communications Unit. PMCR2 will execute the communications sequence specified in C2 using the port specified in C1. If a symbol is specified as the operand for a send message, the number of send words specified in S and beginning from S+1 will be used as the send area. If a symbol is specified as the operand for a receive message, receive data is placed in memory starting with R+1 and the number of words received is automatically written to R if the transmission is successful.

When the transmission starts, the Execution Completed Flag in I is turned OFF. When a response is returned, the transmission result is shown in the Error Flag in I. The communications response is written to I+1.

Hint


Holding the Receive Area

The receive buffer is cleared to all zeros immediately before a communications sequence is executed for PMCR(260). If programming such as that shown below is used to periodically read PV data or other values and data cannot be read due to a reception error or other cause, the data being read will be cleared until the next successful read.


A function is provided to maintain the data in the receive area even when a reception error occurs. If this function is used, data will be transferred from the first m words of the receive area to the receive buffer after the buffer is cleared to all zeros but before the communications sequence is executed. This prevents the receive area from being temporarily cleared to all zeros by writing the most recent receive data when new receive data is not successfully obtained.

Specify the number of words of the receive area to be maintained as the value m. If 0 or 1 is specified, the holding function will be disabled and the receive area will be cleared to all zeros.

Example: The following programming example shows the instructions used to constantly or periodically execute PMCR2(264) to read data through a single receive operation.

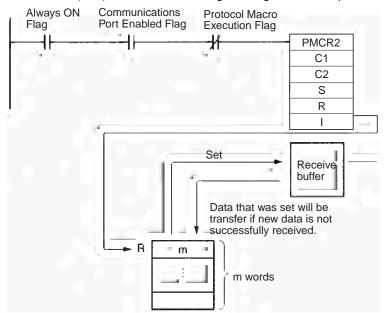


Receive Area Not Held

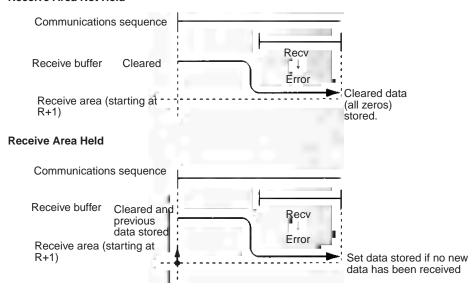


Precautions

- The data in the send area specified with S is actually sent using the symbol read option, R(), in a send message.
- Data is actually received to the receive area specified by R using the symbol write option, W(), in a receive message.
- Refer to the CX-Protocol Operation Manual (W344) for procedures for designating symbols R() and W().
- PMCR2(264) can be executed for a serial communications port on a Serial Communications Unit. Up to 16 Serial Communications Units can be mounted to the CPU Rack and Expansion I/O Racks. The Unit address of the communications partner must be set in bits 0 to 7 of C1 to specify which Unit/Board is to be used and the serial port number must be set in bits 8 to 11. Unit addresses are specified as shown in the following table.

Unit/Board	Unit address
Serial Communications Unit	Unit number + 10 hex

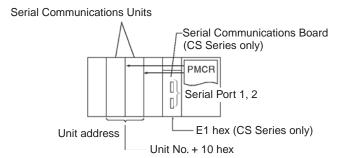

• The corresponding Protocol Macro Execution Flag will turn ON at the start of PMCR2(264) execution. It will turn OFF after the communications sequence has been completed and data has been written to the specified receive area. A N.C. input for the corresponding Protocol Macro Execution Flag should be used as part of the execution condition whenever executing PMCR2(264) to be sure that only one communications sequence is being executed at the same time for the same physical port. An example is shown below.

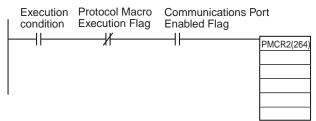

 An error flag will not turn ON when the data of C2 is outside the range. A completion code will be stored in "Network Communications Completion Code" (A203 to A210) of the Auxiliary.


Example Programming


If CIO 0.00 (start bit) and A202.08 (CJ2 Instructions Enabled Flag) are ON, W10.00 (executing) will turn ON. When W10.00 (executing) turns ON, communications sequence 101 (101 decimal or 0065 hex) is executed. If a symbol is specified as the operand for the send message, the two words beginning from D101 will be used as the send area (D100 contains 0003 hex).

If a symbol is specified as the operand for the receive message, receive data is placed in memory starting with D201 and the number of words received (counting D200) is automatically written to D200 if the transmission is successful.

If communications end normally, CIO 2.00 (execution completed) turns ON, and the processing for when the sequence starts normally is executed. If communications end in an error, CIO 2.01 (error end) turns ON, and the processing for when an error occurs in starting the sequence is executed.


Note PMCR2(264) is used to start a communications sequence. Use the Sequence End Completion Flag in the CIO Area words that are allocated to the Serial Communications Unit to determine when execution of the communications sequence has ended normally.

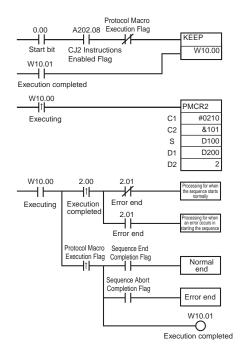

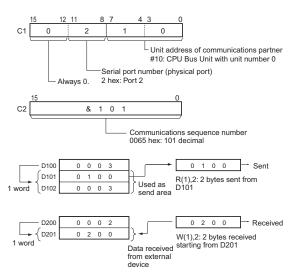

Note As shown above, the symbol read option, R(), in the send message or the symbol write option, W(), in the receive message, actually sends/receives data

Timing Chart

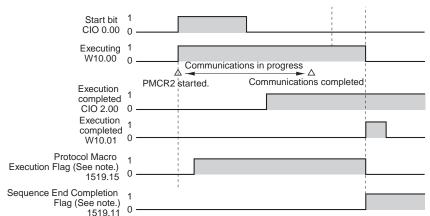

Note Refer to the SYSMAC CS/CJ-series Serial Communications Boards and Serial Communications Units Operation Manual (Cat. No. W336) for details on the CIO Area words that are allocated to the Serial Communications Unit.

Network Instructions

Network Instructions


Overview of Network Communications Instructions

The network instructions can be divided into two types, SEND(090)/SEND2(491)/RECV(098)/RECV2(492) and CMND(490)/CMND2(493). These instructions are transmitted between Units (CPU Units, CPU Bus Units, and computers) in a network to transfer data and control operation, such as changing the operating mode.

Message content	Instruction	Operation									
Commands to transmit/receive data (FINS command)	SEND(090)/SEND2(491) RECV(098)/RECV2(492)	CPU Unit SEND(090), SEND2(491), RECV2(492) Data transmission CPU Unit, CPU Bus Unit or computer									
Arbitrary commands (FINS command)	CMND(490)/CMND2(493)	CPU Unit CMND(490) or CMND2(493) Command sent CPU Unit, CPU Bus Unit, or computer CPU Bus Unit, or computer									

The commands executed by the network instructions are known as "FINS commands" and are used for communications between FA control devices. (Refer to the *CS/CJ Series Communications Commands Reference Manual* (Cat. No. W342) for details on FINS commands.) With FINS commands it is possible to communicate (by the command/response format) with any Unit in any network or on the CPU Rack itself just by specifying the network address, node number, and unit number of the destination Unit.

In the following example, a FINS command is sent to the CPU Unit through node number 2 in network address 00.

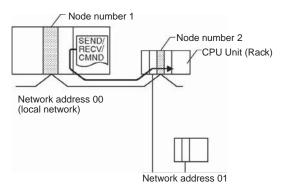

Network address: Address of the network (local network = 00 hex)

Node number: Logical address in the network
Unit address: Unit address of the destination Unit

• CPU Unit: 00 hex


CPU Bus Unit: Unit number + 10 hex
 Special I/O Unit: Unit number + 20 hex

Inner Board: E1 hexComputer: 01 hex

	CPU Unit	CPU Bus Unit	Inner Board	Computer
Unit address	00 hex	Unit number +10 hex	E1 hex	01 hex
Destination device	Node number	Node number	Node number	Node number

Unit Addresses

It is also possible to directly specify a serial port (port 1 to 4) within the destination device.

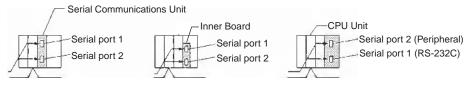

Serial Port Unit Addresses:

• Serial Communications Unit ports

Port 1: 80 + $4 \times$ unit number (hex)

Unit number	0	1	2	3	4	5	6	7	8	9	Α	В	O	D	Е	F
Hexadecimal	80	84	88	8C	90	94	98	9C	A0	A4	AB	AC	B0	B4	B8	ВС
Decimal	128	132	136	140	144	148	152	156	160	164	168	172	176	180	184	188

Port 2: 81 + $4 \times$ unit number (hex)

Unit number	0	1	2	3	4	5	6	7	8	9	Α	В	O	D	Е	F
Hexadecimal	81	85	89	8D	91	95	99	9D	A1	A5	A9	AD	B1	B5	В9	BD
Decimal	129	133	137	141	145	149	153	157	161	165	169	173	177	181	185	189

· Serial Communications Board ports

Port 1: E4 hex (228 decimal)

Port 2: E5 hex (229 decimal)


· CPU Unit ports

Peripheral port: FD hex (253 decimal) RS-232C port: FC hex (252 decimal)


Network Communications Patterns

Communications with Another Device on the Network

The following example shows communications from a PLC to devices in another PLC (the CPU Unit, CPU Bus Unit, or Inner Board). For more details, refer to the operation manual for the network (Controller Link or Ethernet) being used.

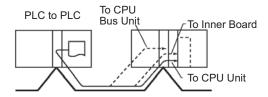


This example shows communications from a PLC to a personal computer.

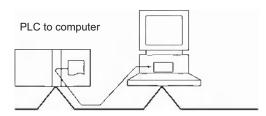

Communications to a Serial Port in the Network


These examples show communications from a PLC to serial ports in devices in the network. The first shows communications to serial ports in devices in another PLC (the CPU Unit, CPU Bus Unit, or Inner Board) and the second shows communications to a serial port within the CPU Rack itself.

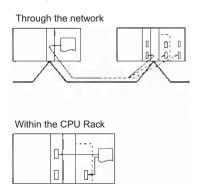

For details, refer to the operation manual for each network (Controller Link or Ethernet).

Communicating with Devices on Other Networks

Communications can span up to 8 network levels, including the local network. (The local network is the network where the communications originate.)

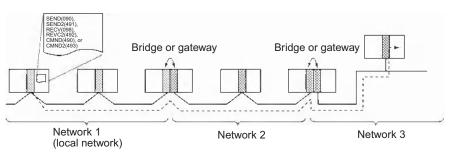


In order to communicate through the network, it is necessary to register a routing table in each PLC's CPU Unit which indicates the route by which data will be transferred to the desired node. Each routing table is made up of a local network table and a relay network table.


- Local network table: This table shows the unit numbers and network addresses of the nodes connected to the local PLC.
- Relay network table: This table shows the node numbers and network addresses of the first relay nodes to destination networks that are not connected to the local PLC.

Unsolicited Communications with a Host Computer Connected via Host Link

By executing a SEND(090), SEND2(491), RECV(098), RECV2(492), CMND(490), or CMND2(493) instruction for a serial port set to Host Link mode, the necessary Host Link header and terminator will be attached to the FINS command and the command will be sent to the host computer.

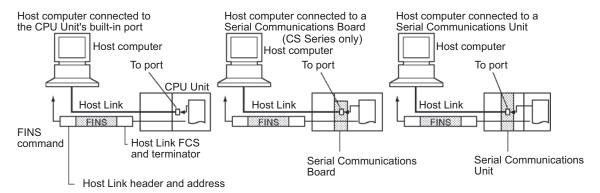

Note Host Link communications can be sent through the network. In this case, the FINS command travels through the network normally. When the command reaches the Host Link system, the necessary Host Link header and terminator are attached to the FINS command and the command is sent to the host computer.

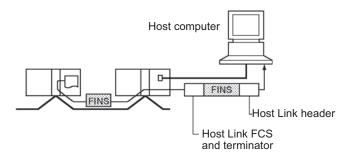


Serial Gateway Communications with a Component or Host Link Slave

It is possible to send FINS commands (or send/receive data) to a component or Host Link Slave connected to the PLC through its serial port with the serial gateway function.


· Sending to a Component

When a CMND(490) or CMND2(493) instruction is executed to a serial port that supports the serial gateway function, the serial gateway function converts the command to a CompoWay/F, Modbus-RTU, or Modbus-ASCII command.

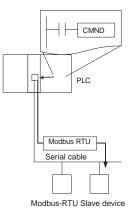


Sending to a PLC Operating as a Host Link Slave

When a CMND(490), CMND2(493), SEND(090), SEND2(491), RECV(098), or RECV2(492) instruction is executed to a serial port that supports the serial gateway function, the serial gateway function can send any FINS command or send/receive data.

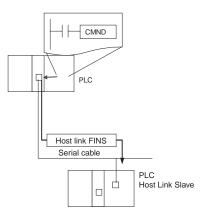

Communications from a Host Computer Connected through Host Link

It is possible to send FINS commands from a host computer to the PLC to which it is connected as well as other devices in the network (CPU Units, Special I/O Units, computers, etc.). In this case, the necessary Host Link header and terminator must be attached to the FINS command when it is sent.

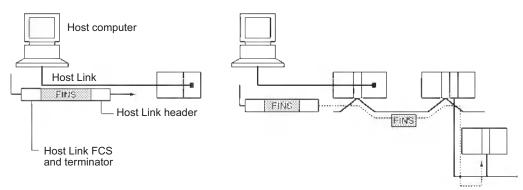

Network Communications Instructions

With CS/CJ-series PLCs, up to eight Network Communications Instructions can be executed simultaneously. With CJ2-series PLCs, up to 64 Network Communications Instructions can be executed simultaneously for some instructions. These instructions are called CJ2 Network Communications Instructions.

	Mnemonic	Instruction	Features
CJ2 Network Communications Instructions	SEND2	NETWORK SEND 2	Up to 64 of these instructions can be executed
	RECV2	NETWORK RECEIVE 2	simultaneously. Words specified in the instruction are used to show the completion of
	CMND2	DELIVER COMMAND 2	communications and communications errors.
	PMCR2	PROTOCOL MACRO 2	
Network Communications	SEND	NETWORK SEND	Up to 8 of these instructions can be executed
Instructions for CJ1/CS1/CJ2	RECV	NETWORK RECEIVE	simultaneously. Bits in the Auxiliary Area are used to show the completion of communications and
	CMND	DELIVER COMMAND	communications errors. Either the
	EXPLT	EXPLICIT MESSAGE SEND	communications port must be specified, or automatic allocation of a communications port
	EGATR	EXPLICIT GET ATTRIBUTE	must be specified. (Here, "communications port"
	ESATR	EXPLICIT SET ATTRIBUTE	indicates an internal logical port, not a physical
	ECHRD	EXPLICIT WORD READ	port.)
	ECHWR	EXPLICIT WORD WRITE	
	PMCR	PROTOCOL MACRO	
	TXDU	TRANSMIT VIA SERIAL COMMUNICATIONS UNIT	
	RXDU	RECEIVE VIA SERIAL COMMUNICATIONS UNIT	

Communications Flags

The operation of the communications flags is outlined below.

- The Communications Port Enabled Flag is turned OFF when communications are in progress and turned ON when communications are completed (normally or not).
- The status of the Communications Port Error Flag is maintained until the next time that data is transmitted or received.
- The Communications Port Error Flag will be turned OFF the next time that data is transmitted or received, even if there was an error in the previous operation.


Note Here, "communications port" indicates an internal logical port, not a physical port.

Example

Communications Port Enabled Flag
Network instruction
(SEND/SEND2, RECV/RECV2, or CMND/CMND2)

Communications Port Error Flag


Communications Port Completion Code

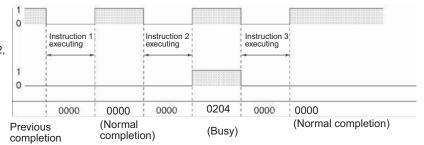

Address	Bits	Name	Description		
A202 00 to 07		Communications Port Enabled Flags	Turns ON when a communications instruction can be executed. Bits 00 to 07 correspond to communications ports 0 to 7. You can tell when communications have been completed because the Communications Port Enabled Flag will turn ON again after the completing execution of the communications instruction. The Communications Port Enabled Flag will be OFF while the communications instruction is being executed.		
	15	Communications Port	Turns ON when there is a communications port available for automatic allocation.		
		Allocation Enabled Flag	Note Use this flag to see if all eight communications ports have already been allocated before executing communications instructions.		
A203 to A210		Communications Port Completion Codes	These words contain the completion codes for the corresponding port numbers when network instructions have been executed.		
A214	00 to 07	First Cycle Flags after Network Communications	Each flag will turn ON for just one cycle after communications have been completed. Bits 00 to 07 correspond to ports 0 to 7.		
		Finished	Note These flags are not effective until the next cycle after the communications instruction is executed. Delay accessing them for at least one cycle.		
			Note Use the Used Communications Port Number stored in A218 to determine which flag to access.		
	08 to 15	Do not use.			
A215 00 to 07		First Cycle Flags after Network Communications Error	Each flag will turn ON for just one cycle after a communications error occurs. Bits 00 to 07 correspond to ports 0 to 7. If the flag turns ON, refer to the Communications Port Completion Code (A203 to A210) to identify the cause of the error.		
			Note These flags are not effective until the next cycle after the communications instruction is executed. Delay accessing them for at least one cycle.		
			Note Use the Used Communications Port Number stored in A218 to determine which flag to access.		
	08 to 15	Do not use.			
A216 and A217		Communications Port Completion Code Storage	The completion code for a communications instruction is automatically stored at the address with the PLC I/O memory address given in these words.		
Addı		Address	Note Place this address into an index register and use indirect addressing through the index register to reach the communications completion code.		
A218		Used Communications Port Number	When a communications instruction is executed, the number of the communications port that was used is stored in this word. Values 0000 to 0007 hex correspond to communications ports 0 to 7.		
A219	00 to 07	Communications Port Error Flags	Turns ON when a communications error occurs during execution of network communications. If the Communications Port Error Flag turns ON, refer to the Communications Port Completion Code in (A203 to A210) to identify the cause of the error. Bits 00 to 07 correspond to communications ports 0 to 7. The Communications Port Error Flag will be OFF while the communications instruction is being executed.		


Execution Timing of Network Communications Instructions

When the execution condition for a Network Communications Instruction is ON, processing communications is started, but actual communications are processed in the background using peripheral servicing.

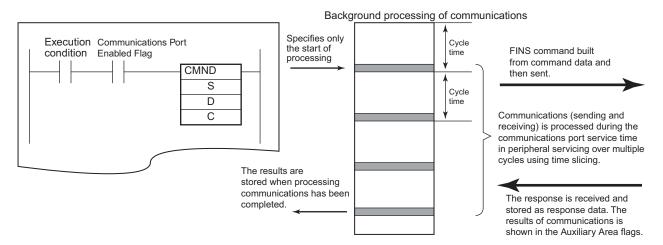

The following operation occurs.

- (1) If the relevant Communications Port Enabled Flag (A202.00 to A202.07) is ON when the execution condition turns ON, it turns OFF, the Communications Port Error Flag (A219.00 to A219.07) turns OFF, the Communications Port Completion Codes (A203 to A210) is cleared to 0000 hex, the contents of the control words starting from C are read, and communications processing (sending the FINS command and receiving the response) is started.
- (2) The communications command is processed during peripheral servicing. This processing lasts for the required number of cycles.
- (3) When a response is received, the response words specified by the operand are updated in communications port servicing. The Communications Port Enabled Flag (A202.00 to A202.07) is turned ON, the Communications Port Error Flag (A219.00 to A219.07) is turned ON or OFF according to the results of the instruction, and the Communications Port Completion Code (A203 to A210) is stored.

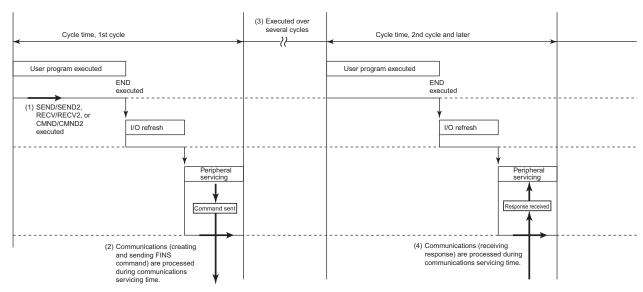


Network Communications Instructions for CJ1/CS1/CJ2

Communications Ports

There are 8 logical communications ports provided, so 8 communications instructions can be executed simultaneously. Only one instruction can be executed at a time for each communications port. Exclusive control must be used when more than 8 instructions are executed.

These 8 communications ports are shared by the network instructions (SEND(090), SEND2(491), RECV(098), RECV2(492), CMND(490), CMND2(493), etc.), the serial communications instructions (TXDU(256) and RXDU(255)), and the PROTOCOL MACRO instruction (PMCR(260) and PMCR2(264)). Be sure not to specify the same port for two instructions at the same time.

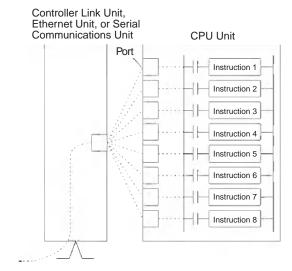


Network Communications Instructions for the CJ1/CS1/CJ2 can be executed either by specifying a communications port or by allowing the CPU Unit to automatically assign a port.

Each communications port can be used by only one instruction at a time. To specify a communications port, the following steps were necessary.

- When programming, it was necessary to keep track of the ports that were being used to designate only available ports in operands.
- In the ladder program, it was necessary to add processing to confirm the availability of communications ports before using them.

Example When Not Using Automatic Port Allocation

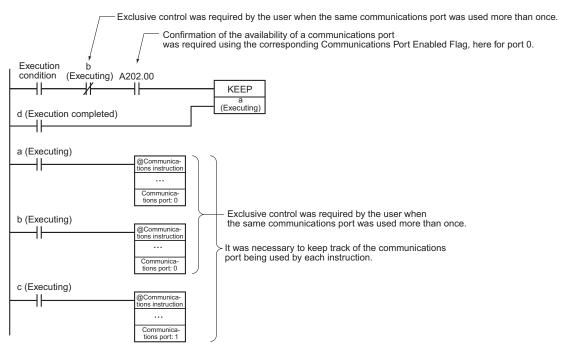

For CJ2 CPU Units and CS1-H, CJ1-H, CJ1M, and CS1D (Single CPU System) CPU Units of lot number 020601 or later (manufactured 1 June 2002 or later), the port number can be specified as "F" instead of from 0 to 7 to automatically allocate the communications port, i.e., the next open communications port is used automatically.




This saves the programmer from having to keep track of communications ports while programming. The differences between assigning specific port numbers and automatically allocating port numbers are given in the following table.


Item	User specification of communications ports	Automatic allocation of communications ports
Specification of the communications port number in the control data	0 to 7	F
Exclusive control	Required	Not required unless more than 8 communications ports are required at the same time.
Flag applications	LD or LD NOT used with flag corresponding to the specified communications port.	TST(350) or TSTN(351) used with A218 (Used Communications Port Number).
Communications Port Completion Codes	Completion code for communications port specified by user is accessed.	Completion codes are accessed by using the PLC memory address stored in A216 and A217 (Communications Port Completion Code Storage Address) and index register indirect addressing.

Ladder Programming Examples

Specifying Communications Ports

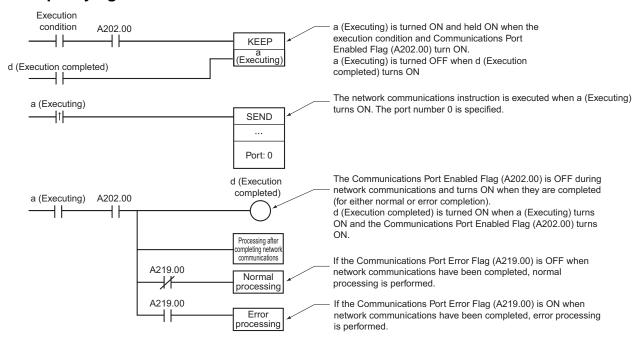

Automatically Allocating Communications Port

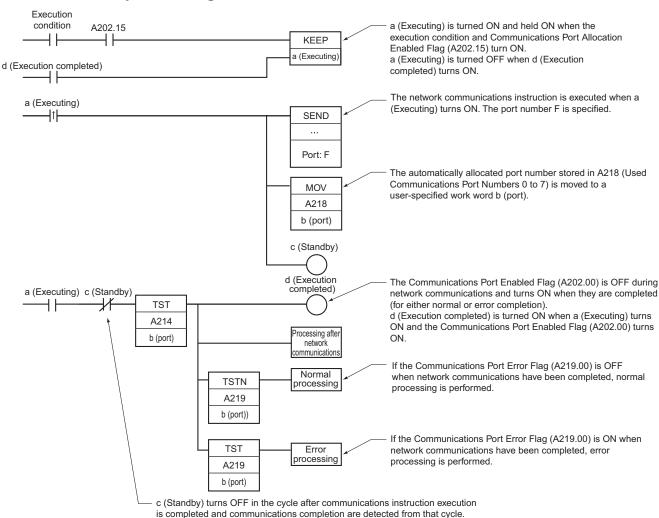

User Specification of Communications Ports


The communications port can be specified in the control data of the Network Communications Instruction.

The same communications port cannot be used in any other instruction until processing this instruction has been completed. Exclusive control of the communications port is necessary.

Auxiliary Area Words and Bits Used for User Specification of Communications Ports


Address	Bits	Name	Description
A202	00 to 07	Communications Port Enabled Flags	Turns ON when a communications instruction can be executed. Bits 00 to 07 correspond to ports 0 to 7. You can tell when communications have been completed because the Communications Port Enabled Flag will turn ON again after the completing execution of the communications instruction. The Communications Port Error Flag will be OFF while the communications instruction is being executed.
A203 to A210		Communications Port Completion Codes	These words contain the completion codes for the corresponding port numbers when communications instructions have been executed. Words A203 to A210 correspond to communications ports 0 to 7.
A219	00 to 07	Communications Port Error Flags	Turns ON when a communications error occurs during execution of network communications. If the Communications Port Error Flag turns ON, refer to the Communications Port Completion Code in (A203 to A210) to identify the cause of the error. Bits 00 to 07 correspond to communications ports 0 to 7. The Communications Port Error Flag will be OFF while the communications instruction is being executed.

Flag/Word Operation

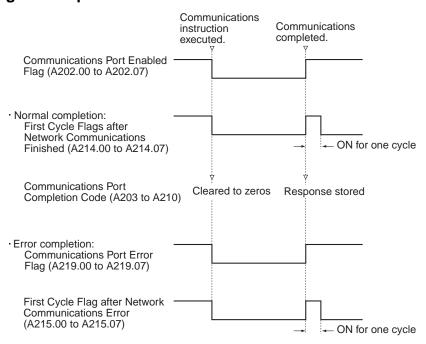

Application Methods

- 1. Set the communications port in the instruction operand to 0 to 7 hex.
- 2. Use the Communications Port Enabled Flag (A202.00 to A202.07) to perform exclusive control of the communications port.

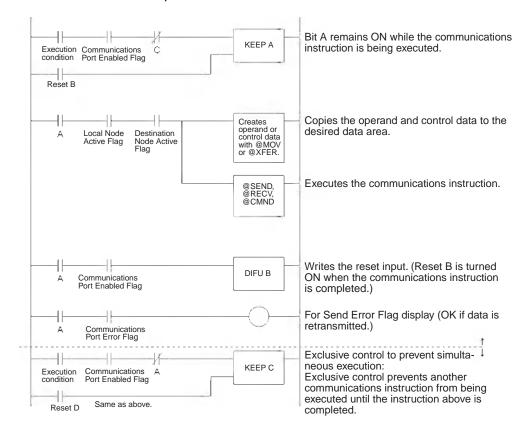

Automatic Allocation of Communications Ports

Overview

Each of the following instructions use one of the communications ports (0 to 7) to perform network communications or serial communications.


- Network Communications Instructions (SEND, RECV, and CMND)
- Serial Communications Instructions (PMCR, TXDU, and RXDU)
 The above instructions are collectively referred to as communications instructions.

Note Here, "communications port" indicates an internal logical port, not a physical port.

Auxiliary Area Bits and Words Used When Automatically Allocating Communications Ports

Address	Bits	Name	Description	
A202	15	Communications Port	Turns ON when there is a communications port available for automatic allocation.	
		Allocation Enabled Flag	Note Use this flag to confirm if all eight communications ports have already been allocated before executing communications instructions.	
A214	00 to 07	First Cycle Flags after Network Communications	Each flag will turn ON for just one cycle after communications have been completed. Bits 00 to 07 correspond to ports 0 to 7.	
		Finished	Note These flags are not effective until the next cycle after the communications instruction is executed. Delay accessing them for at least one cycle.	
			Note Use the Used Communications Port Number stored in A218 to determine which flag to access.	
	08 to 15	Do not use.		
A215	00 to 07	First Cycle Flags after Network Communications Error	Each flag will turn ON for just one cycle after a communications error occurs. Bits 00 to 07 correspond to ports 0 to 7. If the flag turns ON, refer to the Communications Port Completion Code in (A203 to A210) to identify the cause of the error.	
			Note These flags are not effective until the next cycle after the communications instruction is executed. Delay accessing them for at least one cycle.	
			Note Use the Used Communications Port Number stored in A218 to determine which flag to access.	
	08 to 15	Do not use.		
A216 and A217		Communications Port Completion Code Storage	The completion code for a communications instruction is automatically stored at the address with the PLC I/O memory address given in these words.	
Note Place this address into an index register and		Address	Note Place this address into an index register and use indirect addressing through the index register to reach the communications completion code.	
A218		Used Communications Port Numbers	When a communications instruction is executed, the number of the communications port that was used is stored in this word. Values 0000 to 0007 hex correspond to communications ports 0 to 7.	


Use the following flowchart to determine whether to use the Communications Port Allocation Enabled Flag (A202.15) and the Communications Port Completion Code Storage Address (A216 and A217).

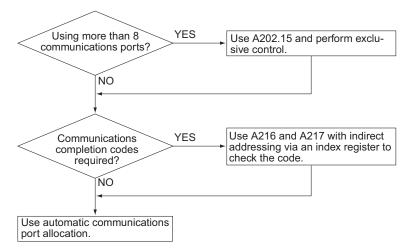

Applications Methods


- 1. Set the communications port in the instruction operand to F hex.
- 2. Program the ladder diagram as shown below.

• Completing and Processing Errors after Executing Communications Instructions

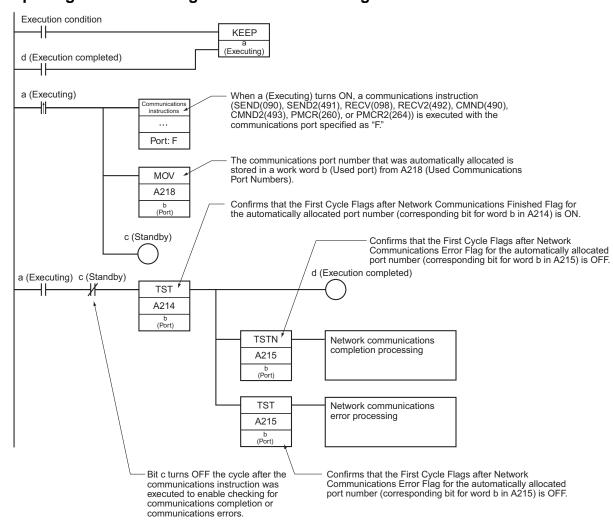


• Accessing the Completion Code after Executing Communications Instructions


The completion codes are generally used to troubleshoot errors when they occur. A completion code of 0000 hex can, however, also be used to confirm that communications have been completed normally.

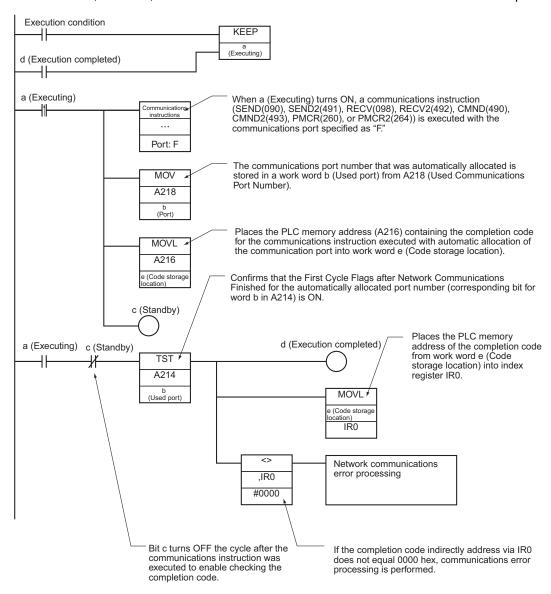

Note 1 If you use communications instructions inside interrupt tasks (regardless of whether you specify communications ports or use automatic port allocation), use the DI and EI instructions to prohibit executing interrupt tasks when executing communications instructions with automatic port allocation in cyclic tasks, as shown below.

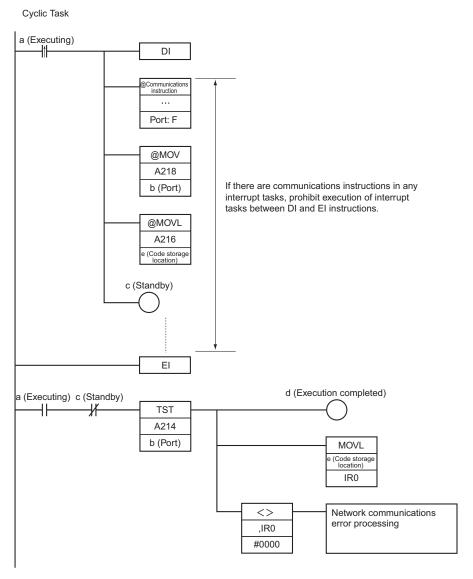


2 If it is possible that more than eight communications instructions will be executed at the same time, always check to be sure there is an available communications port before executing a communications instruction, even when using automatic port allocation.

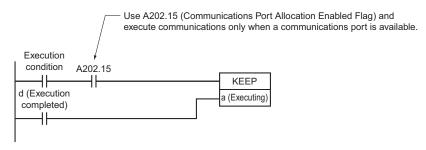

3 It is acceptable to specify the communications port for some communications instructions and use automatic port allocation for others. It is possible, however, that a port specified by the user for one communications instructions may have already been automatically allocated. You must therefore be careful when adding communications instructions that use automatic port allocation to existing ladder diagrams, as shown below.

Programming Example

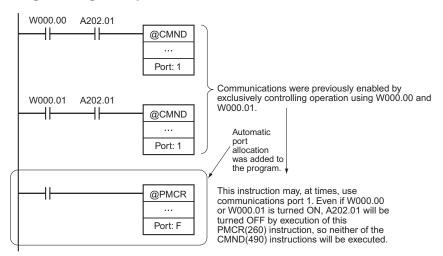

Specifications of CJ2 Network Communications Instructions (SEND2, CMND2, PMCR2, and RECV2)

Communications Port Allocations

Although the communications port (see note) was specified in the operands of previous Network Communications Instructions, the CJ2 Network Communications Instructions use automatic port allocation with new communications ports (8 to 71) to enable executing up to 64 of the CJ2 Network Communications Instruction simultaneously. With these instructions, there is no need for the user to keep track of the communications ports.

Each time one of these instructions is executed, the number of ports stored in A211 (Number of Ports Available) will be decremented. Each time a response is returned for a communications port, the value in A211 will be incremented. This system enables monitoring communications performance.

Communications ports	Application	Assignment method	
0 to 7	Network Communications Instructions, Serial Communications Instructions, easy backup (SEND, CMND, PMCR, TXDU, etc.)	Specified in operand. 0 to 7: The specified communications port is assigned. F: The communications port is automatically assigned between 0 and 7.	
8 to 71	CJ2 Network Communications Instructions (SEND2, CMND2, PMCR2, and RECV2)	Automatically assigned, with the number of available ports stored in A211.	


Note The communications ports are internal logical ports (virtual ports) used to manage simultaneous execution of communications instructions over multiple cycles (including communications processing, file handling, etc.).

Auxiliary Area Words and Bits

The CJ2 Network Communications Instructions use the communications information in operand I in place of the Communications Port Enabled Flags in A202 used by previous instructions.

Auxiliary Area	Network Communications Instructions for CJ1/CS1/CJ2	CJ2 Network Communications Instructions	
A202.00 to A202.07	Communications Port Enabled Flag (communications ports 0 to 7)	Instruction operand I Bit 0 (Turns ON when execution is completed, not when execution is enabled.)	
A202.08	Not used.	CJ2 Instructions Enabled Flag (default: ON)	
A203 to 210	Communications completion codes for communications ports 0 to 7	Instruction operand I+1	
A211	Not used.	Number of ports available for CJ2 Network Communications Instruction (A202.08 turns OFF when the value in A211 reaches 0.)	
A213	Explicit Communications Error Flag		
A214.00 to A214.07	First Cycle Flags after Network Communications Finished		
A215.00 to A215.07	First Cycle Flags after Network Communications Error		
A216 and A217	Communications Port Completion Code Storage Address		
A218	Used Communications Port Numbers		
A219	Communications Port Error Flags	Instruction operand I Bit 1	

Applications Methods

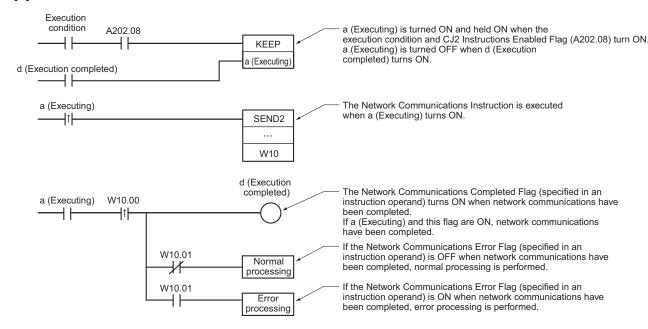

About Explicit Message Instructions

Methods for Using Explicit Message Communications

There are two methods that can be used to send explicit messages from a PLC.

- Use the CMND(490) or CMND2(493) to send a FINS command code of 2801 hex (EXPLICIT MESSAGE SEND).
- Use the following Explicit Message Instructions. (See note.)

Note These instructions are supported only by CS/CJ-series CPU Unit with unit version 2.0 or later.

Explicit Message Instructions

The following instructions, which are used specially for explicit messages, are called Explicit Message Instructions.

Mnemonic	Instruction Name	Outline	
EXPLT (720)	EXPLICIT MESSAGE SEND	Sends an explicit message with any service code.	
		Note Functionally, this instruction is the same as sending CMND(490) or CMND2(with a FINS command code of 2801 hex.	
EGATR (721)	EXPLICIT GET ATTRIBUTE	Sends an explicit message with a service code of 0E hex (GET ATTRIBUTE SINGLE).	
ESATR (722)	EXPLICIT SET ATTRIBUTE	Sends an explicit message with a service code of 10 hex (SET ATTRIBUTE SINGLE).	
ECHRD (723)	EXPLICIT WORD READ	Uses an explicit message to read data from a CPU Unit.	
ECHWR (724)	EXPLICIT WORD WRITE	Uses an explicit message to write data to a CPU Unit.	

Features of Explicit Message Instructions

- This enables easily reading and writing data between CPU Units using explicit message communications.
- With the EXPLICIT GET/SET ATTRIBUTE instructions, entering the service code is not required and only information from the class ID onward needs to be entered.
- With the EXPLICIT WORD READ/WRITE instructions, the I/O memory address in the local and remote CPU Units can be specified directly.

Code specifications for area types and hexadecimal word addresses are not required. (These are required for CMND(490) or CMND2(493) instructions with service code 1E hex (word data read) or 1F hex (word data write).)

Operation

Explicit Communications Error Flag is used to determine if communications ended normally or in error.

For error completions (i.e., when the flag is ON), the Communications Port Error Flag for FINS commands is used to determine if the explicit message was never sent (i.e., when the flag is ON) or if there was an error in the explicit message that was sent (i.e., when the flag is OFF).


The Communications Port Completion Code will contain 0000 hex after a normal end, an explicit message error code after an explicit communications error end, and a FINS message completion code after a FINS error end.

Condition		Explicit Communications Error Flag (A213.00 to A213.07: Com- munications ports 0 to 7)	Communications Port Error Flag (A219.00 to A219.07: Com- munications ports 0 to 7)	Communications Port Completion Code (A203 to A210: Communica- tions ports 0 to 7)
1) Normal end		OFF	OFF	0000 hex
a) When the explicit message could not be sent b) When the explicit message was sent but an explicit error response was returned		ON	ON	FINS messages completion code
			OFF	Explicit message error code


Normal End

An explicit message is sent and a normal response is returned.

The corresponding Explicit Communications Error Flag (A213.00 to A213.07: Communications ports 0 to 7) will be OFF and the Communications Port Completion Code (A203 to A210: Communications ports 0 to 7) will contain the explicit message normal completion code of 0000 hex.

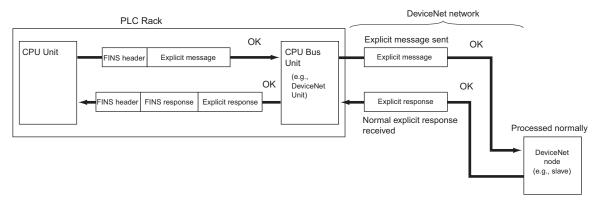

Communications Flags

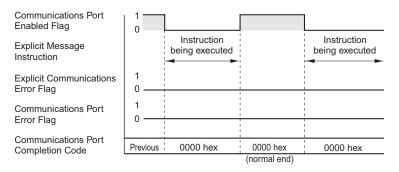


Error End

There are two possibilities for error ends, as described in the next two subsections.


a) When the Explicit Message Could Not Be Sent

In this case, the explicit message was never sent on the network, e.g., because the network was not running. Here, both the Explicit Communications Error Flag (A213.00 to A213.07: Communications ports 0 to 7) and the Communications Port Error Flag (A219.00 to A219.07: Communications ports 0 to 7) will turn ON.

After completion, the Communications Port Completion Code (A203 to A210: Communications ports 0 to 7) will contain the FINS message error code.

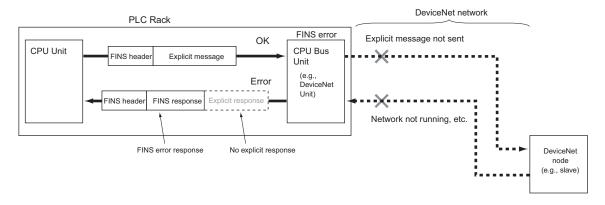


Communications Flags

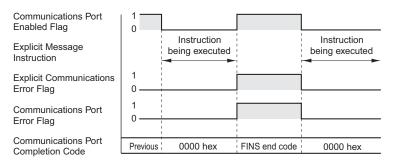


b) When the Explicit Message Was Sent But an Explicit Error Response Was Returned

In this case, the explicit message was sent but an error existed in the explicit message command frame (code not supported, illegal size, etc.). Here, the Explicit Communications Error Flag (A213.00 to A213.07: Communications ports 0 to 7) will turn ON and the Communications Error Flag (A219.00 to A219.07: Communications ports 0 to 7) will remain OFF.

After completion, the Communications Port Completion Code (A203 to A210: Communications ports 0 to 7) will contain the explicit message error code.

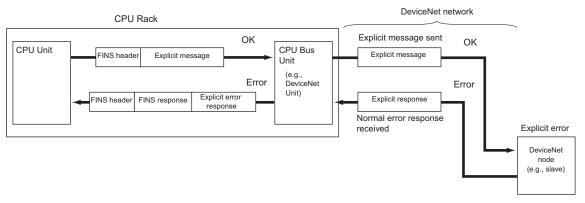


Communications Flags

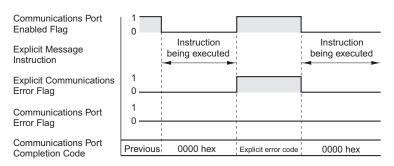


Ladder Programming Examples

User Specification of Communications Ports

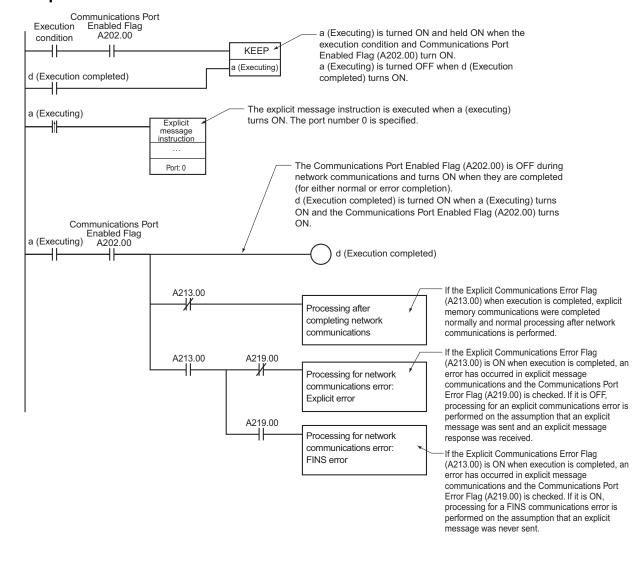


Automatically Allocating Communications Ports (i.e., Internal Logical Ports)

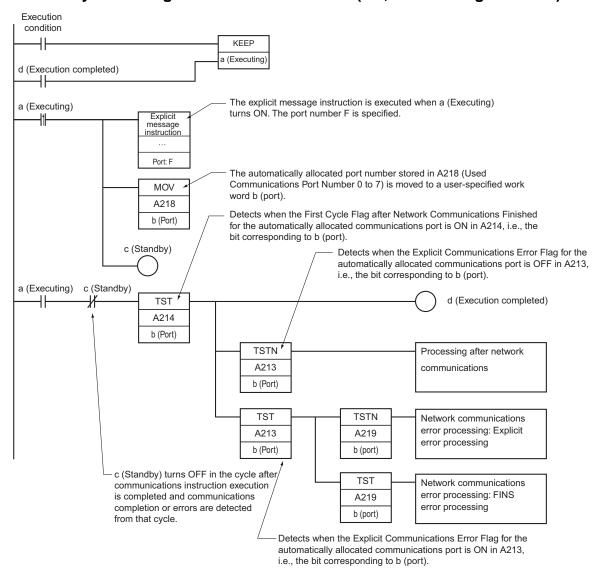

SEND

Instruction	Mnemonic	Variations	Function code	Function
NETWORK SEND	SEND	@SEND	090	Sends data to a node in the network.

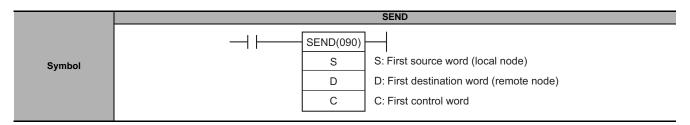


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word (local node)	UINT	Variable
D	First destination word (remote node)	UINT	Variable
С	First control word	WORD	5

C: First Control Word

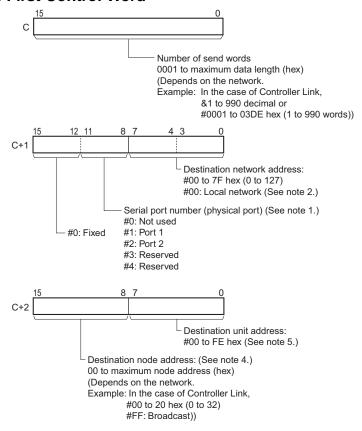

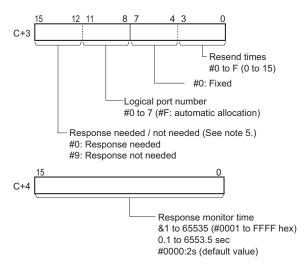

- **Note 1** The following two methods can be used to send data to the host computer through a serial port with the host link while initiating communications from the PLC.
 - 1) Set the destination unit address (bits 00 to 07 of C+2) to the unit address of the CPU Unit or Serial Communications Unit/Board and set the serial port number (bits 08 to 11 of C+1) to 1 for port 1 or 2 for port 2.

Unit address (C+2, bits 00 to 07)	Unit	Serial port number (C+1, bits 08 to 11)	Serial port		
00 hex	CPU Unit	1 hex	Built-in RS-232C port		
		2 hex	Peripheral port		
10 hex + unit number	Serial Communications Unit (CPU Bus Unit)	1 hex	Port 1		
		2 hex	Port 2		
E1 hex	Serial Communications Board (Inner Board)	1 hex	Port 1		
	(CS Series only)	2 hex	Port 2		

- 2) Set the destination unit address directly into bits 00 to 07 of C+2. In this case, set the serial port number in bits 08 to 11 of C+1 to 0 for direct specification.
 - Serial Communication Unit ports

Port	Port's unit address	Example: Unit number = 1			
Port 1	80 hex + 4 × unit number	80 + 4 × 1 = 84 hex (132 decimal)			
Port 2	81 hex + 4 × unit number	81 + 4 × 1 = 85 hex (133 decimal)			

· Serial Communication Board ports

Port	Port's unit address				
Port 1	E4 hex (228 decimal)				
Port 2	E5 hex (229 decimal)				

• CPU Unit ports

Port	Port's unit address				
Peripheral	FD hex (253 decimal)				
RS-232C	FC hex (252 decimal)				

- 2 When specifying the serial port without a routing table for the serial gateway function (conversion to host link FINS), set the serial port's unit address in the destination network address byte.
- 3 Set the destination network address to 00 to transmit within the local network. When two or more CPU Bus Units are mounted, the network address will be the unit number of the Unit with the lowest unit number.
- **4** For a broadcast transmission, set #FF hex. To send within the same node, set #00 hex.

5 The unit address indicates the Unit, as shown in the following table.

Unit	Unit address setting
CPU Unit	00 hex
CPU Bus Unit	10 hex + unit number
Special I/O Unit (except C200H-series Special I/O Units)	20 hex + unit number
Inner Board (CS Series only)	E1 hex
Computer	01 hex
Unit connected to network (not necessary to specify Unit)	FE hex
Direct specification of the serial port's unit address	Serial Communications Unit ports Port 1: 80 hex + 4 × unit number Port 2: 81 hex + 4 × unit number Serial Communications Board ports Port 1: E4 hex (228 decimal) Port 2: E5 hex (229 decimal) CPU Unit ports Peripheral port: FD hex (253 decimal) RS-232C port: FC hex (252 decimal)

6 When the destination node number is set to FF (broadcast transmission), there will be no response even if bits 12 to 15 are set to 0.

Operand Specifications

Area	Word addresses							Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits bi	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK*	OK	OK				OK				
С																		

^{*} The D bank of the EM Area can be specified only for CJ2 CPU Units. The D bank and higher cannot be specified in the program in a CS/CJ-series CPU Unit even if the destination is a CJ2 CPU Unit.

Flags

Name	Label	Operation
Error Flag	ER	 ON if the serial port number specified in C+1 is not within the range of 00 to 04. ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C+3. ON if SEND(090) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.


Related Auxiliary Area Words and Bits

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of a network instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when an instruction is executed.

Note Refer to the FINS command response codes in the *CS/CJ Series Communications Commands Reference Manual* (W342) for details on the completion codes for network communications.

Function

SEND(090) transfers the data beginning at word S to addresses beginning at D in the designated device through the PLC's CPU Bus or over a network. The number of words to be transmitted is specified in C.

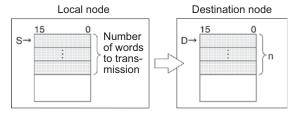


- If the Communications Port Enabled Flag is ON for the communications port specified in C+3 when SEND(090) is executed, the corresponding Communications Port Enabled Flag (ports 00 to 07: A202.00 to A202.07) and Communications Port Error Flag (ports 00 to 07: A219.00 to A219.07) will be turned OFF and 0000 will be written to the word that contains the completion code (ports 00 to 07: A203 to A210). Data will be transmitted to the destination node once the flags have be set.
- When an address in the current bank of the EM Area is specified for D, the transmitted data will be written to the current EM bank of the destination node.
- When data will be transmitted outside of the local network, the user must register routing tables in the PLCs (CPU Units) in each network. (Routing tables indicate the routes to other networks in which destination nodes are connected.)
- If the destination node number is set to FF, the data will be broadcast to all of the nodes in the designated network. This is known as a broadcast transmission.
- If a response is requested (bits 12 to 15 of C+3 set to 0) but a response has not been received within the response monitoring time, the data will be retransmitted up to 15 times (retries set in bits 0 to 3 of C+3).
- There will be no response or retries for broadcast transmissions.
- SEND(090) can be used to transmit data to a particular serial port in the destination device as well as
 the device itself.

Data can be transmitted to a host computer connected to the PLC's serial port (when set to host link mode) as well as a PLC or computer connected through a Controller Link or Ethernet network.


Transmission through the Network

SEND(090) can be used to transmit data from the PLC to the specified data area in a PLC or computer connected by a Controller Link network or Ethernet link.

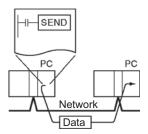


Transmission through Host Link

When the CPU Unit's built-in serial port, a Serial Communications Board (CS-series only), or Serial Communications Unit is in host link mode and connected one-to-one with a host computer, SEND(090) can be executed to transmit data from the PLC to the host computer the next time that the PLC has the right to transmit. It is also possible to transmit to other host computers connected to other PLCs elsewhere in the network.

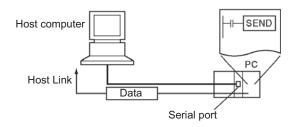

Sending Data to a Host Link Slave PLC Connected by Serial Gateway

The serial gateway function can be used to send data to a PLC connected as a host link Slave to a Serial Communications Board or Unit. In this case, the destination node address must be set to the host link unit number + 1.

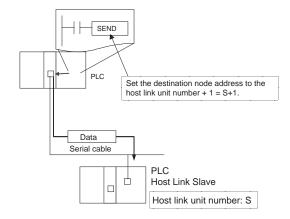

Hint

Sending data to a host computer connected by Host Link (non-solicited communications)

If SEND(090) is sent to the serial port of the CPU Unit, a Serial Communications Board (CS Series only), or Serial Communications Unit, a command is sent from the serial port to the host computer. The command is a FINS message enclosed between a host link header and terminator. The FINS command is a MEMORY AREA WRITE command (command code 0102) and the host link header code is 0F hexadecimal.


A program must be created in the host computer to process the received command (the FINS command enclosed in the host link header and terminator).

If the destination serial port is in the local PLC, set the network address to 00 (local network) in C+1, set the node address to 00 (local PLC) in C+2, and set the unit address to 00 (CPU Unit), E1 (Inner Board (CS Series only), or unit number + 10 hexadecimal (Serial Port Unit).

• SEND instruction (sending data to a host computer):

When the input condition and A202.00 (the Communications Port Enabled Flag for port 0) are ON in the following example, the ten words from CIO 100 to CIO 109 are transmitted to the host computer connected to port 1 of the Serial Communications Unit with unit address 10 (hex) at node number 3 in network 0.

Note It is necessary create a program at the host computer to receive the data and send a response.

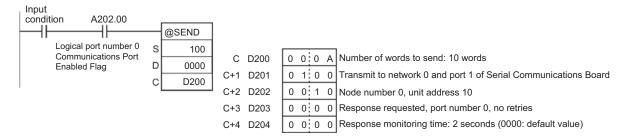


Precaution

- Only one network instruction may be executed for a communications port at one time. To ensure that SEND(090) is not executed while a port is busy, program the port's Communications Port Enabled Flag (A202.00 to A202.07) as a normally open condition.
- Refer to Automatically Allocating Communications Ports (i.e., Internal Logical Ports) on page 1115 for details on using automatic allocation of the communications port number (logical port).
- Communications port numbers 00 to 07 are shared by the network instructions and PMCR(260), so SEND(090) cannot be executed simultaneously with PMCR(260) if the instructions are using the same port number.
- Noise and other factors can cause the transmission or response to be corrupted or lost, so we
 recommend setting the number of retries to a non-zero value which will cause SEND(090) to be
 executed again if the response is not received within the response monitoring time.

Example Programming


When CIO 0.00 and A202.07 (the Communications Port Enabled Flag for port 07) are ON in the following example, the ten words from D100 to D109 are transmitted to node number 3 in the local network where they are written to the ten words from D200 to D209. The data will be retransmitted up to 3 times if a response is not received within ten seconds.

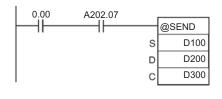

C: D300 0 0 0 A	Number of words to send: 10 words
C+1: D301 0 0 0 0	Transmit to the local network and the device itself
C+2: D302 0 3 0 0	Node number 3, unit address 00 (CPU Unit)
C+3: D303 0 7 0 3	Response requested, port number 7, 3 retries
C+4: D304 0 0 6 4	Response monitoring time: 0064 hexadecimal (10 seconds)

SEND2

Instruction	Mnemonic	Variations	Function code	Function
NETWORK SEND 2	SEND2	@SEND2	491	Sends data to a node on a network.

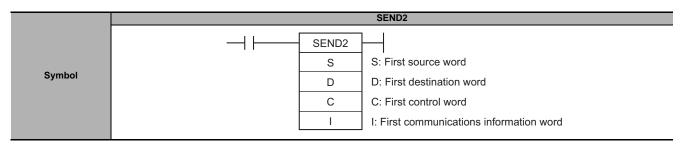


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands


Operand	Description	Data type	Size
S	First source word	WORD	Variable
D	First destination word	WORD	Variable
С	First control word	WORD	6
I	First communications information word	WORD	2

C: First Control Word

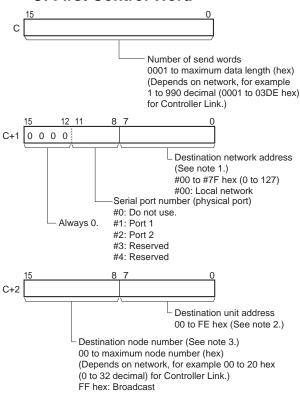

I: First communications information word

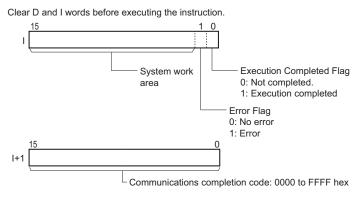

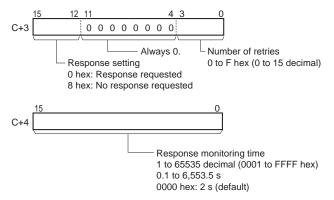

- Note 1 Set the destination network address in the routing tables unless you are specifying a local network. Set the destination network address to 00 for a local network. If there is more than one CPU Bus Unit mounted in the PLC, the "local network" is the network of the CPU Bus Unit with the lowest unit number.
 - 2 The unit addresses are as follows:
 - CPU Unit: 00 hex
 - CPU Bus Unit: 10 hex + unit number (hex)
 - Special I/O Unit: 20 hex + unit number (hex) (Except for C200H Special I/O Units)
 - Inner Board: E1 hex (CS Series only)
 - Computer: 01 hex
 - Unit connected to network: FE hex (Eliminates the need to specify the unit number of the remote Unit.)

The serial port unit address are as follows:

Serial Communications Units:

Port 1: 80 hex + 04 hex × unit number (hex)

Port 2: 81 hex + 04 hex × unit number (hex)

· Serial Communications Boards:

Port 1: E4 hex (228 decimal)

Port 2: E5 hex (229 decimal)

• CPU Unit

Peripheral port: FD hex (253 decimal)

RS-232C port: FC hex (252 decimal)

3 Set FF hex to broadcast. Set 00 hex to send to the local node.

Operand Specifications

Area	Word addresses				Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR						
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S												ОК						
D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
I																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the serial port number specified in C+1 is not between 0 and 4 hex. ON if there is no communications port available (i.e., if A211 = 0). OFF in all other cases.

Function

When SEND2(491) is executed, the specified number of send words starting with the first source word specified in S at the source node are sent to the destination node (i.e., the remote node) in the destination network specified in C. The data is written starting from the destination word address specified in D1 in the node with the specified destination unit address.

When the transmission starts, the Execution Completed Flag in I is turned OFF. When a response is returned, the transmission results is shown in the Error Flag in I. The communications response is written to I+1.

The Communications Port Enabled Flags (A202.00 to A202.07) and Communications Port Error Flags (A219.00 to A219.07) used for the SEND(090) instruction are not used for SEND2(491), which uses the operand I. The communications port completion code (previously stored in A203 to A210) is stored in I+1.

Example Programming

If CIO 0.00 (start bit) and A202.08 (CJ2 Instructions Enabled Flag) are ON, W10.00 (executing) will turn ON.

When W10.00 (Executing) turns ON, the ten words of data starting from D100 (D100 to D109) are sent to the CPU Unit with node number 3 in the local network where they are written to ten words starting from D200 (D200 to D209). If a response is not received within 10 seconds, the data will be resent up to 3 times.

If communications end normally, CIO 2.00 (execution completed) turns ON, and normal processing is executed. If communications end in an error, CIO 2.01 (error end) turns ON, and error processing is executed.

0 0 1 0

0 0:0 0

0 3:0 0

0 0:0 3

0 1:0 0


Number or words to send: 10 words

Response requested, 3 retries


Transmit to the local network and the device itself

Response monitoring time: 0064 hexadecimal (10 seconds)

Node number 03, unit address 00 (CPU Unit)

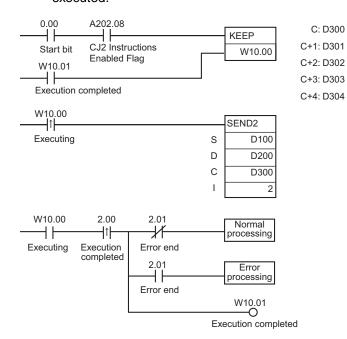


Timing Chart

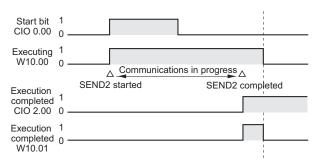

RECV

Instruction	Mnemonic	Variations Function code		Function	
NETWORK RECEIVE	RECV	@RECV	098	Requests data to be transmitted from a node in the network and receives the data.	

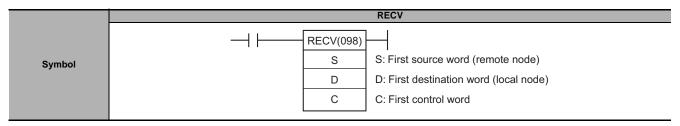


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word (remote node)	UINT	Variable
D	First destination word (local node)	UINT	Variable
С	First control word	WORD	5

C: First Control Word

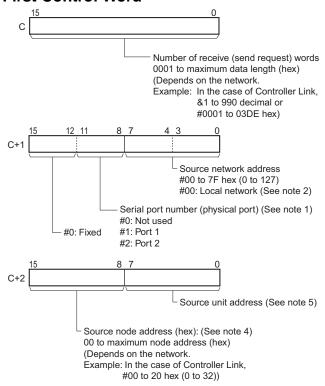

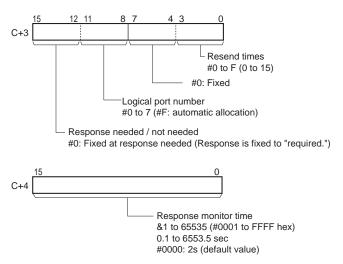

- **Note 1** The following two methods can be used to receive data from a host computer through a serial port with the host link while initiating communications from the PLC.
 - 1) Set the source unit address (bits 00 to 07 of C+2) to the unit address of the CPU Unit or Serial Communications Unit/Board and set the serial port number (bits 08 to 11 of C+1) to 1 for port 1 or 2 for port 2.

Unit address (C+2, bits 00 to 07)	Unit	Serial port number (C+1, bits 08 to 11)	Serial port
00 hex	CPU Unit	1 hex	Built-in RS-232C port
		2 hex	Peripheral port
10 hex + unit number	Serial Communications Unit (CPU Bus Unit)	1 hex	Port 1
		2 hex	Port 2
E1 hex	Serial Communications Board (Inner Board)	1 hex	Port 1
	(CS Series only)	2 hex	Port 2

- 2) Set the source unit address directly into bits 00 to 07 of C+2. In this case, set the serial port number in bits 08 to 11 of C+1 to 0 for direct specification.
 - Serial Communication Unit ports

Port	Port's unit address	Example: Unit number = 1
Port 1	80 hex + 4 × unit number	80 + 4 × 1 = 84 hex (132 decimal)
Port 2	81 hex + 4 × unit number	81 + 4 × 1 = 85 hex (133 decimal)

· Serial Communication Board ports

Port	Port's unit address
Port 1	E4 hex (228 decimal)
Port 2	E5 hex (229 decimal)

· CPU Unit ports

Port	Port's unit address
Peripheral	FD hex (253 decimal)
RS-232C	FC hex (252 decimal)

- 2 When specifying the serial port without a routing table for the serial gateway function (conversion to host link FINS), set the serial port's unit address in the source network address byte.
- 3 Set the source network address to 00 to specify a source within the local network. When two or more CPU Bus Units are mounted, the network address will be the unit number of the Unit with the lowest unit number.
- **4** Broadcast transmission is not possible using a RECV(098) instruction. For a send request within the same node, set #00.

5 Unit address

CPU Unit: 00 hex

• CPU Bus Unit: 10 hex + unit number

• Special I/O Unit

(except C200H-series Special I/O Units): 20 hex + unit number

Inner Board (CS Series only):Computer:E1 hex01 hex

· Unit connected to network

(not necessary to specify Unit): FE hex

Serial Port's unit address

· Serial Communications Unit ports

Port 1: 80 hex + $4 \times$ unit number Port 2: 81 hex + $4 \times$ unit number

· Serial Communications Board ports

Port 1: E4 hex (228 decimal) Port 2: E5 hex (229 decimal)

· CPU Unit ports

Peripheral port: FD hex (253 decimal) RS-232C port: FC hex (252 decimal)

Operand Specifications

Area			V	Vord ad	dresse	s			Indirect DM/EM addresses		Con-	Registers		Fla	ngs	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK*	OK	OK				OK				
С																		

^{*} The D bank of the EM Area can be specified only for CJ2 CPU Units. The D bank and higher cannot be specified in the program in a CS/CJ-series CPU Unit even if the source is a CJ2 CPU Unit.

Flags

Name	Label	Operation
Error Flag	ER	 ON if the serial port number specified in C+1 is not within the range of 00 to 04. ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C+3. ON if RECV(098) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.


Related Auxiliary Area Words and Bits

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of a network instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.

Note Refer to the FINS command response codes in the *CS/CJ Series Communications Commands Reference Manual* (W342) for details on the completion codes for network communications.

Function

RECV(098) requests the number of words specified in C beginning at word S to be transferred from the designated device to the local PLC. The data is received through the PLC's CPU Bus or over the network and written to the PLC's data area beginning at D.

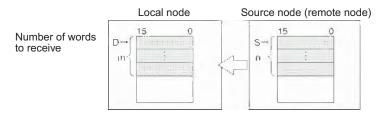


- If the Communications Port Enabled Flag is ON for the communications port specified in C+3 when SEND(090) is executed, the corresponding Communications Port Enabled Flag (ports 00 to 07: A202.00 to A202.07) and Communications Port Error Flag (ports 00 to 07: A219.00 to A219.07) will be turned OFF and 0000 will be written to the word that contains the completion code (ports 00 to 07: A203 to A210). Data will be received from the destination node once the flags have be set.
- When an address in the current bank of the EM Area is specified for D, the transmitted data will be written to the current EM bank of the destination node.
- When data will be transmitted outside of the local network, the user must register routing tables in the PLCs (CPU Units) in each network. (Routing tables indicate the routes to other networks in which destination nodes are connected.)
- A response is required with RECV(098) because the response contains the data being received. If the response has not been received within the response monitoring time set in C+4, the request for data transfer will be retransmitted up to 15 times (retries set in bits 0 to 3 of C+3).
- RECV(098) can be used to request a data transmission from a particular serial port in the source device as well as the device itself.

Data can be received from a host computer connected to the PLC's serial port (when set to host link mode) as well as a PLC or computer connected through a Controller Link or Ethernet network.


Transmission through the Network

RECV(098) can be used to receive data transmitted the specified data area in a PLC or computer connected by a Controller Link network or Ethernet link and write that data to the specified data area in the local PLC.

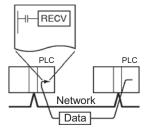


Transmission through Host Link

When the CPU Unit's built-in serial port, a Serial Communications Board (CS Series only), or Serial Communications Unit is in host link mode and connected one-to-one with a host computer, RECV(098) can be executed to receive data from the host computer the next time that the PLC has the right to transmit commands. It is also possible to receive data from other host computers connected to other PLCs elsewhere in the network.

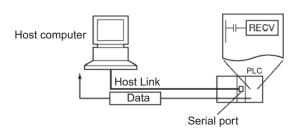

Receiving Data from a Host Link Slave PLC Connected by Serial Gateway

The serial gateway function can be used to receive data from a PLC connected as a host link Slave to a Serial Communications Board or Unit. In this case, the source node address must be set to the host link unit number + 1.

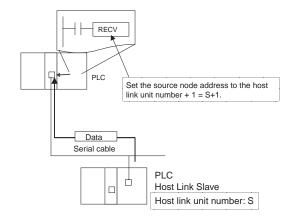

Hint

Transmission through Host Link

If RECV(098) is executed for the serial port of the CPU Unit, a Serial Communications Board (CS Series only), or Serial Communications Unit, a command is sent from the serial port to the host computer. The command is a FINS message enclosed between a host link header and terminator. The FINS command is a MEMORY AREA READ command (command code 0101) and the host link header code is 0F hexadecimal.

A program must be created in the host computer to process the send command (the FINS command enclosed in the host link header and terminator).


If the destination serial port is in the local PLC, set the network address to 00 (local network) in C+1, set the node address to 00 (local PLC) in C+2, and set the unit address to 00 (CPU Unit), E1 (Inner Board, CS Series only), or unit number + 10 hexadecimal (Serial Port Unit).

Precaution

- Only one network instruction may be executed for a communications port at one time. To ensure that RECV(098) is not executed while a port is busy, program the port's Communications Port Enabled Flag (A202.00 to A202.07) as a normally open condition.
- Refer to Automatically Allocating Communications Ports (i.e., Internal Logical Ports) on page 1115 for details on using automatic allocation of the communications port number (logical port).
- Communications port numbers 00 to 07 are shared by the network instructions and PMCR(260), so RECV(098) cannot be executed simultaneously with PMCR(260) if the instructions are using the same port number.
- Noise and other factors can cause the transmission or response to be corrupted or lost, so we
 recommend setting the number of retries to a non-zero value which will cause RECV(098) to be
 executed again if the response is not received within the response monitoring time.

RECV2

Instruction	Mnemonic	Variations	Function code	Function		
NETWORK RECEIVE 2	RECV2	@RECV2	492	Requests data to be transmitted from a node in the network and receives the data.		

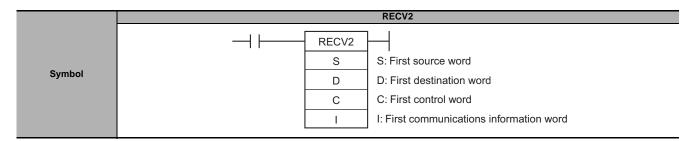


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S	First source word	WORD	Variable
D	First destination word	WORD	Variable
С	First control word	WORD	5
1	First communications information word	WORD	2

C: First Control Word

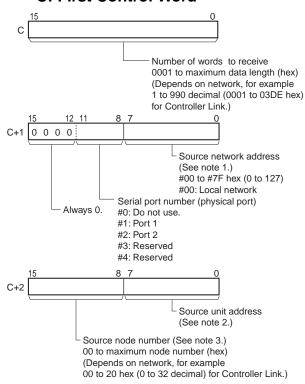

I: First communications information word

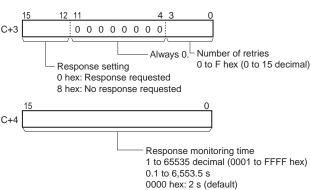

- Note 1 Set the source network address in the routing tables unless you are specifying a local network. Set the source network address to 00 for a local network. If there is more than one CPU Bus Unit mounted in the PLC, the "local network" is the network of the CPU Bus Unit with the lowest unit number.
 - 2 The unit addresses are as follows:
 - CPU Unit: 00 hex
 - CPU Bus Unit: 10 hex + unit number (hex)
 - Special I/O Unit: 20 hex + unit number (hex) (Except for C200H Special I/O Units)
 - Inner Board: E1 hex (CS Series only)
 - · Computer: 01 hex
 - · Unit connected to network: FE hex (Eliminates the need to specify the unit number of the remote Unit.)

The serial port unit address are as follows:

- · Serial Communications Units:
 - Port 1: 80 hex + 04 hex × unit number
 - Port 2: 81 hex + 04 hex × unit number
- Serial Communications Boards:
 - Port 1: E4 hex (228 decimal)
- Port 2: E5 hex (229 decimal)
- CPU Unit
 - Peripheral port: FD hex (253 decimal)
 - RS-232C port: FC hex (252 decimal)
- 3 Broadcasting is not possible for RECV2(492). Set 00 hex to request a reception from the local node.

Operand Specifications

Area			٧	Vord ad	ldresse	s		Indirect DM/EM addresses Con- Registers Flags			Con- Registers			ıgs	Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S												ОК						
D	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК		OK		ОК				
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK .				
I																		

Flags

Name	Label	Operation			
Error Flag	P_ER	 ON if the serial port number specified in C+1 is not between 0 and 4 hex. ON if there is no communications port available (i.e., if A211 = 0). OFF in all other cases. 			

Function

When RECV2(492) is executed, the number of receive words specified in C starting with the first source word address specified in S at the source node in the source network specified in C are received at the destination node (i.e., the local node). The data is written starting from the word address specified in D1 at the local node.

When the transmission starts, the Execution Completed Flag in I is turned OFF. When a response is returned, the transmission results is shown in the Error Flag in I. The communications response is written to I+1.

The Communications Port Enabled Flags (A202.00 to A202.07) and Communications Port Error Flags (A219.00 to A219.07) used for the RECV(098) instruction are not used for RECV2(492), which uses the operand I. The communications port completion code (previously stored in A203 to A210) is stored in I+1.

Example Programming

If CIO 0.00 (start bit) and A202.08 (CJ2 Instructions Enabled Flag) are ON, W10.00 (executing) will turn ON.

When W10.00 (Executing) turns ON, the ten words of data starting from D100 (D100 to D109) are received from the CPU Unit with node number 3 in the same network and written to ten words starting from D200 (D200 to D209) at the local node. If a response is not received within 10 seconds, the data will be resent up to 3 times.

If communications end normally, CIO 2.00 (execution completed) turns ON, and normal processing is executed. If communications end in an error, CIO 2.01 (error end) turns ON, and error processing is executed.

0 0:1 0

0 0:0 0

0 3:0 0

0 0:0 3

Number or words to send: 10 words

Response requested, 3 retries

Receive from the local network and the device itself

Node number 03, unit address 00 (CPU Unit)

0 1 0 0 Response monitoring time: 0064 hexadecimal (10 seconds


C: D300

C+1: D301


C+2: D302

C+3: D303

C+4: D304

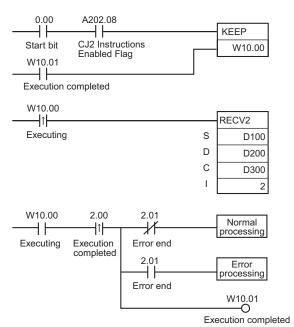


Timing Chart

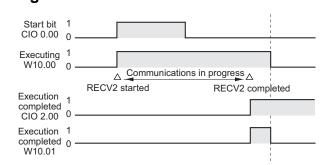

CMND

Instruction	Mnemonic	Variations	Function code	Function		
DELIVER COMMAND	CMND	@CMND	490	Sends an FINS command and receives the response.		

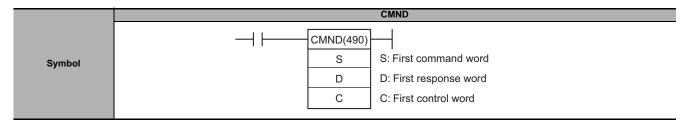


Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First command word	UINT	Variable
D	First response word	UINT	Variable
С	First control word	WORD	6

C: First Control Word

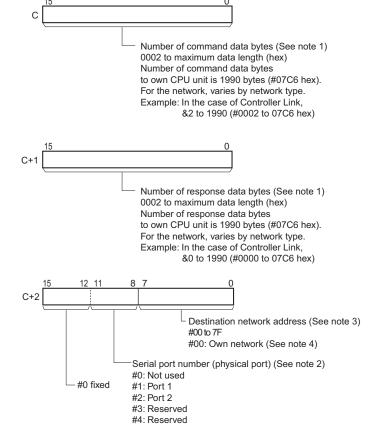

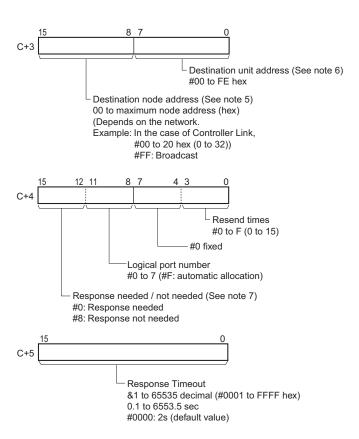

- Note 1 Refer to the operation manual for the specific network for the maximum data lengths for the command data and response data. For any FINS command passing through multiple networks, the maximum data lengths for the command data and response data are determined by the network with the smallest maximum data lengths. If response data longer than the number response data bytes is returned, the response data is not stored. If response data shorter than the number of response data bytes is returned, the response data is received and the remaining area remains unchanged.
 - 2 The following two methods can be used to send a FINS command to a host computer through a serial port with the host link host link while initiating communications from the PLC, or the serial gateway function (converted to Compo-Way/F, Modbus-RTU, or Modbus-ASCII).
 - 1) Set the destination unit address (bits 00 to 07 of C+3) to the unit address of the CPU Unit or Serial Communications Unit/Board and set the serial port number (bits 08 to 11 of C+2) to 1 for port 1 or 2 for port 2.

Unit address (C+2, bits 00 to 07)	Unit	Serial port number (C+1, bits 08 to 11)	Serial port	
00 hex	CPU Unit	1 hex	Built-in RS-232C port	
		2 hex	Peripheral port	
10 hex + unit number	Serial Communications Unit	1 hex	Port 1	
	(CPU Bus Unit)	2 hex	Port 2	
E1 hex	Serial Communications Board	1 hex	Port 1	
	(Inner Board) (CS Series only)	2 hex	Port 2	

- 2) Set the source unit address directly into bits 00 to 07 of C+2. In this case, set the serial port number in bits 08 to 11 of C+1 to 0 for direct specification.
 - Serial Communication Unit Ports

Port	Port's unit address	Example: Unit number = 1
Port 1	80 hex + 4 × unit number	80 + 4 × 1 = 84 hex (132 decimal)
Port 2	81 hex + 4 × unit number	81 + 4 × 1 = 85 hex (133 decimal)

Serial Communication Board Ports

Port	Port's unit address
Port 1	E4 hex (228 decimal)
Port 2	E5 hex (229 decimal)

• CPU Unit Ports

Port	Port's unit address
Peripheral	FD hex (253 decimal)
RS-232C	FC hex (252 decimal)

- 3 When specifying the serial port without a routing table for the serial gateway function (conversion to host link FINS), set the serial port's unit address in the source network address byte.
- **4** When two or more CPU Bus Units are mounted, the network address will be the unit number of the Unit with the lowest unit number.
- 5 For a broadcast transmission, set #FF hex.

Set the destination network address to 00 to transmit within the local network.

When specifying the serial port in the serial gateway function (conversion to host link FINS), set the destination unit address to the host link unit number of the destination PLC + 1 (setting range: 1 to 32).

- 6 Unit address
 - CPU Unit: 00 hex
 - CPU Bus Unit: 10 hex + unit number
 - Special I/O Unit (except C200H-series Special I/O Units): 20 hex + unit number
 - Inner Board: E1 hex (CS Series only)
 - Computer: 01 hex
 - · Unit connected to network: FE hex (not necessary to specify Unit)

Serial port's unit address

Serial Communications Unit ports

Port 1: 80 hex + 4 × unit number

Port 2: 81 hex + 4 × unit number

· Serial Communications Board ports

Port 1: E4 hex (228 decimal)

Port 2: E5 hex (229 decimal)

CPU Unit ports

Peripheral port: FD hex (253 decimal) RS-232C port: FC hex (252 decimal)

7 When the destination node number is set to FF (broadcast transmission), there will be no response even if bits 12 to 15 are set to 0.

Operand Specifications

Area	Word addresses					Indirect DM/EM addresses Con-		Registers		Flags		Pulse T	TR					
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	ОК	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
С	1																	

Flags

Name	Label	Operation
Error Flag	ER	 ON if the serial port number specified in C+2 is not within the range of 00 to 04. ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C+4. ON if a FINS command is sent to the local CPU Unit while the File Memory Operation Flag (A34313) is ON. ON if CMND(490) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.


Related Auxiliary Area Words and Bits

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of a network instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.
File Memory Operation Flag	A343.13	ON when any FINS command is sent to the local CPU Unit (even for FINS commands not related to file memory) or when any of the following instructions or operations are performed for file memory. • FREAD(700) or FWRIT(701) • Program overwrite with control bit in memory • Simple backup operation

Note Refer to the FINS command response codes in the *CS/CJ Series Communications Commands Reference Manual* (W342) for details on the completion codes for network communications.

Function

CMND(490) transfers the specified number of bytes of FINS command data beginning at word S to the designated device through the PLC's CPU Bus or over a network. The response is stored in memory beginning at word D.

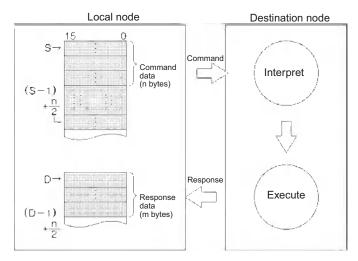


- If the Communications Port Enabled Flag is ON for the communications port specified in C+3 when CMND(490) is executed, the corresponding Communications Port Enabled Flag (ports 00 to 07: A202.00 to A202.07) and Communications Port Error Flag (ports 00 to 07: A219.00 to A219.07) will be turned OFF and 0000 will be written to the word that contains the completion code (ports 00 to 07: A203 to A210). The command data will be transmitted to the destination node(s) once the flags have be set.
- When data will be transmitted outside of the local network, the user must register routing tables in the PLCs (CPU Units) in each network. (Routing tables indicate the routes to other networks in which destination nodes are connected.)
- CMND(490) can be used to transmit command data to a particular serial port in the destination device as well as the device itself.
- The CPU Unit executing CMND(490) can send a FINS command to itself (except for CS-series CS1 CPU Units prior to V1□). Use the following control data settings to achieve this.
 - Destination network address (bits 00 to 07 of C+2): 00 hex (local network)
 - Serial port No. (bits 08 to 11 of C+2): 0 hex (not used)
 - Destination unit address (bits 00 to 07 of C+3): 00 hex (CPU Unit)

- Destination node address (bits 08 to 15 of C+3): 00 hex (local node)
- Number of retries (bits 00 to 03 of C+4): 0 hex (this setting is invalid; set it to 0)
- Response monitoring time: (bits 00 to 15 of C+5): 0000 to FFFF hex (but 0000 will specify 6553.5 s, and not 2 s as normal)
- If the destination node number is set to FF, the command data will be broadcast to all of the nodes in the designated network. This is known as a broadcast transmission.
- If a response is requested (bits 12 to 15 of C+4 set to 0) but a response has not been received within the response monitoring time, the command data will be retransmitted up to 15 times (retries set in bits 0 to 3 of C+3). There will be no response and no retries for broadcast transmissions. For instructions that require no response, set the response setting to "not required."
- When broadcast is specified, there is no response and no resending.
- An error will occur if the amount of response data exceeds the number of bytes of response data set in C+1.
- FINS command data can be transmitted to a host computer connected to a PLC serial port (when set to host link mode) as well as a PLC (CPU Unit, Inner Board (CS Series only), or CPU Bus Unit) or computer connected through a Controller Link or Ethernet network.


Transmission through the Network

CMND(490) can be used to transmit any FINS command to a personal computer or a PLC (CPU Unit, Inner Board (CS Series only), or CPU Bus Unit) connected by a Controller Link network or Ethernet link.

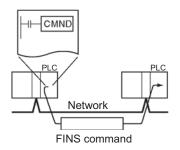

• Transmission through Host Link

When the CPU Unit's built-in serial port, a Serial Communications Board (CS Series only), or Serial Communications Unit is in host link mode and connected one-to-one with a host computer, CMND(490) can be executed to transmit any FINS command from the PLC to the host computer the next time that the PLC has the right to transmit. It is also possible to transmit to other host computers connected to other PLCs elsewhere in the network.

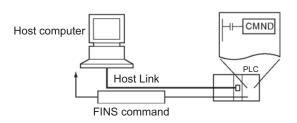


Issuing a FINS command to a device (a component or a PLC of a Host Link slave) connected to a serial port (Serial Gateway)

 Sending to a Component (Conversion to CompoWay/F, Modbus-RTU, or Modbus-ASCII)

The serial gateway function can convert the following FINS commands to CompoWay/F, Modbus-RTU, or Modbus-ASCII commands when the FINS command is sent to a Serial Communications Board or Unit's serial port or one of the CPU Unit's serial ports (peripheral or RS-232C).


Convert to CompoWay/F command: 2803 hex Convert to Modbus-RTU command: 2804 hex Convert to Modbus-ASCII command: 2805 hex

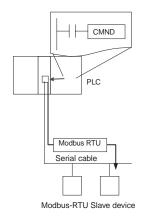

Note The Modbus-RTU and Modbus-ASCII commands cannot be sent to the CPU Unit's serial ports.

· Sending to a PLC operating as a Host Link Slave


The serial gateway function can be used to send any FINS command to a PLC that is connected as a host link slave and through a Serial Communications Board or Unit's serial port. In this case, the destination node address must be set to the host link unit number + 1.

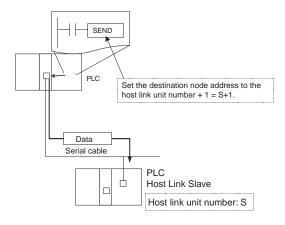

Sending a FINS Command to the CPU Unit Executing CMND(490)

The CPU Unit executing CMND(490) can send a FINS command to itself (excluding CS-series CS1 CPU Units without a suffix of -V□). For example, file memory commands (command codes 22□□ hex) can be sent to format file memory, delete files, copy files, and perform other operations. Refer to 5-2 Manipulating Files of the CS/CJ-series CPU Unit Programming Manual or 7-3 File Memory Operations of the CJ2 CPU Unit Operation Manual for details.

The File Memory Operation Flag (A343.13) will turn ON when any FINS command is sent to the local CPU Unit (even for FINS commands not related to file memory). Always use A343.13 in an NC input condition for CMND(490) to ensure that only one FINS command is being executed for the CPU Unit at the same time.

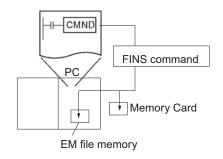

Hint

- CMND(490) operates just like SEND(090) if the FINS command code is 0102 (MEMORY AREA WRITE) and just like RECV(098) if the code is 0101 (MEMORY AREA READ).
- Issuing a FINS command (non-solicited communications) to a host computer connected by a host link

CMND(490) can be executed for the either port on the CPU Unit, a Serial Communications Board (CS Series only), or Serial Communications Unit to send a command to the connected host computer. (Specify the serial port as 1 hex or 2 hex in bits 08 to 11 of C+2.) The command is a FINS message enclosed between a host link header and terminator. Any FINS command can be sent; the host link header code is 0F hexadecimal.

A program must be created in the host computer to process the received command (the FINS command enclosed in the host link header and terminator).

If the destination serial port is in the local PLC, set the network address to 00 (local network) in C+2, set the node address to 00 (local PLC) in C+3, and set the unit address to 00 (CPU Unit), E1 (Inner Board, CS Series only), or unit number + 10 hexadecimal (Serial Port Unit).

Precaution

• To ensure that CMND(490) is not executed while a port is busy, program the port's Communications Port Enabled Flag (A202.00 to A202.07) as a normally open condition.

Note Refer to *Automatically Allocating Communications Ports (i.e., Internal Logical Ports) on page 1115* for details on using automatic allocation of the communications port number (logical port).

- Communications port numbers 00 to 07 are shared by the network and serial communications instructions (SEND(090), RECV(098), CMND(490), PMCR(260), TXDU(256), or RXDU(255)), so only one of these instructions may be executed for a communications port at one time.
- Always use one of the Communications Port Enabled Flags (A202.00 to A202.07) in an NO input condition and the File Memory Operation Flag (A343.13) in an NC input condition for CMND(490) when send a FINS command to the local CPU Unit.
- Noise and other factors can cause the transmission or response to be corrupted or lost, so we
 recommend setting the number of retries to a non-zero value which will cause CMND(490) to be
 executed again if the response is not received within the response monitoring time.


Example Programming

Issuing a FINS Command to Another CPU Unit on the Network

The following program section shows an example of sending a FINS command to another CPU Unit.

When CIO 0.00 and A202.07 (the Communications Port Enabled Flag for port 07) are ON, CMND(490) transmits FINS command 0101 (MEMORY AREA READ) to node number 3. The response is stored in D200 to D211.

The MEMORY AREA READ command reads 10 words from D10 to D19. The response contains the 2-byte command code (0101), the 2-byte completion code, and then the 10 words of data, for a total of 14 words or 28 bytes.

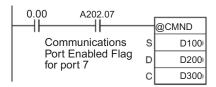


	15 87 0)
S: D100	0 1 0 1	Command code: 0101 hexadecimal (MEMORY AREA READ)
S+1:D101	8 2 0 0	D10 (Data area = 82 hexadecimal, address = 000A00)
S+2:D102	0 A O O	
S+3:D103	0 0 O A	Number of words to read = 0A hexadecimal (10 decimal)

	<u>15 87 0</u>	
C: D300	0 0 0 8	Bytes of command data: 0008 (8 decimal)
C+1:D301	0 0 1 8	Bytes of response data: 0018 (24)
C+2:D302	0 0 0 0	Transmit to the local network and the device itself
C+3:D303	0 3 0 0	Node number 3, unit address 00 (CPU Unit)
C+4:D304	0 7 0 3	Response requested, port number 7, 3 retries
C+5:D305	0 0 6 4	Response monitoring time: 0064 hexadecimal (10 seconds)

Issuing a FINS Command to Own CPU Unit

The following program section shows an example of sending a FINS command to the local CPU Unit.

When CIO 0.00 and A202.07 (the Communications Port Enabled Flag for port 07) are ON and A343.13 (File Memory Operation Flag) is OFF, CMND(490) transmits FINS command 2215 (CREATE/DELETE DIRECTORY) to the local CPU Unit. The response is stored in D100 to D101. Here, the FINS command will create a directory called CS/CJ under the OMRON directory. The command code (2 bytes) and the end code (2 bytes) will be returned and stored as the response.

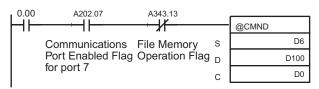


S:	D6	15 8 7 0
S+1:	D7	8 0 0 Disk No.: 8000 Hex (Memory Card)
S+2:	D8	0 0 0 0 Parameter: 0000 Hex (create directory)
S+3:	D9	4 3 5 3
S+4:	D10	3 1 2 0
S+5:	D11	2 0 2 0
S+6:	D12	Subdirectory name: CS1 (= space)
S+7:	D13	2 E 2 0
S+8:	D14	2 0 2 0
S+9:	D15	0 0 0 6 Directory name length: 0006 (6 characters)
S+10:	D16	5 C 4 F
S+11:	D17	4 D 5 2 Absolute directory path: \OMRON
S+12:	D18	4 F 4 E J

		<u>15 8 7 0</u>	
S:	D0	0 0 ¦1 A	Bytes of command data: 001A (26 decimal)
S+1:	D1	0 0 0 4	Bytes of response data: 0004 (4)
S+2:	D2	0 0 0 0	Destination network address: 00 Hex (local network)
S+3:	D3	0 0 0 0	Destination unit address: 00 Hex, Destination node number: 00 Hex (CPU Unit at local node)
S+4:	D4	0 7 0 0	Response requested, port number 7, 0 retries
S+5:	D5	0 0 0 0	Response monitoring time: 0000 Hex (2 seconds)

CMND2

Instruction	Mnemonic	Variations	Function code	Function
DELIVER COMMAND 2	CMND2	@CMND2	493	Sends an FINS command and receives the response.

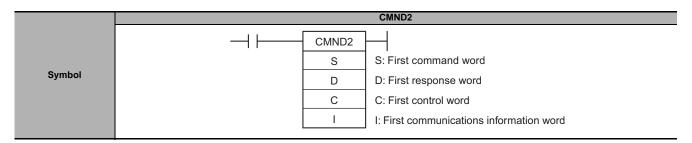

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
S	First command word	WORD	Variable
D	First response word	WORD	Variable
С	First control word	WORD	6
1	First communications information word	WORD	2

C: First Control Word

Bytes of command data (See note 1.) 0002 to maximum data length (hex) The maximum data length for command addressed to the local CPU Unit is 1,990 bytes (07C6 hex). For commands sent via networks, the maximum data length depends on the network, for example, 2 to 1,990 decimal (0002 to 07C6 hex) for Controller Link.

Bytes of response data (See note 1.) 0000 to maximum data length (hex)
The maximum data length for responses received from the local CPU Unit is 1,990 bytes (07C6 hex).
For responses received via networks, the maximum data length depends on the network, for example, 0 to 1,990 decimal (0000 to 07C6 hex) for Controller Link.

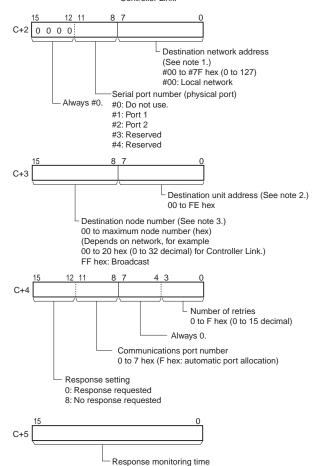

Note 1 Refer to the operation manual for the specific network for the maximum data lengths for the command data and response data. For any FINS command passing through multiple networks, the maximum data lengths for the command data and response data are determined by the network with the smallest maximum data lengths. If more bytes are received than the specified number of bytes, only the specified number of bytes will be stored. If fewer bytes are received, they will be stored and the remaining words in the reception area will not be changed.

2 The unit addresses are as follows:


0.1 to 6,553.5 s 0000 hex: 2 s (default)

• CPU Bus Unit: 10 hex + unit number

1 to 65535 decimal (0001 to FFFF hex)

- Special I/O Unit (except for C200H Special I/O Units): 20 hex + unit number
- Inner Board: E1 hex (CS Series only)
- Computer: 01 hex
- Unit connected to network: FE hex (Eliminates the need to specify the unit number of the remote Unit.)

I: First communications information word

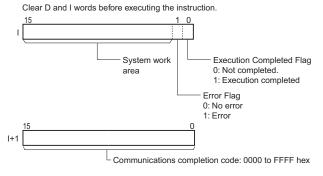

The serial port unit address are as follows:

· Serial Communications Units:

Port 1: 80 hex + 04 hex \times unit number Port 2: 81 hex + 04 hex \times unit number

· Serial Communications Boards:

Port 1: E4 hex (228 decimal)

Port 2: E5 hex (229 decimal)

CPU Unit

Peripheral port: FD hex (253 decimal) RS-232C port: FC hex (252 decimal)

3 Set FF hex for broadcasting. Set 00 hex to sent to the local node. When specifying a serial port using a serial gate-way (converting to Host Link FINS), set the destination node address to one higher than the Host Link unit number of the destination PLC (1 to 32).

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Cor		Con-	Registers		Flags		Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S												ОК						
D	ок	ок	ок	ок	ОК	ОК	ОК	ОК	ОК	ОК		5		OK				
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK .				
1																		

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the serial port number specified in C+1 is not between 0 and 4 hex. ON if there is no communications port available (i.e., if A211 = 0). OFF in all other cases.

Function

CMND2(493) transfers the specified number of bytes of FINS send command data beginning at word address S to the device with the designated unit address through the PLC's CPU Bus or over a network. The response is stored in memory beginning at word D1.

CMND2(493) can be used to send an FINS command to the local CPU Unit as well.

This is mainly done to send FINS commands for file memory operations.

The File Memory Operation Flag (A343.13) will turn ON when any FINS command is sent to the local CPU Unit (even for FINS commands not related to file memory). Always use A343.13 in an NC input condition for CMND2(493) to ensure that only one FINS command is being executed for the CPU Unit at the same time.

This means that command cannot be simultaneously sent to the local CPU Unit using both the CMND(490) and CMND2(493) instructions.

When sending starts, the Execution Completed Flag in I is turned OFF. When a response is returned, the results of the send is shown in the Error Flag in I. The communications response is written to I+1.


The Communications Port Enabled Flags (A202.00 to A202.07) and Communications Port Error Flags (A219.00 to A219.07) used for the CMND(492) instruction are not used for CMND2(493), which uses the operand I. The communications port completion code (previously stored in A203 to A210) is stored in I+1.

Example Programming


If CIO 0.00 (start bit) and A202.08 (CJ2 Instructions Enabled Flag) are ON, W10.00 (executing) will turn ON. If W10.00 (executing) is ON and A343.13 (Accessing File Data Flag) is OFF, FINS command 2215 hex (CREATE/DELETE SUBDIRECTORY) is set to the local CPU Unit and the response is stored in D100 and D101.

The FINS command creates a director called "CS1" in the "OMRON" directory in the Memory Card in the CPU Unit. The command code 2215 hex (2 bytes) and the 2-byte end code are returned as the response.

If communications end normally, CIO 2.00 (execution completed) turns ON, and normal processing is executed. If communications end in an error, CIO 2.01 (error end) turns ON, and error processing is executed.

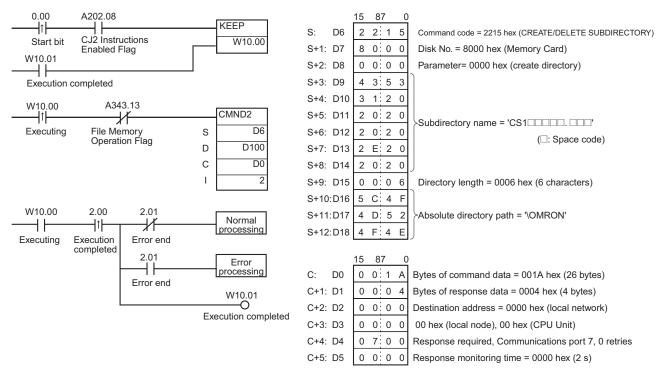


Timing Chart

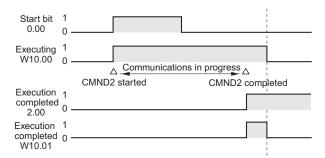

EXPLT

Instruction	Mnemonic	Variations	Function code	Function
EXPLICIT MESSAGE SEND	EXPLT	@EXPLT	720	Sends an explicit message with any service code.

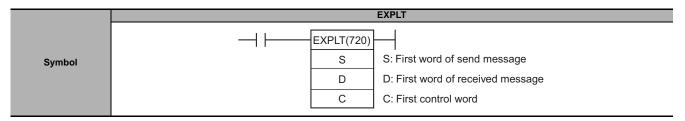

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First word of send message	WORD	Variable
D	First word of received message	WORD	Variable
С	First control word	LWORD	4


S: First word of send message





Set the number of bytes of source data from words S+1 on. For example, set S to 000A hex if there are 5 words of data (S+1 to S+5). Do not include the 2 bytes in word S itself. Include the leftmost bytes of S+1 to S+5, which contain 00. Also, include the number of bytes of Service Data starting at S+6. (If the first or last word contains just one byte of data, do not count the empty byte in that word.)




Destination Node Address (00 to max. node address (hex))

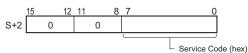


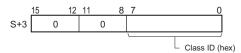

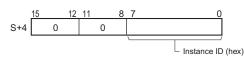

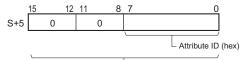


If the Attribute ID is not used, set it to FFFF hex. (The Attribute ID cannot be set to 0000 hex.)

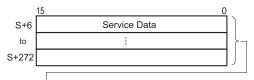

When there is Service Data (data other than the Attribute ID), the byte-order of this data is specified in bits 12 to 15 of C+1. Up to 534 bytes (267 words) can be set.


D: First word of received message

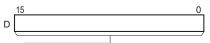


Contains the number of bytes of data from words D+1 on.

Does not include the 2 bytes in word D itself.

This value does include the leftmost bytes of D+1 and D+2, which contain 00. This value also includes the number of bytes of Service Data starting at D+3. (If the first or last word contains just one byte of data, the empty byte in that word is not counted.)

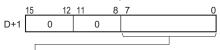


Contains the Source node address. (00 to 3F hex (0 to 63) for DeviceNet))

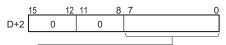


Contains the service code or error code (hex).

Normal response: Returns the command's Service Code with bit 07 ON. Error response: Returns 94 hex, regardless of the command's Service Code.

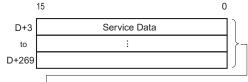

 Contains the response's service data (data following the service code). The byte-order of this data is specified in bits 12 to 15 of C+1. Can contain up to 534 bytes (267 words) of data.

C: First control word

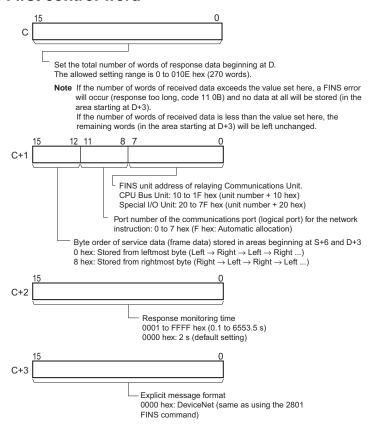

Operand Specifications

Area	Word addresses							Indirect DM/EM addresses Con-		Registers		Flags		Pulse 1	TR			
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
С																		

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C. OFF in all other cases.

Related Auxiliary Area Words and Bits

The corresponding Explicit Communications Error Flag will be OFF if the instruction ended normally or ON if an error occurred.

If an error occurred (corresponding flag in A213 ON), the corresponding Communications Port Error Flag can be used to determine whether the explicit message itself was not sent (corresponding flag in A219 ON) or that the message was sent but there was an error in the message (corresponding flag in A219 OFF).

The corresponding Communications Port Completion Code (A203 to A210) will be 0000 hex if the instruction ended normally, an explicit message error code if an explicit messaging error occurred, or a FINS error code if a FINS error occurred.


For details on the general operation of the explicit message instructions, refer to *About Explicit Message Instructions*.

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Explicit Communications Error Flag	A213.00 to A213.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of explicit message communications. The flags will be turned ON if the explicit message was not sent or the message was sent but an error response was returned. The flag status is retained until the next explicit message instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that the explicit message itself was not sent from the corresponding ports (00 to 07) during execution of an explicit message instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. • The corresponding word will contain 0000 while the Explicit Communications Error Flag is OFF. • The corresponding word will contain a FINS error code when that port's Explicit Communications Error Flag and Communications Port Error Flag are both ON. • The corresponding word will contain the appropriate explicit message error code when that port's Explicit Communications Error Flag is ON and the Communications Port Error Flag is OFF. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.


Function

Sends the explicit message command (stored in the range of words beginning at S+2) to the node address specified in S+1, via the Communications Unit with the FINS unit address specified in bits 00 to 07 of C+1. When the response to the explicit message is received, it is stored in the range of words beginning at D+2.

- Note 1 The number of bytes of send data in S includes the 10 bytes in S+1 to S+5 as well as the number of bytes of service data beginning at S+6. (For example, if there is 1 byte of service data, there are 11 bytes of data all together, so S must be set to 000B hex.)
 - 2 The number of bytes of received data in D includes the 4 bytes in D+1 and D+2 as well as the number of bytes of service data beginning at D+3. (For example, if there is 1 byte of service data, there are 5 bytes of data all together and D contains 0005 hex.)
 - The setting in bits 12 to 15 of C+1 (0 or 8 hex) determines the byte-order of the service data stored at S+6 and D+3.
- Storing Data from the Leftmost Byte Set bits 12 to 15 of C+1 to 0 hex.

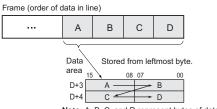


 Storing Data from the Rightmost Byte Set bits 12 to 15 of C+1 to 8 hex.

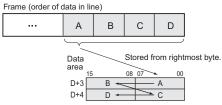

Note: A, B, C, and D represent bytes of data.

Precaution

Be sure that the order of bytes in the source data matches the order in the explicit message's frame (order of data in the line). For example, when the service data is in 2-byte or 4-byte units, the order of data in the frame is leftmost to rightmost order in 2-digit pairs, as shown in the following diagram.

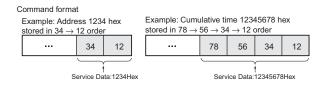

Frame

The following diagrams show how data is stored in the data areas when the service data is in 2-byte or 4-byte units.


1) Data in 2-byte Units


- Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 1234 hex in D+3
- Storing Data from the Rightmost Byte (Bits 12 to 15 of C = 8 hex)
 Example: Storing the value 1234 hex in D+3

The data in the frame is in the order $34 \rightarrow 12$.

2) Data in 4-byte Units

- Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 12345678 hex in D+3 and D+4

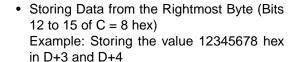

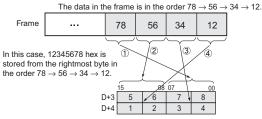

Note The examples above only show the storage of received data in D+3, but send data is stored in S+6 in the same way.

Example Programming


In this example, EXPLT(720) is used to read the total ON time or number of contact operations from a DRT2 Slave (I/O Terminal).




When CIO 0.00 and A202.06 (the Communications Port Enabled Flag for port 06) are ON, EXPLT(720) reads the Total ON Time (s) or Number of Contact Operations from a DRT2 Slave (I/O Terminal). In this case, the Total ON Time or Number of Contact Operations for input 3 are read.

Service Code = 0E hex, Class ID = 09 hex, Instance ID = 03 hex, and Attribute ID = 66 hex.

For example, a value of 2,752,039 s is returned as the response for the Total ON Time.

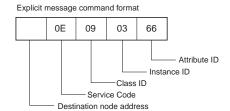

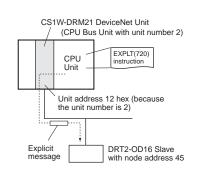

0

S:


D0

						italibol of bytoo of data. O T to O To To To bytoo O T Thox					
S+	·1: D1	0	0	2	D	Slave's node address = 45 = 2D hex					
S+	·2: D2	0	0	0	Ε	Service Code = 0E hex					
S+	·3: D3	0	0	0	9	Class ID = 09 hex					
S+	·4: D4	0	0	0	3	Instance ID = 03 hex (Input 3)					
S+	·5: D5	0	0	6	6	Attribute ID = 66 hex					
D:	D100	0	0	0	8	Contains 08 hex for 8 bytes of received data in response frame.					
D+	·1: D101	0	0	2	D	Returns Slave's node address = 45 = 2D hex.					
D+	·2: D102	0	0	8	Е	Service Code = 8E hex (normal completion)					
D+	·3: D103	2	7	F	Е	 Service Data = 0029FE27 hex (2,752,039 s decimal)					
D+	-4: D104	2	9	0	0	Service Data - 0029FE27 flex (2,752,039 \$ decilial)					
C:	D200	0	0	0	4	Set 5 words = 0005 hex since there are 5 words in D to D+5.					
C+	·1: D201	0	6	1	2	Byte order = 0 hex (from leftmost byte), communications port = 6 hex					
C.	1. D201	U	0	'		(port 6), and the DeviceNet Unit's unit address = 12 hex					
C+	·2: D202	0	0	0	0	Response monitoring time = 0000 hex (2 s)					
C+	·3: D203	0	0	0	0	Explicit format type = 0000 hex (DeviceNet format)					

A Number of bytes of data: S+1 to S+5 = 5 words = 10 bytes = 0A hex

EGATR

Instruction	Mnemonic	Variations	Function code	Function		
EXPLICIT GET ATTRIBUTE	EGATR	@EGATR	721	Sends an information/status read command in an explicit message (Get Attribute Single, Service Code: 0E hex).		

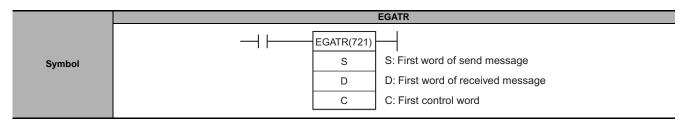


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size		
S	First word of send message	ULINT	4		
D	First word of received message	WORD	Variable		
С	First control word	LWORD	4		


S: First word of send message

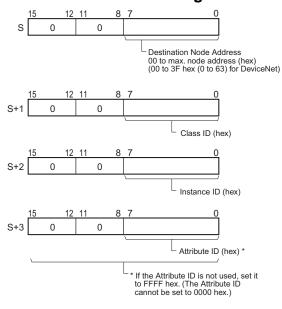

D: First word of received message

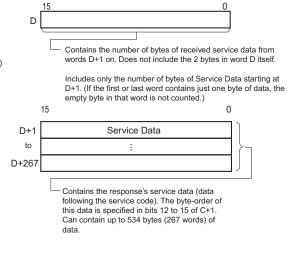

C: First control word

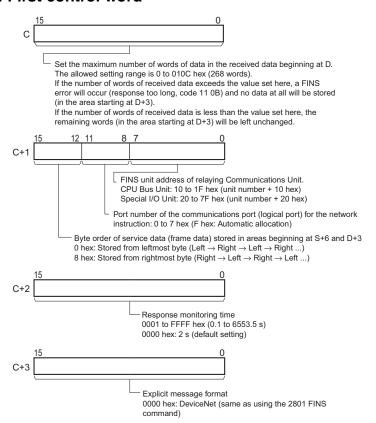

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-		Registers			Flags		Pulse 1	TR			
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
С																		İ

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C. OFF in all other cases.

Related Auxiliary Area Words and Bits

The corresponding Explicit Communications Error Flag will be OFF if the instruction ended normally or ON if an error occurred.

If an error occurred (corresponding flag in A213 ON), the corresponding Communications Port Error Flag can be used to determine whether the explicit message itself was not sent (corresponding flag in A219 ON) or that the message was sent but there was an error in the message (corresponding flag in A219 OFF).

The corresponding Communications Port Completion Code (A203 to A210) will be 0000 hex if the instruction ended normally, an explicit message error code if an explicit messaging error occurred, or a FINS error code if a FINS error occurred.

For details on the general operation of the explicit message instructions, refer to *About Explicit Message Instructions*.

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Explicit Communications Error Flag	A213.00 to A213.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of explicit message communications. The flags will be turned ON if the explicit message was not sent or the message was sent but an error response was returned. The flag status is retained until the next explicit message instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that the explicit message itself was not sent from the corresponding ports (00 to 07) during execution of an explicit message instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. • The corresponding word will contain 0000 while the Explicit Communications Error Flag is OFF. • The corresponding word will contain a FINS error code when that port's Explicit Communications Error Flag and Communications Port Error Flag are both ON. • The corresponding word will contain the appropriate explicit message error code when that port's Explicit Communications Error Flag is ON and the Communications Port Error Flag is OFF. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.

Function


Sends the "read information/status" explicit message command (stored in words S+1 to S+3) to the node address specified in S, via the Communications Unit with the FINS unit address specified in bits 00 to 07 of C+1.

When the response to the explicit message is received, the response's service data (data following the service code) is stored in the range of words beginning at D+1.

Note The number of bytes of received data indicated in D is the number of bytes of service data. (For example, if there is 1 byte of service data, D will contains 0001 hex. D will contain 0001 hex regardless of the byte order setting, i.e., whether the byte is stored in the rightmost or leftmost byte of D.)


The setting in bits 12 to 15 of C+1 (0 or 8 hex) determines the byte-order of the service data stored at S+6 and D+3.

 Storing Data from the Leftmost Byte Set bits 12 to 15 of C+1 to 0 hex.

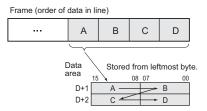

Note: A, B, C, and D represent bytes of data.


 Storing Data from the Rightmost Byte Set bits 12 to 15 of C+1 to 8 hex.

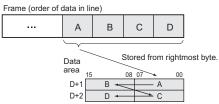

Note: A, B, C, and D represent bytes of data.

Precaution

Be sure that the order of bytes in the source data matches the order in the explicit message's frame (order of data in the line). For example, when the service data is in 2-byte or 4-byte units, the order of data in the frame is leftmost to rightmost order in 2-digit pairs, as shown in the following diagram.

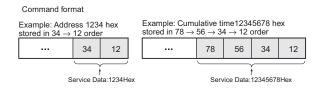


The following diagrams show how data is stored in the data areas when the service data is in 2-byte or 4-byte units.


1) Data in 2-byte Units

- Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 1234 hex in D+1
- Storing Data from the Rightmost Byte (Bits 12 to 15 of C = 8 hex)
 Example: Storing the value 1234 hex in D+1

2) Data in 4-byte Units

- Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 12345678 hex in D+1 and D+2
- Storing Data from the Rightmost Byte (Bits 12 to 15 of C = 8 hex)
 Example: Storing the value 12345678 hex in D+1 and D+2

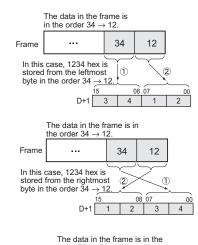

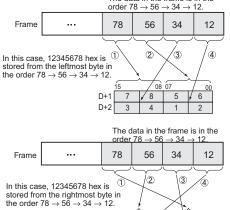

Example Programming


In this example, EGATR(721) is used to read the general status of a DRT2 Slave (I/O Terminal).



When CIO 0.00 and A202.06 (the Communications Port Enabled Flag for port 06) are ON, EGATR(721) reads the general status of the DRT2 Slave (I/O Terminal). In this case, the Total ON Time or Number of Contact Operations for input 3 are read.


Service Code = 0E hex, Class ID = 95 hex, Instance ID = 01 hex, and Attribute ID = 65 hex.

The general status is returned in 1 byte.

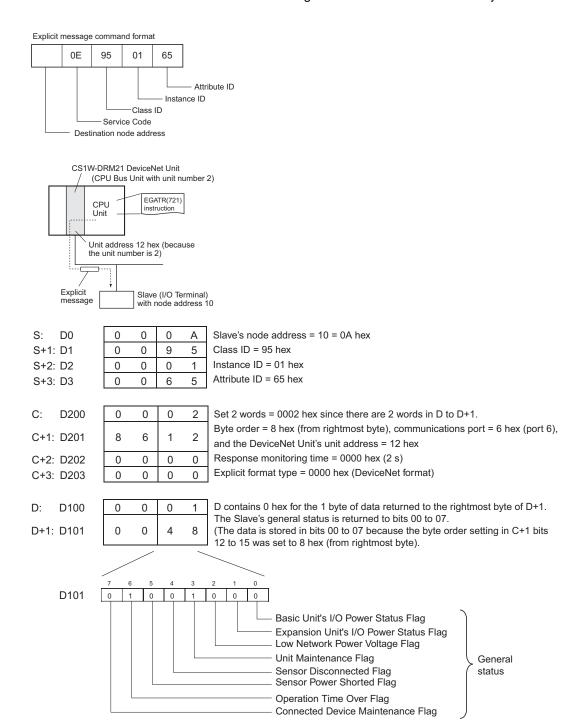

ESATR

Instruction	Mnemonic	Variations	Function code	Function		
EXPLICIT SET ATTRIBUTE	ESATR	@ESATR	722	Sends an information write command in an explicit message (Set Attribute Single, Service Code: 10 hex).		

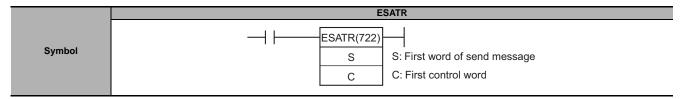


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands


Operand	Description	Data type	Size	
S	First word of send message	WORD	Variable	
С	First control word	WORD	3	


S: First word of send message

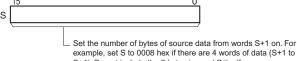


example, set S to 0008 hex if there are 4 words of data (S+1 to S+4). Do not include the 2 bytes in word S itself. Include the leftmost bytes of S+1 to S+4, which contain 00. Also, include the number of bytes of Service Data starting at S+5. (If the first or last word contains just one byte of data, do not count the empty byte in that word.)

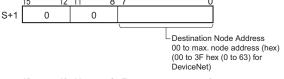

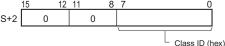

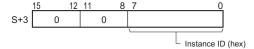

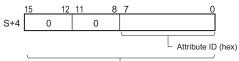


Lif the Attribute ID is not used, set it to FFFF hex. (The Attribute ID cannot be set to 0000 hex.)

15



When there is Service Data (data other than the Attribute ID), the byte-order of this data is specified in bits 12 to 15 of C+1. Up to 534 bytes (267 words) can be set.

C: First control word

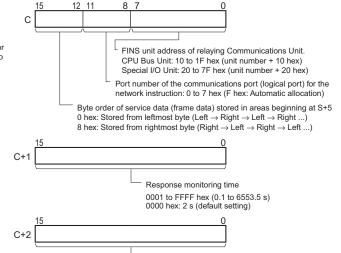

Explicit message format

0000 hex: DeviceNet (same as using the 2801 FINS command)

Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK				OK				
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C. OFF in all other cases.

Related Auxiliary Area Words and Bits

The corresponding Explicit Communications Error Flag will be OFF if the instruction ended normally or ON if an error occurred.

If an error occurred (corresponding flag in A213 ON), the corresponding Communications Port Error Flag can be used to determine whether the explicit message itself was not sent (corresponding flag in A219 ON) or that the message was sent but there was an error in the message (corresponding flag in A219 OFF).

The corresponding Communications Port Completion Code (A203 to A210) will be 0000 hex if the instruction ended normally, an explicit message error code if an explicit messaging error occurred, or a FINS error code if a FINS error occurred.

For details on the general operation of the explicit message instructions, refer to *About Explicit Message Instructions*.


Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Explicit Communications Error Flag	A213.00 to A213.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of explicit message communications. The flags will be turned ON if the explicit message was not sent or the message was sent but an error response was returned. The flag status is retained until the next explicit message instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that the explicit message itself was not sent from the corresponding ports (00 to 07) during execution of an explicit message instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. • The corresponding word will contain 0000 while the Explicit Communications Error Flag is OFF. • The corresponding word will contain a FINS error code when that port's Explicit Communications Error Flag and Communications Port Error Flag are both ON. • The corresponding word will contain the appropriate explicit message error code when that port's Explicit Communications Error Flag is ON and the Communications Port Error Flag is OFF. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.

Function

Sends the explicit message command with service code 10 hex (stored in the range of words beginning at S+2) to the node address specified in S+1, via the Communications Unit with the FINS unit address specified in bits 00 to 07 of C. When the response to the explicit message is received, it is stored in the range of words beginning at D+2.


The setting in bits 12 to 15 of C (0 or 8 hex) determines the byte-order of the service data stored at S+5.

 Storing Data from the Leftmost Byte Set bits 12 to 15 of C+1 to 0 hex.

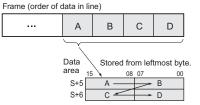

Note: A, B, C, and D represent bytes of data.


 Storing Data from the Rightmost Byte Set bits 12 to 15 of C+1 to 8 hex.

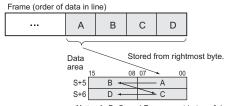

Note: A, B, C, and D represent bytes of data

Precaution

Be sure that the order of bytes in the source data matches the order in the explicit message's frame (order of data in the line). For example, when the service data is in 2-byte or 4-byte units, the order of data in the frame is leftmost to rightmost order in 2-digit pairs, as shown in the following diagram.

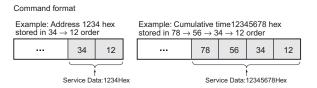


The following diagrams show how data is stored in the data areas when the service data is in 2-byte or 4-byte units.

1) Data in 2-byte Units


- Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 1234 hex in S+5
- Storing Data from the Rightmost Byte (Bits 12 to 15 of C = 8 hex)
 Example: Storing the value 1234 hex in S+5

2) Data in 4-byte Units

 Storing Data from the Leftmost Byte (Bits 12 to 15 of C = 0 hex)
 Example: Storing the value 12345678 hex in S+5 and S+6

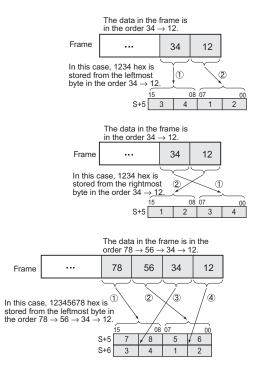

 Storing Data from the Rightmost Byte (Bits 12 to 15 of C = 8 hex)
 Example: Storing the value 12345678 hex in S+5 and S+6

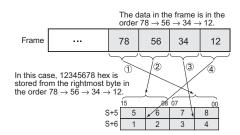

Example Programming


In this example, ESATR(722) is used to overwrite the Number of Contact Operations set value in a DRT2 Slave (I/O Terminal).



When CIO 0.00 and A202.06 (the Communications Port Enabled Flag for port 06) are ON, EXPLT(720) writes the Number of Contact Operations set value for input 2 in a DRT2 Slave (I/O Terminal).


(Service Code = 10 hex,) Class ID = 08 hex, Instance ID = 02 hex, and Attribute ID = 68 hex.

In this case, the Number of Contact Operations is being set to 500 (1F4 hex), so the service data is set to 000001F4.

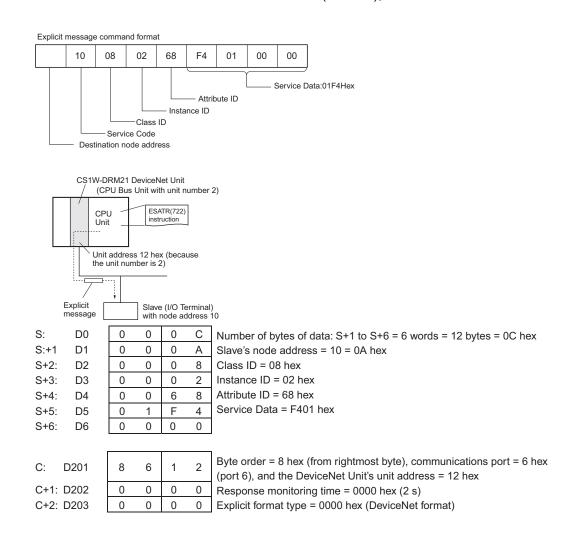

ECHRD

Instruction	Mnemonic	Variations	Function code	Function
EXPLICIT WORD READ	ECHRD	@ECHRD	723	Reads data to the local CPU Unit from another CPU Unit in the network. (The remote CPU Unit must support explicit messages.)

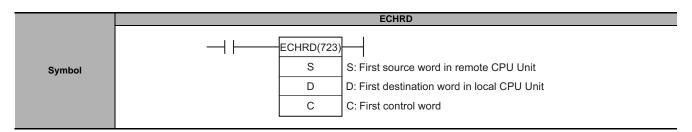

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word in remote CPU Unit	UINT	1
D	First destination word in local CPU Unit	UINT	1
С	First control word	WORD	5


S: First Source Word in Remote CPU Unit

Specifies the leading word address containing the data to be read from the remote CPU Unit.

D: First Destination Word in Local CPU Unit

Specifies the leading word address where the read data will be stored in the local CPU Unit.

C: First Control Word

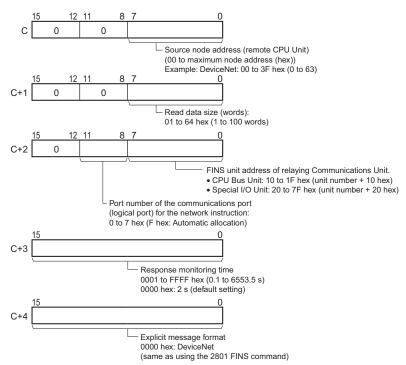

Operand Specifications

Area		Word addresses							Word addresses Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK*	OK	OK				OK				
С																		

^{*} The D bank of the EM Area can be specified only for CJ2 CPU Units. The D bank and higher cannot be specified in the program in a CS/CJ-series CPU Unit even if the source is a CJ2 CPU Unit.

Flags

Name	Label	Operation				
Error Flag	P_ER	 ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C. OFF in all other cases. 				

Related Auxiliary Area Words and Bits

The corresponding Explicit Communications Error Flag will be OFF if the instruction ended normally or ON if an error occurred.

If an error occurred (corresponding flag in A213 ON), the corresponding Communications Port Error Flag can be used to determine whether the explicit message itself was not sent (corresponding flag in A219 ON) or that the message was sent but there was an error in the message (corresponding flag in A219 OFF).

The corresponding Communications Port Completion Code (A203 to A210) will be 0000 hex if the instruction ended normally, an explicit message error code if an explicit messaging error occurred, or a FINS error code if a FINS error occurred.

For details on the general operation of the network instructions, refer to *About Explicit Message Instructions*.

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Explicit Communications Error Flag	A213.00 to A213.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of explicit message communications. The flags will be turned ON if the explicit message was not sent or the message was sent but an error response was returned. The flag status is retained until the next explicit message instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that the explicit message itself was not sent from the corresponding ports (00 to 07) during execution of an explicit message instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. The corresponding word will contain 0000 while the Explicit Communications Error Flag is OFF. The corresponding word will contain a FINS error code when that port's Explicit Communications Error Flag and Communications Port Error Flag are both ON. The corresponding word will contain the appropriate explicit message error code when that port's Explicit Communications Error Flag is ON and the Communications Port Error Flag is OFF. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.

Function


Reads the specified number of words from the first read word (specified in S) in the remote CPU Unit with the node address specified in C, and stores the data in the local CPU Unit memory words beginning at D.

Hint


ECHRD(723) sends an explicit message with the Service Code 1C hex (Byte Data Read).

Example Programming

In this example, ECHRD(723) is used to read the I/O memory of the CJ-series CPU Unit on the DeviceNet network, and store the data in the I/O memory of the local CPU Unit.

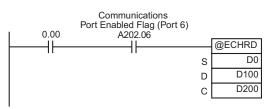


When CIO 0.00 and A202.06 (the Communications Port Enabled Flag for port 06) are ON, ECHRD(723) reads D0 to D2 from the I/O memory of the CJ-series CPU Unit with node address 07 on the DeviceNet Network and stores the data in D100 to D102 of the local CPU Unit.

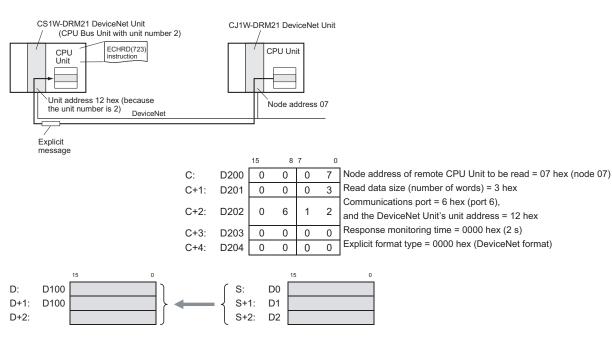

ECHWR

Instruction	Mnemonic	Variations	Function code	Function
EXPLICIT WORD WRITE	ECHWR	@ECHWR	724	Writes data from the local CPU Unit to another CPU Unit in the network. (The remote CPU Unit must support explicit messages.)

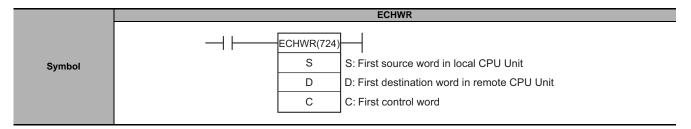

Applicable Program Areas

Area	Function block definitions	Block program areas	lock program areas Step program areas		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	First source word in local CPU Unit	UINT	1
D	First destination word in remote CPU Unit	UINT	1
С	First control word	WORD	5


S: First Source Word in Local CPU Unit

Specifies the leading word address in the local CPU Unit containing the write data.

D: First Destination Word in Remote CPU Unit

Specifies the leading word address of the write destination in the remote CPU Unit.

C: First Control Word

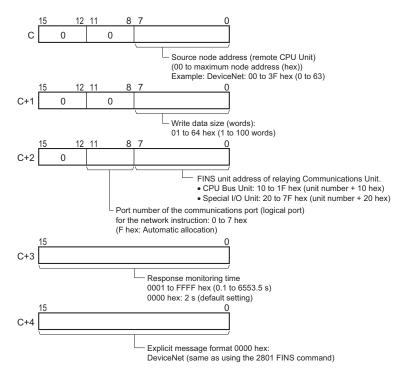

Operand Specifications

Area		Word addresses					DM/EM esses	Con-		Regis	ters	Fla	ıgs	Pulse	TR			
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D	OK	OK	OK	OK	OK	OK	OK	OK*	OK	OK				OK				
С	1																	1

^{*} The D bank of the EM Area can be specified only for CJ2 CPU Units. The D bank and higher cannot be specified in the program in a CS/CJ-series CPU Unit even if the destination is a CJ2 CPU Unit.

Flags

Name	Label	Operation
Error Flag	P_ER	ON if the Communications Port Enabled Flag is OFF for the communications port number specified in C. OFF in all other cases.

Related Auxiliary Area Words and Bits

The corresponding Explicit Communications Error Flag will be OFF if the instruction ended normally or ON if an error occurred.

If an error occurred (corresponding flag in A213 ON), the corresponding Communications Port Error Flag can be used to determine whether the explicit message itself was not sent (corresponding flag in A219 ON) or that the message was sent but there was an error in the message (corresponding flag in A219 OFF).

The corresponding Communications Port Completion Code (A203 to A210) will be 0000 hex if the instruction ended normally, an explicit message error code if an explicit messaging error occurred, or a FINS error code if a FINS error occurred.

For details on the general operation of the explicit message instructions, refer to *About Explicit Message Instructions*.

Name	Address	Operation
Communications Port Enabled Flag	A202.00 to A202.07	These flags are turned ON to indicate that network instructions, including PMCR(260) may be executed for the corresponding ports (00 to 07). A flag is turned OFF when a network instruction is being executed for the corresponding port and turned ON again when the instruction is completed.
Explicit Communications Error Flag	A213.00 to A213.07	These flags are turned ON to indicate that an error has occurred at the corresponding ports (00 to 07) during execution of explicit message communications. The flags will be turned ON if the explicit message was not sent or the message was sent but an error response was returned. The flag status is retained until the next explicit message instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Error Flag	A219.00 to A219.07	These flags are turned ON to indicate that the explicit message itself was not sent from the corresponding ports (00 to 07) during execution of an explicit message instruction. The flag status is retained until the next network instruction is executed. The flag will be turned OFF when the next instruction is executed even if an error occurred previously.
Communications Port Completion Codes	A203 to A210	These words contain the completion codes for the corresponding ports (00 to 07) following execution of a network instruction. The corresponding word will contain 0000 while the Explicit Communications Error Flag is OFF. The corresponding word will contain a FINS error code when that port's Explicit Communications Error Flag and Communications Port Error Flag are both ON. The corresponding word will contain the appropriate explicit message error code when that port's Explicit Communications Error Flag is ON and the Communications Port Error Flag is OFF. The corresponding word will contain 0000 while the network instruction is being executed and the completion code will be written when the instruction is completed. These words are cleared when program execution begins.

Function

Writes the specified number of words beginning at S from the local CPU Unit to the write destination beginning at D in the remote CPU Unit with the node address specified in C.

Hint


ECHWR(724) sends an explicit message with the Service Code 1E hex (Byte Data Write).


Example Programming

In this example, ECHWR(724) is used to write data from the I/O memory of the local CPU Unit to the I/O memory of a CJ-series CPU Unit on the DeviceNet network.



When CIO 0.00 and A202.06 (the Communications Port Enabled Flag for port 06) are ON, ECHWR(724) reads D0 to D2 from the I/O memory of the local CPU Unit and stores the data in D100 to D102 of the CJ-series CPU Unit with node address 07 on the DeviceNet Network

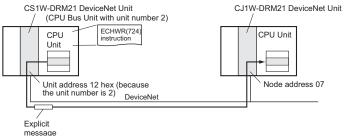

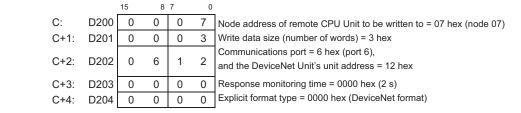



File Memory Instructions

File Memory Instructions

User Instructions for File Memory Operations


Overview

- The FWRIT(701) (WRITE DATA FILE)/TWRIT(704) (WRITE TEXT FILE) instruction can be used to create a data file containing the specified I/O memory data in a Memory Card or EM file memory. It can also add to or overwrite from any point in existing files.
- The FREAD(700) (READ DATA FILE) instruction will read I/O memory data from a specified location from a data file in a Memory Card or EM file memory and write it to the specified portion of I/O memory. It can read from any point in the specified file.


Note These instructions do not transfer the specified file, but rather the specified amount of data beginning at the specified start position in the file.

 The CMND(490) (DELIVER COMMAND) instruction can be executed to issue a FINS command to the CPU Unit itself to perform file operations. File operations such as file formatting, deletion, copying, and renaming can be performed on files in the Memory Card or EM file memory.

FREAD(700)/FWRIT(701): Transfers between I/O memory and file memory

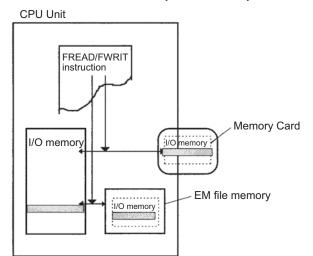

CMND(490): File memory operations

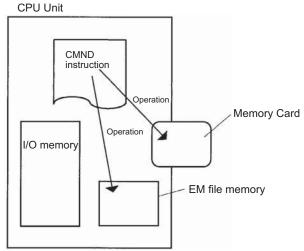

File Memory Instructions READ(700)/FWRIT(701) Instructions

Name	Mnemonic	Description
READ DATA FILE	FREAD(700)	Reads specified data file data or data elements to specified I/O memory.
WRITE DATA FILE	FWRIT(701)	Uses specified I/O memory area data to create a specified data file.
WRITE TEXT FILE (See note.)	TWRIT(704)	Creates a text file from ASCII data in the specified I/O memory data area location.

The operands of the FREAD(700) and FWRIT(701) instructions determine whether binary data (.IOM files), non-delimited or tab-delimited text files (.TXT files), or comma-delimited text files (.CSV) are handled. The operand settings are shown below.

FREAD(700) and FWRIT(701) Operands

Bits in C	Settings	Programming Device limitations
12 to 15	Data type 0: Binary (.IOM) 1: Non-delimited words (.TXT) 2: Non-delimited double-words (.TXT) 3: Comma-delimited words (.CSV) 4: Comma-delimited double-words (.CSV) 5: Tab-delimited words (.TXT) 6: Tab-delimited double-words (.TXT)	0 and 6 hex
08 to 11	Carriage returns 0: No returns 8: Return every 10 fields 9: Return every 1 field A: Return every 2 fields B: Return every 4 fields C: Return every 5 fields D: Return every 16 fields	0 hex or to between 8 and D hex

Hint

Files created in memory using the FWRIT(701) instruction will be dated using the data on the clock built into the CPU Unit.

You cannot execute more than one FREAD(700) or FWRIT(701) instruction, execute a CMND(490) instruction for the local CPU Unit, replace the program using an Auxiliary Area bit, or perform a simple backup at the same time. Perform exclusive control in the program using the File Memory Operation Flag (A343.13).

If an error occurs during FREAD(700) because illegal data is read (data that is not hexadecimal or not 8-digit or 8-digit data), reading will be stopped, but the data read to that point will remain in memory. The File Read Error Flag (A343.10) will turn ON (but the Error Flag (P_ER) will not turn ON.

Related Auxiliary Bits/Words

Name	Address	Operation
Memory Card Type	A343.00 to A343.02	Indicates the type of Memory Card, if any, that is installed.
EM File Memory Format Error Flag	A343.06	ON when a format error occurs in the first EM bank allocated for file memory. OFF when formatting is completed normally.
Memory Card Format Error Flag	A343.07	ON when the Memory Card is not formatted or a formatting error has occurred.
File Write Error Flag	A343.08	ON when an error occurred when writing to the file.
File Write Impossible Flag	A343.09	ON when the data couldn't be written because the file was write-protected or there was insufficient free memory.
File Read Error Flag	A343.10	ON when a file could not be read because its data was corrupted or if it contains the wrong data type.
No File Flag	A343.11	ON when data could not be read because the specified file doesn't exist.
File Memory Operation Flag	A343.13	ON for any file memory operation. OFF when no file memory operation is in progress. • Starting Memory Card detection. • The CPU Unit is processing a FINS command sent to itself using CMND(490). • FREAD(700) or FWRIT(701) is being executed. • The program is being overwritten using an Auxiliary Area control bit. • A simple backup operation is being performed.
Accessing File Flag	A343.14	ON when file data is actually being accessed.
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected. OFF when a Memory Card is not detected.
Number of Items to Transfer	A346 to A347	These words indicate the number of words or fields remaining to be transferred (32 bits). When a binary (.IOM) file is being transferred, this number is decremented each time a word is read. When a text or CSV file is being transferred, this number is decremented each time a field is transferred.

CMND(490): DELIVER COMMAND Instruction

Name	Mnemonic	Operation
DELIVER COMMAND	CMND (490)	CMND(490) can be used to issue a FINS command to the local CPU Unit itself to perform file memory operations such as formatting or deleting files.

Note Make the following settings in CMND(490)'s control words:

Destination network address: 00 hex (local network), Serial port: 0 hex (not used), Destination unit address: 00 hex (CPU Unit), Destination node address: 00 hex (local node), Retries: 0 hex (Set to 0 because retrying is disabled.)

FINS Commands Related to File Memory

Note There are other FINS commands related to file memory that are not shown in the following table that can be executed. Refer to the Communications Command Reference Manual (W342) for details on FINS commands.

CMND(490) cannot be executed to the local CPU Unit if another CMND(490) or file memory instruction is being executed to another CPU Unit, A File Memory Instruction is being executed, the program is being replaced by an Auxiliary Area control bit operation, or a simple backup operation is being executed. Be sure to include the File Memory Operation Flag (A34313) as a normally closed condition to prevent CMND(490) from being executed while another file memory operation is in progress.


If CMND(490) cannot be executed for the local CPU Unit, the Error Flag will be turned ON.

Related Auxiliary Bits/Words

Name	Address	Operation
File Memory Operation Flag	A343.13	ON for any file memory operation. OFF when no file memory operation is in progress. • Starting Memory Card detection. • The CPU Unit is processing a FINS command sent to itself using CMND(490). • FREAD(700) or FWRIT(701) is being executed. • The program is being overwritten using an Auxiliary Area control bit. • A simple backup operation is being performed.
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected. OFF when a Memory Card is not detected.

• Example Program

Example: The following example shows how to use CMND(490) to create a subdirectory in the Memory Card.

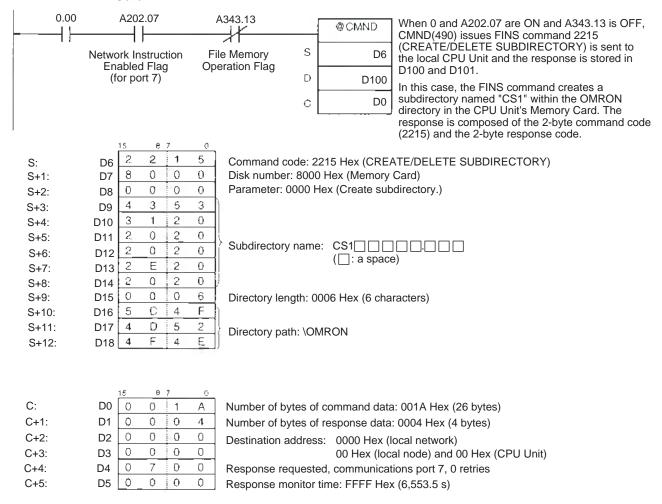

Hint

There are other FINS commands that can be sent to the local PLC in addition to the ones related to file memory operations that are listed in the table above. The File Memory Operation Flag must be used to prevent simultaneous execution of these other FINS commands, too.

Procedure

Reading/Writing a Data File on a Memory Card or Performing a File Memory Operation

- 1. Place a formatted Memory Card into the CPU Unit.
- 2. Using the FWRIT(701) instruction, name a file in the specified I/O memory area and save the data in the Memory Card.

Note To use the TXT or CSV data that was written to a Memory Card in spreadsheet software on a computer, insert the Memory Card into an HMC-AP001 Memory Card Adapter mounted in a PC card slot of the computer and used Windows to read the data.

Use the FREAD(700) instruction to read the data file from the Memory Card to I/O memory in the CPU Unit and then manipulate the file in the Memory Card by using the CMND(490) to send a command to the local CPU Unit.

Reading/Writing a Data File in EM File Memory or Performing Another File Memory Operation

- 1. Convert all banks from the specified bank of the EM Area to file memory using the settings in the PLC Setup.
- **2.** Initialize EM file memory from the CX-Programmer.
- 3. Using the FWRIT(701) instruction, name a file in the specified I/O memory area and save the data in the EM file memory.
 Use the FREAD(700) instruction to read the data file from the EM file memory to I/O memory in

the CPU Unit and then manipulate the file in the Memory Card by using the CMND(490) to send a command to the local CPU Unit.

Precautions when Using Memory Cards

Confirm the following items before using a Memory Card.

(1) Format

Memory Cards are formatted before shipping. There is no need to format them after purchase. To format them once they have been used, always do so in the CPU Unit using the CX-Programmer or a Programming Console.

If a Memory Card is formatted directly in a notebook computer or other computer, the CPU Unit may not recognize the Memory Card. If this occurs, you will not be able to use the Memory Card even if it is reformatted in the CPU Unit.

(2) Number of Files in Root Directory

There is a limit to the number of files that can be placed in the root directory of a Memory Card (just as there is a limit for a hard disk). Although the limit depends on the type and format of the Memory Card, it will be between 128 and 512 files. When using applications that write log files or other files at a specific interval, write the files to a subdirectory rather than to the root directory.

Subdirectories can be created on a computer or by using the CMND(490) instruction. Refer to 3-26-6 DELIVER COMMAND: CMND(490) for a specific example using CMND(490).

(3) Number of Writes

Generally speaking, there is no limit to the number of write operations that can be performed for a flash memory. For the Memory Cards, however, a limit of 100,000 write operations has been set for warranty purposes. For example, if the Memory Card is written to every 10 minutes, over 100,000 write operations will be performed within 2 years.

(4) Minimum File Size

If many small files, such as ones containing only a few words of DM Area data, are stored on the Memory Card, it will not be possible to use the complete capacity of the Memory Card. For example, if a Memory Card with an allocation unit size of 4,096 bytes is used, at least 4,096 bytes of memory will be used for each file regardless of how small the file is. If you save 10 words of DM Area data to the Memory Card, 4,096 bytes of memory will be used even though the actual file size is only 68 bytes. Using files of such a small size greatly reduces the utility rate of the Memory Card. If the allocation unit size is reduced to increase the utility rate, however, the access speed will be reduced.


The allocation unit size of the Memory Card can be checked from a DOS prompt using CHKDSK. The specific procedure is omitted here. Refer to general computer references for more information on allocation unit sizes.

(5) Memory Card Access Precautions

When the PLC is accessing the Memory Card, the BUSY indicator will light on the CPU Unit. Observe the following precautions.

1. Never turn OFF the power supply to the CPU Unit when the BUSY indicator is lit. The Memory Card may become unusable if this is done.

- 2. Never remove the Memory Card from the CPU Unit when the BUSY indicator is lit. Press the Memory Card power OFF button and wait for the BUSY indicator to go out before removing the Memory Card. The Memory Card may become unusable if this is not done.
- **3.** Insert the Memory Card with the label facing to the right. Do not attempt to insert it in any other orientation. The Memory Card or CPU Unit may be damaged.
- **4.** A few seconds will be required for the CPU Unit to recognize the Memory Card after it is inserted. When accessing a Memory Card immediately after turning ON the power supply or inserting the Memory Card, program an NC condition for the Memory Card Recognized Flag (A343.15) as an input condition, as shown below.

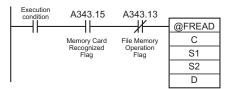

File Memory Instructions

• FWRIT(701)

FWRIT(701) creates a data file containing the specified data from I/O memory. The file format can be either binary or CSV. FWRIT(701) can also be used to add to an existing file or overwrite an existing file from a specified position.

FREAD(700)

FREAD(700) reads the contents of a data file and stores it in the specified area of I/O memory. The file format can be either binary or CSV. FREAD(700) can also be used to read data from a specified position in a file.

TWRIT(704)


TWRIT(704) creates a text file containing ASCII data stored in I/O memory. TWRIT(704) can also be used to add to an existing file or overwrite an existing file.

CMND(490)


CMND(490) can be used to format files, delete files, copy files, and change file names by sending FINS commands for Memory Card operations.

Data structure of Files


For binary format (.IOM), the data will be as follows when 1234 hex, 5678 hex, 9ABC hex, and DEF0 hex are stored in the file ABC.IOM (although the user does not normally need to be concerned with this structure):

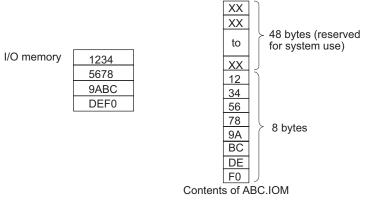

For word CSV format (.CSV), the data will be as follows when 1234 hex, 5678 hex, 9ABC hex, and DEF0 hex are stored in the file ABC.CSV (the basic structure would be the same for text data (.TXT):

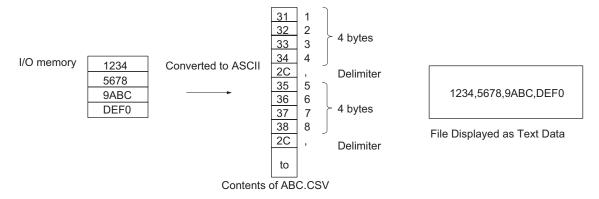

For long-word CSV format (.CSV), the data will be as follows when 1234 hex, 5678 hex, 9ABC hex, and DEF0 hex are stored in the file ABC.CSV (the basic structure would be the same for text data (.TXT):

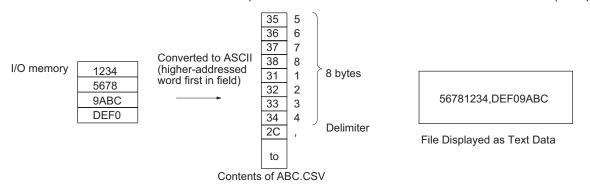

Related Auxiliary Area Words and Bits

Memory Card Detection

Name	Address	Operation
Memory Card Type	A343.00 to A343.02	Contains a binary number indicating the type of Memory Card, if any, that is installed. (0: None, 4: Flash ROM)
Memory Card Format Error Flag	A343.07	ON when the Memory Card is not formatted or a formatting error has occurred.
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected. OFF when a Memory Card is not detected.

• Instruction-related Words and Bits


Name	Address	Operation
File Write Error Flag	A343.08	ON when an error occurred when writing to the file. ON when the file being written is write-protected.
File Write Impossible Flag	A343.09	ON when the data could not be written because there was insufficient free memory.
File Read Error Flag	A343.10	ON when a file could not be read because its data was corrupted or if it contains the wrong data type.
File Missing Flag	A343.11	ON when data could not be read because the specified file does not exist.
File Memory Operation Flag	A343.13	ON for any of the following: • The CPU Unit has sent a FINS command to itself using CMND(490). • FREAD(700) or FWRIT(701) are being executed. • The program is being overwritten using a control bit in memory. • A simple backup operation is being performed.
Accessing File Flag	A343.14	ON when file data is actually being accessed. Use this flag as an execution condition to prevent a file memory instruction from being executed while another is in progress.
Number of Data to Transfer	A346 to A347	The contents of these words indicate the status of data file transfers. When an FREAD(700) or FWRIT(701) instruction is executed, the number of words or fields to be transferred is written to these words. The value is decremented by 1 as each word or field is transferred. A346 contains the rightmost 16 bits and A347 contains the leftmost 16 bits of the 32-bit binary value.

● EM File Memory-related Words and Bits

Name	Address	Operation
EM File Memory Format Error Flag	A343.06	ON when there is a format error in the starting bank of EM file memory.
EM File Format Starting Bank	A344	Contains the starting bank number of the EM Area that has been formatted for use as EM file memory. Contains FFFF when none of the EM Area has been formatted.

FREAD

Instruction	Mnemonic	Variations	Function code	Function		
READ DATA FILE	FREAD	@FREAD	700	Reads the specified data or amount of data from the specified data file in file memory to the specified data area in the CPU Unit.		

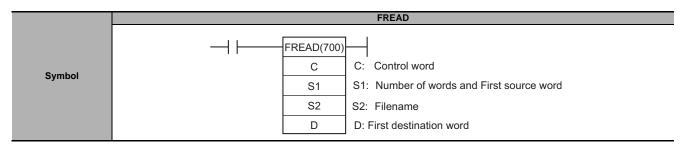


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
С	Control word	UINT	Variable
S1	Number of words and First source word	LWORD	4
S2	Filename	UINT	Variable
D	First destination word	UINT	Variable

C: Control Word

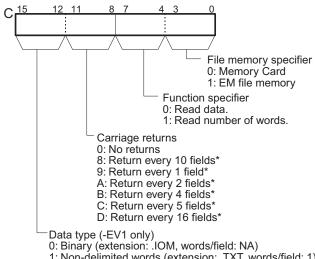

- 1: Non-delimited words (extension: .TXT, words/field: 1)*
- 2: Non-delimited double-words (extension: .TXT., words/field: 2)*
 3: Comma-delimited words (extension: .CSV, words/field: 1)*
- 4: Comma-delimited double-words (extension: .CSV, words/field: 2)*
- 5: Tab-delimited words (extension: .TXT, words/field: 1)*
- 6: Tab-delimited double-words (extension: .,TXT words/field: 2)*
- *: Cannot be set for CS-series CS1 CPU Units prior to V1 ...
- Note 1 Each field will contain 1 word of I/O memory for the word data types and 2 words of I/O memory for the double-word data types.
 - 2 When reading data with carriage returns, bits 00 to 11 of C must be set to between 8 and D hex.
 - 3 With double-words, the first word of data is stored in the higher memory address, e.g., 12345678 would be stored with 1234 in D1 and 5678 in D0.

S1: Number of read words, starting read position

• S1 and S1+1: Number of Read Items

S1+1	S1	
	1	S1+1 contains the leftmost 4 digits and S1 contains the rightmost 4 digits.

S1+1 is the leftmost 4 digits, S1 is the rightmost 4 digits

Data type	Bits 12 to 15 of C	Contents of S1 and S1+1
Binary	0 hex (binary)	Number of words to read from file memory. 00000000 to 3FFFFFF hex
Word	1 hex (non-delimited), 3 hex (comma-delimited), or 5 hex (tab-delimited)	Number of fields to read from file memory, i.e., the number of words to read from file memory. 00000000 to 1FFFFFFF hex
Double-word	2 hex (non-delimited), 4 hex (comma-delimited), or 6 hex (tab-delimited)	Number of fields to read from file memory, i.e., half the number of words to read from file memory. 00000000 to 0FFFFFF hex

S1+2 and S1+3: First Source Word
 The 8-digit hexadecimal value in S1+2 and S1+3 specifies the starting read word from the beginning of the file.

S1+3	S1+2	C1 12 contains the leftmost 4 digits and
į		S1+3 contains the leftmost 4 digits and S1+2 contains the rightmost 4 digits.

S1+3 is the leftmost 4 digits, S1+2 is the rightmost 4 digits

Data type	Bits 12 to 15 of C	Contents of S1+2 and S1+3
Binary	0 hex (binary)	The word at which to begin reading from the beginning of file memory. 00000000 to 3FFFFFFF hex
Word	1 hex (non-delimited), 3 hex (comma-delimited), or 5 hex (tab-delimited)	The field at which to begin reading from the beginning of file memory, i.e., the number of words from the beginning. 00000000 to 1FFFFFFF hex
Double-word	2 hex (non-delimited), 4 hex (comma-delimited), or 6 hex (tab-delimited)	The field at which to begin reading from the beginning of file memory, i.e., half the number of words from the beginning. 00000000 to 0FFFFFFF hex

• S1+2 and S1+3 are used only for text and CVS data with no carriage returns (i.e., bits 08 to 11 of C set to 0 hex) or for binary data. Always set S1+2 and S1+3 to 000000000 hex when reading data with carriage returns (i.e., bits 08 to 11 of C set to between 8 and D hex).

• S1 to S1+3 must be in the same data area. S1 to S1+3 are used only when reading data.

S2: Filename

- S2 is the starting address of the words containing the absolute path and filename in ASCII. Use ASCII a to z, A to Z, and 0 to 9.
- The full path name to the directory containing the data file can be up to 65 characters long, including
 the starting slash (ASCII 5C). The filename can be up to 8 characters long, but null characters (ASCII
 00) are not allowed in the filename because the null character is used to mark the end of the
 character string. Do not include the filename extension; the .IOM extension will be added
 automatically.
- Separate the directory name and file name with ¥ (#5C).

S2	F1	F2
S2+1	F3	F4
S2+38	F73	F74

Store the character string beginning with the leftmost byte in S2. The entire pathname and filename can be up to 74 characters (bytes) long, including the initial slash character and ending null character.

D: First Destination Word

- When data is being read, D specifies the starting address where the data read from file memory will be stored
- When the number of words of data is being read, the number of words is written to D and D+1 in 8digit hexadecimal (00000000 to 7FFFFFF). D contains the rightmost 4 digits and D+1 contains the leftmost 4 digits.

Operand Specifications

Area			W	ord ad	dresse	es			Indirect addre	DM/EM esses	Con-		Registo	ers	Fla	igs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
S1, S2	ОК	OK	OK	OK	OK	OK	OK	OK	OK	ОК				OK				
D									OK	OK								

Flags

Name	Label	Operation
Error Flag	ER	 ON if the file memory specified in C does not exist. ON if the settings in C are not within the specified range. ON if the filename specified in S2 does not satisfy the required conditions. ON if the File Memory Operation Flag was ON. ON if a constant was not specified for C (only for CS-series CS1 CPU Units prior to V1□). ON if data specified for S1 is out of range (all CPU Units except for CS-series CS1 CPU Units prior to V1□). ON if an illegal area is specified for D. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.


Related Auxiliary Area Flags and Words

Name	Address	Operation					
Memory Card Type	A343.00 to A343.02	Contains a binary number indicating the type of Memory Card, if any, that is installed. (0: None, 4: Flash ROM)					
Memory Card Format Error Flag	A343.07	ON when the Memory Card is not formatted or a formatting error has occurred.					
File Read Error Flag	A343.10	ON when a file could not be read because its data was corrupted or if it contains the wrong data type.					
File Missing Flag	A343.11	ON when data could not be read because the specified file does not exist.					
File Memory Operation Flag	A343.13	ON for any of the following: • The CPU Unit has sent a FINS command to itself using CMND(490). • FREAD(700) or FWRIT(701) are being executed. • The program is being overwritten using a control bit in memory. • A simple backup operation is being performed. • Use this flag as an execution condition to prevent a file memory instruction from being executed while another is in progress.					
Accessing File Flag	A343.14	ON when file data is actually being accessed.					
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected.					
EM File Memory Format Error Flag	A343.06	ON when there is a format error in the starting bank of EM file memory.					
Number of Data to Transfer	A346 to A347	The contents of these words indicate the status of data file transfers. When an FREAD(700) or FWRIT(701) instruction is executed, the number of words or fields to be transferred is written to these words. The value is decremented by 1 as each word or field is transferred. A346 contains the rightmost 16 bits and A347 contains the leftmost 16 bits of the 32-bit binary value.					

Function


● Reading Data (Third Digit of C = 0)

FREAD(700) reads the number of words or fields specified in S1 and S1+1 from the file specified in S2 (with filename extension .IOM, .TXT, or .CSV) beginning at the address specified in S1+2 and S1+3. The data is then written to RAM beginning at the word specified in D.

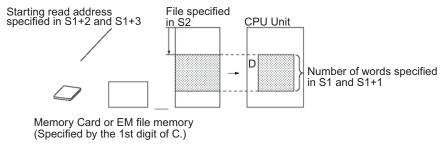

Reading Number of Words of Data (Third Digit of C=1)

FREAD(700) finds the number of words in the file specified in S2 (with filename extension .IOM) and writes that 8-digit hexadecimal value to D and D+1.

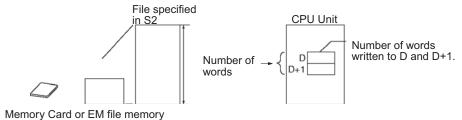

Hint


- When another file memory related operation (file memory format, file copy, file delete, etc.) is executed from the ladder program, send the file memory related FINS command to the local CPU Unit with a CMND(490) instruction.
- Write the path name and filename in ASCII beginning with the leftmost byte of S2, as shown in the following example for \ABC\XYZ.IOM. (The .IOM extension is added automatically.)

S2	"\"	"A"	S2	5C	41	
S2+1	"B"	"C"	S2+1	42	43	
S2+2	"\"	"X"	S2+2	5C	58	
S2+3	"Y"	"Z"	S2+3	59	5A	
S2+4	NUL		S2+4	00		

Precaution


- During normal instruction processing, FREAD(700) is used only to start reading file memory. The instruction execution times given toward the end of this manual are thus the times required to start reading, not to complete it. Actual reading (transfer) is performed by the file access processing in peripheral servicing. Therefore, once FREAD(700) has been executed, reading is continuously executed even if the execution condition is OFF in following cycles.
 - The time required to complete data transfer for FREAD(700) will depend on the amount of data being transferred, the service time allocated to file access processing, and other conditions. As a guideline, the transfer times for a cycle time of 10 ms for a file in the root directory with the default service time settings will be 0.92 s for 1,024 words and 4.64 s for 9,999 words.
- When transfer has been completed, the File Memory Operation Flag (A343.13) will turn OFF. This flag can be used for exclusive control of file memory instructions.
- Data is stored in order by absolute internal memory addresses, so the output data will overwrite data
 in the next data area if it exceeds the capacity of the data area specified in D. See Precautions for
 more details.
- When FREAD(700) is executed, the number of words (or fields) specified in S1 and S1+1 is written to A346 and A347 (Number of Data to Transfer) and this value is decremented by 1 as each word or field is transferred. The content of these words can be checked to verify that the expected number of words or fields were transferred.
- If the specified number of words or fields exceeds the number of words in the data file, the data in the file will be transferred normally and no error will occur.
- If the specified starting word exceeds the number of words in the data file, the File Read Error Flag (A343.10) will be turned ON and the file data will not be read.
- If the specified file or directory does not exist, the File Missing Flag (A343.11) will be turned ON and the file data will not be read.
- The File Memory Operation Flag (A343.13) will be turned ON when FREAD(700) is executed. An error will occur and the instruction will not be executed if A34313 is already ON.
- The File Read Error Flag (A343.10) will be turned ON and the instruction will not be executed if the
 specified file contains the wrong data type or the file data is corrupted. For text or CSV files, the
 character code must be hexadecimal data and delimiters must be every 4 digits for word data and
 every 8 digits for double-word data. Data will be read up to the point where an illegal character is
 detected.

A few seconds is required for the CPU Unit to detect a Memory Card after it has been inserted. If a
Memory Card is going to be accessed soon after power is turned ON or after a Memory Card is
inserted, use the Memory Card Detected Flag (A343.15) in a NO input condition as shown below to
be sure that the Memory Card has been detected.

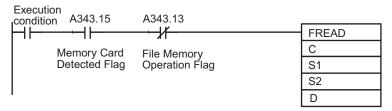


Example Programming

When CIO 0.00 turns ON in the following example, FREAD(700) reads 10 words of data from file \ABC\XYZ.IOM starting with the beginning of the file + 5 words and outputs these 10 words to D400 through D409.

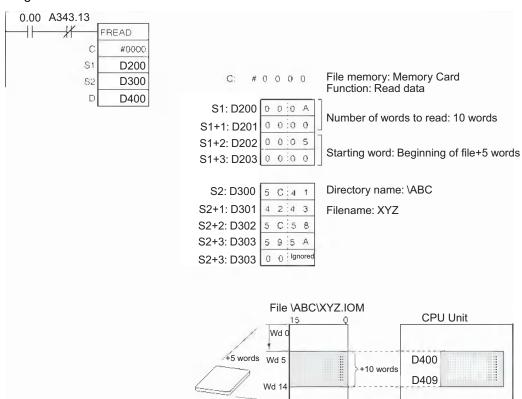

FWRIT

Instruction	Mnemonic	Variations	Function code	Function	
WRITE DATA FILE	FWRIT	@FWRIT	701	Overwrites or appends data in the specified data file in file memory with the specified data from the data area in the CPU Unit.	

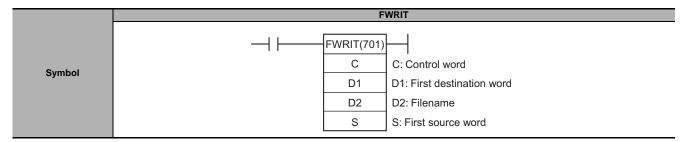


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Description Data type				
С	Control word	UINT	Variable			
D1	First destination word	LWORD	4			
D2	Filename	UINT	Variable			
S	First source word	UINT	Variable			

C: Control Word

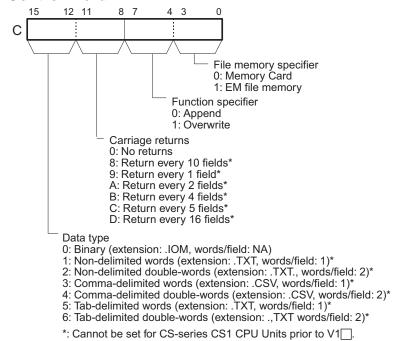

- Note 1 Each field will contain 1 word of I/O memory for the word data types and 2 words of I/O memory for the double-word data types.
 - **2** With double-words, the first word of data is read from the higher memory address, e.g., 12345678 would be written with 1234 from D00001 and 5678 from D00000.

D1: Number of write words, starting write position

• D1 and D1+1: Number of Write Items

D1+1	D1	Dava soutsing the lefturest Adiabased
	:	D1+1 contains the leftmost 4 digits and
i	i	■ D1 contains the rightmost 4 digits.

Data type	Bits 12 to 15 of C	Contents of D1 and D1+1					
Binary	0 hex (binary)	Number of words to write from file memory. 00000000 to 3FFFFFF hex					
Word	1 hex (non-delimited), 3 hex (comma-delimited), or 5 hex (tab-delimited)	Number of fields to write from file memory, i.e., the number of words to write from file memory. 00000000 to 1FFFFFFF hex					
Double-word	2 hex (non-delimited), 4 hex (comma-delimited), or 6 hex (tab-delimited)	Number of fields to write from file memory, i.e., half the number of words to write from file memory. 00000000 to 0FFFFFFF hex					

D1+2 and D1+3: First Destination Word
 The 8-digit hexadecimal value in D1+2 and D1+3 specifies the starting write word from the beginning of the file.

D1+3	D1+2	
		D1+3 contains the leftmost 4 digits and D1+2 contains the rightmost 4 digits.

Data type	Bits 12 to 15 of C	Contents of D1+2 and D1+3
Binary	0 hex (binary)	The word at which to begin writing from the beginning of file memory. 00000000 to 3FFFFFFF hex
Word	1 hex (non-delimited), 3 hex (comma-delimited), or 5 hex (tab-delimited)	The field at which to begin writing from the beginning of file memory, i.e., the number of words from the beginning. 00000000 to 1FFFFFFF hex
Double-word	2 hex (non-delimited), 4 hex (comma-delimited), or 6 hex (tab-delimited)	The field at which to begin writing from the beginning of file memory, i.e., half the number of words from the beginning. 00000000 to 0FFFFFFF hex

• D1+2 and D1+3 are used only when overwriting data, and only 1) For text and CVS data with no carriage returns (i.e., bits 08 to 11 of C set to 0 hex) or 2) for binary data. Always set D1+2 and D1+3 to 000000000 hex when writing data with carriage returns (i.e., bits 08 to 11 of C set to between 8 and D hex).

• D1 to D1+3 must be in the same data area.

D2: Filename

- D2 is the starting address of the words containing the absolute path and filename in ASCII. Use ASCII a to z, A to Z, and 0 to 9.
- The full path name to the directory containing the data file can be up to 65 characters long, including
 the starting slash (ASCII 5C). The filename can be up to 8 characters long, but null characters (ASCII
 00) are not allowed in the filename because the null character is used to mark the end of the
 character string. Do not include the filename extension; the .IOM, .TXT, or .CSV extension is added
 automatically. Fixed at .IOM and thus not specified.
- Separate the directory name and file name with ¥ (#5C).

D2	F1	F2	Store the character string beginning
D2+1	F3	F4	with the leftmost byte in D2. The entire pathname and filename can
			be up to 74 characters (bytes) long,
D2+38	F73	F74	including the initial slash character and ending null character.
			ending null character.

S: First Source Word

S specifies the starting address containing the data that will be written to the file memory.

Operand Specifications

Area	Word addresses					ndirect DM/EM Registers Flags F				Registers				Flags Pu		TR		
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С											OK							
D1, D2 S	ОК	OK	OK	OK	OK	OK	OK	OK	ОК	ОК				ОК				

Flags

Name	Label	Operation
Error Flag	ER	 ON if the file memory type specified in C does not exist. ON if the settings in C are not within the specified range. ON if the filename specified in D2 does not satisfy the required conditions. ON if the File Memory Operation Flag was ON. ON if a constant was not specified for C (only for CS-series CS1 CPU Units prior to V1). ON if data specified for D1 is out of range (all CPU Units except for CS-series CS1 CPU Units prior to V1). ON if an illegal area is specified for S. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.

Related Auxiliary Area Flags and Words


Name	Address	Operation							
Memory Card Type	A343.00 to A343.02	Contains a binary number indicating the type of Memory Card, if any, that is installed. (0: None, 4: Flash ROM)							
Memory Card Format Error Flag	A343.07	ON when the Memory Card is not formatted or a formatting error has occurred.							
File Write Error Flag	A343.08	ON when an error occurred when writing to the file.							
File Write Impossible Flag	A343.09	ON when the data could not be written because the file was write-protected or there was insufficient free memory.							
No File Flag	A343.11	ON when the specified directory does not exist when writing a file.							
File Memory Operation Flag	A343.13	ON for any of the following: The CPU Unit has sent a FINS command to itself using CMND(490). FREAD(700) or FWRIT(701) are being executed. The program is being overwritten using a control bit in memory. A simple backup operation is being performed.							
Accessing File Flag	A343.14	ON when file data is actually being accessed.							
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected. 0 (OFF) when a Memory Card cannot be detected.							
EM File Memory Format Error Flag	A343.06	ON when there is a format error in the starting bank of EM file memory.							
Number of Data to Transfer	A346 to A347	The contents of these words indicate the status of data file transfers. When an FWRIT(701) instruction is executed, the number of words or fields to be transferred is written to these words. The value is decremented by 1 as each word is transferred. A346 contains the rightmost 16 bits and A347 contains the leftmost 16 bits of the 32-b binary value.							

Function

Overwriting Data in an Existing File (Third Digit of C=1)

FWRIT(701) uses data area data starting at the word specified in S to overwrite file memory data in the specified data type. It overwrites the number of words or fields specified in D1 and D1+1 in the file specified in D2 (with filename extension .IOM, .TXT, or .CVS) starting at the address specified in D1+2 and D1+3.


In this case, the data will be overwritten up to the capacity of the existing file. Any data that exceeds the capacity of the existing file will not be written.

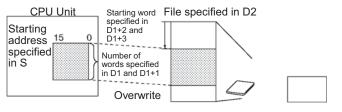

Memory Card or EM file memory (Specified by the 1st digit of C.)


Appending Data to an Existing File (Third Digit of C=0)

FWRIT(701) appends data area data starting at the word specified in S to a data file in file memory in the specified data type. It appends the number of words or field specified in D1 and D1+1 to the file specified in D2 (with filename extension .IOM, .TXT, or .CVS).

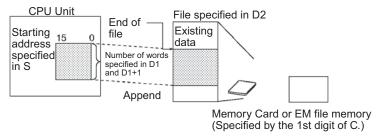

Creating a New File with Source Data

If the file specified in D2 does not exist, FWRIT(701) creates a new file with that name and filename extension (.IOM, .TXT, or .CVS) and writes the specified source data in the specified data type starting at the beginning of the file. In this case, it does not matter if appending to overwriting data is specified.

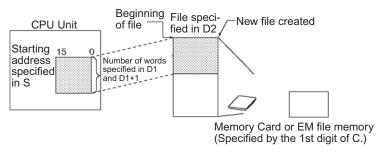

Data format, carriage return, carriage return position, and number of write fields

- If delimiting is specified, the specified of delimiter is added after every word for word data types and after every two words for double-word data types.
- If non-delimited words or double-words are specified, the data for all fields is written continuously
 without any delimiters. (The code for a comma is added for comma-delimiting and the code for a tab
 is added for tab-delimiting.)
- If carriage returns are specified, a carriage return will be added after each set of the specified number of words. If no carriage returns is specified, the data will be written continuously without carriage returns.
- The number of fields specified in the write size is read from I/O memory and written to file memory in the above format.
- If the specified directory does not exist, the File Missing Flag (A34311) will be turned ON and the file data will not be written.

Example: Write the pathname and filename in ASCII beginning with the leftmost byte of D2, as shown in the following example for \ABC\XYZ.IOM. (The extension is added automatically.)


D2	'\'	'A'	D2	5C	41
D2+1	'B'	'C'	→D2+1	42	43
D2+2	'\'	'X'	D2+2	5C	58
D2+3	Υ	'Z'	D2+3	59	5A
D2+4	NUL		→D2+4	00	

Hint

 When another file memory related operation (file memory format, file copy, file delete, etc.) is executed from the ladder program, send the file memory related FINS command to the local CPU Unit with a CMND(490) instruction.

Precaution


- During normal instruction processing, FWRIT(701) is used only to start writing of the file memory. The instruction execution times given toward the end of this manual are thus the times required to start writing, not to complete it. Actual writing (transfer) is performed by the file access processing in peripheral servicing. Therefore, once FWRIT(701) has been executed, writing is continuously executed even if the execution condition is OFF in following cycles.
 - The time required to complete data transfer for FWRIT(701) will depend on the amount of data being transferred, the service time allocated to file access processing, and other conditions. As a guideline, the transfer times for a cycle time of 10 ms for a file in the root directory with the default service time settings will be 1.97 s (new file) or 1.33 s (existing file) for 1,024 words and 6.64 s (new file) or 6.12 s (existing file) for 9,999 words.
- When transfer has been completed, the File Memory Operation Flag (A343.13) will turn OFF. This flag can be used for exclusive control of file memory instructions.
- The source data is read from absolute internal memory addresses in RAM, so the entire block of data will be read even if the data spans two or more data areas. For example, if the first destination address is in the Work Area but the amount of data exceeds the capacity of this area, FWRIT(701) will continue reading data at the beginning of the next area (in this case, the Timer Area). When FWRIT(701) is executed, the number of words or fields specified in D1 and D1+1 is written to A346 and A347 (Number of Data to Transfer) and this value is decremented by 1 as each word or field is transferred. The content of these words can be checked to verify that the expected number of words or fields were transferred.
- The File Memory Operation Flag (A343.13) is turned ON when FWRIT(701) is executed. An error will occur and the instruction will not be executed if A343.13 is already ON.
- If the specified starting word exceeds the number of words in the data file, the File Write Error Flag (A343.08) will be turned ON and the data will not be written.
- The File Write Impossible Flag (A343.09) will be turned ON and the instruction will not be executed if data could not be written because the file was write-protected or there was not enough free memory.
- The File Write Error Flag (A343.08) will be turned ON and the instruction will not be executed if the specified file is not the correct data type or the file data has been corrupted.
- A few seconds is required for the CPU Unit to detect a Memory Card after it has been inserted. If a Memory Card is going to be accessed soon after power is turned ON or after a Memory Card is inserted, use the Memory Card Detected Flag (A343.15) in a NO input condition as shown below to be sure that the Memory Card has been detected.

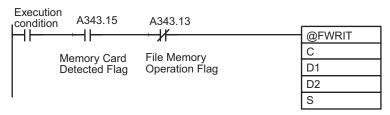

 The source data words starting at S are accessed and read during the peripheral servicing after FWRIT(701) is executed. If the source data is changed before the file memory write processing is completed, the changed data may be written to the file.

TWRIT

Instruction	Mnemonic	Variations	Function code	Function
WRITE TEXT FILE	TWRIT	@TWRIT	704	Reads ASCII data from I/O memory and stores that data in the Memory Card as a text file (writing a new file or appending a file).

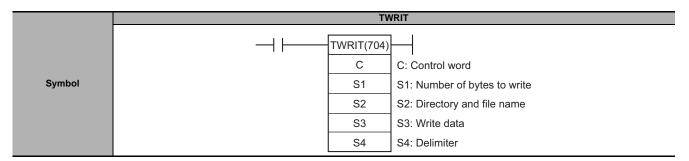

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
С	Control word	UINT	1
S1	Number of bytes to write	UINT	1
S2	Directory and file name	WORD	1
S3	Write data	WORD	1
S4	Delimiter	WORD	1

C: Control Word

• #0000: Append file.

• #0001: Create new file or overwrite.

S1: Number of write bytes

Specifies the number of bytes to write in the range 0 to 255 decimal or 0000 to 00FF hexadecimal.

S2: First directory/filename word

- Specifies the first word of the words containing the file's directory path and filename. Input the path and filename in ASCII text.
- Directory name:

The directory name can be 1 to 65 characters long. If the name is less than 65 characters, do not pad with spaces. Specify the absolute path from the root directory's \ (#5C) character.

· Filename:

Filename identifier: The identifier can be 1 to 8 characters long. If the name is less than 8 characters, do not pad with spaces. Add a NUL character (#00) at the end of the filename. (The NUL character is not included as one of the 8 characters.)

- Filename extension: None
- Separate the directory name and filename with a \ (#5C) delimiter.

Note The words containing the directory path and filename (starting at S2) must be in the same data area.



Store the character string beginning with the leftmost byte in S2, in the order leftmost byte \rightarrow rightmost byte and lower word address \rightarrow higher word address. The directory name and filename can be up to 74 bytes long, including the NULL (00 Hex) at the end of the filename.

S3: First write data word

Specifies the first word (I/O memory data area address) containing the data to be written.

Note It is not necessary for all of the source words (starting at S3) to be in the same data area. The data will be read in PLC memory address order and written as a file.

S4: Delimiter character

Specifies the delimiter characters (up to 2 bytes) for the write data in ASCII. If a delimiter is not required, specify #0000.

Up to 2 bytes can be specified. When 1 byte is being specified, set the rightmost byte to #00.

Typical delimiters (all hexadecimal):

#2C00: Comma (1 byte) #0A00: Line feed (1 byte)

#0D0A: Carriage return/Line feed (2 bytes)

#0C00: New page (1 byte)

#0900: Tab (1 byte)

Operand Specifications

Area	Aroa		Word addresses							Indirect DM/EM addresses		Con-	Registers			Flags			TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits	
_	С											ОК							
_	S1	ок	к ок	ок	ок	ОК	ок	ОК	ок	OK	ок ок	OIX			ОК				
	S2, S3	OIX		OK	OIC	OIX	OIX	OIX	OIX	OK	OK								
	S4											OK							

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if there is no Memory Card. ON if C is not within the specified range of 0000 or 0001. ON if the filename specified at S2 does not meet the required conditions. ON if the File Memory Operation Flag is ON. ON if the data area specified for S3 is an invalid area. With the CS1D CPU Units: ON if the active and standby CPU Units could not be synchronized. OFF in all other cases.

Related Auxiliary Area Flags and Words

Name	Label	Operation						
Memory Card Format Error Flag	A343.07	ON when the Memory Card is not formatted or a formatting error has occurred.						
File Write Error Flag	A343.08	ON when an error occurred when writing to the file.						
File Write Impossible Flag	A343.09	ON when the data could not be written because the file was write-protected or there was insufficient free memory.						
No File Flag	A343.11	ON when the specified directory does not exist when writing a file.						
File Memory Operation Flag	A343.13	ON for any of the following, otherwise OFF: The CPU Unit has sent a command to itself using CMND(490). FREAD(700), FWRIT(701), or TWRIT(704) is being executed. The program is being overwritten using a control bit in memory. A simple backup operation is being performed.						
Accessing File Flag	A343.14	ON when file data is actually being accessed.						
Memory Card Detected Flag	A343.15	ON when a Memory Card has been detected. OFF when a Memory Card could not be detected.						
Number of Data Items to Transfer	A346 and A347	The contents of these words indicate the status of data file transfers. When an file write instruction is executed, the number of bytes to be transferred is written to these words. The value is decremented by 1 as each byte is transferred. A346 contains the rightmost 16 bits and A347 contains the leftmost 16 bits of the 32-bit binary value.						

Function

TWRIT(704) writes the number of bytes of data specified in S1, starting from the word specified in S3, to a text file (filename.TXT) in the Memory Card with the filename specified in S2.

A delimiter can be specified in S4 and attached to the end of the text file. The created text file can be referenced later with a text editor.


· Creating a New File

Set C = 0001 and specify a new filename to create a new file.

· Appending an Existing File

Set C = 0000 to append data to an existing file.

Set C = 0001 and specify an existing filename to overwrite an existing file.

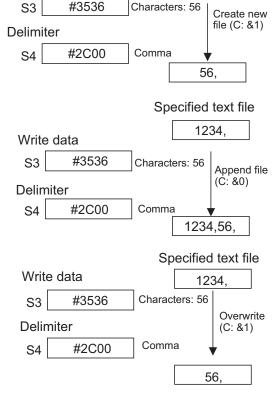

When Writing the String 12345678

#3132

#3334

#3536

#3738

S3

S3+1

S3+2

S3+3

Characters: 12

Characters: 34

Characters: 56

Characters: 78

Write data

#3132

#3334

#2C00

Characters: 12

Characters: 34

Specified text file

Specified text file

No file

Comma

1234

S3

Delimiter

S4

Write data

S3+1

Data Format


 Store the data in the I/O memory area in order from leftmost byte → rightmost byte and lower word address → higher word address, starting from the leftmost byte of S3.

Directory Name and Filename (S2)

- Specify the directory name as the absolute path from the root directory (\). The root directory's \ (#5C) delimiter must be entered. The directory name can be up to 65 characters long. If there are fewer than 65 characters, it is not necessary to add spaces after the directory name. Use \ (#5C) delimiters to separate directory levels. The allowed characters are "a to z", "A to Z", and "0 to 9", in ASCII.
- Set the filename as 1 to 8 ASCII characters, using only the "a to z", "A to Z", and "0 to 9" characters. If there are fewer than 8 characters, it is not necessary to add spaces after the filename. Always insert an NULL (#00) character after the filename.
- The filename extension is fixed to ".TXT", so it is not specified.

- Store the directory name and filename in ASCII and in order from leftmost byte → rightmost byte and lower word address → higher word address, starting from the leftmost byte of S2.
- If the specified directory does not exist, the No File Flag (A343.11) will be turned ON and the file will not be overwritten.

Example: Example: Writing to Directory \ABC and Filename XYZ

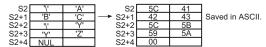

Hint


 When another file memory related operation (file memory format, file copy, file delete, etc.) is executed from the ladder program, send the file memory related FINS command to the local CPU Unit with a CMND(490) instruction.

Precaution

- During normal instruction execution processing, TWRIT(704) is used only to start the writing of the file memory. The instruction execution times given toward the end of this manual are thus the times required to start writing, not to complete it.
 - Actual writing (transfer) is performed by the file access processing in peripheral servicing. Therefore, once TWRIT(704) has been executed, writing is continuously executed even if the execution condition is OFF in following cycles.
 - The time required to complete data transfer for TWRIT(704) will depend on the amount of data being transferred, the service time allocated to file access processing, and other conditions. As a guideline, if the cycle time is 10 ms and the file is in the root directory, it will take about 440 ms (new file) or 260 ms (existing file) to write 100 bytes, and about 450 ms (new file) or 270 ms s (existing file) to write 255 bytes. These guideline values will vary widely depending on the type of Memory Card being used and the number of files in the Memory Card.
- When transfer has been completed, the File Memory Operation Flag (A343.13) will turn OFF. This flag can be used for exclusive control of file memory instructions.
- The source data is read from absolute PLC memory addresses in RAM, so the entire block of data will be read even if the data spans two or more data areas. For example, if the first source address is in the Work Area but the amount of data exceeds the capacity of this area, TWRIT(704) will continue reading data at the beginning of the next area (in this case, the Timer Area).
- When TWRIT(704) is executed, the "number of write bytes" specified in S1 is written to A346 and A347 (Number of Data Items to Transfer) and this value is decremented by 1 as each byte is transferred. The content of these words can be checked to verify that the expected number of bytes were transferred.
- The File Memory Operation Flag (A343.13) is turned ON when TWRIT(704) is executed. An error will occur and the instruction will not be executed if A343.13 is already ON.
- The File Write Impossible Flag (A343.09) will be turned ON and the instruction will not be executed if data could not be written because the file was write-protected or there was not enough free memory.
- A few seconds is required for the CPU Unit to detect a Memory Card after it has been inserted. If a
 Memory Card is going to be accessed soon after power is turned ON or after a Memory Card is
 inserted, use the Memory Card Detected Flag (A343.15) in a NO input condition as shown in the
 example below to be sure that the Memory Card has been detected.

Example Programming


This example records the daily production total (number of units produced) in D100 and D101 in 8-digit hexadecimal. Every day at 23:00, the program converts the daily production total to BCD format and appends the file LOG.TXT in the Memory Card's root directory.

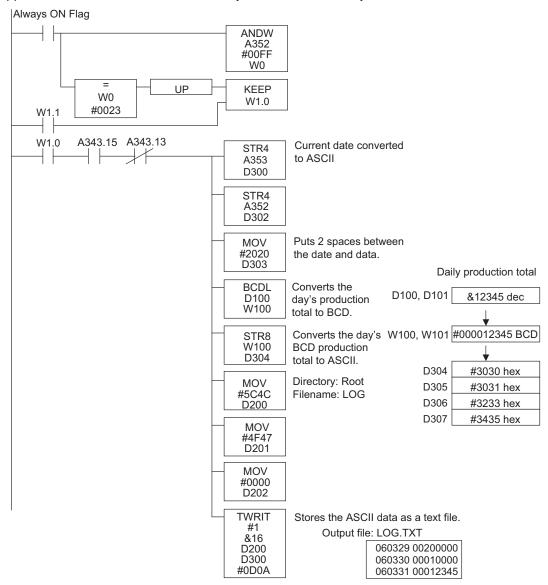

Display Instructions

MSG

Instruction	Mnemonic	Variations	Function code	Function				
Display Instructions	MSG	@MSG	046	Reads the specified sixteen words of extended ASCII and displays the message on a Peripheral Device such as a Programming Console.				

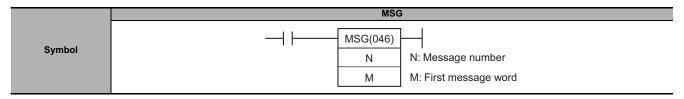

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	Message number	UINT	1
M	First message word	UINT	Variable

N: Message number

The message number must be 0000 to 0007 hexadecimal (or 0 to 7 decimal).

M: First message word

When displaying a message, M specifies the address of the first of the words containing the ASCII message. When clearing a message, M can be any hexadecimal constant (0000 through FFFF).

Operand Specifications

Area		Word addresses							Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits I	bits
N	ок	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ок	ОК	OK		ОК				
М	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				

Flags

Name	Label	Operation
Error Flag	ER	ON if the content of S is not 0000 to 0007 hexadecimal. OFF in all other cases.

Function

When the execution condition is ON, MSG(046) registers the 16 words of ASCII data (up to 32 characters including the null character) from M to M+15 for the message number specified by N. Once a message has been registered, a Programming Console can be connected and the message will be displayed after any error messages that have been generated.

After a message has been registered, the message display can be changed by overwriting the message in the message storage area.


To clear a message that has been registered, execute MSG(046) with S set to the message number of the message you want to clear and N set to a constant (0000 to FFFF).

A message registered during program execution will be retained even if program execution is stopped, but all messages will be cleared when the program is executed again.


Precautions

- Registered messages are updated each time MSG(046) is executed.
- All message characters after the null character (00) are converted to spaces in the Programming Console display.
- The character stored in the leftmost byte is displayed before the character in the rightmost byte.

Example Programming

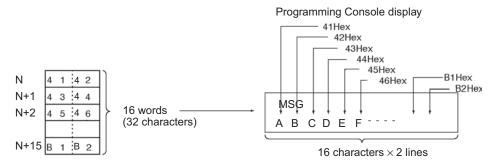

When CIO 0.00 turns ON in the following example, the 16 words of data in D100 through D115 are read as the 32 characters of ASCII data for message number 7 and displayed at the Peripheral device.

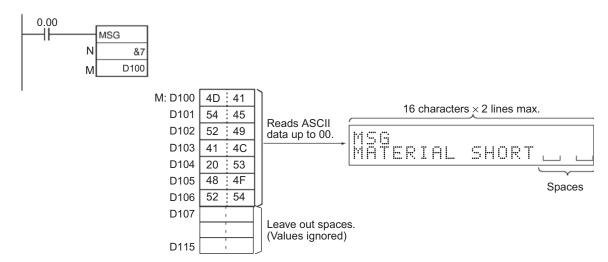


• ASCII

100							F	our	leftr	nos	t bit	S					arr v
		0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Ε	F
T _X	0			Sp	0	@	Р	ę	р				-	タ	111		
	1			1	1	Α	Q	а	q			0	ア	チ	L		
	2			7.7	2	В	R	b	r				1	ツ	×		
	3			#	3	C	S	С	\$			J	ウ	テ	Ŧ		
	4			\$	4	D	T	d	t				I	1	ヤ		
S	5			%	5	E	U	е	u				オ	ナ	ユ		
t bit	6			&	6	F	V	f	V			ヲ	カ	=	日		
mos	7				7	G	W	g	w			ア	牛	\exists	ラ		
ight	8			(8	Н	Х	h	Х			1	ク	ネ	リ		İ
Four rightmost bits	9)	9	T	Υ	i	У			ウ	ケ	1	ル		
H.	Α			*	:	J	Z	j	Z			I		11	レ		
	В			+	;	K	[k	{			才	サ	Ł			
	С			7	<	L	¥	1	[1			+7	シ	フ	ワ		
2	D			-	=	М]	m			1	ユ	ス	$\overline{\ }$	ン		
	E				>	N	^	n	~			∃	セ	ホ	*		
	F			/	?	0		0				ツ	ソ	₹	à		

Clock Instructions

CADD/CSUB

Instruction	Mnemonic	Variations	Function code	Function
CALENDAR ADD	CADD	@CADD	730	Adds time to the calendar data in the specified words.
CALENDAR SUBTRACT	CSUB	@CSUB	731	Subtracts time from the calendar data in the specified words.

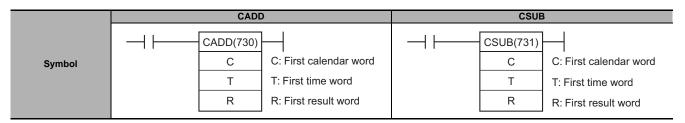


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
С	First calendar word	WORD	3
Т	First time word	DWORD	2
R	First result word	WORD	3

CADD C through C+2: Calendar Data

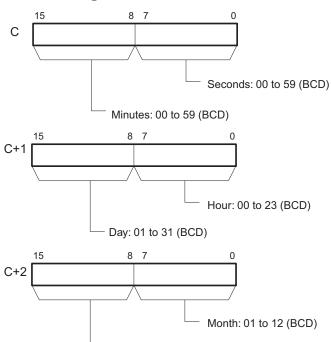


T and T+1: Time Data

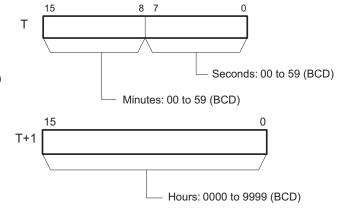

R through R+2: Result Data


Year: 00 to 99 (BCD)

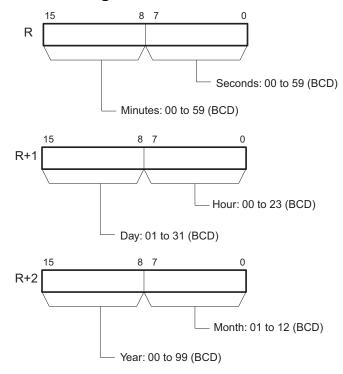


CSUB C through C+2: Calendar Data


C Seconds: 00 to 59 (BCD)


Minutes: 00 to 59 (BCD)

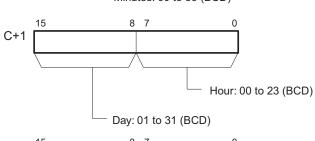

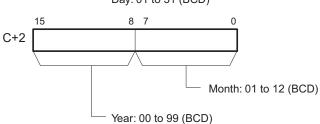


R through R+2: Result Data

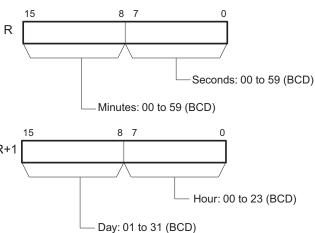

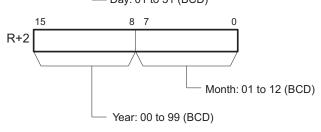

T and T+1: Time Data

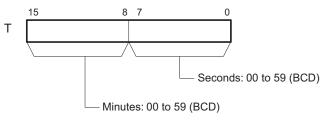



Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
С																		_
Т	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK			OK				
R																		

Flags

Name	Label	Operation
Error Flag	ER	 ON if the calendar data in C through C+2 is not within the specified ranges. ON if the time data in T and T+1 is not within the specified ranges. OFF in all other cases.
Equal Flag	=	 ON when the result of a CSUB instruction is 0 OFF in all other cases.

Function

• CADD

CADD(730) adds the calendar data (words C through C+2) to the time data (words T and T+1) and outputs the resulting calendar data to R through R+2.

	<u> 15 8</u>	7 0			
С	Minutes	Seconds			
C+1	Day	Hour			
C+2	Year	Month			
	-	+			
	15 8	7 0			
Т	Minutes	Seconds			
T+1	Hoi	ours			
		ļ			
	15 8	7 0			
R	Minutes	Seconds			
R+1	Day	Hour			
R+2	Year	Month			

CSUB


CSUB(731) subtracts the time data (words T and T+1) from the calendar data (words C through C+2) to and outputs the resulting calendar data to R through R+2.


	<u> 15 8</u>	1 0			
С	Minutes	Seconds			
C+1	Day	Hour			
C+2	Year	Month			
	15 8	- 7 0			
Т		Seconds			
T+1	Но	Hours			
		ļ			
	15 8	7 0			
R	Minutes	Seconds			
R+1	Day	Hour			
R+2	Year	Month			

Example Programming

CADD


When CIO 0.00 turns ON in the following example, the calendar data in D100 through D102 (year, month, day, hour, minutes, seconds) is added to the time data in D200 and D201 (hours, minutes, seconds) and the result is output to D300 through D302.

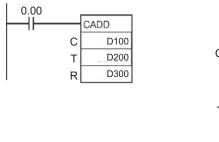

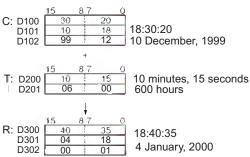

CSUB


When CIO 0.00 turns ON in the following example, the time data in D200 and D201 (hours, minutes, seconds) is subtracted from the calendar data in D100 through D102 (year, month, day, hour, minutes, seconds) and the result is output to D300 through D302.

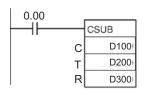

	15	8.7	Ü	
C: D100	30		20	18:30:20
D101	10		18	
D102	98		07	10 July, 1998

SEC

Instruction	Mnemonic	Variations	Function code	Function
HOURS TO SECONDS	SEC	@SEC	065	Converts time data in hours/minutes/seconds format to an equivalent time in seconds only.

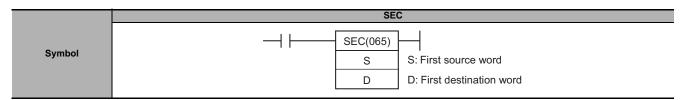


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size	
S	First source word	DWORD	2	
D	First destination word	DWORD	2	

S and S+1: Source Data (hours/minutes/seconds)

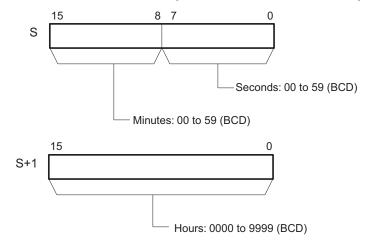

D and D+1: Result Data (seconds only)

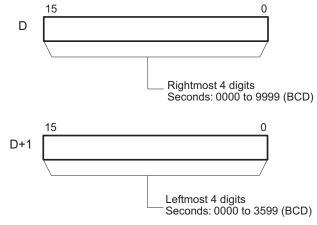

Note S, S+1, D and D+1 must be in the same data area.

Operand Specifications


Area		Word addresses					Indirect DM/EM addresses Cor			on- Registers			Fla	ıgs	Pulse	TR		
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK			ОК				
D	OK.	OK	OK.	OK	OK	OK	OK	OK	OK	OK				OK .				


Flags

Name	Label	Operation
Error Flag	ER	 ON when S+1 (time data) is not BCD data ON if the minutes data in S (bits 08 to 15) is not BCD and in the range 00 to 59. ON if the seconds data in S (bits 00 to 07) is not BCD and in the range 00 to 59. OFF in all other cases.
Equal Flag	=	 ON if the content of D is 0000 after the operation. OFF in all other cases.

Function


SEC(065) converts the 8-digit BCD hours/minutes/seconds data in S and S+1 to 8-digit BCD seconds-only data and outputs the result to D and D+1.

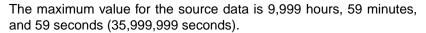


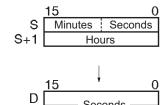

Example Programming


When CIO 0.00 turns ON in the following example, the hours/minutes/seconds data in D200 and D201 (34 hours, 17 minutes, and 36 seconds) is converted to seconds-only data and the result is output to D100 and D101.

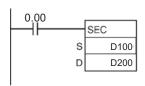

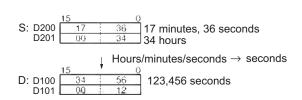

HMS

Instruction	Mnemonic	Variations	Function code	Function
SECONDS TO HOURS	HMS	@HMS	066	Converts seconds data to an equivalent time in hours/minutes/seconds format.

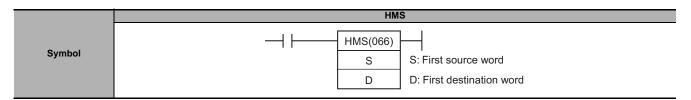


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S	First source word	DWORD	2
D	First destination word	DWORD	2

S and S+1: Source Data (seconds)

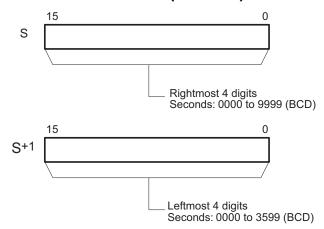

D and D+1: Result Data (hours/minutes/seconds)

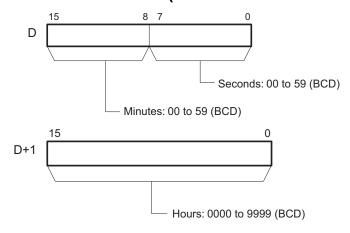

Note S, S+1, D and D+1 must be in the same data area.

Operand Specifications

Area	Word addresses					dresses Indirect DM/EM addresses Con-					Con-		Regis	ters	Fla	ags	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	ОК	ОК	ОК	OK	ОК	OK	ОК	ОК	ОК	OK	OK			OK				
D	UK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				


Flags

Name	Label	Operation
Error Flag	ER	 ON if the seconds data in S and S+1 is not BCD and in the range 0 to 35,999,999. OFF in all other cases.
Equal Flag	=	ON if the content of D is 0000 after the operation. OFF in all other cases.

Function


HMS(066) converts the 8-digit BCD seconds-only data in S and S+1 to 8-digit BCD hours/minutes/seconds data and outputs the result to D and D+1.


The maximum value for the source data is 35,999,999 seconds (9,999 hours, 59 minutes, and 59 seconds).

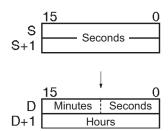

Example Programming


When CIO 0.00 turns ON in the following example, the seconds data in D100 and D101 (123,456 seconds) is converted to hours/minutes/seconds data and the result is output to D200 and D201.

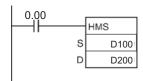

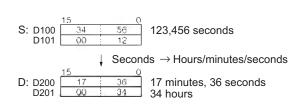

DATE

Instruction	Mnemonic	Variations	Function code	Function
CLOCK ADJUSTMENT	DATE	@DATE	735	Changes the internal clock setting to the setting in the specified source words.

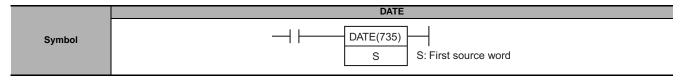


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	LWORD	4

S through S+3: New Clock Setting

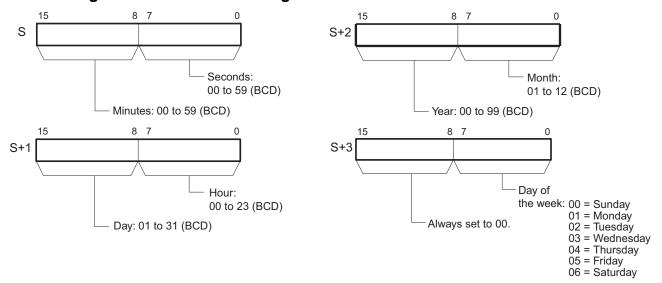

Note S through S+3 must be in the same data area.

Operand Specifications

Area		Word addresses						Indirect DM/EM addresses Con-				Registers			ıgs	Pulse	TR	
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags


Name	Label	Operation
Error Flag	ER	 ON if the new clock setting in S through S+3 is not within the specified range. OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Operation
Clock data	A351 to A354	A351.00 to A351.07: Seconds (00 to 59) (BCD) A351.08 to A351.15: Minutes (00 to 59) (BCD) A352.00 to A352.07: Hours (00 to 23) (BCD) A352.08 to A352.15: Day of the month (01 to 31) (BCD) A353.00 to A353.07: Month (01 to 12) (BCD) A353.08 to A353.15: Year (00 to 99) (BCD) A354.00 to A354.07: Day of the week (00 to 06) (BCD) 00: Sunday, 01: Monday, 02: Tuesday, 03: Wednesday, 04: Thursday, 05: Friday, 06: Saturday

Function

DATE(735) changes the internal clock setting according to the clock data in the four source words. The new internal clock setting is immediately reflected in the Calendar/Clock Area (A351 to A354).

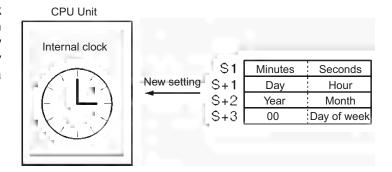

Hint


The internal clock setting can also be changed from a Peripheral Device or the CLOCK WRITE FINS command (0702).


Precaution

An error will not be generated even if the internal clock is set to a non-existent date (such as November 31).

Example Programming

When CIO 0.00 turns ON in the following example, the internal clock is set to 20:15:30 on Thursday, October 9, 1998.

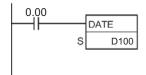

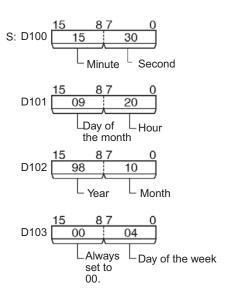

Debugging Instructions

TRSM

Instruction	Mnemonic	Variations	Function code	Function
Trace Memory Sampling	TRSM		045	When TRSM(045) is executed, the status of a preselected bit or word is sampled and stored in Trace Memory.

	TRSM
Symbol	TRSM(045)

Applicable Program Areas


Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	ОК	OK	

Flags

There are no flags affected by this instruction.


Function

Before TRSM(045) is executed, the bit or word to be traced must be specified with a Peripheral Device. Each time that TRSM(045) is executed, the current value of the specified bit or word is sampled and recorded in order in Trace Memory. The trace ends when the Trace Memory is full. The contents of Trace Memory can be monitored from a Peripheral Device when necessary.

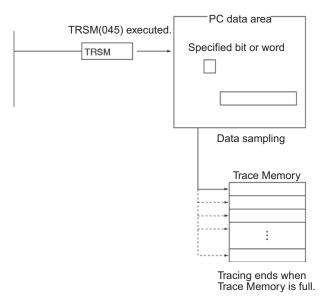

- This instruction only indicates when the specified data will be sampled. All other settings and data trace operations are set with a Peripheral Device.
- TRSM(045) does not require an execution condition and is always executed as if it had an ON execution condition. Connect TRSM(045) directly to the left bus bar.
- Use TRSM(045) to sample the value of the specified bit or word at the point in the program when the instruction's execution condition is ON. If the instruction's execution condition is ON every cycle, the specified bit or word's value will be stored in Trace Memory every cycle.

It is possible to incorporate two or more TRSM(045) instructions in a program. In this case, the value of the same specified bit or word will be stored in Trace Memory each time that one of the TRSM(045) instructions is executed.

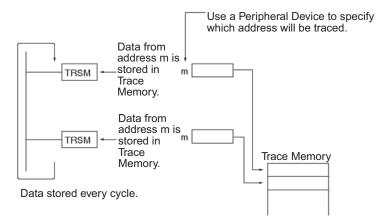

Refer to the Peripheral Device's Operation Manual for details on data tracing.


Hint

The other two ways to control data sampling are sampling at the end of each cycle and sampling at a specified interval (independent of the cycle time).

The data-tracing operations performed with the Peripheral Device are summarized in the following list.

- 1. Set the following parameters with the Peripheral Device.
 - a) Set the address of the bit or word to be traced.
 - b) Set the trigger condition. One of the three following conditions can control when data stored into Trace Memory is valid.
 - i) The Trace Start Bit goes from OFF to ON.
 - ii) A specified bit goes from OFF to ON.
 - iii) The value of a specified word matches the set value.
 - c) Set the sampling interval to "TRSM" for sampling at the execution of TRSM(045) in the program.
 - d) Set the delay.
- 2. When the Sampling Start Bit is turned from OFF to ON with the Peripheral Device, the specified data will begin being sampled each time that TRSM(045) is executed and the sampled data will be stored in Trace Memory. The Trace Busy Flag (A508.13) will be turned ON at the same time.
- 3. When the trigger condition (Trace Start Bit ON, specified bit ON, or value of specified word matching set value) is met, the sampled data will be valid beginning with the next sample plus or minus the number of samples set with the delay setting. The Trace Trigger Monitor Flag (A508.11) will be turned ON at the same time.
- 4. The trace will end when TRSM(045) has been executed enough times to fill the Trace Memory. When the trace ends, the Trace Completed Flag (A508.12) will be turned ON and the Trace Busy Flag (A508.13) will be turned OFF.
- 5. Read the contents of Trace Memory with the Peripheral Device.

Timing Chart

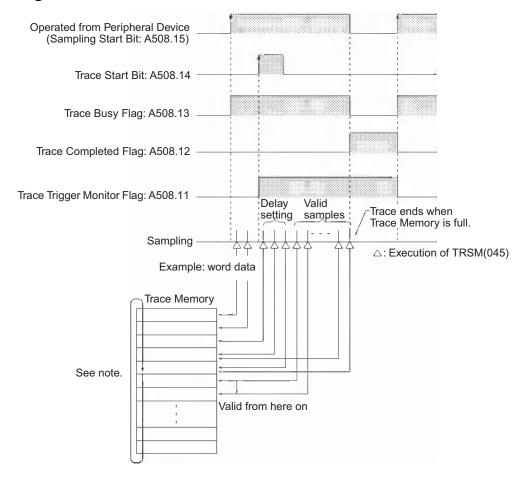

Note Trace Memory has a ring structure. Data is stored to the end of the Trace Memory area and then wraps to the beginning of the area, ending just before the first valid data sample.

Precaution

TRSM(045) is processed as NOP(000) when data tracing is not being performed or when the sampling interval set in the parameters of data tracing is not set to sample on TRSM(045) instruction execution.


Do not turn the Sampling Start Bit (A508.15) ON or OFF from the program. This bit must be turned ON and OFF from a Peripheral Device.

When a TRSM instruction is used between JMP and JME and the JMP condition is OFF, the TRSM instruction will not be executed.

Failure Diagnosis Instructions

FAL

Instruction	Mnemonic	Variations	Function code	Function
FAILURE ALARM FAL @FAI		@FAL	006	Generates or clears user-defined non-fatal errors. Non-fatal errors do not stop PLC operation.

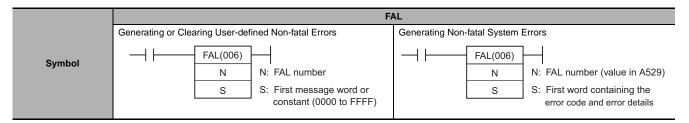

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size	
N	FAL number	Constants only	1	
S	First message word or constant / First word containing the error code and error details	WORD	Variable	

• Generating or Clearing User-defined Non-fatal Errors

Note The value of operand N must be different from the content of A529 (the system-generated FAL/FALS number).

	Generates a non-fatal error	Clears all non-fatal errors
N	1 to 511 (These FAL numbers are shared with FALS numbers.)	0
S	Word address: Generates a non-fatal error with the corresponding FAL number. The 16-character ASCII message contained in S through S+7 will be displayed on the Programming Device. #0000 to #FFFF: Generates a non-fatal error with the corresponding FAL number (no message).	#FFFF: Clears all non-fatal errors. #0001 to #01FF: Clears the non-fatal error with the corresponding FAL number. Other: Clears the most serious non-fatal error.

Generating Non-fatal System Errors

Note The value of operand N must be the same as the content of A529 (the system-generated FAL/FALS number).

	Generates a non-fatal error
N	1 to 511 (These FAL numbers are shared with FALS numbers.)
S	Error code that will be generated. (See Function below.)
S+1	Error details code that will be generated. (See Function below.)

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
N											ОК							
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK .			OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if N is not within the specified range of 0 to 511 decimal. ON if a non-fatal system error is being generated, but the specified error code or error details code is incorrect. OFF in all other cases.

Related Auxiliary Area Words and Bits

Auxiliary Area Words/Flags for User-defined Errors Only

Name	Address	Operation
FAL Error Flag	A402.15	ON when an error is generated with FAL(006).
Executed FAL Number Flags	A360.01 to A391.15	When an error is generated with FAL(006), the corresponding flag will be turned ON. Flags A360.01 to A391.15 correspond to FAL numbers1 to 511 decimal.

Auxiliary Area Words/Flags for System Errors Only

Name	Address	Operation					
System-generated FAL/FALS	A529	A dummy FAL/FALS number is used when a system error is generated with FAL(006). Set the same					
number		dummy FAL/FALS number in this word (0001 to 01FF hex, 1 to 511 decimal).					

Auxiliary Area Words/Flags for both User-defined and System Errors

Name	Address	Operation
Error Log Area	A100 to A199	The Error Log Area contains the error codes and time/date of occurrence for the most recent 20 errors, including errors generated by FAL(006).
Error code	A400	When an error occurs its error code is stored in A400. The error codes for FAL numbers 0001 to 01FF are 4101 to 42FF, respectively. If two or more errors occur simultaneously, the error code of the most serious error will be stored in A400.

Clearing Non-fatal Errors without a Programming Device

Clearing User-defined Non-fatal Errors

When FAL(006) is executed with N set to 0, non-fatal errors can be cleared. The value of S will determine the processing, as shown in the following table.

S	Process
&1 to &511 (0001 to 01FF hex)	The FAL error of the specified number will be cleared.
FFFF hex	All non-fatal errors (including system errors) will be cleared.
0200 to FFFE hex or word specification	The most serious non-fatal error (even if it is a non-fatal system error) that has occurred. When more than one FAL error has occurred, the FAL error with the smallest FAL number will be cleared.

Clearing Non-fatal System Errors

There are two ways to clear non-fatal system errors generated with FAL(006).

- Turn the PLC OFF and then ON again.
- When keeping the PLC ON, the system error must be cleared as if the specified error had actually occurred.


Function

Generating Non-fatal User-defined Errors

The following table shows the error codes and FAL Error Flags for FAL(006).

FAL number	1 to 511 decimal
FAL error codes	4101 to 42FF
Executed FAL Number Flags	A360.01 to A391.15

When FAL(006) is executed with N set to an FAL number (&1 to &511) that is not equal to the content of A529 (the system-generated FAL/FALS number), a non-fatal error will be generated with that FAL number and the following processing will be performed:

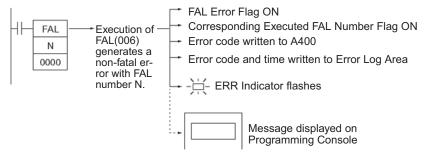

- 1. The FAL Error Flag (A402.15) will be turned ON. (PLC operation will continue.)
- 2. The Executed FAL Number Flag will be turned ON for the corresponding FAL number. Flags A360.01 to A391.15 correspond to FAL numbers 0001 to 01FF (1 to 511).
- 3. The error code will be written to A400. Error codes 4101 to 42FF correspond to FAL numbers 0001 to 01FF (1 to 511).
- 4. The error code and the time that the error occurred will be written to the Error Log Area (A100 through A199).


Note The error record will not be written to the Error Log Area if the *Don't register FAL to error log* Option in the PLC Setup is selected.

- 5. The ERR Indicator on the CPU Unit will flash.
- 6. If a word address has been specified in S, the message beginning at S will be registered (displayed on the Programming Device).

Note If a fatal error or a more serious non-fatal error occurs at the same time as the FAL(006) instruction, the more serious error's error code will be written to A400.

Generating Non-fatal System Errors

When FAL(006) is executed with N set to an FAL number (&1 to &511) that is equal to the content of A529 (the system-generated FAL/FALS number), a non-fatal error will be generated with the error code and error details code specified in S and S+1. The following processing will be performed at the same time:

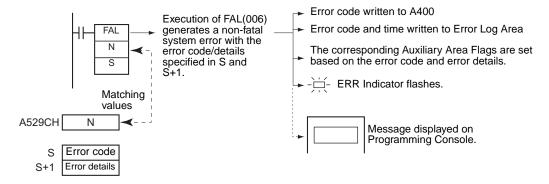

- 1. The specified error code will be written to A400.
- 2. The error code and the time that the error occurred will be written to the Error Log Area (A100 through A199).
- 3. The appropriate Auxiliary Area Flags are set based on the error code and error details.
- 4. The ERR Indicator on the CPU Unit will flash and PLC operation will continue.
- The non-fatal error message for the specified system error will be displayed on the Programming Console.
- **Note 1** FAL(006) can be used to generate non-fatal errors from the system when debugging the program. For example, a system error can be generated intentionally to check whether or not error messages are being displayed properly at an interface such as a Programmable Terminal (PT).
 - 2 The value of A529 (the system-generated FAL/FALS number) is a dummy FAL number (FAL, FALS, and FPD numbers are shared.) used when a non-fatal error is generated intentionally by the system. This number is a dummy FAL number, so it does not change the status of the Executed FAL Number Flags (A360.01 to A391.15) or the error code.
 - When it is necessary to generate two or more system errors (fatal and/or non-fatal errors), different errors can be generated by executing the FAL/FALS/FPD instructions more than once with the same values in A529 and N. but different values in S and S+1.
 - **3** If a more serious error (including a system-generated fatal error or FALS(007) error) occurs at the same time as the FAL(006) instruction, the more serious error's error code will be written to A400.
 - 4 To clear a system error generated by FAL(006), turn the PLC OFF and then ON again. The PLC can be kept ON, but the same processing will be required to clear the error as if the specified error had actually occurred.

Refer to the CS/CJ Series Operation Manual or the CJ2 CPU Unit Hardware Operation Manual (W472).

The following table shows how to specify error codes and error details in S and S+1.

		·
Error name	S	S+1
Interrupt Task Error	008B hex	 Bit 15 OFF: Interrupt task error Bits 00 to 14: Task number of interrupt task where error occurred. Bit 15 ON: Interrupt task execution conflicted with Special I/O Unit refreshing Bits 00 to 14: Unit number of Special I/O Unit with refreshing conflict
Basic I/O Error	009A hex	Rack location of Unit where error occurred Bits 08 to 15: Rack number (binary) of Rack where the affected Unit is mounted Bits 00 to 07: Slot number (binary) of slot where the affected Unit is mounted
PLC Setup Error	009B hex	PLC Setup Error Location 0000 to FFFF hex
I/O Table Verification Error	00E7 hex	(not fixed)
Non-fatal Inner Board Error	02F0 hex	Inner Board Error Information Bits 00 to 03: Invalid Bits 04 to 15: Error defined by the Inner Board
CPU Bus Unit Error	0200 hex	CPU Bus Unit's unit number: 0000 to 000F hex
Special I/O Unit Error	0300 hex	Special I/O Unit's unit number:0000 to 005F hex or 00FF hex (unit number undetermined)
SYSMAC BUS Error	00A0 hex	SYSMAC BUS Master Unit's unit number: 0000 or 0001 hex
Battery Error	00F7 hex	(not fixed)
CPU Bus Unit Setup Error	0400 hex	CPU Bus Unit's unit number: 0000 to 000F hex
Special I/O Unit Setup Error	0500 hex	Special I/O Unit's unit number:0000 to 005F hex


Disabling Error Log Entries of User-defined Errors

Normally when FAL(006) generates a user-defined error, the error code and the time that the error occurred are written to the Error Log Area (A100 through A199). It is possible to set the PLC Setup so that user-defined errors generated by FAL(006) are not recorded in the Error Log.

Note Even though the error will not be recorded in the Error Log, the FAL Error Flag (402.15) will be turned ON, the corresponding flag in the Executed FAL Number Flags (A360.01 to A391.15) will be turned ON, and the error code will be written to A400.

Disable Error Log entries for user-defined FAL(006) errors when you want to record only the system-generated errors. For example, this function is useful during debugging if the FAL(006) instructions are used in several applications and the Error Log is becoming full of user-defined FAL(006) errors.

The following screen capture shows the PLC Setup setting from the CX-Programmer.

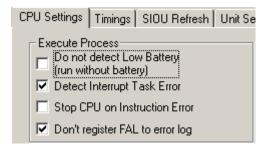

• The following table shows the PLC Setup setting from the Programming Console.

Programming Console setting address	Word 129 Bit 15				
Name	FAL Error Log Registration				
Settings	0: Record FAL Errors in Error Log. 1: Do not record FAL Errors in Error Log.				
Default setting	0: Record FAL Errors in Error Log.				
Times that PLC Setup setting is read	Every cycle (when an FAL Error occurs)				

Note Even if PLC Setup word 129 bit 15 is set to 1 (Do not record FAL Errors in Error Log.), the following errors will be recorded:

- Fatal errors generated by FALS(007)
- · Non-fatal errors from the system
- · Fatal errors from the system
- Non-fatal errors from the system generated intentionally with FAL(006) or FPD(269)
- Fatal errors from the system generated intentionally with FALS(007)

Displaying Messages with Non-fatal User-defined Errors

- If S is a word address and an ASCII message has been stored at S, that message will be displayed at the Peripheral Device when FAL(006) is executed. (If a message is not required, set S to a constant.)
- The message beginning at S will be registered when FAL(006) is executed. Once the message is registered, it will be displayed when a Programming Console is connected.
- An ASCII message up to 16 characters long can be stored in S through S+7. The leftmost (most significant) byte in each word is displayed first.
- The end code for the message is the null character (00 hexadecimal).
- All 16 characters in words S to S+7 will be displayed if the null character is omitted.
- If the contents of the words containing the message are changed after FAL(006) is executed, the message will change accordingly.


Example Programming

Generating a Non-fatal Error

When CIO 0.00 is ON in the following example, FAL(006) will generate a non-fatal error with FAL number 31 and execute the following processes.

- 1. The FAL Error Flag (A402.15) will be turned ON.
- 2. The corresponding Executed FAL Number Flag (A361.15) will be turned ON.
- 3. The corresponding error code (411F) will be written to A400.
- 4. The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 5. The ERR Indicator on the CPU Unit will flash.
- 6. The ASCII message in D100 to D107 will be displayed at the Peripheral Device.


Note If a message is not required, specify a constant for S.

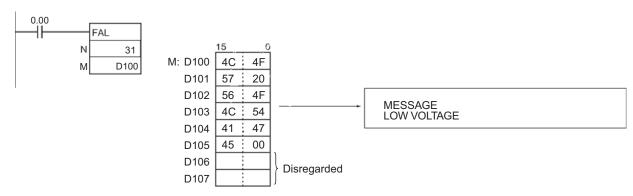

Note If two or more errors occur at the same time, the error code of the most serious error (with the highest error code) will be stored in A400.

Clearing a Particular Non-fatal Error

When CIO 0.01 is ON in the following example, FAL(006) will clear the non-fatal error with FAL number 31, turn OFF the corresponding Executed FAL Number Flag (A361.15), and turn OFF the FAL Error Flag (A402.15).

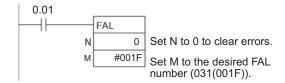


Clearing All Non-fatal Errors

When CIO 0.02 is ON in the following example, FAL(006) will clear all of the non-fatal errors, turn OFF the Executed FAL Number Flags (A360.01 to A391.15), and turn OFF the FAL Error Flag (A402.15).



Clearing the Most Serious Non-fatal Error


When CIO 0.03 is ON in the following example, FAL(006) will clear the most serious non-fatal error that has occurred and reset the error code in A400. If the cleared error was originally generated by FAL(006), the corresponding Executed FAL Number Flag and the FAL Error Flag (A402.15) will be turned OFF.

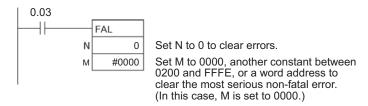

Generating a Non-fatal System Error


When CIO 0.00 is ON in the following example, FAL(006) will generate a CPU Bus Unit Setup Error for unit number 1. In this case, dummy FAL number 10 is used and the corresponding value (000A hex) is stored in A529.

- 1. The specified error code (0400) will be written to A400 if it is the most serious error.
- 2. The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 3. The CPU Bus Unit Setup Error Flag (A402.03) and CPU Bus Unit Setup Error Flag for unit number 1 (A427.01) will be turned ON.
- 4. The CPU Unit's ERR Indicator will flash.
- 5. A message (CPU BU ST ERR 01) will be displayed at the Programming Console indicating that an error has occurred with CPU Bus Unit 1.

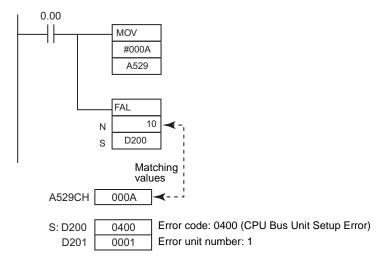

FALS

Instruction	Mnemonic	Variations	Function code	Function		
SEVERE FAILURE ALARM	FALS		007	Generates user-defined fatal errors. Fatal errors stop PLC operation.		

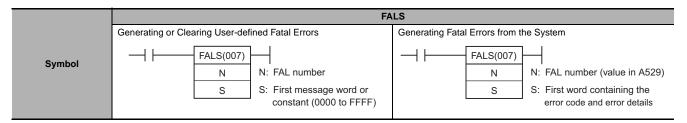

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
N	FAL number	Constants only	1		
S	First message word or constant / First word containing the error code and error details	WORD	Variable		

Generating User-defined Fatal Errors

Note The value of operand N must be different from the content of A529 (the system-generated FAL/FALS number).

	Generates a non-fatal error
N	1 to 511 (These FALS numbers are shared with FALS numbers.)
S	Specifies the first of eight words containing an ASCII message to be displayed on the Programming Device. Specify a constant (0000 to FFFF) if a message is not required.

Generating Fatal Errors from the System

The following table shows the function of the operands.

Note The value of operand N must be the same as the content of A529 (the system-generated FAL/FALS number).

	Generates a non-fatal error
N	1 to 511 (These FALS numbers are shared with FAL numbers.)
S	Error code that will be generated. (See Description below.)
S+1	Error details code that will be generated. (See Description below.)

Operand Specifications

	Area		Word addresses								Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR
	Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
_	N											ОК							
	S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	UK			OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if N is not within the specified range of 0001 to 01FF (1 to 511 decimal). ON if a fatal system error is being generated, but the specified error code or error details code is incorrect. OFF in all other cases.

Related Auxiliary Area Words and Bits

Auxiliary Area Words/Flags for User-defined Errors Only

Name	Address	Operation						
FALS Error Flag	A401.06	ON when an error is generated with FALS(007).						

Auxiliary Area Words/Flags for System Errors Only

Name	Address	Operation
System-generated FAL/FALS number	A529	A dummy FAL/FALS number is used when a system error is generated with FALS(007). Set the same dummy FAL/FALS number in this word (0001 to 01FF hex, 1 to 511 decimal).

Auxiliary Area Words/Flags for both User-defined and System Errors


Name	Address	Operation
Error Log Area	A100 to A199	The Error Log Area contains the error codes and time/date of occurrence for the most recent 20 errors, including errors generated by FALS(007).
Error code	A400	When an error occurs its error code is stored in A400. The error codes for FALS numbers 0001 to 01FF (1 to 511 decimal) are C101 to C2FF, respectively. Note If two or more errors occur simultaneously, the error code of the most serious error will be stored in A400.

Function

Generating Fatal User-defined Errors

FALS number	1 to 511
FALS error codes	C101 TO C2FF

When FALS(007) is executed with N set to an FALS number (1 to 511) that is not equal to the content of A529 (the system-generated FAL/FALS number), a fatal error will be generated with that FALS number and the following processing will be performed:

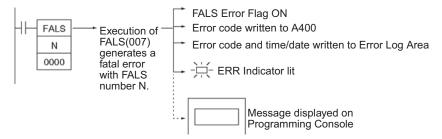

- 1. The FALS Error Flag (A401.06) will be turned ON. (PLC operation will stop.)
- 2. The error code will be written to A400. Error codes C101 to C2FF correspond to FALS numbers 0001 to 01FF (1 to 511).


Note If an error more serious than the FALS(007) instruction (one with a higher error code) has occurred, A400 will contain the more serious error's error code.

- The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 4. The ERR Indicator on the CPU Unit will be lit.
- 5. If a word address has been specified in S, the ASCII message beginning at S will be registered (displayed on the Peripheral Device).
- **Note 1** If an error that is more serious (including fatal system errors) than an error registered with this instruction occurs simultaneously, the error code of that error will be set in error code A400.
 - 2 The end code for the message is the null character (00 hexadecimal). All 16 characters in words S to S+7 will be displayed if the null character is omitted.
 - 3 N must between 0001 and 01FF. An error will occur and the Error Flag will be turned ON if N is outside of the specified range.

4 When a user-defined fatal error is registered, the I/O memory and output status from output units will be as indicated below.

		I/O memory	Output status from output units		
IOM Hold Bit (A500.12).	ON	Hold	OFF		
IOW Hold Bit (A300.12).	OFF	Hold	OFF		

Generating Non-fatal System Errors

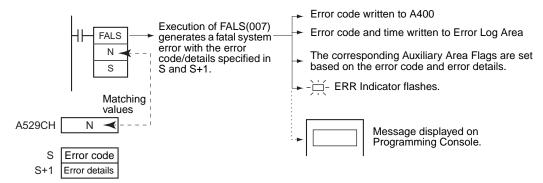

When FALS(007) is executed with N set to an FAL number (1 to 511) that is equal to the content of A529 (the system-generated FAL/FALS number), a fatal error will be generated with the error code and error details code specified in S and S+1. The following processing will be performed at the same time:

- 1. The specified error code will be written to A400.
- 2. The error code and the time that the error occurred will be written to the Error Log Area (A100 through A199).
- 3. The appropriate Auxiliary Area Flags are set based on the error code and error details.
- 4. The ERR Indicator on the CPU Unit will light and PLC operation will be stopped.
- 5. The fatal error message for the specified system error will be displayed on the Programming Console.
- Note 1 The value of A529 (the system-generated FAL/FALS number) is a dummy FAL number (FAL, FALS, and FPD numbers are shared.) used when a non-fatal error is generated intentionally by the system. This number is a dummy FAL number, so it is not reflected in the error code.

 When it is necessary to generate two or more system errors, different errors can be generated by execut-

When it is necessary to generate two or more system errors, different errors can be generated by executing the FAL/FALS/FPD instructions more than once with the same values in A529 and N, but different values in S and S+1.

- 2 If a more serious error (including a system-generated fatal error or another FALS(007) error) occurs at the same time as the FALS(007) instruction, the more serious error's error code will be written to A400.
- 3 To clear a system error generated by FALS(007), turn the PLC OFF and then ON again. The PLC can be kept ON, but the same processing will be required to clear the error as if the specified error had actually occurred. Refer to information on troubleshooting in the CS Series or CJ Series Operation Manual or the CJ2 CPU Unit Hardware Operation Manual (W472) for details.
- 4 The following table shows how the IOM Hold Bit affects the status of I/O memory and the status of outputs on Output Units after a fatal system error has been generated with FALS(007).

	_	Status of I/O memory	Status of outputs on Output Units	
IOM Hold Bit (A500.12)	ON	Retained	OFF	
TOW Floid Bit (A300.12)	OFF	Cleared	OFF	

The following table shows how to specify error codes and error details in S and S+1.

Error name	S	S+1
LITOI Haine	Error code	Error details
Memory Error	80F1 hex	Bits 00 to 09: Memory Error Location Bit 00: User program Bit 04: PLC Setup Bit 05: Registered I/O table Bit 07: Routing table Bit 08: CPU Bus Unit Setup Bit 09: Memory Card transfer error Bits 10 to 15: Invalid
I/O Bus Error	80C0 hex	Bits 00 to 07: Slot number where the I/O Bus error occurred Slot 0 to 9: 00 to 09 hex Slot unknown: 0F hex Bits 08 to 15: Rack number where the I/O Bus error occurred Slot 0 to 7: 00 to 07 hex Rack unknown: 0F hex
Unit Number Duplication Error	80E9 hex	CPU Bus Unit's duplicated unit number 0000 to 000F hex
		Special I/O Unit's duplicated unit number 8000 to 805F hex
Rack Number Duplication Error	80EA hex	Duplicated Rack number (overlapping word allocations) 0000 to 0006 hex
Fatal Inner Board Error	82F0 hex	Error Cause Bits 00 to 03: Error defined by Inner Board Bits 04 to 15: Invalid
Too Many I/O Points Error	80E1 hex	Bits 13 to 15: Error Cause Bits 00 to 12: Details • Total number of I/O points is too high. Bits 13 to 15: 000 Bits 00 to 12: Number of I/O points (binary) • Number of interrupt inputs is too high. Bits 13 to 15: 001 Bits 00 to 12: Number of interrupt inputs (binary) Bits 00 to 12: Number of interrupt inputs (binary) Bits 00 to 12: All zeroes • A Slave Unit's unit number is duplicated or a C500 Slave Unit has more than 320 I/O points. Bits 13 to 15: 010 Bits 00 to 12: Slave Unit's unit number (binary) • The unit number of an I/O Interface (excluding Slave Racks) is duplicated. Bits 13 to 15: 011 Bits 00 to 12: Unit number (binary) • A Master Unit's unit number is duplicated or outside of the allowed setting range. Bits 13 to 15: 100 Bits 00 to 12: Master Unit's unit number (binary) • Too many Pulse I/O Modules are connected (CJ2M only). Bits 13 to 15: 100 Bits 00 to 12: O00 • The number of Expansion Racks is too high. Bits 13 to 15: 101 Bits 00 to 12: Number of Expansion Racks (binary) • C200H Special I/O Unit or Remote I/O was not recognized. Bits 13 to 15: 110
I/O Table Setting Error	80E0 hex	0000 hex
Program Error Cycle Time Overrun Error	80F0 hex	Bits 08 to 15: Error Cause Bit 15: UM overflow error Bit 14: Illegal instruction error Bit 13: Differentiation overflow error Bit 12: Task error Bit 11: No END error Bit 10: Illegal access error Bit 09: Indirect DM/EM BCD error Bit 08: Instruction error Bits 00 to 07: Invalid

Displaying Messages with Fatal User-defined Errors

- If S is a word address, the ASCII message beginning at S will be displayed at the Programming Device when FALS(007) is executed. (If a message is not required, set S to a constant.)
- The message beginning at S will be registered when FALS(007) is executed. Once the message is registered, it will be displayed when a Programming Console is connected.
- An ASCII message up to 16 characters long can be stored in S through S+7. The leftmost (most significant) byte in each word is displayed first.
- The end code for the message is the null character (00 hexadecimal).
- All 16 characters in words S to S+7 will be displayed if the null character is omitted.
- If the contents of the words containing the message are changed after FALS(007) is executed, the message will change accordingly.

Clearing FALS(007) Fatal System Errors

There are two ways to clear fatal system errors generated with FALS(007).

- 1. Turn the PLC OFF and then ON again.
- When keeping the PLC ON, the system error must be cleared as if the specified error had actually occurred.

Clearing FALS(007) User-defined Fatal Errors

To clear errors generated by FALS(007), first eliminate the cause of the error and then either clear the error from a Programming Device or turn the PLC OFF and then ON again.

Precaution

Unlike user-defined fatal errors, system errors generated by FALS(007) will clear I/O memory if the IOM Hold Bit is OFF.


Example Programming

Generating a User-defined Error

When CIO 0.00 is ON in the following example, FALS(007) will generate a fatal error with FAL number 31 and execute the following processes.

- 1. The FALS Error Flag (A401.06) will be turned ON.
- 2. The corresponding error code (C11F) will be written to A400.
- 3. The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 4. The ERR Indicator on the CPU Unit will be lit.
- 5. The ASCII message in D100 to D107 will be displayed at the Peripheral Device.

Note If a message is not required, specify a constant for S.

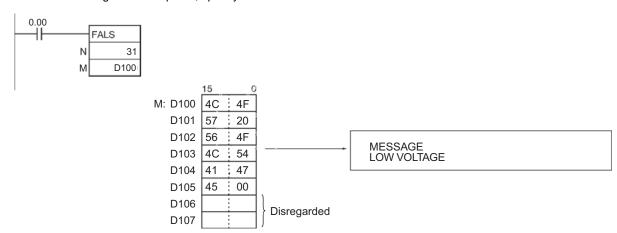


Note A400 will contain the error code of the most serious of all of the errors that have occurred, including non-fatal and fatal system errors, as well as errors generated by FAL(006) and FAL(007).

Generating a Non-fatal System Error


When CIO 0.00 is ON in the following example, FALS(007) will generate a Too Many I/O Points Error (too many Expansion Racks connected, 9 Racks in this case). In this case, dummy FAL number 10 is used and the corresponding value (000A hex) is stored in A529.

- 1. The specified error code (80E1) will be written to A400 if it is the most serious error.
- 2. The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 3. The Too Many I/O Points Flag (A401.11) will be turned ON.
- 4. The CPU Unit's ERR Indicator will light and PLC operation will stop.
- A message (TOO MANY I/O PNT) will be displayed at the Programming Console indicating that a Too Many I/O Points Error has occurred.

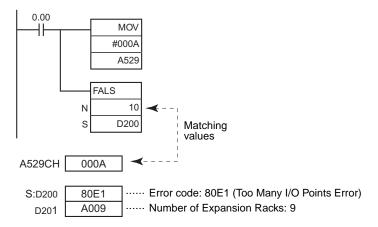

FPD

Instruction	Mnemonic	Variations	Function code	Function
FAILURE POINT DETECTION	FPD		269	Diagnoses a failure in an instruction block by monitoring the time between execution of FPD(269) and execution of a diagnostic output and finding which input is preventing an output from being turned ON.

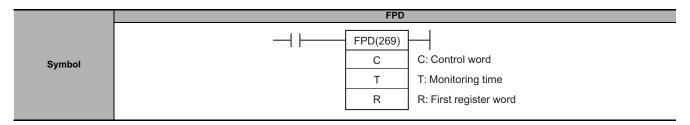


Applicable Program Areas

Area	Function block definitions	definitions Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	Not allowed	Not allowed	OK	OK	Not allowed	Not allowed	

Operands

Operand	Description	Data type	Size
С	Control word		1
Т	Monitoring time		1
R	First register word		Variable

C: Control Word

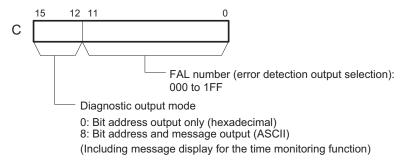

T: Monitoring Time

T must be between 0 and 9,999 decimal (between 0000 and 270F hex). A value of 0 disables time monitoring; values in the range of 1 to 270F set the monitoring time from 0.1 to 999.9 seconds.

R: First Register Word

The functions of the register words are described on page 1036.

Operand Specifications

Aron	Word addresses								Indirect addre		Con-		Registers		Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits bits	bits
С											ОК							
Т	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	OK	UK			ОК				
R	UK	UK	UK	OK	UK	UK	UK	UK	UK	UK				UK				

Flags

Name	Label	Operation	
Error Flag	ER	 ON if C is not within the specified range of 0000 to 01FF or 8000 to 81FF. ON if T is not within the specified range of 0000 to 270F. OFF in all other cases. 	
Carry Flag	CY	ON if the diagnostic output is still OFF after the monitoring time has elapsed.OFF in all other cases.	


Related Auxiliary Area Words and Bits

Name	Address	Operation	
FAL Error Flag	A402.15	ON when a non-fatal (FAL) error is registered in time monitoring.	
Executed FAL Number Flags	A360.01 to A391.15	When a non-fatal (FAL) error is registered in time monitoring, the corresponding flag will be turned ON. Flags A36001 to A39115 correspond to FAL numbers 0001 to 01FF.	
Error Log Area	A100 to A199	The Error Log Area contains the error codes and time/date of occurrence for the most recent 20 errors including errors generated by FPD(269).	
Error code	A400	When an error occurs its error code is stored in A400. The error codes for FAL numbers 0001 to 01 are 4101 to 42FF, respectively. If two or more errors occur simultaneously, the error code of the most serious error will be stored in A400.	
FPD Teaching Bit	A598.00	Turn this bit ON when you want the monitoring time to be set automatically (teaching function) when FPD(269) is executed.	

Function

FPD(269) performs time monitoring and logic diagnosis.


The next block is diagnosed at the following point.

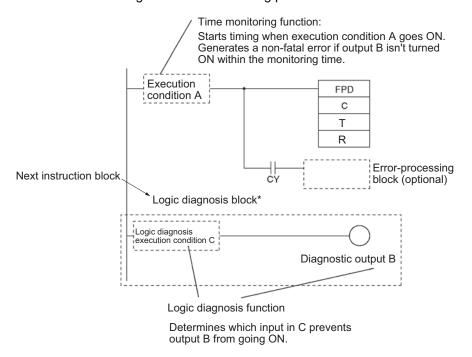

Note *The logic diagnosis block begins with the first LD (not LD TR) or LD NOT instruction after FPD(269) and ends with the first OUT (not OUT TR) or other right-hand instruction.

Time Monitoring Function

FPD(269) starts timing when it is executed (when execution condition A goes ON); it will generate a non-fatal error and turn ON the Carry Flag if the diagnostic output is not turned ON within the specified monitoring time.

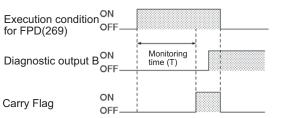

- Note 1 The diagnostic output must go ON within the monitoring time.
 - 2 The teaching function can be used set the monitoring time automatically.


Non-fatal error generated.

Note The following processing will be performed when the Carry Flag is turned ON. (This processing will not be performed if the FAL number is set to 000 in C.)

- 3 The FAL Error Flag (A402.15) will be turned ON. (PLC operation continues.)
- **4** The Executed FAL Number Flag for the specified FAL number will be turned ON. (Flags A360.01 to A391.15 correspond to FAL numbers 001 to 1FF.)
- 5 The corresponding error code will be written to A400. Error codes 4101 to 42FF correspond to FAL numbers 001 to 1FF.
 (If a more serious error has occurred (one with a higher error code) at the same time, the error code of the more serious error will be stored in A400.)
- **6** The error code and the time/date that the error occurred will be written to the Error Log Area (A100 through A199).
- 7 The ERR Indicator on the CPU Unit will flash.
- **8** If the output mode has been set for bit address and message output (leftmost digit of C set to 8), the ASCII message stored in R+2 through R+10 will be displayed as a non-fatal error message.
- When the time monitoring function is being used, the execution condition for FPD(269) must remain ON for the entire monitoring time set in T.
- The execution condition for FPD(269) must be made up of a combination of normally open and normally closed inputs.
- The error-processing block is optional. When an error-processing block is included, be sure to use outputs or other right-hand instructions. LD and LD NOT cannot be used at this point.

Logic Diagnosis Function

Every cycle that the execution condition for FPD(269) is ON, FPD(269) determines which input bit is causing the diagnostic output to be OFF and writes the bit's address to the register area beginning at R.

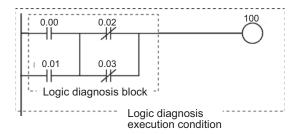

If input bits CIO 0.00 through CIO 0.03 are all ON in the following example, FPD(269) would determine that the normally closed CIO 0.02 condition is causing output CIO 100 to remain OFF. FPD(269) would turn ON the Bit Address Found Flag (bit 15 of R) and write the bit address to register words R+2 to R+4.


- Note The logic diagnosis function is executed every cycle as long as the execution condition for FPD(269) is ON. The operation of the logic diagnosis function is independent of the time monitoring function.
 - The input circuit to be logically diagnosed should consist of multiple N.C. or N.O. conditions.
 - · When two or more input bits are preventing the diagnostic output from being turned ON, the address of the first input bit in the execution condition (on the highest instruction line and nearest the left bus bar) will be output to R+2 through R+4.
 - Input bits in LD, LD NOT, AND, AND NOT, OR, and OR NOT instructions (including differentiated and immediate-refreshing variations) will be checked by the logic diagnosis function. Input bits in other instructions and operands addressed indirectly through Index Registers will not be checked.
 - The logic diagnosis block begins with the first LD (not LD TR) or LD NOT instruction after FPD(269) and ends with the first OUT (not OUT TR) or other right-hand instruction.
- There are two diagnostic output modes, set with the leftmost digit of C.
- 1. Bit address output mode (Leftmost digit of C = 0) Bit 15 of R (the Bit Address Found Flag) is turned ON when an input bit address has been found and bit 14 of R indicates whether the input is normally ON or normally OFF. The 8-digit hexadecimal PLC memory address of the input bit is output to R+3 and R+2.
- 2. Bit address and message output mode (Leftmost digit of C = 8) Bit 15 of R (the Bit Address Found Flag) is turned ON when an input bit address has been found and bit 14 of R indicates whether the input is normally ON or normally OFF. The input bit's address is output to R+2 through R+4 as 6 ASCII characters.

Register Word Functions

The register words contain the results of the diagnostic function and can also contain an ASCII error message which is displayed when an error is generated by the time monitoring function. The function of the register words depends upon the diagnostic output mode which is set with the leftmost digit of C.


Bit Address Output (C=0□□□)

When the leftmost digit of C is set to 0, the 8-digit hexadecimal PLC memory address of the input bit is output to R+2 and R+3. R contains two flags which indicate whether an input bit has been found and whether it is used in a normally open or normally closed input condition.

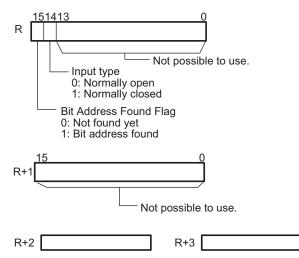


Bit Address and Message Output (C=8□□□)


When the leftmost digit of C is set to 8, the ASCII address of the input bit is output to R+2 to R+4. R contains two flags which indicate whether an input bit has been found and whether it is used in a normally open or normally closed input condition.

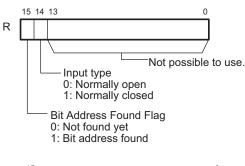



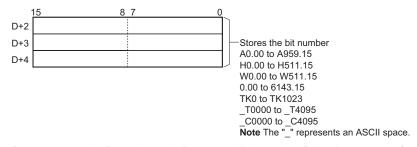

Register words R+2 through R+5 would have the following values for W51115.

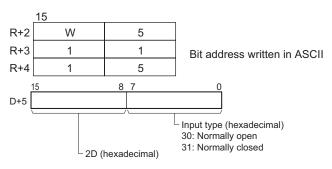

D+6 to D+9

The user can store an ASCII message in register words R+6 to R+10. This message will be displayed on the Programming Device if a non-fatal error is generated by the time monitoring function. Mark the end of the message with the null character (00 hexadecimal).

•	15	8	7 0
R+6			
R+6 R+7			
R+8 R+9			
R+10			

Hint


Disabling Error Log Entries of Non-fatal FPD(269) Errors

Normally when the FPD(269) Time Monitoring Function generates a non-fatal error, the error code and the time that the error occurred are written to the Error Log Area (A100 through A199). It is possible to set the PLC Setup so that the non-fatal errors generated by FAL(006) are not recorded in the Error Log.

Note Even though the error will not be recorded in the Error Log, the FAL Error Flag (402.15) will be turned ON, the corresponding flag in the Executed FAL Number Flags (A360.01 to A391.15) will be turned ON, and the error code will be written to A400.

Disable Error Log entries for FPD(269) time-monitoring errors when you want to record only the system-generated errors. For example, this function is useful during debugging if the FPD(269) and FAL(006) instructions are used in several applications and the Error Log is becoming full of these errors.

The following screen capture shows the PLC Setup setting from the CX-Programmer.

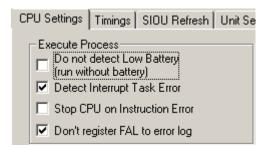

• The following table shows the PLC Setup setting from the Programming Console.

Programming Console setting address	Word Bit	129 15	
Name	FAL Error Log Registi		
Settings	O: Record FAL Errors in Error Log. 1: Do not record FAL Errors in Error Log.		
Default setting	0: Record FAL Errors in Error Log.		
Times that PLC Setup setting is read	Every cycle (when an FAL Error occurs)		

Note Even if PLC Setup word 129 bit 15 is set to 1 (Do not record FAL Errors in Error Log.), the following errors will be recorded:

- Fatal errors generated by FALS(007)
- · Non-fatal errors from the system
- · Fatal errors from the system
- Non-fatal errors from the system generated intentionally with FAL(006) or FPD(269)
- Fatal errors from the system generated intentionally with FALS(007)


Setting Monitoring Time with the Teaching Function

If a word address is specified for T, the monitoring time can be set automatically with the teaching function. Use the following procedure when a word address has been set for T.

- 1. Turn ON the FPD Teaching Bit (A598.00).
- 2. FPD(269) will measure the time from the point when the execution condition for FPD(269) goes ON until the diagnostic output is turned ON.
- 3. If the measured time exceeds the monitoring time setting, a setting 1.5 times the measured time will be stored in T.
- **Note** FPD(269) can be used more than once in the program, but each instruction must have a unique register (R) setting.
 - The monitoring time is refreshed only when FPD(269) is executed. If the cycle time is longer than 100 ms, the monitoring time will not be refreshed normally and FPD(269) will not operate correctly because the monitoring time is updated in units of 100 ms.

Example Programming

The following program example is used to demonstrate the operation of the time monitoring function and logic diagnosis function. In this example, the diagnostic output (CIO 200.00) does not go ON because CIO 100.00 and CIO 100.03 remain OFF in the logic diagnosis execution condition.

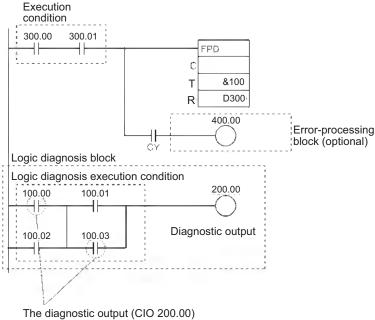

The diagnostic output (CIO 200.00) remains OFF because these input conditions are OFF.


Time Monitoring Function

If the diagnostic output (CIO 200.00) does not go ON within 10 seconds after CIO 300.00 and CIO 300.01 are both ON, a non-fatal error will be generated and the following processing will be performed.


- 1. The Carry Flag is turned ON.
- 2. When the rightmost 3 digits of C specify an FAL number of 00A hex (10), the corresponding Executed FAL Number Flag (A360.10) will be turned ON, the corresponding error code (410A) is written in A400, and the FAL Error Flag (A402.15) is turned ON.

Logic Diagnosis Function (C=000A)

Since the leftmost digit of C is 0 (bit address output mode) the PLC memory address of CIO 100.00 is output to D303 and D302. (CIO 100.00 is on a higher instruction line than CIO 100.03.)

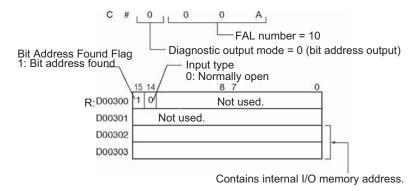


Since the leftmost digit of C is 8 (bit address and message output mode) the address of CIO 100.00 (100.00) is output to D302 through D304 in ASCII.

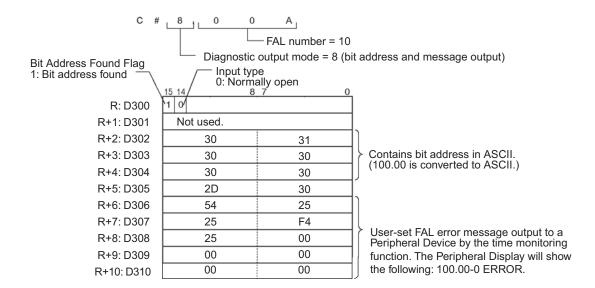


Setting the Monitoring Time with the Teaching Function

The monitoring time can be set automatically with the teaching function when a word address has been specified for T.

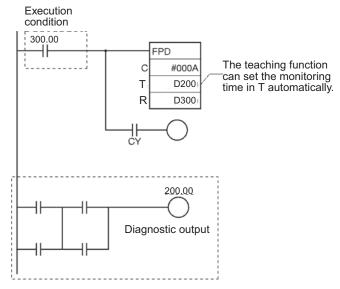

To start the teaching function, turn ON A598.00 (the FPD Teaching Bit). While A598.00 is ON, FPD(269) measures how long it takes for the diagnostic output (CIO 200.00) to go ON after the execution condition (CIO 300.00) goes ON. If the measured time exceeds the monitoring time in T, the measured time is multiplied by 1.5 and that value is stored in T as the new monitoring time.

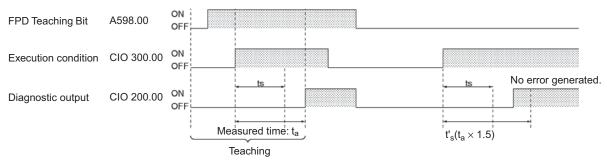

ts: Initial setting in T

ta: Measured time

t's: New setting in T after teaching

(When $t_a > t_s$, $t'_s = t_a \times 1.5$)

Other Instructions

STC/CLC

Instruction	Mnemonic	Variations	Function code	Function
SET CARRY	STC	@STC	040	Sets the Carry Flag (CY).
CLEAR CARRY	CLC	@CLC	041	Turns OFF the Carry Flag (CY).

	STC	CLC
Symbol	STC(040)	—— CLC(041)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Flags

Operand	Description	Data type						
	Description	STC	CLC					
Error Flag	ER	Unchanged*1	Unchanged*1					
Equals Flag	=	Unchanged*1	Unchanged*1					
Carry Flag	CY	ON	ON					
Negative Flag	N	Unchanged*1	Unchanged*1					

^{*1} In CJ2, CS1-H, CJ1-H, CJ1M, and CS1D (for Single-CPU System) CPU Units, these Flags are left unchanged. In CS1 and CJ1 CPU Units, these Flags are turned OFF.

Function

STC

When the execution condition is ON, STC(040) turns ON the Carry Flag (CY). Although STC(040) turns the Carry Flag ON, the flag will be turned ON/OFF by the execution of subsequent instructions which affect the Carry Flag.

ROL(027), ROLL(572), ROR(028), and RORL(573) make use of the Carry Flag in their rotation shift operations. When using any of these instructions, use STC(040) and CLC(041) to set and clear the Carry Flag.

CLC

When the execution condition is ON, CLC(040) turns OFF the Carry Flag (CY). Although CLC(040) turns the Carry Flag OFF, the flag will be turned ON/OFF by the execution of subsequent instructions which affect the Carry Flag.

+C(402), +CL(403), +BC(406), +BCL(407), -C(412), -CL(413), -BC(416), and -BCL(417) make use of the Carry Flag in their addition operations. Use CLC(041) just before any of these instructions to prevent any influence from other preceding instructions.


ROL(027), ROLL(572), ROR(028), and RORL(573) make use of the Carry Flag in their rotation shift operations. When using any of these instructions, use STC(040) and CLC(041) to set and clear the Carry Flag.

Hint

The +(400), +L(401), +B(404), +BL(405), -(410), -L(411), -B(414), and -BL(415) instructions do no include the Carry Flag in their addition and subtraction operations. In general, use these instructions when performing addition or subtraction.

EMBC

Instruction	Mnemonic	Variations	Function code	Function
SELECT EM BANK	EMBC	@EMBC	281	Changes the current EM bank.

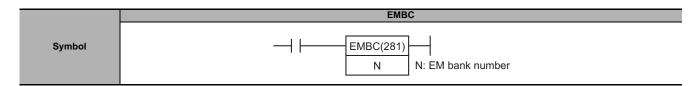

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Ok	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
N	EM bank number	UINT	1

N: EM Bank Number

Specifies the new EM bank number in hexadecimal (0000 to 0018).

Operand Specifications

Area			١	Nord a	ddress	es			Indirect DM/EM addresses Con-				ters	Fla	igs	Pulse	TR	
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	stants DR	IR	Indirect using IR	тк	CF	bits bits	bits
N	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				

Flags

Operand	Description	Data type
Error Flag	ER	ON if N specifies a non-existent EM bank number. (This error will occur if the specified EM bank has been registered as file memory in the PLC Setup.) ON if automatic address allocation has been set for the specified EM bank (CJ2 CPU Units only). ON if the EM Area force-set/reset function is enabled (CJ2 CPU Units only). ON if EMBC(281) is executed in an interrupt task for a CJ2 CPU Unit with high-speed interrupt function enabled. OFF in all other cases.

Related Auxiliary Area Words and Bits

Name	Address	Operation
Current EM Bank	A301	Contains the current EM bank number in hexadecimal

Function

EMBC(281) changes the current EM (Extended Data Memory) bank to the one indicated by the EM bank number (N). At the same time, the new EM bank number is output to A301.


Note

- The current EM bank number changed in a cyclic task is retained when operation is switched between tasks. For example, if EMBC(281) is used in task 1 to change the current EM bank from bank B to bank C, bank C will remain the current EM bank for all cyclic tasks even when operation is switched to task 2.
- The current EM bank number changed in an interrupt task is valid only during execution of the interrupt in which it was changed. The previous EM bank number will be returned to once execution of the interrupt task has been completed.

Hint

- There are banks available in the EM Area and there are 32,768 words (E00000 to E32767) in each bank. EM addresses can be identified in the two following ways. EMBC(281) must be used to change the current EM bank if the first method is used.
 - 1) EM addresses can be specified without the bank number, i.e. E00000 to E32767, to indicate addresses in the current EM bank.
 - 2) EM addresses can be specified with the bank number, i.e. En_00000 to En_32767 (n = bank number), to indicate addresses in a particular EM bank.

Example Programming

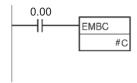


When CIO 0.00 turns ON in the following example, the current EM bank number is changed to bank C and the new bank number (000C hex) is output to A301.

A301 0 0 0 C

WDT

Instruction	Mnemonic	Variations	Function code	Function
EXTEND MAXIMUM CYCLE TIME	WDT	@WDT	094	Extends the maximum cycle time, but only for the cycle in which the instruction is executed. WDT(094) can be used to prevent errors for long cycle times when a longer cycle time is temporarily required for special processing.

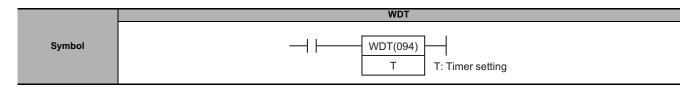

Applicable Program Areas

Area	Function block definitions Block program areas Ste		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	Ok	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size		
Т	Timer setting	Constants only	1		

T: Timer setting

Specifies the watchdog timer setting between 0000 and 0F9F hexadecimal or between &0000 and &3999 decimal.

Operand Specifications

Aroa			١	Nord a	ddress	es			Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
Т											OK							

Flags

Operand	Description	Data type
Error Flag	ER	ON if the watchdog timer setting exceeds 40 seconds. OFF in all other cases.

Related PLC Setup Settings

CX-Programmer settings



Programming console settings

Name	Function	Settings
Watch cycle time	A Cycle Time Too Long error (fatal error) will be registered if the cycle time exceeds the maximum setting.	0: Default setting (1,000 ms) 1: User time setting
	Sets the maximum cycle time. (This setting is valid only when the first setting has been set to 1.)	0001 to 0FA0 (1 to 40,000 ms, 10-ms units)

Note • The default value for the maximum cycle time is 1,000 ms, although it can be set anywhere from 1 to 40,000 ms in 10-ms units.

• WDT(094) can be used more than once in a cycle. When WDT(094) is executed more than once the cycle time extensions are added together, although the total must not exceed 40,000 ms. If WDT(094) cannot be executed again if the cycle has already been extended to 40,000 ms.

Related Auxiliary Area Words and Bits


Name	Address	Operation
Cycle Time Too Long Flag	A401.08	ON when the present cycle time exceeds the maximum cycle time (watch cycle time) set in the PLC Setup. This is a fatal error which causes program execution to stop.
Maximum Cycle Time	A262 and A263	These words contain the maximum cycle time in 32-bit binary. This value is updated every cycle.
Present Cycle Time	A264 and A265	These words contain the present cycle time in 32-bit binary. This value is updated every cycle.

Function

WDT(094) extends the maximum cycle time for the cycle in which this instruction is executed. The watchdog timer setting in the PLC Setup is extended by an interval of $T \times 10 \text{ ms}$ (0 to 39,990 ms).

When it is likely that the cycle time will increase due to a temporary increase in processing data, this instruction can be used to prevent a cycle time error.

Example Programming

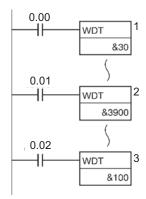

Operation of WDT(094)

The default maximum cycle time (1,000 ms) is used in this example.

- When CIO 0.00 turns ON, the first WDT(094) instruction extends the maximum cycle time by 300 ms $(30 \times 10 \text{ ms})$. Thus, the maximum cycle time is 1,300 ms at this point.
- When CIO 0.01 turns ON, the second WDT(094) instruction attempts to extend the maximum cycle time by another 39,000 ms. Since the new maximum cycle time (40,300 ms) exceeds the upper limit of 40,000 ms, the extra 300 ms is ignored. As a result, the second WDT(094) instruction actually extends the maximum cycle time by 38,700 ms.
- When CIO 0.02 turns ON, the third WDT(094) instruction attempts to extend the maximum cycle time
 by another 1,000 ms. Since the maximum cycle time has already reached the upper limit of 40,000
 ms, the third WDT(094) instruction is not executed.

CCS/CCL

Instruction	Mnemonic	Variations	Function code	Function
SAVE CONDITION FLAGS	ccs	@CCS	282	Saves the current status of the Condition Flags in a separate area within the CPU Unit.
LOAD CONDITION FLAGS	CCL	@CCL	283	Restores the status of the Condition Flags that were saved in a separate area within the CPU Unit by CCS(282).

	CCS	CCL					
Symbol	— CCS(282)	CCL(283)					

Applicable Program Areas

Area	Function block definitions	Block program areas	Block program areas Step program areas		Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Flags

• CCS

There are no flags affected.

• CCL

Changes to the value that was read.

Function

• CCS

When the execution condition is ON, CCS(282) stores the current status of the Condition Flags (except for the ALWAYS ON and ALWAYS OFF Flags) in a separate area in the CPU Unit. The Status of the following Condition Flags will be preserved: ER, CY, >, =, <, N, OF, UF, >=, <>, and <=.


Note When CCS(282) is executed, it overwrites the previous Condition Flag information that was saved.

• CCL

When the execution condition is ON, CCL(283) restores (reads) the status of the Condition Flags (except for the ALWAYS ON and ALWAYS OFF Flags). The Status of the following Condition Flags will be restored (read): ER, CY, >, =, <, N, OF, UF, >=, <>, and <=.

The preserved status of the Condition Flags can be read (restored) later only with CCL(283), the LOAD CONDITION FLAGS instruction. The status can be read in any of the following cases:

- Within a task
- · Between different cyclic tasks
- · Between cycles

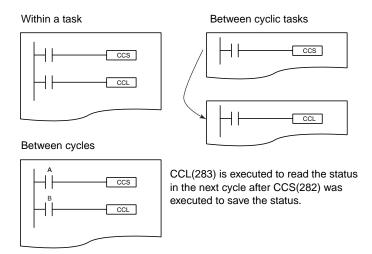


The status of the Condition Flags cannot be saved/loaded between a cyclic task and interrupt task.

Hint

Condition Flags are shared by all instructions, so the status of these Flags may change many times during the PLC cycle as each instruction is executed. Previously, it was necessary to place conditions using the Condition Flags immediately after the controlling instruction so that the status of the Condition Flags would not be affected by intervening instructions. The CCS(282) and CCL(283) instructions allow the controlling instruction to be separated from the execution conditions that rely on the result.

For example, CCS(282) can store the status of the Equals Flag after execution of a Comparison Instruction and the result can be restored later. The result does not have to be used immediately after execution of the instruction.



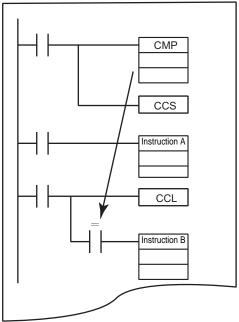

The results of the comparison are stored in the Condition Flags. (In this case, the results of the COMPARE Instruction can be used in instruction B even if those results are affected by execution of instruction A.)


Preserves the status of the Condition Flags in a separate location in the CPU Unit.

Restores the status of the Condition Flags.

The Equals Flag will reflect the result of the COMPARE instruction, not the result of instruction A.


 All of the Condition Flags are cleared when operation switches from one task to another. Use the CCS(282) and CCL(283) instructions to save and load the Condition Flag status between tasks or cycles.

Example Programming

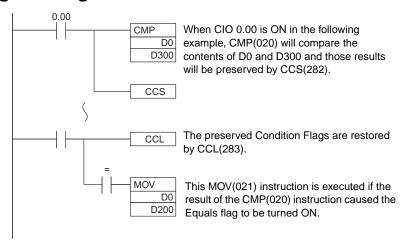

FRMCV

Instruction	Mnemonic	Variations	Function code	Function
CONVERT ADDRESS FROM CV	FRMCV	@FRMCV	284	Converts a CV-series PLC memory address to its corresponding CS/CJ-series PLC memory address.

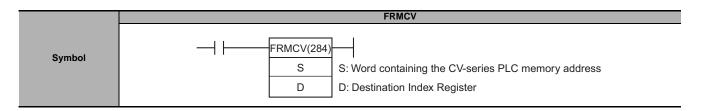

Applicable Program Areas

Area	Function block definitions	definitions Block program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	Ok	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
S	Word containing the CV-series PLC memory address	UINT	1		
D	Destination Index Register	IR*1 only	2		

^{*1} Only an index register (IR0 to 15) can be specified in D.

Operand Specifications

Aroa			V	Vord a	ddress	es			Indirect addre	DM/EM esses	Con-	Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits I	bits
S	OK	OK	OK	OK	OK	OK	OK	Ok	OK	OK	OK	OK		OK				
D													OK					


Flags

Operand	Description	Data type
Error Flag	P_ER	ON if S specifies one of the following PLC memory addresses that do not exist in the CS/CJ-series: TR Area (09FF hex) CPU Bus Link (G) Area (0A00 to 0AFF hex) SFC Areas (0D00 to 0E3F hex) OFF in all other cases.

Function

When the execution condition is ON, FRMCV(284) executes the following operations.

- 1. The CV-series PLC memory address specified in S is converted to its equivalent CV-series data area address.
- 2. FRMCV(284) determines the CS/CJ-series PLC memory address that corresponds to the same CV-series data area address.
- 3. The CS/CJ-series PLC memory address is output to D. (An index register (IR0 to IR15) must be specified for D.)

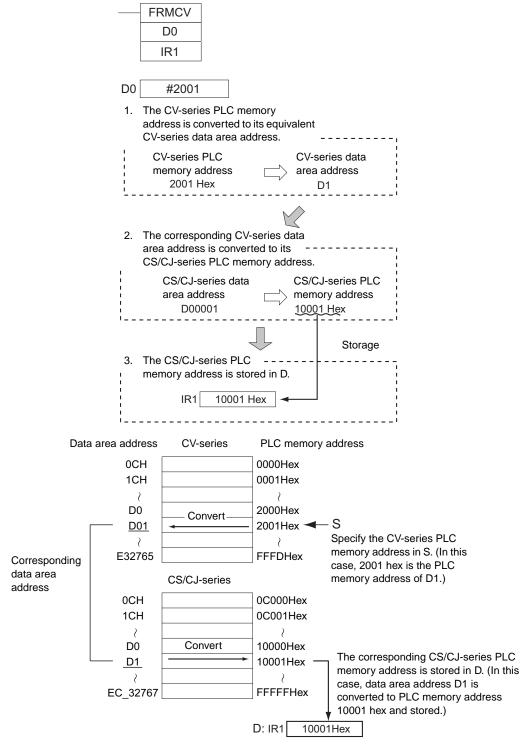

Note If there is no CS/CJ-series equivalent to the specified CV-series PLC memory address, an error will occur, the Error Flag will be turned ON, and the address will not be converted.

Hint

When an Index Register is used as an operand with a ",IR" prefix, the instruction will operate on the
word indicated by the PLC memory address in the Index Register, not the Index Register itself. Once
the desired PLC memory address has been stored in an Index Register, the Index Register itself can
be used as an operand for an instruction.


- The FRMCV(284) instruction can be used to convert a CV-series program with the following two kinds of programming for use in a CS/CJ-series PLC. See the Examples later in this section for an example.
 - When using indirect binary mode DM addressing (*DM)
 (when indirectly specifying a data area address with a PLC memory address in DM)
 - 2. When using CV-series PLC memory addresses directly as values (when storing PLC memory addresses in Index Registers with direct addressing using an instruction such as MOV(021))


Example Programming

Example 1: Converting a CV-series Program with *DM Indirect Binary Mode DM Addressing

In this FRMCV(284) example, a DM word is specified in S, the PLC memory address there is stored in an Index Register, and the Index Register is used for indirectly addressed.


 CV-series program (Program using indirect DM binary mode addressing)

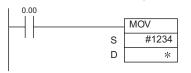

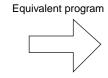


PLC Setup Indirect DM data:


When indirect DM addresses are in binary, the content of the DM word is treated as a PLC memory address and specifies the corresponding address in I/O memory. In this case, the value in D0 is 0200 hex. The corresponding data area address is CIO 512, so #1234 is transferred to CIO 512.

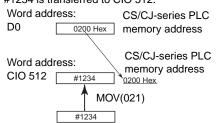

• CS/CJ-series program

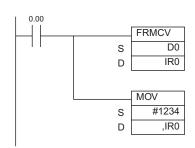


In this case, the value in D0 is 0200 hex. The corresponding CV-series data area address is CIO 512. The CS/CJ-series PLC memory address for CIO 512 is 0C200 hex, so this value is stored in IR0. The destination operand in MOV(021) indirectly addresses the content of IR0, so #1234 is transferred to CIO 512.

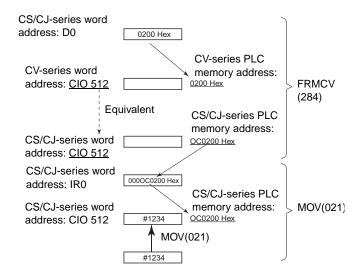

Example 2: Converting a CV-series Program with PLC Memory Addresses Stored directly in Index Registers

In this FRMCV(284) example, the CV-series PLC memory address is specified directly in S.


 CV-series program (Program using PLC memory addresses stored directly in IR)

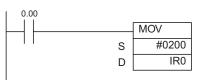


In this case, the PLC memory address 0200 hex is stored in Index Register IR0.



• CS/CJ-series program

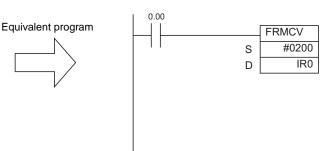


In this case, the CV-series PLC memory address 0200 hex corresponds to CIO 512. The CS/CJ-series PLC memory address for CIO 512 is 0C200 hex, so this value is stored in IR0.

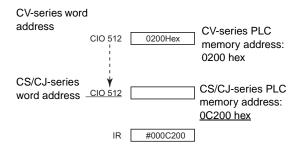

TOCV

Instruction	Mnemonic	Variations	Function code	Function
CONVERT ADDRESS TO CV	TOCV	@TOCV	285	Converts a CS/CJ-series PLC memory address to its corresponding CV-series PLC memory address.

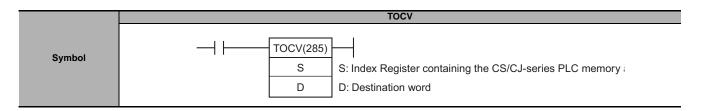

Applicable Program Areas

Area	Function block definitions	I Block program areas I S		Step program areas Subroutines		SFC action or transition programs
Usage	ge OK Ok		OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	Index Register containing the CS/CJ-series PLC memory address	IR*1 only	2
D	Destination word	UINT	1

^{*1} Only an index register (IR0 to 15) can be specified in D.

Operand Specifications

Area			V	Vord ac	ddress	es			Indirect addre	DM/EM esses	Con-		Regist	ers	Fla	ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK		OK					
D	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				

Flags

Operand Description		Data type				
Error Flag F	P_ER	ON if S specifies a PLC memory address that does not exist in the CV-series PLCs. OFF in all other cases.				

Note • An error will occur and the Error Flag will be turned ON if S specifies one of the following PLC memory addresses that do not exist in the CV-series


Area or addresses	PLC memory addresses
Task Flag Area	0000 B800 to 0000 B801 hex
A10000 to A11535	0000 B200 to 0000 B7FF hex
CIO 2556 to CIO 6143	0000 C9FC to 0000 D7FF hex
T1024 to T4095	0000 BE40 to 0000 BEFF hex and 0000 E400 to 0000 EFFF hex
C1024 to C4095	0000 BF40 to 0000 BFFF hex and 0000 F400 to 0000 FFFF hex
HR Area	0000 D800 to 0000 D9FF hex
WR Area	0000 DE00 to 0000 DFFF hex
D24576 to D32767	0001 6000 to 0001 7FFF hex
EM bank specification	0001 8000 to 000F 7FFF hex
E32766 to D32767	000F FFFE to 000F FFFF hex

 An error will occur and the Error Flag will be turned ON if an area other than the Index Register Area is specified for S.

Function

When the execution condition is ON, TOCV(285) executes the following operations.

- 1. The CS/CJ-series PLC memory address specified in S is converted to its equivalent CS/CJ-series data area address. (An index register (IR0 to IR15) must be specified for S.)
- 2. TOCV(284) determines the CV-series PLC memory address that corresponds to the same CS/CJ-series data area address.
- The CV-series PLC memory address is output to D.
 The following example shows TOCV(285) used to convert the CS/CJ-series PLC memory address for D1.

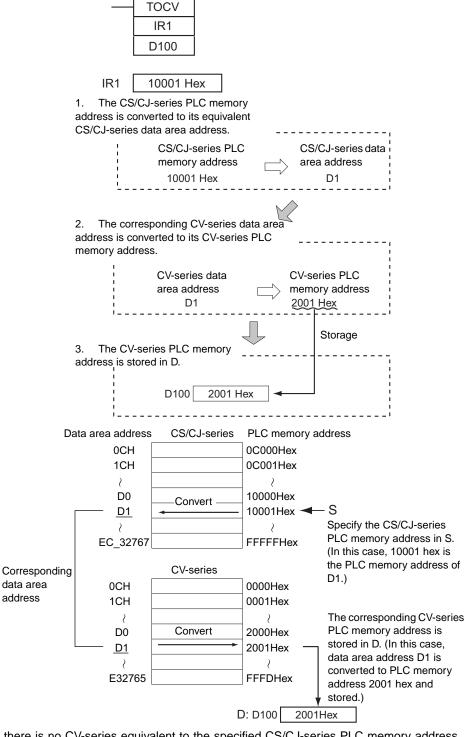

Note If there is no CV-series equivalent to the specified CS/CJ-series PLC memory address, an error will occur, the Error Flag will be turned ON, and the address will not be converted.

Hint

After this instruction is executed, the basic methods of use are as follows.

- 1. The CV-series PLC memory address data stored by TOCV(285) can be transferred to a CV-series PLC using CX-Programmer.
- 2. The same data area address that was used in the CS/CJ-series program can be specified in the CV-series program by using indirect Index Register addressing (",IR" prefix) or indirect binary mode DM addressing (*DM).


Example Programming

Converting a CS/CJ-series Program with Indirect Index Register Addressing

- 1. In this TOCV(285) example, an Index Register is specified in S. The CS/CJ-series PLC memory address in that Index Register is converted to its CV-series equivalent.
- 2. The CV-series PLC memory address is transferred to the specified data area address.
- 3. Use the CV-series PLC memory address in the CV-series program.


CS/CJ-series

 CS/CJ-series program (Program using indirect Index Register addressing)

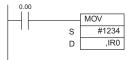


In this case, IR0 contains 10001 hex. The data area address corresponding to PLC memory address 10001 hex is D1, so #1234 is transferred to D1.

· CS/CJ-series program

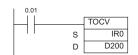


In this case, IR0 contains 10001 hex. Since the data area address corresponding to CS/CJ-series PLC memory address 10001 hex is D1, TOCV(285) stores the CV-series PLC memory address for D1 (2001 hex) in destination word D200.

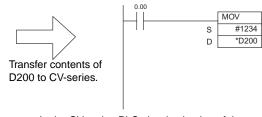



CV-series program

In the CV-series PLC, the destination of the MOV(021) instruction is indirectly addressed (in binary mode) through D200, so #1234 is transferred to D1.

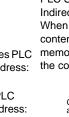

PLC Setup Indirect DM data: When indirect DM addresses are in binary, the content of the DM word is treated as a PLC memory address and specifies the corresponding address in I/O memory.

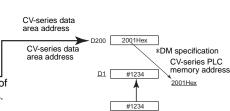

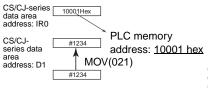

data area address 10001Hex CS/CJ-series CS/CJ-series PLC data area memory address: address 10001Hex CV-series data Same **CV-series PLC** area address memory address: 2001Hex CS/CJ-series data area address 2001Hex Transfer contents of D200 to CV-series.

IOSP/IORS

Instruction	Mnemonic	Variations	Function code	Function
DISABLE PERIPHERAL SERVICING	IOSP	@IOSP	287	Disables peripheral servicing during program execution in Parallel Processing Mode or Peripheral Servicing Priority Mode.
ENABLE PERIPHERAL SERVICING 288		Enables the peripheral servicing during program execution in Parallel Processing Mode that was disabled by IOSP(287), the DISABLE PERIPHERAL SERVICING instruction.		

	IOSP	IORS		
Symbol		IORS(288)		

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Flags


Operand Description		Data type			
Error Flag	P_ER	ON if IOSP(287) is executed in an interrupt task. OFF in all other cases.			

Function

• IOSP

Use IOSP(287) in a cyclic task in Parallel Processing Mode (with Synchronous or Asynchronous Memory Access) to disable the following kinds of peripheral servicing. Peripheral servicing will be enabled again when IORS(288), the ENABLE PERIPHERAL SERVICING instruction, is executed.

- · Event servicing with Special I/O Units
- · Event servicing with CPU Bus Units
- · Peripheral Port servicing
- RS-232C Port servicing
- Event servicing with Inner Boards (CS-series only)
- Event servicing (including background instruction processing) that uses a communications port number, i.e., an internal logical port.

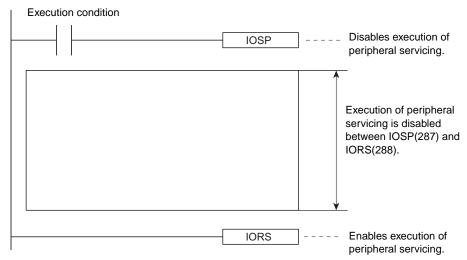

When peripheral servicing has been disabled with IOSP(287), it will remain disabled until IORS(288) is executed, END(001) is executed, or PLC operation is stopped.


- IOSP(287) cannot be executed in an interrupt task. An error will occur and the Error Flag will be turned ON if IOSP(287) is executed in an interrupt task.
 - IOSP(287) cannot disable peripheral servicing in more than one task. If it is necessary to disable peripheral servicing in more than one task, program IOSP(287) separately in each task.

IORS

Use IORS(288) in a cyclic task to release the prohibition on peripheral servicing by IOSP(287), the DISABLE PERIPHERAL SERVICING instruction.

- Note 1 It is not necessary to program IORS(288) with an execution condition.
 - 2 IORS(288) cannot be executed in an interrupt task. An error will occur and the Error Flag will be turned ON if IORS(288) is executed in an interrupt task.

Example Programming

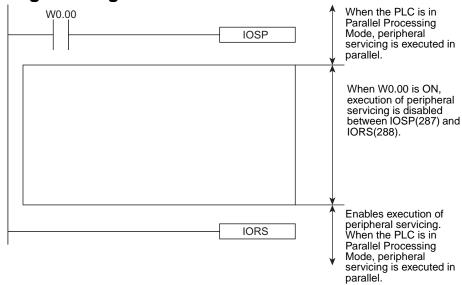


Block Programming Instructions

Block Programming Instructions

Block Programs

- Up to 128 block programs within the overall user program (all tasks) with the CS/CJ-series. The execution of each block program is controlled by a single execution condition. All instructions between BPRG(096) and BEND<801) are executed unconditionally when the execution condition for BPRG(096) is turned ON. The execution of all the block programming instructions except for BPRG(096) is not affected by the execution condition. This allow programming that is to be executed under a single execution condition to be grouped together in one block program.
- Each block is started by one execution condition in the ladder diagram and all instructions within the block are written in mnemonic form. The block program is thus a combination of ladder and mnemonic instructions.
- Block programs enable programming operations that can be difficult to program with ladder diagrams, such as conditional branches and step progressions.

Example: The following example shows two block programs.

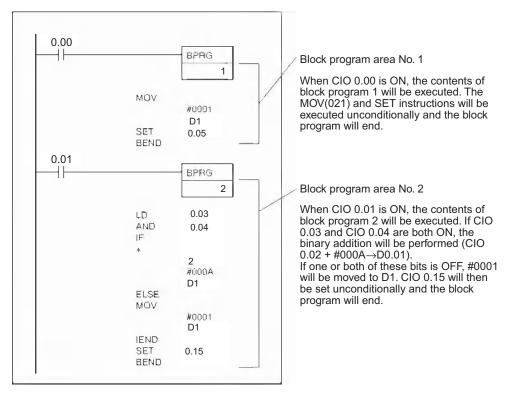


Tasks and Block Programs

Block programs can be located within tasks. While tasks are used to divide large programming units, block programs can be used within tasks to further divide programming into smaller units controlled with a single ladder diagram execution condition.

Just like tasks, block programs that are that are not executed (i.e., which have an OFF execution condition) do not require execution time and can thus be used to reduce the cycle time (somewhat the same as jumps). Also like tasks, other blocks can be paused or restarted from within a block program.

There are, however, differences between tasks and block programs. One difference is that input conditions are not used with block programs unless intentionally programmed with IF(802), WAIT(805), EXIT(806), IEND(810) or other instructions. Also, there are some instructions that cannot be used within block programs, such as those that detect upward and downward differentiation.


Block programs can be used either within cyclic tasks or interrupt tasks. Each block program number from 0 to 127 can be used only once and cannot be use again, even in a different task.

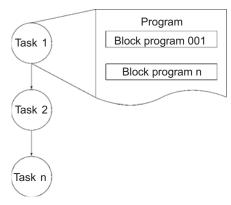


Using Block Programming Instructions

 Basically speaking, IF(802), ELSE(803), and IEND(810) are used for execution conditions (along with bits) inside block programs.

If "A" or "B" is to be executed then IF A ELSE B IEND are used as shown below.

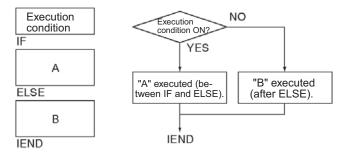

If "A" or nothing is to be executed, IF A IEND are used as shown below.

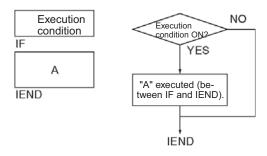

- If execution is to wait until an execution condition or bit is ON (e.g., for step progressions), then WAIT(805) is used.
- If execution is to wait until for a specified period of time (e.g., for timed step progressions), then TIMW(813), TIMX(816), TMHW(815), or TMHWX(817) is used.

- If execution is to wait until for a specified count has been reached (e.g., for step progressions with counters), then CNTW(814)/CNTWX(818) is used.
- If execution is to be repeated within part of a block program until a condition is met, then LOOP(809) and LEND(810) are used.
- If execution of the block program is to be ended in the middle based on an execution condition, the EXIT(806) is used.
- If another block program that is being executed is to be paused or restarted from within a block program, then BPPS(811) and BPRS(812) are used.

Instructions Taking Execution Conditions within Block Programs

The following instruction can take execution conditions within a block program.

Instruction type	Instruction name	Mnemonic
Block programming instructions	IF (NOT)	IF(802) (NOT)
	ONE CYCLE AND WAIT (NOT)	WAIT(805) (NOT)
	EXIT	EXIT(806) NOT
	LOOP END	LEND(810) NOT
Ladder diagram instructions	CONDITIONAL JUMP	CJP(510)
	CONDITIONAL JUMP NOT	CJPN(511)


Instructions with Application Restrictions within Block Programs

The instructions listed in the following table can be used only to create execution conditions for IF(802), WAIT(805), EXIT(806), LEND(810), CJP(510, or CJPN(511) and cannot be used by themselves. The execution of these instructions may be unpredictable if used by themselves or in combination with any other instructions.

Instructions with usage restrictions

(Instructions used only as execution conditions IF, WAIT, EXIT, and LEND)

Mnemonic	Name
LD/LD NOT	LOAD/LOAD NOT
AND/AND NOT	AND/AND NOT
OR/OR NOT	OR/OR NOT
UP/DOWN	CONDITION ON/CONDITION OFF
>, <,=, >=, <=, <> (S) (L)	Symbol Comparison Instruction (not right-hand instructions)
LD TST/TST NOT	LOAD Bit Test Instructions
AND TST/TST NOT	AND Bit Test Instructions
OR TST/TST NOT	OR Bit Test Instructions
>\$, <\$,=\$, >=\$, <=\$, <>\$	Text String Comparison Instruction

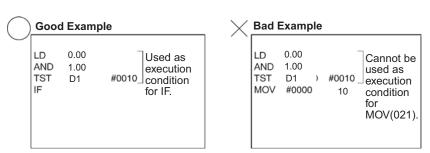

Instructions Not Applicable in Block Programs

The instructions listed in the following table cannot be used within block programs.

• Instructions Not Applicable in Block Programs

Instruction group	Mnemonic	Name	Alternative		
Sequence Output	OUT	ОИТРИТ	Use SET and RSET.		
Instructions	OUT NOT	OUTPUT NOT			
	DIFU(013)	DIFFERENTIATE UP	None		
	DIFD(014)	DIFFERENTIATE DOWN	None		
	KEEP(011)	KEEP	None		
Sequence Control Instructions	FOR(512) and NEXT(513)	FOR-NEXT LOOPS	Use LOOP(809) and LEND(810) (NOT).		
	BREAK(514)	BREAK LOOP			
	IL(002) and ILC(003)	INTERLOCK and INTERLOCK CLEAR	Divide the block program into smaller blocks.		
	JMP(004)0 and JME(005) 0	Multiple JUMP and Multiple JUMP END	Use JMP(004 and JME(005) (but the jump will be made unconditionally).		
	END(001)	END	Use BEND(801).		
Timer and Counter	TIM and TIMX(550)	HUNDRED-MS TIMER	Use TIMW(813), TIMWX(816), TMHW(815),		
Instructions	TIMH(015) and TIMHX(551)	TEN-MS TIMER	TMHWX(817), CNTW(814), and CNTWX(818). Other instructions in the block program will not be executed until the timer times out or the counter		
	TMHH(540) and TMHHX(552)	ONE-MS TIMER	counts out.		
	TIMU(541) and TIMUX(556)	TENTH-MS TIMER			
	TIMUH(544) and TIMUHX (557)	HUNDREDTH-MS TIMER			
	TTIM(087) and TTIMX(555)	ACCUMULATIVE TIMER			
	TIML(542) and TIMLX(553)	LONG TIMER			
	MTIM(543) and MTIMX(554)	MULTI-OUTPUT TIMER			
	CNT and CNTX(546)	COUNTER			
	CNTR(012) and CNTRX (548)	REVERSIBLE COUNTER			
Subroutine Instructions	SBN(092) and RET(093)	SUBROUTINE ENTRY and SUBROUTINE RETURN	None		
Shift Instructions	SFT(010)	SHIFT REGISTER	Use other Shift Instructions.		
Step Instructions	STEP(008) and SNXT (009)	STEP and STEP NEXT	Use WAIT(805).		
Data Control Instructions	PID(190)	PID CONTROL	None		
Diagnostic Instructions	FPD(269)	FAILURE POINT DETECTION	None		
Upward and Downward	Mnemonics with @	Upward Differentiated Instructions	None		
Differentiated Instructions	Mnemonics with %	Downward Differentiated Instructions	None		

Note JMP and JME instructions can be used. However, an execution condition is not used; the program jumps to JME unconditionally. CJP and JME instructions can also be used. These are entered after an execution condition and the program jumps to JME as usual based on the execution condition.

BPRG/BEND

Instruction	Mnemonic	Variations	Function code	Function
BLOCK PROGRAM BEGIN	BPRG		096	Indicates the beginning of the block program area specified by number.
BLOCK PROGRAM END	BEND		801	Indicates the end of the block program area.

	BPRG	BEND
Symbol	BPRG(096) N: Block program number	BEND(801)

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	Not allowed	OK	OK	OK	Not allowed

Operands

Operand	Description	Data type	Size
N	Block program number	Number	1

N: Block Program Number

The block program number must be between 0 and 127 decimal.

Operand Specifications


Area		Word addresses						direct DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Alea		CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR IR		Indirect using IR	тк	CF	bits	bits
BPRG	Ν											OK							

Flags

Name	Label	Operation				
Name	Label	BPRG	BEND			
Error Flag	ER	ON if BPRG(096) is already being executed. ON if N is not between 0 and 127. ON if the same block program number is used more than once. OFF in all other cases.	ON if a block program is not being executed. OFF in all other cases.			

Function

BPRG(096) executes the block program with the block number designated in N, i.e., the one immediately after it and ending with BEND(801). All instructions between BPRG(096) and BEND(801) are executed with ON execution conditions (i.e., unconditionally).

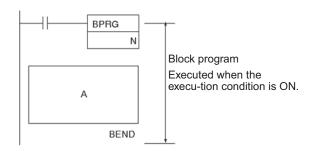


When the execution condition for BPRG(096) is OFF, the block program will not be executed and no execution time will be required for the instruction in the block program.

Execution of the block program can be stopped using BPPS(811) from within another block program even if the execution condition for BPRG(096) is ON.


Precautions

- · Each block program number can be used only once within the entire user program.
- · Block programs cannot be nested.

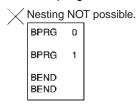


- If the block program is in an interlocked program section and the execution condition for IL(002) is OFF, the block program will not be executed.
- BPRG(096) and the corresponding BEND(801) must be in the same task.

Example Programming

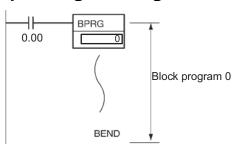

When CIO 0.00 turns ON in the following example, block program 0 will be executed. When CIO 0.00 is OFF, the block program will not be executed.

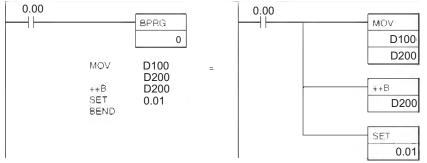

The two program sections shown below both execute MOV(021), ++B(594), and SET for the same execution condition (i.e., when CIO 0.00 turns ON).

BPPS/BPRS

Instruction	Instruction Mnemonic		Instruction Mnemonic Variations Function code			Function		
BLOCK PROGRAM PAUSE	BPPS		811	Pause the specified block program from another block program.				
BLOCK PROGRAM RESTART	BPRS		812	Restart the specified block program from another block program.				

	BPPS	BPRS
Symbol	BPPS(811) N N: Block program number	BPRS(812) N: Block program number

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	ОК	OK	OK*1	OK*1	Not allowed

^{*1} BPRG(096) and BPRS(812) must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
N	Block program number	Number	1

N: Block Program Number

The block program number must be between 0 and 127 decimal.

Operand Specifications

Area			V	Vord ad	ldresse	s				Indirect DM/EM addresses Con- Registers Flags		on-		Con- Regist		ıgs	Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
N											OK							

Flags

Name	Label	Operation
Error Flag	ER	ON if BPPS(811) or BPRS(812) is not in a block program. ON if N is not between 0 and 127. OFF in all other cases.

Note An error will occur and the Error Flag will turn ON if BPPS(811) or BPRS(812) is not in a block program or if N is not between #0000 and #007F (binary).

Function

BPPS

BPPS(811) is used inside one block program to pause the execution of another block program specified by N, the block program number. The block program that is paused with BPPS(811) even if the BPRG(096) for the block program has an ON execution condition. The block program will not be restarted until BPRS(812) is executed for it.


Note BPPS(811) can be used to pause the block program that contains it. When the block program is then restarted using BPRS(812) from another block program, the paused block program will restart from the next instruction after BPPS(811).

BPRS


BPRS(812) restarts the block program specified by N, the block program number. Once restarted, the block program will be executed as long as the BPRG(096) for the block program has an ON execution condition.

Hint


If a paused block program contains TIMW(813), TIMWX(816), TMHW(815), or TMHWX(817), the PV
of the timer will continue to elapse even while the block program is paused.

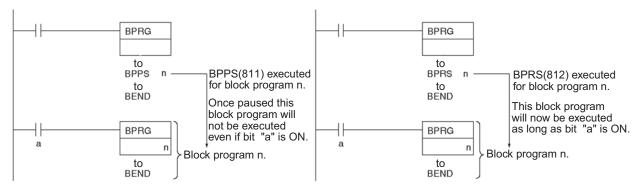

Example Programming

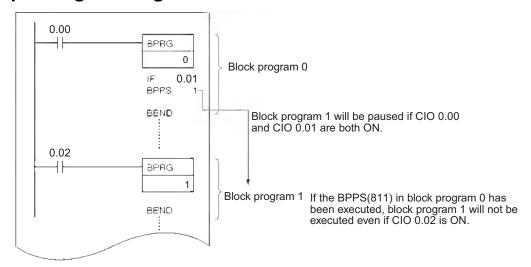

Note If the block program that is being paused appears after BPPS(811), it will not be executed. If the block program appears before BPPS(811), it will be paused starting the next cycle.

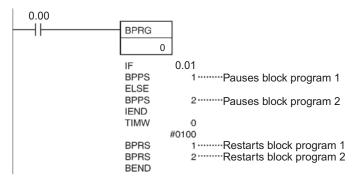

Address	Instruction	Operands
000200	LD	0.00
000201	BPRG(096)	0
000202	IF(802)	0.01
000203	BPPS(811)	1
000204	ELSE(803)	
000205	BPPS(811)	2
000206	IEND(804)	
000207	TIMW(803)	0000
		#0100
000208	BPRS(812)	1
000209	BPRS(812)	2
000210	BEND(801)	
	•	

If CIO 0.00 is ON, the following program pauses execution of either block program 1 or block program 2 depending on the status of CIO 0.01. The block program that was paused is then restarted after 10 seconds.

EXIT/EXIT NOT

Instruction	Mnemonic Variations		Function code	Function			
CONDITIONAL BLOCK EXIT	EXIT		806	When the execution condition is ON (when an operand is not specified), or when the specified bit is ON (when an operand is specified), the instructions from the EXIT instruction to the BEND instruction are not executed and the block program is exited.			
CONDITIONAL BLOCK EXIT NOT	EXIT NOT		806	When the specified bit is OFF, the instructions from the EXIT NOT instruction to the BEND instruction are not executed and the block program is exited.			

	Operation without an operand (operation by execution condition)	Operation with an operand	
Symbol	Execution condition	EXIT(806) B	B: Bit operand
	EXIT(806)	EXIT NOT(806) B	B: Bit operand

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage Not allowed OK		ОК	ОК	OK*1	OK*1	Not allowed	

^{*1} EXIT(806) and EXIT NOT(806) must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
В	Bit operand	BOOL	1

Operand Specifications

Aron				Word a	ddress	es			Indirect addre	DM/EM esses	Con-	Registers			Fla	igs	Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
В	OK	OK	OK	OK	OK	OK	OK*1	OK*1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.


Flags

Name	Label	Operation
Error Flag	ER	ON if EXIT(806) or EXIT NOT(806) is not in a block program. OFF in all other cases.

Function


Operation without an Operand

EXIT(806) can be executed without an operand. If it is, then an execution condition must be created for it starting with LD. If the execution condition is OFF, the rest of the block program will be executed normally. If the execution condition is ON, the rest of the instructions in the block program through BEND(801) will not be executed.

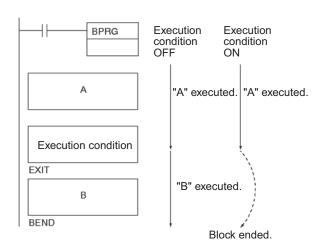

Operation with an Operand


If the operand bit, B, is OFF for EXIT(806) the rest of the block program will be executed normally. If the operand bit is ON for EXIT(806), the rest of the instructions in the block program through BEND(801) will not be executed. For EXIT NOT(806), the rest of the block program will be executed for if the operand bit is ON and skipped if the operand bit is OFF.

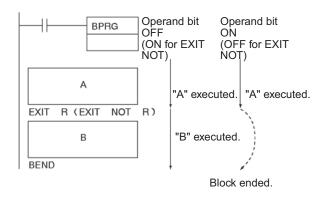

Example Programming

When CIO 0.00 is OFF, the block program is executed. If CIO 0.01 is ON, A is executed and then B is skipped and program control jumps to BEND(801). Section B of the program will continue to be skipped until CIO 0.01 turns OFF again.

Although EXIT (NOT)(806) is similar to IF-IEND programming, execution time is normally shorter for EXIT (NOT)(806) because the instructions from EXIT (NOT)(806) to the end of the block program are not executed at all.

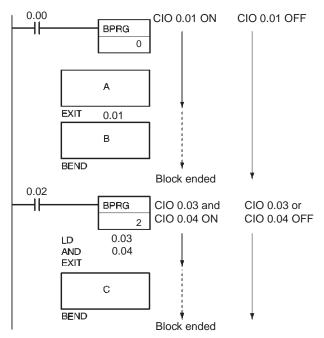

Address	Instruction	Operands
000200	LD	0.00
000201	BPRG(096)	0
:	Α	:
000210	EXIT(806)	0.01
:	В	:
000220	BEND(811)	
000221	LD	0.02
000222	BPRG(096)	2
000223	LD	0.03
000224	AND	0.04
000225	EXIT(806)	
:	С	:
000230	BEND(801)	

IF/IF NOT/ELSE/IEND

Instruction	Mnemonic	Variations	Function code	Function
	IF		802	When the execution condition (when an operand is not specified) or the specified bit (when an operand is specified) is OFF, the next and following instructions are executed. When ON, instructions up to ELSE are disregarded.
Branching	IF NOT		802	When the specified bit is ON, the next and following instructions are executed. When OFF, instructions up to ELSE are disregarded.
	ELSE		803	Indicates the beginning of the block that is executed when IF is false.
	IEND		804	Indicates the end of the conditional branch block area.

	Operation without an IF instruction operand (operation by execution condition)	Operation with an IF (IF NOT) ins	struction operand
	Execution condition	IF(802) B	B: Bit operand
Symbol	IF(802)	IF NOT(802) B	B: Bit operand
	ELSE(803)	ELSE(803) B	B: Bit operand
	IEND(804)	IEND(804) B	B: Bit operand

Applicable Program Areas

Area		Function block definitions	Block program areas	ock program areas Step program areas		Interrupt tasks	SFC action or transition programs	
	Usage	Not allowed	ОК	OK	OK* ¹	OK* ¹	Not allowed	

^{*1} IF(802), ELSE(803), and IEND(804) must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
В	Bit operand	BOOL	1

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR	
Alea	CIO	WR	HR	AR	Т	C	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits k	bits
В	OK	OK	OK	OK	OK	OK	OK*1	OK*1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.

Flags


Name	Label	Operation					
Name	Label	IF/IF NOT	ELSE/IEND				
Error Flag	ER	 ON if the branch instructions are not in a block program. ON if more than 254 branches are nested. OFF in all other cases. 	ON if the branch instructions are not in a block program. OFF in all other cases.				

Function

Operation without an Operand for IF(802)

If an operand bit is not specified, an execution must be created before IF(802) starting with LD. If the execution condition is ON, the instructions between IF(802) and ELSE(803) will be executed and if the execution condition is OFF, the instructions between ELSE(803) and IEND(804) will be executed.

If the ELSE(803) instruction is omitted and the execution condition is ON, the instructions between IF(802) and IEND(804) will be executed and if the execution condition is OFF, only the instructions after IEND(804) will be executed.

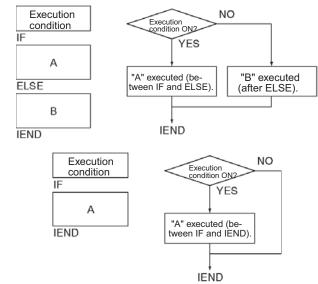


Operation with an Operand for IF(802) or IF NOT(802)

An operand bit, B, can be specified for IF(802) or IF NOT(802). If the operand bit is ON, the instructions between IF(802) and ELSE(803) will be executed. If the operand bit is OFF, the instructions between ELSE(803) and IEND(804) will be executed. For IF NOT(802), the instructions between IF(802) and ELSE(803) will be executed and if the operand bit is ON, the instructions be ELSE(803) and IEND(804) will be executed is the operand bit is OFF.

If the ELSE(803) instruction is omitted and the operand bit is ON, the instructions between IF(802) and IEND(804) will be executed and if the operand bit is OFF, only the instructions after IEND(804) will be executed. The same will happen for the opposite status of the operand bit if IF NOT(802) is used.

* The parentheses () in the explanation indicate the case of the IF NOT instruction.

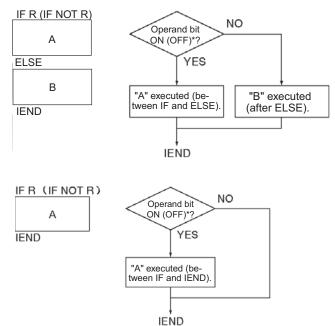


Hint

• Instructions in block programs are generally executed unconditionally. Branching, however, can be used to create conditional execution based on execution conditions or operand bits.


Use IF A ELSE B IEND to branch between A and B.

Use IF A IEND to branch between A and doing nothing.

- Nesting Branches
 - Up to 253 branches can be nested within the top level branch.

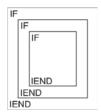

Example Programming

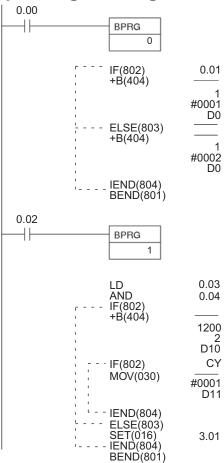

The following example shows two different block programs controlled by CIO 0.00 and CIO 0.02.

The first block executes one of two additions depending on the status of CIO 0.01. This block is executed when CIO 0.00 is ON. If CIO 0.01 is ON, 1 is added to the contents of CIO 1. If CIO 0.01 is OFF, 2 is added to the contents of CIO 1. In either case, the result is placed in D0.

Address	Instruction	Operands
000200	LD	0.00
000201	BPRG(096)	0
000202	IF(802)	0.01
000203	+B(404)	
		1
		#0001
		D0
000204	ELSE(803)	
000205	+B(404)	
		1
		#0002
		D0
000206	IEND(804)	
000207	BEND(801)	
000208	LD	0.02
000209	BPRG(096)	1
000210	LD	0.03
000211	AND	0.04
000212	IF(802)	
000213	+B(404)	
		1200
		2
		D10
000214	IF(802)	A50004
000215	MOV(030)	
		#0001
		D11
000216	IEND(804)	
000217	ELSE(803)	
000218	SET(016)	3.01
000219	IEND(804)	
000220	BEND(801)	

The second block is executed when CIO 0.02 is ON and shows nesting two levels. If CIO 0.03 and CIO 0.04 are both ON, the contents of CIO 1200 and CIO 2 are added and the result is placed in D10 and then 0001 is moved into D11 based on the status of CY. If either CIO 0.03 or CIO 0.04 is OFF, then the entire addition operation is skipped and CIO 3.01 is turned ON.

WAIT/WAIT NOT

Instruction	Mnemonic	Variations	Function code	Function
ONE CYCLE AND WAIT	WAIT		805	The instructions from the WAIT instruction to the BEND instruction are not executed until the execution condition (when an operand is not specified) or the specified bit (when an operand is specified) turns ON.
ONE CYCLE AND WAIT NOT	WAIT NOT		805	Stops execution of the rest of the block program until a specified bit OFF or an operand bit turns OFF

	Operation without an operand (operation by execution condition)	Operation with an operand		
Symbol	Execution condition	WAIT(805)	В	B: Bit operand
	WAIT(805)	WAIT(805) NOT	В	B: Bit operand

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	Not allowed	OK	OK	OK*1	OK*1	Not allowed

^{*1} WAIT(805)/WAIT(805) NOT must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
В	Bit operand	BOOL	1

Operand Specifications

		Word addresses					Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR					
A	Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
	В	OK	OK	OK	OK	OK	OK	OK*1	OK*1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.


Flags

Name	Label	Operation			
Error Flag	ER	ON if WAIT(805) or WAIT(805) NOT is not in a block program. OFF in all other cases.			

Function

Operation without an Operand


If an operand bit is not specified, an execution must be created before WAIT(805)/WAIT(805 NOT starting with LD. If the execution condition is OFF for WAIT(805), the rest of the instruction in the block program will be skipped. In the next cycle, none of the block program will be executed except for the execution condition for WAIT(805). When the execution condition goes ON, the instruction from WAIT(805) to the end of the program will be executed.

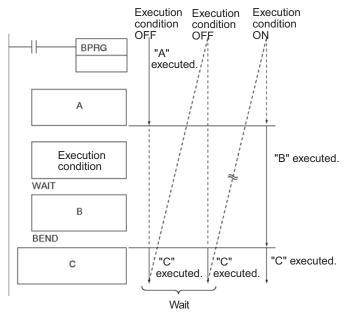

Operation with an Operand

An operand bit, B, can be specified for WAIT(805) or WAIT NOT(805). If the operand bit is OFF (ON for WAIT NOT(805)), the rest of the instructions in the block program will be skipped. In the next cycle, none of the block program will be executed except for the execution condition for WAIT(805) or WAIT(805) NOT. When the execution condition goes ON (OFF for WAIT(805) NOT), the instruction from WAIT(805) or WAIT(805) NOT to the end of the program will be executed.

* The parentheses () in the explanation indicate the case of the WAIT NOT instruction.

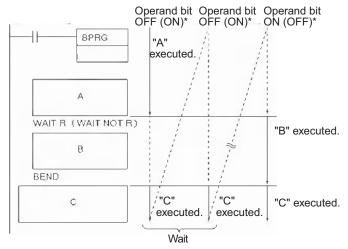


Hint

• WAIT(805) and WAIT(805) NOT can be used for step progressions inside block programs.

Precautions

No block programming instructions will be executed while the input condition for WAIT(805) is OFF.
The other block programming instructions will be executed again after the input condition for
WAIT(805) turns ON. If, however, online editing is executed for a task containing a block program, the
wait status created by WAIT(805) will be cleared and the block program will be executed again from
the beginning.

Example Programming

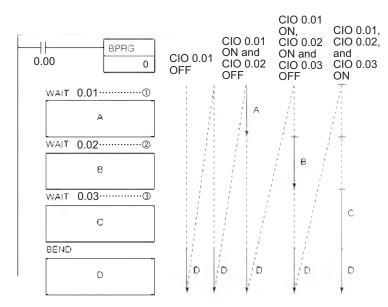


When CIO 0.00 is ON in the following example, block program 00 will be executed. Execution would proceed as follows:

- If CIO 0.01 is OFF, none of the block program will be executed until CIO 0.01 turns ON. When CIO 0.01 turns ON, "A" will be executed.
- 2. If CIO 0.02 is OFF after "A" is executed, the rest of the block program will not be executed until CIO 0.02 turns ON. When CIO 0.02 turns ON, "B" will be executed
- If CIO 0.03 is OFF after "B" is executed, the rest of the block program will not be executed until CIO 0.03 turns ON. When CIO 0.03 turns ON, "C" will be executed and the execution process will be repeated.

	Operand bits		Program execution						
CIO 0.01	CIO 0.02	CIO 0.03	First cycle CIO 0.00 is ON	Following cycles					
OFF	Any status	Any status	Nothing executed.	Nothing executed; waiting for CIO 0.01.	When CIO 0.01 turns ON "A" is executed and the status of CIO 0.02 is checked.				
ON	OFF	Any status	"A" executed.	Waiting for CIO 0.02.	When CIO 0.02 turns ON "B" is executed and the status of CIO 0.03 is checked.				
ON	ON	OFF	"A" and "B" executed.	Waiting for CIO 0.03.	When CIO 0.03 turns ON "C" is executed				
ON	ON	ON	"A," "B," and "C" executed.	"A," "B," and "C" executed.					

As shown in this example, WAIT(805) and WAIT(805) NOT can be used to progressively execute steps within a block program.

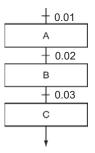

TIMW/TIMWX

Instruction	Mnemonic	Variations	Function code	Function		
HUNDRED-MS TIMER WAIT	TIMW		813	Delays execution of the rest of the block program		
HUNDRED-ING HIVER WALL	TIMWX		816	until the specified time has elapsed.		

	BCD		Binary					
Symbol	TIMW(813)	N	N: Timer number	TIMWX(816)	N	N: Timer number		
		SV	SV: Set value		SV	SV: Set value		
Symbol	1110100(013)							

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	Not allowed	ОК	OK	OK*1	Not allowed	Not allowed	

^{*1} TIMW(813)/TIMWX(816) must be used in block programming regions even within subroutines.

Operands

Operand	Description	Data type	Size	
N	Timer Number	TIMER	1	
SV	Set Value	WORD	1	

N: Timer Number

BCD: 0 to 4095 (decimal) Binary: 0 to 4095 (decimal)

S: Set Value

BCD: #0000 to #9999 (BCD)
Binary: &0 to &65535 (decimal)
#0000 to #FFFF (hex)

Operand Specifications

Area	Word addresses Indirect DM/EM addresses							Con-	Registers			Flags		Pulse	TR			
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
N					ОК									OK				
SV	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		UK.				_

Flags

Name	Label	Operation
Error Flag	P_ER	ON if TIMW(813)/TIMWX(816) is not in a block program. ON if an indirect IR designation is used for N in BCD mode and the address is not for a timer present value. ON if in BCD mode and SV is not BCD. OFF in all other cases.


Function

TIMW(813)/TIMWX(816) creates an ON-delay countdown timer (100-ms timer set in SV) between execution of the block program instruction preceding it and the instructions following. TIMW(813) can time from 0 to 999.9 s with a timer accuracy of 0 to 0.01 s. TIMWX(816) can time from 0 to 6,553.5 s with a timer accuracy of 0 to 0.01 s.

Note The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

The first part of the block program is executed the first time the block program is entered. When TIMW(813)/TIMWX(816) is reached, the Completion Flag is reset to OFF, the timer is preset to the SV, and execution of the rest of the block program will wait until SV has expired.

While the timer is timing down, only TIMW(813)/TIMWX(816) will be executed to update the timer. When the timer times out, the Completion Flag will turn ON and the rest of the block program will be executed.

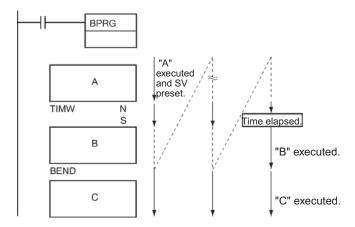


Hint

• TIMW(813)/TIMWX(816) can be thought of as a WAIT instruction with a timer for the execution condition and it can thus be used for timed step progressions.

Precautions

- No block programming instructions will be executed after the input condition for TIMW(813) turns ON until TIMW(813) times out. The other block programming instructions will be executed again after the set time for TIMW(813) has expired. If, however, online editing is executed for a task containing a block program, the wait status created by TIMW(813) will be cleared and the block program will be executed again from the beginning.
- The present value of timers programmed with timer numbers 0000 to 2047 will be updated even when the timer is on standby. The present value of timers programmed with timer numbers 2048 to 4095 will be held when the timer is on standby.
- The rest of the block program following timer will be executed if the Completion Flag for the timer is force set.
- If the Completion Flag for the timer is force reset, only TIMW(813)/TIMWX(816)) will be executed in the block program until the force reset status is cleared.
- The timer numbers are also used by the other timer instructions. Operation will not be predictable if the same timer number is used for more than one timer instruction. Use each timer number only once. The only way that the same timer number can be used dependably is if only one of the timers is ever operating at the same time. An error will occur in the program check if the same timer number is used in more than one timer instruction.
- The timer will not operate correctly if the cycle time is 100 ms or longer.

Example Programming

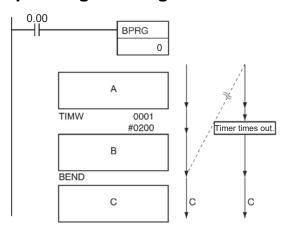


Coding		
Address	Instruction	Operand
000200	LD	000000
000201	BPRG	0
	А	
000210	TIMW	1
		#0200
	В	
000220	BEND	

• Operation of TIMW(813)

When 0.00 turns ON, BPRG0 is executed. After program "A" is executed, the set value is preset in timer 1 and the program jumps to BEND.

"A" is not executed in the next cycle; execution takes place from the TIMW instruction. When the time (20 seconds) elapses, program "B" is executed.

Program execution will flow from 2 to 3 to 4 and back to 2 during the 20 s before "B" is executed, as shown in the following diagram.

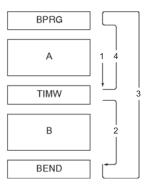

CNTW/CNTWX

Instruction	Mnemonic	Variations	Function code	Function			
COUNTER WAIT	CNTW		814	Delays execution of the rest of the block program			
COUNTER WAIT	CNTWX		818	until the specified count has been achieved.			

	BCD			Binary					
0	CNTW(814)	N	N: Counter number	CNTWX(818)	N	N: Counter number			
Symbol		SV	SV: Set value		SV	SV: Set value			
		I	I: Count input		I	I: Count input			

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	Not allowed	OK	OK	OK*1	OK*1	Not allowed	

^{*1} CNTW(814)/CNTWX(818) must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
N	Counter Number	COUNTER	1
S	Set Value	WORD	1
I	Count input	BOOL	1

N: Timer Number

BCD: 0 to 4095 (decimal) Binary: 0 to 4095 (decimal)

SV: Set Value

BCD: #0000 to #9999 (BCD)
Binary: &0 to &65535 (decimal)
#0000 to #FFFF (hex)

Operand Specifications

Area			V	Nord ac	ddress	es			Indirect addre		Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
N														ОК				
S	OK	OK	ОК	ОК	ОК	ОК	OK	OK	OK	OK	OK	OK		OK				
1	OK OK	UK	UK	UK	UK		OK*1	OK*1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.


Flags

Name	Label	Operation
Error Flag	P_ER	 ON if CNTW(814)/CNTWX(818) is not in a block program. ON if an indirect IR designation is used for N in BCD mode and the address is not for a counter present value. ON if SV is not BCD when BCD mode is set. OFF in all other cases.

Function

The first part of the block program is executed the first time the block program is entered. When CNTW(814)/CNTWX(818) is reached, the Completion Flag is reset to 0, the counter is preset to SV, and execution of the rest of the block program will wait until the counter has counted out. The counter counts pulses (upward differentiation) on I, the counter input.

While the counter is counting down, only CNTW(814)/CNTWX(818) will be executed to update the counter. When the counter counts out, the Completion Flag will turn ON and the rest of the block program will be executed.

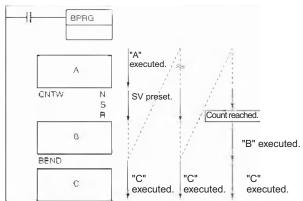


Hint

 CNTW(814)/CNTWX(818) can be thought of as a WAIT instruction with a counter for the execution condition and it can thus be used for timed step progressions.

Precautions

- The rest of the block program following CNTW(814)/CNTWX(818) will be executed if the Completion Flag for the counter is force set.
- If the Completion Flag for the counter is force reset, the only CNTW(814)/CNTWX(818) will be executed in the block program until the force reset status is cleared.
- The counter numbers are also used by the other counter instructions. Operation will not be predictable if the same counter number is used for more than one counter instruction. Use each counter number only once. The only way that the same counter number can be used dependably is if only one of the counters is ever operating at the same time. An error will occur in the program check if the same counter number is used in more than one counter instruction.


Example Programming

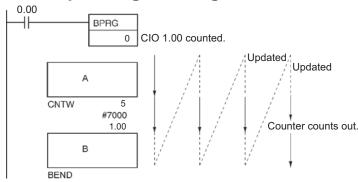

 When CIO 0.00 is ON in the following example, "A" will be executed and then execution of the rest of the block program "B" will wait until 7,000 counts of CIO 1.00.

Program execution will flow from 2 to 3 to 4 and back to 2 during the 7,000 counts before "B" is executed, as shown in the following diagram.

Coding		
Address	Instruction	Operand
000200	LD	0.00
000201	BPRG	0
	A	
	, ,	
000210	CNTW	5
		#7000
		1.00
	В	
		·
000220	BEND	

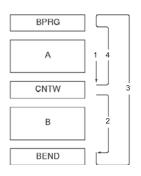

TMHW/TMHWX

Instruction	Mnemonic	Variations	Function code	Function
TEN-MS TIMER WAIT	TMHW		815	Delays execution of the rest of the block program
TEN-WO TIMEN WAIT	TMHWX		817	until the specified time has elapsed.

	BCD			Binary					
Symbol	TMHW(815)	N	N: Timer number	TMHWX(817)	N	N: Timer number			
		SV	SV: Set value		SV	SV: Set value			

Applicable Program Areas

Area	Function block definitions Block program		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	Not allowed	ОК	OK	OK*1	Not allowed	Not allowed		

^{*1} TMHW(815)/TMHWX(817) must be used in block programming regions even within subroutines.

Operands

Operand	Description	Data type	Size
N	Timer Number	TIMER	1
SV	Set Value	WORD	1

N: Timer Number

BCD: 0 to 4095 (decimal) Binary: 0 to 4095 (decimal)

S: Set Value

BCD: #0000 to #9999 (BCD)
Binary: &0 to &65535 (decimal)
#0000 to #FFFF (hex)

Operand Specifications

Area		Word addresses									Indirect DM/EM addresses Con-			Registers				Pulse	TR
		CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
N	-					ОК									OK				
SV	C	OK	OK	OK	OK	5	OK	OK	OK	OK	OK	OK	OK		OK .				

Flags

Name	Label	Operation
Error Flag	P_ER	ON if TMHW(815)/TMHWX(817) is not in a block program. ON if an indirect IR designation is used for N in BCD mode and the address is not for a timer present value. ON if in BCD mode and SV is not BCD. OFF in all other cases.


Function

TMHW(815)/TMHWX(817) creates an ON-delay countdown timer (10-ms timer set in SV) between execution of the block program instruction preceding it and the instructions following. TMHW(815) can time from 0 to 99.99 s with a timer accuracy of 0 to 0.01 s. TMHWX(817) can time from 0 to 655.35 s with a timer accuracy of 0 to 0.01 s.

Note The timer accuracy for a CS1D CPU Unit for a Duplex CPU System is from -10 ms to + the cycle time.

The first part of the block program is executed the first time the block program is entered. When TMHW(815)/TMHWX(817) is reached, the Completion Flag is reset to OFF, the timer is preset to the SV, and execution of the rest of the block program will wait until SV has expired.

While the timer is timing down, only TMHW(815)/TMHWX(817) will be executed to update the timer. When the timer times out, the Completion Flag will turn ON and the rest of the block program will be executed.

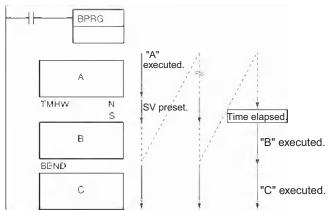

Hint

• This instruction is a WAIT instruction that uses a timer (time out) for the execution condition. This can be used in a process that advances based on a timer.


Precautions

- The present value of timers programmed with timer numbers 0000 to 2047 will be updated even when the timer is on standby. The present value of timers programmed with timer numbers 2048 to 4095 will be held when the timer is on standby.
- The rest of the block program following TMHW(815)/TMHWX(817) will be executed if the Completion Flag for the timer is force set.
- If the Completion Flag for the timer is force reset, the only TMHW(815)/TMHWX(817) will be executed in the block program until the force reset status is cleared.
- The timer numbers are also used by the other timer instructions. Operation will not be predictable if the same timer number is used for more than one timer instruction. Use each timer number only once. The only way that the same timer number can be used dependably is if only one of the timers is ever operating at the same time. An error will occur in the program check if the same timer number is used in more than one timer instruction.
- The timer will not operate correctly if the cycle time is 100 ms or longer.

Example Programming

• Operation of TMHW(815)

When 0.01 is ON, BPRG1 is executed. After program A is executed, the set value is preset in timer 2 and the program jumps to BEND. A is not executed in the next cycle; execution takes place from the TMHW instruction. When the time elapses (0.2 seconds), program B is executed.

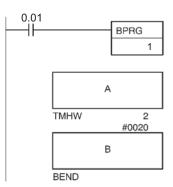

Coding		
Address	Instruction	Operand
000221	LD	0.01
000222	BPRG	0
	А	
000250	TMHW	2
		#0020
	В	
000281	BEND	

LOOP/LEND/LEND NOT

Instruction	Mnemonic	Variations	Function code	Function
	LOOP		809	Indicates the beginning of the loop (LOOP to LEND).
Loop Control	LEND		810	Indicates the end of the loop (LOOP to LEND). LOOP to LEND is repeated until the execution condition (when an operand is not specified) or the specified bit (when an operand is specified) turns ON.
	LEND NOT		810	Indicates the end of the loop (LOOP to LEND NOT). LOOP to LEND NOT is repeated until the specified bit turns OFF.

	LOOP	LEND (LEND NOT)			
		Operation without an operand (operat	ion by execution condition)		
		Execution condition	LEND(810)		
Symbol	LOOP(809)	Operation with an operand			
		LEND(810) B	B: Bit operand		
		LEND(810) NOT B	B: Bit operand		

Applicable Program Areas

Area	Function block definitions	I Block program areas I Step program areas I		Subroutines	Subroutines Interrupt tasks	
Usage	Not allowed	OK	OK	OK*1	OK*1	Not allowed

^{*1} LOOP(809), LEND(810), and LEND(810) NOT must be used in block programming regions even within subroutines and interrupt tasks.

Operands

Operand	Description	Data type	Size
В	Bit operand	BOOL	1

Operand Specifications

Area	Word addresses				Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR						
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits bit	bits
В	OK	OK	OK	OK	OK	OK	OK*1	OK*1						OK	OK	OK	OK	

^{*1} CJ2 CPU Units only.


Flags

Name	Label	Operation
Error Flag	ER	 ON if a Loop Control Instruction is not in a block program. OFF in all other cases.

Function


Using an Execution Condition for LEND(810)

LEND(810) can be programmed either with or without an operand bit. If an operand bit is not specified, an execution must be created before LEND(810) starting with LD. If the execution condition is OFF, execution of the loop is repeated starting with the next instruction after LOOP(809). If the execution condition is ON, the loop is ended and execution continues to the next instruction after LEND(810).

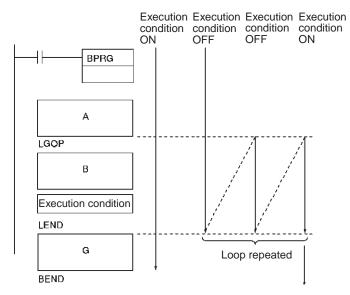

Using a Bit Operand for LEND(810) or LEND(810) NOT

Both LEND(810) and LEND(810) NOT can be programmed with an operand bit. If the operand bit is OFF for LEND(810) (or ON for LEND(810) NOT), execution of the loop is repeated starting with the next instruction after LOOP(809). If the operand bit is ON for LEND(810) (or OFF for LEND(810) NOT), the loop is ended and execution continues to the next instruction after LEND(810) or LEND(810) NOT.

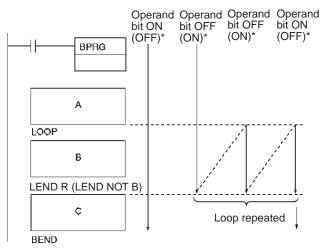

* The status of the operand bit would be reversed for LEND(810) NOT.

Precautions

Execution inside a loop does not refresh I/O data. If I/O data must be refreshed during the loop, use IORF(184).

The maximum cycle time can be exceeded if loops are repeated too long. Design the program so that the maximum cycle time is not exceeded.

· Loops cannot be nested within loops.

Incorrect:

LOOP(809)

LOOP(809)

:

LEND(810)

LEND(810)

• Do not reverse the order of LOOP and LEND.

Incorrect:

LEND(810)

:

LOOP(809)

• Conditional block branching can be used within a loop, but the entire branch operation must be within the loop.


Correct: Incorrect:
LOOP(809) LOOP(809)
IF(802) IF(802)
IF(802) IF(802)
IEND(804) IEND(804)
IEND(804) LEND(810)
LEND(810) IEND(804)

• NOP processing will be performed if LOOP(809) is not executed.

Example Programming

• Operation of LOOP(809)

When CIO 0.00 is ON in the following example, the block program is executed. After "A" is executed, "B" and the IORF(184) after it will be executed repeatedly until CIO 0.01 is ON, at which time C will be executed and the block program will end.

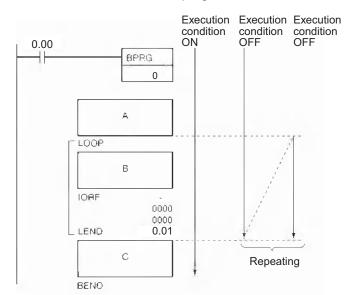

Coding								
Address	Instruction	Operand						
000220	LD	0.00						
000201	BPRG	0						
	А							
000210	LOOP	2						
	В							
000220	IORF							
		0000						
		0000						
000221	LEND	0.01						
	С							
000220	BEND							

Text String Processing Instructions

Text String Processing Overview

Data from the beginning until a NUL code (00 hex) is handled as text string data expressed in ASCII (except for 1-byte, special characters). It is stored from leftmost to rightmost bytes, and from rightmost to leftmost words.

When there is an odd number of characters, 00 hex (NUL code) is stored in the available space in the rightmost byte of the final word.

Example: Text string ABCDE

A— <u>;</u> В		41	42
C [±] D	=	43	44
F NIII	7	45	00

When there is an even number of characters, 0000 hex (two NUL codes) is stored in the leftmost and rightmost bytes of the word following the final word.

Example: Text string ABCD


Α	В		41	42
С	D	=	43	44
NUL	NUL	_	00	00

As shown in the following diagram, a text string can be specified by simply designating the first word of that string. The text string data up until the next NUL code (00 hex) will then be handled as a single block of ASCII data.

Example: MOV\$ D0 D100

D0	41	42		D100	41	42
D1	43	44] —-	D101	43	44
D2	45	NUL	1	D102	45	NUL

Text string processing instructions can be used to execute at a PLC the various kinds of text string processing (product data, and so on) that used to be executed at the host computer.

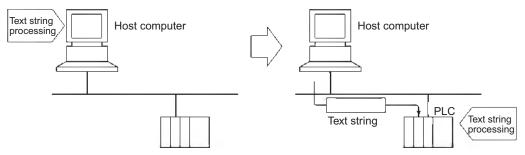


For example, production plan data such as product names can be transferred from the host computer to the PLC. Various operations such as inserting and rearranging text strings can be then be performed at the PLC, thereby reducing the data processing load at the host computer.

The ASCII characters that can be handled by text string processing instructions are shown in the following table.

							F	our l	eftn	ost	bits						en i
		0	1	2	3	4	5	6	7	8	9	А	В	C	D	Ε	F
100	0			SP	0	@	P		р				-110	タ	111		
6	1			1	1	Α	Q	а	q			0	ア	チ	4		
	2			7.9	2	В	R	b	r				1	ツ	×		
	3			#	3	C	Ş	C	\$			IJ	ウ	テ	Ŧ		
	4			\$	4	D	T	d	t				I	1	ヤ		
S,	5			%	5	E	U	e	u				オ	ナ	그	i	
t bit	6			8	6	F	V	f	٧			ヲ	カ	=	日		
mos	7			7	7	G	W	g	W			ア	丰	ヌ	ラ		
ight	8			(8	Н	Χ	h	Х			1	ク	ネ	リ		İ
Four rightmost bits	9)	9	I	Υ	i	У			ウ	ケ	1	ル		
ΙĻ	Α			*	:	J	Z	j	Z			I		11	レ		
	В			+	;	Κ		k	{			才	+	Ł			
	С			7	<	L	¥	Ι	1			t	シ	フ	ワ		
Ź	D			-	=	М]	m	1		1	고	ス	$\overline{}$	ン		
į	Ε				>	N	^	n	~			∃	セ	ホ	*		
,	F			/	?	0		0				.7	ソ	र	à		

MOV\$

Instruction	Mnemonic	Variations	Function code	Function
MOV STRING	MOV\$	@MOV\$	664	Transfers a text string.

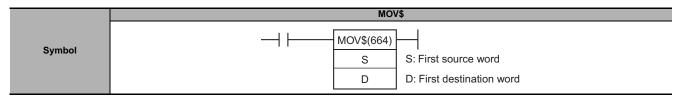

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size
S	First source word	UINT	Variable
D	First destination word	UINT	Variable

Operand Specifications

Area		Word addresses								Indirect DM/EM addresses Con-			Registers			Flags		TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
S	ОК	ОК	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК				OK				T
D	OK	OK	OK	OK	OR	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is transferred to D. OFF in all other cases.

Function


MOV\$(664) transfers the text string data designated by S, just as it is, as text string data (including the final NUL), to D. The maximum number of characters that can be designated by S is 4,095 (0FFF hex).

S	Α	В	D	Α	В
	С	D	→	С	D
	E	F		E	F
	G	NUL		G	NUL

MOV\$(664) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Example Programming

In this example, MOV\$(664) is used to transfer the text string ABCDEF.

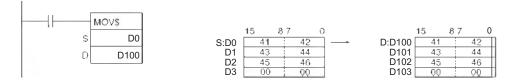



Instruction	Mnemonic	Variations	Function code	Function			
CONCATENATE STRING	+\$	@+\$	656	Links one text string to another text string.			

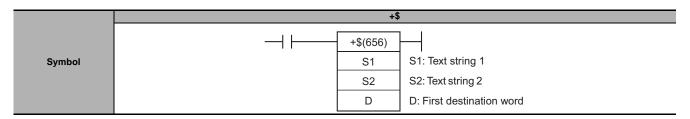


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S1	Text string 1	INT	Variable
S2	Text string 2	INT	Variable
D	First destination word	INT	Variable


S1: Text String 1

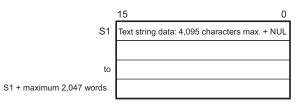

D: First Destination Word

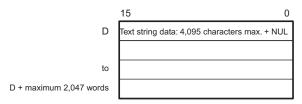

S2: Text String 2

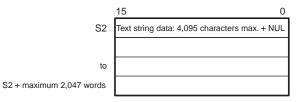

- Note The data from S1 to S1 + the maximum 2,047 words, from S2 to S2 + the maximum 2,047 words, and from D to D + the maximum 2,047 words must be in the same area.
 - The data from S2 to S2 + the maximum 2,047 words and from D to D + the maximum 2,047 words cannot overlap.

Operand Specifications

Area			V	Vord ad	ldresse	s			Indirect DM/EM addresses Co			Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S1																		
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		


3

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1 and S2. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is transferred to D. OFF in all other cases.

Function

+\$(656) connects the text string data designated by S1 to the text string data designated by S2, and outputs the result to D as text string data (including the final NUL).

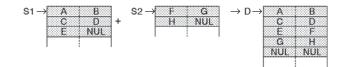

The maximum number of characters that can be designated by S1 and S2 is 4,095 (0FFF hex). If there is no NUL until 4,096 characters, an error will be generated and the Error Flag will turn ON. Moreover, the result of the linkage can be no more than 4,095 characters (0FFF hex). If the linkage results in more characters than that, only the first 4,095 characters (with NUL added as the 4,096th) will be output to D.

If there is a NUL for both S1 and S2, the two NUL characters (0000 hex) will be output to D.


+\$(656) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Precaution

Do not overlap the beginning word designated by D with the character data area for S2. If they overlap, the instruction cannot be executed properly.

Example Programming

In this example, +\$(656) is used to connect the text strings ABCD and EFG and output the result to D.

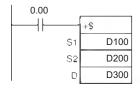

	15	0	ı		15
S1: D100	41	42	1	S2: D200	Г
D101	43	44] +	D201	
D102	00	00			

	15	0
D: D300	41	42
D301	43	44
D302	45	46
D303	47	00

LEFT\$/RGHT\$

Instruction	Mnemonic	Variations	Function code	Function
GET STRING LEFT LEFT\$ @LE			652	Fetches a designated number of characters from the left (beginning) of a text string.
GET STRING RIGHT	RGHT\$	@RGHT\$	653	Reads a designated number of characters from the right (end) of a text string.

	LEF	T\$		RGI	HT\$
	 LEFT\$(652)	\vdash	—	RGHT\$(653)	\vdash
Symbol	S1	S1: Text string first word		S1	S1: Text string first word
	S2	S2: Number of characters		S2	S2: Number of characters
	D	D: First destination word		D	D: First destination word


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S1	Text string first word	UINT	Variable
S2	Number of characters	UINT	1
D	First destination word	UINT	Variable

S1: Text String

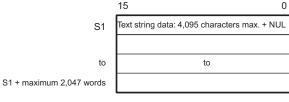

D: First Destination Word

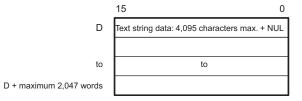

S2: Number of Characters

0000 to 0FFF hex or &0 to &4095

- Note The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words must be in the same area
 - The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words can overlap.

Operand Specifications

Area			V	ord ad	ldresse	s			Indirect DM/EM addresses		Con-		Registers			Flags		TR
	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S1																		
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1. ON if more than 4,095 characters (0FFF hex) are designated by S2. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is output to D. OFF in all other cases.


Function

• LEFT\$

LEFT\$(652) reads the number of characters designated by S2, from the left (the beginning) of the first word of the text string designated by S1 until the NUL code (00 hex), and outputs the result to D (with NUL added at the end).

If the number of characters fetched exceeds the number of characters designated by S1, the entire S1 text string will be output.

If 0 (0000 hex) is designated as the number of characters to be read, the two NUL characters (0000 hex) will be output to D.

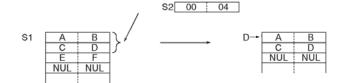

LEFT\$(652) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

RGHT\$

RGHT\$(653) reads the number of characters designated by S2, from the right (end) of the first word of the text string designated by S1 until the NUL code (00 hex), and outputs the result to D (with NUL added at the end).

If the number of characters to be read exceeds the number of characters designated by S1, the entire S1 text string will be output.

If 0 (0000 hex) is designated as the number of characters to be read, the two NUL characters (0000 hex) will be output to D.




RGHT\$(653) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


• LEFT\$

In this example, LEFT\$(652) is used to read four characters.

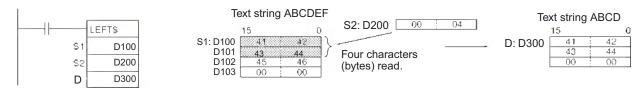


• RGHT\$

In this example, RGHT\$(653) is used to read four characters.

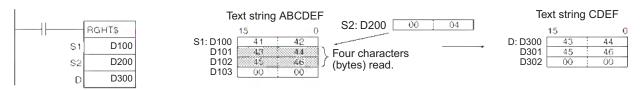

MID\$

Instruction	Mnemonic	Variations	Function code	Function				
GET STRING MIDDLE	MID\$	@MID\$	654	Reads a designated number of characters from any position in the middle of a text string.				

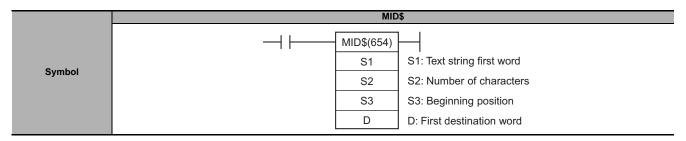


Applicable Program Areas

Area	Function block definitions Block program areas Ste		Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size
S1	Text string first word	UINT	Variable
S2	Number of characters	UINT	1
S3	Beginning position	UINT	1
D	First destination word	UINT	Variable

S1: Text String

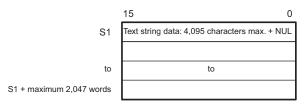

D: First Destination Word

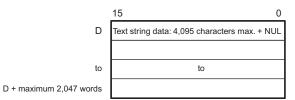

S2: Number of Characters

0000 to 0FFF hex or &0 to &4095

S3: Beginning Position

0001 to 0FFF hex or &1 to &4095

Note • The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words must be in the same area.

• The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words can overlap.

Operand Specifications

Area			٧	Vord ad	ldresse	s			Indirect DM/EM addresses Co		Con-	Registers			Flags		Pulse	TR
	CIO	WR	HR	AR	т	С	DM	ЕМ	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S1																		
S2, S3	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1. ON if more than 4,095 characters (0FFF hex) are designated by S2. ON if the S3 data is not within the range of 1 to 4,095 (0001 to 0FFF hex). ON if S3 is greater than S1. ON if the Communications Port Enabled Flag for the communications port number specified as the <i>Com Port number</i> for <i>Background Execution</i> is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is output to D. OFF in all other cases.


Note If the beginning position designated by S3 is beyond the text string designated by S1, an error will be generated and the Error Flag will turn ON.

Function

Within the text string identified by the first word designated by S1 until the NUL code (00 hex), MID\$(654) reads the number of characters designated by S2, from the beginning word designated by S3, and outputs the result to D as text string data (with NUL added at the end).

If the number of characters to be read extends beyond the end of the text string designated by S1, the string will be output up to the end.


If 0 (0000 hex) is designated as the number of characters to be read, the two NUL characters (0000 hex) will be output to D.

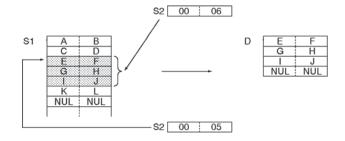


MID\$(654) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


In this example, MID\$(654) is used to read three characters.

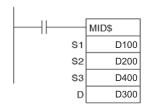

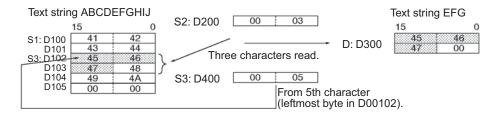

FIND\$

Instruction	Mnemonic	Variations	Function code	Function
FIND IN STRING	FIND\$	@FIND\$	660	Finds a designated text string from within a text string.

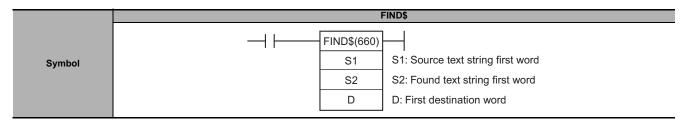


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		


Operands

Operand	Description	Data type	Size		
S1	Source text string first word	UINT	Variable		
S2	Found text string first word	UINT	Variable		
D	First destination word	UINT	1		

S1: Source Text String

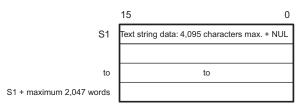

S2: Found Text String

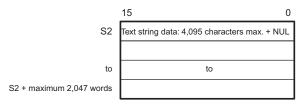

Note The data from S1 to S1 + the maximum 2,047 words and from S2 to S2 + the maximum 2,047 words must be in the same area.

Operand Specifications


Area		Word addresses								et DM/EM resses Con-		Registers			Flags		Pulse	TR
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits bits	bits
S1																		
S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
D																		

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1 or S2. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is output to D. OFF in all other cases.

Function


FIND\$(660) finds the text string designated by S2 from within the text string designated by S1, and outputs the result (a given number of characters from the beginning of S1) in binary data to D. If there is no matching text string, 0000 hex is output to D.

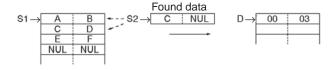


FIND\$(660) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


In this example, FIND\$(660) is used to find one character from within a text string.

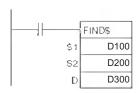

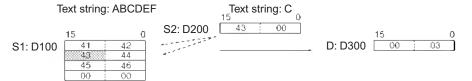

LEN\$

Instruction	Mnemonic	Variations	Function code	Function
STRING LENGTH	LEN\$	@LEN\$	650	Calculates the length of a text string.

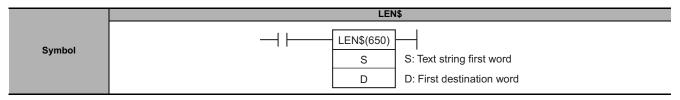


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size	
S	Text string first word	UINT	Variable	
D	First destination word	UINT	1	

S: Text String

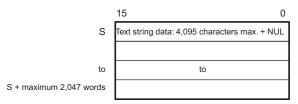

Note The data from S to S + the maximum 2,047 words must be in the same area.

Operand Specifications


	Aron	Word addresses						Indirect DM/EM addresses Con-			Registers			Flags		Pulse	TR		
ı	Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
_	S	ОК	ОК	ОК	ОК	ОК	ОК	OK	ОК	ОК	OK				OK				
	D	OK	OK	OK	OK	5	OK	5	OK	OK	ÖK	-	OK		OK .	-			

Flags

Name	Label	Operation
Error Flag	ER	 ON if the calculated result comes to more than 4,095 characters. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if the calculated result is 0. OFF in all other cases.

Function


LENS\$(650) calculates the number of characters from the first word of the text string, designated by S, until the NUL code (00 hex), including the NUL code itself, and outputs the result to D as binary data. If there is a NUL at the beginning of the text string, the result that is calculated will be 0000 hex.

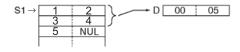


LENS\$(650) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


In this example, LENS\$(650) is used to calculate the number of characters and output the result.

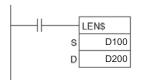

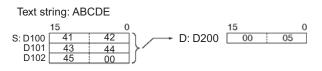

RPLC\$

Instruction	Mnemonic	Variations	Function code	Function
REPLACE IN STRING	RPLC\$	@RPLC\$	661	Replaces a text string with a designated text string from a designated position.

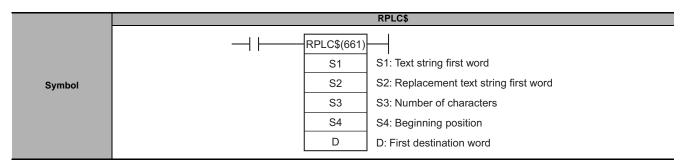


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	ОК	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size		
S1	Text string first word	UINT	Variable		
S2	Replacement text string first word	UINT	Variable		
S3	Number of characters	UINT	1		
S4	Beginning position	UINT	1		
D	First destination word	UINT	Variable		


S1: Text String

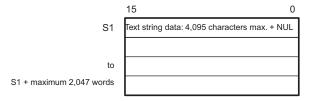

D: First Destination Word

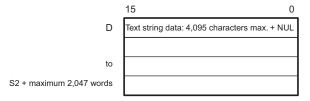

S2: Replacement Text String

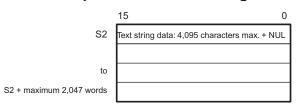

S3: Number of Characters

(0000 to 0FFF hex or &0 to &4095)

S4: Beginning Position

(0001 to 0FFF hex or &0 to &4095)

Note • The data from S1 to S1 + the maximum 2,047 words, from S2 to S2 + the maximum 2,047 words, and from D to D + the maximum 2,047 words must be in the same area.

• The data from D to D + the maximum 2,047 words and from either S1 to S1 + the maximum 2,047 words or from S2 to S2 + the maximum 2,047 words cannot overlap.

Operand Specifications


Aron	Word addresses								Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
S1, S2																		
S3, S4	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		ĺ

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1 or S2. ON if more than 4,095 characters (0FFF hex) are designated by S3. ON if the S4 data is not within the range of 1 to 4,095 (0001 to 0FFF hex). ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is output to D. OFF in all other cases.

Function

PLC\$(661) replaces part of the text string designated by S1, from the beginning position designated by S4, with the text string designated by S2, and outputs the result to D as text string data (with NUL added at the end). The number of characters to be replaced is designated by S3.

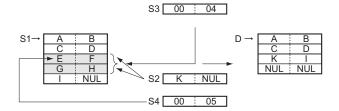


- The maximum number of characters in the result is 4,095 (0FFF hex). If the number is greater than that, only 4,095 characters will be output (with NUL added as the 4,096th).
- From 0 to 4,095 characters (0000 to 0FFF hex) can be replaced. If the number is 0, then the text string designated by S1 will be output to D just as it is, with no change. If the S2 text string is NUL, then the operation will be the same as deleting the designated range of text in S1.
- If the S1 text string from beginning to end is replaced by NUL, then two NUL characters (0000 hex) will be output to D. RPLC\$(661) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Precaution

• Set the first destination word D so that it does not overlap with the areas set with the replacement text string first word S2. RPLC\$(654) will not work correctly if these areas overlap.

Example Programming

In this example, RPLC\$(654) is used to replace three characters.

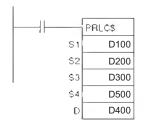

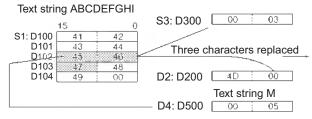

Text string ABCDMHI


15 0

D: D400 41 42
D401 43 44
D402 40 48
D403 49 00

From 5th byte.

DEL\$

Instruction	Mnemonic Variations		Function code	Function	
DELETE STRING	DEL\$	@DEL\$	658	Deletes a designated text string from the middle of a text string.	

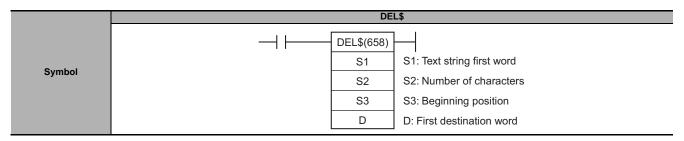


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	ОК	OK	OK	


Operands

Operand	Description	Data type	Size		
S1	Text string first word	UINT	Variable		
S2	Number of characters	UINT	1		
S3	Beginning position	UINT	1		
D	First destination word	UINT	Variable		

S1: Text String

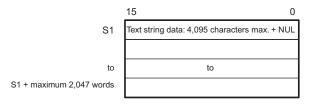

D: First Destination Word

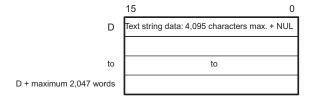

S2: Number of Characters

(0000 to 0FFF hex or &0 to &4095)

S3: Beginning Position

(0001 to 0FFF hex or &1 to &4095)

- Note The data from S1 to S1 + the maximum 2,047 words, from S2 to S2 + the maximum 2,047 words, and from D to D + the maximum 2,047 words must be in the same area.
 - The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words can overlap.

Operand Specifications

Aron	Word addresses							Indirect DM/EM addresses Con-		Registers			Flags		Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits b	bits
S1																		
S2, S3	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		


Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1. ON if more than 4,095 characters (0FFF hex) are designated by S2. ON if the S3 data is not within the range of 1 to 4,095 (0001 to 0FFF hex). ON if S3 is greater than S1. ON if the Communications Port Enabled Flag for the communications port number specified as the <i>Com Port number</i> for <i>Background Execution</i> is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON when 0000 hex is output to D. OFF in all other cases.

Function

Within the text string designated by S1, DEL\$(658) deletes the number of characters designated by S2, from the beginning word designated by S3, and outputs the result to D as text string data (with NUL added at the end).


If the number of characters to be deleted extends beyond the end of the S1 text string, all of the characters up to the end will be deleted. If all of the characters from the beginning of S1 to the end are designated to be deleted, then 000 hex will be output to D.

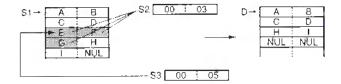


DEL\$(658) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.

Example Programming


In this example, DEL\$(658) is used to discard three characters.

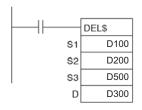

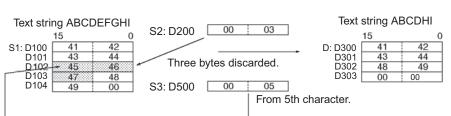

XCHG\$

Instruction	Mnemonic	Variations	Function code	Function	
EXCHANGE STRING	XCHG\$	@XCHG\$	665	Replaces a designated text string with another designated text string.	

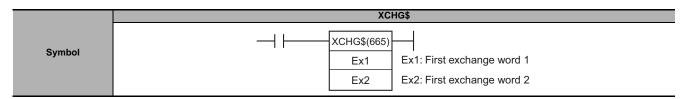


Applicable Program Areas

Area	Function block definitions	Block program areas Step program areas		Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	


Operands

Operand	Description	Data type	Size	
Ex1	First exchange word 1	UINT	Variable	
Ex2	First exchange word 2	UINT	Variable	

Ex1: First Exchange Word 1

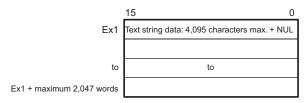

Ex2: First Exchange Word 2

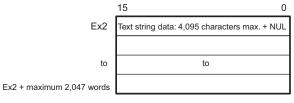

Note • The data from Ex1 to Ex1 + the maximum 2,047 words and from Ex2 to Ex2 + the maximum 2,047 words must be in the same area.

• The data from Ex1 to Ex1 + the maximum 2,047 words and from Ex2 to Ex2 + the maximum 2,047 words cannot overlap.

Operand Specifications


Area			v	ord ad	dresse	s				direct DM/EM addresses Con-			Registers			Flags		TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	TK	CF	bits	bits
D1, D2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by Ex1 or Ex2. ON the Ex1 and Ex2 data overlap. ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.

Function


XCHG\$(665) exchanges the text string designated by Ex1 with the text string designated by Ex2. If either Ex1 or Ex2 is NUL, then two NUL characters (0000 hex) will be output to the other one of them.

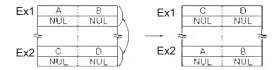

XCHG\$(665) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Example Programming

In this example, XCHG\$(665) is used to exchange two text strings.

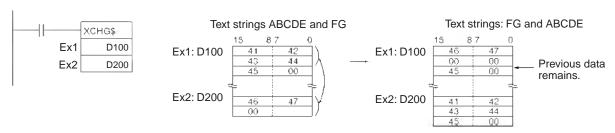

CLR\$

Instruction	Mnemonic	Variations	Function code	Function				
CLEAR STRING	CLR\$	@CLR\$	666	Clears an entire text string with NUL (00 hex).				

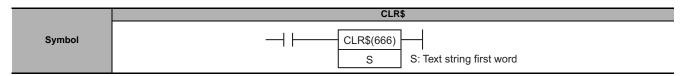


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
S	Text string first word	UINT	Variable

S: Text String First Word

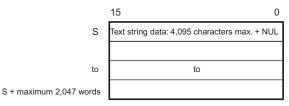

Note The data from S to S + the maximum 2,047 words must be in the same area.

Operand Specifications


Area			v	Vord ad	dresse	s			Indirect addre	Con-	Registers			Flags		Pulse	TR	
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.

Function


CLR\$(666) clears with NUL (00 hex) the entire text string from the first word designated by S until the NUL code (00 hex). The maximum number of characters that can be cleared is 4,096. If there is no NUL before the 4,096th character, only 4,096 characters will be cleared

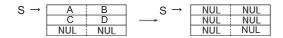

CLR\$(666) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Example Programming

In this example, CLR\$(666) is used to clear text string ABCDE.

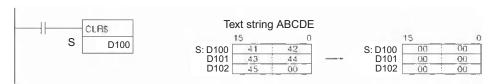

INS\$

Instruction	Mnemonic	Variations	Function code	Function
INSERT INTO STRING	INS\$	@INS\$	657	Inserts a designated text string into the middle of a text string.

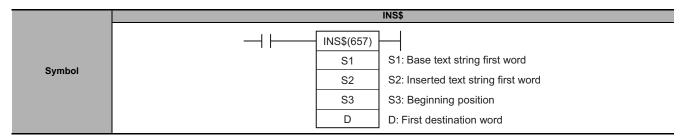


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size		
S1	Base text string first word	UINT	Variable		
S2	Inserted text string first word	UINT	Variable		
S3	Beginning position	UINT	1		
D	First destination word	UINT	Variable		


S1: Base Text String

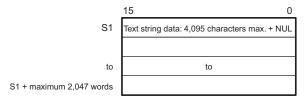

D: First Destination Word

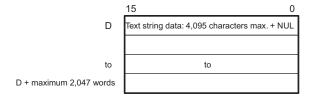

S2: Inserted Text String

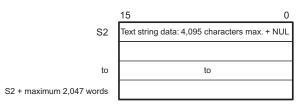

S3: Beginning Position

(0000 to 0FFF hex or &0 to &4095)

- The data from S1 to S1 + the maximum 2,047 words, from S2 to S2 + the maximum 2,047 words, and from D to D + the maximum 2,047 words must be in the same area.
 - The data from S2 to S2 + the maximum 2,047 words and from D to D + the maximum 2,047 words cannot overlap. The data from S1 to S1 + the maximum 2,047 words and from D to D + the maximum 2,047 words can overlap. The data from S1 to S1 + the maximum 2,047 words and from S2 to S2 + the maximum 2,047 words can also overlap.

Operand Specifications


Area			v	Vord ad	ldresse	s			Indirect addre	DM/EM esses	Con-		Registers			ags	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	ЕМ	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S1, S2																		
S 3	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D													Ī					

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1 or S2. ON if S3 exceeds 4,095 (0FFF hex). ON if the Communications Port Enabled Flag for the communications port number specified as the Com Port number for Background Execution is OFF when background processing is specified. OFF in all other cases.
Equal Flag	=	ON if 0000 (hex) is output to D. OFF in all other cases.

Function

Within the text string designated by S1, INS\$(657) inserts the text string designated by S2, after the beginning word designated by S3, and outputs the result to D as text string data (with NUL added at the end).

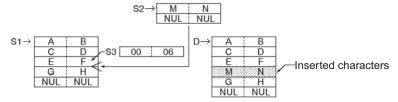


- The maximum number of characters that can be inserted is 4,095 (0FFF hex). If there are more than that, only 4,095 characters will be output to D (with NUL added as the 4,096th character).
- The 0th to the 4095th character can be specified for the starting position (S3) of the insertion. If the 0th character is specified, the operation is the same as joining S2 and S1.
- If either S1 or S2 is NUL, then the text string designated by the other one of them will be output to D just as it is. If S1 and S2 are both NUL, then two NUL characters (0000 hex) will be output to D.
- INS\$(657) can be processed in the background. Refer to the SYSMAC CS/CJ/NSJ Series PLC Programming Manual (W394) or the CJ2 CPU Unit Software Operation Manual (W473) for details.


Precaution

• Do not overlap the destination words designated by D with the text string data designated by S2. If these overlap, the operation will not be executed properly.

Example Programming

In this example, INS\$(657) is used to insert two characters.

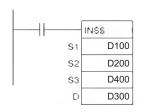

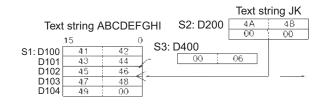

Text string ABCDEFJKGHI						
D: D300 D301 D302 D303 D304 D305	41 43 45 4A 47 49	42 44 46 48 00				

=\$, **<>\$** , **<\$** , **<=\$** , **>\$** , **>=\$**

Instruction	Mnemonic	Variations	Function code	Function
String Comparison	=\$, <>\$, <\$, <=\$, >\$, >=\$		670 to 675	String comparison instructions (=\$, <>\$, <\$, <=\$, >\$, >=\$) compare two text strings from the beginning, in terms of value of the ASCII codes. If the result of the comparison is true, an ON execution condition is created for a LOAD, AND, or OR.

	LD (Load)	AND (Series Connection)	OR (Parallel Connection)		
Symbol	Mnemonic S1 S1: Text string 1 S2 S2: Text string 2	Mnemonic S1 S1: Text string 1 S2 S2: Text string 2	Mnemonic S1 S1: Text string 1 S2 S2: Text string 2		


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK


Operands

Operand	Description	Data type	Size
S1	Text string 1	UINT	Variable
S2	Text string 2	UINT	Variable

S: Text String 1

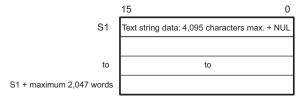

S: Text String 2

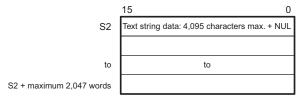

- Note The data from S1 to S1 + the maximum 2,047 words and from S2 to S2 + the maximum 2,047 words be in the same area
 - The data from S1 to S1 + the maximum 2,047 words and from S2 to S2 + the maximum 2,047 words cannot overlap.

Operand Specifications

Area		Word addresses					Indirect addre		Con-		Regis	ters	Fla	ıgs	Pulse	TR		
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S1, S2	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				

Flags

Name	Label	Operation
Error Flag	ER	 ON if more than 4,095 characters are designated by S1 or S2. OFF in all other cases.
Greater Than Flag	>	ON if the comparison results in S1 greater than S2. OFF in all other cases.
Greater Than or Equals Flag	>=	 ON if the comparison results in S1 greater than or equal to S2. OFF in all other cases.
Equals Flag	=	ON if the comparison results in S1 equal to S2.OFF in all other cases.
Not Equal Flag	<>	ON if the comparison results in S1 not equal to S2.OFF in all other cases.
Less Than Flag	<	ON if the comparison results in S1 less than S2. OFF in all other cases.
Less Than or Equals Flag	<=	ON if the comparison results in S1 less than or equal to S2. OFF in all other cases.

Note When the Error Flag is ON, an OFF execution condition will be output to the next instruction.


Function

String comparison instructions compare the text strings designated by S1 and S2. If the result of the comparison is true, an ON execution condition is created in the ladder diagram. The maximum number of characters for either S1 or S2 is 4,095 (0FFF hex).

The input comparison instructions are treated just like the LD, AND, and OR instructions to control the execution of subsequent instructions.

Input type	Operation
LD	The instruction can be connected directly to the left bus bar.
AND	The instruction cannot be connected directly to the left bus bar.
OR	The instruction can be connected directly to the left bus bar.

String comparison instructions are expressed by 18 types of mnemonics.

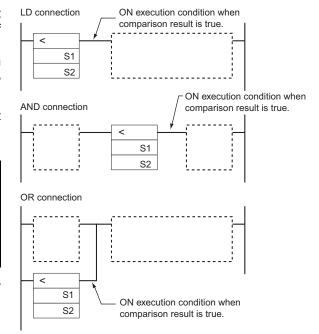

Text string comparison instructions

The following table provides details of these instructions.

Function	Mnemonic	Name	Code				
True when S1 text string equals S2 text string.	LD=\$(670)	LOAD STRING EQUALS	670				
	AND=\$(670)	AND=\$(670) AND STRING EQUALS					
	OR=\$(670)	OR STRING EQUALS					
True when S1 text string does not equal S2 text	LD<>\$(671)	LOAD STRING NOT EQUAL	671				
string.	AND<>\$(671)	AND STRING NOT EQUAL					
	OR<>\$(671)	OR STRING NOT EQUAL					
True when S1 text string is less than S2 text	LD<\$(672)	LOAD STRING LESS THAN	672				
tring.	AND<\$(672)	AND STRING LESS THAN					
	OR<\$(672)	OR STRING LESS THAN					
True when S1 text string is less than or equal to	LD<=\$(673)	LOAD STRING LESS THAN OR EQUALS	673				
S2 text string.	AND<=\$(673)	AND STRING LESS THAN OR EQUALS					
	OR<=\$(673)	OR STRING LESS THAN OR EQUALS					
True when S1 text string is greater than S2 text	LD>\$(674)	LOAD STRING GREATER THAN	674				
string.	AND>\$(674)	AND STRING GREATER THAN					
	OR>\$(674)	OR STRING GREATER THAN					
True when S1 text string is greater than or equal	LD>=\$(675)	LOAD STRING GREATER THAN OR EQUALS	675				
to S2 text string.	AND>=\$(675)	AND STRING GREATER THAN OR EQUALS					
	OR>=\$(675)	OR STRING GREATER THAN OR EQUALS					

The comparison methods are as follows:

The first character (byte) of each text string is compared with its counterpart from the other string as ASCII code. If the two ASCII codes are not equal, then that greater/lesser relationship becomes the greater/lesser relationship for the two text strings.

If the two ASCII codes are equal, the next characters are compared. If these two ASCII codes are not equal, then, that greater/lesser relationship becomes the greater/lesser relationship for the two text strings. In this manner, the two text strings are compared in order, character by character. If all of the characters, including the NUL, are equal, then the two text strings will have an equal relationship.

If the two text strings are of differing lengths, then the NUL (00 hex) will be added to the shorter of the two strings to fill in the difference, and the comparison will be made on that basis.

Example: AD (414400 hex) and BC (424300 hex):

AD < BC, because at the beginning of the text strings 41 (hex) is less than 42 (hex).

Example: ADC (41444300 hex) and B (4200 hex):

ADC < B, because at the beginning of the text strings 41 (hex) is less than 42 (hex).

Example: ABC (41424300 hex) and ABD (41424400 hex):

ABC < ABD, because at the beginning of the text strings the 41s and 42s match, so the result is determined by 43 being less than 44.

Example: ABC (41424300 hex) and AB (414200 hex):

ABC > AB, because at the beginning of the text strings the 41s and 42s match, so the result is determined by 43 being greater than 00.

Example: AB (414200 hex) and AB (414200 hex):

AB = AB, because the 41s, the 42s, and the 00s all match.

Continue programming one instruction after another, treating LD, AND, and OR in the same way. LD and OR instructions can be connected directly to the bus bar, but AND instructions cannot.

Hint


• String comparison instructions are used to rearrange the order of text strings in order of ASCII. For example, the ASCII order from lower to higher is the order of the alphabet from A to Z, so text strings can be arranged in alphabetical order.

Precaution


- Place a right-hand instruction after these instructions. The String Comparison Instructions cannot appear on the right side of the ladder diagram.
- These instructions cannot be used on the last rung of a logic block.

Example Programming

In this example, string comparison instructions are used to compare data.

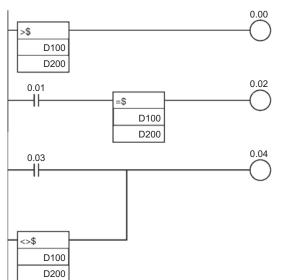


Address	Mnemonic	Operand
000000	LD > \$	
		D100
		D200
000001	OUT	0.00
000002	LD	0.01
000003	AND=\$	
		D100
		D200
000004	OUT	0.02
000005	LD	0.03
000006	OR <> \$	
		D100
		D200
000007	OUT	0.04

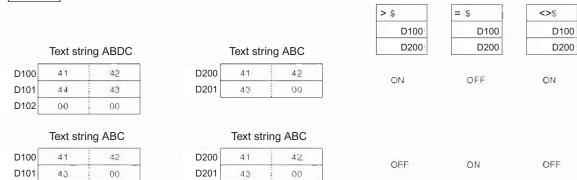


In this example, three text strings are rearranged in alphabetical order. The original order is as follows:

D100: Milk D200: Juice D300: Beer

When rearranged alphabetically, the order changes as follows: beer, juice, milk.

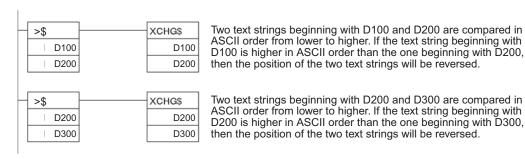

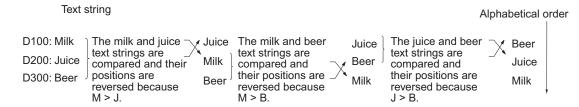


In this way, three text strings can be rearranged in alphabetical order.

Task Control Instructions

TKON/TKOF

Instruction	Mnemonic	Variations	Function code	Function
TASK ON	TKON	@TKON	820	Makes the specified task executable.
TASK OFF	TKOF	@TKOF	821	Puts the specified task into standby status.

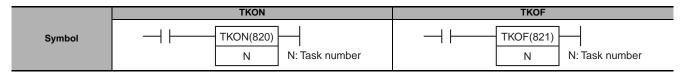

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
N	Task number		1

N: Task number

- · Cyclic tasks:
 - N must be a constant between 0 and 127 decimal. (Values 0 to 127 specify cyclic tasks 0 to 127.)
- Extra cyclic tasks (CJ2, CS1-H, CJ1-H, CJ1M, and CS1D CPU Units only):
 N must be a constant between 8000 and 8255 decimal. (Values 8000 to 8255 specify extra cyclic tasks 0 to 255.)

Operand Specifications

Area	Word addresses					ndirect DM/EM addresses Con-		Registers		TK	CF	Pulse	TR					
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	IK	5	bits	bits
N											OK							

Flags

Name	Label	Operation
Error Flag	ER	 ON if N is not a constant between 00 and 127 or between 8000 and 8255 (CJ2, CS1-H, CJ1-H, and CJ1M CPU Units only). ON if the task specified with N does not exist. ON if TKON(820)/TKOF(821) is executed in an interrupt task. OFF in all other cases.

Related Auxiliary Area Words and Bits


Name	Address	Contents
Task Flags	TK00 to TK127	These flags are turned ON when the corresponding cyclic task is executable and they are OFF when the corresponding cyclic task is not executable or in standby status. TK00 to TK127 correspond to cyclic task numbers 00 to 127.

Function


TKON

- TKON(820) puts the specified cyclic task or extra cyclic task in executable status. When N is 0 to 127 (specifying a cyclic task), the corresponding Task Flag (TK00 to TK127) will be turned ON at the same time.
- This instruction can be executed only in a regular cyclic task or an extra cyclic task. An error will occur if an attempt is made to execute it in an interrupt task.
- The cyclic task or extra cyclic task specified in TKON(820) will be also executable in later cycles as long as it is not put in standby status by TKOF(821).
- Any task can be made executable from any cyclic task, although the specified task will not be
 executed until the next cycle if its task number is lower than the task number of the local task. The
 task will be executed in the same cycle if its task number is higher than the local task's task number.
- TKON(820) will be treated as NOP(000) if the specified task is already executable or the local task is specified.

The specified task's task number is higher than the local task's task number (m<n).

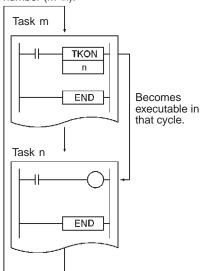


The specified task's task number is lower than the local task's task number (m>n).

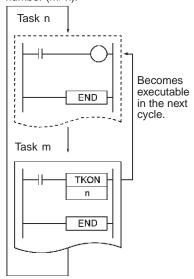


TKOF

- TKOF(821) puts the specified cyclic task or extra cyclic into standby status and turns OFF the corresponding Task Flag (TK00 to TK127).
 WAIT status means that the status will not change to RUN (the program will not be executed) during
 - that cycle.
- This instruction can be executed only in a regular cyclic task or an extra cyclic task. An error will occur if an attempt is made to execute it in an interrupt task.
 The task specified in TKOF(821) will be also in standby status in later cycles as long as it is not put
- The task specified in TKOF(821) will be also in standby status in later cycles as long as it is not put into executable status by TKON(820), a Peripheral Device running CX-Programmer, or a FINS command.
- A task can be put into standby status from any other regular task, although the specified task will not
 be put into standby status until the next cycle if its task number is lower than the task number of the
 local task (it would have been executed already). The task will be in standby status in the same cycle
 if its task number is higher than the local task's task number.
- If the local task is specified in TKOF(821), the task will be put into standby status immediately and none of the subsequent instructions in the task will be executed.

The specified task's task number is higher than the local task's task number (m<n).

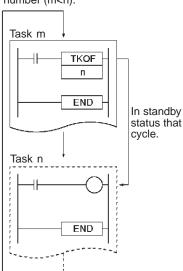

The specified task's task number is lower than the local task's task number (m>n).

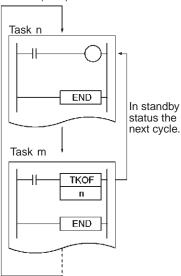

Hint

- The CX-Programmer's General Properties Tab for each task has a setting (the Operation start box) that specifies whether the cyclic task will be executable at startup. When the Operation start box has been checked, the corresponding cyclic task will be put in executable status automatically when the PLC begins operation. All other cyclic tasks will be in non-executable status.
 (If the memory all clear operation is executed from the Programming Console, however, cyclic task 0 will automatically be made executable.)
- If a task is in non-executable status, TKON(820) can be executed to put that task into executable status. Likewise, a cyclic task in executable status can be put into non-executable status with the TKOF(821) instruction.

TKON


Cyclic tasks or extra cyclic tasks that were made executable will be put in executable status in that cycle in task-number order. Consequently, a task will not be executed if it is put into standby status before the cycle's processing reaches that task as each task is executed in task-number order.

TKOF


Cyclic tasks or extra cyclic tasks that are in executable status can be put into standby status by the TKOF(821) instruction.

Example Programming

TKON

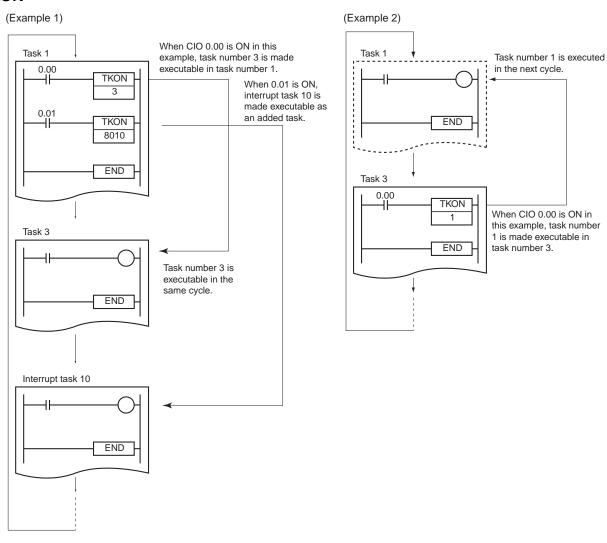

TKOF

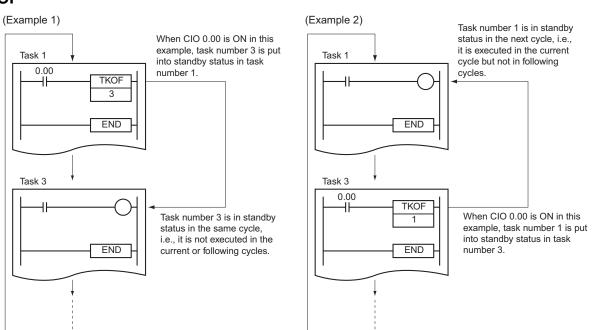

Model Conversion Instructions

Model Conversion Instructions

This section describes instructions used when changing PLC models.

- BLOCK TRANSFER (XFERC)
- SINGLE WORD DISTRIBUTE (DISTC)
- DATA COLLECT (COLLC)
- MOVE BIT (MOVBC)
- BIT COUNTER (BCNTC)

The model conversion instructions provide the same functionality as other instructions but use BCD data for the operands, like C-series instructions. (The CJ/CS-series use binary data for the operands.) There are five model conversion instructions, as shown in the above table, all of which have a C added to the end of the mnemonic of the equivalent function for binary operand data.

The model conversion instructions enable converting C-series programs to CS/CJ-series programs without changing the operand data for these instructions.

When converting C-series programs to CS/CJ-series programs on CX-Programmer version 5.0 higher (see note), these instructions will be automatically used when converting (e.g., XFER will be converted to XFERC), eliminating the need to correct operand data manually.

When converting C-series programs to CS/CJ-series programs on CX-Programmer version 4.0 or lower (see note), any operand for which a constant is specified will be converted from BCD to binary, but any operand data for which a word address is specified will have to be corrected manually.

Note Conversion is achieved by specifying the CS/CJ Series as the "device type" in the Change PLC Dialog Box.

Differences from C-series Instructions

"C Series" includes the C200H, C1000H, C2000H, C2000HS, C2000HX/HG/HE(-Z), CQM1, CQM1H, CPM1/CPM1A, CPM2C, and SRM1.

	Model conversion instruction (Unit Ver. 3.0 or later and CJ2 CPU Units)	Correspond- ing C-series instruction	Differences from C	-series instructions	When converting device type to	When converting device type to	
Name	Mnemonic (function code)	Mnemonic (function code)	C200H, C1000H, or C2000H	C200HS, C2000HX/ HG/HE(-Z), CQM1, CQM1H, CPM1/CPM1A, CPM2C, or SRM1	CS/CJ with CX-Programmer Ver. 4.0 or lower	CS/CJ with CX-Programmer Ver. 5.0 or higher	
BLOCK TRANSFER	XFERC(565)	XFER(70)	Same	Same	Converted to XFER. If a word address is specified for the first operand (number of words to transfer), it will need to be corrected manually to binary data in the program.	XFER is converted to XFERC. Operands do not require correction.	
SINGLE WORD DISTRIBUTE	DISTC(566)	DIST(80)	Along with data distribution operation, provides stack push operation not previously supported.	Same (distribution operation and stack push operation)	Converted to DIST. If a word address is specified for the third operand (offset data), it will need to be corrected manually to binary data in the program.	DIST is converted to DICTC. Operands do not require correction.	

	Model conversion instruction (Unit Ver. 3.0 or later and CJ2 CPU Units)	Correspond- ing C-series instruction	Differences from C	s-series instructions	When converting device type to	When converting device type to	
Name	Mnemonic (function code)	Mnemonic (function code)	C200H, C1000H, or C2000H	C200HS, C2000HX/ HG/HE(-Z), CQM1, CQM1H, CPM1/CPM1A, CPM2C, or SRM1	CS/CJ with CX-Programmer Ver. 4.0 or lower	CS/CJ with CX-Programmer Ver. 5.0 or higher	
DATA COLLECT	COLLC(567)	COLL(81)	Along with data collection operation, provides stack read operation not previously supported.	Same (data collection operation and stack read operation)	Converted to COLL. If a word address is specified for the second operand (offset data), it will need to be corrected manually to binary data in the program.	COLL is converted to COLLC. Operands do not require correction.	
MOVE BIT	MOVBC(568)	MOVB(82)	Same	Same	Converted to MOVB. If a word address is specified for the second operand (control data), it will need to be corrected manually to binary data in the program.	MOVB is converted to MOVBC. Operands do not require correction.	
BIT COUNTER	BCNTC(621)	BCNT(67)	Same	Same	Converted to BCNT. If a word address is specified for the first operand (number of words to count), it will need to be corrected manually to binary data in the program.	BCNT is converted to BCNTC. Operands do not require correction.	

Note The operation of the Conditions Flags differs in the following ways. Refer to the description of the Conditions Flags for each instruction for details.

- The operation of the Conditions Flags differs for all instructions when the contents of a DM Area words used for indirect addressing is not BCD (*BCD) or the DM Area addressing range is exceeded.
- For DISTC(566), the operation of the Conditions Flags differs in comparison with that for the C200H, C1000H, and C2000H for the stack push operation.
- For COLLC(567), the operation of the Conditions Flags differs in comparison with that for the C200H, C1000H, and C2000H for the stack read operation.

Differences from Previous CS/CJ-series Instructions


Name	Model conversion instruction (Unit Ver. 3.0 or later and CJ2 CPU Units)	Corresponding C-series instruction	Differences from previous CS/CJ-series instructions				
	Mnemonic (function code)	Mnemonic (function code)					
BLOCK TRANSFER	XFERC(565)	XFER(70)	The data type for the first operand (number of words to transfer) is BCD (0000 to 9999) instead of binary (0000 to FFFF hex).				
SINGLE WORD DISTRIBUTE	DISTC(566)	DIST(80)	A stack push operation is supported in addition to the data distribution operation. The data type for the third operand (offset data) is BCD (data distribution: 0000 to 7999, stack push: 0000 to 9999) instead of binary (0000 to FFFF hex).				
DATA COLLECT	COLLC(567)	COLL(81)	A stack read operation is supported in addition to the data distribution operation. The data type for the second operand (offset data) is BCD (data distribution: 0000 to 7999, stack read for FIFO: 9000 to 9999, stack read for LIFO: 8000 to 8999) instead of binary (0000 to FFFF hex).				
MOVE BIT	MOVBC(568)	MOVB(82)	The data type for the source and destination bit specifications in the second operand (control data) is BCD (00 to 15) instead of binary (00 to 0F hex).				
BIT COUNTER	BCNTC(621)	BCNT(67)	The data type for the first operand (number of words to count) is BCD (0000 to 9999) instead of binary (0000 to FFFF hex). The data type stored for the third operand (count results) is BCD (0000 to 9999) instead of binary (0000 to FFFF hex).				

Note The operation of the Conditions Flags differs in the following ways. Refer to the description of the Conditions Flags for each instruction for details.

- The Error Flag will turn ON if the data for the above operands is not BCD.
- For DISTC(566), the operation of the Conditions Flags was added for the stack push operation.
- For COLLC(567), the operation of the Conditions Flags was added for the stack read operation.

XFERC

Instruction	Mnemonic	Variations	Function code	Function	
BLOCK TRANSFER	XFERC	@XFERC	565	Transfers the specified number of consecutive words.	

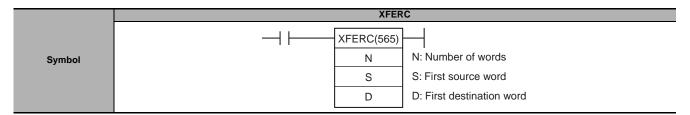

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands


Operand	Description	Data type	Size
N	Number of words	WORD	1
S	First source word	WORD	Variable
D	First destination word	WORD	Variable

N: Number of Words

Specifies the number of words to be transferred. The possible range for N is 0000 to 9999 BCD.


S: First Source Word

Specifies the first source word.

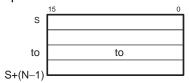

D: First Destination Word

Specifies the first destination word.

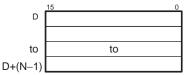

Operand Specifications

	Aron			W	ord ad	Idress	es			Indirect addre	DM/EM esses	Registers	Fla	ıgs	Pulse	TR			
Area	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM		stants	DR	IR		тк	CF	bits I	bits	
	N											OK	OK						
	S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
	D																		


Flags

Name	Label	Operation
Error Flag	P_ER	ON if the data in N (the number of words) is not BCD.

Note In C-series PLCs, the BLOCK TRANSFER (XFER) instruction will cause the Error Flag to go ON if the content of an indirectly addressed DM word (*DM) is not BCD, or the DM area boundary is exceeded.


Function

XFERC(565) copies N words beginning with S (S to S+(N-1)) to the N words beginning with D (D to D+(N-1)).

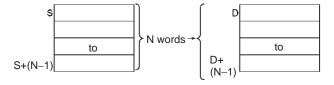

Hint

• It is possible for the source words and destination words to overlap, so XFERC(565) can perform word-shift operations.

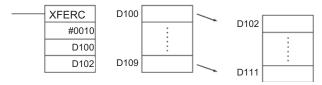


Precaution

- Some time will be required to complete XFERC(565) when a large number of words is being transferred. In this case, the XFERC(565) transfer might not be completed if a power interruption occurs during execution of the instruction.
- Be sure that the source words (S to S+N-1) and destination words (D to D+N-1) do not exceed the end of the data area.


Example Programming

When CIO 0.00 is ON in the following example, the 10 words D100 through D109 are copied to D200 through D209.

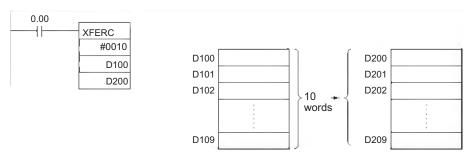

DISTC

Instruction	Mnemonic	Variations	Function code	Function
SINGLE WORD DISTRIBUTE	DISTC	@DISTC	566	Transfers the source word to a destination word calculated by adding an offset value to the base address.

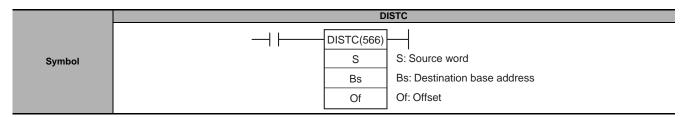


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	OK	OK

Operands

Operand	Description	Data type	Size
S	Source word	WORD	1
Bs	Destination base address	WORD	1
Of	Offset	WORD	1

Bs: Destination Base Address

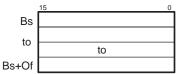

Of: Offset

- Data Distribution Operation (0000 to 7999 BCD)
- Stack Push Operation (9000 to 9999 BCD)

Note Bs and Bs+Of must be in the same data area.

Operand Specifications

Area			W	ord ad	Idresse	es			Indirect addre		Con-		Registers			ags	Pulse	TR
Area	CIO	WR	HR	AR	т	С	DM	ЕМ	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK	OK						
Bs	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
Of											OK	OK						

Flags


Name	Label	Operation
Error Flag	P_ER	 ON if the offset data in Of is not BCD. ON if Stack Push Operation is specified, but the stack pointer data in Bs is not BCD. ON if Stack Push Operation is specified and the stack pointer indicates a word that exceeds the stack data area.
Equals Flag	P_EQ	ON if the source data is 0000. OFF in all other cases.
Negative Flag	P_N	ON if the leftmost bit of the source data is 1. OFF in all other cases.

Note In C-series PLCs, the SINGLE WORD DISTRIBUTE (DIST) instruction will cause the Error Flag to go ON if the content of an indirectly addressed DM word (*DM) is not BCD, or the DM area boundary is exceeded. DISTC(566) will not cause the Error Flag to go ON in these cases.

Function

Data Distribution Operation


DISTC(566) copies S to the destination word calculated by adding Of to Bs.

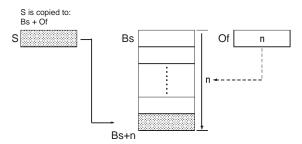

Stack Push Operation

When the leftmost digit (bits 12 to 15) of Of is 9 BCD, DISTC(566) operates a stack from Bs to Bs+Of-9000. The destination base address (Bs) contains the stack pointer and the rest of the words in the stack contain the stack data.

DISTC(566) copies S to the destination word calculated by adding the stack pointer (content of Bs) + 1 to address Bs.

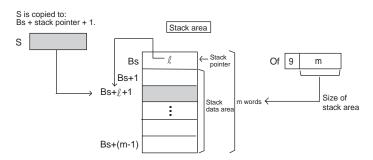

Each time that the content of S is copied to a word in the stack data area, the stack pointer in Bs is automatically incremented by +1.

Note Once DISTC(566) has been executed with Stack Push Operation to allocate a stack area, always specify the same length stack area in subsequent DISTC(566) instructions. Operation will be unreliable if a different stack area size is specified in later DISTC(566) instructions.

Hint

- Use COLLC(567) to read stack data from the stack area.
- The same DISTC(566) instruction can be used to distribute the source word to various words in the data area by changing the value of Of.

Precaution


 Be sure that the offset or stack size specified by Of does not exceed the end of the data area when added to Bs.

Example Programming

Data Distribution Operation

The leftmost byte of D300 is 0, so DISTC(566) performs the Data Distribution Operation.


When CIO 0.00 is ON in the following example, the contents of D100 will be copied to D210 (D200 + 10) if the content of D300 is 0010 BCD. The content of D100 can be copied to other words by changing the offset in D300.

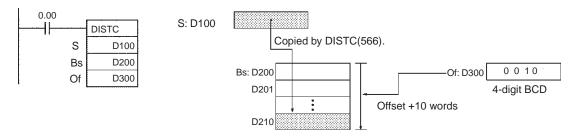

Stack Push Operation


The leftmost byte of Of is 9, so DISTC(566) performs the Stack Push Operation.

When CIO 0.00 is ON in the following example, DISTC(566) allocates a 10 word stack area (since the rightmost 3 digits of Of are #010) between D200 and D209. At the same time, the contents of D100 will be copied to the word calculated by adding D200 + stack pointer +1. Finally, the stack pointer is incremented by +1.

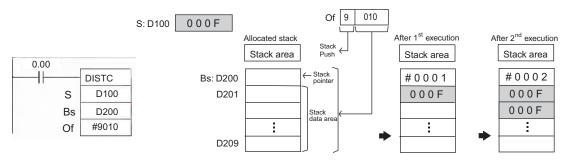

COLLC

Instruction	Mnemonic	Variations	Function code	Function
DATA COLLECT	COLLC	@COLLC	567	Transfers the source word (calculated by adding an offset value to the base address) to the destination word.

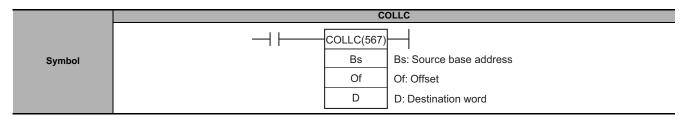


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
Bs	Source base address	WORD	1
Of	Offset	WORD	1
D	Destination word	WORD	1

Bs: Source base address

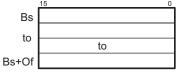

Of: Offset

- Data Collect Operation (Of = 0000 to 7999 BCD)
- FIFO Stack Read Operation (Of = 9000 to 9999 BCD)
- LIFO Stack Read Operation (Of = 8000 to 8999 BCD)

Note Bs and Bs+Of must be in the same data area.

Operand Specifications

Area			w	ord ad	dresse	es			Indirect addre		Con-	n- F		Registers		igs	Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
Bs																		
Of	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	ОК		OK				
D												OK						

Flags

Name	Label	Operation
Error Flag	P_ER	 ON if the offset data in Of is not BCD. ON if LIFO or FIFO Stack Operation is specified, but the stack pointer data in Bs is not BCD. ON if LIFO or FIFO Stack Operation is specified and the stack pointer indicates a word that exceeds the stack data area. OFF in all other cases.
Equals Flag	P_EQ	ON if the source data is 0000. OFF in all other cases.
Negative Flag	P_N	ON if the leftmost bit of the source data is 1. OFF in all other cases.

Note In C-series PLCs, the DATA COLLECT (COLL) instruction will cause the Error Flag to go ON if the content of an indirectly addressed DM word (*DM) is not BCD, or the DM area boundary is exceeded.


COLLC(567) will not cause the Error Flag to go ON in these cases.

• The Negative Flag will turn ON if the MSB in the transferred data is ON.

Function

Data Collection Operation

COLLC(567) copies the source word (calculated by adding Of to Bs) to the destination word. The same COLLC(567) instruction can be used to collect data from various source words in the data area by changing the value of Of.

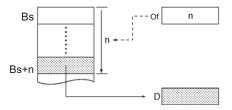

Data is copied from Bs + 1.


FIFO

Stack read operation

• FIFO Stack Read Operation

If the leftmost digit of Of is 9, COLLC(567) will operate as a FIFO stack instruction (FIFO stands for First-In-First-Out). In this case, the rightmost 3 digits of Of specify the size of the stack.

COLLC(567) copies the data from the oldest word recorded in the stack to D. The source word is Bs + 1. After the data is copied, the stack pointer is decremented by 1.

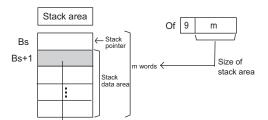


LIFO Stack Read Operation

If the leftmost digit of Of is 8, COLLC(567) will operate as a LIFO stack instruction (LIFO stands for Last-In-First-Out). In this case, the rightmost 3 digits of Of specify the size of the stack.

COLLC(567) copies the data most recently recorded in the stack to D. The source word is Bs + the stack pointer (content of Bs). After the data is copied, the stack pointer is decremented by 1.

LIFO
Data is copied from Bs + stack pointer.

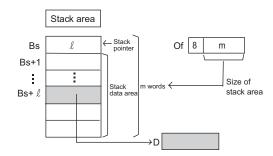

In either case (method), S1 is a stack pointer.

- When FIFO is used, data is read from S1+1.
- When LILO is used, data is read from S1 + (stack pointer).
- In either case (method), the stack pointer value is automatically decremented by 1 each time data is read from the stack area.

Note Once DISTC(566) has been executed with Stack Push Operation to allocate a stack area, always specify that same length stack area in the COLLC(567) instructions. Operation will be unreliable if a different stack area size is specified in the COLLC(567) instructions.

Hint

- Use DISTC(566) to write stack data to the stack area.
- The same COLLC(567) instruction can be used to collect data from various source words in the data area by changing the value of Of.

Precaution


 Be sure that the offset or stack size specified by Of does not exceed the end of the data area when added to Bs.


Example Programming

Data Collection Operation

The leftmost byte of D200 is 0, so COLLC(567) performs the Data Collection Operation.

When CIO 0.00 is ON in the following example, the contents of D110 (D100 + 10) will be copied to D300 if the content of D200 is 10 (0010 BCD). The contents of other words can be copied to D300 by changing the offset in D200.

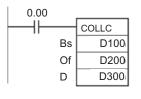


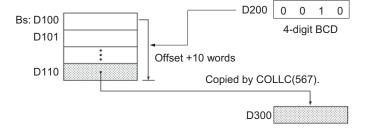


FIFO Stack Operation

The leftmost byte of Of is 9, so COLLC(567) performs the FIFO Stack Operation.

When CIO 0.00 is ON in the following example, COLLC(567) allocates a 10 word stack area (since the rightmost 3 digits of Of are #010) between D100 and D109. At the same time, the contents of D101 (Bs +1) are copied to D300. Finally, the stack pointer is decremented by 1.

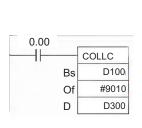


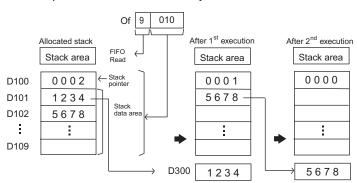


LIFO Stack Operation

The leftmost byte of Of is 8, so COLLC(567) performs the LIFO Stack Operation.


When CIO 0.00 is ON in the following example, COLLC(567) allocates a 10 word stack area (since the rightmost 3 digits of Of are #010) between D100 and D109. At the same time, the contents of the source word (D100 + stack pointer) are copied to D300. Finally, the stack pointer is decremented by 1.

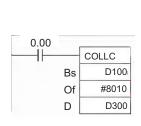

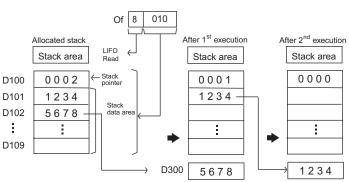

MOVBC

Instruction	Mnemonic	Variations	Function code	Function	
MOVE BIT	MOVBC	@MOVBC	568	Transfers the specified bit.	

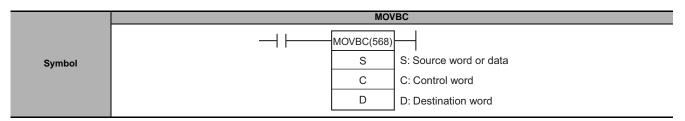


Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs		
Usage	OK	OK	OK	OK	OK	OK		

Operands

Operand	Description	Data type	Size
S	Source word or data	WORD	1
С	Control word	WORD	1
D	Destination word	WORD	1

C: Control word

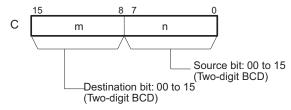

Operand Specifications

Area	Word addresses								Indirect DM/EM addresses Con-		Con-	Registers			Flags		Pulse TR	TR
Alea	CIO	WR	HR	AR	Т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S											OK							
С	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK				
D																		


Flags

Name	Label	Operation				
Error Flag	P_ER	 ON if the rightmost and leftmost two digits of C are not BCD or outside of the specified range of 00 to 15. OFF in all other cases. 				

Note In C-series PLCs, the MOVE BIT (MOVB) instruction will cause the Error Flag to go ON if the content of an indirectly addressed DM word (*DM) is not BCD, or the DM area boundary is exceeded. MOVBC(568) will not cause the Error Flag to go ON in these cases.

Function

MOVBC(568) copies the specified bit (n) from S to the specified bit (m) in D.

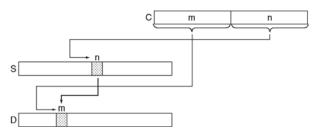


Note The other bits in the destination word are left unchanged.

Hint

• The same word can be specified for both S and D to copy a bit within a word.


Example Programming

When CIO 0.00 is ON in the following example, the 5th bit of the source word (CIO 200) is copied to the 12th bit of the destination word (CIO 300) in accordance with the control word's value of 1205.

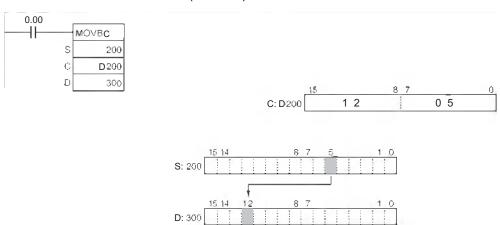

BCNTC

Instruction	Mnemonic	Variations	Function code	Function	
BIT COUNTER	BCNTC	@BCNTC	621	Counts the total number of ON bits in the specified word(s).	

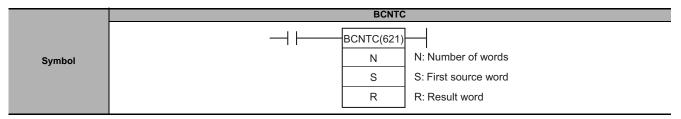

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	ОК	OK	OK	OK	

Operands

Operand	Description	Data type	Size		
N	Number of words	WORD	1		
S	First source word	UNIT	Variable		
R	Result word	WORD	1		

N: Number of words

The number of words must be 0001 to 9999 (BCD).

Operand Specifications

Area	Word addresses						Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits b	bits
N											OK	OK						
S	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK				OK				
R												OK						


Flags

Name	Label	Operation
Error Flag	P_ER	ON if N is not within the range 0001 to 9999 BCD. ON if result exceeds 9999 BCD. OFF in all other cases.
Equals Flag	P_EQ	On if the result is 0000. OFF in all other cases.

Note In C-series PLCs, the BIT COUNTER (BITC) instruction will cause the Error Flag to go ON if the content of an indirectly addressed DM word (*DM) is not BCD, or the DM area boundary is exceeded. BCNTC(621) will not cause the Error Flag to go ON in these cases.

Function

BCNTC(621) counts the total number of bits that are ON in all words between S and S+(N-1) and places the BCD result in R.

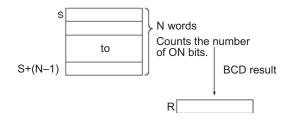


Precaution

• S and S+(N-1) must be in the same data area.

Example Programming


When CIO 0.00 is ON in the following example, BCNTC(621) counts the total number of ON bits in the 10 words from CIO 100 through CIO 109 and writes the result to D100.

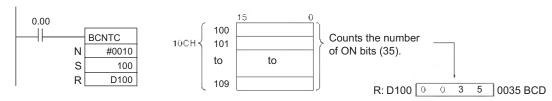

Special Function Block Instructions

GETID

Instruction	Mnemonic	Variations	Function code	Function
GET VARIABLE ID	GETID	@GETID	286	Outputs the FINS command variable type (data area) code and word address for the specified variable or address.

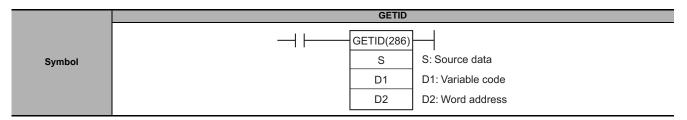

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

Operand	Description	Data type	Size
S	Source data	WORD	1
D1	Variable code	WORD	1
D2	Word address	WORD	1

Operand Specifications

Area			W	ord ad	Idresse	es			Indirect addre		Con-	Con- Registers			Flags		Pulse	TR
Alea	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S																		
D1	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK		OK		OK				
D2																		

Flags

Name	Label	Operation
Error Flag	P_ER	ON if S is not within the allowed range.OFF in all other cases.

Function

GETID(286) retrieves the data area address of the specified source variable or address, outputs the data area code to D1 in 4-digit hexadecimal, and outputs the word address number to D2 in 4-digit hexadecimal.

Variable type (data area)

•	Correspon	ding a	address	ranges
---	-----------	--------	---------	--------


	Data area	Data size	Data area code (Output to D1.)	Address (Output to D2.)
CIO Area	CIO		00B0 hex	0000 to 17FF hex (0000 to 6143)
Work Area	W		00B1 hex	0000 to 01FF hex (000 to 511)
Holding Area	Н	Word	00B2 hex	0000 to 01FF hex (000 to 511)
DM Area	D		0082 hex	0000 to 7FFF hex (00000 to 32767)
EM Area (Specific bank)	En_ (n = 0 to C hex (CJ2: 0 to 18 hex))		00A0 to 00AC hex	0000 to 7FFF hex (00000 to 32767)

Hint


Variables in function blocks are automatically allocated addresses by CX-Programmer Ver. 5.0 and later systems, unless the AT specification is used. For example, if it is necessary to indirectly specify the extended parameter settings of a Special Unit such as a Motion Control Unit and a variable is used at the beginning of the extended parameter settings area, that variable's address must be set. In this case, GETID(286) can be used to retrieve the variable's data area address.

Example Programming

Normal Operation

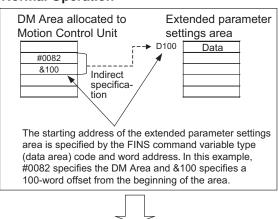

Using Function Blocks

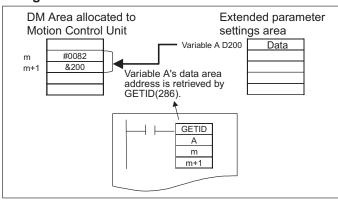


SFC Instructions

Step Control Instructions

Step Control Instructions are used to control the active status of steps and subcharts in SFC programs. There are two Step Control Instructions.


Instruction	Outline	
STEP ACTIVATION	SA	Makes the specified step or subchart active to start execution of the actions.
STEP DEACTIVATION	SE	Makes the specified step or subchart inactive to end execution of the actions.

Status is changed as follows by the Step Control Instructions.

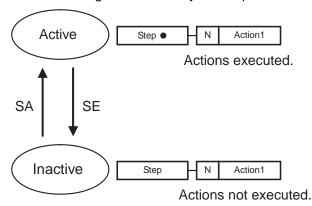


Note The active step is indicated by a solid circle (●).

Example 1: Action 1 in step 2 can be used to make step 4 active.

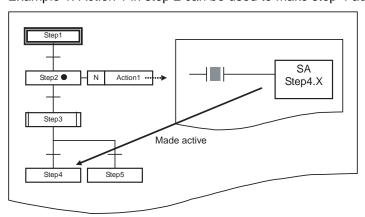

Example 2: A subchart step can be specified to make the subchart active.

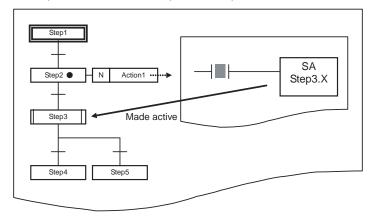


SFC Task Control Instruction

The following type of control can be achieved by using the SFC Task Control Instructions


- Ending SFC task execution using the SFCOFF instruction
- · Pausing SFC task execution and resetting outputs using the SFCPR instruction
- · Pausing SFC task execution and holding outputs using the SFCPRN instruction
- · Restarting execution of SFC tasks that have been ended or paused using the SFCON instruction

SFC OFF: SFCOFF	Ends execution of an SFC task. The outputs from any actions that are being executed in the task that is ended will be held and processing will be ended. When execution is started again with the SFCON instruction, it will start from the initial step.
SFC PAUSE WITH RESET: SFCPR	All outputs in the task that is paused will be reset and processing will be paused. Be careful when using this command if any outputs that will be reset are used in other tasks. When execution is started again with the SFCON instruction, it will start from the step that was active before the task was paused. The Step Timer for the paused step will continue to operate even while the step is paused.
SFC PAUSE WITH NO RESET: SFCPRN	Pauses execution of an SFC task. The outputs from any actions that are being executed in the task that is paused will be held and processing will be paused. When execution is started again with the SFCON instruction, it will start from the step that was active before the task was paused. The Step Timer for the paused step will continue to operate even while the step is paused.
SFC ON: SFCON	Restarts execution of an SFC task that was ended or paused using one of the other SFC Task Control Instructions.

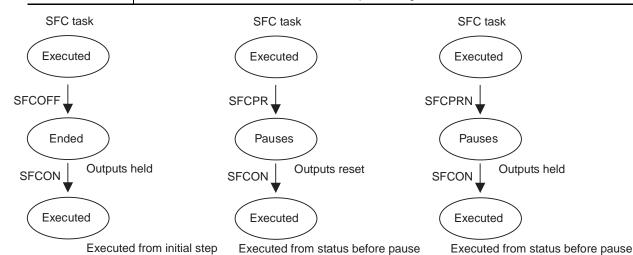

SA/SE

Instruction	Mnemonic	Variations	Function code	Function
STEP ACTIVATE	SA	@SA	784	Makes the specified step or subchart active to start execution of the actions.
STEP DEACTIVATE	SE	@SE	785	Makes the specified step of subchart inactive to end execution of the actions.

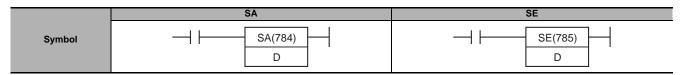

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs	
Usage	OK	OK	OK	OK	OK	OK	

Operands

Operand	Description	Data type	Size	
D	Step flag	BOOL	1	


Flags

Name	Label	Operation
Error Flag	P_ER	OFF

Function


• SA(784)

The step specified by D is made active.

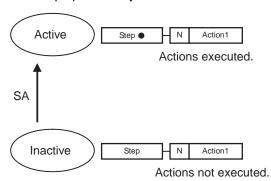


• SE(785)

The step designated by D is made inactive.

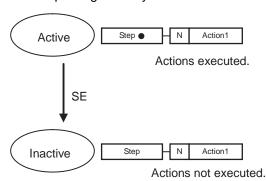


Example Programming

In the following example, step 4 will become active when W0.0 turns ON.

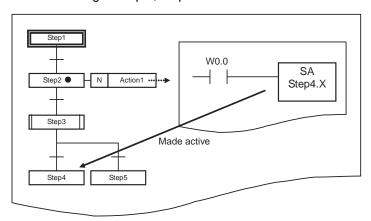

In the following example, step 3 (a subchart step) will become active when W0.1 turns ON.

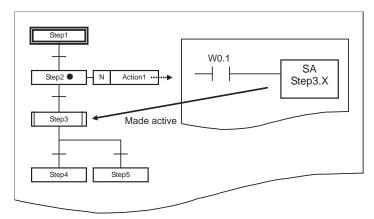


Precaution

- Designate Step Flags in the form step_name.X. Refer to the SYSMAC CS/CJ Series Programmable Controllers Operation Manual SFC Programming (W469) for details.
- Steps within subcharts cannot be specified.
- These instructions cannot be input or displayed on a Programming Console. "?" will be displayed.

TSR/TSW

Instruction	Mnemonic	Variations	Function code	Function
READ SET TIMER	TSR	@TSR	780	The present value of the Step Timer specified by S is stored starting at D.
SET STEP TIMER	TSW	@TSW	781	The present value of the Step Timer specified by S is changed to the value specified starting at D.

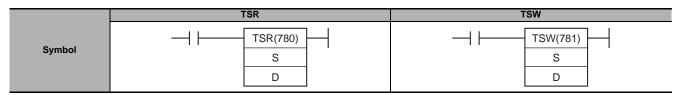

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas Subroutines		Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	OK	OK	OK

Operands

• TSR

Operand	Description	Data type	Size
S	Step timer	UINT	1
D	First word to store the Step Timer's present value	UINT	1

• TSW

Operand	Description	Data type	Size
S	First word holding the Step Timer's new present value	UINT	1
D	Step timer	UINT	1

Operand Specifications

Area		Word addresses					Indirect DM/EM addresses Con-		Registers		Flags		Pulse	TR				
Area	CIO	WR	HR	AR	т	С	DM	EM	@DM @EM	*DM *EM	stants	DR	IR	Indirect using IR	тк	CF	bits	bits
S	ОК	ОК	ОК	ОК			ОК	ок										
D	OK.	OK	OK	OK			OK	OK				OK]					

Flags

Name	Label	Operation
Error Flag	P_ER	OFF

Function

• TSR(780)


The present value of the Step Timer specified by S is stored starting at D.

• TSW(781)

The present value of the Step Timer specified by S is changed to the value specified starting at D.

Example Programming

In the following example, the present value of the Step Timer for step 2 is changed to 100 when W0.0 turns ON.

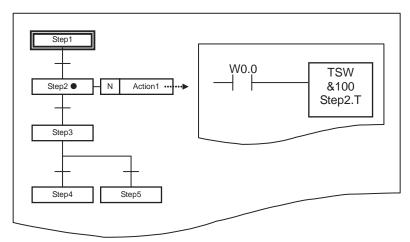


Note The active step is indicated by a solid circle (●).

Precaution

- Designate Step Flags in the form step_name.X. Refer to the SYSMAC CS/CJ Series Programmable Controllers Operation Manual SFC Programming (W469) for details.
- These instructions cannot be input or displayed on a Programming Console. "?" will be displayed.

SFCON/SFCOFF

Instruction	Mnemonic	Variations	Function code	Function
SFC ON	SFCON		789	Restarts execution of an SFC task that was ended or paused using one of the other SFC Task Control Instructions.
SFC OFF	SFCOFF		790	Ends execution of an SFC task. The status of all outputs is held. When execution of the SFC task is restarted, it is executed from the initial step.

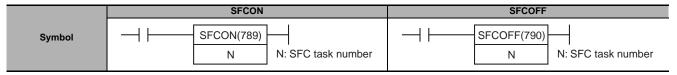

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	ок ок		OK	Not allowed	OK

Operands

Operand	Description	Data type	Size
N	SFC task number		1

Cyclic Task

N: &0 to &31 (Correspond to cyclic tasks 0 to 31.) For CJ2 CPU Units, &0 to &127 are available.

Extra Task

N: &8000 to &8255 (Correspond to interrupt tasks 0 to 255.)

Operand	Task name
&0 to &127	Cyclic tasks 0 to 127
&8000	Extra task 0 (interrupt task 0)
&8001	Extra task 1 (interrupt task 1)
&8255	Extra task 255 (interrupt task 255)

Flags

Name	Label	Operation
Error Flag	P_ER	 OFF if the specified task does not exist. OFF if the instruction is executed in the interrupt tasks.

Function

• SFCON(789)


The SFC task specified by N is started. If an ended task is started, it is executed from the initial step. If a paused task is started, it is executed from the status that existed before it was paused.

• SFCOFF(790)


The SFC task specified by N is ended. The status of all outputs is held. When execution is restarted with the SFCON(789) instruction, the task is executed from the initial step.

Precaution

 Specify the number displayed to the right of the SFC program in the workspace for the SFC task number, as shown below.

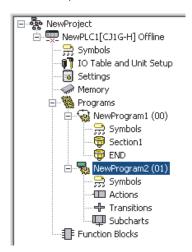

As shown below, SFC programs can be created in interrupt tasks and executed as extra tasks.

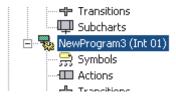

When using an extra task, specify the SFC task number as shown above for the operand data. For the program shown above for extra task 1 (interrupt task 1), the SFC task number specification would be as follows:



- These instructions cannot be used for the task in which they are programmed. For example, if the instruction is in cyclic task 0 (task number 0), a task number of 0 cannot be specified.
- This instruction cannot be input or displayed on a Programming Console. "?" will be displayed.

SFCPR/SFCPRN

Instruction	Mnemonic	Variations	Function code	Function
SFC PAUSE WITH RESET	SFCPR		793	Pauses execution of an SFC task. The status of all outputs is reset. When execution of a paused task is restarted, execution will start from the step that was active when the task was paused.
SFC PAUSE WITH NO RESET	SFCPRN		791	Pauses execution of an SFC task. The status of all outputs is held. When execution of a paused task is restarted, execution will start from the step that was active when the task was paused.

	SFCPR	SFCPRN
Symbol	SFCPR(793)	SFCPRN(791)
	N N: SFC	task number N N: SFC task number

Applicable Program Areas

Area	Function block definitions	Block program areas	Step program areas	Subroutines	Interrupt tasks	SFC action or transition programs
Usage	OK	OK	OK	ОК	Not allowed	OK

Operands

Operand	Description	Data type	Size
N	SFC task number		1

Cyclic Task

N: &0 to &31 (Correspond to cyclic tasks 0 to 31.) For CJ2 CPU Units, &0 to &127 are available.

Extra Task

N: &8000 to &8255 (Correspond to interrupt tasks 0 to 255.)

Operand	Task name
&0 to &127	Cyclic tasks 0 to 127
&8000	Extra task 0 (interrupt task 0)
&8001	Extra task 1 (interrupt task 1)
&8255	Extra task 255 (interrupt task 255)

Flags

Name	Label	Operation	
Error Flag	P_ER	OFF if the specified task does not exist. OFF if the instruction is executed in the interrupt tasks	

Function

• SFCPR(793)


Execution of the SFC task specified by N is paused. All outputs from the paused task are reset. When the paused task is restarted with the SFCON(789) instruction, it is executed from the status that existed before it was paused.

• SFCPRN(791)


Execution of the SFC task specified by N is paused. All outputs from the paused task are held. When the paused task is restarted with the SFCON(789) instruction, it is executed from the status that existed before it was paused.

Precaution

 Specify the number displayed to the right of the SFC program in the workspace for the SFC task number, as shown below.

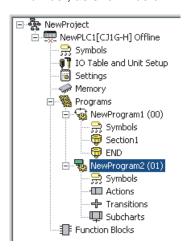

As shown below, SFC programs can be created in interrupt tasks and executed as extra tasks.

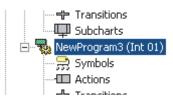

When using an extra task, specify the SFC task number as shown above for the operand data. For the program shown above for extra task 1 (interrupt task 1), the SFC task number specification would be as follows:



- These instructions cannot be used for the task in which they are programmed. For example, if the instruction is in cyclic task 0 (task number 0), a task number of 0 cannot be specified.
- This instruction cannot be input or displayed on a Programming Console. "?" will be displayed.
- The step timers will continue to operate for steps paused with the SFCPR or SFCPRN instruction. The displayed time, however, will not change.
- Step timers may not operate correctly when the SFCPR or SFCPRN instruction is used.

SFCPR

 Do not execute the SFCPR instruction for an SFC task that has been ended (see note.). Even if the SFCPR instruction is executed for an SFC task that has been ended, the outputs will be reset and the task will not be started. If this happens, you can execute SFCON again to start the task.

Note Use the Task Flag to prevent the SFCPR instruction from being executed for an SFC task that has been ended. This is not possible, however, when using an SFC program in an extra task.

- If the SCFPR instruction is executed for a step for which status has changed in the same cycle, the
 outputs will be reset. This means that the final scan and the P0 action in steps that became inactive
 will not be executed.
- If the SCFPR instruction is executed for a step for which status has changed in the same cycle and then the SFCON instruction is executed, the SFC task will be started, but the P and P1 actions in steps that became active will not be executed. Refer to the SYSMAC CS/CJ Series Programmable Controllers Operation Manual SFC Programming (W469) for details.

3. Instructions

SECTION 4 Instruction Execution Times and Number of Steps

This section provides instruction execution times and the number of steps for each CS/CJ-series instruction.

4-1	CJ2 CP	U Unit Instruction Execution Times and Number of Steps
	4-1-1	Sequence Input Instructions
	4-1-2	Sequence Output Instructions
	4-1-3	Sequence Control Instructions
	4-1-4	Timer and Counter Instructions
	4-1-5	Comparison Instructions
	4-1-6	Data Movement Instructions
	4-1-7	Data Shift Instructions
	4-1-8	Increment/Decrement Instructions
	4-1-9	Symbol Math Instructions
	4-1-10	Conversion Instructions
	4-1-11	Logic Instructions
	4-1-12	Special Math Instructions
	4-1-13	Floating-point Math Instructions
	4-1-14	Double-precision Floating-point Instructions
	4-1-15	Table Data Processing Instructions
	4-1-16	Tracking Instructions
	4-1-17	Data Control Instructions
	4-1-18	Subroutine Instructions
	4-1-19	Interrupt Control Instructions
	4-1-20	High-speed Counter and Pulse Output Instructions (When a Pulse I/O Module Is Connected)
	4-1-21	Step Instructions
	4-1-22	Basic I/O Unit Instructions
	4-1-23	Serial Communications Instructions
	4-1-24	Network Instructions
	4-1-25	File Memory Instructions
	4-1-26	Display Instructions.
	4-1-27	Clock Instructions
	4-1-28	Debugging Instructions
	4-1-29	Failure Diagnosis Instructions
	4-1-30	Other Instructions
	4-1-31	Block Programming Instructions
	4-1-32	Text String Processing Instructions
	4-1-33	Task Control Instructions
	4-1-34	Model Conversion Instructions
	4-1-35	Special Function Block Instructions
	4-1-36	SFC Instructions
	4-1-37	Function Block Instance Execution Time
4-2	CJ1 CP	U Unit Instruction Execution Times and Number of Steps
	4-2-1	Sequence Input Instructions
	4-2-2	Sequence Output Instructions

4-2-3	Sequence Control Instructions	1178
4-2-4	Timer and Counter Instructions	1179
4-2-5	Comparison Instructions	1180
4-2-6	Data Movement Instructions	1181
4-2-7	Data Shift Instructions	1182
4-2-8	Increment/Decrement Instructions	1183
4-2-9	Symbol Math Instructions	1183
4-2-10	Conversion Instructions	1184
4-2-11	Logic Instructions	1186
4-2-12	Special Math Instructions	1187
4-2-13	Floating-point Math Instructions	1187
4-2-14	Double-precision Floating-point Instructions	1188
4-2-15	Table Data Processing Instructions	1189
4-2-16	Data Control Instructions	1191
4-2-17	Subroutine Instructions	1191
4-2-18	Interrupt Control Instructions	1192
4-2-19	High-speed Counter and Pulse Output Instructions	1102
4.2.20		1192
. – – -		1193
. – –-		1193
		1194
		1195
. – – .		1195
		1195
. – – -		1196
. – – .		1196
. – – -	-	1196
		1197
. –		1197
		1198
4-2-32		1199
4-2-33		1200
4-2-34	•	1200
4-2-35	Function Block Instance Execution Time (CPU Units with Unit Version 3.0 or later)	1201
CS-serie	es Instruction Execution Times and Number of Steps	1204
4-3-1	Sequence Input Instructions	1205
4-3-2	Sequence Output Instructions	1205
4-3-3	Sequence Control Instructions	1206
4-3-4	Timer and Counter Instructions	1207
4-3-5	Comparison Instructions	1208
4-3-6	Data Movement Instructions	1209
4-3-7	Data Shift Instructions	1209
4-3-8	Increment/Decrement Instructions	1210
4-3-9	Symbol Math Instructions	1211
4-3-10	Conversion Instructions	1212
4-3-11	Logic Instructions	1214
4-3-12	Special Math Instructions	1214
	4-2-4 4-2-5 4-2-6 4-2-7 4-2-8 4-2-9 4-2-10 4-2-11 4-2-12 4-2-13 4-2-14 4-2-15 4-2-16 4-2-17 4-2-18 4-2-19 4-2-20 4-2-21 4-2-22 4-2-23 4-2-24 4-2-25 4-2-26 4-2-27 4-2-28 4-2-29 4-2-30 4-2-31 4-2-32 4-2-33 4-2-35 CS-seric 4-3-1 4-3-2 4-3-3 4-3-4 4-3-5 4-3-6 4-3-7 4-3-8 4-3-9 4-3-10 4-3-11	4-2-4 Timer and Counter Instructions 4-2-5 Comparison Instructions 4-2-6 Data Movement Instructions 4-2-7 Data Shift Instructions 4-2-8 Increment/Decrement Instructions 4-2-9 Symbol Math Instructions 4-2-10 Conversion Instructions 4-2-11 Logic Instructions 4-2-12 Special Math Instructions 4-2-13 Floating-point Math Instructions 4-2-14 Double-precision Floating-point Instructions 4-2-15 Table Data Processing Instructions 4-2-16 Data Control Instructions 4-2-17 Subroutine Instructions 4-2-18 Interrupt Control Instructions 4-2-19 High-speed Counter and Pulse Output Instructions (CIIM-CPU21/22/3 Only) 4-2-20 Step Instructions 4-2-21 Basic I/O Unit Instructions 4-2-22 Serial Communications Instructions 4-2-23 Network Instructions 4-2-24 File Memory Instructions 4-2-25 Display Instructions 4-2-26 Clock Instructions 4-2-27 Debugging Instructions 4-2-28 Failure Diagnosis Instructions 4-2-29 Other Instructions 4-2-29 Other Instructions 4-2-31 Text String Processing Instructions 4-2-33 Model Conversion Instructions 4-2-34 Special Function Block Instructions 4-2-35 Function Block Instructions 4-2-36 Sequence Output Instructions 4-2-37 Function Block Instructions 4-2-38 Sequence Control Instructions 4-2-39 Sequence Control Instructions 4-2-30 Data Shift Instructions 4-2-31 Timer and Counter Instructions 4-2-32 Sequence Control Instructions 4-2-33 Sequence Control Instructions 4-2-34 Sequence Output Instructions 4-2-35 Comparison Instructions 4-3-36 Omparison Instructions 4-3-37 Data Shift Instructions 4-3-38 Increment/Decrement Instructions 4-3-39 Symbol Math Instructions 4-3-30 Conversion Instructions

4-3

4-3-13	Floating-point Math Instructions		
4-3-14	Double-precision Floating-point Instructions	1215	
4-3-15	Table Data Processing Instructions	1216	
4-3-16	Data Control Instructions	1217	
4-3-17	Subroutine Instructions	1218	
4-3-18	Interrupt Control Instructions	1218	
4-3-19	Step Instructions	1218	
4-3-20	Basic I/O Unit Instructions	1218	
4-3-21	Serial Communications Instructions	1219	
4-3-22	Network Instructions	1220	
4-3-23	File Memory Instructions	1220	
4-3-24	Display Instructions	1220	
4-3-25	Clock Instructions	1220	
4-3-26	Debugging Instructions	1220	
4-3-27	Failure Diagnosis Instructions	1221	
4-3-28	Other Instructions	1221	
4-3-29	Block Programming Instructions	1221	
4-3-30	Text String Processing Instructions	1223	
4-3-31	Task Control Instructions	1224	
4-3-32	Model Conversion Instructions.	1224	
4-3-33	Special Function Block Instructions	1224	
4-3-34	Function Block Instance Execution Time (CPU Units with Unit Version 3.0 or later)	1225	

4-1 CJ2 CPU Unit Instruction Execution Times and Number of Steps

The following table lists the execution times for all instructions that are supported by the CPU Units.

The total execution time of instructions within one whole user program is the process time for program execution when calculating the cycle time (See note.).

Note User programs are allocated tasks that can be executed within cyclic tasks and interrupt tasks that satisfy interrupt conditions.

Execution times for most instructions differ depending on the CPU Unit used and the conditions when the instruction is executed.

The execution time can also vary when the execution condition is OFF.

The following table also lists the length of each instruction in the *Length* (*steps*) column. The number of steps required in the user program area for each instructions depends on the instruction and the operands used with it. The number of steps in a program is not the same as the number of instructions.

Note

1. Most instructions are supported in differentiated form (indicated with \uparrow , \downarrow , @, and %). Specifying differentiation will increase the execution times by the following amounts. (unit: μ s)

Symbol	CJ2H	CJ2M
	CPU6□-EIP	CPU3□
↑ or ↓	+0.24	+0.32
@ or %	+0.24	+0.32

2. Use the following time as a guideline when instructions are not executed. (unit: μs)

CJ2H	CJ2M
CPU6□-EIP	CPU□□
0.016 to 0.096	0.020 to 0.120

4-1-1 Sequence Input Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
LOAD	LD	1 to 2	0.016	0.040	
	!LD	2 to 14	0.99	1.260	
LOAD NOT	LD NOT	1 to 2	0.016	0.040	
	!LD NOT	2 to 14	0.99	1.260	
AND	AND	1 to 2	0.016	0.040	
	!AND	2 to 14	0.99	1.260	
AND NOT	AND NOT	1 to 2	0.016	0.040	
	!AND NOT	2 to 14	0.99	1.260	
OR	OR	1 to 2	0.016	0.040	
	!OR	2 to 14	0.99	1.260	
OR NOT	OR NOT	1 to 2	0.016	0.040	
	!OR NOT	2 to 14	0.99	1.260	
AND LOAD	AND LD	1	0.016	0.040	
OR LOAD	OR LD	1	0.016	0.040	
NOT	NOT	1	0.016	0.040	
CONDITION ON	UP	3	0.26	0.36	
CONDITION OFF	DOWN	4	0.27	0.40	
LOAD BIT TEST	LD TST	4	0.11	0.16	
LOAD BIT TEST NOT	LD TSTN	4	0.11	0.16	
AND BIT TEST	AND TST	4	0.11	0.16	
AND BIT TEST NOT	AND TSTN	4	0.11	0.16	
OR BIT TEST	OR TST	4	0.11	0.16	
OR BIT TEST NOT	OR TSTN	4	0.11	0.16	

4-1-2 Sequence Output Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
OUTPUT	OUT	1 to 2	0.016	0.040	
	!OUT	2 to 14	0.99	1.320	
OUTPUT NOT	OUT NOT	1 to 2	0.016	0.040	
	!OUT NOT	2 to 14	0.99	1.320	
KEEP	KEEP	1 to 2	0.048	0.060	
	!KEEP	16	0.99	1.340	
DIFFERENTIATE UP	DIFU	2 to 2	0.28	0.30	
DIFFERENTIATE DOWN	DIFD	2 to 2	0.24	0.30	
SET	SET	1 to 2	0.016	0.040	
	!SET	2 to 14	0.99	1.360	
RESET	RSET	1 to 2	0.016	0.040	
	!RSET	2 to 14	0.99	1.360	
MULTIPLE BIT SET	SETA	4	3.68	4.12	With 1-bit set
			15.5	24.4	With 1,000-bit set
MULTIPLE BIT RESET	RSTA	4	3.7	4.1	With 1-bit reset
			15.5	24.4	With 1,000-bit rese
SINGLE BIT SET	SETB	2	0.19	0.280	
	!SETB	16	0.99	1.120	
SINGLE BIT RESET	RSTB	2	0.19	0.280	
	!RSTB	16	0.99	1.120	

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SINGLE BIT OUTPUT	OUTB	2	0.19	0.280	
	!OUTB	16	0.99	1.180	

4-1-3 Sequence Control Instructions

Instruction		Length	ON executi	ion time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
END	END	1	2.6	3.5	
NO OPERATION	NOP	1	0.016	0.040	
INTERLOCK	IL	1	0.048	0.060	
INTERLOCK CLEAR	ILC	1	0.048	0.060	
MULTI-INTERLOCK DIFFER- ENTIATION HOLD	MILH	3	2.3	3.3	Interlock condition not met (input condi- tion ON)
			3.4	4.6	Interlock condition met (input condition OFF)
			3.8	5.2	Interlock condition met again during interlock (input con- dition OFF)
MULTI-INTERLOCK DIFFER- ENTIATION RELEASE	MILR 3	2.3	3.1	Interlock condition not met (input condi- tion ON)	
			3.4	4.5	Interlock condition met (input condition OFF)
			3.8	5.1	Interlock condition met again during interlock (input con- dition OFF)
MULTI-INTERLOCK CLEAR	MILC	2	1.2	1.7	Not during interlock
			1.6	2.2	During interlock
JUMP	JMP	2	0.31	0.34	
JUMP END	JME	2			
CONDITIONAL JUMP	CJP	2	0.31	0.34	Jump condition met (input condition ON)
CONDITIONAL JUMP NOT	CJPN	2	0.31	0.34	Jump condition met (input condition OFF)
MULTIPLE JUMP	JMP0	1	0.048	0.060	
MULTIPLE JUMP END	JME0	1	0.048	0.060	
FOR LOOP	FOR	2	0.27	0.42	Designating a constant
BREAK LOOP	BREAK	1	0.048	0.060	
NEXT LOOP	NEXT	1	0.14	0.16	When loop is continued
			0.18	0.18	When loop is ended

4-1-4 Timer and Counter Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
HUNDRED-MS TIMER	TIM	3	0.67	0.84	
	TIMX		0.67	0.84	

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
TEN-MS TIMER	TIMH	3	0.67	0.84	
	TIMHX		0.67	0.84	
ONE-MS TIMER	TMHH	3	0.67	0.84	
	TMHHX		0.67	0.84	
TENTH-MS TIMER	TIMU	3	0.67	0.84	
	TIMUX		0.67	0.84	
HUNDREDTH-MS TIMER	TMUH	3	0.67	0.84	
	TMUHX		0.67	0.84	
ACCUMULATIVE TIMER	TTIM	3	9.2	12.1	
			6.9	8.4	When resetting
			5.0	6.5	When interlocking
	TTIMX	3	8.8	11.7	
			6.8	8.5	When resetting
			5.0	6.5	When interlocking
LONG TIMER	TIML	4 to 5	5.8	7.0	
			3.9	4.1	When interlocking
	TIMLX	4 to 5	5.7	7.0	
			3.6	3.7	When interlocking
MULTI-OUTPUT TIMER	MTIM	4	6.4	7.2	
			3.7	4.3	When resetting
	MTIMX	4	5.5	6.4	
			3.4	3.8	When resetting
TIMER RESET	TRSET	2	0.58	0.8	
COUNTER	CNT	3	0.51	0.58	
	CNTX	1	0.51	0.58	
REVERSIBLE COUNTER	CNTR	3	9.1	11.8	
	CNTRX		8.0	10.3	
RESET TIMER/COUNTER	CNR	3	4.8	5.4	When resetting 1 word
			2839	2555	When resetting 1,000 words
	CNRX	3	4.7	5.5	When resetting 1 word
			2839	2555	When resetting 1,000 words

4-1-5 Comparison Instructions

Instruction	Mnemonic Length (steps)				Conditions
		CJ2H CPU6□(-EIP)	CJ2M CPU□□		
Input Comparison Instructions (unsigned)	=	4	0.08	0.16	
	<>				
	<				
	<=				
	>				
	>=				

Instruction	Mnemonic	Length	ON executi	ON execution time (μs)		
		(steps)	CJ2H	CJ2M CPU□□	Conditions	
land Orange de la descritore		4.1- 7	CPU6□(-EIP)	0.04		
Input Comparison Instructions (double, unsigned)	=L	4 to 7	0.08	0.24		
(acable, analytica)	<>L					
	<l< td=""><td></td><td></td><td></td><td></td></l<>					
	<=L					
	>L					
	>=L					
Input Comparison Instructions (signed)	=S	4	0.08	0.16		
(signed)	<>S					
	<s< td=""><td></td><td></td><td></td><td></td></s<>					
	<=S					
	>S					
	>=S					
Input Comparison Instructions	=SL	4 to 7	0.08	0.24		
(double, signed)	<>SL					
	<sl< td=""><td></td><td></td><td rowspan="4"></td><td></td></sl<>					
	<=SL					
	>SL					
	>=SL					
Time Comparison Instructions	=DT	4	16.300	27.9		
	<>DT					
	<dt< td=""><td rowspan="4"></td><td></td></dt<>					
	<=DT					
	>DT					
	>=DT					
COMPARE	CMP	3	0.06	0.080		
	!CMP	30	2.06	2.6		
DOUBLE COMPARE	CMPL	3 to 5	0.064	0.120		
SIGNED BINARY COMPARE	CPS	3 to 5	0.064	0.080		
	!CPS	30	2.06	2.6		
DOUBLE SIGNED BINARY COMPARE	CPSL	3 to 5	0.064	0.120		
TABLE COMPARE	TCMP	4	10.3	12.5		
MULTIPLE COMPARE	MCMP	4	15.2	20.3		
UNSIGNED BLOCK COM- PARE	BCMP	4	16.3	20.5		
EXPANDED BLOCK COM- PARE	BCMP2	4	5.0	5.1	Number of data words: 1	
			217.2	278	Number of data words: 255	
AREA RANGE COMPARE	ZCP	3	0.14	0.400		
DOUBLE AREA RANGE COMPARE	ZCPL	3 to 5	0.14	0.640		
SIGNED AREA RANGE COMPARE	ZCPS	3	0.14	0.400		
DOUBLE SIGNED AREA RANGE COMPARE	ZCPSL	3 to 5	0.14	0.640		

4-1-6 Data Movement Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
MOVE	MOV	3	0.05	0.12	
	!MOV	30	1.98	2.6	
DOUBLE MOVE	MOVL	3 to 4	0.05	0.20	
MOVE NOT	MVN	3	0.05	0.12	
DOUBLE MOVE NOT	MVNL	3 to 4	0.05	0.20	
MOVE BIT	MOVB	4	0.19	0.32	
MOVE DIGIT	MOVD	4	0.19	0.32	
MULTIPLE BIT TRANSFER	XFRB	4	6.6	9.4	Transferring 1 bit
			85.8	119	Transferring 255 bits
BLOCK TRANSFER	XFER	4	0.29	0.28	Transferring 1 word
			240.1	220	Transferring 1,000 words
BLOCK SET	BSET	4	0.21	0.20	Setting 1 word
			142.2	140	Setting 1,000 words
DATA EXCHANGE	XCHG	3	0.32	0.48	
DOUBLE DATA EXCHANGE	XCGL	3 to 4	0.12	0.29	
SINGLE WORD DISTRIBUTE	DIST	4	4.5	4.7	
DATA COLLECT	COLL	4	4.6	4.7	
MOVE TO REGISTER	MOVR	3	0.064	0.200	
MOVE TIMER/COUNTER PV TO REGISTER	MOVRW	3	0.064	0.200	

4-1-7 Data Shift Instructions

Instruction	Mnemonic Length		ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SHIFT	SFT	3	2.86	3.47	Shifting 1 word
REGISTER			315	422	Shifting 1,000 words
REVERSIBLE SHIFT	SFTR	4	6.22	6.38	Shifting 1 word
REGISTER			319	422	Shifting 1,000 words
ASYNCHRONOUS SHIFT	ASFT	4	5.3	6.3	Shifting 1 word
REGISTER			948	1285	Shifting 1,000 words ^{*1}
WORD SHIFT	WSFT	4	2.3	3.1	Shifting 1 word
			233	187	Shifting 1,000 words
ARITHMETIC SHIFT LEFT	ASL	2	0.18	0.260	
DOUBLE SHIFT LEFT	ASLL	2	0.32	0.420	
ARITHMETIC SHIFT RIGHT	ASR	2	0.18	0.260	
DOUBLE SHIFT RIGHT	ASRL	2	0.32	0.420	
ROTATE LEFT	ROL	2	0.18	0.260	
DOUBLE ROTATE LEFT	ROLL	2	0.32	0.420	
ROTATE LEFT WITHOUT CARRY	RLNC	2	0.18	0.260	
DOUBLE ROTATE LEFT WITHOUT CARRY	RLNL	2	0.32	0.420	
ROTATE RIGHT	ROR	2	0.18	0.260	
DOUBLE ROTATE RIGHT	RORL	2	0.32	0.420	
ROTATE RIGHT WITHOUT CARRY	RRNC	2	0.18	0.260	

Instruction	Mnemonic			on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
DOUBLE ROTATE RIGHT WITHOUT CARRY	RRNL	2	0.32	0.420	
ONE DIGIT SHIFT LEFT	SLD	3	3.7	4.4	Shifting 1 word
			317.8	429	Shifting 1,000 words
ONE DIGIT SHIFT RIGHT	SRD	3	4.5	5.4	Shifting 1 word
			479.5	656	Shifting 1,000 words
SHIFT N-BIT DATA LEFT	NSFL	4	4.6	5.2	Shifting 1 bit
			31.5	36.1	Shifting 1,000 bits
SHIFT N-BIT DATA RIGHT	NSFR	4	4.5	5.2	Shifting 1 bit
			39.0	50.2	Shifting 1,000 bits
SHIFT N-BITS LEFT	NASL	3	0.18	0.38	
DOUBLE SHIFT N-BITS LEFT	NSLL	3	0.32	0.54	
SHIFT N-BITS RIGHT	NASR	3	0.18	0.38	
DOUBLE SHIFT N-BITS RIGHT	NSRL	3	0.32	0.54	

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-1-8 Increment/Decrement Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
INCREMENT BINARY	++	2	0.18	0.24	
DOUBLE INCREMENT BINARY	++L	2	0.18	0.24	
DECREMENT BINARY		2	0.18	0.24	
DOUBLE DECREMENT BINARY	L	2	0.18	0.24	
INCREMENT BCD	++B	2	3.0	3.4	
DOUBLE INCREMENT BCD	++BL	2	3.2	3.5	
DECREMENT BCD	B	2	3.0	3.5	
DOUBLE DECREMENT BCD	– –BL	2	3.2	3.5	

4-1-9 Symbol Math Instructions

Instruction	Mnemonic	Length			Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SIGNED BINARY ADD WITH- OUT CARRY	+	4	0.18	0.34	
DOUBLE SIGNED BINARY ADD WITHOUT CARRY	+L	4 to 6	0.18	0.24	
SIGNED BINARY ADD WITH CARRY	+C	4	0.18	0.34	
DOUBLE SIGNED BINARY ADD WITH CARRY	+CL	4 to 6	0.18	0.24	
BCD ADD WITHOUT CARRY	+B	4	4.0	4.8	
DOUBLE BCD ADD WITH- OUT CARRY	+BL	4 to 6	4.9	6.0	
BCD ADD WITH CARRY	+BC	4	4.4	5.2	

Instruction	Mnemonic Length		ON executi	Conditions	
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	1
DOUBLE BCD ADD WITH CARRY	+BCL	4 to 6	5.2	6.6	
SIGNED BINARY SUBTRACT WITHOUT CARRY	_	4	0.18	0.340	
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L	4 to 6	0.18	0.24	
SIGNED BINARY SUBTRACT WITH CARRY	-C	4	0.18	0.340	
DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL	4 to 6	0.18	0.24	
BCD SUBTRACT WITHOUT CARRY	-В	4	4.1	4.9	
DOUBLE BCD SUBTRACT WITHOUT CARRY	-BL	4 to 6	4.9	5.9	
BCD SUBTRACT WITH CARRY	-BC	4	4.5	5.2	
DOUBLE BCD SUBTRACT WITH CARRY	-BCL	4 to 6	5.2	6.3	
SIGNED BINARY MULTIPLY	*	4	0.26	0.520	
DOUBLE SIGNED BINARY MULTIPLY	*L	4 to 6	3.6	3.9	
UNSIGNED BINARY MULTI- PLY	*U	4	0.26	0.26	
DOUBLE UNSIGNED BINARY MULTIPLY	*UL	4 to 6	3.6	3.9	
BCD MULTIPLY	*B	4	3.6	4.6	
DOUBLE BCD MULTIPLY	*BL	4 to 6	4.9	6.2	
SIGNED BINARY DIVIDE	/	4	0.29	0.540	
DOUBLE SIGNED BINARY DIVIDE	/L	4 to 6	4.2	4.8	
UNSIGNED BINARY DIVIDE	/U	4	0.29	0.540	
DOUBLE UNSIGNED BINARY DIVIDE	/UL	4 to 6	3.8	4.2	
BCD DIVIDE	/B	4	5.0	5.9	
DOUBLE BCD DIVIDE	/BL	4 to 6	4.8	5.9	

4-1-10 Conversion Instructions

Instruction		Length	Length ON execution		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
BCD TO BINARY	BIN	3	0.18	0.280	
DOUBLE BCD TO DOUBLE BINARY	BINL	3 to 4	3.3	3.5	
BINARY TO BCD	BCD	3	0.19	0.300	
DOUBLE BINARY TO DOU- BLE BCD	BCDL	3 to 4	3.3	3.7	
2'S COMPLEMENT	NEG	3	0.14	0.240	
DOUBLE 2'S COMPLEMENT	NEGL	3 to 4	0.26	0.440	
16-BIT TO 32-BIT SIGNED BINARY	SIGN	3	0.26	0.340	

Instruction		Length	ON executi	on time (μs)	Conditions	
		(steps)	CJ2H	CJ2M CPU□□	1	
			CPU6□(-EIP)			
DATA DECODER	MLPX	4	0.17	0.280	Decoding 1 digit (4 to 16)	
			0.42	0.770	Decoding 4 digits (4 to 16)	
			1.14	1.760	Decoding 1 digit (8 to 256)	
			2.17	3.370	Decoding 4 digits (8 to 256)	
DATA ENCODER	DMPX	4	3.3	4.6	Encoding 1 digit (16 to 4)	
			3.7	5.2	Encoding 4 digits (16 to 4)	
			17.3	26.3	Encoding 1 digit (256 to 8)	
			35	47	Encoding 2 digits (256 to 8)	
ASCII CONVERT	ASC	4	4.0	4.5	Converting 1 digit into ASCII	
			4.6	5.2	Converting 4 digits into ASCII	
ASCII TO HEX	HEX	4	3.3	3.8	Converting 1 digit	
COLUMN TO LINE	LINE	4	10.5	13.1		
LINE TO COLUMN	COLM	4	13.8	17.6		
SIGNED BCD TO BINARY	BINS		3.6	4.0	Data format setting No. 0	
			3.6	4.0	Data format setting No. 1	
			3.6	4.0	Data format setting No. 2	
			3.6	4.0	Data format setting No. 3	
DOUBLE SIGNED BCD TO BINARY	BISL	4 to 5	3.7	4.1	Data format setting No. 0	
			3.6	4.1	Data format setting No. 1	
			3.7	4.2	Data format setting No. 2	
			3.7	4.2	Data format setting No. 3	
SIGNED BINARY TO BCD	BCDS	4	3.7	4.0	Data format setting No. 0	
			3.7	4.1	Data format setting No. 1	
			3.7	4.2	Data format setting No. 2	
			3.7	4.2	Data format setting No. 3	
DOUBLE SIGNED BINARY TO BCD	BDSL	4 to 5	4.0	4.5	Data format setting No. 0	
				4.0	4.6	Data format setting No. 1
			4.0	4.6	Data format setting No. 2	
			4.1	4.6	Data format setting No. 3	

Instruction	Mnemonic	Length	ON executi	Conditions	
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
GRAY CODE CONVERSION	GRY	4	26.5	49.1	8-bit binary
			27.6	51.1	8-bit BCD
			30.9	57.2	8-bit angle
			35.3	66.0	15-bit binary
			36.3	68.0	15-bit BCD
			39.6	74.0	15-bit angle
GRAY CODE TO BINARY CONVERT	GRAY_BIN	3	0.1	0.3	
DOUBLE GRAY CODE TO	GRAY_BINL	3 to 4	0.1	0.4	
BINARY CONVERT					
DOUBLE GRAY CODE TO	BIN_GRAY	3	0.1	0.3	
BINARY CONVERT					
DOUBLE BINARY TO GRAY	BIN_GRAYL	3 to 4	0.1	0.4	
CODE CONVERT					
FOUR-DIGIT NUMBER TO ASCII	STR4	3	8.4	14.2	
EIGHT-DIGIT NUMBER TO ASCII	STR8	3 to 4	10.2	16.4	
SIXTEEN-DIGIT NUMBER TO ASCII	STR16	3	15.8	28.2	
ASCII TO FOUR-DIGIT NUM- BER	NUM4	3 to 4	10.5	18.5	
ASCII TO EIGHT-DIGIT NUM- BER	NUM8	3	14.8	27.1	
ASCII TO SIXTEEN-DIGIT NUMBER	NUM16	3	27.4	52.0	

4-1-11 Logic Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
LOGICAL AND	ANDW	4	0.14	0.340	
DOUBLE LOGICAL AND	ANDL	4 to 6	0.26	0.640	
LOGICAL OR	ORW	4	0.18	0.340	
DOUBLE LOGICAL OR	ORWL	4 to 6	0.26	0.640	
EXCLUSIVE OR	XORW	4	0.18	0.340	
DOUBLE EXCLUSIVE OR	XORL	4 to 6	0.26	0.640	
EXCLUSIVE NOR	XNRW	4	0.18	0.340	
DOUBLE EXCLUSIVE NOR	XNRL	4 to 6	0.26	0.640	
COMPLEMENT	COM	2	0.18	0.240	
DOUBLE COMPLEMENT	COML	2	0.32	0.440	

4-1-12 Special Math Instructions

Instruction	Mnemonic	Length ON execution time (μs)		Conditions	
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
BINARY ROOT	ROTB	3	15.4	24.2	
BCD SQUARE ROOT	ROOT	3	17.1	25.3	
ARITHMETIC PROCESS	APR	4	4.6	5.3	Designating SIN and COS
			5.7	6.9	Designating line- segment approxima- tion
FLOATING POINT DIVIDE	FDIV	4	76	149	
BIT COUNTER	BCNT	4	0.24	0.360	Counting 1 word

4-1-13 Floating-point Math Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
FLOATING TO 16-BIT	FIX	3 to 4	0.13	0.24	
FLOATING TO 32-BIT	FIXL	3 to 4	0.13	0.32	
16-BIT TO FLOATING	FLT	3 to 4	0.13	0.30	
32-BIT TO FLOATING	FLTL	3 to 4	0.13	0.32	
FLOATING-POINT ADD	+F	4 to 6	0.24	0.66	
FLOATING-POINT SUB- TRACT	_F	4 to 6	0.24	0.66	
FLOATING-POINT DIVIDE	/F	4 to 6	0.4	0.9	
FLOATING-POINT MULTIPLY	*F	4 to 6	0.24	0.66	
DEGREES TO RADIANS	RAD	3 to 4	2.7	3.3	
RADIANS TO DEGREES	DEG	3 to 4	3.0	3.2	
SINE	SIN	3 to 4	3.8	4.3	0° specified
			4.5	5.4	45° specified
			5.0	6.0	90° specified
HIGH-SPEED SINE	SINQ	8 to 9	0.59	0.86	0°, 45°, or 90° specified
COSINE	cos	3 to 4	3.7	4.3	0° specified
			4.4	5.2	45° specified
			5.3	6.7	90° specified
HIGH-SPEED COSINE	COSQ	8 to 9	0.59	0.86	0°, 45°, or 90° specified
TANGENT	TAN	3 to 4	3.9	4.5	0° specified
			6.1	8.2	45° specified
HIGH-SPEED TANGENT	TANQ	15 to 16	1.2	1.7	0° , 45°, or 90° specified
ARC SINE	ASIN	3 to 4	5.8	7.1	0° specified
			24.8	33.0	45° specified
			5.6	7.0	90° specified
ARC COSINE	ACOS	3 to 4	5.3	6.8	0° specified
			27.2	34.6	45° specified
			6.4	7.1	90° specified
ARC TANGENT	ATAN	3 to 4	4.0	5.0	0° specified
			5.6	7.0	45° specified
SQUARE ROOT	SQRT	3 to 4	0.42	0.66	
EXPONENT	EXP	3 to 4	3.8	4.5	
LOGARITHM	LOG	3 to 4	5.8	6.5	

Instruction	Mnemonic			on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
EXPONENTIAL POWER	PWR	4 to 6	35.7	56.6	
Floating Symbol Comparison	=F	4 to 6	0.13	0.26	
	<>F				
	<f< td=""><td></td><td></td><td></td><td></td></f<>				
	<=F				
	>F				
	>=F				
FLOATING- POINT TO ASCII	FSTR	4 to 5	15.6	23.9	
ASCII TO FLOATING-POINT	FVAL	3	21.2	31.4	
MOVE FLOATING-POINT (SINGLE)	MOVF	3 to 4	0.18	0.20	

4-1-14 Double-precision Floating-point Instructions

Instruction	Mnemonic Length (steps)	ON execut	ON execution time (μs)		
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	_
DOUBLE SYMBOL COM-	=D	4	5.1	6.7	
PARISON	<>D				
	<d< td=""><td></td><td></td><td></td><td></td></d<>				
	<=D				
	>D				
	>=D				
DOUBLE FLOATING TO 16- BIT BINARY	FIXD	3	5.1	5.4	
DOUBLE FLOATING TO 32- BIT BINARY	FIXLD	3	5.1	5.4	
16-BIT BINARY TO DOUBLE FLOATING	DBL	3	3.5	4.3	
32-BIT BINARY TO DOUBLE FLOATING	DBLL	3	3.5	4.3	
DOUBLE FLOATING-POINT ADD	+D	4	6.0	7.1	
DOUBLE FLOATING-POINT SUBTRACT	-D	4	6.1	7.1	
DOUBLE FLOATING-POINT MULTIPLY	*D	4	6.1	7.1	
DOUBLE FLOATING-POINT DIVIDE	/D	4	6.4	7.5	
DOUBLE DEGREES TO RADIANS	RADD	3	6.1	6.5	
DOUBLE RADIANS TO DEGREES	DEGD	3	6.0	6.4	
DOUBLE SINE	SIND	3	14.7	21.5	0° specified
			20.4	35.4	45° specified
			18.5	35.0	90° specified
DOUBLE COSINE	COSD	3	14.1	20.6	0° specified
			19.6	29.9	45° specified
			19.1	29.8	90° specified
DOUBLE TANGENT	TAND	3	7.3	9.4	0° specified
			27.4	50.3	45° specified
DOUBLE ARC SINE	ASIND	3	7.5	9.8	0° specified
			55.0	75.2	45° specified
			6.1	8.3	90° specified

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
DOUBLE ARC COSINE	ACOSD	3	8.3	10.9	0° specified
			55.9	72.8	45° specified
			43.7	72.8	90° specified
DOUBLE ARC TANGENT	ATAND	3	6.1	7.4	0° specified
			29.7	36.5	45° specified
DOUBLE SQUARE ROOT	SQRTD	3	16.6	23.4	
DOUBLE EXPONENT	EXPD	3	39.7	58.4	
DOUBLE LOGARITHM	LOGD	3	35.5	52.2	
DOUBLE EXPONENTIAL POWER	PWRD	4	66	99	

4-1-15 Table Data Processing Instructions

Instruction	Mnemonic	Length (steps)	ON executi	on time (μs)	Conditions
			CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SET STACK	SSET	SSET 3 7.	7.6	9.4	Designating 5 words in stack area
			107	65	Designating 1,000 words in stack area
PUSH ONTO STACK	PUSH	3	4.9	5.9	
FIRST IN FIRST OUT	FIFO	3	4.8	5.0	Designating 5 words in stack area
			231	167	Designating 1,000 words in stack area
LAST IN FIRST OUT	LIFO	3	5.3	7.1	
DIMENSION RECORD TABLE	DIM	5	11.1	19.7	
SET RECORD LOCATION	SETR	4	3.8	5.5	
GET RECORD NUMBER	GETR	4	4.6	7.9	
DATA SEARCH	SRCH	4	13.9	25.0	Searching for 1 word
			1940	3257	Searching for 1,000 words*1
SWAP BYTES	SWAP	WAP 3	10.1	17.5	Swapping 1 word
			1421	2098	Swapping 1,000 words*1
FIND MAXIMUM	MAX	4 to 5	4.8	5.8	Number of values being searched: 1
			465	672	Number of values being searched: 1,000*1
DOUBLE FIND MAXIMUM	MAXL	4 to 5	4.8	5.8	Number of values being searched: 1
			465	773	Number of values being searched: 1,000*1
FIND MAXIMUM FLOATING	MAXF	4 to 5	5.2	6.5	Number of values being searched: 1
			682	1090	Number of values being searched: 1,000*1

Instruction	Mnemonic	Length	ON executi	ion time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
FIND DOUBLE MAXIMUM FLOATING	MAXD	4 to 5	5.4	6.4	Number of values being searched: 1
			1435	2333	Number of values being searched: 1,000*1
FIND MINIMUM	MIN	4 to 5	4.8	5.8	Number of values being searched: 1
			465	677	Number of values being searched: 1,000*1
DOUBLE FIND MINIMUM	MINL	4 to 5	4.8	5.9	Number of values being searched: 1
			189	774	Number of values being searched: 1,000*1
FIND MINIMUM FLOATING	MINF	4 to 5	5.2	6.5	Number of values being searched: 1
			683	1091	Number of values being searched: 1,000*1
FIND DOUBLE MINIMUM FLOATING	MIND	4 to 5	5.2	6.4	Number of values being searched: 1
			1402	2303	Number of values being searched: 1,000*1
SUM	SUM	4 to 5	17.5	31.3	Adding 1 word
			900	1696	Adding 1,000 words ^{*1}
FRAME CHECKSUM	FCS	4 to 5	14.1	25.2	For 1-word table length
			1235	2089	For 1,000-word table length*1
STACK SIZE READ	SNUM	3	4.5	5.3	
STACK DATA READ	SREAD	4	4.6	5.4	
STACK DATA OVERWRITE	SWRIT	4	4.3	5.0	
STACK DATA INSERT	SINS	4	8.2	9.3	
			275	256	For 1,000-word table
STACK DATA DELETE	SDEL	4	6.1	7.8	
			247	180	For 1,000-word table

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-1-16 Tracking Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
Unsigned One-word Record Search Instructions	RSRCH	6	13.9	15.9	Number of records: 1
			504	585	Number of records: 1,000
Unsigned Two-word Record Search Instructions	RSRCH2 6	14.7	17.6	Number of records: 1	
			838	932	Number of records: 1,000
Unsigned Four-word Record Search Instructions	RSRCH4	6	17.0	19.1	Number of records: 1
			1544	1684	Number of records: 1,000
UNSIGNED ONE-WORD RECORD SORT	RSORT	5	149	156	100 records, split sorting disabled, sorting "99, 98, 970" to "0, 1, 299" (worst-case scenario)
UNSIGNED TWO-WORD RECORD SORT	RSORT2	5	250	249	
UNSIGNED FOUR-WORD RECORD SORT	RSORT4	5	457	440	

4-1-17 Data Control Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
PID CONTROL	PID	4	297	526	First execution
			234	423	Input ON and sam- pling
			71	117	Input ON and not sampling
			7.2	10.5	First execution
PID CONTROL WITH AUTO- TUNING	PIDAT	4	302	600	Input ON and sam- pling
			237	428	Input ON and not sampling
			73	118	Initial execution of autotuning
			7.3	10.5	Autotuning when sampling
			120	203	Initial execution of autotuning
LIMIT CONTROL	LMT	4 to 5	10.8	18.3	
DEAD BAND CONTROL	BAND	4 to 5	11.2	19.2	
DEAD ZONE CONTROL	ZONE	4 to 5	10.9	17.7	
TIME-PROPORTIONAL OUT-	TPO	4	6.9	10.2	Input condition OFF
PUT			37	65	Input condition ON and duty specified or output limit disabled
SCALING	SCL	4	7.6	9.3	
SCALING 2	SCL2	4	6.8	9.2	
SCALING 3	SCL3	4	7.8	9.9	
AVERAGE	AVG	4	22	40	Average of an operation
			212	351	Average of 64 operations

4-1-18 Subroutine Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SUBROUTINE CALL	SBS	2	0.90	2.8	
SUBROUTINE ENTRY	SBN	2	2.8	4.1	
SUBROUTINE RETURN	RET	1	0.43	2.0	
MACRO	MCRO	4	16.8	21.7	
GLOBAL SUBROUTINE RETURN	GSBS	2	0.90	2.8	
GLOBAL SUBROUTINE CALL	GSBN	2	2.7	3.6	
GLOBAL SUBROUTINE ENTRY	GRET	1	0.43	2.0	

4-1-19 Interrupt Control Instructions

Instruction	Mnemonic	Length	Length ON execution		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SET INTERRUPT MASK	MSKS	3	10.6	22.1	
READ INTERRUPT MASK	MSKR	3	9.6	14.8	
CLEAR INTERRUPT	CLI	3	10.1	21.6	
DISABLE INTERRUPTS	DI	1	10.3	20.4	
ENABLE INTERRUPTS	EI	1	9.3	16.0	

4-1-20 High-speed Counter and Pulse Output Instructions (When a Pulse I/O Module Is Connected)

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions	
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□		
MODE CONTROL	INI	4		7.4	Starting high-speed counter comparison	
				4.0	Stopping high- speed counter com- parison	
				8.0	Changing high- speed counter PV	
				5.0	Changing PV of interrupt input in counter mode	
				9.2	Stopping pulse output	
				5.2	Stopping PWM(891) output	
				48.2	Changes origin search/return set-tings	

Instruction		Length	ON executi	on time (μs)	Conditions	
		(steps)	CJ2H	CJ2M CPU□□		
HIGH-SPEED COUNTER PV	PRV	4	CPU6□(-EIP)	7.6	Reading pulse out-	
THOUGH DE BOOKTEKT V	1100	'		7.0	put PV	
				6.3	Reading high-speed counter PV	
				3.7	Reading PV of inter- rupt input in counter mode	
				7.1	Reading PV in inter- rupt input counter mode	
				6.3	Reading high-speed counter status	
				4.1	Reading PWM(891) status	
				17.5	Reading high-speed counter range com- parison results for 8 ranges	
				34.6	Reading high-speed counter range com- parison results for 32 ranges	
				4.9	Reading frequency of high-speed counter 0	
COUNTER FREQUENCY CONVERT	PRV2	4		5.2		
COMPARISON TABLE LOAD	CTBL	4	31.7	31.7	Registering target value table and starting comparison for 1 target value	
					1528	Registering target value table and starting comparison for 48 target values
					45.0	Registering range table and starting comparison for 8 ranges
					150.8	Registering range table and starting comparison for 32 ranges
						26.2
				1520	Only registering target value table for 48 target values	
				41.8	Only registering range table for 8 ranges	
				150.0	Only registering range table for 32 ranges	
SPEED OUTPUT	SPED	4		23.5	Continuous mode	
				24.6	Independent mode	
SET PULSES	PULS	4		8.2		

Instruction	ction Mnemonic		ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
PULSE OUTPUT	PLS2	5		39.4	
ACCELERATION CONTROL	ACC	4		35.0	Continuous mode
				44.6	Independent mode
ORIGIN SEARCH	ORG	3		28.1	Origin search
				23.6	Origin return
PULSE WITH VARIABLE DUTY FACTOR	PWM	4		7.8	
INTERRUPT FEEDING	IFEED	4		42.4	

4-1-21 Step Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
STEP DEFINE	STEP	2	8.7	10.6	Step control bit ON
			8.7	9.8	Step control bit OFF
STEP START	SNXT	2	2.2	2.8	

4-1-22 Basic I/O Unit Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
I/O REFRESH	IORF	3	10.1	12.2	1-word refresh (IN) for Basic I/O Units
			10.5	13.0	1-word refresh (OUT) for Basic I/O Units
SPECIAL I/O UNIT I/O REFRESH	FIORF	2	*1	*1	
CPU BUS I/O REFRESH	DLNK	4	234	256	Allocated 1 word
7-SEGMENT DECODER	SDEC	4	2.5	3.3	
DIGITAL SWITCH INPUT	DSW	DSW 6 24.8	24.8	39.6	4 digits, data input value: 0
			24.8	40.2	8 digits, data input value: 00
TEN KEY INPUT	TKY	TKY 4	7.2	9.7	Data input value: 00
			6.5	8.6	Data input value: FF
HEXADECIMAL KEY INPUT	HKY	5	25.9	40.8	Data input value: 00
			25.9	41.0	Data input value: FF
MATRIX INPUT	MTR	5	25.0	38.5	Data input value: 00
			25.0	38.5	Data input value: FF
7-SEGMENT DISPLAY OUT-	7SEG	5	31.4	51.9	4 digits
PUT			34.6	59.4	8 digits
ANALOG INPUT DIRECT CONVERSION	AIDC	3	25.0	27.0	Analog input number: 1, Number of analog inputs used: 4
		38.8	41.6	Analog input number: 0, Number of analog inputs used: 4	

Instruction	Mnemonic Length		ON execution	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
ANALOG OUTPUT DIRECT AOD CONVERSION	AODC	AODC 3 2	23.1	24.4	Analog output number: 1, Number of analog outputs used: 4
			44.1	45.3	Analog output number: 0, Number of analog outputs used: 4
PCU HIGH-SPEED POSI- TIONING	NCDMV	4	81.7	95.3	
PCU POSITIONING TRIG- GER	NCDTR	3	22.9	25.5	
INTELLIGENT I/O READ	IORD	4	*1	*1	
INTELLIGENT I/O WRITE	IOWR	4	*1	*1	

^{*1} Execution of the IORD, IORW, and FIORF instructions depends on the Special I/O Units for which they are being executed.

4-1-23 Serial Communications Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
PROTOCOL MACRO	PMCR	5	57.8	97.8	Direct specification
			77	132	Operand specification, sending 1 word, receiving 1 word
PROTOCOL MACRO 2	PMCR2	6	49.5	96.0	Direct specification
			69	129	Operand specification, sending 1 word, receiving 1 word
TRANSMIT	TXD	4	57.5	93.8	Sending 1 byte
			517	947	Sending 256 bytes
RECEIVE	RXD	4	79	128	Storing 1 byte
			570	1033	Storing 256 bytes
TRANSMIT VIA SERIAL COMMUNICATIONS UNIT	TXDU	4	75	130	Sending 1 byte
RECEIVE VIA SERIAL COM- MUNICATIONS UNIT	RXDU	4	74	128	Storing 1 byte
DIRECT TRANSMIT VIA	DTXDU	4	25.8	37.0	Sending 1 byte
SERIAL COMMUNICATIONS UNIT			179	203	Sending 256 bytes
DIRECT RECEIVE VIA	DRXDU	4	27.8	39.7	Storing 1 byte
SERIAL COMMUNICATIONS UNIT			188	205	Storing 256 bytes
CHANGE SERIAL PORT SETUP	STUP	3	233	276	Addressed to COM port on CPU Unit

4-1-24 Network Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
NETWORK SEND	SEND	4	44.3	79.4	
NETWORK SEND 2	SEND2	5	43.4	82.8	
NETWORK RECEIVE	RECV	4	43.9	79.9	

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
NETWORK RECEIVE 2	RECV2	5	44.5	82.8	
DELIVER COMMAND	CMND	4	52.7	95.1	
DELIVER COMMAND 2	CMND2	5	53.0	98.1	
EXPLICIT MESSAGE SEND	EXPLT	4	78	134	
EXPLICIT GET ATTRIBUTE	EGATR	4	74	127	
EXPLICIT SET ATTRIBUTE	ESATR	3	69	117	
EXPLICIT WORD READ	ECHRD	4	65	110	
EXPLICIT WORD WRITE	ECHWR	4	64	110	

4-1-25 File Memory Instructions

Instruction	Mnemonic	Length ON execution		on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
READ DATA FILE	FREAD	5	217	372	In binary
WRITE DATA FILE	FWRIT	5	216	366	In binary
WRITE TEXT FILE	TWRIT	5	205	370	

4-1-26 Display Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
DISPLAY MESSAGE	MSG	3	6.9	10.5	Displaying message
			6.6	9.5	Deleting displayed message

4-1-27 Clock Instructions

Instruction	Mnemonic	Length	ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
CALENDAR ADD	CADD	4	15.6	22.5	
CALENDAR SUBTRACT	CSUB	4	16.4	24.9	
HOURS TO SECONDS	SEC	3	3.6	4.1	
SECONDS TO HOURS	HMS	3	3.5	4.0	
CLOCK ADJUSTMENT	DATE	2	29.6	53.2	

4-1-28 Debugging Instructions

Instruction Mn	Mnemonic	(steps)	ON executi	on time (μs)	Conditions
			CJ2H CPU6□(-EIP)	CJ2M CPU□□	
TRACE MEMORY SAM- PLING	TRSM		8.9	12.6	Sampling 1 bit and 0 words
			31.6	33.1	Sampling 31 bits and 6 words
l			38.8	39.2	Sampling 31 bits and 16 words

4-1-29 Failure Diagnosis Instructions

Instruction	Mnemonic	Length	ON executi	ion time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
FAILURE ALARM	FAL	3	7.9	14.7	Recording errors
			14.7	22.3	Deleting errors (in order of priority)
			12.9	22.5	Deleting errors (all errors)
			117	210	Deleting errors (individually)
SEVERE FAILURE ALARM	FALS	3			
FAILURE POINT DETECTION	FPD	4	111	188	Bit address output, time monitored
			107	202	Bit address output, first error detection
			129	242	Message characters output, time monitored
		159	244	Message characters output, first error detection	

4-1-30 Other Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
SET CARRY	STC	1	0.048	0.060	
CLEAR CARRY	CLC	1	0.048	0.060	
SELECT EM BANK	EMBC	2	7.6	14.6	
EXTEND MAXIMUM CYCLE TIME	WDT	2	7.6	17.1	
SAVE CONDITION FLAGS	CCS	1	5.8	8.3	
LOAD CONDITION FLAGS	CCL	1	6.4	9.9	
CONVERT ADDRESS FROM CV	FRMCV	3	9.4	15.7	
CONVERT ADDRESS TO CV	TOCV	3 to 4	10.3	18.2	
DISABLE PERIPHERAL SERVICING	IOSP	1			
ENABLE PERIPHERAL SER- VICING	IORS	1			

4-1-31 Block Programming Instructions

Instruction	on Mnemonic Lengt		ON execution time (μs)		Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
BLOCK PROGRAM BEGIN	BPRG	2	7.8	14.1	
BLOCK PROGRAM END	BEND	1	8.8	13.4	
BLOCK PROGRAM PAUSE	BPPS	2	5.4	8.4	
BLOCK PROGRAM RESTART	BPRS	2	3.6	4.8	
CONDITIONAL BLOCK EXIT	(Execution condition) EXIT	1	8.6	13.2	Block exited (input condition ON)
			2.0	2.6	Block not exited (input condition OFF)

Instruction	Mnemonic	Length	ON executi	ion time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU	
CONDITIONAL BLOCK EXIT	EXIT (bit	2	9.8	14.8	Block exited (bit ON)
	address)		3.6	4.2	Block not exited (bit OFF)
CONDITIONAL BLOCK EXIT (NOT)	EXIT NOT (bit address)	2	3.6	4.3	Block exited (bit OFF)
			8.9	14.9	Block not exited (bit ON)
Branching	IF (execution condition)	1	1.9	2.4	IF true (input condition ON)
			3.8	6.4	IF false (input condition OFF)
	IF (bit address)	2	3.2	4.0	IF true (bit ON)
			5.1	8.0	IF false (bit OFF)
Branching (NOT)	IF NOT (bit	2	5.1	8.2	IF true (bit OFF)
	address)		3.2	4.1	IF false (bit ON)
Branching	ELSE	1	3.5	5.7	IF true
			5.3	7.3	IF false
Branching	IEND	1	5.3	8.5	IF true
			2.0	2.4	IF false
ONE CYCLE AND WAIT	WAIT (execution condition)	1	10.0	15.9	Do not wait (input condition ON)
			1.4	1.9	Wait (input condition OFF)
	WAIT (bit address)	2	9.2	13.5	Do not wait (bit ON)
			2.6	3.7	Wait (bit OFF)
ONE CYCLE AND WAIT (NOT)	WAIT NOT (bit address)		9.2	13.5	Do not wait (bit OFF)
			2.8	3.7	Wait (bit ON)
HUNDRED-MS TIMER WAIT	TIMW	3	15.6	22.9	Default setting
			16.0	23.2	Normal execution
	TIMWX	3	15.1	21.7	Default setting
			16.0	23.2	Normal execution
TEN-MS TIMER WAIT	TMHW	3	15.7	22.6	Default setting
			17.5	24.9	Normal execution
	TMHWX	3	15.2	22.1	Default setting
			16.4	23.4	Normal execution
COUNTER WAIT	CNTW	4	13.7	20.5	Default setting
			13.4	19.8	Normal execution
	CNTWX	4	13.1	19.5	Default setting
			13.5	19.7	Normal execution
Loop Control	LOOP	1	4.6	9.1	
Loop Control	LEND (execution condition)	1	4.2	8.6	Do not loop (input condition ON)
			3.9	6.5	Loop (input condition OFF)
	LEND (bit	2	6.7	10.4	Do not loop (bit ON)
	address)		6.6	8.2	Loop (bit OFF)
Loop Control (NOT)	LEND NOT (bit address)	2	6.7	10.9	Do not loop (bit OFF)
			6.6	8.2	Loop (bit ON)

4-1-32 Text String Processing Instructions

Instruction	Mnemonic	Length	ON execut	ion time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
MOV STRING	MOV\$	3	31.5	58.3	Transferring 1 character*1
CONCATENATE STRING	+\$	4	56	104	1 character + 1 character*1
GET STRING LEFT	LEFT\$	4	33.5	62.2	Retrieving 1 character from 2 characters*1
GET STRING RIGHT	RGHT\$	4	33.4	62.1	Retrieving 1 character from 2 characters*1
GET STRING MIDDLE	MID\$	5	32.3	60.8	Retrieving 1 character from 3 characters*1
FIND IN STRING	FIND\$	4	30.3	56.3	Searching for 1 character from 2 characters*1
STRING LENGTH	LEN\$	3	14.0	24.9	Detecting 1 character*1
REPLACE IN STRING	RPLC\$	6	110	213	Replacing the first of 2 characters with 1 character*1
DELETE STRING	DEL\$	5	45.6	86.8	Deleting the leading character of 2 characters*1
EXCHANGE STRING	XCHG\$	3	40.3	75.4	Exchanging 1 character with 1 character*1
CLEAR STRING	CLR\$	2	15.9	28.3	Clearing 1 character*1
INSERT INTO STRING	INS\$	5	85	162	Inserting 1 character after the first of 2 characters*1
String Comparison Instructions	=\$ <>\$ <\$ <=\$ <=\$ >\$ =\$	4	27.0	50.9	Comparing 1 character with 1 character

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-1-33 Task Control Instructions

Instruction	Mnemonic	Length ON executio		on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
TASK ON	SK ON TKON	2	12.5	19.0	Cyclic task specified
			13.6	22.7	Extra task specified
TASK OFF	ASK OFF TKOF	2	240	393	Cyclic task specified
			15.5	25.8	Extra task specified

4-1-34 Model Conversion Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
BLOCK TRANSFER	XFERC	4	6.7	8.2	Transferring 1 word
			362	409	Transferring 1,000 words
SINGLE WORD DISTRIBUTE	DISTC	4	4.6	5.3	Data distribute
			6.0	7.3	Stack operation
DATA COLLECT	COLLC	4	5.3	6.5	Data distribute
			4.5	13.0	Stack operation
			5.8	6.1	Stack operation 1 word FIFO Read
			42	142	Stack operation 1,000 word FIFO Read
MOVE BIT	MOVBC	4	4.9	5.7	
BIT COUNTER	BCNTC	4	5.5	6.4	Counting 1 word
			873	974	Counting 1,000 words

4-1-35 Special Function Block Instructions

Instruction	Mnemonic	Length	ON execution	Conditions	
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
GET VARIABLE ID	GETID	4	7.6	12.5	

4-1-36 SFC Instructions

Instruction	Mnemonic	Length	ON executi	on time (μs)	Conditions
		(steps)	CJ2H CPU6□(-EIP)	CJ2M CPU□□	
STEP ACTIVATE	SA	2	9.1	11.8	
STEP DEACTIVATE	SE	2	9.1	11.9	
READ SET TIMER	TSR	3	3.9	4.2	
SET STEP TIMER	TSW	3	5.7	8.2	
SFC ON	SFCON	2	14.0	20.4	
SFC OFF	SFCOFF	2	249	402	
SFC PAUSE WITH RESET	SFCPR	2	249	405	
SFC PAUSE WITH NO RESET	SFCPRN	2	249	405	

4-1-37 Function Block Instance Execution Time

Use the following equation to calculate the effect of instance execution on the cycle time when function block definitions have been created and the instances copied into the user program.

Effect of Instance Execution on Cycle Time

- = Startup time (A)
- + I/O parameter transfer processing time (B)
- + Execution time of instructions in function block definition (C)

The following table shows the length of time for A, B, and C.

	Ope	ration	CPU Un	it model
			CJ2H- CPU6□H-EIP	CJ2M CPU□□
Α	Startup time	Startup time not including I/O parameter transfer	3.3 μs	7.4 μs
В	I/O parameter trans- fer processing time	1-bit (BOOL) input symbol or output symbol	0.24 μs	0.88 μs
	The data type is indicated in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol	0.19 μs	0.88 μs
		2-word (DINT, UDINT, DWORD, REAL) input symbol or output symbol	0.19 μs	1.2 μs
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	0.38 μs	2.96 μs
		I/O symbols	0.114 μs	0.4 μs
С	Function block definition instruction execution time	Total instruction processing program)	g time (same as	standard user

Example: CJ2H-CPU67H-EIP

Input variables with a 1-word data type (INT): 3

Output variables with a 1-word data type (INT): 2

Total instruction processing time in function block definition section: 10 μ s Execution time for 1 instance = 3.3 μ s + (3 + 2) × 0.19 μ s + 10 μ s = 14.25 μ s

Note The execution time is increased according to the number of multiple instances when the same function block definition has been copied to multiple locations.

Note Number of Function Block Program Steps

Use the following equation to calculate the number of program steps when function block definitions have been created and the instances copied into the user program.

Number of steps

= Number of instances \times (Call part size m + I/O parameter transfer part size n \times Number of parameters) + Number of instruction steps in the function block definition p (See note.)

Note The number of instruction steps in the function block definition (p) will not be diminished in subsequence instances when the same function block definition is copied to multiple locations (i.e., for multiple instances). Therefore, in the above equation, the number of instances is not multiplied by the number of instruction steps in the function block definition (p).

	Cor	ntents	CJ2 CPU Units			
m	Call part		57 steps			
n	I/O parameter transfer part	1-bit (BOOL) input symbol or output symbol	6 steps			
	The data type is shown in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol	6 steps			
		2-word (DINT, UDINT, DWORD, REAL) input symbol or output symbol	6 steps			
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	18 steps			
		I/O symbols	6 steps			
р	Number of instruc- tion steps in func- tion block definition	The total number of instruction steps (same as standard user program) + 27 steps.				

Example:

Input variables with a 1-word data type (INT): 5

Output variables with a 1-word data type (INT): 5

Function block definition section: 100 steps

Number of steps for 1 instance = $57 + (5 + 5) \times 6$ steps + 100 steps + 27 steps = 244 steps

4-2 CJ1 CPU Unit Instruction Execution Times and Number of Steps

The following table lists the execution times for all instructions that are supported by the CPU Units.

The total execution time of instructions within one whole user program is the process time for program execution when calculating the cycle time (See note.).

Note User programs are allocated tasks that can be executed within cyclic tasks and interrupt tasks that satisfy interrupt conditions.

Execution times for most instructions differ depending on the CPU Unit used and the conditions when the instruction is executed.

The execution time can also vary when the execution condition is OFF.

The following table also lists the length of each instruction in the *Length* (*steps*) column. The number of steps required in the user program area for each instructions depends on the instruction and the operands used with it. The number of steps in a program is not the same as the number of instructions.

Note

1. Most instructions are supported in differentiated form (indicated with \uparrow , \downarrow , @, and %). Specifying differentiation will increase the execution times by the following amounts. (Unit: μ s)

Symbol		CJ1-H	CJ1M	CJ1	
	CPU6□H-R	CPU6□H	CPU4□H	CPU□□	CPU4□
↑ or ↓	+0.24	+0.24	+0.32	+0.5	+0.45
@ or %	+0.24	+0.24	+0.32	+0.5	+0.33

2. Use the following times as guidelines when instructions are not executed. (Unit: μs)

	CJ1-H	CJ1M	CJ1	
CPU6□H-R	CPU6□H	CPU4□H	CPU□□	CPU4□
0.016 to 0.096	0.018 to 0.108	0.02 to 0.12	0.05 to 0.30	0.12 to 0.72

4-2-1 Sequence Input Instructions

Instruction	Mne-	Length		ON	l execution	time (µs)			Conditions
	monic	onic (steps)	CJ1H CPU6⊟H-R	CJ1H CPU6⊟H	CJ1G CPU4□H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
LOAD	LD	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!LD	2	21.16	21.16	21.20	24.20	28.17	21.24	
LOAD NOT	LD NOT	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!LD NOT	2	21.16	21.16	21.20	24.20	28.17	21.24	
AND	AND	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!AND	2	21.16	21.16	21.20	24.20	28.17	21.24	
AND NOT	AND NOT	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!AND NOT	2	21.16	21.16	21.20	24.20	28.17	21.24	
OR	OR	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!OR	2	21.16	21.16	21.20	24.20	28.17	21.24	
OR NOT	OR NOT	1	0.016	0.02	0.04	0.10	0.10	0.08	
	!OR NOT	2	21.16	21.16	21.20	24.20	28.17	21.24	
AND LOAD	AND LD	1	0.016	0.02	0.04	0.05	0.05	0.08	
OR LOAD	OR LD	1	0.016	0.02	0.04	0.05	0.05	0.08	
NOT	NOT	1	0.016	0.02	0.04	0.05	0.05	0.08	
CONDITION ON	UP	3	0.24	0.3	0.42	0.50	0.50	0.54	
CONDITION OFF	DOWN	4	0.24	0.3	0.42	0.50	0.50	0.54	
LOAD BIT TEST	LD TST	4	0.11	0.14	0.24	0.35	0.35	0.37	
LOAD BIT TEST NOT	LD TSTN	4	0.11	0.14	0.24	0.35	0.35	0.37	
AND BIT TEST NOT	AND TSTN	4	0.11	0.14	0.24	0.35	0.35	0.37	
OR BIT TEST	OR TST	4	0.11	0.14	0.24	0.35	0.35	0.37	
OR BIT TEST NOT	OR TSTN	4	0.11	0.14	0.24	0.35	0.35	0.37	

4-2-2 Sequence Output Instructions

Instruction	Mne-	Length		C	N executi	on time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
OUTPUT	OUT	1	0.016	0.02	0.04	0.35	0.35	0.21	
	!OUT	2	21.39	21.39	21.41	23.42	28.95	21.58	
OUTPUT NOT	OUT NOT	1	0.016	0.02	0.04	0.35	0.35	0.21	
	!OUT NOT	2	21.39	21.39	21.41	23.42	28.95	21.58	
KEEP	KEEP	1	0.048	0.06	0.08	0.40	0.40	0.29	
	!KEEP	1	21.42	21.43	21.45	23.47	29.0	21.66	
DIFFERENTIATE UP	DIFU	2	0.21	0.24	0.40	0.50	0.50	0.54	
DIFFERENTIATE DOWN	DIFD	2	0.21	0.24	0.40	0.50	0.50	0.54	
SET	SET	1	0.016	0.02	0.06	0.30	0.30	0.21	
	!SET	2	21.39	21.39	21.43	23.47	28.90	21.58	
RESET	RSET	1	0.016	0.02	0.06	0.30	0.30	0.21	
	!RSET	2	21.39	21.39	21.43	23.47	28.90	21.58	

Instruction	Mne-	Length		C		Conditions			
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
MULTIPLE BIT	SETA	4	5.8	5.8	6.1	11.8	11.8	7.8	With 1-bit set
SET			25.7	25.7	27.2	64.1	64.1	38.8	With 1,000-bit set
MULTIPLE BIT	RSTA	4	5.7	5.7	6.1	11.8	11.8	7.8	With 1-bit reset
RESET			25.8	25.8	27.1	64.0	64.0	38.8	With 1,000-bit reset
SINGLE BIT SET	SETB	2	0.19	0.24	0.34	0.5	0.5		
	!SETB	3	21.63	21.48	21.88	23.81	23.81		
SINGLE BIT	RSTB	2	0.19	0.24	0.34	0.5	0.5		
RESET	!RSTB	3	21.64	21.48	21.88	23.81	23.81		
SINGLE BIT	OUTB	2	0.19	0.22	0.32	0.45	0.45		
OUTPUT	!OUTB	3	21.61	21.64	21.84	23.67	23.67		

4-2-3 Sequence Control Instructions

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions		
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□			
END	END	1	5.5	5.5	6.0	7.9	7.9	4.0			
NO OPERATION	NOP	1	0.016	0.02	0.04	0.05	0.05	0.12			
INTERLOCK	IL	1	0.048	0.06	0.06	0.15	0.15	0.12			
INTERLOCK CLEAR	ILC	1	0.048	0.06	0.06	0.15	0.15	0.12			
MULTI-INTER- LOCK DIFFER- ENTIATION	MILH	3	7.5	7.5	7.9	13.3	14.6		Interlock condition not met (input condi- tion ON)		
HOLD			8.9	8.9	9.7	16.6	18.3		Interlock condition met (input condition OFF)		
			6.1	6.1	6.5	10.3	11.7		Interlock condition met again during interlock (input condi- tion OFF)		
MULTI-INTER- LOCK DIFFER- ENTIATION	MILR	MILR	MILR	3	7.5	7.5	7.9	13.3	14.6		Interlock condition not met (input condi- tion ON)
RELEASE			8.9	8.9	9.7	16.6	18.3		Interlock condition met (input condition OFF)		
			6.1	6.1	6.5	10.3	11.7		Interlock condition met again during interlock (input condi- tion OFF)		
MULTI-INTER-	MILC	2	5.0	5.0	5.6	8.3	12.5		Not during interlock		
LOCK CLEAR			5.7	5.7	6.2	9.6	14.2		During interlock		
JUMP	JMP	2	0.31	0.38	0.48	0.95	0.95	8.1			
JUMP END	JME	2									
CONDITIONAL JUMP	CJP	2	0.31	0.38	0.48	0.95	0.95	7.4	Jump condition met (input condition ON)		

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
CONDITIONAL JUMP NOT	CJPN	2	0.31	0.38	0.48	0.95	0.95	8.5	Jump condition met (input condition OFF)
MULTIPLE JUMP	JMP0	1	0.048	0.06	0.06	0.15	0.15	0.12	
MULTIPLE JUMP END	JME0	1	0.048	0.06	0.06	0.15	0.15	0.12	
FOR LOOP	FOR	2	0.18	0.21	0.21	1.00	1.00	0.21	Designating a constant
BREAK LOOP	BREAK	1	0.048	0.12	0.12	0.15	0.15	0.12	
NEXT LOOP	NEXT	1	0.14	0.18	0.18	0.45	0.45	0.18	When loop is continued
			0.18	0.22	0.22	0.55	0.55	0.22	When loop is ended

4-2-4 Timer and Counter Instructions

Instruction	Mne-	Length		0	N execut	ion time (μ	ι s)		Conditions	
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□		
HUNDRED-MS	TIM	3	0.45	0.56	0.88	1.30	1.30	0.42		
TIMER	TIMX		0.45							
TEN-MS TIMER	TIMH	3	0.70	0.88	1.14	1.80	1.80	0.42		
	TIMHX		0.46	0.56	0.88	1.30	1.30	0.42		
ONE-MS	TMHH	3	0.69	0.86	1.12	1.75	1.75	0.42		
TIMER	TMHHX		0.46	0.56	0.88	1.30	1.30	0.42		
TENTH-MS	TIMU	3	0.45							
TIMER	TIMUX		0.45							
HUNDREDTH-	TMUH	3	0.45							
MS TIMER	TMUHX		0.45							
ACCUMULA-	TTIM	3	16.1	16.1	17.0	27.4	30.9	21.4		
TIVE TIMER			10.9	10.9	11.4	19.0	21.2	14.8	When resetting	
			8.5	8.5	8.7	15.0	16.6	10.7	When interlocking	
	TTIMX	3	16.1	16.1	17.0	27.4		21.4		
			10.9	10.9	11.4	19.0		14.8	When resetting	
			8.5	8.5	8.7	15.0		10.7	When interlocking	
LONG TIMER	TIML	4 to 5	7.6	7.6	10.0	16.3	17.2	12.8		
			6.2	6.2	6.5	13.8	15.3	7.8	When interlocking	
	TIMLX	4 to 5	7.6	7.6	10.0	16.3		12.8		
			6.2	6.2	6.5	13.8		7.8	When interlocking	
MULTI-OUT-	MTIM	4	20.9	20.9	23.3	38.55	43.3	26.0		
PUT TIMER			5.6	5.6	5.8	12.9	13.73	7.8	When resetting	
	MTIMX	4	20.9	20.9	23.3	38.55		26.0		
			5.6	5.6	5.8	12.9		7.8	When resetting	
COUNTER	CNT	3	0.51	0.56	0.88	1.30	1.30	0.42		
	CNTX		0.51							
REVERSIBLE	CNTR	3	16.9	16.9	19.0	31.8	27.2	20.9		
COUNTER	CNTRX		16.9							
RESET TIMER/	CNR	3	9.9	9.9	10.6	14.7	17.93	13.9	When resetting 1 word	
COUNTER			4160	4160	4160	6210	6300	5420	When resetting 1,000 words	
	CNRX	3	9.9	9.9	10.6	14.7	17.93	13.9	When resetting 1 word	
			4160	4160	4160	6210	6300	5420	When resetting 1,000 words	

4-2-5 Comparison Instructions

Instruction	Mne-	Length		C		Conditions			
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
Input Compari-	=	4	0.08	0.10	0.16	0.35	0.35	0.37	
son Instructions	<>	1							
(unsigned)	<								
	<=								
	>								
	>=								
Input Compari-	=L	4 to 7	0.08	0.10	0.16	0.35	0.35	0.54	
son Instructions	<>L								
(double,	<l< td=""><td>1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></l<>	1							
unsigned)	<=L								
	>L								
	>=L								
Innut Composi	>=L =S	4	0.08	0.10	0.16	0.35	0.35	6.50	
Input Compari- son Instructions		- 4	0.08	0.10	0.16	0.35	0.35	6.50	
(signed)	<>S								
	<s< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></s<>								
	<=S								
	>S								
	>=S								
Input Compari-	=SL	4 to 7	0.08	0.10	0.16	0.35	0.35	6.50	
son Instructions (double, signed)	<>SL								
(double, signed)	<sl< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></sl<>								
	<=SL								
	>SL								
	>=SL								
Time Compari-	=DT	4	25.2	25.2	36.4	45.6	40.6		
son Instructions	<>DT								
	<dt< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></dt<>								
	<=DT								
	>DT								
	>=DT								
COMPARE	CMP	3	0.032	0.04	0.04	0.10	0.10	0.29	
00111171112	!CMP	7	42.2	42.2	42.2	45.3	45.3	42.7	
DOUBLE COM- PARE	CMPL	3 to 5	0.064	0.08	0.08	0.50	0.50	0.46	
SIGNED	CPS	3	0.064	0.08	0.08	0.30	0.30	6.50	
BINARY COM- PARE	!CPS	7	36.0	36.0	36.0	45.5	45.5	48.9	
DOUBLE SIGNED BINARY COM- PARE	CPSL	3 to 5	0.064	0.08	0.08	0.50	0.50	6.50	
TABLE COM- PARE	TCMP	4	14.0	14.0	15.2	29.77	32.13	21.9	
MULTIPLE COMPARE	MCMP	4	20.5	20.5	22.8	45.80	48.67	31.2	
UNSIGNED BLOCK COM- PARE	ВСМР	4	21.5	21.5	23.7	47.93	51.67	32.6	

Instruction	Mne-	Length		C	N executi	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
EXPANDED BLOCK COM-	BCMP2	4	8.4			13.20	19.33		Number of data words: 1
PARE			313.0			650.0	754.67		Number of data words: 255
AREA RANGE COMPARE	ZCP	3	5.3	5.3	5.4	11.53	12.43		
DOUBLE AREA RANGE COM- PARE	ZCPL	3 to 5	5.5	5.5	6.7	11.28	11.90		

4-2-6 Data Movement Instructions

Instruction	Mne-	Length		C	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
MOVE	MOV	3	0.14	0.18	0.20	0.30	0.30	0.29	
	!MOV	7	21.52	21.56	21.60	35.4	43.3	42.65	
DOUBLE MOVE	MOVL	3 to 4	0.26	0.32	0.34	0.60	0.60	0.50	
MOVE NOT	MVN	3	0.14	0.18	0.20	0.35	0.35	0.29	
DOUBLE MOVE NOT	MVNL	3 to 4	0.26	0.32	0.34	0.60	0.60	0.50	
MOVE BIT	MOVB	4	0.19	0.24	0.34	0.50	0.50	7.5	
MOVE DIGIT	MOVD	4	0.19	0.24	0.34	0.50	0.50	7.3	
MULTIPLE BIT	XFRB	4	10.1	10.1	10.8	20.9	22.1	13.6	Transferring 1 bit
TRANSFER			186.4	186.4	189.8	253.3	329.7	269.2	Transferring 255 bits
BLOCK TRANS- FER	XFER	4	0.29	0.36	0.44	0.8	0.8	11.2	Transferring 1 word
			240.1	300.1	380.1	650.2	650.2	633.5	Transferring 1,000 words
BLOCK SET	BSET	4	0.21	0.26	0.28	0.55	0.55	8.5	Setting 1 word
			142.2	200.1	220.1	400.2	400.2	278.3	Setting 1,000 words
DATA EXCHANGE	XCHG	3	0.32	0.40	0.56	0.80	0.80	0.7	
DOUBLE DATA EXCHANGE	XCGL	3	0.61	0.76	1.04	1.5	1.5	1.3	
SINGLE WORD DISTRIBUTE	DIST	4	5.1	5.1	5.4	6.6	12.47	7.0	
DATA COLLECT	COLL	4	5.1	5.1	5.3	6.5	12.77	7.1	
MOVE TO REG- ISTER	MOVR	3	0.064	0.08	0.08	0.60	0.60	0.50	
MOVE TIMER/ COUNTER PV TO REGISTER	MOVRW	3	0.064	0.42	0.50	0.60	0.60	0.50	

4-2-7 Data Shift Instructions

Instruction									Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
SHIFT	SFT	3	7.4	7.4	10.4	11.9	15.3	10.4	Shifting 1 word
REGISTER			433	433	488	1390	1430	763	Shifting 1,000 words
REVERSIBLE SHIFT	SFTR	4	6.9	6.9	7.2	11.4	15.5	9.6	Shifting 1 word
REGISTER			615.3	615.3	680.2	1430	1550	859.6	Shifting 1,000 words
ASYNCHRO-	ASFT	4	6.2	6.2	6.4	13.4	14.2	7.7	Shifting 1 word
NOUS SHIFT REGISTER			1220	1220	1220	2750	2990	2010	Shifting 1,000 words ^{*1}
WORD SHIFT	WSFT	4	4.5	4.5	4.7	9.6	12.3	7.8	Shifting 1 word
			171.5	171.5	171.7	928.0	933.3	781.7	Shifting 1,000 words
ARITHMETIC SHIFT LEFT	ASL	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE SHIFT LEFT	ASLL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ARITHMETIC SHIFT RIGHT	ASR	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE SHIFT RIGHT	ASRL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ROTATE LEFT	ROL	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE ROTATE LEFT	ROLL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ROTATE LEFT WITHOUT CARRY	RLNC	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE ROTATE LEFT WITHOUT CARRY	RLNL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ROTATE RIGHT	ROR	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE ROTATE RIGHT	RORL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ROTATE RIGHT WITHOUT CARRY	RRNC	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE ROTATE RIGHT WITHOUT CARRY	RRNL	2	0.32	0.40	0.56	0.80	0.80	0.67	
ONE DIGIT SHIFT	SLD	3	5.9	5.9	6.1	7.6	12.95	8.2	Shifting 1 word
LEFT			561.1	561.1	626.3	1150	1270	760.7	Shifting 1,000 words
ONE DIGIT SHIFT	SRD	3	6.9	6.9	7.1	8.6	15.00	8.7	Shifting 1 word
RIGHT			760.5	760.5	895.5	1720	1820	1070	Shifting 1,000 words
SHIFT N-BIT DATA	NSFL	4	7.5	7.5	8.3	14.8	16.0	10.5	Shifting 1 bit
LEFT			34.5	40.3	45.4	86.7	91.3	55.5	Shifting 1,000 bits
SHIFT N-BIT DATA	NSFR	4	7.5	7.5	8.3	14.7	15.9	10.5	Shifting 1 bit
RIGHT			48.2	50.5	55.3	114.1	119.6	69.3	Shifting 1,000 bits
SHIFT N-BITS LEFT	NASL	3	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE SHIFT N-BITS LEFT	NSLL	3	0.32	0.40	0.56	0.80	0.80	0.67	

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
SHIFT N-BITS RIGHT	NASR	3	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE SHIFT N-BITS RIGHT	NSRL	3	0.32	0.40	0.56	0.80	0.80	0.67	

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-2-8 Increment/Decrement Instructions

Instruction	Mne-	Length		0	N executi	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
INCREMENT BINARY	++	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE INCRE- MENT BINARY	++L	2	0.18	0.40	0.56	0.80	0.80	0.67	
DECREMENT BINARY		2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE DECRE- MENT BINARY	L	2	0.18	0.40	0.56	0.80	0.80	0.67	
INCREMENT BCD	++B	2	5.7	6.4	4.5	12.3	14.7	7.4	
DOUBLE INCRE- MENT BCD	++BL	2	5.6	5.6	4.9	9.24	10.8	6.1	
DECREMENT BCD	B	2	5.7	6.3	4.6	11.9	14.9	7.2	
DOUBLE DECRE- MENT BCD	– –BL	2	5.3	5.3	4.7	9.0	10.7	7.1	

4-2-9 Symbol Math Instructions

Instruction	Mne-	Length		Ol	N executi	on time (μ	ı s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11 /21	CJ1G CPU4□	
SIGNED BINARY ADD WITHOUT CARRY	+	4	0.18	0.18	0.20	0.30	0.30	0.37	
DOUBLE SIGNED BINARY ADD WITH- OUT CARRY	+L	4 to 6	0.18	0.32	0.34	0.60	0.60	0.54	
SIGNED BINARY ADD WITH CARRY	+C	4	0.18	0.18	0.20	0.40	0.40	0.37	
DOUBLE SIGNED BINARY ADD WITH CARRY	+CL	4 to 6	0.18	0.32	0.34	0.60	0.60	0.54	
BCD ADD WITHOUT CARRY	+B	4	7.6	8.2	8.4	18.9	21.5	14.0	
DOUBLE BCD ADD WITHOUT CARRY	+BL	4 to 6	9.2	13.3	14.5	24.4	27.7	19.0	
BCD ADD WITH CARRY	+BC	4	8.0	8.9	9.1	19.7	22.6	14.5	
DOUBLE BCD ADD WITH CARRY	+BCL	4 to 6	9.6	13.8	15.0	25.2	28.8	19.6	
SIGNED BINARY SUB- TRACT WITHOUT CARRY	-	4	0.18	0.18	0.20	0.3	0.3	0.37	

Instruction	Mne-	Length		Ol		Conditions			
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11 /21	CJ1G CPU4□	
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L	4 to 6	0.18	0.32	0.34	0.60	0.60	0.54	
SIGNED BINARY SUBTRACT WITH CARRY	-C	4	0.18	0.18	0.20	0.40	0.40	0.37	
DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL	4 to 6	0.18	0.32	0.34	0.60	0.60	0.54	
BCD SUBTRACT WITHOUT CARRY	-В	4	7.4	8.0	8.2	18.1	20.5	13.1	
DOUBLE BCD SUB- TRACT WITHOUT CARRY	-BL	4 to 6	8.9	12.8	14.0	23.2	26.7	18.2	
BCD SUBTRACT WITH CARRY	-BC	4	7.9	8.5	8.6	19.1	21.6	13.8	
DOUBLE BCD SUB- TRACT WITH CARRY	-BCL	4 to 6	9.4	13.4	14.7	24.3	27.7	18.8	
SIGNED BINARY MUL- TIPLY	*	4	0.26	0.38	0.40	0.65	0.65	0.58	
DOUBLE SIGNED BINARY MULTIPLY	*L	4 to 6	5.93	7.23	8.45	13.17	15.0	11.19	
UNSIGNED BINARY MULTIPLY	*U	4	0.26	0.38	0.40	0.75	0.75	0.58	
DOUBLE UNSIGNED BINARY MULTIPLY	*UL	4 to 6	5.9	7.1	8.3	13.30	15.2	10.63	
BCD MULTIPLY	*B	4	8.3	9.0	9.2	17.5	19.7	12.8	
DOUBLE BCD MULTI- PLY	*BL	4 to 6	12.8	23.0	24.2	36.3	45.7	35.2	
SIGNED BINARY DIVIDE	/	4	0.29	0.40	0.42	0.70	0.70	0.83	
DOUBLE SIGNED BINARY DIVIDE	/L	4 to 6	7.2	7.2	8.4	13.7	15.5	9.8	
UNSIGNED BINARY DIVIDE	/U	4	0.29	0.40	0.42	0.8	0.8	0.83	
DOUBLE UNSIGNED BINARY DIVIDE	/UL	4 to 6	6.9	6.9	8.1	12.8	14.7	9.1	
BCD DIVIDE	/B	4	8.6	8.6	8.8	19.3	22.8	15.9	
DOUBLE BCD DIVIDE	/BL	4 to 6	13.1	17.7	18.9	27.1	34.7	26.2	

4-2-10 Conversion Instructions

Instruction	Mne-	Length		C	ON execut	ion time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4 H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
BCD TO BINARY	BIN	3	0.18	0.22	0.24	0.40	0.40	0.29	
DOUBLE BCD TO DOUBLE BINARY	BINL	3 to 4	6.1	6.5	6.8	12.3	13.7	9.1	
BINARY TO BCD	BCD	3	0.19	0.24	0.26	7.62	9.78	8.3	
DOUBLE BINARY TO DOUBLE BCD	BCDL	3 to 4	6.7	6.7	7.0	10.6	12.8	9.2	
2'S COMPLE- MENT	NEG	3	0.14	0.18	0.20	0.35	0.35	0.29	

Instruction	Mne-	Length		(Conditions			
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
DOUBLE 2'S COMPLEMENT	NEGL	3 to 4	0.26	0.32	0.34	0.60	0.60	0.50	
16-BIT TO 32- BIT SIGNED BINARY	SIGN	3	0.26	0.32	0.34	0.60	0.60	0.50	
DATA DECODER	MLPX	4	0.32	0.32	0.42	0.85	0.85	8.8	Decoding 1 digit (4 to 16)
			0.98	0.98	1.20	1.60	1.60	12.8	Decoding 4 digits (4 to 16)
			3.30	3.30	4.00	4.70	4.70	20.3	Decoding 1 digit (8 to 256)
			6.50	6.50	7.90	8.70	8.70	33.4	Decoding 4 digits (8 to 256)
DATA ENCODER	DMPX	4	7.5	7.5	7.9	9.4	13.9	10.4	Encoding 1 digit (16 to 4)
			49.6	49.6	50.2	57.3	71.73	59.1	Encoding 4 digits (16 to 4)
			18.2	18.2	18.6	56.8	82.7	23.6	Encoding 1 digit (256 to 8)
			55.1	55.1	57.4	100.0	150.7	92.5	Encoding 2 digits (256 to 8)
ASCII CON- VERT	ASC	4	6.8	6.8	7.1	8.3	14.6	9.7	Converting 1 digit into ASCII
			9.0	11.2	11.7	19.1	21.8	15.1	Converting 4 dig- its into ASCII
ASCII TO HEX	HEX	4	7.1	7.1	7.4	12.1	15.6	10.1	Converting 1 digit
COLUMN TO LINE	LINE	4	16.6	19.0	23.1	37.0	40.3	29.1	
LINE TO COL- UMN	COLM	4	18.4	23.2	27.5	45.7	48.2	37.3	
SIGNED BCD TO BINARY	BINS	4	6.8	8.0	8.3	16.2	17.0	12.1	Data format setting No. 0
			6.8	8.0	8.3	16.2	17.1	12.1	Data format setting No. 1
			7.1	8.3	8.6	16.5	17.7	12.7	Data format setting No. 2
			7.4	8.5	8.8	16.5	17.6	13.0	Data format setting No. 3
DOUBLE SIGNED BCD	BISL	4 to 5	6.9	9.2	9.6	18.4	19.6	13.6	Data format setting No. 0
TO BINARY			7.0	9.2	9.6	18.5	19.8	13.7	Data format setting No. 1
			7.3	9.5	9.9	18.6	20.1	14.2	Data format setting No. 2
			7.6	9.6	10.0	18.7	20.1	14.4	Data format setting No. 3
SIGNED BINARY TO	BCDS	4	6.6	6.6	6.9	13.5	16.4	10.6	Data format setting No. 0
BCD			6.7	6.7	7.0	13.8	16.7	10.8	Data format setting No. 1
			6.8	6.8	7.1	13.9	16.8	10.9	Data format setting No. 2
			7.1	7.2	7.5	14.0	17.1	11.5	Data format setting No. 3

Instruction	Mne-	Length		(ON execut	ion time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
DOUBLE SIGNED	BDSL	4 to 5	7.6	8.1	8.4	11.4	12.5	11.6	Data format setting No. 0
BINARY TO BCD			6.7	8.2	8.6	11.7	12.73	11.8	Data format setting No. 1
			6.7	8.3	8.7	11.8	12.8	12.0	Data format setting No. 2
			6.9	8.8	9.2	11.9	13.0	12.5	Data format setting No. 3
GRAY CODE	GRY	4	46.9	46.9	72.1	80.0	71.2		8-bit binary
CONVERSION			49.6	49.6	75.2	83.0	75.6		8-bit BCD
			57.7	57.7	87.7	95.9	86.4		8-bit angle
			61.8	61.8	96.7	104.5	91.6		15-bit binary
			64.5	64.5	99.6	107.5	96.1		15-bit BCD
			72.8	72.8	112.4	120.4	107.3		15-bit angle
			52.3	52.3	87.2	88.7	82.4		360° binary
			55.1	55.1	90.4	91.7	86.8		360° BCD
			64.8	64.8	98.5	107.3	98.1		360° angle
FOUR-DIGIT NUMBER TO ASCII	STR4	3	13.79	13.79	20.24	22.16	19.88		
EIGHT-DIGIT NUMBER TO ASCII	STR8	3 to 4	18.82	18.82	27.44	29.55	26.70		
SIXTEEN-DIGIT NUMBER TO ASCII	STR16	3	30.54	30.54	44.41	48.16	44.10		
ASCII TO FOUR-DIGIT NUMBER	NUM4	3 to 4	18.46	18.46	27.27	29.13	26.88		
ASCII TO EIGHT-DIGIT NUMBER	NUM8	3	27.27	27.27	40.29	42.69	39.71		
ASCII TO SIX- TEEN-DIGIT NUMBER	NUM16	3	52.31	52.31	78.25	82.21	74.23		

4-2-11 Logic Instructions

Instruction	Mne-	Length	ON execution time (μs)						Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
LOGICAL AND	ANDW	4	0.14	0.18	0.20	0.30	0.30	0.37	
DOUBLE LOGI- CAL AND	ANDL	4 to 6	0.26	0.32	0.34	0.60	0.60	0.54	
LOGICAL OR	ORW	4	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE LOGI- CAL OR	ORWL	4 to 6	0.26	0.32	0.34	0.60	0.60	0.54	
EXCLUSIVE OR	XORW	4	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE EXCLU- SIVE OR	XORL	4 to 6	0.26	0.32	0.34	0.60	0.60	0.54	
EXCLUSIVE NOR	XNRW	4	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE EXCLU- SIVE NOR	XNRL	4 to 6	0.26	0.32	0.34	0.60	0.60	0.54	

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
COMPLEMENT	COM	2	0.18	0.22	0.32	0.45	0.45	0.37	
DOUBLE COMPLE- MENT	COML	2	0.32	0.40	0.56	0.80	0.80	0.67	

4-2-12 Special Math Instructions

Instruction	Mne-	Length		C	N executi	on time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
BINARY ROOT	ROTB	3	49.6	49.6	50.0	56.5	82.7	530.7	
BCD SQUARE ROOT	ROOT	3	13.7	13.7	13.9	59.3	88.4	514.5	
ARITHMETIC PROCESS	APR	4	6.7	6.7	6.9	14.0	15.0	32.3	Designating SIN and COS
			17.2	17.2	18.4	32.2	37.9	78.3	Designating line- segment approxi- mation
FLOATING POINT DIVIDE	FDIV	4	116.6	116.6	176.6	246.0	154.7	176.6	
BIT COUNTER	BCNT	4	0.24	0.3	0.38	0.65	0.65	22.1	Counting 1 word

4-2-13 Floating-point Math Instructions

Instruction	Mne-	Length		C	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
FLOATING TO 16-BIT	FIX	3 to 4	0.13	10.6	10.8	16.2	19.5	14.5	
FLOATING TO 32-BIT	FIXL	3 to 4	0.13	10.8	11.0	16.6	21.7	14.6	
16-BIT TO FLOATING	FLT	3 to 4	0.13	8.3	8.5	12.2	14.6	11.1	
32-BIT TO FLOATING	FLTL	3 to 4	0.13	8.3	8.5	14.0	15.8	10.8	
FLOATING- POINT ADD	+F	4 to 6	0.24	8.0	9.2	13.3	15.7	10.2	
FLOATING- POINT SUB- TRACT	– F	4 to 6	0.24	8.0	9.2	13.3	15.8	10.3	
FLOATING- POINT DIVIDE	/F	4 to 6	0.4	8.7	9.9	14.0	17.6	12.0	
FLOATING- POINT MULTI- PLY	*F	4 to 6	0.24	8.0	9.2	13.2	15.8	10.5	
DEGREES TO RADIANS	RAD	3 to 4	8.1	10.1	10.2	15.9	20.6	14.9	
RADIANS TO DEGREES	DEG	3 to 4	8.0	9.9	10.1	15.7	20.4	14.8	
SINE	SIN	3 to 4	42.0	42.0	42.2	47.9	70.9	61.1	
HIGH-SPEED SINE	SINQ	8 to 9	0.59						
COSINE	cos	3 to 4	31.5	31.5	31.8	41.8	51.0	44.1	

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
HIGH-SPEED COSINE	COSQ	8 to 9	0.59						
TANGENT	TAN	3 to 4	16.3	16.3	16.6	20.8	27.6	22.6	
HIGH-SPEED TANGENT	TANQ	15 to 16	1.18						
ARC SINE	ASIN	3 to 4	17.6	17.6	17.9	80.3	122.9	24.1	
ARC COSINE	ACOS	3 to 4	20.4	20.4	20.7	25.3	33.5	28.0	
ARC TANGENT	ATAN	3 to 4	16.1	16.1	16.4	45.9	68.9	16.4	
SQUARE ROOT	SQRT	3 to 4	0.42	19.0	19.3	26.2	33.2	28.1	
EXPONENT	EXP	3 to 4	65.9	65.9	66.2	68.8	108.2	96.7	
LOGARITHM	LOG	3 to 4	12.8	12.8	13.1	69.4	103.7	17.4	
EXPONENTIAL POWER	PWR	4 to 6	125.4	125.4	126.0	134.0	201.0	181.7	
Floating Symbol	=F	4 to 6	0.13	6.6	8.3	12.6	15.37		
Comparison	<>F								
	<f< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></f<>								
	<=F								
	>F								
	>=F								
FLOATING- POINT TO ASCII	FSTR	4 to 5	48.5	48.5	48.9	58.4	85.7		
ASCII TO FLOAT- ING-POINT	FVAL	3	21.1	21.1	21.3	31.1	43.73		
MOVE FLOAT- ING-POINT (SIN- GLE)	MOVF	3 to 4	0.18						

4-2-14 Double-precision Floating-point Instructions

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
DOUBLE SYM-	=D	4	8.5	8.5	10.3	16.2	19.9		
BOL COMPARI-	<>D								
SON	<d< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></d<>								
	<=D								
	>D								
	>=D								
DOUBLE FLOAT- ING TO 16-BIT BINARY	FIXD	3	11.0	11.7	12.1	16.1	21.6		
DOUBLE FLOAT- ING TO 32-BIT BINARY	FIXLD	3	10.2	11.6	12.1	16.4	21.7		
16-BIT BINARY TO DOUBLE FLOATING	DBL	3	9.9	9.9	10.0	14.3	16.5		
32-BIT BINARY TO DOUBLE FLOATING	DBLL	3	9.8	9.8	10.0	16.0	17.7		
DOUBLE FLOAT- ING-POINT ADD	+D	4	11.2	11.2	11.9	18.3	23.6		

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4	
DOUBLE FLOAT- ING-POINT SUB- TRACT	-D	4	11.2	11.2	11.9	18.3	23.6		
DOUBLE FLOAT- ING-POINT MUL- TIPLY	*D	4	12.0	12.0	12.7	19.0	25.0		
DOUBLE FLOAT- ING-POINT DIVIDE	/D	4	23.5	23.5	24.2	30.5	44.3		
DOUBLE DEGREES TO RADIANS	RADD	3	11.5	27.4	27.8	32.7	49.1		
DOUBLE RADI- ANS TO DEGREES	DEGD	3	11.2	11.2	11.9	33.5	48.4		
DOUBLE SINE	SIND	3	45.4	45.4	45.8	67.9	76.7		
DOUBLE COSINE	COSD	3	43.0	43.0	43.4	70.9	72.3		
DOUBLE TAN- GENT	TAND	3	19.8	20.1	20.5	97.9	157.0		
DOUBLE ARC SINE	ASIND	3	21.5	21.5	21.9	32.3	37.3		
DOUBLE ARC COSINE	ACOSD	3	24.7	24.7	25.1	29.9	42.5		
DOUBLE ARC TANGENT	ATAND	3	19.3	19.3	19.7	24.0	34.4		
DOUBLE SQUARE ROOT	SQRTD	3	47.4	47.4	47.9	52.9	81.9		
DOUBLE EXPO- NENT	EXPD	3	121.0	121.0	121.4	126.3	201.3		
DOUBLE LOGA- RITHM	LOGD	3	16.0	16.0	16.4	21.6	29.3		
DOUBLE EXPO- NENTIAL POWER	PWRD	4	223.9	223.9	224.2	232.3	373.4		

4-2-15 Table Data Processing Instructions

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
SET STACK	SSET	3	8.0	8.0	8.3	14.2	20.3	8.5	Designating 5 words in stack area
			231.6	231.6	251.8	426.5	435.3	276.8	Designating 1,000 words in stack area
PUSH ONTO STACK	PUSH	3	6.5	6.5	8.6	15.7	16.4	9.1	
FIRST IN FIRST OUT	FIFO	3	6.9	6.9	8.9	15.8	16.8	10.6	Designating 5 words in stack area
			352.6	352.6	434.3	728.0	732.0	1130	Designating 1,000 words in stack area
LAST IN FIRST OUT	LIFO	3	7.0	7.0	9.0	16.6	17.2	9.9	
DIMENSION RECORD TABLE	DIM	5	15.2	15.2	21.6	27.8	27.1	142.1	

Instruction	Mne-	Length		0	N executi	on time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
SET RECORD LOCATION	SETR	4	5.4	5.4	5.9	12.8	13.2	7.0	
GET RECORD NUMBER	GETR	4	7.8	7.8	8.4	16.1	18.3	11.0	
DATA SEARCH	SRCH	4	15.5	15.5	19.5	29.1	26.4	19.5	Searching for 1 word
			2420	2420	3340	4410	3600	3340	Searching for 1,000 words*1
SWAP BYTES	SWAP	3	12.2	12.2	13.6	21.0	18.4	13.6	Swapping 1 word
			1940	1940	2820	3650	3150	2820	Swapping 1,000 words*1
FIND MAXI- MUM	MAX	4 to 5	19.2	19.2	24.9	35.3	32.0	24.9	Number of values being searched: 1
			2390	2390	3360	4390	3570	3360	Number of values being searched: 1,000*1
FIND MINIMUM	MIN	4 to 5	19.2	19.2	25.3	35.4	31.9	25.3	Number of values being searched: 1
			2390	2390	3330	4390	3580	3330	Number of values being searched: 1,000*1
SUM	SUM	4 to 5	28.2	28.2	38.5	49.5	44.1	38.3	Adding 1 word
			1420	1420	1950	2330	2110	1950	Adding 1,000 words ^{*1}
FRAME CHECKSUM	FCS	4 to 5	20.0	20.0	28.3	34.8	31.5	28.3	For 1-word table length
			1650	1650	2480	3110	2770	2480	For 1,000-word table length ^{*1}
STACK SIZE READ	SNUM	3	6.0	6.0	6.3	12.1	13.7		
STACK DATA READ	SREAD	4	8.0	8.0	8.4	18.1	20.6		
STACK DATA OVERWRITE	SWRIT	4	7.2	7.2	7.6	16.9	18.8		
STACK DATA	SINS	4	7.8	7.8	9.9	18.2	20.5		
INSERT			354.0	354.0	434.8	730.7	732.0		For 1,000-word table
STACK DATA	SDEL	4	8.6	8.6	10.6	19.3	22.0		
DELETE			354.0	354.0	436.0	732.0	744.0		For 1,000-word table

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-2-16 Data Control Instructions

Instruction	Mne-	Length		C	N execut	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
PID CON-	PID	4	436.2	436.2	678.2	612.0	552.6	678.2	First execution
TROL			332.3	332.3	474.9	609.3	548.0	474.9	Input ON and sampling
			97.3	97.3	141.3	175.3	162.0	141.3	Input ON and not sampling
PID CON-	PIDAT	4	446.3	446.3	712.5	765.3	700.0		First execution
TROL WITH AUTOTUNING			339.4	339.4	533.9	620.7	558.0		Input ON and sampling
AUTOTONING			100.7	100.7	147.1	180.0	166.1		Input ON and not sam- pling
			189.2	189.2	281.6	233.7	225.1		Initial execution of autotuning
			535.2	535.2	709.8	575.3	558.2		Autotuning when sam- pling
LIMIT CON- TROL	LMT	4 to 5	16.1	16.1	22.1	27.1	26.1	22.1	
DEAD BAND CONTROL	BAND	4 to 5	17.0	17.0	22.5	27.4	26.6	22.5	
DEAD ZONE CONTROL	ZONE	4 to 5	15.4	15.4	20.5	28.0	26.4	20.5	
TIME-PRO-	TPO	4	10.6	10.6	14.8	20.2	19.8		Input OFF
PORTIONAL OUTPUT			54.5	54.5	82.0	92.7	85.1		Input ON and duty specified or output limit disabled
			61.0	61.0	91.9	102.5	95.3		Input ON, manipulated variable specified, and output limit disabled
SCALING	SCL	4	13.9	13.9	14.3	25.0	32.8	56.8	
SCALING 2	SCL2	4	12.2	12.2	12.6	22.3	29.1	50.7	
SCALING 3	SCL3	4	13.7	13.7	14.2	25.6	30.0	57.7	
AVERAGE	AVG	4	36.3	36.3	52.6	62.9	59.1	53.1	Average of an operation
			291.0	291.0	419.9	545.3	492.7	419.9	Average of 64 operations

4-2-17 Subroutine Instructions

Instruction	Mne-	Length			ON execu	tion time (μs)		Condi-
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	tions
SUBROUTINE CALL	SBS	2	0.90	1.26	1.96	2.04	2.04	17.0	
SUBROUTINE ENTRY	SBN	2							
SUBROUTINE RETURN	RET	1	0.43	0.86	1.60	1.80	1.80	20.60	
MACRO	MCRO	4	23.3	23.3	23.3	47.9	50.3	23.3	
GLOBAL SUBROU- TINE RETURN	GSBS	2	0.90	1.26	1.96	2.04	2.04		
GLOBAL SUBROU- TINE CALL	GSBN	2							
GLOBAL SUBROU- TINE ENTRY	GRET	1	0.43	0.86	1.60	1.80	1.80		

4-2-18 Interrupt Control Instructions

Instruction	Mne-	Length			ON execut	ion time (μs)		Condi-
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4 H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4	tions
SET INTERRUPT MASK	MSKS	3	25.6	25.6	38.4	44.7	42.9	39.5	
READ INTERRUPT MASK	MSKR	3	11.9	11.9	11.9	16.9	15.9	11.9	
CLEAR INTERRUPT	CLI	3	27.4	27.4	41.3	42.7	44.5	41.3	
DISABLE INTER- RUPTS	DI	1	15.0	15.0	16.8	30.3	28.5	16.8	
ENABLE INTER- RUPTS	EI	1	19.5	19.5	21.8	37.7	34.4	21.8	

4-2-19 High-speed Counter and Pulse Output Instructions (CJ1M-CPU21/22/23 Only)

Instruction	Mne-	Length		(ON execu	tion time (μs)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
MODE CON- TROL	INI	4				77.00	80.4		Starting high-speed counter comparison
						43.00	43.0		Stopping high- speed counter com- parison
						43.40	48.8		Changing pulse output PV
						51.80	50.8		Changing high- speed counter PV
						31.83	28.5		Changing PV of counter in interrupt input mode
						45.33	49.8		Stopping pulse output
						36.73	30.5		Stopping PWM(891) output
HIGH-SPEED COUNTER PV	PRV	4				42.40	43.9		Reading pulse output PV
READ						53.40	65.9		Reading high-speed counter PV
						33.60	30.5		Reading PV of counter in interrupt input mode
						38.80	40.0		Reading pulse output status
						39.30	66.9		Reading high-speed counter status
						38.30	34.5		Reading PWM(891) status
						117.73	145.7		Reading high-speed counter range comparison results
						48.20	48.5		Reading frequency of high-speed counter 0
COUNTER FREQUENCY CONVERT	PRV2	4				23.03	22.39		

Instruction	Mne-	Length			ON execu	tion time (μs)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
COMPARI- SON TABLE LOAD	CTBL	4				238.0	235.0		Registering target value table and starting comparison for 1 target value
						14.42 ms	9.97 ms		Registering target value table and starting comparison for 48 target values
						289.0	276.0		Registering range table and starting comparison
						198.0	183.0		Only registering target value table for 1 target value
						14.40 ms	9.61 ms		Only registering target value table for 48 target values
						259.0	239.0		Only registering range table
SPEED OUT-	SPED	4				56.00	89.3		Continuous mode
PUT						62.47	94.9		Independent mode
SET PULSES	PULS	4				26.20	32.9		
PULSE OUT- PUT	PLS2	5				100.80	107.5		
ACCELERA-	ACC	4				90.80	114.8		Continuous mode
TION CON- TROL						80.00	122.1		Independent mode
ORIGIN	ORG	3				106.13	116.0		Origin search
SEARCH						52.00	102.1		Origin return
PULSE WITH VARIABLE DUTY FAC- TOR	PWM	4				25.80	33.0		

4-2-20 Step Instructions

Instruction	Mne-	. 5			ON execu	tion time (μs))		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
STEP DEFINE	STEP	2	17.4	17.4	20.7	35.9	37.1	27.1	Step control bit ON
			11.8	11.8	13.7	13.8	18.3	24.4	Step control bit OFF
STEP START	SNXT	2	6.6	6.6	7.3	12.1	14.0	10.0	

4-2-21 Basic I/O Unit Instructions

Instruction	Mne-	Length		(ON execut	ion time (μs	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
I/O REFRESH	IORF	3	15.5	15.5	16.4	26.7	30.4	23.5	One input word
			17.20	17.20	18.40	29.7	35.0	25.6	One output word
SPECIAL I/O UNIT I/O REFRESH	FIORF	2	*1						

Instruction	Mne-	Length		(ON execut	ion time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
CPU BUS I/O REFRESH	DLNK	4	287.8	287.8	315.5	321.3	458.7		Allocated 1 word
7-SEGMENT DECODER	SDEC	4	6.5	6.5	6.9	8.1	15.7	14.1	
DIGITAL SWITCH INPUT	DSW	6	50.7	50.7	73.5	77.7	77.6		4 digits, data input value: 0
			51.3	51.3	73.5	83.2	80.0		8 digits, data input value: 00
TEN KEY INPUT	TKY	4	9.7	9.7	13.2	18.7	18.6		Data input value: 00
			10.7	10.7	14.8	20.2	19.1		Data input value: FF
HEXADECIMAL KEY INPUT	HKY	5	50.3	50.3	70.9	77.3	78.1		Data input value: 00
			50.1	50.1	71.2	76.8	77.3		Data input value: FF
MATRIX INPUT	MTR	5	47.8	47.8	68.1	76.4	77.7		Data input value: 00
			48.0	48.0	68.0	77.7	76.9		Data input value: FF
7-SEGMENT	7SEG	5	58.1	58.1	83.3	89.6	89.9		4 digits
DISPLAY OUT- PUT			63.3	63.3	90.3	98.3	99.2		8 digits
INTELLIGENT I/O READ	IORD	4	*1	*1	*1	*1	*1	*1	
INTELLIGENT I/O WRITE	IOWR	4	*1	*1	*1	*1	*1	*1	

^{*1} Execution of the IORD, IORW, and FIORF instructions depends on the Special I/O Units for which they are being executed.

4-2-22 Serial Communications Instructions

Instruction	Mne-	Length		(ON execut	ion time (μs))		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4 H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
PROTOCOL MACRO	PMCR	5	100.1	100.1	142.1	158.4	206.0	276.8	Direct specifica- tion
			134.2	134.2	189.6	210.0	256.7	305.9	Operand specification, sending 1 word, receiving 1 word
TRANSMIT	TXD	4	68.5	68.5	98.8	109.3	102.9	98.8	Sending 1 byte
			734.3	734.3	1.10 ms	1.23 ms	1.16 ms	1.10 ms	Sending 256 bytes
RECEIVE	RXD	4	89.6	89.6	131.1	144.0	132.1	131.1	Storing 1 byte
			724.2	724.2	1.11 ms	1.31 ms	1.22 ms	1.11 ms	Storing 256 bytes
TRANSMIT VIA SERIAL COM- MUNICA- TIONS UNIT	TXDU	4	131.5	131.5	202.4	213.4	208.6		Sending 1 byte

Instruction	Mne-	Length		(ON execut	ion time (μs)			Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
RECEIVE VIA SERIAL COM- MUNICA- TIONS UNIT	RXDU	4	131	131	200.8	211.8	206.8		Storing 1 byte
CHANGE SERIAL PORT SETUP	STUP	3	341.2	341.2	400.0	504.7	524.7	440.4	Addressed to COM port on CPU Unit

4-2-23 Network Instructions

Instruction	Mne-	Length			ON execu	tion time (μs)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
NETWORK SEND	SEND	4	84.4	84.4	123.9	141.6	195.0	123.9	
NETWORK RECEIVE	RECV	4	85.4	85.4	124.7	142.3	196.7	124.7	
DELIVER COM- MAND	CMND	4	106.8	106.8	136.8	167.7	226.7	136.8	
EXPLICIT MES- SAGE SEND	EXPLT	4	127.6	127.6	190.0	217.0	238.0		
EXPLICIT GET ATTRIBUTE	EGATR	4	123.9	123.9	185.0	210.0	232.7		
EXPLICIT SET ATTRIBUTE	ESATR	3	110.0	110.0	164.4	188.3	210.3		
EXPLICIT WORD READ	ECHRD	4	106.8	106.8	158.9	176.3	220.3		
EXPLICIT WORD WRITE	ECHWR	4	106.0	106.0	158.3	175.7	205.3		

4-2-24 File Memory Instructions

Instruction	Mne-	Length		(ON execu	tion time (μs)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
READ DATA FILE	FREAD	5	391.4	391.4	632.4	657.3	641.3	684.1	2-character directory + file name in binary
WRITE DATA FILE	FWRIT	5	387.8	387.8	627.0	650.7	637.3	684.7	2-character directory + file name in binary
WRITE TEXT FILE	TWRIT	5	390.1	390.1	619.1	555.3	489.0		

4-2-25 Display Instructions

Instruction	Mne-	Length		C	N execut	ion time (μs	5)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
DISPLAY MES-	MSG	3	10.1	10.1	14.2	16.8	17.3	14.3	Displaying message
SAGE			8.4	8.4	11.3	14.7	14.7	11.3	Deleting displayed message

4-2-26 Clock Instructions

Instruction	Mne-	Length			ON execu	ution time (μs)			Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
CALENDAR ADD	CADD	4	34.0	38.3	201.9	217.0	194.0	209.5	
CALENDAR SUB- TRACT	CSUB	4	29.6	38.6	170.4	184.7	167.0	184.1	
HOURS TO SEC- ONDS	SEC	3	7.8	21.4	29.3	36.1	35.4	35.8	
SECONDS TO HOURS	HMS	3	7.7	22.2	30.9	45.1	45.7	42.1	
CLOCK ADJUST- MENT	DATE	2	216.0	216.0	251.5	118.7	128.3	120.0	

4-2-27 Debugging Instructions

Instruction	Mne-	Length (steps)			ON execu	tion time (μs)		Conditions
	monic		CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
TRACE MEMORY	TRSM	1	80.4	80.4	120.0	207.0	218.3	120.0	Sampling 1 bit and 0 words
SAMPLING			848.1	848.1	1.06 ms	1.16 ms	1.10 ms	1.06 ms	Sampling 31 bits and 6 words

4-2-28 Failure Diagnosis Instructions

Instruction	Mne-	Length		C	N execu	tion time (με	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
FAILURE	FAL	3	15.4	15.4	16.7	26.1	24.47	16.7	Recording errors
ALARM			179.8	179.8	244.8	294.0	264.0	244.8	Deleting errors (in order of priority)
			432.4	432.4	657.1	853.3	807.3	657.1	Deleting errors (all errors)
			161.5	161.5	219.4	265.7	233.0	219.4	Deleting errors (individually)
SEVERE FAILURE ALARM	FALS	3							
FAILURE POINT	FPD	4	140.9	140.9	202.3	220.7	250.0	202.3	Bit address output, time monitored
DETECTION			163.4	163.4	217.6	250.3	264.3	217.6	Bit address output, first error detection
			185.2	185.2	268.9	220.7	321.7	268.9	Message characters output, time monitored
			207.5	207.5	283.6	320.7	336.0	283.6	Message characters output, first error detection

4-2-29 Other Instructions

Instruction	Mne-	Length			ON execut	ion time (μs)		Condi-
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4 H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	tions
SET CARRY	STC	1	0.048	0.06	0.06	0.15	0.15	0.12	
CLEAR CARRY	CLC	1	0.048	0.06	0.06	0.15	0.15	0.12	
SELECT EM BANK	EMBC	2	14.0	14.0	15.1			15.1	
EXTEND MAXIMUM CYCLE TIME	WDT	2	15.0	15.0	19.7	23.6	22.0	19.7	
SAVE CONDITION FLAGS	ccs	1	8.6	8.6	12.5	14.2	12.9		
LOAD CONDITION FLAGS	CCL	1	9.8	9.8	13.9	16.3	15.7		
CONVERT ADDRESS FROM CV	FRMCV	3	13.6	13.6	19.9	23.1	31.8		
CONVERT ADDRESS TO CV	TOCV	3 to 4	11.9	11.9	17.2	22.5	31.4		
DISABLE PERIPH- ERAL SERVICING	IOSP	1	13.9	13.9	19.8	21.5	21.5		
ENABLE PERIPH- ERAL SERVICING	IORS	1	63.6	63.6	92.3	22.2	22.2		

4-2-30 Block Programming Instructions

Instruction	Mne-	Length		C	N execut	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
BLOCK PRO- GRAM BEGIN	BPRG	2	12.1	12.1	13.0	27.5	30.4	13.0	
BLOCK PRO- GRAM END	BEND	1	9.6	9.6	12.3	23.2	27.1	13.1	
BLOCK PRO- GRAM PAUSE	BPPS	2	10.6	10.6	12.3	16.0	21.7	14.9	
BLOCK PRO- GRAM RESTART	BPRS	2	5.1	5.1	5.6	9.0	10.2	8.3	
CONDITIONAL BLOCK EXIT	(Execu- tion condi-	1	10.0	10.0	11.3	23.8	26.0	12.9	Block exited (input condition ON)
	tion) EXIT		4.0	4.0	4.9	7.2	8.4	7.3	Block not exited (input condition OFF)
CONDITIONAL BLOCK EXIT	EXIT (bit address)	2	9.8	9.8	13.5	28.4	30.6	16.3	Block exited (bit ON)
			4.7	4.7	7.2	11.4	13.1	10.7	Block not exited (bit OFF)
CONDITIONAL BLOCK EXIT	EXIT NOT (bit	2	12.4	12.4	14.0	28.4	31.2	16.8	Block exited (bit OFF)
(NOT)	address)		7.1	7.1	7.6	11.8	13.5	11.2	Block not exited (bit ON)
Branching	IF (execu- tion condi-	1	4.6	4.6	4.8	6.8	8.5	7.2	IF true (input condition ON)
	tion)		6.7	6.7	7.3	12.2	13.9	10.9	IF false (input condition OFF)
Branching	IF (bit	2	6.8	6.8	7.2	11.0	12.7	10.4	IF true (bit ON)
	address)		9.0	9.0	9.6	16.5	18.5	14.2	IF false (bit OFF)
Branching	IF NOT	2	7.1	7.1	7.6	11.5	13.1	10.9	IF true (bit OFF)
(NOT)	(bit address)		9.2	9.2	10.1	16.8	18.9	14.7	IF false (bit ON)

Instruction									Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
Branching	ELSE	1	6.2	6.2	6.7	11.4	12.6	9.9	IF true
			6.8	6.8	7.7	13.4	15.0	11.2	IF false
Branching	IEND	1	6.9	6.9	7.7	13.5	15.4	11.0	IF true
			4.4	4.4	4.6	6.93	8.1	7.0	IF false
ONE CYCLE AND WAIT	WAIT (execu-	1	12.6	12.6	13.7	28.6	34.0	16.7	Do not wait (input condition ON)
	tion condi- tion)		3.9	3.9	4.1	5.6	6.9	6.3	Wait (input condition OFF)
ONE CYCLE AND WAIT	WAIT (bit address)	2	12.0	12.0	13.4	27.2	30.0	16.5	Do not wait (bit ON)
			6.1	6.1	6.5	10.0	11.4	9.6	Wait (bit OFF)
ONE CYCLE AND WAIT	WAIT NOT (bit	2	12.2	12.2	13.8	27.8	30.6	17.0	Do not wait (bit OFF)
(NOT)	address)		6.4	6.4	6.9	10.5	11.8	10.1	Wait (bit ON)
HUNDRED-MS	TIMW	3	22.3	22.3	25.2	47.4	52.0	33.1	Default setting
TIMER WAIT			24.9	24.9	27.8	46.2	53.4	35.7	Normal execution
	TIMWX	3	22.3	22.3	25.2	47.4	52.0	33.1	Default setting
			24.9	24.9	27.8	46.2	53.4	35.7	Normal execution
TEN-MS TIMER	TMHW	3	25.8	25.8	27.9	47.9	53.7	34.1	Default setting
WAIT			20.6	20.6	22.7	40.9	46.2	28.9	Normal execution
	TMHWX	3	25.8	25.8	27.9	47.9	53.7	34.1	Default setting
			20.6	20.6	22.7	40.9	46.2	28.9	Normal execution
COUNTER	CNTW	4	17.9	17.9	22.6	41.0	43.5	27.4	Default setting
WAIT			19.1	19.1	23.9	42.9	45.7	28.7	Normal execution
	CNTWX	4	17.9	17.9	22.6	41.0	43.5	27.4	Default setting
			19.1	19.1	23.9	42.9	45.7	28.7	Normal execution
Loop Control	LOOP	1	7.9	7.9	9.1	15.6	17.6	12.3	
Loop Control	LEND (execu-	1	7.7	7.7	8.4	13.5	15.5	10.9	Do not loop (input condition ON)
	tion condi- tion)		6.8	6.8	8.0	17.5	19.8	9.8	Loop (input condition OFF)
Loop Control	LEND (bit address)	2	9.9	9.9	10.7	17.5	19.9	14.4	Do not loop (bit ON)
			8.9	8.9	10.3	21.6	24.5	13.0	Loop (bit OFF)
Loop Control (NOT)	LEND NOT (bit	2	10.2	10.2	11.2	21.9	24.9	14.8	Do not loop (bit OFF)
	address)		9.3	9.3	10.8	17.8	20.4	13.5	Loop (bit ON)

4-2-31 Text String Processing Instructions

Instruction	Mne-	Length		O	N execut	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
MOV STRING	MOV\$	3	45.6	45.6	66.0	79.3	72.7	84.3	Transferring 1 character*1
CONCATE- NATE STRING	+\$	4	86.5	86.5	126.0	152.0	137.0	167.8	1 character + 1 character* ¹
GET STRING LEFT	LEFT\$	4	53.0	53.0	77.4	93.6	84.8	94.3	Retrieving 1 character from 2 characters*1
GET STRING RIGHT	RGHT\$	4	52.2	52.2	76.3	92.1	83.3	94.2	Retrieving 1 character from 2 characters*1

Instruction	Mne-	Length		С	N execut	ion time (μ	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
GET STRING MIDDLE	MID\$	5	56.5	56.5	84.6	93.7	84.0	230.2	Retrieving 1 character from 3 characters*1
FIND IN STRING	FIND\$	4	51.4	51.4	77.5	89.1	96.7	94.1	Searching for 1 character from 2 characters*1
STRING LENGTH	LEN\$	3	19.8	19.8	28.9	33.8	30.1	33.4	Detecting 1 character*1
REPLACE IN STRING	RPLC\$	6	175.1	175.1	258.7	300.7	267.7	479.5	Replacing the first of 2 characters with 1 character ^{*1}
DELETE STRING	DEL\$	5	63.4	63.4	94.2	111.3	99.3	244.6	Deleting the leading character of 2 characters*1
EXCHANGE STRING	XCHG\$	3	60.6	60.6	87.2	105.2	95.3	99.0	Exchanging 1 character *1
CLEAR STRING	CLR\$	2	23.8	23.8	36.0	42.0	36.8	37.8	Clearing 1 character*1
INSERT INTO STRING	INS\$	5	136.5	136.5	200.6	204.0	208.0	428.9	Inserting 1 character after the first of 2 characters*1
String Comparison Instructions	=\$ <>\$	4	48.5	48.5	69.8	79.9	68.5	86.2	Comparing 1 character with 1 character
	<\$ >\$								
	=\$								

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-2-32 Task Control Instructions

Instruction	Mne-	Length			ON execut	tion time (μs))		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/13/ 22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
TASK ON	TKON	2	6.4	6.4	10.2	11.2	9.55	3.2	Cyclic task speci- fied
			20.6	20.6	30.1	34.6	34.9		Extra task speci- fied
TASK OFF	TKOF	2	123.7	123.7	195.8	214.5	183.4	61.3	Cyclic task speci- fied
			23.4	23.4	34.1	39.3	39.6		Extra task speci- fied

4-2-33 Model Conversion Instructions

Instruction	Mne-	Length		(ON execut	ion time (μs	s)		Conditions
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
BLOCK	XFERC	4	6.4	6.4	6.5	33.1	31.1		Transferring 1 word
TRANSFER			481.6	481.6	791.6	3056.1	2821.1		Transferring 1,000 words
SINGLE	DISTC	4	3.4	3.4	3.5	19	18.1		Data distribute
WORD DIS- TRIBUTE			5.9	5.9	7.3	39.5	38.5		Stack operation
DATA COL-	COLLC	4	3.5	3.5	3.85	24.9	29.7	-	Data distribute
LECT			8	8	9.1	22.1	25.3		Stack operation
			8.3	8.3	9.6	25.5	31		Stack operation 1 word FIFO Read
			2052.3	2052.3	2097.5	8310.1	7821.1		Stack operation 1,000 word FIFO Read
MOVE BIT	MOVBC	4	4.5	4.5	4.88	28.1	22.1		
BIT	BCNTC	4	4.9	4.9	5	30.6	28.8		Counting 1 word
COUNTER			1252.4	1252.4	1284.4	5814.1	5223.8		Counting 1,000 words

4-2-34 Special Function Block Instructions

Instruction	Mne-	Length		Conditions					
	monic	(steps)	CJ1H CPU6□ H-R	CJ1H CPU6□ H	CJ1G CPU4□ H	CJ1M CPU12/ 13/22/23	CJ1M CPU11/ 21	CJ1G CPU4□	
GET VARI- ABLE ID	GETID	4	14	14	22.2	23.4	21.3		

4-2-35 Function Block Instance Execution Time (CPU Units with Unit Version 3.0 or later)

Use the following equation to calculate the effect of instance execution on the cycle time when function block definitions have been created and the instances copied into the user program using CS/CJ-series CPU Units with unit version 3.0 or later.

Effect of Instance Execution on Cycle Time

- = Startup time (A)
 - + I/O parameter transfer processing time (B)
- + Execution time of instructions in function block definition (C)

The following table shows the length of time for A, B, and C.

	Opera	tion		CPU Un	it model	
			CJ1H- CPU6□H-R	CS1H- CPU6⊟H CJ1H- CPU6⊟H	CS1G- CPU4□H CJ1G- CPU4□H	CJ1M- CPU□□
Α	Startup time	Startup time not including I/O parameter transfer	3.3 μs	6.8 μs	8.8 μs	15.0 μs
В	I/O parameter transfer processing time	1-bit (BOOL) input symbol or output symbol	0.24 μs	0.4 μs	0.7 μs	1.0 μs
	The data type is indicated in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol or	0.19 μs	0.3 μs	0.6 μs	0.8 μs
		2-word (DINT, UDINT, DWORD, REAL) input sym- bol or output symbol	0.19 μs	0.5 μs	0.8 μs	1.1 μs
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	0.38 μs	1.0 μs	1.6 μs	2.2 μs
		I/O symbols	0.114 μs	0.4 μs	0.5 μs	1.2 μs
С	Function block definition instruction execution time	Total instruction processing ti	me (same as s	tandard user p	orogram)	

Example: CS1H-CPU63H

Input variables with a 1-word data type (INT): 3
Output variables with a 1-word data type (INT): 2

Total instruction processing time in function block definition section: 10 μ s Execution time for 1 instance = 6.8 μ s + (3 + 2) × 0.3 μ s + 10 μ s = 18.3 μ s

Note The execution time is increased according to the number of multiple instances when the same function block definition has been copied to multiple locations.

Note Guidelines on Converting Program Capacities from Previous OMRON PLCs

Guidelines are provided in the following table for converting the program capacity (unit: words) of previous OMRON PLCs (SYSMAC C200HX/HG/HE, CVM1, or CV-series PLCs) to the program capacity (unit: steps) of the CS-series PLCs.

Add the following value (n) to the program capacity (unit: words) of the previous PLCs for instruction to obtain the program capacity (unit: steps) of the CS-series PLCs.

	CS-series steps = "a" (words) of previous PLC + n								
Instructions	Variations	Value of n when converting from C200HX/HG/HE to CS Series	Value of n when converting from CV-series PLC or CVM1 to CS Series						
Basic instructions	None	OUT, SET, RSET, or KEEP(011): –1 Other instructions: 0	0						
	Upward Differentiation	None	+1						
	Immediate Refreshing	None	0						
	Upward Differentiation and Immediate Refreshing	None	+2						
Special	None	0	-1						
instructions	Upward Differentiation	+1	0						
	Immediate Refreshing	None	+3						
	Upward Differentiation and Immediate Refreshing	None	+4						

For example, if OUT is used with an address of CIO 000000 to CIO 25515, the program capacity of a C200HX/HG/HE PLC would be 2 words per instruction and that of the CS-series PLC would be 1 (2-1) step per instruction.

For example, if !MOV is used (MOVE instruction with immediate refreshing), the program capacity of a CVM1 or CV-series PLC would be 4 words per instruction and that of the CS-series PLC would be 7 (4 + 3) steps.

Note Number of Function Block Program Steps (CPU Units with Unit Version 3.0 or later)

Use the following equation to calculate the number of program steps when function block definitions have been created and the instances copied into the user program using CS/CJ-series CPU Units with unit version 3.0 or later.

Number of steps

= Number of instances \times (Call part size m + I/O parameter transfer part size n \times Number of parameters) + Number of instruction steps in the function block definition p (See note.)

Note The number of instruction steps in the function block definition (p) will not be diminished in subsequence instances when the same function block definition is copied to multiple locations (i.e., for multiple instances). Therefore, in the above equation, the number of instances is not multiplied by the number of instruction steps in the function block definition (p).

	Cor	ntents	CS/CJ-series CPU Units with unit version 3.0 or later		
m	Call part		57 steps		
n	I/O parameter transfer part	1-bit (BOOL) input symbol or output symbol	6 steps		
	The data type is shown in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol	6 steps		
		2-word (DINT, UDINT, DWORD, REAL) input symbol or output symbol	6 steps		
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	18 steps		
		I/O symbols	6 steps		
р	Number of instruction steps in function steps in function block definition Number of instruction steps (same as standard user program) + 27 steps.				

Example:

Input variables with a 1-word data type (INT): 5

Output variables with a 1-word data type (INT): 5

Function block definition section: 100 steps

Number of steps for 1 instance = $57 + (5 + 5) \times 6$ steps + 100 steps + 27 steps = 244 steps

4-3 CS-series Instruction Execution Times and Number of Steps

The following table lists the execution times for all instructions that are available for CS-series CPU Units (except for CS1D CPU Units^{*1}).

*1 Refer to the SYSMAC CS1D Duplex System Operation Manual (Cat. No. W405) for the execution times for CS1D CPU Units.

The total execution time of instructions within one whole user program is the process time for program execution when calculating the cycle time (See note.).

Note User programs are allocated tasks that can be executed within cyclic tasks and interrupt tasks that satisfy interrupt conditions.

Execution times for most instructions differ depending on the CPU Unit used (CS1H-CPU6 \square H, CS1H-CPU6 \square , CS1G-CPU4 \square H, CS1G-CPU4 \square) and the conditions when the instruction is executed.

The execution time can also vary when the execution condition is OFF.

The following table also lists the length of each instruction in the *Length* (*steps*) column. The number of steps required in the user program area for each of the CS-series instructions varies from 1 to 7 steps, depending upon the instruction and the operands used with it. The number of steps in a program is not the same as the number of instructions.

Note

1. Program capacity for CS-series PLCs is measured in steps, whereas program capacity for previous OMRON PLCs, such as the C-series and CV-series PLCs, was measured in words. Basically speaking, 1 step is equivalent to 1 word. The amount of memory required for each instruction, however, is different for some of the CS-series instructions, and inaccuracies will occur if the capacity of a user program for another PLC is converted for a CS-series PLC based on the assumption that 1 word is 1 step. Refer to the information at the end of 4-3 CS-series Instruction Execution Times and Number of Steps for guidelines on converting program capacities from previous OMRON PLCs.

Most instructions are supported in differentiated form (indicated with \uparrow , \downarrow , @, and %). Specifying differentiation will increase the execution times by the following amounts.

Symbol	CS1-H C	PU Units	CS1 CPU Units		
	CPU6□H (μs)	CPU4□H (μs)	CPU6□ (μs)	CPU4□ (μs)	
↑ or ↓	+0.24	+0.32	+0.41	+0.45	
@ or %	+0.24	+0.32	+0.29	+0.33	

2. Use the following times as guidelines when instructions are not executed.

CS1-H C	PU Units	CS1 CPU Units				
CPU6□H (μs)	CPU4□H (μs)	CPU6□ (μs)	CPU4□ (μs)			
0.018 to 0.108	0.02 to 0.12	0.08 to 0.48	0.12 to 0.72			

4-3-1 Sequence Input Instructions

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
LOAD	LD	1	0.02	0.04	0.04	0.08	
	!LD	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
LOAD NOT	LD NOT	1	0.02	0.04	0.04	0.08	
	!LD NOT	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
AND	AND	1	0.02	0.04	0.04	0.08	
	!AND	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
AND NOT	AND NOT	1	0.02	0.04	0.04	0.08	
	!AND NOT	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
OR	OR	1	0.02	0.04	0.04	0.08	
	!OR	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
OR NOT	OR NOT	1	0.02	0.04	0.04	0.08	
	!OR NOT	2	21.16	21.20	21.20	21.24	CS Series
			45.12	45.14	45.14	45.18	C200H
AND LOAD	AND LD	1	0.02	0.04	0.04	0.08	
OR LOAD	OR LD	1	0.02	0.04	0.04	0.08	
NOT	NOT	1	0.02	0.04	0.04	0.08	
CONDITION ON	UP	3	0.3	0.42	0.46	0.54	
CONDITION OFF	DOWN	4	0.3	0.42	0.46	0.54	
LOAD BIT TEST	LD TST	4	0.14	0.24	0.25	0.37	
LOAD BIT TEST NOT	LD TSTN	4	0.14	0.24	0.25	0.37	
AND BIT TEST NOT	AND TSTN	4	0.14	0.24	0.25	0.37	
OR BIT TEST	OR TST	4	0.14	0.24	0.25	0.37	
OR BIT TEST NOT	OR TSTN	4	0.14	0.24	0.25	0.37	

4-3-2 Sequence Output Instructions

Instruction	Mnemonic	Length		Conditions			
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
OUTPUT	OUT	1	0.02	0.04	0.17	0.21	
	!OUT	2	21.39	21.41	21.54	21.58	CS Series
			49.32	49.34	49.47	49.51	C200H
OUTPUT NOT	OUT NOT	1	0.02	0.04	0.17	0.21	
	!OUT NOT	2	21.39	21.41	21.54	21.58	CS Series
			49.32	49.34	49.47	49.51	C200H
KEEP	KEEP	1	0.06	0.08	0.25	0.29	
DIFFERENTIATE UP	DIFU	2	0.24	0.40	0.46	0.54	
DIFFERENTIATE DOWN	DIFD	2	0.24	0.40	0.46	0.54	
SET	SET	1	0.02	0.06	0.17	0.21	
	!SET	2	21.39	21.41	21.54	21.58	CS Series
			49.32	49.34	49.47	49.51	C200H

Instruction	Mnemonic	Length		ON execution	n time (μs)		Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
RESET	RSET	1	0.02	0.06	0.17	0.21	Word specified
	!RSET	2	21.39	21.41	21.54	21.58	CS Series
			49.32	49.34	49.47	49.51	C200H
MULTIPLE BIT SET	SETA	4	5.8	6.1	7.8	7.8	With 1-bit set
			25.7	27.2	38.8	38.8	With 1,000-bit set
MULTIPLE BIT RESET	RSTA	4	5.7	6.1	7.8	7.8	With 1-bit reset
			25.8	27.1	38.8	38.8	With 1,000-bit reset
SINGLE BIT SET	SETB	2	0.24	0.34			
	!SETB	3	21.48	21.88			
SINGLE BIT RESET	RSTB	2	0.24	0.34			
	!RSTB	3	21.68	21.88			
SINGLE BIT OUTPUT	OUTB	2	0.22	0.32			
	!OUTB	3	21.64	21.84			

4-3-3 Sequence Control Instructions

Instruction	Mnemonic	Length	(ON execution	n time (μs)		Conditions	
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□		
END	END	1	5.5	6.0	4.0	4.0		
NO OPERATION	NOP	1	0.02	0.04	0.08	0.12		
INTERLOCK	IL	1	0.06	0.06	0.12	0.12		
INTERLOCK CLEAR	ILC	1	0.06	0.06	0.12	0.12		
MULTI-INTERLOCK DIFFERENTIATION HOLD	MILH	3	6.1	6.5			Interlock condition not met (input condition ON)	
			7.5	7.9			Interlock condition met (input condition OFF)	
			8.9	9.7			Interlock condition met again during interlock (input condition OFF)	
MULTI-INTERLOCK DIFFERENTIATION RELEASE	MILR	3	6.1	6.5			Interlock condition not met (input condition ON)	
			7.5	7.9			Interlock condition met (input condition OFF)	
			8.9	9.7			Interlock condition met again during interlock (input condition OFF)	
MULTI-INTERLOCK	MILC	2	5.0	5.6			Not during interlock	
CLEAR			5.7	6.2			During interlock	
JUMP	JMP	2	0.38	0.48	8.1	8.1		
JUMP END	JME	2						
CONDITIONAL JUMP	CJP	2	0.38	0.48	7.4	7.4	Jump condition met (input condition ON)	
CONDITIONAL JUMP NOT	CJPN	2	0.38	0.48	8.5	8.5	Jump condition met (input condition OFF)	
MULTIPLE JUMP	JMP0	1	0.06	0.06	0.12	0.12		
MULTIPLE JUMP END	JME0	1	0.06	0.06	0.12	0.12		
FOR LOOP	FOR	2	0.12	0.21	0.12	0.21	Designating a constant	
BREAK LOOP	BREAK	1	0.12	0.12	0.12	0.12		

Instruction	Mnemonic	Length	(Conditions			
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
NEXT LOOP	NEXT	1	0.17	0.17	0.17	0.17	When loop is continued
			0.12	0.12	0.12	0.12	When loop is ended

4-3-4 Timer and Counter Instructions

Instruction	Mnemonic	Length		ON executi	ion time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
HUNDRED-MS	TIM	3	0.56	0.88	0.37	0.42	
TIMER	TIMX	3	0.56	0.88	0.37	0.42	
TEN-MS TIMER	TIMH	3	0.88	1.14	0.37	0.42	
	TIMHX	3	0.88	1.14	0.37	0.42	
ONE-MS TIMER	ТМНН	3	0.86	1.12	0.37	0.42	
	TMHHX	3	0.86	1.12	0.37	0.42	
ACCUMULATIVE	TTIM	3	16.1	17.0	21.4	21.4	
TIMER			10.9	11.4	14.8	14.8	When resetting
			8.5	8.7	10.7	10.7	When interlock-ing
	TTIMX	3	16.1	17.0	21.4	21.4	
			10.9	11.4	14.8	14.8	When resetting
			8.5	8.7	10.7	10.7	When interlock- ing
LONG TIMER	TIML	4 to 5	7.6	10.0	12.8	12.8	
			6.2	6.5	7.8	7.8	When interlock-ing
	TIMLX	4 to 5	7.6	10.0	12.8	12.8	
			6.2	6.5	7.8	7.8	When interlock-ing
MULTI-OUTPUT	MTIM	4	20.9	23.3	26.0	26.0	
TIMER			5.6	5.8	7.8	7.8	When resetting
	MTIMX	4	20.9	23.3	26.0	26.0	
			5.6	5.8	7.8	7.8	When resetting
COUNTER	CNT	3	0.56	0.88	0.37	0.42	
	CNTX	3	0.56	0.88	0.37	0.42	
REVERSIBLE	CNTR	3	16.9	19.0	20.9	20.9	
COUNTER	CNTRX	3	16.9	19.0	20.9	20.9	
RESET TIMER/ COUNTER	CNR	3	9.9	10.6	13.9	13.9	When resetting 1 word
			4160	4160	5420	5420	When resetting 1,000 words
	CNRX	3	9.9	10.6	13.9	13.9	When resetting 1 word
			4160	4160	5420	5420	When resetting 1,000 words

4-3-5 Comparison Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H	CS1G	CS1H	CS1G	
			CPU6□H	CPU4□H	CPU6□	CPU4□	
Input Comparison Instructions	=	4	0.10	0.16	0.21	0.37	
(unsigned)	<>	_					
	<						
	<=	_					
	>	_					
	>=	4	0.40	0.40	0.00	0.54	
Input Comparison Instructions (double,	=L	4 to 7	0.10	0.16	0.29	0.54	
unsigned)	<>L	1					
	<l< td=""><td>1</td><td></td><td></td><td></td><td></td><td></td></l<>	1					
	<=L	1					
	>L	1					
	>=L	4	0.40	0.40	0.50	0.50	
Input Comparison Instructions (signed)	=S	4	0.10	0.16	6.50	6.50	
mon donone (eigned)	<>S	1					
	<s< td=""><td>1</td><td></td><td></td><td></td><td></td><td></td></s<>	1					
	<=S	1					
	>S	1					
	>=S	4. 7	0.40	0.40	0.50	0.50	
Input Comparison Instructions (double,	=SL	4 to 7	0.10	0.16	6.50	6.50	
signed)	<>SL	1					
	<sl< td=""><td>1</td><td></td><td></td><td></td><td></td><td></td></sl<>	1					
	<=SL	1					
	>SL	1					
Time Or many disease	>=SL	4	05.4	00.4			
Time Comparison Instructions	=DT	4	25.1	36.4			
nion donone	<>DT	4	25.2	36.4			_
	<dt< td=""><td>4</td><td>25.2</td><td>36.4</td><td></td><td></td><td>_</td></dt<>	4	25.2	36.4			_
	<=DT	4	25.2	36.4			
	>DT	4	25.1	36.4			_
COMPARE	>=DT	4	25.2	36.4			
COMPARE	CMP	3	0.04	0.04	0.17	0.29	
	!CMP	7	42.14	42.14	42.57	42.69	CS Series
DOLIDI E COMPADE	CMDI	245 5	90.44	90.44	90.67	90.79	CS Series
DOUBLE COMPARE	CMPL	3 to 5	0.08	0.08	0.25	0.46	
SIGNED BINARY COMPARE	CPS	3	0.08	0.08	6.50	6.50	
	!CPS	7	35.98 84.18	35.98	48.9	48.9	CS Series
DOUBLE SIGNED	CDCI	245 5		84.18	97.0	97.0	C200H
BINARY COMPARE	CPSL	3 to 5	0.08	0.08	6.50	6.50	
TABLE COMPARE	TCMP	4	14.0	15.2	21.9	21.9	
MULTIPLE COM- PARE	MCMP	4	20.5	22.8	31.2	31.2	
UNSIGNED BLOCK COMPARE	ВСМР	4	21.5	23.7	32.6	32.6	
EXPANDED BLOCK COMPARE	BCMP2	4	8.4	9.3			Number of data words: 1
			313.0	345.3			Number of data words: 255

Instruction	Mnemonic	Length		Conditions			
				CS1H CPU6□	CS1G CPU4□		
AREA RANGE COM- PARE	ZCP	3	5.3	5.4			
DOUBLE AREA RANGE COMPARE	ZCPL	3 to 5	5.5	6.7			

4-3-6 Data Movement Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions	
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□		
MOVE	MOV	3	0.18	0.20	0.25	0.29		
	!MOV	7	21.56	21.60	42.61	42.65	CS Series	
			90.70	90.72	90.77	90.83	C200H	
DOUBLE MOVE	MOVL	3 to 4	0.32	0.34	0.42	0.50		
MOVE NOT	MVN	3	0.18	0.20	0.25	0.29		
DOUBLE MOVE NOT	MVNL	3 to 4	0.32	0.34	0.42	0.50		
MOVE BIT	MOVB	4	0.24	0.34	7.5	7.5		
MOVE DIGIT	MOVD	4	0.24	0.34	7.3	7.3		
MULTIPLE BIT	XFRB	4	10.1	10.8	13.6	13.6	Transferring 1 bit	
TRANSFER			186.4	189.8	269.2	269.2	Transferring 255 bits	
BLOCK TRANSFER	XFER	4	0.36	0.44	11.2	11.2	Transferring 1 word	
			300.1	380.1	633.5	633.5	Transferring 1,000 words	
BLOCK SET	BSET	4	0.26	0.28	8.5	8.5	Setting 1 word	
			200.1	220.1	278.3	278.3	Setting 1,000 words	
DATA EXCHANGE	XCHG	3	0.40	0.56	0.5	0.7		
DOUBLE DATA EXCHANGE	XCGL	3 to 4	0.76	1.04	0.9	1.3		
SINGLE WORD DIS- TRIBUTE	DIST	4	5.1	5.4	7.0	7.0		
DATA COLLECT	COLL	4	5.1	5.3	7.1	7.1		
MOVE TO REGIS- TER	MOVR	3	0.08	0.08	0.42	0.50		
MOVE TIMER/ COUNTER PV TO REGISTER	MOVRW	3	0.42	0.50	0.42	0.50		

4-3-7 Data Shift Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
SHIFT	SFT	3	7.4	10.4	10.4	10.4	Shifting 1 word
REGISTER			433.2	488.0	763.1	763.1	Shifting 1,000 words
REVERSIBLE SHIFT	SFTR	4	6.9	7.2	9.6	9.6	Shifting 1 word
REGISTER			615.3	680.2	859.6	859.6	Shifting 1,000 words
ASYNCHRONOUS	ASFT	4	6.2	6.4	7.7	7.7	Shifting 1 word
SHIFT REGISTER			1220	1220	2010	2010	Shifting 1,000 words*1
WORD SHIFT	WSFT	4	4.5	4.7	7.8	7.8	Shifting 1 word
			171.5	171.7	781.7	781.7	Shifting 1,000 words
ARITHMETIC SHIFT LEFT	ASL	2	0.22	0.32	0.29	0.37	
DOUBLE SHIFT LEFT	ASLL	2	0.40	0.56	0.50	0.67	

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
ARITHMETIC SHIFT RIGHT	ASR	2	0.22	0.32	0.29	0.37	
DOUBLE SHIFT RIGHT	ASRL	2	0.40	0.56	0.50	0.67	
ROTATE LEFT	ROL	2	0.22	0.32	0.29	0.37	
DOUBLE ROTATE LEFT	ROLL	2	0.40	0.56	0.50	0.67	
ROTATE LEFT WITH- OUT CARRY	RLNC	2	0.22	0.32	0.29	0.37	
DOUBLE ROTATE LEFT WITHOUT CARRY	RLNL	2	0.40	0.56	0.50	0.67	
ROTATE RIGHT	ROR	2	0.22	0.32	0.29	0.37	
DOUBLE ROTATE RIGHT	RORL	2	0.40	0.56	0.50	0.67	
ROTATE RIGHT WITHOUT CARRY	RRNC	2	0.22	0.32	0.29	0.37	
DOUBLE ROTATE RIGHT WITHOUT CARRY	RRNL	2	0.40	0.56	0.50	0.67	
ONE DIGIT SHIFT	SLD	3	5.9	6.1	8.2	8.2	Shifting 1 word
LEFT			561.1	626.3	760.7	760.7	Shifting 1,000 words
ONE DIGIT SHIFT	SRD	3	6.9	7.1	8.7	8.7	Shifting 1 word
RIGHT			760.5	895.5	1070	1070	Shifting 1,000 words
SHIFT N-BIT DATA	NSFL	4	7.5	8.3	10.5	10.5	Shifting 1 bit
LEFT			40.3	45.4	55.5	55.5	Shifting 1,000 bits
SHIFT N-BIT DATA	NSFR	4	7.5	8.3	10.5	10.5	Shifting 1 bit
RIGHT			50.5	55.3	69.3	69.3	Shifting 1,000 bits
SHIFT N-BITS LEFT	NASL	3	0.22	0.32	0.29	0.37	
DOUBLE SHIFT N- BITS LEFT	NSLL	3	0.40	0.56	0.50	0.67	
SHIFT N-BITS RIGHT	NASR	3	0.22	0.32	0.29	0.37	
DOUBLE SHIFT N- BITS RIGHT	NSRL	3	0.40	0.56	0.50	0.67	

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-3-8 Increment/Decrement Instructions

Instruction	Mnemonic	Length)	Conditions			
	(steps)		CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
INCREMENT BINARY	++	2	0.22	0.32	0.29	0.37	
DOUBLE INCRE- MENT BINARY	++L	2	0.40	0.56	0.50	0.67	
DECREMENT BINARY		2	0.22	0.32	0.29	0.37	
DOUBLE DECRE- MENT BINARY	L	2	0.40	0.56	0.50	0.67	
INCREMENT BCD	++B	2	6.4	4.5	7.4	7.4	
DOUBLE INCRE- MENT BCD	++BL	2	5.6	4.9	6.1	6.1	

Instruction	Mnemonic	Length (steps)		ON executi	Conditions		
			CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
DECREMENT BCD	B	2	6.3	4.6	7.2	7.2	
DOUBLE DECRE- MENT BCD	– −BL	2	5.3	4.7	7.1	7.1	

4-3-9 Symbol Math Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
SIGNED BINARY ADD WITHOUT CARRY	+	4	0.18	0.20	0.25	0.37	
DOUBLE SIGNED BINARY ADD WITH- OUT CARRY	+L	4 to 6	0.32	0.34	0.42	0.54	
SIGNED BINARY ADD WITH CARRY	+C	4	0.18	0.20	0.25	0.37	
DOUBLE SIGNED BINARY ADD WITH CARRY	+CL	4 to 6	0.32	0.34	0.42	0.54	
BCD ADD WITHOUT CARRY	+B	4	8.2	8.4	14.0	14.0	
DOUBLE BCD ADD WITHOUT CARRY	+BL	4 to 6	13.3	14.5	19.0	19.0	
BCD ADD WITH CARRY	+BC	4	8.9	9.1	14.5	14.5	
DOUBLE BCD ADD WITH CARRY	+BCL	4 to 6	13.8	15.0	19.6	19.6	
SIGNED BINARY SUBTRACT WITHOUT CARRY	-	4	0.18	0.20	0.25	0.37	
DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L	4 to 6	0.32	0.34	0.42	0.54	
SIGNED BINARY SUB- TRACT WITH CARRY	-C	4	0.18	0.20	0.25	0.37	
DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL	4 to 6	0.32	0.34	0.42	0.54	
BCD SUBTRACT WITH- OUT CARRY	–В	4	8.0	8.2	13.1	13.1	
DOUBLE BCD SUB- TRACT WITHOUT CARRY	-BL	4 to 6	12.8	14.0	18.2	18.2	
BCD SUBTRACT WITH CARRY	-BC	4	8.5	8.6	13.8	13.8	
DOUBLE BCD SUB- TRACT WITH CARRY	-BCL	4 to 6	13.4	14.7	18.8	18.8	
SIGNED BINARY MUL- TIPLY	*	4	0.38	0.40	0.50	0.58	
DOUBLE SIGNED BINARY MULTIPLY	*L	4 to 6	7.23	8.45	11.19	11.19	
UNSIGNED BINARY MULTIPLY	*U	4	0.38	0.40	0.50	0.58	
DOUBLE UNSIGNED BINARY MULTIPLY	*UL	4 to 6	7.1	8.3	10.63	10.63	
BCD MULTIPLY	*B	4	9.0	9.2	12.8	12.8	
DOUBLE BCD MULTI- PLY	*BL	4 to 6	23.0	24.2	35.2	35.2	

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
SIGNED BINARY DIVIDE	/	4	0.40	0.42	0.75	0.83	
DOUBLE SIGNED BINARY DIVIDE	/L	4 to 6	7.2	8.4	9.8	9.8	
UNSIGNED BINARY DIVIDE	/U	4	0.40	0.42	0.75	0.83	
DOUBLE UNSIGNED BINARY DIVIDE	/UL	4 to 6	6.9	8.1	9.1	9.1	
BCD DIVIDE	/B	4	8.6	8.8	15.9	15.9	
DOUBLE BCD DIVIDE	/BL	4 to 6	17.7	18.9	26.2	26.2	

4-3-10 Conversion Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
BCD TO BINARY	BIN	3	0.22	0.24	0.25	0.29	
DOUBLE BCD TO DOU- BLE BINARY	BINL	3 to 4	6.5	6.8	9.1	9.1	
BINARY TO BCD	BCD	3	0.24	0.26	8.3	8.3	
DOUBLE BINARY TO DOUBLE BCD	BCDL	3 to 4	6.7	7.0	9.2	9.2	
2'S COMPLEMENT	NEG	3	0.18	0.20	0.25	0.29	
DOUBLE 2'S COMPLE- MENT	NEGL	3 to 4	0.32	0.34	0.42	0.50	
16-BIT TO 32-BIT SIGNED BINARY	SIGN	3	0.32	0.34	0.42	0.50	
DATA DECODER	MLPX	4	0.32	0.42	8.8	8.8	Decoding 1 digit (4 to 16)
			0.98	1.20	12.8	12.8	Decoding 4 digits (4 to 16)
			3.30	4.00	20.3	20.3	Decoding 1 digit 8 to 256
			6.50	7.90	33.4	33.4	Decoding 4 digits (8 to 256)
DATA ENCODER	DMPX	4	7.5	7.9	10.4	10.4	Encoding 1 digit (16 to 4)
			49.6	50.2	59.1	59.1	Encoding 4 digits (16 to 4)
			18.2	18.6	23.6	23.6	Encoding 1 digit (256 to 8)
			55.1	57.4	92.5	92.5	Encoding 2 digits (256 to 8)
ASCII CONVERT	ASC	4	6.8	7.1	9.7	9.7	Converting 1 digit into ASCII
			11.2	11.7	15.1	15.1	Converting 4 digits into ASCII
ASCII TO HEX	HEX	4	7.1	7.4	10.1	10.1	Converting 1 digit
COLUMN TO LINE	LINE	4	19.0	23.1	29.1	29.1	
LINE TO COLUMN	COLM	4	23.2	27.5	37.3	37.3	

Instruction	Mnemonic	Length		ON executi	on time (us)	Conditions
		(steps)	CS1H	CS1G	CS1H	CS1G	
			CPU6□H	CPU4□H	CPU6□	CPU4□	
SIGNED BCD TO BINARY	BINS	4	8.0	8.3	12.1	12.1	Data format set- ting No. 0
			8.0	8.3	12.1	12.1	Data format set- ting No. 1
			8.3	8.6	12.7	12.7	Data format set- ting No. 2
			8.5	8.8	13.0	13.0	Data format set- ting No. 3
DOUBLE SIGNED BCD TO BINARY	BISL	4 to 5	9.2	9.6	13.6	13.6	Data format set- ting No. 0
			9.2	9.6	13.7	13.7	Data format set- ting No. 1
			9.5	9.9	14.2	14.2	Data format set- ting No. 2
			9.6	10.0	14.4	14.4	Data format set- ting No. 3
SIGNED BINARY TO BCD	BCDS	4	6.6	6.9	10.6	10.6	Data format set- ting No. 0
			6.7	7.0	10.8	10.8	Data format set- ting No. 1
			6.8	7.1	10.9	10.9	Data format set- ting No. 2
			7.2	7.5	11.5	11.5	Data format set- ting No. 3
DOUBLE SIGNED BINARY TO BCD	BDSL	4 to 5	8.1	8.4	11.6	11.6	Data format set- ting No. 0
			8.2	8.6	11.8	11.8	Data format set- ting No. 1
			8.3	8.7	12.0	12.0	Data format set- ting No. 2
			8.8	9.2	12.5	12.5	Data format set- ting No. 3
GRAY CODE CONVER-	GRY	4	46.9	72.1			8-bit binary
SION			49.6	75.2			8-bit BCD
			57.7	87.7			8-bit angle
			61.8	96.7			15-bit binary
			64.5	99.6			15-bit BCD
			72.8	112.4			15-bit angle
			52.3	87.2			360° binary
			55.1	90.4			360° BCD
			64.8	98.5			360° angle
FOUR-DIGIT NUMBER TO ASCII	STR4	3	13.79	20.24			
EIGHT-DIGIT NUMBER TO ASCII	STR8	3 to 4	18.82	27.44			
SIXTEEN-DIGIT NUM- BER TO ASCII	STR16	3	30.54	44.41			
ASCII TO FOUR-DIGIT NUMBER	NUM4	3 to 4	18.46	27.27			
ASCII TO EIGHT-DIGIT NUMBER	NUM8	3	27.27	40.29			
ASCII TO SIXTEEN- DIGIT NUMBER	NUM16	3	52.31	78.25			

4-3-11 Logic Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
LOGICAL AND	ANDW	4	0.18	0.20	0.25	0.37	
DOUBLE LOGICAL AND	ANDL	4 to 6	0.32	0.34	0.42	0.54	
LOGICAL OR	ORW	4	0.22	0.32	0.25	0.37	
DOUBLE LOGICAL OR	ORWL	4 to 6	0.32	0.34	0.42	0.54	
EXCLUSIVE OR	XORW	4	0.22	0.32	0.25	0.37	
DOUBLE EXCLUSIVE OR	XORL	4 to 6	0.32	0.34	0.42	0.54	
EXCLUSIVE NOR	XNRW	4	0.22	0.32	0.25	0.37	
DOUBLE EXCLUSIVE NOR	XNRL	4 to 6	0.32	0.34	0.42	0.54	
COMPLEMENT	COM	2	0.22	0.32	0.29	0.37	
DOUBLE COMPLE- MENT	COML	2	0.40	0.56	0.50	0.67	

4-3-12 Special Math Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
BINARY ROOT	ROTB	3	49.6	50.0	530.7	530.7	
BCD SQUARE ROOT	ROOT	3	13.7	13.9	514.5	514.5	
ARITHMETIC PRO- CESS	APR	4	6.7	6.9	32.3	32.3	Designating SIN and COS
			17.2	18.4	78.3	78.3	Designating line-segment approximation
FLOATING POINT DIVIDE	FDIV	4	116.6	176.6	176.6	176.6	
BIT COUNTER	BCNT	4	0.3	0.38	22.1	22.1	Counting 1 word

4-3-13 Floating-point Math Instructions

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
FLOATING TO 16-BIT	FIX	3 to 4	10.6	10.8	14.5	14.5	
FLOATING TO 32-BIT	FIXL	3 to 4	10.8	11.0	14.6	14.6	
16-BIT TO FLOATING	FLT	3 to 4	8.3	8.5	11.1	11.1	
32-BIT TO FLOATING	FLTL	3 to 4	8.3	8.5	10.8	10.8	
FLOATING-POINT ADD	+F	4 to 6	8.0	9.2	10.2	10.2	
FLOATING-POINT SUB- TRACT	_F	4 to 6	8.0	9.2	10.3	10.3	
FLOATING-POINT DIVIDE	/F	4 to 6	8.7	9.9	12.0	12.0	
FLOATING-POINT MUL- TIPLY	*F	4 to 6	8.0	9.2	10.5	10.5	
DEGREES TO RADI- ANS	RAD	3 to 4	10.1	10.2	14.9	14.9	
RADIANS TO DEGREES	DEG	3 to 4	9.9	10.1	14.8	14.8	
SINE	SIN	3 to 4	42.0	42.2	61.1	61.1	
COSINE	cos	3 to 4	31.5	31.8	44.1	44.1	
TANGENT	TAN	3 to 4	16.3	16.6	22.6	22.6	

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
ARC SINE	ASIN	3 to 4	17.6	17.9	24.1	24.1	
ARC COSINE	ACOS	3 to 4	20.4	20.7	28.0	28.0	
ARC TANGENT	ATAN	3 to 4	16.1	16.4	16.4	16.4	
SQUARE ROOT	SQRT	3 to 4	19.0	19.3	28.1	28.1	
EXPONENT	EXP	3 to 4	65.9	66.2	96.7	96.7	
LOGARITHM	LOG	3 to 4	12.8	13.1	17.4	17.4	
EXPONENTIAL POWER	PWR	4 to 6	125.4	126.0	181.7	181.7	
Floating Symbol Com-	=F	4 to 6	6.6	8.3			
parison	<>F						
	<f< td=""><td></td><td></td><td></td><td></td><td></td><td></td></f<>						
	<=F						
	>F						
	>=F						
FLOATING- POINT TO ASCII	FSTR	4	48.5	48.9			
ASCII TO FLOATING- POINT	FVAL	3	21.1	21.3			

4-3-14 Double-precision Floating-point Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs))	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
DOUBLE SYMBOL	=D	4	8.5	10.3			
COMPARISON	<>D						
	<d< td=""><td></td><td></td><td></td><td></td><td></td><td></td></d<>						
	<=D						
	>D						
	>=D						
DOUBLE FLOATING TO 16-BIT BINARY	FIXD	3	11.7	12.1			
DOUBLE FLOATING TO 32-BIT BINARY	FIXLD	3	11.6	12.1			
16-BIT BINARY TO DOUBLE FLOATING	DBL	3	9.9	10.0			
32-BIT BINARY TO DOUBLE FLOATING	DBLL	3	9.8	10.0			
DOUBLE FLOATING- POINT ADD	+D	4	11.2	11.9			
DOUBLE FLOATING- POINT SUBTRACT	–D	4	11.2	11.9			
DOUBLE FLOATING- POINT MULTIPLY	*D	4	12.0	12.7			
DOUBLE FLOATING- POINT DIVIDE	/D	4	23.5	24.2			
DOUBLE DEGREES TO RADIANS	RADD	3	27.4	27.8			
DOUBLE RADIANS TO DEGREES	DEGD	3	11.2	11.9			
DOUBLE SINE	SIND	3	45.4	45.8			
DOUBLE COSINE	COSD	3	43.0	43.4			
DOUBLE TANGENT	TAND	3	20.1	20.5			
DOUBLE ARC SINE	ASIND	3	21.5	21.9			
DOUBLE ARC COSINE	ACOSD	3	24.7	25.1			

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
DOUBLE ARC TAN- GENT	ATAND	3	19.3	19.7			
DOUBLE SQUARE ROOT	SQRTD	3	47.4	47.9			
DOUBLE EXPONENT	EXPD	3	121.0	121.4			
DOUBLE LOGARITHM	LOGD	3	16.0	16.4			
DOUBLE EXPONEN- TIAL POWER	PWRD	4	223.9	224.2			

4-3-15 Table Data Processing Instructions

Instruction	Mnemonic	Length	C	N executio	n time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
SET STACK	SSET	3	8.0	8.3	8.5	8.5	Designating 5 words in stack area
			231.6	251.8	276.8	276.8	Designating 1,000 words in stack area
PUSH ONTO STACK	PUSH	3	6.5	8.6	9.1	9.1	
FIRST IN FIRST OUT	FIFO	3	6.9	8.9	10.6	10.6	Designating 5 words in stack area
			352.6	434.3	1130	1130	Designating 1,000 words in stack area
LAST IN FIRST OUT	LIFO	3	7.0	9.0	9.9	9.9	
DIMENSION RECORD TABLE	DIM	5	15.2	21.6	142.1	142.1	
SET RECORD LOCA- TION	SETR	4	5.4	5.9	7.0	7.0	
GET RECORD NUMBER	GETR	4	7.8	8.4	11.0	11.0	
DATA SEARCH	SRCH	4	15.5	19.5	19.5	19.5	Searching for 1 word
			2420	3340	3340	3340	Searching for 1,000 words ^{*1}
SWAP BYTES	SWAP	3	12.2	13.6	13.6	13.6	Swapping 1 word
			1940	2820	2820	2820	Swapping 1,000 words*1
FIND MAXIMUM	MAX	4 to 5	19.2	24.9	24.9	24.9	Searching for 1 word
			2390	3360	3360	3360	Searching for 1,000 words ^{*1}
FIND MINIMUM	MIN	4 to 5	19.2	25.3	25.3	25.3	Searching for 1 word
			2390	3330	3330	3330	Searching for 1,000 words *1
SUM	SUM	4 to 5	28.2	38.5	38.5	38.3	Adding 1 word
			1420	1950	1950	1950	Adding 1,000 words *1
FRAME CHECKSUM	FCS	4 to 5	20.0	28.3	28.3	28.3	For 1-word table length
			1650	2480	2480	2480	For 1,000-word table length*1
STACK SIZE READ	SNUM	3	6.0	6.3			
STACK DATA READ	SREAD	4	8.0	8.4			
STACK DATA OVER- WRITE	SWRIT	4	7.2	7.6			
STACK DATA INSERT	SINS	4	7.8	9.9			
			354.0	434.8			For 1,000-word table

Instruction	Mnemonic	Length	C	N execution	n time (μs)	Conditions	
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
STACK DATA DELETE	SDEL	4	8.6	10.6			
			354.0	436.0			For 1,000-word table

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-3-16 Data Control Instructions

Instruction	Mnemonic	Length	(ON execution	n time (μs	i)	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
PID CONTROL	PID	4	436.2	678.2	678.2	678.2	First execution
			332.3	474.9	474.9	474.9	Input ON and sampling
			97.3	141.3	141.3	141.3	Input ON and not sampling
PID CONTROL WITH	PIDAT	4	446.3	712.5			First execution
AUTOTUNING			339.4	533.9			Input ON and sampling
			100.7	147.1			Input ON and not sampling
			189.2	281.6			Initial execution of autotuning
			535.2	709.8			Autotuning when sampling
LIMIT CONTROL	LMT	4 to 5	16.1	22.1	22.1	22.1	
DEAD BAND CONTROL	BAND	4 to 5	17.0	22.5	22.5	22.5	
DEAD ZONE CONTROL	ZONE	4 to 5	15.4	20.5	20.5	20.5	
TIME-PROPORTIONAL	TPO	4	10.4	14.8			Input OFF
OUTPUT			54.5	82.0			Input ON and duty specified or output limit disabled
			61.0	91.9			Input ON, manipu- lated variable speci- fied, and output limit disabled
SCALING	SCL	4	37.1	53.0	56.8	56.8	
SCALING 2	SCL2	4	28.5	40.2	50.7	50.7	
SCALING 3	SCL3	4	33.4	47.0	57.7	57.7	
AVERAGE	AVG	4	36.3	52.6	53.1	53.1	Average of an operation
			291.0	419.9	419.9	419.9	Average of 64 operations

4-3-17 Subroutine Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
SUBROUTINE CALL	SBS	2	1.26	1.96	17.0	17.0	
SUBROUTINE ENTRY	SBN	2					
SUBROUTINE RETURN	RET	1	0.86	1.60	20.60	20.60	
MACRO	MCRO	4	23.3	23.3	23.3	23.3	
GLOBAL SUBROUTINE CALL	GSBN	2					
GLOBAL SUBROUTINE ENTRY	GRET	1	1.26	1.96			
GLOBAL SUBROUTINE RETURN	GSBS	2	0.86	1.60			

4-3-18 Interrupt Control Instructions

Instruction	Mnemonic	Length	U , ,						
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□			
SET INTERRUPT MASK	MSKS	3	25.6	38.4	39.5	39.5			
READ INTERRUPT MASK	MSKR	3	11.9	11.9	11.9	11.9			
CLEAR INTERRUPT	CLI	3	27.4	41.3	41.3	41.3			
DISABLE INTERRUPTS	DI	1	15.0	16.8	16.8	16.8			
ENABLE INTERRUPTS	El	1	19.5	21.8	21.8	21.8			

4-3-19 Step Instructions

Instruction	Mnemonic	Length		ON execution time (μs)					
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□			
STEP DEFINE	STEP	2	17.4	20.7	27.1	27.1	Step control bit ON		
			11.8	13.7	24.4	24.4	Step control bit OFF		
STEP START	SNXT	2	6.6	7.3	10.0	10.0			

4-3-20 Basic I/O Unit Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
I/O REFRESH	IORF	3	15.5	16.4	23.5	23.5	For 1 word, CS-series Input Unit
			17.20	18.40	25.6	25.6	For 1 word, CS-series Output Unit
			58.5	63.2	81.7	81.7	For 1 word, C200H Input Unit
			62.6	67.0	86.7	86.7	For 1 word, C200H Output Unit
			319.9	320.7	377.5	377.6	For 60 words, CS-series Input Unit
			358.0	354.4	460.1	460.1	For 60 words, CS-series Output Unit
			303.3	343.9	357.1	357.1	For 10 words, C200H Input Unit
			348.2	376.6	407.5	407.5	For 10 words, C200H Output Unit

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
7-SEGMENT DECODER	SDEC	4	6.5	6.9	14.1	14.1	
DIGITAL	DSW	6	50.7	73.5			4 digits, data input value: 0
SWITCH INPUT			51.3	73.5			8 digits, data input value: 00
TEN KEY	TKY	4	9.7	13.2			Data input value: 00
INPUT			10.7	14.8			Data input value: FF
HEXADECI-	HKY	5	50.3	70.9			Data input value: 00
MAL KEY INPUT			50.1	71.2			Data input value: FF
MATRIX INPUT	MTR	5	47.8	68.1			Data input value: 00
			48.0	68.0			Data input value: FF
7-SEGMENT	7SEG	5	58.1	83.3			4 digits
DISPLAY OUT- PUT			63.3	90.3			8 digits
INTELLIGENT I/O READ	IORD	4	*1	*1	*1	*1	
INTELLIGENT I/O WRITE	IOWR	4	*1	*1	*1	*1	
CPU BUS I/O REFRESH	DLNK	4	287.8	315.5			Allocated 1 word

^{*1} Execution of the IORD and IORW instructions depends on the Special I/O Units for which they are being executed.

4-3-21 Serial Communications Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)	Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
PROTOCOL	PMCR	5	100.1	142.1	276.8	276.8	Direct specification
MACRO			134.2	189.6	305.9	305.9	Operand specification, sending 1 word, receiving 1 word
TRANSMIT	TXD	4	68.5	98.8	98.8	98.8	Sending 1 byte
			734.3	1100	1100	1100	Sending 256 bytes
RECEIVE	RXD	4	89.6	131.1	131.1	131.1	Storing 1 byte
			724.2	1110	1110	1110	Storing 256 bytes
TRANSMIT VIA SERIAL COM- MUNICATIONS UNIT	TXDU	4	131.5	202.4			Sending 1 byte
RECEIVE VIA SERIAL COM- MUNICATIONS UNIT	RXDU	4	131	200.8			Storing 1 byte
CHANGE SERIAL PORT SETUP	STUP	3	341.2	400.0	440.4	440.4	

4-3-22 Network Instructions

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
NETWORK SEND	SEND	4	84.4	123.9	123.9	123.9	
NETWORK RECEIVE	RECV	4	85.4	124.7	124.7	124.7	
DELIVER COMMAND	CMND	4	106.8	136.8	136.8	136.8	
EXPLICIT MESSAGE SEND	EXPLT	4	127.6	190.0			
EXPLICIT GET ATTRIBUTE	EGATR	4	123.9	185.0			
EXPLICIT SET ATTRIBUTE	ESATR	3	110.0	164.4			
EXPLICIT WORD READ	ECHRD	4	106.8	158.9			
EXPLICIT WORD WRITE	ECHWR	4	106.0	158.3			

4-3-23 File Memory Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
READ DATA FILE	FREAD	5	391.4	632.4	684.1	684.1	2-character directory + file name in binary
WRITE DATA FILE	FWRIT	5	387.8	627.0	684.7	684.7	2-character directory + file name in binary
WRITE TEXT FILE	TWRIT	5	390.1	619.1			

4-3-24 Display Instructions

Instruction	Mnemonic	Length		ON executi	Conditions		
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
DISPLAY MES-	MSG	3	10.1	14.2	14.3	14.3	Displaying message
SAGE			8.4	11.3	11.3	11.3	Deleting displayed message

4-3-25 Clock Instructions

Instruction	Mnemonic	Length		Conditions			
		(steps)	CS1H CPU6⊟H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
CALENDAR ADD	CADD	4	38.3	201.9	209.5	209.5	
CALENDAR SUBTRACT	CSUB	4	38.6	170.4	184.1	184.1	
HOURS TO SECONDS	SEC	3	21.4	29.3	35.8	35.8	
SECONDS TO HOURS	HMS	3	22.2	30.9	42.1	42.1	
CLOCK ADJUSTMENT	DATE	2	60.5	87.4	95.9	95.9	

4-3-26 Debugging Instructions

Instruction	Mnemonic	Length (steps)		ON execution time (μs)			Conditions
			CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
Trace Memory Sampling	TRSM	1	80.4	120.0	120.0	120.0	Sampling 1 bit and 0 words
			848.1	1060	1060	1060	Sampling 31 bits and 6 words

4-3-27 Failure Diagnosis Instructions

Instruction	Mnemonic	Length		ON executi)	Conditions	
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□	
FAILURE ALARM	FAL	3	15.4	16.7	16.7	16.7	Recording errors
			179.8	244.8	244.8	244.8	Deleting errors (in order of priority)
			432.4	657.1	657.1	657.1	Deleting errors (all errors)
			161.5	219.4	219.4	219.4	Deleting errors (individually)
SEVERE FAIL- URE ALARM	FALS	3					
FAILURE POINT FPD DETECTION	FPD	4	140.9	202.3	202.3	202.3	Bit address output, time monitored
			163.4	217.6	217.6	217.6	Bit address output, first error detection
			185.2	268.9	268.9	268.9	Message characters output, time monitored
			207.5	283.6	283.6	283.6	Message characters output, first error detection

4-3-28 Other Instructions

Instruction	Mnemonic	Length		Conditions			
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
SET CARRY	STC	1	0.06	0.06	0.12	0.12	
CLEAR CARRY	CLC	1	0.06	0.06	0.12	0.12	
SELECT EM BANK	EMBC	2	14.0	15.1	15.1	15.1	
EXTEND MAXIMUM CYCLE TIME	WDT	2	15.0	19.7	19.7	19.7	
SAVE CONDITION FLAGS	ccs	1	8.6	12.5			
LOAD CONDITION FLAGS	CCL	1	9.8	13.9			
CONVERT ADDRESS FROM CV	FRMCV	3	13.6	19.9			
CONVERT ADDRESS TO CV	TOCV	3	11.9	17.2			
DISABLE PERIPH- ERAL SERVICING	IOSP		13.9	19.8			
ENABLE PERIPHERAL SERVICING	IORS		63.6	92.3			

4-3-29 Block Programming Instructions

							_
Instruction	Mnemonic	Length		Conditions			
	(steps)	CS1H CPU6⊟H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□		
BLOCK PROGRAM BEGIN	BPRG	2	12.1	13.0	13.0	13.0	
BLOCK PROGRAM END	BEND	1	9.6	12.3	13.1	13.1	
BLOCK PROGRAM PAUSE	BPPS	2	10.6	12.3	14.9	14.9	
BLOCK PROGRAM RESTART	BPRS	2	5.1	5.6	8.3	8.3	

Instruction	Mnemonic	Length		Conditions				
		(steps)	CS1H	CS1G CS1H		CS1G		
			CPU6□H	CPU4□H	CPU6□	CPU4□		
CONDITIONAL BLOCK EXIT	(Execution condition) EXIT	1	10.0	11.3	12.9	12.9	Block exited (input condition ON)	
			4.0	4.9	7.3	7.3	Block not exited (input condition OFF)	
CONDITIONAL BLOCK EXIT	EXIT (bit address)	2	6.8	13.5	16.3	16.3	Block exited (bit ON)	
			4.7	7.2	10.7	10.7	Block not exited (bit OFF)	
CONDITIONAL BLOCK EXIT (NOT)	EXIT NOT (bit address)	2	12.4	14.0	16.8	16.8	Block exited (bit OFF)	
			7.1	7.6	11.2	11.2	Block not exited (bit ON)	
Branching	IF (execution condition)	1	4.6	4.8	7.2	7.2	IF true (input condition ON)	
			6.7	7.3	10.9	10.9	IF false (input condition OFF)	
Branching	IF (bit	2	6.8	7.2	10.4	10.4	IF true (bit ON)	
	address)		9.0	9.6	14.2	14.2	IF false (bit OFF)	
Branching (NOT)	IF NOT (bit	2	7.1	7.6	10.9	10.9	IF true (bit OFF)	
	address)		9.2	10.1	14.7	14.7	IF false (bit ON)	
Branching	ELSE	1	6.2	6.7	9.9	9.9	IF true	
			6.8	7.7	11.2	11.2	IF false	
Branching	IEND	1	6.9	7.7	11.0	11.0	IF true	
			4.4	4.6	7.0	7.0	IF false	
ONE CYCLE AND WAIT	WAIT (exe- cution condi-	cution condi-	1	12.6	13.7	16.7	16.7	Do not wait (input condition ON)
	tion)		3.9	4.1	6.3	6.3	Wait (input condition OFF)	
ONE CYCLE AND WAIT	WAIT (bit address)	2	12.0	13.4	16.5	16.5	Do not wait (bit ON)	
			6.1	6.5	9.6	9.6	Wait (bit OFF)	
ONE CYCLE AND WAIT (NOT)	(bit address)		2	12.2	13.8	17.0	17.0	Do not wait (bit OFF)
			6.4	6.9	10.1	10.1	Wait (bit ON)	
HUNDRED-MS TIMER	TIMW	3	22.3	25.2	33.1	33.1	Default setting	
WAIT			24.9	27.8	35.7	35.7	Normal execu- tion	
	TIMWX	3	22.3	25.2	33.1	33.1	Default setting	
			24.9	27.8	35.7	35.7	Normal execu- tion	
TEN-MS TIMER WAIT	TMHW	3	25.8	27.9	34.1	34.1	Default setting	
			20.6	22.7	28.9	28.9	Normal execu- tion	
	TMHWX	3	25.8	27.9	34.1	34.1	Default setting	
			20.6	22.7	28.9	28.9	Normal execu- tion	
COUNTER WAIT	CNTW	4	17.9	22.6	27.4	27.4	Default setting	
			19.1	23.9	28.7	28.7	Normal execu- tion	
	CNTWX	4	17.9	22.6	27.4	27.4	Default setting	
			19.1	23.9	28.7	28.7	Normal execu- tion	
Loop Control	LOOP	1	7.9	9.1	12.3	12.3		

Instruction	Mnemonic	Length	. ,					
		(steps)	CS1H CPU6□H	CS1G CPU4□H	CS1H CPU6□	CS1G CPU4□		
Loop Control	LEND (exe- cution condi- tion)	1	7.7	8.4	10.9	10.9	Do not loop (input condition ON)	
			6.8	8.0	9.8	9.8	Loop (input condition OFF)	
Loop Control	LEND (bit address)	2	9.9	10.7	14.4	14.4	Do not loop (bit ON)	
			8.9	10.3	13.0	13.0	Loop (bit OFF)	
Loop Control	LEND NOT (bit address)	2	10.2	11.2	14.8	14.8	Do not loop (bit OFF)	
			9.3	10.8	13.5	13.5	Loop (bit ON)	

4-3-30 Text String Processing Instructions

Instruction	Mnemonic	Length	0	N executio	n time (μs	5)	Conditions
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
MOV STRING	MOV\$	3	45.6	66.0	84.3	84.3	Transferring 1 character*1
CONCATENATE STRING	+\$	4	86.5	126.0	167.8	167.8	1 character + 1 character*1
GET STRING LEFT	LEFT\$	4	53.0	77.4	94.3	94.3	Retrieving 1 character from 2 characters*1
GET STRING RIGHT	RGHT\$	4	52.2	76.3	94.2	94.2	Retrieving 1 character from 2 characters*1
GET STRING MIDDLE	MID\$	5	56.5	84.6	230.2	230.2	Retrieving 1 character from 3 characters*1
FIND IN STRING	FIND\$	4	51.4	77.5	94.1	94.1	Searching for 1 character from 2 characters ^{*1}
STRING LENGTH	LEN\$	3	19.8	28.9	33.4	33.4	Detecting 1 character *1
REPLACE IN STRING	RPLC\$	6	175.1	258.7	479.5	479.5	Replacing the first of 2 characters with 1 character* ¹
DELETE STRING	DEL\$	5	63.4	94.2	244.6	244.6	Deleting the leading character of 2 characters *1
EXCHANGE STRING	XCHG\$	3	60.6	87.2	99.0	99.0	Exchanging 1 character with 1 character *1
CLEAR STRING	CLR\$	2	23.8	36.0	37.8	37.8	Clearing 1 character*1
INSERT INTO STRING	INS\$	5	136.5	200.6	428.9	428.9	Inserting 1 character after the first of 2 characters*1
String Comparison	=\$	4	48.5	69.8	86.2	86.2	Comparing 1 character
Instructions	<>\$						with 1 character
	<\$						
	+>\$						
	+>=\$						

^{*1} The instruction execution time is greatly affected by the amount to data. This will affect the cycle time. To reduce the effect on the cycle time, background execution can be specified.

4-3-31 Task Control Instructions

Instruction	Mnemonic	Length		ON executi		Conditions	
		(steps)	CS1H CPU6⊟H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
TASK ON	TKON	2	6.4	10.2	3.2	3.2	Cyclic task specified
			20.6	30.1			Extra task specified
TASK OFF	TKOF	2	123.7	195.8	61.3	61.3	Cyclic task specified
			23.4	34.1			Extra task specified

4-3-32 Model Conversion Instructions

Instruction	Mnemonic	Length		ON execution	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
BLOCK	XFERC	4	6.4	6.5			Transferring 1 word
TRANSFER			481.6	791.6			Transferring 1,000 words
SINGLE WORD	DISTC	4	3.4	3.5			Data distribute
DISTRIBUTE			5.9	7.3			Stack operation
DATA COLLECT	COLLC	4	3.5	3.85			Data distribute
			8	9.1			Stack operation
			8.3	9.6			Stack operation 1 word FIFO Read
			2052.3	2097.5			Stack operation 1,000 word FIFO Read
MOVE BIT	MOVBC	4	4.5	4.88			
BIT COUNTER	BCNTC	4	4.9	5			Counting 1 word
			1252.4	1284.4			Counting 1,000 words

4-3-33 Special Function Block Instructions

Instruction	Mnemonic	Length		ON executi	on time (μs)		Conditions
		(steps)	CS1H CPU6□H	CS1G CPU4⊟H	CS1H CPU6□	CS1G CPU4□	
GET VARI- ABLE ID	GETID	4	14	22.2			

4-3-34 Function Block Instance Execution Time (CPU Units with Unit Version 3.0 or later)

Use the following equation to calculate the effect of instance execution on the cycle time when function block definitions have been created and the instances copied into the user program using CS/CJ-series CPU Units with unit version 3.0 or later.

Effect of Instance Execution on Cycle Time

- = Startup time (A)
 - + I/O parameter transfer processing time (B)
- + Execution time of instructions in function block definition (C)

The following table shows the length of time for A, B, and C.

	Opera	tion		CPU Un	it model	
			CJ1H- CPU6□H-R	CS1H- CPU6⊟H CJ1H- CPU6⊟H	CS1G- CPU4□H CJ1G- CPU4□H	CJ1M- CPU□□
Α	Startup time	Startup time not including I/O parameter transfer	3.3 μs	6.8 μs	8.8 μs	15.0 μs
В	I/O parameter transfer processing time	1-bit (BOOL) input symbol or output symbol	0.24 μs	0.4 μs	0.7 μs	1.0 μs
	The data type is indicated in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol or	0.19 μs	0.3 μs	0.6 μs	0.8 μs
		2-word (DINT, UDINT, DWORD, REAL) input sym- bol or output symbol	0.19 μs	0.5 μs	0.8 μs	1.1 μs
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	0.38 μs	1.0 μs	1.6 μs	2.2 μs
		I/O symbols	0.33 μs	0.4 μs	0.5 μs	1.2 μs
С	Function block definition instruction execution time	Total instruction processing til	me (same as s	tandard user p	orogram)	

Example: CS1H-CPU63H

Input variables with a 1-word data type (INT): 3
Output variables with a 1-word data type (INT): 2

Total instruction processing time in function block definition section: 10 μ s Execution time for 1 instance = 6.8 μ s + (3 + 2) × 0.3 μ s + 10 μ s = 18.3 μ s

Note The execution time is increased according to the number of multiple instances when the same function block definition has been copied to multiple locations.

Note Guidelines on Converting Program Capacities from Previous OMRON PLCs

Guidelines are provided in the following table for converting the program capacity (unit: words) of previous OMRON PLCs (SYSMAC C200HX/HG/HE, CVM1, or CV-series PLCs) to the program capacity (unit: steps) of the CS-series PLCs.

Add the following value (n) to the program capacity (unit: words) of the previous PLCs for instruction to obtain the program capacity (unit: steps) of the CS-series PLCs.

	CS-series steps = "a" (wo	ords) of previous PL	C + n	
Instructions	Variations	Value of n when converting from C200HX/HG/HE to CS Series	Value of n when converting from CV-series PLC or CVM1 to CS Series	
Basic instructions	None	OUT, SET, RSET, or KEEP(011): –1 Other instructions: 0	0	
	Upward Differentiation	None	+1	
	Immediate Refreshing	None	0	
	Upward Differentiation and Immediate Refreshing	None	+2	
Special	None	0	-1	
instructions	Upward Differentiation	+1	0	
	Immediate Refreshing	None	+3	
	Upward Differentiation and Immediate Refreshing	None	+4	

For example, if OUT is used with an address of CIO 000000 to CIO 25515, the program capacity of a C200HX/HG/HE PLC would be 2 words per instruction and that of the CS-series PLC would be 1 (2-1) step per instruction.

For example, if !MOV is used (MOVE instruction with immediate refreshing), the program capacity of a CVM1 or CV-series PLC would be 4 words per instruction and that of the CS-series PLC would be 7 (4 + 3) steps.

Note Number of Function Block Program Steps (CPU Units with Unit Version 3.0 or later)

Use the following equation to calculate the number of program steps when function block definitions have been created and the instances copied into the user program using CS/CJ-series CPU Units with unit version 3.0 or later.

Number of steps

= Number of instances \times (Call part size m + I/O parameter transfer part size n \times Number of parameters) + Number of instruction steps in the function block definition p (See note.)

Note The number of instruction steps in the function block definition (p) will not be diminished in subsequence instances when the same function block definition is copied to multiple locations (i.e., for multiple instances). Therefore, in the above equation, the number of instances is not multiplied by the number of instruction steps in the function block definition (p).

	Cor	itents	CS/CJ-series CPU Units with unit version 3.0 or later		
m	Call part		57 steps		
n	I/O parameter transfer part	1-bit (BOOL) input symbol or output symbol	6 steps		
	The data type is shown in parentheses.	1-word (INT, UINT, WORD) input symbol or output symbol	6 steps		
		2-word (DINT, UDINT, DWORD, REAL) input symbol or output symbol	6 steps		
		4-word (LINT, ULINT, LWORD, LREAL) input symbol or output symbol	18 steps		
		I/O symbols	6 steps		
р	Number of instruc- tion steps in func- tion block definition	The total number of instruction steps (same as standard user program) + 27 steps.			

Example:

Input variables with a 1-word data type (INT): 5

Output variables with a 1-word data type (INT): 5

Function block definition section: 100 steps

Number of steps for 1 instance = $57 + (5 + 5) \times 6$ steps + 100 steps + 27 steps = 244 steps

4. Instruction Execution Times and Number of Steps

Appendix A **List of Instructions by Function Code**

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
	LOAD	LD	@LD	%LD	!LD	140
	LOAD NOT	LD NOT			!LD NOT	140
	AND	AND	@AND	%AND	!AND	142
	AND NOT	AND NOT			!AND NOT	142
	OR	OR	@OR	%OR	!OR	144
	OR NOT	OR NOT			!OR NOT	144
	AND LOAD	AND LD				146
	OR LOAD	OR LD				146
	OUTPUT	OUT			!OUT	158
	OUTPUT NOT	OUT NOT			!OUT NOT	158
	SET	SET	@SET	%SET	!SET	170
	RESET	RSET	@RSET	%RSET	!RSET	170
	HUNDRED-MS TIMER	TIM				217
	COUNTER	CNT				244
000	NO OPERATION	NOP				182
001	END	END				181
002	INTERLOCK	IL				183
003	INTERLOCK CLEAR	ILC				183
004	JUMP	JMP				196
005	JUMP END	JME				196
006	FAILURE ALARM	FAL	@FAL			1022
007	SEVERE FAILURE ALARM	FALS				1029
800	STEP DEFINE	STEP				784
009	STEP START	SNXT				784
010	SHIFT REGISTER	SFT				307
011	KEEP	KEEP			!KEEP	162
012	REVERSIBLE COUNTER	CNTR				247
013	DIFFERENTIATE UP	DIFU			!DIFU	166
014	DIFFERENTIATE DOWN	DIFD			!DIFD	168
015	TEN-MS TIMER	TIMH				221
016	WORD SHIFT	WSFT	@WSFT			313
017	ASYNCHRONOUS SHIFT REGISTER	ASFT	@ASFT			311
019	MULTIPLE COMPARE	MCMP	@MCMP			267
020	COMPARE	CMP			!CMP	261
021	MOVE	MOV	@MOV		!MOV	283
022	MOVE NOT	MVN	@MVN			286
023	BCD TO BINARY	BIN	@BIN			382
024	BINARY TO BCD	BCD	@BCD			384
025	ARITHMETIC SHIFT LEFT	ASL	@ASL			315
026	ARITHMETIC SHIFT RIGHT	ASR	@ASR			317
027	ROTATE LEFT	ROL	@ROL			319
028	ROTATE RIGHT	ROR	@ROR			323
029	COMPLEMENT	COM				446
034	LOGICAL AND	ANDW	@ANDW			438
035	LOGICAL OR	ORW	@ORW			440

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
036	EXCLUSIVE OR	XORW	@XORW			442
037	EXCLUSIVE NOR	XNRW	@XNRW			444
040	SET CARRY	STC	@STC			1043
041	CLEAR CARRY	CLC	@CLC			1043
045	TRACE MEMORY SAMPLING	TRSM				1019
046	DISPLAY MESSAGE	MSG	@MSG			1005
058	DOUBLE BCD TO DOUBLE BINARY	BINL	@BINL			382
059	DOUBLE BINARY TO BCD	BCDL	@BCDL			384
060	DOUBLE COMPARE	CMPL				261
062	MULTIPLE BIT TRANSFER	XFRB	@XFRB			292
063	COLUMN TO LINE	LINE	@LINE			410
064	LINE TO COLUMN	COLM	@COLM			412
065	HOURS TO SECONDS	SEC	@SEC			1013
066	SECONDS TO HOURS	HMS	@HMS			1015
067	BIT COUNTER	BCNT	@BCNT			465
068	UNSIGNED BLOCK COMPARE	BCMP	@BCMP			271
069	ARITHMETIC PRO- CESS	APR	@APR			453
070	BLOCK TRANSFER	XFER	@XFER			294
071	BLOCK SET	BSET	@BSET			296
072	BCD SQUARE ROOT	ROOT	@ROOT			450
073	DATA EXCHANGE	XCHG	@XCHG			298
074	ONE DIGIT SHIFT LEFT	SLD	@SLD			327
075	ONE DIGIT SHIFT RIGHT	SRD	@SRD			327
076	DATA DECODER	MLPX	@MLPX			391
077	DATA ENCODER	DMPX	@DMPX			396
078	7-SEGMENT DECODER	SDEC	@SDEC			804
079	FLOATING POINT DIVIDE	FDIV	@FDIV			462
080	SINGLE WORD DIS- TRIBUTE	DIST	@DIST			300
081	DATA COLLECT	COLL	@COLL			302
082	MOVE BIT	MOVB	@MOVB			288
083	MOVE DIGIT	MOVD	@MOVD			290
084	REVERSIBLE SHIFT REGISTER	SFTR	@SFTR			309
085	TABLE COMPARE	TCMP	@TCMP			269
086	ASCII CONVERT	ASC	@ASC			401
087	ACCUMULATIVE TIMER	TTIM				234
088	AREA RANGE COM- PARE	ZCP				276
090	NETWORK SEND	SEND	@SEND			929
091	SUBROUTINE CALL	SBS	@SBS			687
092	SUBROUTINE ENTRY	SBN				696
093	SUBROUTINE RETURN	RET				696
094	EXTEND MAXIMUM CYCLE TIME	WDT	@WDT			1046
096	BLOCK PROGRAM BEGIN	BPRG				1064
097	I/O REFRESH	IORF	@IORF			794

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
098	NETWORK RECEIVE	RECV	@RECV			939
099	MACRO	MCRO	@MCRO			693
114	SIGNED BINARY COMPARE	CPS			!CPS	264
115	DOUBLE SIGNED BINARY COMPARE	CPSL				264
116	DOUBLE AREA RANGE COMPARE	ZCPL				276
117	SIGNED AREA RANGE COMPARE	ZCPS				280
118	DOUBLE SIGNED AREA RANGE COM- PARE	ZCPSL				280
160	2'S COMPLEMENT	NEG	@NEG			387
161	DOUBLE 2'S COMPLEMENT	NEGL	@NEGL			387
162	ASCII TO HEX	HEX	@HEX			405
174	DOUBLE FIND MAXI- MUM	MAXL	@MAXL			592
175	DOUBLE FIND MINI- MUM	MINL	@MINL			599
176	FIND MAXIMUM FLOATING	MAXF	@MAXF			595
177	FIND MINIMUM FLOATING	MINF	@MINF			601
178	FIND DOUBLE MAXI- MUM FLOATING	MAXD	@MAXD			597
179	FIND DOUBLE MINI- MUM FLOATING	MIND	@MIND			603
180	FRAME CHECKSUM	FCS	@FCS			608
181	DATA SEARCH	SRCH	@SRCH			583
182	FIND MAXIMUM	MAX	@MAX			588
183	FIND MINIMUM	MIN	@MIN			588
184	SUM	SUM	@SUM			605
190	PID CONTROL	PID				640
191	PID CONTROL WITH AUTOTUNING	PIDAT				651
194	SCALING	SCL	@SCL			672
195	AVERAGE	AVG				683
203	UNSIGNED ONE- WORD RECORD SORT	RSORT	@RSORT			630
204	UNSIGNED TWO- WORD RECORD SORT	RSORT2	@RSORT2			634
205	UNSIGNED FOUR- WORD RECORD SORT	RSORT4	@RSORT4			637
210	DIGITAL SWITCH INPUT	DSW				807
211	TEN KEY INPUT	TKY	@TKY			811
212	HEXADECIMAL KEY INPUT	HKY				814
213	MATRIX INPUT	MTR				818
214	7-SEGMENT DISPLAY OUTPUT	7SEG				822
216	ANALOG INPUT DIRECT CONVER- SION	AIDC	@AIDC			826
217	ANALOG OUTPUT DIRECT CONVER- SION	AODC	@AODC			829
218	PCU HIGH-SPEED POSITIONING	NCDMV	@NCDMV			832

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
219	PCU POSITIONING TRIGGER	NCDTR	@NCDTR			836
222	INTELLIGENT I/O READ	IORD	@IORD			839
223	INTELLIGENT I/O WRITE	IOWR	@IOWR			842
225	SPECIAL I/O UNIT I/O REFRESH	FIORF	@FIORF			797
226	CPU BUS UNIT I/O REFRESH	DLNK	@DLNK			800
235	RECEIVE	RXD	@RXD			861
236	TRANSMIT	TXD	@TXD			855
237	CHANGE SERIAL PORT SETUP	STUP	@STUP			896
255	RECEIVE VIA SERIAL COMMUNICATIONS UNIT	RXDU	@RXDU			876
256	TRANSMIT VIA SERIAL COMMUNICA- TIONS UNIT	TXDU	@TXDU			870
260	PROTOCOL MACRO	PMCR	@PMCR			848
261	DIRECT RECEIVE VIA SERIAL COMMUNICA- TIONS UNIT	DRXDU	@DRXDU			888
262	DIRECT TRANSMIT VIA SERIAL COMMU- NICATIONS UNIT	DTXDU	@DTXDU			883
264	PROTOCOL MACRO 2	PMCR2	@PMCR2			899
269	FAILURE POINT DETECTION	FPD				1035
281	SELECT EM BANK	EMBC	@EMBC			1044
282	SAVE CONDITION FLAGS	CCS	@CCS			1048
283	LOAD CONDITION FLAGS	CCL	@CCL			1048
284	CONVERT ADDRESS FROM CV	FRMCV	@FRMCV			1051
285	CONVERT ADDRESS TO CV	TOCV	@TOCV			1055
286	GET VARIABLE ID	GETID	@GETID			1134
287	DISABLE PERIPH- ERAL SERVICING	IOSP	@IOSP			1058
288	ENABLE PERIPH- ERAL SERVICING	IORS				1058
300	AND EQUAL	AND =				253
300	LOAD EQUAL	LD =				253
300	OR EQUAL	OR =				253
301	AND DOUBLE EQUAL	AND =L				253
301	LOAD DOUBLE EQUAL	LD =L				253
301	OR DOUBLE EQUAL	OR =L				253
302	AND SIGNED EQUAL	AND =S				253
302	LOAD SIGNED EQUAL	LD =S				253
302	OR SIGNED EQUAL	OR =S				253
303	AND DOUBLE SIGNED EQUAL	AND =SL				253
303	LOAD DOUBLE SIGNED EQUAL	LD =SL				253
303	OR DOUBLE SIGNED EQUAL	OR =SL				253
305	AND NOT EQUAL	AND <>				253
305	LOAD NOT EQUAL	LD <>				253
305	OR NOT EQUAL	OR <>				253

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
306	AND DOUBLE NOT EQUAL	AND <>L				253
306	LOAD DOUBLE NOT EQUAL	LD <>L				253
306	OR DOUBLE NOT EQUAL	OR <>L				253
307	AND SIGNED NOT EQUAL	AND <>S				253
307	LOAD SIGNED NOT EQUAL	LD <>S				253
307	OR SIGNED NOT EQUAL	OR <>S				253
308	AND DOUBLE SIGNED NOT EQUAL	AND <>SL				253
308	LOAD DOUBLE SIGNED NOT EQUAL	LD <>SL				253
308	OR DOUBLE SIGNED NOT EQUAL	OR <>SL				253
310	AND LESS THAN	AND <				253
310	LOAD LESS THAN	LD <				253
310	OR LESS THAN	OR <				253
311	AND DOUBLE LESS THAN	AND <l< td=""><td></td><td></td><td></td><td>253</td></l<>				253
311	LOAD DOUBLE LESS THAN	LD <l< td=""><td></td><td></td><td></td><td>253</td></l<>				253
311	OR DOUBLE LESS THAN	OR <l< td=""><td></td><td></td><td></td><td>253</td></l<>				253
312	AND SIGNED LESS THAN	AND <s< td=""><td></td><td></td><td></td><td>253</td></s<>				253
312	LOAD SIGNED LESS THAN	LD <s< td=""><td></td><td></td><td></td><td>253</td></s<>				253
312	OR SIGNED LESS THAN	OR <s< td=""><td></td><td></td><td></td><td>253</td></s<>				253
313	AND DOUBLE SIGNED LESS THAN	AND <sl< td=""><td></td><td></td><td></td><td>253</td></sl<>				253
313	LOAD DOUBLE SIGNED LESS THAN	LD <sl< td=""><td></td><td></td><td></td><td>253</td></sl<>				253
313	OR DOUBLE SIGNED LESS THAN	OR <sl< td=""><td></td><td></td><td></td><td>253</td></sl<>				253
315	AND LESS THAN OR EQUAL	AND <=				253
315	LOAD LESS THAN OR EQUAL	LD <=				253
315	OR LESS THAN OR EQUAL	OR <=				253
316	AND DOUBLE LESS THAN OR EQUAL	AND <=L				253
316	LOAD DOUBLE LESS THAN OR EQUAL	LD <=L				253
316	OR DOUBLE LESS THAN OR EQUAL	OR <=L				253
317	AND SIGNED LESS THAN OR EQUAL	AND <=S				253
317	LOAD SIGNED LESS THAN OR EQUAL	LD <=S				253
317	OR SIGNED LESS THAN OR EQUAL	OR <=S				253
318	AND DOUBLE SIGNED LESS THAN OR EQUAL	AND <=SL				253
318	LOAD DOUBLE SIGNED LESS THAN OR EQUAL	LD <=SL				253
318	OR DOUBLE SIGNED LESS THAN OR EQUAL	OR <=SL				253

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
320	AND GREATER THAN	AND >				253
320	LOAD GREATER THAN	LD >				253
320	OR GREATER THAN	OR >				253
321	AND DOUBLE GREATER THAN	AND >L				253
321	LOAD DOUBLE GREATER THAN	LD >L				253
321	OR DOUBLE GREATER THAN	OR >L				253
322	AND SIGNED GREATER THAN	AND >S				253
322	LOAD SIGNED GREATER THAN	LD >S				253
322	OR SIGNED GREATER THAN	OR >S				253
323	AND DOUBLE SIGNED GREATER THAN	AND >SL				253
323	LOAD DOUBLE SIGNED GREATER THAN	LD >SL				253
323	OR DOUBLE SIGNED GREATER THAN	OR >SL				253
325	AND GREATER THAN OR EQUAL	AND >=				253
325	LOAD GREATER THAN OR EQUAL	LD >=				253
325	OR GREATER THAN OR EQUAL	OR >=				253
326	AND DOUBLE GREATER THAN OR EQUAL	AND >=L				253
326	LOAD DOUBLE GREATER THAN OR EQUAL	LD >=L				253
326	OR DOUBLE GREATER THAN OR EQUAL	OR >=L				253
327	AND SIGNED GREATER THAN OR EQUAL	AND >=S				253
327	LOAD SIGNED GREATER THAN OR EQUAL	LD >=S				253
327	OR SIGNED GREATER THAN OR EQUAL	OR >=S				253
328	AND DOUBLE SIGNED GREATER THAN OR EQUAL	AND >=SL				253
328	LOAD DOUBLE SIGNED GREATER THAN OR EQUAL	LD >=SL				253
328	OR DOUBLE SIGNED GREATER THAN OR EQUAL	OR >=SL				253
329	AND FLOATING EQUAL	AND =F				502
329	LOAD FLOATING EQUAL	LD =F				502
329	OR FLOATING EQUAL	OR =F				502
330	AND FLOATING NOT EQUAL	AND <>F				502
330	LOAD FLOATING NOT EQUAL	LD <>F				502
330	OR FLOATING NOT EQUAL	OR <>F				502

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
331	AND FLOATING LESS THAN	AND <f< td=""><td></td><td></td><td></td><td>502</td></f<>				502
331	LOAD FLOATING LESS THAN	LD <f< td=""><td></td><td></td><td></td><td>502</td></f<>				502
331	OR FLOATING LESS THAN	OR <f< td=""><td></td><td></td><td></td><td>502</td></f<>				502
332	AND FLOATING LESS THAN OR EQUAL	AND <=F				502
332	LOAD FLOATING LESS THAN OR EQUAL	LD <=F				502
332	OR FLOATING LESS THAN OR EQUAL	OR <=F				502
333	AND FLOATING GREATER THAN	AND >F				502
333	LOAD FLOATING GREATER THAN	LD >F				502
333	OR FLOATING GREATER THAN	OR >F				502
334	AND FLOATING GREATER THAN OR EQUAL	AND >=F				502
334	LOAD FLOATING GREATER THAN OR EQUAL	LD >=F				502
334	OR FLOATING GREATER THAN OR EQUAL	OR >=F				502
335	AND DOUBLE FLOAT- ING EQUAL	AND =D				546
335	LOAD DOUBLE FLOATING EQUAL	LD =D				546
335	OR DOUBLE FLOAT- ING EQUAL	OR =D				546
336	AND DOUBLE FLOAT- ING NOT EQUAL	AND <>D				546
336	LOAD DOUBLE FLOATING NOT EQUAL	LD <>D				546
336	OR DOUBLE FLOAT- ING NOT EQUAL	OR <>D				546
337	AND DOUBLE FLOAT- ING LESS THAN	AND <d< td=""><td></td><td></td><td></td><td>546</td></d<>				546
337	LOAD DOUBLE FLOATING LESS THAN	LD <d< td=""><td></td><td></td><td></td><td>546</td></d<>				546
337	OR DOUBLE FLOAT- ING LESS THAN	OR <d< td=""><td></td><td></td><td></td><td>546</td></d<>				546
338	AND DOUBLE FLOAT- ING LESS THAN OR EQUAL	AND <=D				546
338	LOAD DOUBLE FLOATING LESS THAN OR EQUAL	LD <=D				546
338	OR DOUBLE FLOAT- ING LESS THAN OR EQUAL	OR <=D				546
339	AND DOUBLE FLOAT- ING GREATER THAN	AND >D				546
339	LOAD DOUBLE FLOATING GREATER THAN	LD >D				546
339	OR DOUBLE FLOAT- ING GREATER THAN	OR >D				546
340	AND DOUBLE FLOAT- ING GREATER THAN OR EQUAL	AND >=D				546

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
340	LOAD DOUBLE FLOATING GREATER THAN OR EQUAL	LD >=D				546
340	OR DOUBLE FLOAT- ING GREATER THAN OR EQUAL	OR >=D				546
341	AND TIME EQUAL	AND =DT				257
341	LOAD TIME EQUAL	LD =DT				257
341	OR TIME EQUAL	OR =DT				257
342	AND TIME NOT EQUAL	AND <> DT				257
342	LOAD TIME NOT EQUAL	LD <>DT				257
342	OR TIME NOT EQUAL	OR <>DT				257
343	AND TIME LESS THAN	AND <dt< td=""><td></td><td></td><td></td><td>257</td></dt<>				257
343	LOAD TIME LESS THAN	LD <dt< td=""><td></td><td></td><td></td><td>257</td></dt<>				257
343	OR TIME LESS THAN	OR <dt< td=""><td></td><td></td><td></td><td>257</td></dt<>				257
344	AND TIME LESS THAN OR EQUAL	AND <=DT				257
344	LOAD TIME LESS THAN OR EQUAL	LD <=DT				257
344	OR TIME LESS THAN OR EQUAL	OR <=DT				257
345	AND TIME GREATER THAN	AND >DT				257
345	LOAD TIME GREATER THAN	LD >DT				257
345	OR TIME GREATER THAN	OR >DT				257
346	AND TIME GREATER THAN OR EQUAL	AND >=DT				257
346	LOAD TIME GREATER THAN OR EQUAL	LD >=DT				257
346	OR TIME GREATER THAN OR EQUAL	OR >=DT				257
350	AND BIT TEST	AND TST				154
350	LOAD BIT TEST	LD TST				152
350	OR BIT TEST	OR TST				156
351	AND BIT TEST	AND TSTN				154
351	LOAD BIT TEST	LD TSTN				152
351	OR BIT TEST	OR TSTN				156
360	UNSIGNED ONE- WORD RECORD SEARCH LESS THAN	RSRCH <	@RSRCH <			618
361	UNSIGNED ONE- WORD RECORD SEARCH LESS THAN OR EQUALS	RSRCH <=	@RSRCH <=			618
362	UNSIGNED 0NE- WORD RECORD SEARCH EQUALS	RSRCH =	@RSRCH =			618
363	UNSIGNED ONE- WORD RECORD SEARCH GREATER THAN	RSRCH >	@RSRCH >			618
364	UNSIGNED ONE- WORD RECORD SEARCH GREATER THAN OR EQUALS	RSRCH >=	@RSRCH >=			618
370	UNSIGNED TWO- WORD RECORD SEARCH LESS THAN	RSRCH2 <	@RSRCH2 <			624

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
371	UNSIGNED TWO- WORD RECORD SEARCH LESS THAN OR EQUALS	RSRCH2 <=	@RSRCH2 <=			624
372	UNSIGNED TWO- WORD RECORD SEARCH EQUALS	RSRCH2 =	@RSRCH2 =			624
373	UNSIGNED TWO- WORD RECORD SEARCH GREATER THAN	RSRCH2 >	@RSRCH2 >			624
374	UNSIGNED TWO- WORD RECORD SEARCH GREATER THAN OR EQUALS	RSRCH2 >=	@RSRCH2 >=			624
380	UNSIGNED FOUR- WORD RECORD SEARCH LESS THAN	RSRCH4 <	@RSRCH4 <			627
381	UNSIGNED FOUR- WORD RECORD SEARCH LESS THAN OR EQUALS	RSRCH4 <=	@RSRCH4 <=			627
382	UNSIGNED FOUR- WORD RECORD SEARCH EQUALS	RSRCH4 =	@RSRCH4 =			627
383	UNSIGNED FOUR- WORD RECORD SEARCH GREATER THAN	RSRCH4 >	@RSRCH4 >			627
384	UNSIGNED FOUR- WORD RECORD SEARCH GREATER THAN OR EQUALS	RSRCH4 >=	@RSRCH4 >=			627
400	SIGNED BINARY ADD WITHOUT CARRY	+	@+			350
401	DOUBLE SIGNED BINARY ADD WITHOUT CARRY	+L	@+L			350
402	SIGNED BINARY ADD WITH CARRY	+C	@+C			352
403	DOUBLE SIGNED BINARY ADD WITH CARRY	+CL	@+CL			352
404	BCD ADD WITHOUT CARRY	+B	@+B			354
405	DOUBLE BCD ADD WITHOUT CARRY	+BL	@+BL			354
406	BCD ADD WITH CARRY	+BC	@+BC			356
407	DOUBLE BCD ADD WITH CARRY	+BCL	@+BCL			356
410	SIGNED BINARY SUBTRACT WITHOUT CARRY	-	@-			358
411	DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	-L	@-L			358
412	SIGNED BINARY SUBTRACT WITH CARRY	-C	@-C			362
413	DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	-CL	@-CL			362
414	BCD SUBTRACT WITHOUT CARRY	-В	@-B			365
415	DOUBLE BCD SUBTRACT WITHOUT CARRY	-BL	@-BL			365
416	BCD SUBTRACT WITH CARRY	-BC	@-BC			368

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
417	DOUBLE BCD SUBTRACT WITH CARRY	-BCL	@-BCL			368
420	SIGNED BINARY MULTIPLY	*	@*			370
421	DOUBLE SIGNED BINARY MULTIPLY	*L	@*L			370
422	UNSIGNED BINARY MULTIPLY	*U	@*U			372
423	DOUBLE UNSIGNED BINARY MULTIPLY	*UL	@*UL			372
424	BCD MULTIPLY	*B	@*B			374
425	DOUBLE BCD MULTIPLY	*BL	@*BL			374
430	SIGNED BINARY DIVIDE	/	@/			376
431	DOUBLE SIGNED BINARY DIVIDE	/L	@/L			376
432	UNSIGNED BINARY DIVIDE	/U	@/U			378
433	DOUBLE UNSIGNED BINARY DIVIDE	/UL	@/UL			378
434	BCD DIVIDE	/B	@/B			380
435	DOUBLE BCD DIVIDE	/BL	@/BL			380
448	FLOATING POINT TO ASCII	FSTR	@FSTR			505
449	ASCII TO FLOATING POINT	FVAL	@FVAL			510
450	FLOATING TO 16-BIT	FIX	@FIX			472
451	FLOATING TO 32-BIT	FIXL	@FIXL			472
452	16-BIT TO FLOATING	FLT	@FLT			474
453	32-BIT TO FLOATING	FLTL	@FLTL			474
454	FLOATING-POINT ADD	+F	@+F			476
455	FLOATING-POINT SUBTRACT	− F	@-F			476
456	FLOATING-POINT MULTIPLY	*F	@*F			476
457	FLOATING-POINT DIVIDE	/F	@/F			476
458	DEGREES TO RADIANS	RAD	@RAD			480
459	RADIANS-TO DEGREES	DEG	@DEG			482
460	SINE	SIN	@SIN			484
461	COSINE	cos	@COS			484
462	TANGENT	TAN	@TAN			484
463	ARC SINE	ASIN	@ASIN			491
464	ARC COSINE	ACOS	@ACOS			491
465	ARC TANGENT	ATAN	@ATAN			491
466	SQUARE ROOT	SQRT	@SQRT			494
467	EXPONENT	EXP	@EXP			496
468	LOGARITHM	LOG	@LOG			498
469	MOVE FLOATING- POINT (SINGLE)	MOVF	@MOVF			514
470	SIGNED BCD TO BINARY	BINS	@BINS			414
471	SIGNED BINARY TO BCD	BCDS	@BCDS			419
472	DOUBLE SIGNED BCD TO BINARY	BISL	@BISL			414
473	DOUBLE SIGNED BINARY TO BCD	BDSL	@BDSL			419

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
474	GRAY CODE CON- VERSION	GRY	@GRY			423
475	HIGH-SPEED SINE	SINQ	@SINQ			487
476	HIGH-SPEED COSINE	COSQ	@COSQ			487
477	HIGH-SPEED TAN- GENT	TANQ	@TANQ			487
478	GRAY CODE TO BINARY CONVERT	GRAY_BIN	@GRAY_BIN			428
479	DOUBLE GRAY CODE TO BINARY CONVERT	GRAY_BINL	@GRAY_BINL			428
480	BINARY TO GRAY CODE CONVERT	BIN_GRAY	@BIN_GRAY			430
481	DOUBLE BINARY TO GRAY CODE CON- VERT	BIN_GRAYL	@BIN_GRAYL			430
486	SCALING 2	SCL2	@SCL2			676
487	SCALING 3	SCL3	@SCL3			680
490	DELIVER COMMAND	CMND	@CMND			948
491	NETWORK SEND 2	SEND2	@SEND2			935
492	NETWORK RECEIVE 2	RECV2	@RECV2			944
493	DELIVER COMMAND 2	CMND2	@CMND2			956
498	DOUBLE MOVE	MOVL	@MOVL			283
499	DOUBLE MOVE NOT	MVNL	@MVNL			286
502	EXPANDED BLOCK COMPARE	BCMP2	@BCMP2			273
510	CONDITIONAL JUMP	CJP				199
511	CONDITIONAL JUMP	CJPN				199
512	FOR-NEXT LOOPS	FOR				205
513	FOR-NEXT LOOPS	NEXT				205
514	BREAK LOOP	BREAK				208
515	MULTIPLE JUMP	JMP0				202
516	MULTIPLE JUMP END	JME0				202
517	MULTI-INTERLOCK DIFFERENTIATION HOLD	MILH				187
518	MULTI-INTERLOCK DIFFERENTIATION RELEASE	MILR				187
519	MULTI-INTERLOCK CLEAR	MILC				187
520	NOT	NOT				149
521	CONDITION ON	UP				150
522	CONDITION OFF	DOWN				150
530	MULTIPLE BIT SET	SETA	@SETA			172
531	MULTIPLE BIT RESET	RSTA	@RSTA			172
532	SINGLE BIT SET	SETB	@SETB		!SETB	174
533	SINGLE BIT RESET	RSTB	@RSTB		!RSTB	174
534	SINGLE BIT OUTPUT	OUTB	@OUTB		!OUTB	176
540	ONE-MS TIMER	ТМНН				225
541	TENTH-MS TIMER	TIMU				228
542	LONG TIMER	TIML				237
543	MULTI-OUTPUT TIMER	MTIM				240
544	HUNDREDTH-MS TIMER	TMUH				231
545	RESET TIMER/ COUNTER	CNR	@CNR			250
546	COUNTER	CNTX				244

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
547	RESET TIMER/ COUNTER	CNRX	@CNRX			250
548	REVERSIBLE COUNTER	CNTRX				247
549	TIMER RESET	TRSET	@TRSET			252
550	HUNDRED-MS TIMER	TIMX				217
551	TEN-MS TIMER	TIMHX				221
552	ONE-MS TIMER	TMHHX				225
553	LONG TIMER	TIMLX				237
554	MULTI-OUTPUT TIMER	MTIMX				240
555	ACCUMULATIVE TIMER	TTIMX				234
556	TENTH-MS TIMER	TIMUX				228
557	HUNDREDTH-MS TIMER	TMUHX				231
560	MOVE TO REGISTER	MOVR	@MOVR			304
561	MOVE TIMER/ COUNTER PV TO REGISTER	MOVRW				304
562	DOUBLE DATA EXCHANGE	XCGL	@XCGL			298
565	BLOCK TRANSFER	XFERC	@XFERC			1122
566	SINGLE WORD DIS- TRIBUTE	DISTC	@DISTC			1124
567	DATA COLLECT	COLLC	@COLLC			1127
568	MOVE BIT	MOVBC	@MOVBC			1130
570	DOUBLE SHIFT LEFT	ASLL	@ASLL			315
571	DOUBLE SHIFT RIGHT	ASRL	@ASRL			317
572	DOUBLE ROTATE LEFT	ROLL	@ROLL			319
573	DOUBLE ROTATE RIGHT	RORL	@RORL			323
574	ROTATE LEFT WITHOUT CARRY	RLNC	@RLNC			321
575	ROTATE RIGHT WITHOUT CARRY	RRNC	@RRNC			325
576	DOUBLE ROTATE LEFT WITHOUT CARRY	RLNL	@RLNL			321
577	DOUBLE ROTATE RIGHT WITHOUT CARRY	RRNL	@RRNL			325
578	SHIFT N-BIT DATA LEFT	NSFL	@NSFL			329
579	SHIFT N-BIT DATA RIGHT	NSFR	@NSFR			329
580	SHIFT N-BITS LEFT	NASL	@NASL			332
581	SHIFT N-BITS RIGHT	NASR	@NASR			335
582	DOUBLE SHIFT N-BITS LEFT	NSLL	@NSLL			332
583	DOUBLE SHIFT N-BITS RIGHT	NSRL	@NSRL			335
590	INCREMENT BINARY	++	@++			338
591	DOUBLE INCREMENT BINARY	++L	@++L			338
592	DECREMENT BINARY		@			341
593	DOUBLE DECREMENT BINARY	L	@L			341
594	INCREMENT BCD	++B	@++B			344
595	DOUBLE INCREMENT BCD	++BL	@++BL			344

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
596	DECREMENT BCD	B	@B			347
597	DOUBLE DECREMENT BCD	BL	@BL			347
600	16-BIT TO 32-BIT SIGNED BINARY	SIGN	@SIGN			389
601	FOUR-DIGIT NUM- BER TO ASCII	STR4	@STR4			432
602	EIGHT-DIGIT NUMBER TO ASCII	STR8	@STR8			432
603	SIXTEEN-DIGIT NUM- BER TO ASCII	STR16	@STR16			432
604	ASCII TO FOUR-DIGIT NUMBER	NUM4	@NUM4			435
605	ASCII TO EIGHT-DIGIT NUMBER	NUM8	@NUM8			435
606	ASCII TO SIXTEEN- DIGIT NUMBER	NUM16	@NUM16			435
610	DOUBLE LOGICAL AND	ANDL	@ANDL			438
611	DOUBLE LOGICAL OR	ORWL	@ORWL			440
612	DOUBLE EXCLUSIVE OR	XORL	@XORL			442
613	DOUBLE EXCLUSIVE NOR	XNRL	@XNRL			444
614	DOUBLE COMPLE- MENT	COML	@COML			446
620	BINARY ROOT	ROTB	@ROTB			448
621	BIT COUNTER	BCNTC	@BCNTC			1132
630	SET STACK	SSET	@SSET			554
631	DIMENSION RECORD TABLE	DIM	@DIM			577
632	PUSH ONTO STACK	PUSH	@PUSH			557
633	FIRST IN FIRST OUT	FIFO	@FIFO			559
634	LAST IN FIRST OUT	LIFO	@LIFO			559
635	SET RECORD LOCATION	SETR	@SETR			579
636	GET RECORD NUMBER	GETR	@GETR			581
637	SWAP BYTES	SWAP	@SWAP			586
638	STACK SIZE READ	SNUM	@SNUM			563
639	STACK DATA READ	SREAD	@SREAD			565
640	STACK DATA WRITE	SWRIT	@SWRIT			568
641	STACK DATA INSERT	SINS	@SINS			571
642	STACK DATA DELETE	SDEL	@SDEL			574
650	STRING LENGTH	LEN\$	@LEN\$			1099
652	GET STRING LEFT	LEFT\$	@LEFT\$			1092
653	GET STRING RIGHT	RGHT\$	@RGHT\$			1092
654	GET STRING MIDDLE	MID\$	@MID\$			1095
656	CONCATENATE STRING	+\$	@+\$			1090
657	INS\$	INS\$	@INS\$			1109
658	DELETE STRING	DEL\$	@DEL\$			1103
660	FIND IN STRING	FIND\$	@FIND\$			1097
661	REPLACE IN STRING	RPLC\$	@RPLC\$			1101
664	MOVE STRING	MOV\$	@MOV\$			1089
665	EXCHANGE STRING	XCHG\$	@XCHG\$			1105
666	CLEAR STRING	CLR\$	@CLR\$			1107
670	AND STRING EQUALS	AND =\$				1111
670	LOAD STRING	LD =\$				1111
	EQUALS	•				

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
670	OR STRING EQUALS	OR =\$				1111
671	AND STRING NOT EQUAL	AND <>\$				1111
671	LOAD STRING NOT EQUAL	LD <>\$				1111
671	OR STRING NOT EQUAL	OR <>\$				1111
672	AND STRING LESS THAN	AND <\$				1111
672	LOAD STRING LESS THAN	LD <\$				1111
672	OR STRING LESS THAN	OR <\$				1111
673	AND STRING LESS THAN OR EQUAL	AND <=\$				1111
673	LOAD STRING LESS THAN OR EQUAL	LD <=\$				1111
673	OR STRING LESS THAN OR EQUALS	OR <=\$				1111
674	AND STRING GREATER THAN	AND >\$				1111
674	LOAD STRING GREATER THAN	LD >\$				1111
674	OR STRING GREATER THAN	OR >\$				1111
675	AND STRING GREATER THAN OR EQUALS	AND >=\$				1111
675	LOAD STRING GREATER THAN OR EQUALS	LD >=\$				1111
675	OR STRING GREATER THAN OR EQUALS	OR >=\$				1111
680	LIMIT CONTROL	LMT	@LMT			658
581	DEAD BAND CONTROL	BAND	@BAND			660
682	DEAD ZONE CONTROL	ZONE	@ZONE			663
685	TIME-PROPOR- TIONAL OUTPUT	TPO				665
690	SET INTERRUPT MASK	MSKS	@MSKS			711
591	CLEAR INTERRUPT	CLI	@CLI			722
692	READ INTERRUPT MASK	MSKR	@MSKR			717
693	DISABLE INTER- RUPTS	DI	@DI			726
694	ENABLE INTERRUPTS	EI				728
700	READ DATA FILE	FREAD	@FREAD			989
701	WRITE DATA FILE	FWRIT	@FWRIT			994
704	WRITE TEXT FILE	TWRIT	@TWRIT			1000
720	EXPLICIT MESSAGE SEND	EXPLT	@EXPLT			960
721	EXPLICIT GET ATTRIBUTE	EGATR	@EGATR			966
722	EXPLICIT SET ATTRIBUTE	ESATR	@ESATR			971
723	EXPLICIT WORD READ	ECHRD	@ECHRD			975
724	EXPLICIT WORD WRITE	ECHWR	@ECHWR			978
730	CALENDAR ADD	CADD	@CADD			1008
731	CALENDAR SUB- TRACT	CSUB	@CSUB			1008

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
735	CLOCK ADJUSTMENT	DATE	@DATE			1017
750	GLOBAL SUBROU- TINE CALL	GSBS	@GSBS			699
751	GLOBAL SUBROU- TINE ENTRY	GSBN				705
752	GLOBAL SUBROU- TINE RETURN	GRET				705
780	READ SET TIMER	TSR	@TSR			1140
781	SET STEP TIMER	TSW	@TSW			1140
784	STEP ACTIVATE	SA	@SA			1138
785	STEP DEACTIVATE	SE	@SE			1138
789	SFC ON	SFCON				1142
790	SFC OFF	SFCOFF				1142
791	SFC PAUSE WITH NO RESET	SFCPRN				1144
793	SFC PAUSE WITH RESET	SFCPR				1144
801	BLOCK PROGRAM END	BEND				1064
802	IF NOT	IF NOT (operand)				1070
802	IF	IF (input condition)				1070
802	IF	IF (operand)				1070
803	ELSE	ELSE				1070
804	IF END	IEND				1070
805	ONE CYCLE AND WAIT NOT	WAIT NOT (operand)				1073
805	ONE CYCLE AND WAIT	WAIT (input condition)				1073
805	ONE CYCLE AND WAIT	WAIT (operand)				1073
806	CONDITIONAL BLOCK EXIT NOT	EXIT NOT (operand)				1068
806	CONDITIONAL BLOCK EXIT	EXIT (input condition)				1068
806	CONDITIONAL BLOCK EXIT	EXIT (operand)				1068
809	LOOP	LOOP				1084
810	LOOP END NOT	LEND NOT (operand)				1084
810	LOOP END	LEND (input condition)				1084
810	LOOP END	LEND (operand)				1084
811	BLOCK PROGRAM PAUSE	BPPS				1066
812	BLOCK PROGRAM RESTART	BPRS				1066
813	HUNDRED-MS TIMER WAIT	TIMW				1076
814	COUNTER WAIT	CNTW				1079
815	TEN-MS TIMER WAIT	TMHW				1081
816	HUNDRED-MS TIMER WAIT	TIMWX				1076
817	TEN-MS TIMER WAIT	TMHWX				1081
818	COUNTER WAIT	CNTWX				1079
820	TASK ON	TKON	@TKON			1116
821	TASK OFF	TKOF	@TKOF			1116
840	EXPONENTIAL POWER	PWR	@PWR			500
841	DOUBLE FLOATING TO 16-BIT BINARY	FIXD	@FIXD			521

Function code	Instruction	Mnemonic	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
842	DOUBLE FLOATING TO 32-BIT BINARY	FIXLD	@FIXLD			521
843	16-BIT BINARY TO DOUBLE FLOATING	DBL	@DBL			523
844	32-BIT BINARY TO DOUBLE FLOATING	DBLL	@DBLL			523
845	DOUBLE FLOATING- POINT ADD	+D	@+D			525
846	DOUBLE FLOATING- POINT SUBTRACT	–D	@-D			525
847	DOUBLE FLOATING- POINT MULTIPLY	*D	@*D			525
848	DOUBLE FLOATING- POINT DIVIDE	/D	@/D			525
849	DOUBLE DEGREES TO RADIANS	RADD	@RADD			528
850	DOUBLE RADIANS TO DEGREES	DEGD	@RADD			530
851	DOUBLE SINE	SIND	@SIND			532
852	DOUBLE COSINE	COSD	@COSD			532
853	DOUBLE TANGENT	TAND	@TAND			532
854	DOUBLE ARC SINE	ASIND	@ASIND			535
855	DOUBLE ARC COSINE	ACOSD	@ACOSD			535
856	DOUBLE ARC TAN- GENT	ATAND	@ATAND			535
857	DOUBLE SQUARE ROOT	SQRTD	@SQRTD			538
858	DOUBLE EXPONENT	EXPD	@EXPD			540
859	DOUBLE LOGARITHM	LOGD	@LOGD			542
860	DOUBLE EXPONEN- TIAL POWER	PWRD	@PWRD			544
880	MODE CONTROL	INI	@INI			730
881	HIGH-SPEED COUNTER PV READ	PRV	@PRV			736
882	COMPARISON TABLE LOAD	CTBL	@CTBL			745
883	COUNTER FRE- QUENCY CONVERT	PRV2	@PRV2			742
885	SPEED OUTPUT	SPED	@SPED			751
886	SET PULSES	PULS	@PULS			755
887	PULSE OUTPUT	PLS2	@PLS2			757
888	ACCELERATION CONTROL	ACC	@ACC			766
889	ORIGIN SEARCH	ORG	@ORG			774
891	PULSE WITH VARI- ABLE DUTY FACTOR	PWM	@PWM			777
892	INTERRUPT FEEDING	IFEED	@IFEED			780

Appendix B Alphabetical List of Instructions by Mnemonic

Α

Mnemonic	Instruction	Function code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
ACC	ACCELERATION CONTROL	888	@ACC			766
ACOS	ARC COSINE	464	@ACOS			491
ACOSD	DOUBLE ARC COSINE	855	@ACOSD			535
AIDC	ANALOG INPUT DIRECT CONVER- SION	216	@AIDC			826
AND	AND		@AND	%AND	!AND	142
AND <	AND LESS THAN	310				253
AND <\$	AND STRING LESS THAN	672				1111
AND <>	AND NOT EQUAL	305				253
AND <>\$	AND STRING NOT EQUAL	671				1111
AND <>D	AND DOUBLE FLOAT- ING NOT EQUAL	336				546
AND <> DT	AND TIME NOT EQUAL	342				257
AND <>F	AND FLOATING NOT EQUAL	330				502
AND <>L	AND DOUBLE NOT EQUAL	306				253
AND <>S	AND SIGNED NOT EQUAL	307				253
AND <>SL	AND DOUBLE SIGNED NOT EQUAL	308				253
AND <d< td=""><td>AND DOUBLE FLOAT- ING LESS THAN</td><td>337</td><td></td><td></td><td></td><td>546</td></d<>	AND DOUBLE FLOAT- ING LESS THAN	337				546
AND <dt< td=""><td>AND TIME LESS THAN</td><td>343</td><td></td><td></td><td></td><td>257</td></dt<>	AND TIME LESS THAN	343				257
AND <f< td=""><td>AND FLOATING LESS THAN</td><td>331</td><td></td><td></td><td></td><td>502</td></f<>	AND FLOATING LESS THAN	331				502
AND <l< td=""><td>AND DOUBLE LESS THAN</td><td>311</td><td></td><td></td><td></td><td>253</td></l<>	AND DOUBLE LESS THAN	311				253
AND <s< td=""><td>AND SIGNED LESS THAN</td><td>312</td><td></td><td></td><td></td><td>253</td></s<>	AND SIGNED LESS THAN	312				253
AND <sl< td=""><td>AND DOUBLE SIGNED LESS THAN</td><td>313</td><td></td><td></td><td></td><td>253</td></sl<>	AND DOUBLE SIGNED LESS THAN	313				253
AND =	AND EQUAL	300				253
AND =\$	AND STRING EQUALS	670				1111
AND =D	AND DOUBLE FLOAT- ING EQUAL	335				546
AND =DT	AND TIME EQUAL	341				257
AND =F	AND FLOATING EQUAL	329				502
AND =L	AND DOUBLE EQUAL	301				253
AND =S	AND SIGNED EQUAL	302				253
AND =SL	AND DOUBLE SIGNED EQUAL	303				253
AND >	AND GREATER THAN	320				253
AND >\$	AND STRING GREATER THAN	674				1111

Mnemonic	Instruction	Function code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
AND >D	AND DOUBLE FLOAT- ING GREATER THAN	339				546
AND >DT	AND TIME GREATER THAN	345				257
AND >F	AND FLOATING GREATER THAN	333				502
AND >L	AND DOUBLE GREATER THAN	321				253
AND >S	AND SIGNED GREATER THAN	322				253
AND >SL	AND DOUBLE SIGNED GREATER THAN	323				253
AND LD	AND LOAD					146
AND NOT	AND NOT				!AND NOT	142
AND TST	AND BIT TEST	350				154
AND TSTN	AND BIT TEST	351				154
AND <=	AND LESS THAN OR EQUAL	315				253
AND <=\$	AND STRING LESS THAN OR EQUAL	673				1111
AND <=D	AND DOUBLE FLOAT- ING LESS THAN OR EQUAL	338				546
AND <=DT	AND TIME LESS THAN OR EQUAL	344				257
AND <=F	AND FLOATING LESS THAN OR EQUAL	332				502
AND <=L	AND DOUBLE LESS THAN OR EQUAL	316				253
AND <=S	AND SIGNED LESS THAN OR EQUAL	317				253
AND <=SL	AND DOUBLE SIGNED LESS THAN OR EQUAL	318				253
AND >=	AND GREATER THAN OR EQUAL	325				253
AND >=\$	AND STRING GREATER THAN OR EQUALS	675				1111
AND >=D	AND DOUBLE FLOAT- ING GREATER THAN OR EQUAL	340				546
AND >=DT	AND TIME GREATER THAN OR EQUAL	346				257
AND >=F	AND FLOATING GREATER THAN OR EQUAL	334				502
AND >=L	AND DOUBLE GREATER THAN OR EQUAL	326				253
AND >=S	AND SIGNED GREATER THAN OR EQUAL	327				253
AND >=SL	AND DOUBLE SIGNED GREATER THAN OR EQUAL	328				253
ANDL	DOUBLE LOGICAL AND	610	@ANDL			438
ANDW	LOGICAL AND	034	@ANDW			438
AODC	ANALOG OUTPUT DIRECT CONVER- SION	217	@AODC			829
APR	ARITHMETIC PRO- CESS	069	@APR			453
ASC	ASCII CONVERT	086	@ASC			401

Mnemonic	Instruction	Function code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
ASFT	ASYNCHRONOUS SHIFT REGISTER	017	@ASFT			311
ASIN	ARC SINE	463	@ASIN			491
ASIND	DOUBLE ARC SINE	854	@ASIND			535
ASL	ARITHMETIC SHIFT LEFT	025	@ASL			315
ASLL	DOUBLE SHIFT LEFT	570	@ASLL			315
ASR	ARITHMETIC SHIFT RIGHT	026	@ASR			317
ASRL	DOUBLE SHIFT RIGHT	571	@ASRL			317
ATAN	ARC TANGENT	465	@ATAN			491
ATAND	DOUBLE ARC TAN- GENT	856	@ATAND			535
AVG	AVERAGE	195				683

В

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
BAND	DEAD BAND CON- TROL	681	@BAND			660
BCD	BINARY TO BCD	024	@BCD			384
BCDL	DOUBLE BINARY TO BCD	059	@BCDL			384
BCDS	SIGNED BINARY TO BCD	471	@BCDS			419
BCMP	UNSIGNED BLOCK COMPARE	068	@BCMP			271
BCMP2	EXPANDED BLOCK COMPARE	502	@BCMP2			273
BCNT	BIT COUNTER	067	@BCNT			465
BCNTC	BIT COUNTER	621	@BCNTC			1132
BDSL	DOUBLE SIGNED BINARY TO BCD	473	@BDSL			419
BEND	BLOCK PROGRAM END	801				1064
BIN	BCD TO BINARY	023	@BIN			382
BIN_GRAY	BINARY TO GRAY CODE CONVERT	480	@BIN_GRAY			430
BIN_GRAYL	DOUBLE BINARY TO GRAY CODE CON- VERT	481	@BIN_GRAYL			430
BINL	DOUBLE BCD TO DOUBLE BINARY	058	@BINL			382
BINS	SIGNED BCD TO BINARY	470	@BINS			414
BISL	DOUBLE SIGNED BCD TO BINARY	472	@BISL			414
BPPS	BLOCK PROGRAM PAUSE	811				1066
BPRG	BLOCK PROGRAM BEGIN	096				1064
BPRS	BLOCK PROGRAM RESTART	812				1066
BREAK	BREAK LOOP	514				208
BSET	BLOCK SET	071	@BSET			296

С

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
CADD	CALENDAR ADD	730	@CADD			1008
CCL	LOAD CONDITION FLAGS	283	@CCL			1048
ccs	SAVE CONDITION FLAGS	282	@CCS			1048
CJP	CONDITIONAL JUMP	510				199
CJPN	CONDITIONAL JUMP	511				199
CLC	CLEAR CARRY	041	@CLC			1043
CLI	CLEAR INTERRUPT	691	@CLI			722
CLR\$	CLEAR STRING	666	@CLR\$			1107
CMND	DELIVER COMMAND	490	@CMND			948
CMND2	DELIVER COMMAND 2	493	@CMND2			956
CMP	COMPARE	020			!CMP	261
CMPL	DOUBLE COMPARE	060				261
CNR	RESET TIMER/ COUNTER	545	@CNR			250
CNRX	RESET TIMER/ COUNTER	547	@CNRX			250
CNT	COUNTER					244
CNTX	COUNTER	546				244
CNTR	REVERSIBLE COUNTER	012				247
CNTRX	REVERSIBLE COUNTER	548				247
CNTW	COUNTER WAIT	814				1079
CNTWX	COUNTER WAIT	818				1079
COLL	DATA COLLECT	081	@COLL			302
COLLC	DATA COLLECT	567	@COLLC			1127
COLM	LINE TO COLUMN	064	@COLM			412
COM	COMPLEMENT	029				446
COML	DOUBLE COMPLE- MENT	614	@COML			446
cos	COSINE	461	@COS			484
COSD	DOUBLE COSINE	852	@COSD			532
COSQ	HIGH-SPEED COSINE	476	@COSQ			487
CPS	SIGNED BINARY COMPARE	114			!CPS	264
CPSL	DOUBLE SIGNED BINARY COMPARE	115				264
CSUB	CALENDAR SUB- TRACT	731	@CSUB			1008
CTBL	COMPARISON TABLE LOAD	882	@CTBL			745

D

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
DATE	CLOCK ADJUSTMENT	735	@DATE			1017
DBL	16-BIT BINARY TO DOUBLE FLOATING	843	@DBL			523
DBLL	32-BIT BINARY TO DOUBLE FLOATING	844	@DBLL			523
DEG	RADIANS-TO DEGREES	459	@DEG			482
DEGD	DOUBLE RADIANS TO DEGREES	850	@RADD			530
DEL\$	DELETE STRING	658	@DEL\$			1103

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
DI	DISABLE INTER- RUPTS	693	@DI			726
DIFD	DIFFERENTIATE DOWN	014			!DIFD	168
DIFU	DIFFERENTIATE UP	013			!DIFU	166
DIM	DIMENSION RECORD TABLE	631	@DIM			577
DIST	SINGLE WORD DIS- TRIBUTE	080	@DIST			300
DISTC	SINGLE WORD DIS- TRIBUTE	566	@DISTC			1124
DLNK	CPU BUS UNIT I/O REFRESH	226	@DLNK			800
DMPX	DATA ENCODER	077	@DMPX			396
DOWN	CONDITION OFF	522				150
DRXDU	DIRECT RECEIVE VIA SERIAL COMMUNICA- TIONS UNIT	261	@DRXDU			888
DSW	DIGITAL SWITCH INPUT	210				807
DTXDU	DIRECT TRANSMIT VIA SERIAL COMMU- NICATIONS UNIT	262	@DTXDU			883

Ε

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
ECHRD	EXPLICIT WORD READ	723	@ECHRD			975
ECHWR	EXPLICIT WORD WRITE	724	@ECHWR			978
EGATR	EXPLICIT GET ATTRIBUTE	721	@EGATR			966
EI	ENABLE INTER- RUPTS	694				728
ELSE	ELSE	803				1070
EMBC	SELECT EM BANK	281	@EMBC			1044
END	END	001				181
ESATR	EXPLICIT SET ATTRIBUTE	722	@ESATR			971
EXIT NOT (operand)	CONDITIONAL BLOCK EXIT NOT	806				1068
EXIT (input condition)	CONDITIONAL BLOCK EXIT	806				1068
EXIT (operand)	CONDITIONAL BLOCK EXIT	806				1068
EXP	EXPONENT	467	@EXP			496
EXPD	DOUBLE EXPONENT	858	@EXPD			540
EXPLT	EXPLICIT MESSAGE SEND	720	@EXPLT			960

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
FAL	FAILURE ALARM	006	@FAL			1022
FALS	SEVERE FAILURE ALARM	007				1029
FCS	FRAME CHECKSUM	180	@FCS			608
FDIV	FLOATING POINT DIVIDE	079	@FDIV			462
FIFO	FIRST IN FIRST OUT	633	@FIFO			559
FIND\$	FIND IN STRING	660	@FIND\$			1097

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
FIORF	SPECIAL I/O UNIT I/O REFRESH	225	@FIORF			797
FIX	FLOATING TO 16-BIT	450	@FIX			472
FIXD	DOUBLE FLOATING TO 16-BIT BINARY	841	@FIXD			521
FIXL	FLOATING TO 32-BIT	451	@FIXL			472
FIXLD	DOUBLE FLOATING TO 32-BIT BINARY	842	@FIXLD			521
FLT	16-BIT TO FLOATING	452	@FLT			474
FLTL	32-BIT TO FLOATING	453	@FLTL			474
FOR	FOR-NEXT LOOPS	512				205
FPD	FAILURE POINT DETECTION	269				1035
FREAD	READ DATA FILE	700	@FREAD			989
FRMCV	CONVERT ADDRESS FROM CV	284	@FRMCV			1051
FSTR	FLOATING POINT TO ASCII	448	@FSTR			505
FWRIT	WRITE DATA FILE	701	@FWRIT			994
FVAL	ASCII TO FLOATING POINT	449	@FVAL			510

G

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
GETID	GET VARIABLE ID	286	@GETID			1134
GETR	GET RECORD NUM- BER	636	@GETR			581
GRAY_BIN	GRAY CODE TO BINARY CONVERT	478	@GRAY_BIN			428
GRAY_BINL	DOUBLE GRAY CODE TO BINARY CONVERT	479	@GRAY_BINL			428
GRET	GLOBAL SUBROU- TINE RETURN	752				705
GRY	GRAY CODE CON- VERSION	474	@GRY			423
GSBN	GLOBAL SUBROU- TINE ENTRY	751				705
GSBS	GLOBAL SUBROU- TINE CALL	750	@GSBS			699

Н

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
HEX	ASCII TO HEX	162	@HEX			405
HKY	HEXADECIMAL KEY INPUT	212				814
HMS	SECONDS TO HOURS	066	@HMS			1015

ī

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
IEND	IF END	804				1070
IFEED	INTERRUPT FEEDING	892	@IFEED			780
IF NOT (oper- and)	IF NOT	802				1070
IF (input condition)	IF	802				1070
IF (operand)	IF	802				1070
IL	INTERLOCK	002				183

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
ILC	INTERLOCK CLEAR	003				183
INI	MODE CONTROL	880	@INI			730
INS\$	INS\$	657	@INS\$			1109
IORD	INTELLIGENT I/O READ	222	@IORD			839
IORF	I/O REFRESH	097	@IORF			794
IORS	ENABLE PERIPH- ERAL SERVICING	288				1058
IOSP	DISABLE PERIPH- ERAL SERVICING	287	@IOSP			1058
IOWR	INTELLIGENT I/O WRITE	223	@IOWR			842

J

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
JME	JUMP END	005				196
JME0	MULTIPLE JUMP END	516				202
JMP	JUMP	004				196
JMP0	MULTIPLE JUMP	515				202

K

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
KEEP	KEEP	011			!KEEP	162

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
LD	LOAD		@LD	%LD	!LD	140
LD <	LOAD LESS THAN	310				253
LD <\$	LOAD STRING LESS THAN	672				1111
LD <d< td=""><td>LOAD DOUBLE FLOATING LESS THAN</td><td>337</td><td></td><td></td><td></td><td>546</td></d<>	LOAD DOUBLE FLOATING LESS THAN	337				546
LD <dt< td=""><td>LOAD TIME LESS THAN</td><td>343</td><td></td><td></td><td></td><td>257</td></dt<>	LOAD TIME LESS THAN	343				257
LD <f< td=""><td>LOAD FLOATING LESS THAN</td><td>331</td><td></td><td></td><td></td><td>502</td></f<>	LOAD FLOATING LESS THAN	331				502
LD <>	LOAD NOT EQUAL	305				253
LD <>\$	LOAD STRING NOT EQUAL	671				1111
LD <>D	LOAD DOUBLE FLOATING NOT EQUAL	336				546
LD <>DT	LOAD TIME NOT EQUAL	342				257
LD <>F	LOAD FLOATING NOT EQUAL	330				502
LD <>L	LOAD DOUBLE NOT EQUAL	306				253
LD <>S	LOAD SIGNED NOT EQUAL	307				253
LD <>SL	LOAD DOUBLE SIGNED NOT EQUAL	308				253
LD <l< td=""><td>LOAD DOUBLE LESS THAN</td><td>311</td><td></td><td></td><td></td><td>253</td></l<>	LOAD DOUBLE LESS THAN	311				253
LD <s< td=""><td>LOAD SIGNED LESS THAN</td><td>312</td><td></td><td></td><td></td><td>253</td></s<>	LOAD SIGNED LESS THAN	312				253

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
LD <sl< td=""><td>LOAD DOUBLE SIGNED LESS THAN</td><td>313</td><td></td><td></td><td></td><td>253</td></sl<>	LOAD DOUBLE SIGNED LESS THAN	313				253
LD =	LOAD EQUAL	300				253
LD =\$	LOAD STRING EQUALS	670				1111
LD =D	LOAD DOUBLE FLOATING EQUAL	335				546
LD =DT	LOAD TIME EQUAL	341				257
LD =F	LOAD FLOATING EQUAL	329				502
LD =L	LOAD DOUBLE EQUAL	301				253
LD =S	LOAD SIGNED EQUAL	302				253
LD =SL	LOAD DOUBLE SIGNED EQUAL	303				253
LD >	LOAD GREATER THAN	320				253
LD >\$	LOAD STRING GREATER THAN	674				1111
LD >D	LOAD DOUBLE FLOATING GREATER THAN	339				546
LD >DT	LOAD TIME GREATER THAN	345				257
LD >F	LOAD FLOATING GREATER THAN	333				502
LD >L	LOAD DOUBLE GREATER THAN	321				253
LD >S	LOAD SIGNED GREATER THAN	322				253
LD >SL	LOAD DOUBLE SIGNED GREATER THAN	323				253
LD NOT	LOAD NOT				!LD NOT	140
LD TST	LOAD BIT TEST	350				152
LD TSTN	LOAD BIT TEST	351				152
LD <=	LOAD LESS THAN OR EQUAL	315				253
LD <=\$	LOAD STRING LESS THAN OR EQUAL	673				1111
LD <=D	LOAD DOUBLE FLOATING LESS THAN OR EQUAL	338				546
LD <=DT	LOAD TIME LESS THAN OR EQUAL	344				257
LD <=F	LOAD FLOATING LESS THAN OR EQUAL	332				502
LD <=L	LOAD DOUBLE LESS THAN OR EQUAL	316				253
LD <=S	LOAD SIGNED LESS THAN OR EQUAL	317				253
LD <=SL	LOAD DOUBLE SIGNED LESS THAN OR EQUAL	318				253
LD >=	LOAD GREATER THAN OR EQUAL	325				253
LD >=\$	LOAD STRING GREATER THAN OR EQUALS	675				1111
LD >=D	LOAD DOUBLE FLOATING GREATER THAN OR EQUAL	340				546
LD >=DT	LOAD TIME GREATER THAN OR EQUAL	346				257

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
LD >=F	LOAD FLOATING GREATER THAN OR EQUAL	334				502
LD >=L	LOAD DOUBLE GREATER THAN OR EQUAL	326				253
LD >=S	LOAD SIGNED GREATER THAN OR EQUAL	327				253
LD >=SL	LOAD DOUBLE SIGNED GREATER THAN OR EQUAL	328				253
LEFT\$	GET STRING LEFT	652	@LEFT\$			1092
LEN\$	STRING LENGTH	650	@LEN\$			1099
LEND NOT (operand)	LOOP END NOT	810				1084
LEND (input condition)	LOOP END	810				1084
LEND (operand)	LOOP END	810				1084
LIFO	LAST IN FIRST OUT	634	@LIFO			559
LINE	COLUMN TO LINE	063	@LINE			410
LMT	LIMIT CONTROL	680	@LMT			658
LOG	LOGARITHM	468	@LOG			498
LOGD	DOUBLE LOGARITHM	859	@LOGD			542
LOOP	LOOP	809				1084

M

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
MAX	FIND MAXIMUM	182	@MAX			588
MAXD	FIND DOUBLE MAXI- MUM FLOATING	178	@MAXD			597
MAXF	FIND MAXIMUM FLOATING	176	@MAXF			595
MAXL	DOUBLE FIND MAXI- MUM	174	@MAXL			592
MCMP	MULTIPLE COMPARE	019	@MCMP			267
MCRO	MACRO	099	@MCRO			693
MID\$	GET STRING MIDDLE	654	@MID\$			1095
MILC	MULTI-INTERLOCK CLEAR	519				187
MILH	MULTI-INTERLOCK DIFFERENTIATION HOLD	517				187
MILR	MULTI-INTERLOCK DIFFERENTIATION RELEASE	518				187
MIN	FIND MINIMUM	183	@MIN			588
MIND	FIND DOUBLE MINI- MUM FLOATING	179	@MIND			603
MINF	FIND MINIMUM FLOATING	177	@MINF			601
MINL	DOUBLE FIND MINI- MUM	175	@MINL			599
MLPX	DATA DECODER	076	@MLPX			391
MOV	MOVE	021	@MOV		!MOV	283
MOV\$	MOVE STRING	664	@MOV\$			1089
MOVB	MOVE BIT	082	@MOVB			288
MOVBC	MOVE BIT	568	@MOVBC			1130
MOVD	MOVE DIGIT	083	@MOVD			290

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
MOVF	MOVE FLOATING- POINT (SINGLE)	469	@MOVF			514
MOVL	DOUBLE MOVE	498	@MOVL			283
MOVR	MOVE TO REGISTER	560	@MOVR			304
MOVRW	MOVE TIMER/ COUNTER PV TO REGISTER	561				304
MSG	DISPLAY MESSAGE	046	@MSG			1005
MSKR	READ INTERRUPT MASK	692	@MSKR			717
MSKS	SET INTERRUPT MASK	690	@MSKS			711
MTIM	MULTI-OUTPUT TIMER	543				240
MTIMX	MULTI-OUTPUT TIMER	554				240
MTR	MATRIX INPUT	213				818
MVN	MOVE NOT	022	@MVN			286
MVNL	DOUBLE MOVE NOT	499	@MVNL			286

Ν

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
NASL	SHIFT N-BITS LEFT	580	@NASL			332
NASR	SHIFT N-BITS RIGHT	581	@NASR			335
NCDMV	PCU HIGH-SPEED POSITIONING	218	@NCDMV			832
NCDTR	PCU POSITIONING TRIGGER	219	@NCDTR			836
NEG	2'S COMPLEMENT	160	@NEG			387
NEGL	DOUBLE 2'S COM- PLEMENT	161	@NEGL			387
NEXT	FOR-NEXT LOOPS	513				205
NOP	NO OPERATION	000				182
NOT	NOT	520				149
NSFL	SHIFT N-BIT DATA LEFT	578	@NSFL			329
NSFR	SHIFT N-BIT DATA RIGHT	579	@NSFR			329
NSLL	DOUBLE SHIFT N- BITS LEFT	582	@NSLL			332
NSRL	DOUBLE SHIFT N- BITS RIGHT	583	@NSRL			335
NUM4	ASCII TO FOUR-DIGIT NUMBER	604	@NUM4			435
NUM8	ASCII TO EIGHT-DIGIT NUMBER	605	@NUM8			435
NUM16	ASCII TO SIXTEEN- DIGIT NUMBER	606	@NUM16			435

0

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
OR	OR		@OR	%OR	!OR	144
OR <	OR LESS THAN	310				253
OR <\$	OR STRING LESS THAN	672				1111
OR <>	OR NOT EQUAL	305				253
OR <>\$	OR STRING NOT EQUAL	671				1111

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
OR <>D	OR DOUBLE FLOAT- ING NOT EQUAL	336				546
OR <>DT	OR TIME NOT EQUAL	342				257
OR <>F	OR FLOATING NOT EQUAL	330				502
OR <>L	OR DOUBLE NOT EQUAL	306				253
OR <>S	OR SIGNED NOT EQUAL	307				253
OR <>SL	OR DOUBLE SIGNED NOT EQUAL	308				253
OR <d< td=""><td>OR DOUBLE FLOAT- ING LESS THAN</td><td>337</td><td></td><td></td><td></td><td>546</td></d<>	OR DOUBLE FLOAT- ING LESS THAN	337				546
OR <dt< td=""><td>OR TIME LESS THAN</td><td>343</td><td></td><td></td><td></td><td>257</td></dt<>	OR TIME LESS THAN	343				257
OR <f< td=""><td>OR FLOATING LESS THAN</td><td>331</td><td></td><td></td><td></td><td>502</td></f<>	OR FLOATING LESS THAN	331				502
OR <l< td=""><td>OR DOUBLE LESS THAN</td><td>311</td><td></td><td></td><td></td><td>253</td></l<>	OR DOUBLE LESS THAN	311				253
OR <s< td=""><td>OR SIGNED LESS THAN</td><td>312</td><td></td><td></td><td></td><td>253</td></s<>	OR SIGNED LESS THAN	312				253
OR <sl< td=""><td>OR DOUBLE SIGNED LESS THAN</td><td>313</td><td></td><td></td><td></td><td>253</td></sl<>	OR DOUBLE SIGNED LESS THAN	313				253
OR =	OR EQUAL	300				253
OR =\$	OR STRING EQUALS	670				1111
OR =D	OR DOUBLE FLOAT- ING EQUAL	335				546
OR =DT	OR TIME EQUAL	341				257
OR =F	OR FLOATING EQUAL	329				502
OR =L	OR DOUBLE EQUAL	301				253
OR =S	OR SIGNED EQUAL	302				253
OR =SL	OR DOUBLE SIGNED EQUAL	303				253
OR >	OR GREATER THAN	320				253
OR >\$	OR STRING GREATER THAN	674				1111
OR >D	OR DOUBLE FLOAT- ING GREATER THAN	339				546
OR >DT	OR TIME GREATER THAN	345				257
OR >F	OR FLOATING GREATER THAN	333				502
OR >L	OR DOUBLE GREATER THAN	321				253
OR >S	OR SIGNED GREATER THAN	322				253
OR >SL	OR DOUBLE SIGNED GREATER THAN	323				253
OR LD	OR LOAD					146
OR NOT	OR NOT				!OR NOT	144
OR TST	OR BIT TEST	350				156
OR TSTN	OR BIT TEST	351				156
OR <=	OR LESS THAN OR EQUAL	315				253
OR <=\$	OR STRING LESS THAN OR EQUALS	673				1111
OR <=D	OR DOUBLE FLOAT- ING LESS THAN OR EQUAL	338				546
OR <=DT	OR TIME LESS THAN OR EQUAL	344				257
OR <=F	OR FLOATING LESS THAN OR EQUAL	332				502
OR <=L	OR DOUBLE LESS THAN OR EQUAL	316				253

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
OR <=S	OR SIGNED LESS THAN OR EQUAL	317				253
OR <=SL	OR DOUBLE SIGNED LESS THAN OR EQUAL	318				253
OR >=	OR GREATER THAN OR EQUAL	325				253
OR >=\$	OR STRING GREATER THAN OR EQUALS	675				1111
OR >=D	OR DOUBLE FLOAT- ING GREATER THAN OR EQUAL	340				546
OR >=DT	OR TIME GREATER THAN OR EQUAL	346				257
OR >=F	OR FLOATING GREATER THAN OR EQUAL	334				502
OR >=L	OR DOUBLE GREATER THAN OR EQUAL	326				253
OR >=S	OR SIGNED GREATER THAN OR EQUAL	327				253
OR >=SL	OR DOUBLE SIGNED GREATER THAN OR EQUAL	328				253
ORG	ORIGIN SEARCH	889	@ORG			774
ORW	LOGICAL OR	035	@ORW			440
ORWL	DOUBLE LOGICAL OR	611	@ORWL			440
OUT	OUTPUT				!OUT	158
OUTB	SINGLE BIT OUTPUT	534	@OUTB		!OUTB	176
OUT NOT	OUTPUT NOT				!OUT NOT	158

Ρ

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
PID	PID CONTROL	190				640
PIDAT	PID CONTROL WITH AUTOTUNING	191				651
PMCR	PROTOCOL MACRO	260	@PMCR			848
PMCR2	PROTOCOL MACRO 2	264	@PMCR2			899
PRV	HIGH-SPEED COUNTER PV READ	881	@PRV			736
PRV2	COUNTER FRE- QUENCY CONVERT	883	@PRV2			742
PULS	SET PULSES	886	@PULS			755
PLS2	PULSE OUTPUT	887	@PLS2			757
PUSH	PUSH ONTO STACK	632	@PUSH			557
PWM	PULSE WITH VARI- ABLE DUTY FACTOR	891	@PWM			777
PWR	EXPONENTIAL POWER	840	@PWR			500
PWRD	DOUBLE EXPONEN- TIAL POWER	860	@PWRD			544

R

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
RAD	DEGREES TO RADI- ANS	458	@RAD			480
RADD	DOUBLE DEGREES TO RADIANS	849	@RADD			528
RECV	NETWORK RECEIVE	098	@RECV			939

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
RECV2	NETWORK RECEIVE 2	492	@RECV2			944
RET	SUBROUTINE RETURN	093				696
RGHT\$	GET STRING RIGHT	653	@RGHT\$			1092
RLNC	ROTATE LEFT WITH- OUT CARRY	574	@RLNC			321
RLNL	DOUBLE ROTATE LEFT WITHOUT CARRY	576	@RLNL			321
ROL	ROTATE LEFT	027	@ROL			319
ROLL	DOUBLE ROTATE LEFT	572	@ROLL			319
ROOT	BCD SQUARE ROOT	072	@ROOT			450
ROR	ROTATE RIGHT	028	@ROR			323
RORL	DOUBLE ROTATE RIGHT	573	@RORL			323
ROTB	BINARY ROOT	620	@ROTB			448
RPLC\$	REPLACE IN STRING	661	@RPLC\$			1101
RRNC	ROTATE RIGHT WITH- OUT CARRY	575	@RRNC			325
RRNL	DOUBLE ROTATE RIGHT WITHOUT CARRY	577	@RRNL			325
RSET	RESET		@RSET	%RSET	!RSET	170
RSORT	UNSIGNED ONE- WORD RECORD SORT	203	@RSORT			630
RSORT2	UNSIGNED TWO- WORD RECORD SORT	204	@RSORT2			634
RSORT4	UNSIGNED FOUR- WORD RECORD SORT	205	@RSORT4			637
RSRCH <	UNSIGNED ONE- WORD RECORD SEARCH LESS THAN	360	@RSRCH <			618
RSRCH <=	UNSIGNED ONE- WORD RECORD SEARCH LESS THAN OR EQUALS	361	@RSRCH <=			618
RSRCH =	UNSIGNED ONE- WORD RECORD SEARCH EQUALS	362	@RSRCH =			618
RSRCH >	UNSIGNED ONE- WORD RECORD SEARCH GREATER THAN	363	@RSRCH >			618
RSRCH >=	UNSIGNED ONE- WORD RECORD SEARCH GREATER THAN OR EQUALS	364	@RSRCH >=			618
RSRCH2 <	UNSIGNED TWO- WORD RECORD SEARCH LESS THAN	370	@RSRCH2 <			624
RSRCH2 <=	UNSIGNED TWO- WORD RECORD SEARCH LESS THAN OR EQUALS	371	@RSRCH2 <=			624
RSRCH2 =	UNSIGNED TWO- WORD RECORD SEARCH EQUALS	372	@RSRCH2 =			624
RSRCH2 >	UNSIGNED TWO- WORD RECORD SEARCH GREATER THAN	373	@RSRCH2 >			624

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
RSRCH2 >=	UNSIGNED TWO- WORD RECORD SEARCH GREATER THAN OR EQUALS	374	@RSRCH2 >=			624
RSRCH4 <	UNSIGNED FOUR- WORD RECORD SEARCH LESS THAN	380	@RSRCH4 <			627
RSRCH4 <=	UNSIGNED FOUR- WORD RECORD SEARCH LESS THAN OR EQUALS	381	@RSRCH4 <=			627
RSRCH4 =	UNSIGNED FOUR- WORD RECORD SEARCH EQUALS	382	@RSRCH4 =			627
RSRCH4 >	UNSIGNED FOUR- WORD RECORD SEARCH GREATER THAN	383	@RSRCH4 >			627
RSRCH4 >=	UNSIGNED FOUR- WORD RECORD SEARCH GREATER THAN OR EQUALS	384	@RSRCH4 >=			627
RSTA	MULTIPLE BIT RESET	531	@RSTA			172
RSTB	SINGLE BIT RESET	533	@RSTB		!RSTB	174
RXD	RECEIVE	235	@RXD			861
RXDU	RECEIVE VIA SERIAL COMMUNICATIONS UNIT	255	@RXDU			876

S

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
SA	STEP ACTIVATE	784	@SA			1138
SBN	SUBROUTINE ENTRY	092				696
SBS	SUBROUTINE CALL	091	@SBS			687
SCL	SCALING	194	@SCL			672
SCL2	SCALING 2	486	@SCL2			676
SCL3	SCALING 3	487	@SCL3			680
SDEC	7-SEGMENT DECODER	078	@SDEC			804
SDEL	STACK DATA DELETE	642	@SDEL			574
SE	STEP DEACTIVATE	785	@SE			1138
SEC	HOURS TO SECONDS	065	@SEC			1013
SEND	NETWORK SEND	090	@SEND			929
SEND2	NETWORK SEND 2	491	@SEND2			935
SET	SET		@SET	%SET	!SET	170
SETA	MULTIPLE BIT SET	530	@SETA			172
SETB	SINGLE BIT SET	532	@SETB		!SETB	174
SETR	SET RECORD LOCA- TION	635	@SETR			579
SFCON	SFC ON	789				1142
SFCOFF	SFC OFF	790				1142
SFCPRN	SFC PAUSE WITH NO RESET	791				1144
SFCPR	SFC PAUSE WITH RESET	793				1144
SFT	SHIFT REGISTER	010				307
SFTR	REVERSIBLE SHIFT REGISTER	084	@SFTR			309
SIGN	16-BIT TO 32-BIT SIGNED BINARY	600	@SIGN			389
SIN	SINE	460	@SIN			484
SIND	DOUBLE SINE	851	@SIND			532

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
SINQ	HIGH-SPEED SINE	475	@SINQ			487
SINS	STACK DATA INSERT	641	@SINS			571
SLD	ONE DIGIT SHIFT 074 @SLD				327	
SNUM	STACK SIZE READ	638	@SNUM			563
SNXT	STEP START	009				784
SPED	SPEED OUTPUT	885	@SPED			751
SQRT	SQUARE ROOT	466	@SQRT			494
SQRTD	DOUBLE SQUARE ROOT	857	@SQRTD			538
SRCH	DATA SEARCH	181	@SRCH			583
SRD	ONE DIGIT SHIFT RIGHT	075	@SRD			327
SREAD	STACK DATA READ	639	@SREAD			565
SSET	SET STACK	630	@SSET			554
STC	SET CARRY	040	@STC			1043
STEP	STEP DEFINE	008				784
STR4	FOUR-DIGIT NUM- BER TO ASCII	601	@STR4			432
STR8	EIGHT-DIGIT NUMBER TO ASCII	602	@STR8			432
STR16	SIXTEEN-DIGIT NUM- BER TO ASCII	603	@STR16			432
STUP	CHANGE SERIAL PORT SETUP	237	@STUP			896
SUM	SUM	184	@SUM			605
SWAP	SWAP BYTES	637	@SWAP			586
SWRIT	STACK DATA WRITE	640	@SWRIT			568

Т

Mnemonic Instruction		FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page	
TAN	TANGENT	462	@TAN			484	
TAND	DOUBLE TANGENT	853	@TAND			532	
TANQ	HIGH-SPEED TAN- GENT	477	@TANQ			487	
TCMP	TABLE COMPARE	085	@TCMP			269	
TIM	HUNDRED-MS TIMER					217	
TIMH	TEN-MS TIMER	015				221	
TIMHX	TEN-MS TIMER	551				221	
TIML	LONG TIMER	542				237	
TIMLX	LONG TIMER	553				237	
TIMU	TENTH-MS TIMER	541				228	
TIMUX	TENTH-MS TIMER	556				228	
TIMW	HUNDRED-MS TIMER WAIT	813				1076	
TIMWX	HUNDRED-MS TIMER WAIT	816				1076	
TIMX	HUNDRED-MS TIMER	550				217	
TKOF	TASK OFF	821	@TKOF			1116	
TKON	TASK ON	820	@TKON			1116	
TKY	TEN KEY INPUT	211	@TKY			811	
ТМНН	ONE-MS TIMER	540				225	
TMHHX	ONE-MS TIMER	552				225	
TMHW	TEN-MS TIMER WAIT	815				1081	
TMHWX	TEN-MS TIMER WAIT	817				1081	
TMUH	HUNDREDTH-MS TIMER	544				231	

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
TMUHX	HUNDREDTH-MS TIMER	557				231
TOCV	CONVERT ADDRESS TO CV	285	@TOCV			1055
TPO	TIME-PROPOR- TIONAL OUTPUT	685				665
TRSET	TIMER RESET	549	@TRSET			252
TRSM	TRACE MEMORY SAMPLING	045				1019
TSR	READ SET TIMER	780	@TSR			1140
TSW	SET STEP TIMER	781	@TSW			1140
TTIM	ACCUMULATIVE TIMER	087				234
TTIMX	ACCUMULATIVE TIMER	555				234
TWRIT	WRITE TEXT FILE	704	@TWRIT			1000
TXD	TRANSMIT	236	@TXD			855
TXDU	TRANSMIT VIA SERIAL COMMUNICA- TIONS UNIT	256	@TXDU			870

U

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
UP	CONDITION ON	521				150

W

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
WAIT NOT (operand)	ONE CYCLE AND WAIT NOT	805				1073
WAIT (input condition)	ONE CYCLE AND WAIT	805				1073
WAIT (operand)	ONE CYCLE AND WAIT	805				1073
WDT	EXTEND MAXIMUM CYCLE TIME	094	@WDT			1046
WSFT	WORD SHIFT	016	@WSFT			313

X

Mnemonic	Instruction FUN code		Upward Downward Differentiation		Immediate Refreshing Specification	Page
XCGL	DOUBLE DATA EXCHANGE	562	@XCGL			298
XCHG	DATA EXCHANGE	073	@XCHG			298
XCHG\$	EXCHANGE STRING	665	@XCHG\$			1105
XFER	BLOCK TRANSFER	070	@XFER			294
XFERC	BLOCK TRANSFER	565	@XFERC			1122
XFRB	MULTIPLE BIT TRANSFER	062	@XFRB			292
XNRL	DOUBLE EXCLUSIVE NOR	613	@XNRL			444
XNRW	EXCLUSIVE NOR	037	@XNRW			444
XORL	DOUBLE EXCLUSIVE OR	612	@XORL			442
XORW	EXCLUSIVE OR	036	@XORW			442

Z

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
ZCP	AREA RANGE COM- PARE	088				276
ZCPL	DOUBLE AREA RANGE COMPARE	116				276
ZCPS	SIGNED AREA RANGE COMPARE	117				280
ZCPSL	DOUBLE SIGNED AREA RANGE COM- PARE	118				280
ZONE	DEAD ZONE CON- TROL	682	@ZONE			663

Symbols

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
7SEG	7-SEGMENT DISPLAY OUTPUT	214				822
+	SIGNED BINARY ADD WITHOUT CARRY	400	@+			350
+\$	CONCATENATE STRING	656	@+\$			1090
++	INCREMENT BINARY	590	@++			338
++B	INCREMENT BCD	594	@++B			344
++BL	DOUBLE INCRE- MENT BCD	595	@++BL			344
++L	DOUBLE INCRE- MENT BINARY	591	@++L			338
+B	BCD ADD WITHOUT CARRY	404	@+B			354
+BC	BCD ADD WITH CARRY	406	@+BC			356
+BCL	DOUBLE BCD ADD WITH CARRY	407	@+BCL			356
+BL	DOUBLE BCD ADD WITHOUT CARRY	405	@+BL			354
+C	SIGNED BINARY ADD WITH CARRY	402	@+C			352
+CL	DOUBLE SIGNED BINARY ADD WITH CARRY	403	@+CL			352
+D	DOUBLE FLOATING- POINT ADD	845	@+D			525
+F	FLOATING-POINT ADD	454	@+F			476
+L	DOUBLE SIGNED BINARY ADD WITH- OUT CARRY	401	@+L			350
-	SIGNED BINARY SUBTRACT WITHOUT CARRY	410	@-			358
	DECREMENT BINARY	592	@			341
B	DECREMENT BCD	596	@B			347
−-BL	DOUBLE DECRE- MENT BCD	597	@BL			347
L	DOUBLE DECRE- MENT BINARY	593	@L			341
-В	BCD SUBTRACT WITHOUT CARRY	414	@-B			365
-BC	BCD SUBTRACT WITH CARRY	416	@-BC			368
-BCL	DOUBLE BCD SUB- TRACT WITH CARRY	417	@-BCL			368

Mnemonic	Instruction	FUN code	Upward Differentiation	Downward Differentiation	Immediate Refreshing Specification	Page
-BL	DOUBLE BCD SUB- TRACT WITHOUT CARRY		@-BL			365
-C	SIGNED BINARY SUB- TRACT WITH CARRY	412	@-C			362
-CL	DOUBLE SIGNED BINARY SUBTRACT WITH CARRY	413	@-CL			362
–D	DOUBLE FLOATING- POINT SUBTRACT	846	@-D			525
-F	FLOATING-POINT SUBTRACT	455	@-F			476
*	SIGNED BINARY MUL- TIPLY	420	@*			370
*B	BCD MULTIPLY	424	@*B			374
*BL	DOUBLE BCD MULTI- PLY	425	@*BL			374
*D	DOUBLE FLOATING- POINT MULTIPLY	847	@*D			525
*F	FLOATING-POINT MULTIPLY	456	@*F			476
*L	DOUBLE SIGNED BINARY MULTIPLY	421	@*L			370
*U	UNSIGNED BINARY MULTIPLY	422	@*U			372
*UL	DOUBLE UNSIGNED BINARY MULTIPLY	423	@*UL			372
-L	DOUBLE SIGNED BINARY SUBTRACT WITHOUT CARRY	411	@-L			358
/	SIGNED BINARY DIVIDE	430	@/			376
/B	BCD DIVIDE	434	@/B			380
/BL	DOUBLE BCD DIVIDE	435	@/BL			380
/D	DOUBLE FLOATING- POINT DIVIDE	848	@/D			525
/F	FLOATING-POINT DIVIDE	457	@/F			476
/L	DOUBLE SIGNED BINARY DIVIDE	431	@/L			376
/U	UNSIGNED BINARY DIVIDE	432	@/U			378
/UL	DOUBLE UNSIGNED BINARY DIVIDE	433	@/UL			378

Appendix C ASCII Code Table

ASCII

							F	our	leftr	nos	t bit	S		nii i		ų	Š.
		0	1	2	3	4	5	6	7	8	9	Α	В	Č	D	Ε	F
	0			Sp	0	@	P	*	р				. 100	タ	111		
	1			1	1	Α	Q	а	q			0	ア	Ŧ	4		
é	2			7.9	2	В	R	þ	ŗ			Γ	1	ツ	×		
	3			#	3	C	S	С	S		i L		ウ	テ	Ŧ		
10.0	4			\$	4	D	T	d	t				I	卜	ヤ	İ	
S	5			%	5	E	U	е	u			•	オ	ナ	ユ		
t bit	6			&	6	F	V	f	V			ヲ	カ	-	日		
mos	7			9	7	G	W	g	W			ア	丰	ヌ	ラ		
ight	8			(8	Н	Χ	h	Х			1	ク	ネ	リ		
Four rightmost bits	9)	9	I	Y	i	У			ウ	ケ	1	ル		
Ш	Α			*	:	J	Z	j	Z			エ	口	11	レ		
	В			+	;	Κ	[k	{			才	サ	E			
	C			,	<	L	¥	1	I			7	シ	フ	ワ		
Ž.	D				=	M		m	}			고	ス	$\overline{\ }$	ン		
	Ε	"			>	N	^	n	~		1	∃	七	ホ	*		
	F			/	?	0		0				ッ	ソ	マ	٥		

Index

Α	converting See also data, converting
addressing	converting memory addresses, 1051, 1055
counter numbers, 214	counters, 209–252
timer numbers, 214	example applications, 211
applications	execution times, 1152, 1179, 1207
precautions, xxxii	resetting with CNR(545), 250
ASCII	reversible counter, 247
converting ASCII to hexadecimal, 405	CPU Bus Units
converting from floating-point data, 505	refreshing, 800
converting hexadecimal to ASCII, 401	CS Series
converting to floating-point data, 510, 514	definition, vii
text string processing, 1087	CV-series PLCs
В	converting memory addresses, 1051, 1055
Ь	cycle time
Basic I/O Units	extending the maximum cycle time, 1046
Basic I/O Unit instructions, 100, 794–844	instruction execution times, 1147
bits	D
setting and resetting, 174	ט
block programs	data
block programming instructions, 115, 115–1086	converting
branching, 1070, 1073, 1076, 1079, 1081, 1084	Č
description, 1060–1063	radians and degrees, 480, 482, 528, 530
instruction execution times, 1170, 1197, 1221	searching, 583
pausing and restarting, 1066	data control instructions
pulsing and resulting, 1000	execution times, 1164, 1191, 1217
C	data files
C	reading, 989
checksum	writing, 994
calculating, 608	data format
checksum instructions, 549	floating-point data, 515
CJ Series	data shift instructions
definition, vii	execution times, 1155, 1182, 1209
	data tracing
clock	See also tracing
adding to clock time, 1008	debugging
clock instructions, 111, 1008–1057	debugging instructions, 112, 1019–1021
subtracting from clock time, 1008	failure diagnosis instructions, 113, 1022–1042
clock instructions	debugging instructions
execution times, 1169, 1196, 1220	execution times, 1169, 1196, 1220
communications	decrement instructions
description of serial communications, 845	execution times, 1156, 1183, 1210
instruction execution times, 1168, 1194, 1219	
network instruction execution times, 1168, 1195, 1220	degrees
receiving from RS-232C port, 861	converting degrees to radians, 480, 528
serial communications instructions, 104, 845–904	DM Area
transmitting from RS-232C port, 845, 855	using DM Area bits in execution conditions, 152
comparing tables, 745	Double-precision Floating-point Input Comparison
comparison, 745	Instructions, 546
comparison instructions	Double-precision Floating-point Instructions, 515
execution times, 1153, 1180	duty factor
Condition Flags	pulse with variable duty factor, 777
loading status, 1048	

saving status, 1048

E	execution times, 1160, 1187, 1214
–	frame checksum
EM Area	calculating, 608
using EM Area bits in execution conditions, 152	Group-2 High-density I/O Units
error log	refreshing with IORF(097), 796
preventing storage of user-defined errors, 1026	
errors	Н
codes	
programming, 1022, 1029	high-speed counter and pulse output instructions, 730
communications error flags, 871, 877	high-speed counting
fatal	reading the PV, 736, 742
clearing, 1029	
generating, 1029	I
messages	I/O memory address
programming, 1005	See also internal I/O memory address
non-fatal	increment instructions
clearing, 1022	execution times, 1156, 1183, 1210
generating, 1022	index registers
programming messages, 1005	setting a timer/counter PV address in an index register
user-programmed errors, 1022, 1029	304
execution condition	setting a word/bit address in an index register, 304
outputting, 176	input instructions
execution times, 1147, 1150, 1204–1226	execution times, 1151, 1177, 1205
exponents, 496, 540	installation
extra cyclic tasks, 1116	precautions, xxxii
ГС	instruction execution times, 1150–1202
F–G	instruction set
failure diagnosis instructions	7SEG(214), 822
execution times, 1170, 1196, 1221	DSW(210), 807
fatal operating errors	HKY(212), 814
generating and clearing, 1029	TKY(211), 811
file memory	instruction sets
file memory instructions, 109, 981–987	-(410), 358 (592), 341
instruction execution times, 1169, 1195, 1220	*(420), 370
file memory instructions	*B(424), 374
execution times, 1169, 1195, 1220	*BL(425), 374
FINS commands, 948	*D(847), 525
sending commands to local CPU Unit, 953	*F(456), 476, 525
flags	*L(421), 370
CY	*U(422), 372
clearing, 1043	*UL(423), 372
floating-point data, 467, 515	+\$(656), 1090
comparing, 502	+&(656), 1090 +(400), 350
comparison, 502	++(590), 338
conversion, 515	++B(594), 344
converting to ASCII, 505, 510, 514 division, 462	++BL(595), 344
double-precision floating-point instructions, 80	++L(591), 338
exponents, 496, 540	+B(404), 354
floating-point math instructions, 75, 467–501, 515–545	+BC(406), 356
format, 515	+BCL(407), 356
logarithms, 498, 542	+BL(405), 354
math functions, 515	+C(402), 352
square roots, 494, 538	+CL(403), 352 +D(845), 525
trigonometry functions, 515	+D(845), 525 +F(454), 476, 525
floating-point math instructions	11 (737), 710, 323

+L(401), 350	BAND(681), 660
/(430), 376	-BC(416), 368
/B(434), 380	BCD(024), 384
/BL(435), 380	BCDL(059), 384
/D(848), 525	BCDS(471), 419
/F(457), 476	-BCL(417), 368
/L(431), 376	BCMP(068), 271
/U(432), 378	BCMP2(502), 273
/UL(433), 378	BCNT(067), 465
<\$(672) , 1111	BCNTC(621), 1132
<=\$(673), 1111	BDSL(473), 419
<=D(338), 546	BEND(801), 1064
<=DT(344), 257	BIN(023), 382
<=F(332), 502	BIN GRAY(480), 430
\$\((671)\), 1111	BIN GRAYL(481), 430
	- ' ' '
◇D(336), 546	BINL(058), 382
<d(337), 546<="" td=""><td>BINS(470), 414</td></d(337),>	BINS(470), 414
<dt(343), 257<="" td=""><td>BISL(472), 414</td></dt(343),>	BISL(472), 414
<f(331), 502<="" td=""><td>-BL(415), 365</td></f(331),>	-BL(415), 365
=\$(670), 1111	BL(597), 347
=, <>, <, <=, >, >=(300), 253	BPPS(811), 1066
=, <>, <, <=, >, >=(328), 256	BPRG(096), 1064
=D(335), 546	BPRS(812), 1066
=DT(341), 257	BREAK(514), 208
=F(329), 502	BSET(071), 296
>\$(674), 1111	-C(412), 362
>=\$(675), 1111	CCL(283), 1048
>=D(340), 546	CCS(282), 1048
>=DT(346), 257	CJP(510), 199
>=F(334), 502	CJPN(511), 199
>D(339), 546	-CL(413), 362
>DT(345), 257	CLC(041), 1043
>F(333), 502	CLR\$(666), 1107
ACC(883), 766	CMND(490), 948
ACOS(464), 491, 535	CMND2(493), 956
ACOSD(855), 535	CMP(020), 261
AIDC(216), 826	CMPL(060), 261
AND, 142	CNR(545), 250
AND LD, 146	CNRX(547), 250
AND NOT, 142	CNT, 240, 244
AND TST(350), 154	CNTR(012), 247
AND TSTN(351), 154	CNTRX(548), 247
ANDL(610), 438	CNTW(814), 1079
ANDW(034), 438	CNTWX(818), 1079
AODC(217), 829	CNTX(546), 244
APR(069), 453	COLL(081), 302
ASC(086), 401	COLLC(567), 1127
ASFT(017), 311	COLM(064), 412
ASIN(463), 491, 535	COM(029), 446
ASIND(854), 535	COML(614), 446
ASL(025), 315	COS(461), 484–486, 532
ASLL(570), 315	COSD(852), 532
	* **
ASR(026), 317	COSQ(476), 487
ASRL(571), 317	CPS(114), 264
ATAND(856), 535	CPSL(115), 264
ATAND(856), 535	CTBL(882), 745
AVG(195), 683	-D(846), 525
-B(414), 365	DATE(735), 1017
B(596), 347	DBL(843), 523

DBLL(844), 523	GRET(752), 705
DEG(459), 482, 530	GRY(474), 423
DEGD(850), 530	GSBN(751), 705
DEL\$(658), 1103	GSBS(750), 699
DI(693), 726	HEX(162), 405
DIFD(014), 168–169	HKY(212), 814
using in interlocks, 184	HMS(066), 1015
using in jumps, 197, 201, 203	IEND(804), 1070
	IF NOT(802), 1070
DIFU(013), 166	IF(802), 1070
using in interlocks, 184	IFEED(892), 780
using in jumps, 197, 201, 203	IL(002), 183–195
DIM(631), 577	ILC(003), 183–195
DIST(080), 300	INI(880), 730
DISTC(566), 1124	1 17
DLNK(226), 800	INS\$(657), 1109
DMPX(077), 396	IORD(222), 839
Double-precision Floating-point Input Comparison	IORF(097), 794
Instructions (335 to 340), 515	IORS(288), 1058
DOWN(522), 150	IOSP(287), 1058
DSW(210), 807	IOWR(223), 842
DT(342), 257	JME(005), 196
ECHRD(723), 975	JME0(516), 202
ECHWR(724), 978	JMP(004), 196
EGATR(721), 966	JMP0(515), 202
EI(694), 728	KEEP(011), 162
ELSE(803), 1070	-L(411), 358
EMBC(281), 1044	L(593), 341
END(001), 181	LD, 140
ESATR(722), 971	LD NOT, 140
	LD TST(350), 152
EXIT NOT(806), 1068	LD TSTN(351), 152
EXIT(806), 1068	LEFT\$(652), 1092
EXP(467), 496	LEN\$(650), 1099
EXPD(858), 540	LEND NOT(810), 1084
EXPLT(720), 960	LEND(810), 1084
F(330), 502	LIFO(634), 559
-F(455), 476	LINE(063), 410
FAL(006), 1022	LMT(680), 658
FALS(007), 1029	LOG(468), 498
FDIV(079), 462	LOGD(859), 542
FIFO(633), 559	LOOP(809), 1084
FIND\$(660), 1097	MAX(182), 588
FIORF(225), 797	MAXD(178), 597
FIX(450), 472	MAXF(176), 595
FIXD(841), 521	MAXL(174), 592
FIXL(451), 472, 505, 521	
FIXLD(842), 521	MCMP(019), 267, 276, 280
FLT(452), 474	MCRO(099), 693
FLTL(453), 474	MID\$(654), 1095
FOR(512), 205	MILC(519), 187
FPD(269), 1035	MILH(517), 187
FREAD(700), 989	MILR(518), 187
FRMCV(284), 1051	MIN(183), 588
FSTR(448), 505	MIND(179), 603
FVAL(449), 510	MINF(177), 601
FWRIT(701), 994	MINL(175), 599
GETID(286), 1134	MLPX(076), 391
GETR(636), 581	MOV\$(664), 1089
GRAY BIN(478), 428	MOV(021), 283
GRAY BINL(479), 428	MOVB(082), 288
2	

MOVBC(568), 1130	RLNC(574), 321
MOVD(083), 290	RLNL(576), 321
MOVF(469), 514	ROL(027), 319
MOVL(498), 283	ROLL(572), 319
MOVR(560), 304	ROOT(072), 450
MOVRW(561060), 304	ROR(028), 323
MSG(046), 1005	RORL(573), 323
MSKR(692), 717	ROTB(620), 448
MSKS(690), 711	RPLC\$(661), 1101
MTIM(543), 240	RRNC(575), 325
MTIMX(554), 240	RRNL(577), 325
MTR(213), 818	RSET, 170
MVN(022), 286	RSORT(203), 630
MVNL(499), 286	RSORT2(204), 634
NASL(580), 332	RSORT4(205), 637
NASR(581), 335	RSRCH, 618, 618
NCDMV(218), 832	RSRCH=(362), 618
NCDTR(219), 836	RSRCH>(363), 618
NEG(160), 387	RSRCH>=(364), 618
NEGL(161), 387	RSRCH2, 624, 624
NEXT(513), 205	RSRCH2=(372), 624
NOP(000), 182	RSRCH2>(373), 624
NOT(520), 149	RSRCH2>=(374), 624
NSFL(578), 329	RSRCH4, 627, 627
NSFRL(579), 329	RSRCH4=(382), 627
NSLL(582), 332	RSRCH4>(383), 627
NSRL(583), 335	RSRCH4>=(384), 627
NUM16(606), 435	RSTA(531), 172–173, 176
NUM4(604), 435	RSTB(533), 174
NUM8(605), 435	RXD(235), 861
OR, 144	RXDU(255), 876, 888
OR LD, 146	SA(784), 1138
OR NOT, 144	SBN(092), 696, 705
OR TST(350), 156	SBS(091), 687, 699, 800
OR TSTN(351), 156	SCL(194), 672
ORG(889), 774	SCL2(486), 676
ORW(035), 440	SCL3(487), 680
ORWL(611), 440	SDEC(078), 804
OUT, 158	SDEL(642), 574
OUT NOT, 158	SE(785), 1138
OUTB(534), 176	SEC(065), 1013
PID(190), 640, 651, 1051, 1055, 1058	SEND(090), 929
PIDAT(191), 651	SEND2(491), 935
PLS2(887), 757	SET, 170
PMCR(260), 848	SETA(530), 172—173, 176
PMCR2(264), 899	SETB(532), 174
PRV(881), 736	SETR(635), 579
PRV2(883), 742	SFCOFF(790), 1142
PULS(886), 755	SFCON(789), 1142 SECRD(702), 1144
PUSH(632), 557	SFCPR(793), 1144 SFCPRN(791), 1144
PWM(891), 777 PWR(840), 500	SFT(010), 307
PWRD(860), 544	SFTR(084), 309
RAD(458), 480	SIN(460), 484, 487, 532
RADD(849), 528	SIND(851), 532
RECV(098), 939	SING(600), 389
RECV2(492), 944	Single-precision Floating-point Input Comparison
RET(093), 696	Instructions (329 to 334), 502
RGHT(653), 1092	SINQ(475), 487
V····/) ···	


SINS(641), 571	WSFT(016), 313
SLD(074), 327	XCGL(562), 298
SNUM(638), 563	XCHG\$(665), 1105
SNXT(009), 784	XCHG(073), 298
SPED(885), 751	XFER(070), 294
SQRT(466), 494, 538	XFERC(565), 1122
SQRTD(857), 538	XFRB(062), 292
SRCH(181), 583	XNRL(613), 444
SRD(075), 327	XNRW(037), 444
SREAD(639), 565	XORL(612), 442
SSET(630), 554	XORW(036), 442
STC(040), 1043	ZCP(088), 276
STEP(008), 784	ZCPL(116), 276
STR16(603), 432	ZCPS(117), 280
STR4(601), 432	ZCPSL(118), 280
STR8(602), 432	ZONE(682), 663
STUP(237), 896	instructions, 129–216
SUM(184), 605	Basic I/O Unit instructions, 100, 794–844
SWAP(637), 563, 565, 568, 571, 574, 586	block programming instructions, 115, 1060–1086
SWRIT(640), 568	clock instructions, 111, 1008–1057
TAN(462), 484, 487	comparison instructions, 47, 253-275
TAND(853), 532	controlling execution conditions
TANQ(477), 487	UP(521) and DOWN(522), 150
TCMP(085), 269	controlling high-speed counters and pulse outputs, 730
testing bit status, 152	conversion instructions, 64, 382–422
TIM(550), 217	counter instructions, 42, 209–252
TIMH(015), 221	data control instructions, 91, 640–685
TIMHX(551), 221	data movement instructions, 51, 283
TIML(542), 237	data shift instructions, 54, 307–334
TIMLX(553), 237	debugging instructions, 112, 1019–1021
TIMU(541), 228	decrement instructions, 58, 338–349
TIMUX(556), 228	
TIMW(813), 1076	display instructions, 111, 1005–1263
TIMWX(816), 1076	execution times, 1150, 1204
TIMX(550), 217	failure diagnosis instructions, 113, 1022–1042
TKOF(821), 1116	file memory, 981
TKON(820), 1116	file memory instructions, 109, 981–987
TMHH(540), 225	floating-point math instructions, 75, 467–501, 515–545
TMHHX(552), 225	high-speed counter instructions, 730
	increment instructions, 58, 338–349
TMHW(815), 1081	input comparison instructions, 253–256, 502, 546
TMHWX(817), 1081	instruction execution times, 1147
TMUH(544), 231	interrupt control instructions, 96, 708-729
TMUHX(557), 231	listed alphabetically, 1229
TOCV(285), 1055	logic instructions, 72, 438–447
TPO(685), 665	network instructions, 106, 905-955
TR, 160	number of steps, 1147
TRSET(549), 252	pulse output instructions, 730
TRSM(045), 1019	sequence control instructions, 38, 178–208
TSR(780), 1140	sequence input instructions, 33, 138–157
TSW(781), 1140	sequence output instructions, 35, 158–177
TTIM(087), 234	serial communications instructions, 104, 845-904
TTIMX(555), 234	SFC instructions, 1136
TWRIT(704), 1000	SFC task control instructions, 1137
TXD(236), 855	special math instructions, 74, 448–1133
TXDU(256), 870, 883	step control instructions, 1136
UP(521), 150	step instructions, 100, 783–793
WAIT NOT(805), 1073	steps per instruction, 1150, 1204
WAIT(805), 1073	
WDT(094), 1046	string comparison instructions, 1111–1115
1.2.2(0) 1)9 10 10	subroutine instructions, 95, 686–707

symbol math instructions, 59, 350–381 table data processing instructions, 80, 84, 549–610, 1161, 1188, 1215 task control instructions, 124–127, 1116–1119 text string processing instructions, 121, 1087–1115	floating-point subtraction, 476, 525 linear extrapolation, 454 logarithm, 498, 542 See also trigonometric functions special math instructions, 74, 448—1133
timer instructions, 42, 209–216	square root, 448, 450, 494, 538
tracking instructions, 89	symbol math instructions, 59, 350–1119
unsigned four-word record search instructions, 627 unsigned one-word record search instructions, 618	trigonometric functions, 453
unsigned two-word record search instruction, 624	maximum cycle time
interlocks, 183–196	extending, 1046
internal I/O memory address	Memory Cards Precautions, 985
setting a timer/counter PV address in an index register,	· ·
304 setting a word/bit address in an index register, 304	messages programming, 1005
interrupts clearing, 722	N
disabling all, 726	
enabling all, 728	network instructions
masking, 711	execution times, 1168, 1195, 1220
reading mask status, 717	networks
scheduled	network instructions, 106, 905–955
reading interval, 717	non-fatal operating errors generating and clearing, 1022
J	0
jumps, 196, 202	
CJP(510) and CJPN(511), 199	operating environment
(), (),	precautions, xxxii
L	output instructions execution times, 1151, 1177, 1205
ladder diagrams	В
controlling bit status	Р
using DIFU(013) and DIFD(014), 166-169	PC memory address
using KEEP(011), 162–165	See also internal I/O memory address
using SET and RSET, 170-171	peripheral servicing
using SETA(530) and RSTA(531), 172-173, 176	disabling, 1058
latching relays	enabling, 1058
using KEEP(011), 162	PID control, 640, 651, 1051, 1055, 1058
logarithm, 498, 542	power OFF interrupt processing
logic instructions	disabling, 726
execution times, 1159, 1186, 1214	power OFF interrupts, 726, 728
loops	precautions
BREAK(514), 208	applications, xxxii
FOR(512) and NEXT(513), 205	general, xxx operating environment, xxxii
M	safety, xxx
mathematics	programming converting programs, 1201, 1225
adding a range of words, 605	creating step programs, 783
averaging, 683	instruction execution times, 1150, 1204
exponents, 496, 540	pausing/restarting block programs, 1066
finding the maximum in a range, 588	preparing data in data areas, 296
finding the minimum in a range, 588	programming messages, 1005
floating-point addition, 476, 525	use of TR Bits, 160
floating-point division, 462, 476	protocol macro, 848
floating-point math instructions, 75, 467–501, 515–545	pulse outputs, 730
floating-point multiplication, 476, 525	

controlling, 730, 766	execution times, 1167, 1192–1193, 1218
_	step programs
R	creating, 783
	subroutine instructions
radians	execution times, 1165, 1191, 1218
converting radians to degrees, 482, 530	subroutines
range comparison, 276, 748	execution times, 1165, 1191, 1218
refreshing	symbol math instructions
differentiated refreshing instructions, 138	execution times, 1156, 1183, 1211
immediate refreshing instructions, 138	
with IORF(097), 794	T
resetting bits, 174	-
RS-232C port	task control instructions
receiving from RS-232C port, 861	execution times, 1172, 1199, 1224
transmitting from RS-232C port, 855	tasks
•	block programs within tasks, 1061
S	instruction execution times, 1172, 1199, 1224
sofoty processions	task control instructions, 124–127, 1116–1120
safety precautions See also precautions	text strings
	text string processing instructions, 121, 1087–1115
searching instructions, 549	time
self-maintaining bits	converting time notation, 1013, 1015
using KEEP(011), 163	timers, 209–252
sequence control instructions	block program delay timer, 1081
execution times, 1152, 1178, 1206	example applications, 211
serial communications	execution times, 1152, 1179, 1207
description, 845	resetting with CNR(545), 250
serial communications instructions	tracking instructions, 89, 611
execution times, 1168, 1194, 1219	trigonometric functions
setting bits, 174	arc cosine, 491, 535
seven-segment displays	arc sine, 491, 535
converting data, 804	arc tangent, 491, 535
SFC instructions, 1136	converting degrees to radians, 480, 528 converting radians to degrees, 482, 530
SFC task control instructions, 1137	cosine, 484, 487, 532
signed binary data	sine, 484, 487, 532
removing sign, 389	tangent, 484, 487, 532
simulating system errors, 1022, 1029	ungent, 101, 107, 332
Single-precision Floating-point Input Comparison	U–W
Instructions, 502	O-VV
Special I/O Units	unsigned four-word record search instructions, 627
reading Unit memory, 839	unsigned one-word record search instructions, 618
writing Unit memory, 842	unsigned two-word record search instructions, 624
speed outputs, 751	watchdog timer
square root	extending, 1046
BCD data, 450	extending, 1010
floating-point data, 494, 538	
signed binary data	
See also mathematics	
stack instructions, 549	
execution times, 1162, 1189, 1216	
stack processing	
execution times, 1162, 1189, 1216	
stacks	
stack instructions, 549	
step control instructions, 1136	
step instructions	

Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

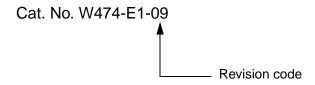

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

Revision code	Date	Revised content	
01	July 2008	Original production	
02	December 2008	Added the CJ-series CJ2 CPU Units (CJ2H-CPU6□) and corrected errors.	
03	February 2009	Added information on synchronous unit operation.	
04	July 2009	Added the following instructions: ANALOG INPUT DIRECT CONVER-SION(AIDC) and ANALOG OUTPUT DIRECT CONVERSION(AODC).	
05	September 2009	Added the following instructions: RECEIVE VIA SERIAL COMMUNICATIONS UNIT(DTXDU) and DIRECT TRANSMIT VIA SERIAL COMMUNICATIONS UNIT(DRXDU).	
06	October 2009	Added information on the EM Area force-set/reset function to the description of EMBC(281).	
07	February 2010	Added the CJ-series CJ2M CPU Units (CJ2M-CPU□□).	
		Added the following instructions.	
		Data Comparison Instructions: SIGNED AREA RANGE COMPARE (ZCPS) DOUBLE SIGNED AREA RANGE COMPARE (ZCPSL)	
		I/O Unit Instructions: PCU HIGH-SPEED POSITIONING (NCDMV) PCU POSITIONING TRIGGER (NCDTR)	
		Added information on the CJ2M CPU Units to the following instructions.	
		Interrupt Control Instructions	
		Data Comparison Instructions	
		Corrected mistakes.	
08	July 2010	Added INTERRUPT FEEDING (IFEED(892)) instruction.	
		 Added information on using High-Speed Counter and Pulse Output Instruc- tions with the CJ2M CPU Unit. 	
		Corrected mistakes.	
09	March 2012	Added information and made minor corrections.	

OMRON Corporation **Industrial Automation Company**

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands

Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. Olikron Asia Pacific PTE, ETD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2008 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Printed in Japan Cat. No. W474-E1-09