

USER'S MANUAL - Hardware Edition**FX3U SERIES PROGRAMMABLE CONTROLLERS****Main Unit**

FX3U-□MR/ES

Input/output powered extension unit

FX2N-□E□-□

Input/output extension block

FX2N-16E□-□

Special Adapter

FX3U-4HSX-ADP

Display Module

FX3U-7DM

Memory Cassette

FX3U-FLROM-□

FX^{3U}

Table of Contents

SAFETY PRECAUTIONS	(1)
---------------------------------	------------

Standards	15
Certification of UL, cUL standards	15
Compliance with EC directive (CE Marking)	16
Requirement for Compliance with EMC directive	16
Requirement for Compliance with LVD directive	18
Caution for compliance with EC Directive	18
1. Introduction	19
1.1 Introduction of Manuals	19
1.1.1 Classification of major components in this manual	19
1.1.2 Manual organization and position of this manual	21
1.1.3 List of manuals	22
1.2 Generic Names and Abbreviations Used in Manuals	27
2. Features and Part Names	29
2.1 Major Features	29
2.2 Names and Functions of Parts	31
2.2.1 Front Panel	31
2.2.2 Sides	33
3. Introduction of Products (Compliant with Overseas Standards)	34
3.1 List of Products (to be Connected) and Interpretation of Model Names	34
3.1.1 [A] Main units	35
3.1.2 [B] Input/output powered extension units	36
3.1.3 [C] Input/output extension blocks	37
3.1.4 [D] [E] Special function units/blocks	38
3.1.5 [F] Display modules and holder	39
3.1.6 [G] Expansion boards	39
3.1.7 [H] Special adapters	40
3.1.8 [I] Power supply unit	40
3.1.9 [J] Extension cables and connector conversion adapter [K] Battery [L] Memory cassettes	41
3.1.10 [M] FX Series terminal blocks (cables and connectors)	42
3.1.11 [N] Remote I/O	42
3.2 Connector Types and Cables for Program Communication	43
3.2.1 Programming tool	44
3.2.2 Communication cables	44
3.2.3 Converters and interface	45

4. Specifications, External Dimensions and Terminal Layout (Main Units)	46
4.1 Generic Specifications	46
4.1.1 Dielectric withstand voltage test and insulation resistance test	47
4.2 Power Supply Specifications	48
4.3 Input Specifications	49
4.3.1 24V DC Input (sink/source)	49
4.4 Output Specifications	50
4.4.1 Relay output	50
4.4.2 Life of relay output contact	51
4.5 Performance Specifications	52
4.6 External Dimensions (Weight and Installation)	55
4.6.1 FX3U-16MR/ES, FX3U-32MR/ES	55
4.6.2 FX3U-48MR/ES, FX3U-64MR/ES, FX3U-80MR/ES	55
4.7 Terminal Layout and Examples of Wiring	56
4.7.1 Interpretation	56
4.7.2 FX3U-16MR/ES	57
4.7.3 FX3U-32MR/ES	58
4.7.4 FX3U-48MR/ES	59
4.7.5 FX3U-64MR/ES	60
4.7.6 FX3U-80MR/ES	61
5. Programming Tool Applicability and Version Upgrade History	62
5.1 Version Upgrade History	62
5.1.1 Version check method	62
5.1.2 How to look at manufacturer's serial number	62
5.1.3 Version upgrade history	62
5.2 Programming Tool Applicability	63
5.2.1 Applicable versions of programming tool	63
5.2.2 In the case of programming tool (version) not applicable	63
5.2.3 Program transfer speed and programming tool	63
5.2.4 Cautions on write during RUN	64
5.3 Cautions on using transparent function by way of USB in GOT1000 Series	66
5.4 Cautions on using transparent port (2-port) function of GOT-F900 Series	67
6. Examination of System Configuration	68
6.1 Configuration of Whole System	68
6.1.1 List of system components	69
6.1.2 System configuration with special adapters	71
6.2 Rules of System Configuration	72
6.3 Number of Input/Output Points and Maximum Number of Input/Output Points	74
6.3.1 Calculation of number of input/output points	74
6.3.2 Maximum number of input/output points when CC-Link master is used	76
6.3.3 Maximum number of input/output points when AS-i master is used	77
6.4 Number of Connected Special Extension Devices (Including Extension Cable)	78
6.4.1 Expansion board and special adapter	78
6.4.2 Special function units/blocks	78
6.4.3 Extension cable	78
6.5 Expansion of Main Unit (Calculation of Current Consumption)	79
6.5.1 Quick reference matrix - when only input/output devices are added	79
6.5.2 When special extension devices are also added (calculation of current consumption)	80
6.6 Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)	83
6.6.1 Quick reference matrix (when only input/output devices are added)	83
6.6.2 When special extension devices are also added (calculation of current consumption)	85

6.7 Number of Input/Output (Occupied) Points and Current Consumption	87
6.7.1 [A] Main units	87
6.7.2 [B] Expansion boards	87
6.7.3 [C] Special adapters	88
6.7.4 [D] Input/output powered extension units/blocks	88
6.7.5 [E] Special extension devices	90
6.7.6 [G] Display module	91
6.8 Example of System Configuration and System Modification	92
6.8.1 Example system configuration	92
6.8.2 Expansion of main unit	93
6.8.3 Re-examination of suitability for configuration	96

7. Assignment of Input/Output Numbers (X/Y) and Unit Numbers	101
---	------------

7.1 Assignment of Input/Output Numbers (X/Y)	101
7.1.1 Concept of assigning	101
7.1.2 Example of assigning	102
7.1.3 Application of I/O number label	103
7.2 Unit Numbers of Special Function Units/Blocks	104
7.2.1 Concept of assigning	104
7.2.2 Example of assigning	105
7.2.3 Application of unit number labels	106

8. Installation In Enclosure	107
-------------------------------------	------------

8.1 Generic Specifications	110
8.2 Installation location	111
8.2.1 Installation location in enclosure	111
8.2.2 Spaces in enclosure	112
8.3 Layout in Enclosure	113
8.3.1 1-stage layout	113
8.3.2 2-stage layout	113
8.4 Examination for Installing Method in Enclosure	115
8.4.1 Installing methods	115
8.4.2 Cautions in examining installing method	115
8.4.3 Examples of installation	115
8.5 Procedures for Installing on and Detaching from DIN Rail	117
8.5.1 Preparation for installation	117
8.5.2 Installation of main unit	118
8.5.3 Installation of input/output powered extension unit/block and special function unit/block	119
8.5.4 Removal of main unit	119
8.6 Procedures for Installing Directly (with M4 Screws)	121
8.6.1 Hole pitches for direct mounting	121
8.6.2 Example of mounting hole pitches	123
8.6.3 Installation of main unit	124
8.6.4 Installation of input/output powered extension unit/block and special function unit/block	124
8.7 Connecting Methods for Main Unit and Extension Devices	125
8.7.1 Connection of extension devices	125
8.7.2 Connecting method A - connection of expansion board	126
8.7.3 Connecting method B - connection of special adapter	127
8.7.4 Connecting method C - connection of powered extension unit/block to main unit	127
8.7.5 Connecting method D - connection of powered extension units/blocks	128
8.7.6 Connecting method E - connection of extension cable and FX _{2N} -CNV-BC	129
8.7.7 Connecting method F - connection of input/output powered extension unit	129
8.7.8 Connecting method G - connection of extension block to input/output powered extension unit	130

9. Preparation for Wiring and Power Supply Wiring Procedures	131
9.1 Preparation for Wiring	133
9.1.1 Wiring procedures	133
9.2 Cable Connecting Procedures	134
9.2.1 Input/output terminal block (power supply and input/output wiring).....	134
9.2.2 Input/output connectors (FX2N input/output extension blocks)	136
9.2.3 Terminal block (for europe) [expansion board and special adapters].....	137
9.3 Power Supply Specifications.....	138
9.4 Grounding	139
9.5 Examples of External Wiring	140
9.5.1 Example of input/output wiring with 24V DC service power supply	140
9.5.2 Example of sink input [-common] wiring	141
9.5.3 Example of source input [+common] wiring.....	142
10. Input Wiring Procedures (Input Interruption and Pulse Catch)	143
10.1 Before Starting Input Wiring	145
10.1.1 Sink and source input (24V DC input type)	145
10.2 24V DC Input Type (Common to Sink/Source Input)	146
10.2.1 Input specifications (main unit)	146
10.2.2 Handling of 24V DC input	147
10.2.3 Instructions for connecting input devices.....	148
10.2.4 Examples of external wiring (sink input)	150
10.2.5 Example of external wiring (source input)	152
10.3 100V AC Input (Except Main Unit)	153
10.3.1 Input specifications	153
10.3.2 Handling of 100V AC Input.....	153
10.3.3 Example of external wiring	154
10.4 Input Interruption (I00□ to I50□) - With Delay Function	155
10.4.1 Allocation of pointers to input numbers (input signal ON/OFF duration)	155
10.4.2 Input interruption delay function	155
10.4.3 Cautions for input interruption	155
10.4.4 Examples of external wiring.....	156
10.5 Pulse Catch (M8170 to M8177)	157
10.5.1 Allocation of special memories to input numbers (ON duration of input signals)	157
10.5.2 Cautions for pulse catch	157
10.5.3 Examples of external wiring.....	158
11. Use of High-speed Counters (C235 to C255)	159
11.1 Outline.....	159
11.2 Input Specifications	160
11.2.1 High-speed input special adapter (FX3U-4HSX-ADP).....	160
11.2.2 Cautions in connecting mating device	160
11.3 Types of Counting and Operations	161
11.3.1 Classification according to counting method	161
11.3.2 Types and input signal forms.....	161
11.3.3 High-speed counter device notations	161
11.4 List of Device Numbers and Functions	162
11.5 Allocation of Device Numbers to Input Numbers	164
11.5.1 Allocation table	164
11.5.2 Inhibition of redundant use of input numbers	165
11.6 Handling of High-speed Counters	166
11.6.1 1-phase 1-count input.....	166
11.6.2 1-phase 2-count input.....	167
11.6.3 2-phase 2-count input.....	168

11.7 Timing of Updating of Current Value and Comparison of Current Value	169
11.7.1 Timing of updating of current value	169
11.7.2 Comparison of current value	169
11.8 Conditions for Hardware Counter to be Handled as Software Counter	170
11.8.1 Conditions under which counters are handled as software counters	170
11.8.2 Method of confirming operation status of counters	170
11.9 Calculation of Response Frequency and Overall Frequency	171
11.9.1 Response frequencies of hardware counters	171
11.9.2 Response frequencies and overall frequency of software counters	171
11.10 Examples of External Wiring (Rotary Encoder)	174
11.10.1 1-phase 1-input [C235 to C245]	174
11.10.2 2-phase 2-input [C251 to C255]	175
11.10.3 Cautions for the other side device	176
11.11 Related Devices and Function Switching Procedures	177
11.11.1 Related devices	177
11.11.2 [Function switching] switching of logic of external reset input signal	179
11.11.3 [Function switching] switching of allocation and functions of input terminals	179
11.11.4 [Function switching] procedures for using 2-phase 2-count input counters C251 to C255 in 4 edge count mode	180

12. External Wiring Procedures

181

12.1 Sink and Source Output (Transistor)	183
12.2 External Wiring for Relay Output	184
12.2.1 Output specifications (main unit)	184
12.2.2 Contact life of relay output contact	185
12.2.3 Handling of relay output	185
12.2.4 Cautions on external wiring	186
12.2.5 Example of external wiring	187
12.3 External Wiring of Transistor Output (Sink/Source) Type	188
12.3.1 Handling of transistor output	188
12.3.2 External wiring precautions	189
12.3.3 Example of external wiring	191
12.4 External Wiring for Triac (SSR) Output Type	193
12.4.1 Handling of triac output	193
12.4.2 External wiring precautions	194
12.4.3 Example of external wiring	195

13. Examples of Wiring for Various Uses

196

13.1 Notes about Examples of Wiring	197
13.2 Digital Switch [DSW Instructions (FNC72)/BIN Instructions (FNC19)]	198
13.2.1 When DSW instructions are used	198
13.2.2 When BIN instructions are used	200
13.3 10-key Input [TKY Instructions (FNC70)]	201
13.4 16-key Input [HKY Instructions (FNC71)]	202
13.5 Matrix Input [MTR Instructions (FNC52)]	204
13.6 7-segment Display [SEGL Instructions (FNC74)/BCD Instructions (FNC18)]	206
13.6.1 When SEGL instructions are used	206
13.6.2 When BCD instructions are used	207

14. Test Operation, Adjustment, Maintenance and Troubleshooting 208

14.1 Preparation for Test Operation.....	209
14.1.1 Preliminary inspection [power OFF]	209
14.1.2 Connection to built-in programming connector	209
14.1.3 Writing of program and program check [power ON and PLC stopped]	210
14.2 Running and Stopping Procedures [Power ON].....	211
14.2.1 Methods of running and stopping	211
14.2.2 Use of several running/stopping methods	212
14.3 Operation and Test [Power ON and PLC Running]	213
14.3.1 Self-diagnostic function	213
14.3.2 Test functions	213
14.3.3 Program modification function	214
14.4 Maintenance and Periodic Inspection	215
14.4.1 Procedures for checking model name	215
14.4.2 Periodic inspection - battery life, etc.	215
14.4.3 Maintenance - life of relay contacts	216
14.4.4 Procedures for replacing battery	216
14.5 Troubleshooting with LEDs	217
14.5.1 POWER LED [on/flashing/off].....	217
14.5.2 BATT LED [on/off]	217
14.5.3 ERROR LED [on/flashing/off]	218
14.6 Judgment by Error Codes and Representation of Error Codes	219
14.6.1 Operation and check on display module (FX3U-7DM)	219
14.6.2 Operation and check by GX developer.....	220
14.6.3 Representation of errors	221
14.6.4 Error Code List and Action	222
14.7 Troubleshooting	228
14.7.1 Output does not operate (main unit and input/output extension blocks)	228
14.7.2 24V DC input does not operate (main unit and input/output extension blocks).....	228
14.7.3 Cautions in registering keyword	229

15. FX2N-32/48E*-* (Input/Output Powered Extension Units) 230

15.1 Outline.....	232
15.1.1 Product configuration.....	232
15.1.2 Product list.....	232
15.2 Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)	233
15.2.1 Weight, accessories, etc.....	233
15.2.2 Part names	234
15.3 FX2N-32ER-ES/UL and FX2N-48ER-ES/UL	236
15.3.1 Product specifications.....	236
15.3.2 External dimensions	237
15.3.3 Terminal layout.....	238
15.3.4 Examples of wiring	239
15.4 FX2N-32ET-ESS/UL, FX2N-48ET-ESS/UL.....	240
15.4.1 Product specifications.....	240
15.4.2 External dimensions	241
15.4.3 Terminal layout.....	242
15.4.4 Examples of wiring	243
15.5 FX2N-32ER, FX2N-48ER.....	244
15.5.1 Product specifications.....	244
15.5.2 External dimensions	245
15.5.3 Terminal layout.....	246
15.5.4 Examples of wiring	246
15.6 FX2N-32ET, FX2N-48ET.....	248
15.6.1 Product specifications.....	248
15.6.2 External dimensions	249
15.6.3 Terminal layout.....	250
15.6.4 Examples of wiring	251

15.7 FX2N-32ES.....	252
15.7.1 Product specifications.....	252
15.7.2 External dimensions	253
15.7.3 Terminal layout.....	254
15.7.4 Examples of Wiring	254
15.8 FX2N-48ER-UA1/UL.....	255
15.8.1 Product specifications.....	255
15.8.2 External dimensions	256
15.8.3 Terminal layout.....	257
15.8.4 Examples of wiring	257

16. FX2N-16E*-(Input/Output Extension Blocks)	258
--	------------

16.1 Outline.....	259
16.1.1 Product type	259
16.1.2 List of products	260
16.2 FX2N-16EX-ES/UL (24V DC Sink/Source Input)	261
16.2.1 Product specifications.....	261
16.2.2 Parts identification and terminal arrangement	262
16.2.3 External dimensions	262
16.2.4 Example of terminal arrangement	262
16.3 FX2N-16EX and FX2N-16EX-C (24V DC Input: 16 Points).....	264
16.3.1 Product specifications.....	264
16.3.2 Parts identification and terminal arrangement	265
16.3.3 External dimensions	265
16.3.4 Example of wiring	266
16.4 FX2N-16EXL-C (5V DC Input: 16 Points).....	267
16.4.1 Product specifications.....	267
16.4.2 Parts identification and terminal arrangement	268
16.4.3 External dimensions	268
16.4.4 Example of wiring	268
16.5 FX2N-16EYR-ES/UL (Relay Output: 16 Points).....	270
16.5.1 Product specifications.....	270
16.5.2 Parts identification and terminal arrangement	271
16.5.3 External dimensions	271
16.5.4 Example of wiring	271
16.6 FX2N-16EYT-ESS/UL (Transistor Output: 16 Points).....	272
16.6.1 Product specifications.....	272
16.6.2 Parts identification and terminal arrangement	273
16.6.3 External dimensions	273
16.6.4 Example of wiring	273
16.7 FX2N-16EYR (Relay Output: 16 Points)	274
16.7.1 Product specifications.....	274
16.7.2 Parts identification and terminal arrangement	275
16.7.3 External dimensions	275
16.7.4 Example of wiring	275
16.8 FX2N-16EYT and FX2N-16EYT-C (Transistor Output: 16 Points)	276
16.8.1 Product specifications.....	276
16.8.2 Parts identification and terminal arrangement	277
16.8.3 External dimensions	277
16.8.4 Example of wiring	278
16.9 FX2N-16EYS (Triac Output: 16 Points).....	280
16.9.1 Product specifications.....	280
16.9.2 Parts identification and terminal arrangement	281
16.9.3 External dimensions	281
16.9.4 Example of wiring	281

17. Other Extension Devices and Optional Units (External Dimensions and Terminal Arrangement)	282
--	------------

17.1 Special Function Units/Blocks	282
17.1.1 FX0N-3A	282
17.1.2 FX2N-2AD	282
17.1.3 FX2N-2DA	283
17.1.4 FX2N-4AD	283
17.1.5 FX2N-4DA	284
17.1.6 FX2N-4AD-PT	284
17.1.7 FX2N-4AD-TC	285
17.1.8 FX2N-5A	285
17.1.9 FX2N-2LC	286
17.1.10 FX2N-8AD	286
17.1.11 FX2N-1HC	287
17.1.12 FX2N-1PG(-E)	287
17.1.13 FX2N-10PG	288
17.1.14 FX2N-10GM	288
17.1.15 FX2N-20GM	289
17.1.16 FX2N-1RM(-E)-SET	290
17.1.17 FX2N-232IF	291
17.1.18 FX2N-32ASI-M	291
17.1.19 FX2N-64CL-M	292
17.1.20 FX2N-16CCL-M	292
17.1.21 FX2N-32CCL	293
17.1.22 FX2N-16LNK-M	293
17.2 Power Supply	294
17.2.1 FX2N-20PSU	294
17.3 Special Adapters	294
17.3.1 FX3U-4AD-ADP	294
17.3.2 FX3U-4DA-ADP	295
17.3.3 FX3U-4AD-PT-ADP	295
17.3.4 FX3U-4AD-TC-ADP	295
17.3.5 FX3U-232ADP	296
17.3.6 FX3U-485ADP	296
17.3.7 FX3U-4HSX-ADP	297
17.3.8 FX3U-2HSY-ADP	297
17.4 Expansion Board	298
17.4.1 FX3U-USB-BD	298
17.4.2 FX3U-232-BD	298
17.4.3 FX3U-422-BD	298
17.4.4 FX3U-485-BD	299
17.4.5 FX3U-CNV-BD	299
17.5 Connector Conversion Adapter	299
17.5.1 FX2N-CNV-BC	299
17.6 Interface Module	300
17.6.1 FX-232AWC-H	300
17.6.2 FX-USB-AW	300
17.7 Display Module	301
17.7.1 FX3U-7DM	301
17.7.2 FX3U-7DM-HLD	301

18. FX3U-7DM (Display Module)	302
--------------------------------------	------------

18.1 Description of Products (Introduction of Related Products)	303
18.2 Specifications	304
18.2.1 Display/switch specifications	304
18.2.2 Parts layout.....	304
18.2.3 External dimensions	304
18.3 Installation and Removal.....	305
18.4 Summary of Functions	306
18.5 Procedure for Accessing the Menu Screen from the Title Screen	307
18.5.1 Title screen.....	307
18.5.2 Top screen (time display)	307
18.5.3 Menu screen.....	307
18.6 Menu Structure.....	308
18.7 Monitor/Test Mode [Excluding User-Registered Devices].....	310
18.7.1 Relevant devices	310
18.7.2 Monitor mode operation.....	311
18.7.3 Monitor screen & status display.....	312
18.7.4 Test mode operation.....	314
18.7.5 Test mode operation notes.....	317
18.8 Monitor/Test Mode [User-Registered Devices]	318
18.8.1 Monitor mode operation.....	318
18.8.2 Test mode operation.....	319
18.9 Error Check	319
18.10 LANGUAGE (Menu Display Language Setting).....	320
18.10.1 Changing to japanese menus.....	320
18.10.2 Changing to english menus	321
18.10.3 D8302 changes by program & related devices.....	321
18.11 Contrast.....	322
18.12 Clock Menu (Current Time Setting).....	323
18.12.1 Current time setting procedure.....	323
18.12.2 Displaying the current time	324
18.12.3 Changing the current time's "Year" from 2-digit format	324
18.13 Entrycodes	325
18.13.1 Entry code types & levels	325
18.13.2 Level-specific restrictions screen list	326
18.13.3 Entry code storage	327
18.13.4 Screens requiring entry codes for access	327
18.13.5 Canceling an entry code.....	328
18.13.6 Enabling an entry code.....	329
18.14 Device All-Clear	329
18.14.1 Device all-clear operation.....	329
18.15 PLC Status	330
18.15.1 Display operation.....	330
18.15.2 PLC status display items	331
18.16 Scan Time (Scan Time Display).....	332
18.16.1 Scan time display operation	332
18.17 Cassette (Memory Cassette Transfers)	332
18.17.1 Transfer from internal RAM to memory cassette (Cassette → RAM).....	333
18.17.2 Transfer from memory cassette to internal RAM (Cassette ← RAM).....	334
18.17.3 Memory cassette & internal RAM consistency check (Cassette : RAM)	335
18.18 System Information (Restrictions From PLC).....	336
18.18.1 System information list	336
18.18.2 System information setting programexample	337
18.19 User (User-Registered Device Setting).....	338
18.19.1 System information - user-registered device setting	338
18.19.2 Precaution when setting 3 or fewer devices	338
18.19.3 Program example 1 (when 4 devices are displayed as user-registered devices)	339
18.19.4 Program example 2 (when 3 or fewer devices are displayed as user-registered devices)	340
18.19.5 Program example 3 (when 5 or more devices are displayed as user-registered devices)	341

18.20	Operation Button ON/OFF Information	343
18.20.1	Various applications	343
18.20.2	System information - operation button ON/OFF information	343
18.21	Specifying a Hexadecimal Current Value Display Format	344
18.21.1	System information - specifying a hexadecimal current value display format	344
18.21.2	Program example 1 (specifying a hexadecimal data display format)	344
18.21.3	Program example 2 (specifying a decadal data display format)	344
18.22	Display Screen Protect Function	345
18.22.1	Entry code & display screen protect function levels and corresponding restrictions	345
18.22.2	Relationship between entry code & display screen protect function	345
18.22.3	Entry code levels	346
18.22.4	System information - display screen protect function	346
18.22.5	Program example (screen protect function setting)	346
18.22.6	Pointers for using the display screen protect function	347
18.23	User Message Display Function	348
18.23.1	System information - user message display function	348
18.23.2	Shift JIS code arrangement precautions	348
18.23.3	Displaying a word device current value as a message	349
18.23.4	Program example 1 (user messages display switching)	349
18.23.5	Program example 2 ([+] / [-] buttons of user messages switching)	350
18.23.6	Program example 3 (user messages plus data display)	351
18.23.7	Character data input procedure	354
18.24	Operation Error Messages & Corrective Actions	357
18.24.1	When a "Fatal error occurred" message appears	358
18.25	Menu Display Characters - Japanese & English Display Character Correspondence Table ..	359

19. FX-16/32E*-*-TB (Terminal Block)

360

19.1	Overview	362
19.1.1	Product configuration	363
19.2	External Dimensions & Component Names	364
19.3	Terminal Arrangement	365
19.4	Installation Work	367
19.4.1	Mounting	367
19.4.2	Removal	367
19.4.3	Input/output cable connection	367
19.4.4	Connection to terminal block	368
19.5	FX-16E-TB, FX-32E-TB	369
19.5.1	Internal circuit	369
19.5.2	Example of input external wiring	370
19.5.3	Output external wiring	370
19.6	FX-16EX-A1-TB	371
19.6.1	Specifications	371
19.6.2	Internal circuit	372
19.6.3	Example of input external wiring	372
19.7	FX-16EYR-TB	373
19.7.1	Specifications	373
19.7.2	Internal circuit	374
19.7.3	Example of output external wiring	374
19.7.4	External wiring precautions	375
19.7.5	Operation life of relay output contact	376
19.8	FX-16EYT-TB, FX-16EYT-H-TB	377
19.8.1	Specifications	377
19.8.2	Internal circuit	378
19.8.3	Example of output external wiring	378
19.8.4	External wiring precautions	379
19.9	FX-16EYS-TB	380
19.9.1	Specifications	380
19.9.2	Internal circuit	381
19.9.3	Example of output external wiring	381
19.9.4	External wiring precautions	382

20. FX3U-FLROM-16/64/64L (Memory Cassette)	383
20.1 Specifications	383
20.1.1 Electrical specifications	383
20.1.2 Component names & external dimensions	383
20.2 Installation & Removal	384
20.2.1 Memory cassette installation	384
20.2.2 Memory cassette removal	385
20.3 Saved Data Content	386
20.4 PROTECT Switch	387
20.4.1 PROTECT switch setting	387
20.4.2 PROTECT switch operation	387
20.4.3 Precautions when setting and using the switch	387
20.5 Memory Cassette <-> PLC (RAM Memory) Transfers by Loader Function	388
20.5.1 Tool for pressing the [WR] and [RD] keys	388
20.5.2 Writing (WR: 64L → PLC)	388
20.5.3 Reading (RD: 64L ← PLC)	389
20.6 Transfers By Display Module Operation	389
20.7 Operation Precautions	389
21. FX3U-32BL (Battery)	390
21.1 Battery Purpose	390
21.2 Specifications	390
21.2.1 Differences between main unit's internal battery and the optional battery	390
21.3 Battery Handling	391
21.3.1 Battery life & replacement guidelines	391
21.3.2 Reading the date of manufacture	391
21.3.3 Special "battery low-voltage" device & notification program example	391
21.4 Battery-Free Operation	392
21.5 Battery Replacement	393
21.6 Battery Related Precautions	393
Appendix A: Operation of Special Devices (M8000 -, D8000 -)	394
Appendix A-1 Special Auxiliary Relay (M8000 to M8511)	394
Appendix A-2 Special Data Register (D8000 to D8511)	402
Appendix A-3 Analog special adapters [M8260 to M8299 and D8260 to D8299]	409
Appendix A-3-1 Special auxiliary relays (M8260 to M8299)	409
Appendix A-3-2 Special data registers (D8260 to D8299)	410
Appendix B: Instruction List	411
Appendix B-1 Basic Instructions	411
Appendix B-2 Step Ladder Instructions	411
Appendix B-3 Applied Instructions ... in Ascending Order of FNC Number	412
Appendix C: Character-code	416
Appendix C-1 ASCII Code Table	416

Warranty.....	419
Revised History	420

FX3U Series Programmable Controllers

User's Manual [Hardware Edition]

Manual number	JY997D16501
Manual revision	A
Date	7/2005

Foreword

This manual contains text, diagrams and explanations which will guide the reader in the correct installation, safe use and operation of the FX3U Series Programmable Controllers and should be read and understood before attempting to install or use the unit.

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

<p>This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.</p>
--

Outline Precautions

- This manual provides information for the use of the FX3u Series Programmable Controllers. The manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows;
 - 1) Any engineer who is responsible for the planning, design and construction of automatic equipment using the product associated with this manual should be of a competent nature, trained and qualified to the local and national standards required to fulfill that role. These engineers should be fully aware of all aspects of safety with regards to automated equipment.
 - 2) Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards required to fulfill that job. These engineers should also be trained in the use and maintenance of the completed product. This includes being completely familiar with all associated documentation for the said product. All maintenance should be carried out in accordance with established safety practices.
 - 3) All operators of the completed equipment should be trained to use that product in a safe and coordinated manner in compliance to established safety practices. The operators should also be familiar with documentation which is connected with the actual operation of the completed equipment.

Note: the term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.
- When combining this product with other products, please confirm the standard and the code, or regulations with which the user should follow. Moreover, please confirm the compatibility of this product to the system, machine, and apparatus with which a user is using.
- If in doubt at any stage during the installation of the product, always consult a professional electrical engineer who is qualified and trained to the local and national standards. If in doubt about the operation or use, please consult the nearest Mitsubishi Electric distributor.
- Since the examples indicated by this manual, technical bulletin, catalog, etc. are used as a reference, please use it after confirming the function and safety of the equipment and system. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.
- This manual content, specification etc. may be changed without a notice for improvement.
- The information in this manual has been carefully checked and is believed to be accurate; however, if you have noticed a doubtful point, a doubtful error, etc., please contact the nearest Mitsubishi Electric distributor.

Registration

- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Standards

Certification of UL, cUL standards

FX3U main units and FX2N input/output extension units/blocks supporting UL, cUL standards are as follows:

UL, cUL registration number : E95239

Models : MELSEC FX3U series manufactured

FX3U-★ ★ MR/ES

Where ★ ★ indicates:16,32,48,64,80

FX3U-232ADP FX3U-485ADP

FX3U-4AD-ADP FX3U-4DA-ADP FX3U-4AD-PT-ADP FX3U-4AD-TC-ADP

FX3U-4HSX-ADP FX3U-2HSY-ADP

Models : MELSEC FX2N series manufactured

FX2N-★ ★ ER-ES/UL FX2N-★ ★ ET-ESS/UL

Where ★ ★ indicates:32,48

FX2N-16EX-ES/UL FX2N-16EYR-ES/UL FX2N-16EYT-ESS/UL

FX2N-48ER-UA1/UL

Compliance with EC directive (CE Marking)

This note does not guarantee that an entire mechanical module produced in accordance with the contents of this note will comply with the following standards.

Compliance to EMC directive and LVD directive of the entire mechanical module should be checked by the user / manufacturer. For more details please contact to the local Mitsubishi Electric sales site.

Requirement for Compliance with EMC directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Electromagnetic Compatibility (89/336/EEC) when used as directed by the appropriate documentation.

Type : Programmable Controller (Open Type Equipment)

Models : MELSEC FX3U series manufactured

from May 1st, 2005 FX3U-★ ★MR/ES

Where ★ ★ indicates:16,32,48,64,80

FX3U-4HSX-ADP FX3U-2HSY-ADP

FX3U-FLROM-16 FX3U-FLROM-64L

FX3U-7DM

from June 1st, 2005 FX3U-232ADP FX3U-485ADP

FX3U-4AD-ADP FX3U-4DA-ADP FX3U-4AD-PT-ADP FX3U-4AD-TC-ADP

FX3U-232-BD FX3U-422-BD FX3U-485-BD FX3U-CNV-BD

FX3U-USB-BD

FX3U-FLROM-64

Standard		Remark
EN61131-2:2003	Programmable controllers - Equipment requirements and tests	Compliance with all relevant aspects of the standard. <ul style="list-style-type: none">• Radiated Emissions• Mains Terminal Voltage Emissions• RF immunity• Fast Transients• ESD• Conducted• Surge• Power magnetic fields

Models : MELSEC FX2N series manufactured

from July 1st, 1997 FX2N-★ ★ER-ES/UL FX2N-★ ★ET-ESS/UL
Where ★ ★ indicates:32,48
FX2N-16EX-ES/UL FX2N-16EYR-ES/UL FX2N-16EYT-ESS/UL
from August 1st, 1998 FX2N-48ER-UA1/UL

to March 31st, 2002 [compliance with EN50081-2 (EN61000-6-4) and EN50082-2]

from April 1st 2002: Above mentioned products [compliance with EN50081-2 (EN61000-6-4) and EN61131-2]

Standard		Remark
EN50081-2:1993 Electromagnetic compatibility EN61000-6-4:2001 - Generic emission standard Industrial environment		Compliance with all relevant aspects of the standard. <ul style="list-style-type: none">• Radiated Emissions• Mains Terminal Voltage Emissions
EN61131-2:1994 Programmable controllers /A11:1996 - Equipment requirements and tests /A12:2000		Compliance with all relevant aspects of the standard. <ul style="list-style-type: none">• RF Immunity• Fast Transients• ESD• Damped oscillatory wave
EN50082-2:1995 Electromagnetic compatibility - Generic immunity standard Industrial environment		Compliance with all relevant aspects of the standard. <ul style="list-style-type: none">• RF immunity• Fast Transients• ESD• Conducted• Power magnetic fields

Requirement for Compliance with LVD directive

The following products have shown compliance through direct testing (of the identified standards below) and design analysis (through the creation of a technical construction file) to the European Directive for Low Voltage (73/23/EEC) when used as directed by the appropriate documentation.

Type : Programmable Controller (Open Type Equipment)

Models : MELSEC FX3U series manufactured

from May 1st, 2005

FX3U-★ ★MR/ES

Where ★ ★ indicates:16,32,48,64,80

Standard	Remark
EN61131-2:2003 Programmable controllers - Equipment requirements and tests	The equipment has been assessed as a component for fitting in a suitable enclosure which meets the requirements of EN61131-2:2003

Models : MELSEC FX2N series manufactured

from July 1st, 1997

FX2N-★ ★ER-ES/UL

FX2N-★ ★ET-ESS/UL

Where ★ ★ indicates:32,48

FX2N-16EYR-ES/UL

from August 1st, 1998

FX2N-48ER-UA1/UL

to March 31st,2002 (compliance with IEC1010-1)

from April 1st 2002: Above mentioned products (compliance with EN61131-2)

Standard	Remark
IEC1010-1:1990 Safety requirements for electrical /A1:1992 equipment for measurement, control, and laboratory use - General requirements	The equipment has been assessed as a component for fitting in a suitable enclosure which meets the requirements of IEC 1010-1:1990+A1:1992
EN61131-2:1994 Programmable controllers /A12:1996 - Equipment requirements and tests /A11:2000	The equipment has been assessed as a component for fitting in a suitable enclosure which meets the requirements of EN61131-2:1994+A11:1996+A12:2000

Caution for compliance with EC Directive

1. Installation in Enclosure

Please use FX3U PLCs while installed in a shielded enclosure. PLCs are open type equipment and should be installed in enclosures when used. This is not only for the safety but for the shielding of noise. The effect of noise-shielding by enclosure is important.

2. Caution for Analog Products in use

The analog special adapters (FX3U-4AD-ADP, FX3U-4DA-ADP, FX3U-4AD-PT-ADP, FX3U-4AD-TC-ADP) have been found to be compliant to the European standards in the aforesaid manual and directive. However, for the very best performance from what are in fact delicate measuring and controlled output devices, Mitsubishi Electric would like to make the following points;

As analog devices are sensitive by nature, their use should be considered carefully. For users of proprietary cables (integral with sensors or actuators), these users should follow those manufacturers' installation requirements.

Mitsubishi Electric recommends that shielded cables be used. If NO other EMC protection is provided, users may experience temporary induced errors not exceeding +10%/-10% in very heavy industrial areas.

However, Mitsubishi Electric suggests that if adequate EMC precautions are followed with general good EMC practice for the users complete control system, users can expect errors as specified in this manual.

- Sensitive analog cables should not be laid in the same trunking or cable conduit as high voltage cabling. Where possible, users should run analog cables separately.
- Good cable shielding should be used. When terminating the shield at Earth - ensure that no earth loops are accidentally created.
- When reading analog values, EMC induced errors can be smoothed out by averaging the readings. This can be achieved either through functions on the analog special adapters or through a user's program in the FX3U Series PLC main unit.

1. Introduction

This manual explains the procedures for selecting the system components, main unit specifications and procedures for installing the main unit, specifications for the input/output powered extension units/blocks, and procedures for adding input/output devices, and procedures for operating the display module etc. FX3U PLCs can make various kinds of control in combination with the main unit functions and many extension devices (expansion board, special adapters and special function units/blocks). The detailed explanation of the sequence instructions, communication control, analog control and positioning control are given in separate manuals.

→ For information on manual organization, refer to subsection 1.1.2.

1.1 Introduction of Manuals

1.1.1 Classification of major components in this manual

1. Main unit (Chapter 1 to 14)

Division	Outline	Reference
Introduction of manuals	This chapter contains explanations of the procedures for obtaining the manuals and the abbreviations.	Chapter 1
Features and part names	This chapter contains explanations of the product features and the names and functions of the parts.	Chapter 2
Introduction of product	This chapter contains explanations of the structures for model names, extension products, and compliance to overseas standards.	Chapter 3
Specifications	This chapter contains explanations of the specifications for power supply and input/output, external dimensions and terminal block layout.	Chapter 4
Version information	This chapter contains explanation for upgrading of FX3U PLCs and information for the application of programming tools.	Chapter 5
System configuration	Procedure for determining whether or not a system configuration is possible. Extension device current consumption and configuration examples.	Chapter 6
Input/output No. and unit No. assignment	Input/output assignment procedure for input/output powered extension units/blocks, etc., and unit No. assignment procedure for special function unit/blocks.	Chapter 7
Installation	This chapter contains explanations for the panel layout and the procedures for installing with DIN rail or screws and how to connect extension devices.	Chapter 8
Electric wiring	This chapter contains explanations of the procedures for preparing for wiring, power supply specifications and instructions for wiring.	Chapter 9
Input wiring	This chapter contains explanations of the input specifications and instructions for wiring.	Chapter 10
High-speed counter	This chapter contains explanations of the procedures for using the high-speed counter (FX3U-4HSX-ADP) examples of programming.	Chapter 11
Output wiring	This chapter contains explanations for the output specifications and instructions for wiring.	Chapter 12
Examples of wiring for each use	This chapter contains explanations of the procedures for wiring input/output devices for main uses.	Chapter 13
Test operation, adjustment, maintenance and error check	This chapter contains explanations of the procedures for test operation and adjustment, maintenance and error check items and measures to be taken upon occurrence of error.	Chapter 14

2. Extension devices (Chapter 15 to 17)

Division	Outline	Reference
Input/output powered extension units	This chapter contains explanations for the input/output specifications, external dimensions and wiring examples for each product.	Chapter 15
Input/output extension blocks		Chapter 16
Extension products for special functions, such as analog control, positioning and communication	This chapter contains explanations for the external dimensions and terminal layout (For details, refer to the manual for each extension device).	Chapter 17

3. Optional products (Chapter 18 to 21)


Division	Outline	Reference
Display module	This chapter contains explanations of the specifications, external dimensions, mounting procedures and operating procedures for products, such as the display module and memory cassette.	Chapter 18
FX Series terminal blocks	This chapter contains explanations of the procedures for wiring FX-16/32E□-TB.	Chapter 19
Memory cassette	This chapter contains explanations of the specifications for the memory cassette and the installation procedures.	Chapter 20
Battery	This chapter contains explanations of the procedures for replacing the battery and detecting battery voltage drop.	Chapter 21

4. Others (Appendices A to C)

Division	Outline	Reference
List of special devices	This chapter contains an explanation list of the special auxiliary relays (M8000 to M8511) and special data registers (D8000 to D8511) (For details, refer to the programming manual.)	Appendix A
List of instructions	This chapter contains an explanation list of the basic instructions and applied instructions For details, refer to the programming manual.	Appendix B
List of character codes	This chapter contains an explanation list of the character codes that can be displayed on the display module (FX3U-7DM)	Appendix C

1.1.2 Manual organization and position of this manual

This manual describes detail on the hardware, including the system configuration, selection, installation and wiring. The instructions, communication control, analog control and positioning control are explained in separate manuals. Refer to the manuals as needed.

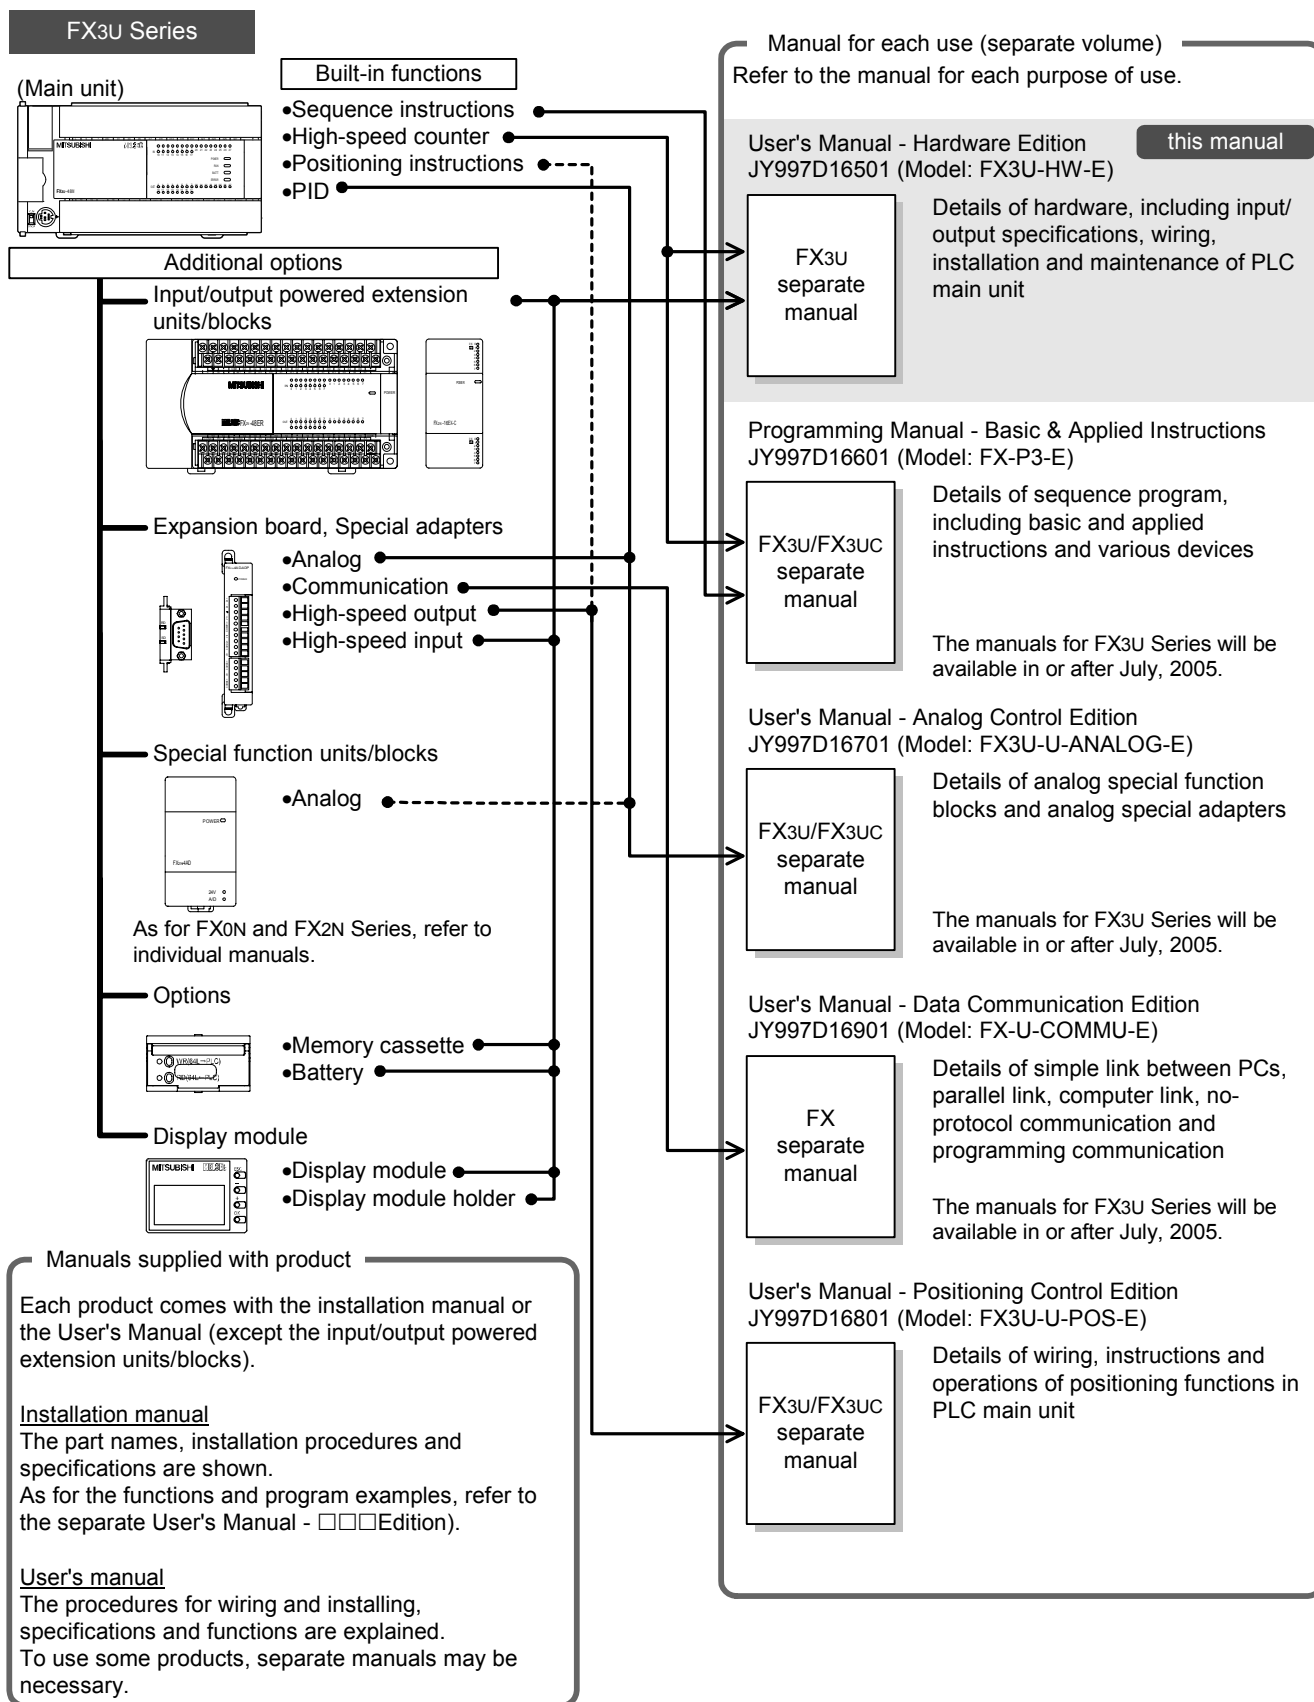

1.1.3 List of manuals

FX3U Series PLC main units supplied only with the hardware manual.

For the details of the hardware of FX3U Series, refer to this manual.

For instructions for programming and hardware information on special function devices, refer to the relevant manuals.

⊙: Indispensable manuals

✓: Manuals necessary for some purposes

△: Manuals with separate volumes for details

		Manual title	Manual number	Contents	Model name code
Manuals for PLC main unit					
■FX3U PLC main unit					
△	Supplied with product	FX3U Series HARDWARE MANUAL	JY997D18801	Extractions of descriptions of input/output specifications, wiring and installation of FX3U Series PLC main unit from FX3U Series User's Manual - Hardware Edition. For the detailed explanation, refer to this manual.	—
⊙	Separate volume	FX3U Series User's Manual - Hardware Edition (this manual)	JY997D16501	Details of hardware of FX3U Series PLC main unit, including input/output specifications, wiring, installation and maintenance	09R516
■Programming					
⊙	Separate volume	FX3U/FX3UC Series Programming Manual - Basic & Applied Instruction Edition	JY997D16601	Details of sequence programming for FX3U Series, including explanation for basic instructions, applied instructions and various devices	09R517
■FX Series terminal block					
✓	Supplied with product	FX INPUT AND OUTPUT TERMINAL BLOCKS USER'S GUIDE	JY992D50401	Procedures for handling FX Series terminal block	—
Manuals for communication control					
■Common					
✓	Separate volume	FX Series User's Manual - Data Communication Edition	JY997D16901	Details of simple link between PCs, parallel link, computer link and no-protocol communication (RS instructions, FX2N-232IF)	09R715
■RS-232C/RS-422/RS-485/USB/DoPa communication					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
△	Supplied with product	FX3U-USB-BD User's Manual	JY997D13501	System configuration of the USB communication expansion board and procedures for installing the driver. When using, refer also to FX Series User's Manual - Data Communication Edition.	—
△	Supplied with product	FX3U-232-BD Installation Manual	JY997D12901	Procedures for handling the RS-232C communication expansion board. When using, refer also to FX Series User's Manual - Data Communication Edition.	—
△	Supplied with product	FX3U-232ADP Installation Manual	JY997D13701	Procedures for handling the RS-232C communication special adapter. When using, refer also to FX Series User's Manual - Data Communication Edition.	—
△	Supplied with product	FX2N-232IF Hardware Manual	JY992D73501	Procedures for handling the RS-232C communication special function block. When using, refer also to FX Series User's Manual - Data Communication Edition.	—

- ⊙: Indispensable manuals
✓: Manuals necessary for some purposes
△: Manuals with separate volumes for details

		Manual title	Manual number	Contents	Model name code
△	Supplied with product	FX3U-422-BD Installation Manual	JY997D13101	Procedures for handling the RS-422 communication expansion board When using, refer also to FX Series User's Manual - Data Communication Edition.	—
△	Supplied with product	FX3U-485-BD Installation Manual	JY997D13001	Procedures for handling the RS-485 communication expansion board When using, refer also to FX Series User's Manual - Data Communication Edition.	—
△	Supplied with product	FX3U-485ADP Installation Manual	JY997D13801	Procedures for handling the RS-485 communication special adapter When using, refer also to FX Series User's Manual - Data Communication Edition.	—
✓	Supplied with product	FX-485PC-IF Hardware Manual	JY992D81801	Procedures for handling the RS-232C/RS-485 conversion interface When using, refer also to FX Series User's Manual - Data Communication Edition.	—
■CC-Link, CC-Link/LT, MELSEC I/O LINK, and AS-i system					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
△	Supplied with product	FX2N-16CCL-M Hardware Manual	JY992D93201	Procedures for handling the CC-Link master special function block When using, refer also to FX2N-16CCL-M User's Manual.	—
✓	Separate volume	FX2N-16CCL-M User's Manual	JY992D93101	Details of CC-Link master special function block	09R710
✓	Supplied with product	FX2N-32CCL User's Manual	JY992D71801	Procedures for handling the CC-Link remote device station special function block	09R711
✓	Supplied with product	Remote I/O station and remote device station for CC-Link	As for the CC-Link remote I/O station and remote device station, refer to the relevant manuals and related documents.		—
△	Supplied with product	FX2N-64CL-M User's Manual - Hardware Volume	JY997D05401	Procedures for handling the CC-Link/LT master special function block When using, refer also to FX2N-64CL-M User's Manual - Details.	—
✓	Separate volume	FX2N-64CL-M User's Manual - Detailed Volume	JY997D08501	Details of the CC-Link/LT master special function block	—
✓	Supplied with product	Remote I/O power supply adapter	As for the remote I/O station, power supply adapter and dedicated power supply for CC-Link/LT, refer to the relevant manuals and related documents.		—
✓	Supplied with product	FX2N-32ASI-M User's Manual	JY992D76901	Procedures for handling the AS-i system master special function block	—
✓	Supplied with product	FX2N-16LNK-M User's Manual	JY992D72101	Procedures for handling the MELSEC I/O LINK master special function block	09R703

- ⊙: Indispensable manuals
✓: Manuals necessary for some purposes
△: Manuals with separate volumes for details

		Manual title	Manual number	Contents	Model name code
Manuals for analog/temperature control					
■ Common					
✓	Separate volume	FX3U/FX3UC Series User's Manual - Analog Control Edition	JY997D16701	Details of analog special function block (FX3UC-4AD) and analog special adapter (FX3U-***-ADP)	09R619
■ Analog input, temperature input and temperature control					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
✓	Supplied with product	FX2N-2AD User's Guide	JY992D74701	Procedures for handling the 2-ch analog input special function block	—
✓	Supplied with product	FX3U-4AD-ADP User's Manual	JY997D13901	Procedures for handling the 4-ch analog input special adapter When using, refer also to FX3U/FX3UC Series User's Manual - Analog Control Edition.	—
✓	Supplied with product	FX2N-4AD User's Guide	JY992D65201	Procedures for handling the 4-ch analog input special function block	—
✓	Supplied with product	FX2N-8AD User's Manual	JY992D86001	Procedures for handling the 8-ch analog input special function block (to be used also for thermocouple input)	09R608
✓	Supplied with product	FX3U-4AD-PT-ADP User's Manual	JY997D14701	Procedures for handling the 4-ch Pt-100 temperature sensor input special adapter When using, refer also to FX3U/FX3UC Series User's Manual - Analog Control Edition.	—
✓	Supplied with product	FX2N-4AD-PT User's Guide	JY992D65601	Procedures for handling the 4-ch Pt-100 temperature sensor input special function block	—
✓	Supplied with product	FX3U-4AD-TC-ADP User's Manual	JY997D14801	Procedures for handling the 4-ch thermocouple input special adapter When using, refer also to FX3U/FX3UC Series User's Manual - Analog Control Edition.	—
✓	Supplied with product	FX2N-4AD-TC User's Guide	JY992D65501	Procedures for handling the 4-ch thermocouple input special function block	—
△	Supplied with product	FX2N-2LC User's Guide	JY992D85601	Procedures for handling the 2-ch temperature control special function block When using, refer to FX2N-2LC User's Manual.	—
✓	Separate volume	FX2N-2LC User's Manual	JY992D85801	Procedures for handling the 2-ch temperature control special function block	09R607
■ Analog output					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
✓	Supplied with product	FX2N-2DA User's Guide	JY992D74901	Procedures for handling the 2-ch analog output special function block	—
✓	Supplied with product	FX3U-4DA-ADP User's Manual	JY997D14001	Procedures for handling the 3-ch analog output special adapter When using, refer also to FX3U/FX3UC Series User's Manual - Analog Control Edition.	—

- ⊙: Indispensable manuals
✓: Manuals necessary for some purposes
△: Manuals with separate volumes for details

		Manual title	Manual number	Contents	Model name code
✓	Supplied with product	FX2N-4DA User's Guide	JY992D65901	Procedures for handling the 4-ch analog output special function block	—

■ Analog input/output (mixed)

When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.

✓	Supplied with product	FX0N-3A User's Guide	JY992D49001	Procedures for handling the 2-ch analog input and 1-ch analog output special function block	—
✓	Supplied with product	FX2N-5A User's Manual	JY997D11401	Procedures for handling the 4-ch analog input and 1-ch analog output special function block	09R616

Manuals for high-speed counter

■ High-speed counter

When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.

△	Supplied with product	FX3U-4HSX-ADP Installation Manual	JY997D16301	Procedures for handling the high-speed input special adapter	—
✓	Supplied with product	FX2N-1HC User's Guide	JY992D65401	Procedures for handling the 1-ch high-speed counter special function block	—

Manuals for positioning control

■ Common

✓	Separate volume	FX3U/FX3UC Series User's Manual - Positioning Control Edition	JY997D16801	Details of positioning functions of FX3U/FX3UC Series	09R620
---	-----------------	---	-------------	---	--------

■ Pulse output and positioning

When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.

△	Supplied with product	FX3U-2HSY-ADP Installation Manual	JY997D16401	Procedures for handling the high-speed output special adapter When using, refer also to FX3U/FX3UC Series User's Manual - Positioning Control Edition.	—
✓	Supplied with product	FX2N/FX-1PG User's Manual	JY992D65301	Procedures for handling the 1-axis pulse output special function block	09R610
△	Supplied with product	FX2N-10PG Installation Manual	JY992D91901	Procedures for handling the 1-axis pulse output special function block When using, refer to FX2N-10PG User's Manual.	—
✓	Separate volume	FX2N-10PG User's Manual	JY992D93401	Details of 1-axis pulse output special function block	09R611
△	Supplied with product	FX2N-10GM User's Guide	JY992D77701	Procedures for handling the 1-axis positioning special function unit When using, refer to FX2N-10GM/FX2N-20GM Handy Manual.	—
△	Supplied with product	FX2N-20GM User's Guide	JY992D77601	Procedures for handling the 2-axis positioning special function unit When using, refer to FX2N-10GM/FX2N-20GM Handy Manual.	—
✓	Separate volume	FX2N-10GM/FX2N-20GM Hardware/Programming Manual	JY992D77801	Procedures for handling the 1-axis/2-axis positioning special function unit	09R612

- ⊙: Indispensable manuals
✓: Manuals necessary for some purposes
△: Manuals with separate volumes for details

	Manual title	Manual number	Contents	Model name code	
■Programmable cam switch					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
✓	Supplied with product	FX2N-1RM-E-SET User's Manual	JY992D77101	Procedures for handling the programmable cam switch special function unit	09R614
Other manuals					
When using each product, refer also to the User's Manual - Hardware Edition for the PLC main unit to be installed.					
■Connector conversion					
△	Supplied with product	FX3U-CNV-BD Installation Manual	JY997D13601	Procedures for handling the conversion function expansion board for connectors for connecting communication and analog special adapters	—
■Battery (maintenance option)					
△	Supplied with product	FX3U-32BL Hardware Manual	JY997D14101	Battery life and handling procedures	—
■Display module					
△	Supplied with product	FX3U-7DM User's Manual	JY997D17101	Procedures for mounting and handling the display module	—
■Display module holder					
△	Supplied with product	FX3U-7DM-HLD User's Manual	JY997D15401	Procedures for mounting and handling the display module holder	—

1.2 Generic Names and Abbreviations Used in Manuals

Abbreviation/ generic name	Description
PLCs	
FX3U Series	Generic name for FX3U Series PLCs
FX2N Series	Generic name for FX2N Series PLCs
FX0N Series	Generic name for FX0N Series PLCs
FX3U PLCs or main units	Abbreviation of FX3U Series PLC main units
FX3UC PLCs or main units	Abbreviation of FX3UC Series PLC main units
Expansion boards	Generic name for the following models FX3U-USB-BD, FX3U-232-BD, FX3U-422-BD, FX3U-485-BD, FX3U-CNV-BD
Special adapters	Generic name for high-speed input-output special adapters, communication special adapters and analog special adapters
High-speed input/output special adapters	Generic name for the following models FX3U-4HSX-ADP, FX3U-2HSY-ADP
Communication special adapters	Generic name for the following models FX3U-232ADP, FX3U-485ADP
Analog special adapters	Generic name for the following models FX3U-4AD-ADP, FX3U-4DA-ADP, FX3U-4AD-PT-ADP, FX3U-4AD-TC-ADP
Extension devices	Generic name for FX2N Series extension devices, FX2NC Series extension devices and FX0N Series extension devices The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
FX2N Series extension devices	Generic name for FX2N Series input/output powered extension units, FX2N Series input/output extension blocks, FX2N Series special function units and FX2N Series special function blocks
FX0N Series extension devices	Generic name for FX0N Series special function block
Input/output extension devices	Generic name for FX2N Series input/output powered extension units, FX2N Series input/output extension blocks The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
FX2N Series input/output powered extension units	Generic name for the following models FX2N-32ER-ES/UL, FX2N-32ER, FX2N-32ES, FX2N-32ET-ESS/UL, FX2N-32ET, FX2N-48ER, FX2N-48ER-ES/UL, FX2N-48ET, FX2N-48ET-ESS-UL, FX2N-48ER-DS, FX2N-48ER-D, FX2N-48ET-DSS, FX2N-48ET-D, FX2N-48ER-UA1/UL The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
FX2N Series input/output extension blocks	Generic name for FX2N Series input extension blocks and FX2N Series output extension blocks
FX2N Series input extension blocks	Generic name for the following models FX2N-16EX-ES/UL, FX2N-16EX, FX2N-16EX-C, FX2N-16EXL-C
FX2N Series output extension blocks	Generic name for the following models FX2N-16EYR-ES/UL, FX2N-16EYR, FX2N-16EYT-ESS/UL, FX2N-16EYT, FX2N-16EYS, FX2N-16EYT-C
Special function blocks/units	Generic name for FX2N Series special function units, FX2N Series special function blocks and FX2NC Series special function blocks The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
FX3UC Series special function blocks	Generic name for the following models FX3UC-4AD
FX2N Series special function units	Generic name for the following models FX2N-10GM, FX2N-20GM, FX2N-1RM(-E)-SET

Abbreviation/ generic name	Description
FX2N Series special function blocks	Generic name for the following models FX2N-232IF, FX2N-16CCCL-M, FX2N-32CCL, FX2N-64CL-M, FX2N-16LNK-M, FX2N-32ASI-M, FX2N-2AD, FX2N-4AD, FX2N-8AD, FX2N-4AD-PT, FX2N-4AD-TC, FX2N-2LC, FX2N-2DA, FX2N-4DA, FX2N-5A, FX2N-1HC, FX2N-1PG(-E), FX2N-10PG The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
FX0N Series special function blocks	Generic name for the following models FX0N-3A
Memory cassettes	Generic name for the following models FX3U-FLROM-16, FX3U-FLROM-64 and FX3U-FLROM-64L
Battery	Abbreviation of model FX3U-32BL battery
FX Series terminal blocks	Generic name for the following models FX-16E-TB, FX-32E-TB, FX-16EX-A1-TB, FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB The devices that can be added depend on the main unit to be used. For applicable devices, refer to the User's Manual - Hardware Edition for the main unit to be used.
Extension cables	Generic name for the following models FX0N-30EC, FX0N-65EC
Input/output cables	Generic name for the following models FX-16E-500CAB-S, FX-16E-□□□CAB, FX-16E-□□□CAB-R, FX-A32E-□□□CAB 150, 300 or 500 is entered in □□□.
Connectors for input/output	Generic name for the following models FX2C-I/O-CON, FX2C-I/O-CON-S, FX2C-I/O-CON-SA
CC-Link master	Abbreviation of FX2N-16CCCL-M
Remote I/O stations	Remote stations that handle information in bit units only
Remote stations	Generic name for remote I/O stations and remote device stations
Power supply adapter	Unit to be connected to supply power to the CC-Link/LT system
Dedicated power supply	Power supply to be connected to supply power to the CC-Link/LT system
AS-i master	Abbreviation of model FX2N-32ASI-M AS-i system master block
Peripheral devices	Generic name for programming software, handy programming panel (HPP) and indicator
Programming tool	Generic name for programming software and handy programming panel (HPP)
Programming software	Generic name for GX Developer and FX-PCS/WIN (-E)
GX Developer	Abbreviation of programming software packages SW□D5C-GPPW-J and SW□D5C-GPPW-E
FX-PCS/WIN (-E)	Abbreviation of model FX-PCS/WIN and FX-PCS/WIN-E programming software packages
Handy programming panels (HPP)	Generic name for the following models FX-20P, FX-20P-E, FX-10P, FX-10P-E
RS-232C/RS-422 converters	Generic name for the following models FX-232AW, FX-232AWC, FX-232AWC-H
RS-232C/RS-485 converters	Abbreviation of FX-485PC-IF
Indicators	
GOT1000 Series	Generic name for GT15 and GT11
GOT-900 Series	Generic name for GOT-A900 Series and GOT-F900 Series
GOT-A900 Series	Generic name for GOT-A900 Series
GOT-F900 Series	Generic name for GOT-F900 Series
Manuals	
FX3U Hardware Edition	Abbreviation of FX3U Series User's Manual - Hardware Edition
Programming manual	Abbreviation of FX3U/FX3UC Series Programming Manual - Basic & Applied Instructions
Data Communication Edition	Abbreviation of FX Series User's Manual - Data Communication Edition
Analog Control Edition	Abbreviation of FX3U/FX3UC Series User's Manual - Analog Control Edition
Positioning Control Edition	Abbreviation of FX3U/FX3UC Series User's Manual - Positioning Control Edition

2. Features and Part Names

2.1 Major Features

1. Basic functions

[Up to 384 input/output points]

The number of input/output points (up to 256 points) wired directly to the PLC and remote input/output points (up to 256 points) on the network (CC-Link) can be increased to 384 points in total.

[Powered extension units/blocks that can be connected]

FX2N Series input/output powered extension units/blocks can be connected.
Up to 8 FX0N/FX2N Series special function units/blocks can be connected.
(Among FX0N Series, only FX0N-3A can be connected.)

[Program memory]

The PLC has a 64K-step RAM memory.
Use of the memory cassette enables the program memory to be used as flash memory.

[Operation instructions]

Various instructions, such as floating-point and character string processing instructions and scaling instructions, are provided.

[Built-in RUN/STOP switch]

The PLC can be started and stopped with the built-in switch.
RUN and STOP commands can be given to the PLC through a general-purpose input terminal or peripheral device.

[Writing during running]

The programming software for personal computer enables you to modify the program while the PLC is running.

[Built-in clock function]

The PLC has a clock function to control the time.

[Programming tool]

Use a version of GX Developer applicable to FX3U.

→ Refer to chapter 5 "Version Information and Application of Programming Tool" in this manual.

*For peripheral devices not applicable to FX3U Series, specify FX2N Series or FX2 Series for model selection, and you can program the

sequence. In this case, use instructions and devices within the ranges common to FX3U Series and the selected model of PLC.

[Remote debugging of program]

Use of programming software enables you to remotely transfer the program and monitor the PLC operation through a modem connected to the RS-232C expansion board and RS-232C communication special adapter.

2. Input/output high-speed processing functions of main unit

[High-speed counter function]

→ Refer to chapter 11 "Use of High-speed Counter (C235 to C255)" in this manual and Programming Manual.

- 1) Input terminals of main unit
 - Input of open collector transistor output
 - 1-phase 100 kHz x 6 points + 10 kHz x 2 points
 - 2-phase 50 kHz x 2 points
- 2) Input terminals of high-speed input special adapter (FX3U-4HSX-ADP)
 - Input of differential line driver
 - 1-phase 200 kHz x 8 points (when 2 units are connected)
 - 2-phase 100 kHz x 2 points (when 2 units are connected)

[Pulse catch function]

Signals with short ON width or OFF width can be captured without a complicated program.

→ Refer to chapter 10 "Input Wiring Procedures (Input Interruption and Pulse Catch)" in this manual and Programming Manual.

Input terminal	Signal ON/OFF width
X000 to X005	5μs
X006, X007	50μs

[Input interruption function (with delay function)]

Interruption routines can be processed preferentially by external signals with the minimum ON or OFF width of 5 μ s (X000 to X005).

(Timer interruption and high-speed counter interruption functions are also provided.)

→ **Refer to chapter 10 "Input Wiring Procedures (Input Interruption and Pulse Catch)" in this manual and Programming Manual.**

[Pulse output function]

When two high-speed output special adapters FX3U-2HSY-ADP (differential line driver output) are used, pulses of up to 200 kHz can be output simultaneously to four axes.

The programming can be performed easily with each instruction.

→ **Refer to Positioning Control Edition.**

[Various positioning instructions]

→ **Refer to Positioning Control Edition.**

Instruction	Description
DSZR	Mechanical zero return instruction with DOG search function
ABS	Instruction to read the current value from our servo amplifier with absolute position (ABS) detecting function
DRVI	Positioning (relative positioning) to specify the movement from the current position
DRVA	Positioning (absolute positioning) to specify the target position based on the current value 0
PLSV	Instruction to change the pulse train output frequency
DVIT	Positioning for fixed-feed interruption drive
TBL	Instruction for positioning based on batch setting of positioning operation, moving distance and speed

3. Display functions (display module)

FX3U-7DM Display Module (option) can be incorporated in the PLC.

The display module can be mounted on the panel by using the display module holder.

[Monitor/test function]

Devices can be monitored and tested by operating the buttons on the display module.

The button operations can be inhibited by the user program.

[Message display function]

User messages can be displayed on the display module by the user program.

[Other functions]

On the display module, you can set the time, adjust the contrast and display the PLC version and error codes.

4. Communication and network functions

The expansion board, special adapter and special function block for each communication function can be connected.

[Kinds of communication functions]

- Programming communication through RS-232C, RS-422 and USB
→ **Refer to Data Communication Edition.**
- Simple link between PCs
→ **Refer to Data Communication Edition.**
- Parallel link
→ **Refer to Data Communication Edition.**
- Computer link
→ **Refer to Data Communication Edition.**
- Inverter communication
→ **Refer to Data Communication Edition.**
- No-protocol communication through RS-232C/RS-485
→ **Refer to Data Communication Edition.**
- CC-Link
 - Master: FX2N-16CCL-M
 - Remote device station: FX2N-32CCL
 → **Refer to the manual for each product.**
- CC-Link/LT
 - Master: FX2N-64CL-M
 - Remote I/O station
 → **Refer to the manual for each product.**
- MELSEC I/O LINK
 - Master: FX2N-16LNK-M
 - Remote I/O station
 → **Refer to the manual for each product.**
- AS-i system
 - Master: FX2N-32ASI-M
 - Slave station
 → **Refer to the manual for each product.**

5. Analog functions

The special adapter and special function block for each analog function are connected.

→ **For information not given in Analog Control Edition, Refer to the manual for each product.**


[Kinds of analog functions]

- Voltage/current input
- Voltage/current output
- Temperature sensor input (thermocouple and platinum resistance thermometer sensor)
- Temperature control

2.2 Names and Functions of Parts

2.2.1 Front Panel

Factory default configuration (standard)

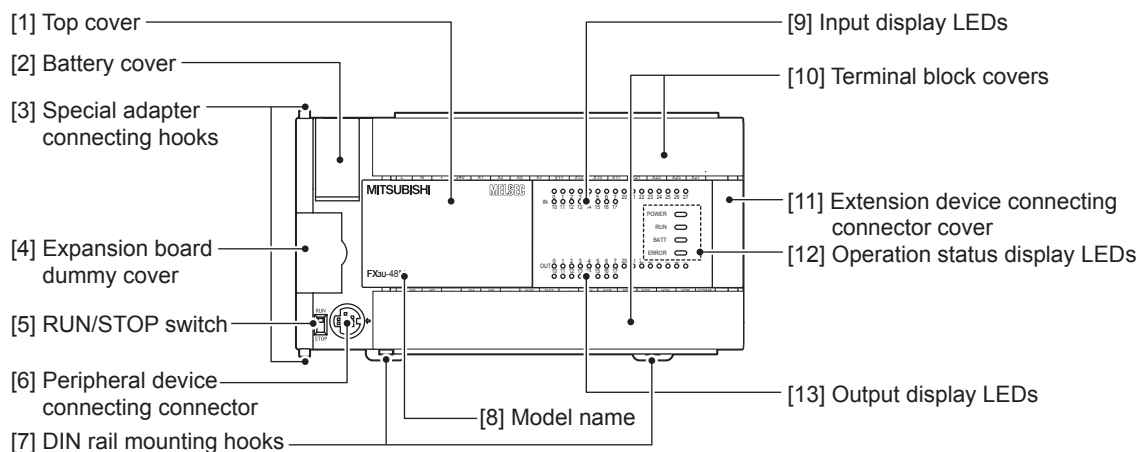

- | | |
|---|---|
| [1] Top cover | Mount the memory cassette under this cover.
When FX3U-7DM (display module) is used, replace this cover with the cover supplied with FX3U-7DM. |
| [2] Battery cover | The battery (standard accessory) is set under this cover. When replacing it with a new one, open this cover. |
| [3] Special adapter connecting hooks (2 places) | When connecting the special adapter, secure it with these hooks. |
| [4] Expansion board dummy cover | Remove this dummy cover, and mount an expansion board. |
| [5] RUN/STOP switch | To stop writing (batch) of the sequence program or operation, set the switch to STOP (slide it downward).
To start operation (run the machine), set it to RUN (slide it upward). |
| [6] Peripheral device connecting connector | Connect a programming tool to program a sequence.
→ For the details of applicable peripheral devices, refer to Chapter 5. |
| [7] DIN rail mounting hooks | The main unit can be installed on DIN46277 rail (35 mm (1.38") wide). |
| [8] Model name (abbreviation) | The model name of the main unit is indicated.
Check the nameplate on the right side for the model name. |
| [9] Input display LEDs (red) | When an input terminal (X000 or more) is turned on, the corresponding LED lights. |
| [10] Terminal block covers | The covers can be opened about 90° for wiring.
Keep the covers closed while the PLC is running (the unit power is on). |
| [11] Extension device connecting connector cover | Connect the extension cables of input/output powered extension unit/block or special function unit/block to the extension device connecting connectors under this cover.
FX2N Series extension devices and FX0N Series special extension devices can be connected.
→ For the details of the extension devices, refer to Chapter 15, Chapter 16 and Section 17.1. |

[12] **Operation status display LEDs**

The operation status of the PLC can be checked with the LEDs. The LEDs turn off, light and flash according to the following table.


→ For the details of the operation status, refer to Section 14.5.

LED name	Display color	Description
POWER	Green	On while power is on the PLC.
RUN	Green	On while the PLC is running.
BATT.V	Red	Lights when the battery voltage drops.
ERROR	Red	Flashing when a program error occurs.
	Red	Lights when a CPU error occurs.

[13] **Output display LEDs (red)**

When an output terminal (Y000 or more) is turned on, the corresponding LED lights.

When the terminal block covers are open

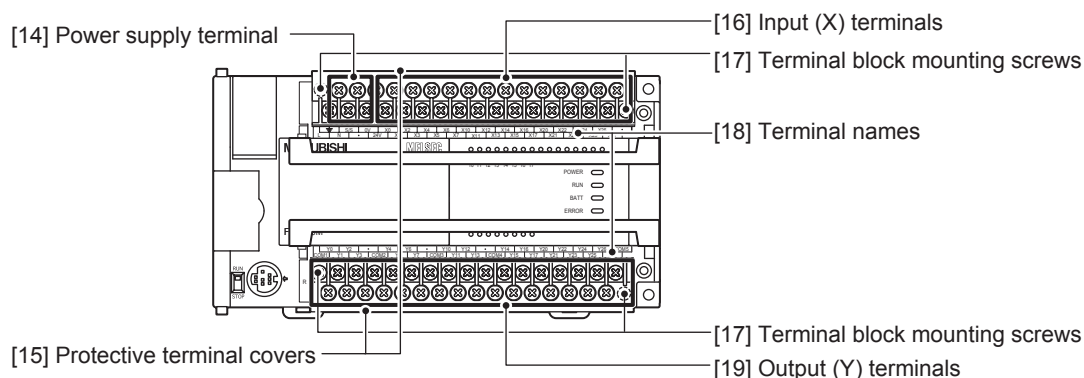

[14] **Power supply terminal**

Connect the power supply to the main unit.

[15] **Protective terminal covers**

A protective terminal cover (refer to the following drawing) is fitted to the lower stage of each terminal block. The cover prevents fingers from touching terminals, thereby improving the safety.



[16] **Input (X) terminals**

Wire switches and sensors to the terminals.

[17] **Terminal block mounting screws**

If the main unit must be replaced, loosen the screws (slightly loosen the left and right screws), and the upper part of the terminal block can be removed. (On FX3U-16M□, the terminal block cannot be removed.)


[18] **Terminal names**

The signal names for power supply, input and output terminals are shown.

[19] **Output (Y) terminals**

Wire loads (contactors, solenoid valves, etc.) to be driven to the terminals.

When the display module (FX3U-7DM) is installed

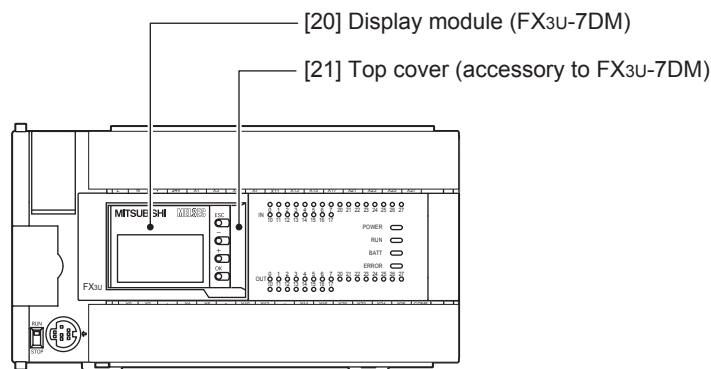


[20] **Display module (FX3U-7DM)**

The display module (option) can be installed.

[21] **Top cover (accessory to FX3U-7DM)**

A square hole is made so that the display module can be seen. Replace the original top cover with this cover.

2.2.2 Sides

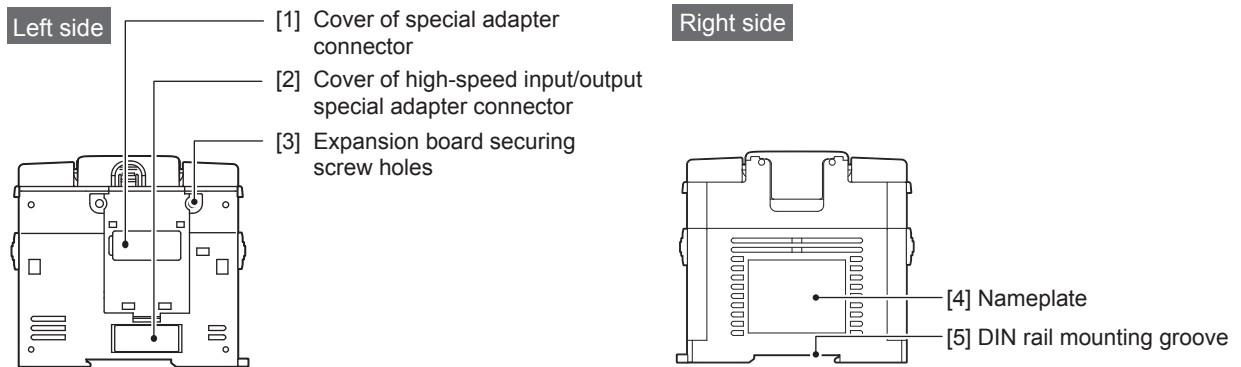

- [1] **Cover of special adapter connector**
- [2] **Cover of high-speed input/output special adapter connector**
- [3] **Expansion board securing screw holes (2 places)**
- [4] **Nameplate**


Remove this cover, and connect the 1st special adapter to the connector (when the expansion board is installed). When the expansion board is not installed, the connector is not provided.

Remove this cover, and connect the first high-speed input special adapter (FX3U-4HSX-ADP) or high-speed output special adapter (FX3U-2HSY-ADP) to the connector. When the communication/analog special adapter is connected, this connector is not used.

These holes are designed to secure the expansion board with screws (supplied with the expansion board). The expansion board dummy cover is fitted before shipment. Remove the dummy cover, and fit the board.

The product model name, control number and power supply specifications are shown.

Example: FX3U-48MR/ES (manufacturer's serial number: 570001)

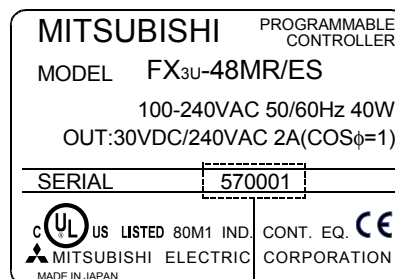

5 7 0 0 0 1

Control number
Month (Example: July): (1 to 9 = January to September, X = October, Y = November, Z = December)
Year (Example: 2005): Last digit of year


- [5] **DIN rail mounting groove**

The unit can be installed on DIN46277 rail (35 mm (1.38") wide).

3. Introduction of Products (Compliant with Overseas Standards)


3.1 List of Products (to be Connected) and Interpretation of Model Names

The following system configuration is classified into product groups A to N in the product introduction sections given below.

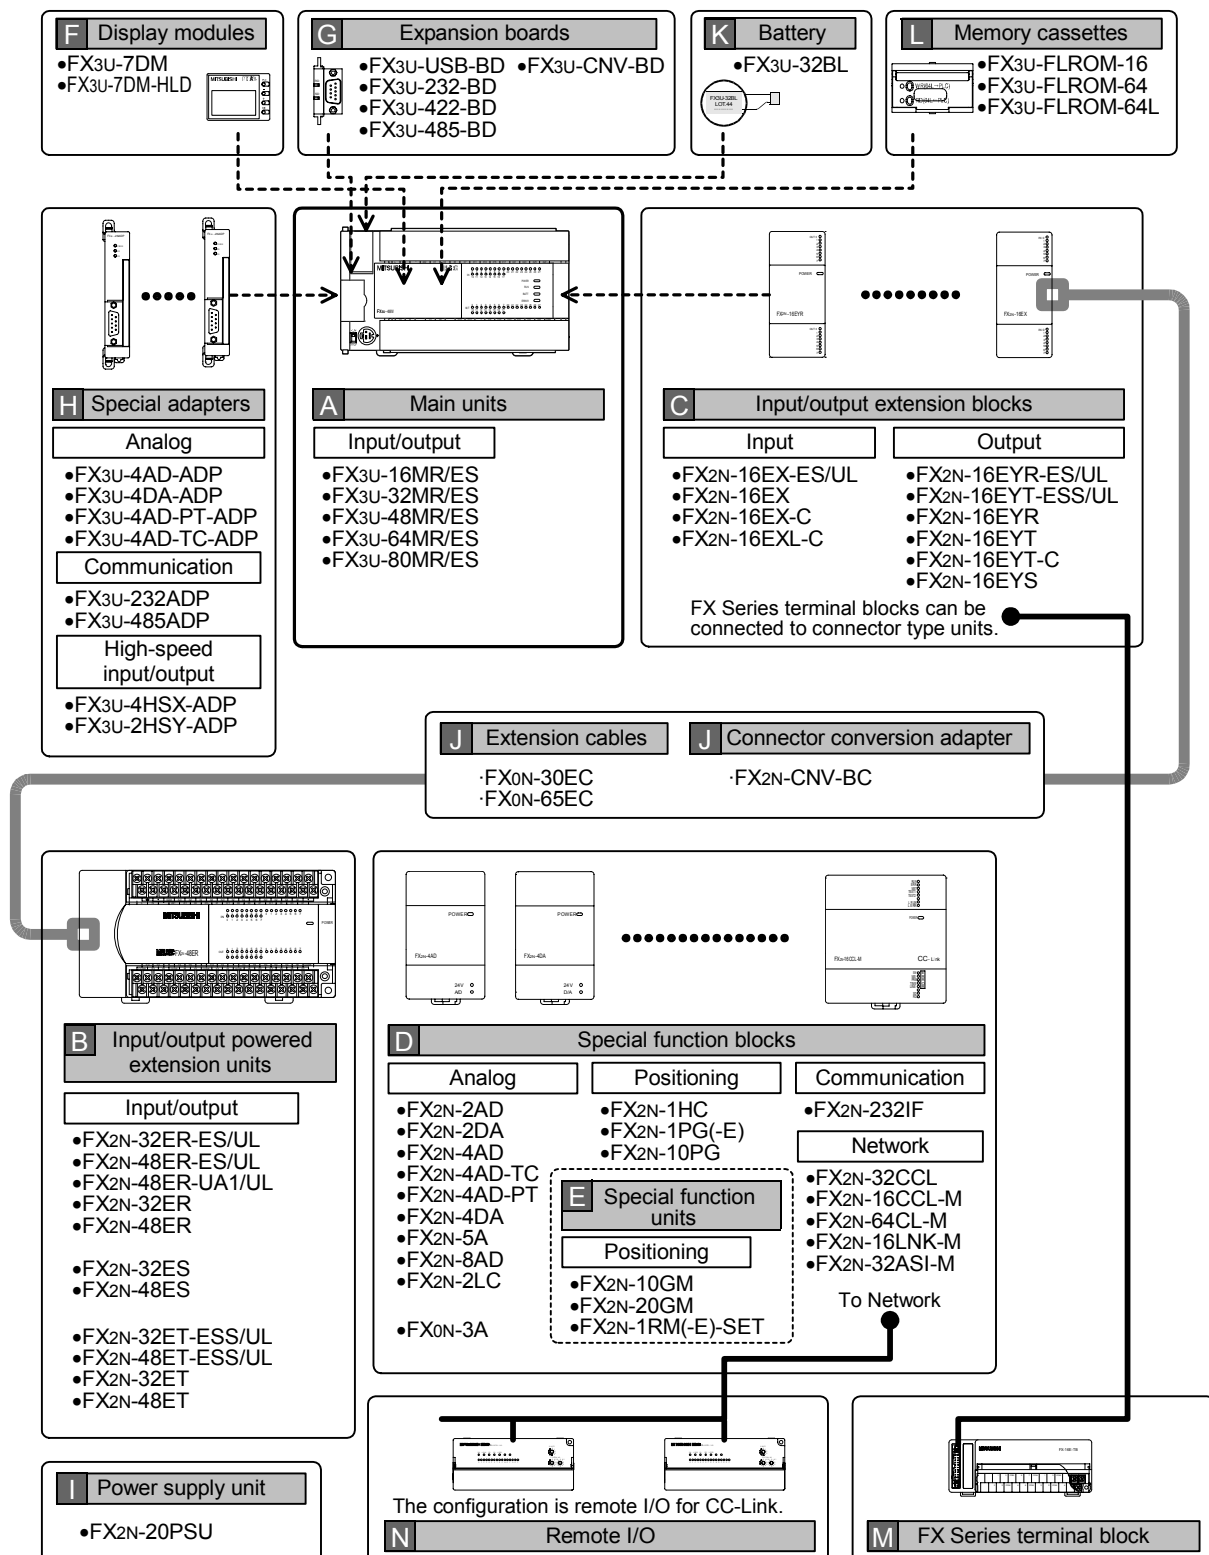

3.1.1 [A] Main units

- A** The main unit incorporates a CPU, memory, input and output terminals and power supply.
To establish a system, at least one main unit is necessary.

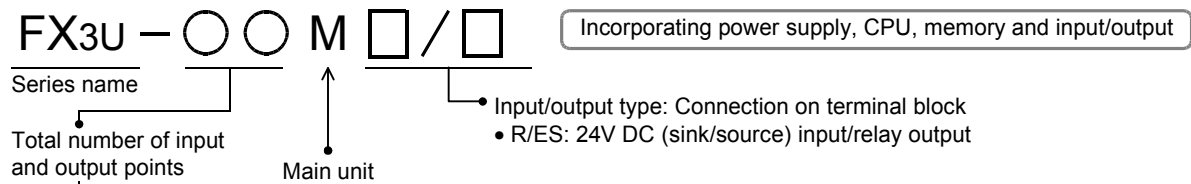


✓ : Compliance with standard or self-declaration △ : Partial compliance – : Not applicable

Number of input/output points			Model name	Output type (connection form: terminal block)	CE		UL cUL	Marine
Total number of points	Number of input points	Number of output points			EMC	LVD		
AC power supply common to 24V DC sink and source input								
16	8	8	FX3U-16MR/ES	Relay	✓	✓	✓	—
32	16	16	FX3U-32MR/ES	Relay	✓	✓	✓	—
48	24	24	FX3U-48MR/ES	Relay	✓	✓	✓	—
64	32	32	FX3U-64MR/ES	Relay	✓	✓	✓	—
80	40	40	FX3U-80MR/ES	Relay	✓	✓	✓	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.2 [B] Input/output powered extension units

- B** The input/output powered extension unit incorporates a power supply circuit and input and output terminals. It is designed to add input and output terminals. It can supply power to extension devices connected on the downstream side.

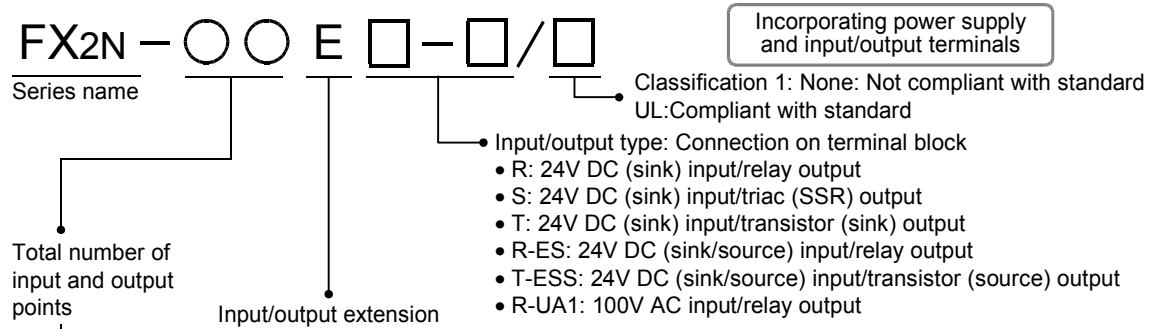

✓ : Compliance with standard or self-declaration △ : Partial compliance – : Not applicable


Number of input/output points			Model name	Output type (connection form: terminal block)	CE		UL cUL	Marine
Total number of points	Number of input points	Number of output points			EMC	LVD		
AC power supply common to 24V DC sink and source input								
32	16	16	FX2N-32ER-ES/UL	Relay	✓	✓	✓	✓
32	16	16	FX2N-32ET-ESS/UL	Transistor (source)	✓	✓	✓	✓
48	24	24	FX2N-48ER-ES/UL	Relay	✓	✓	✓	✓
48	24	24	FX2N-48ET-ESS/UL	Transistor (source)	✓	✓	✓	✓
AC power supply common to 100V AC sink and source input								
48	24	24	FX2N-48ER-UA1/UL	Relay	✓	✓	✓	—
AC power supply only for 24V DC sink input								
32	16	16	FX2N-32ER	Relay	—	—	—	—
32	16	16	FX2N-32ES	Triac	—	—	—	—
32	16	16	FX2N-32ET	Transistor (sink)	—	—	—	—
48	24	24	FX2N-48ER	Relay	—	—	—	—
48	24	24	FX2N-48ES	Triac	—	—	—	—
48	24	24	FX2N-48ET	Transistor (sink)	—	—	—	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.3 [C] Input/output extension blocks

C

The input/output extension block has built-in input or output terminals to add input or output terminals.

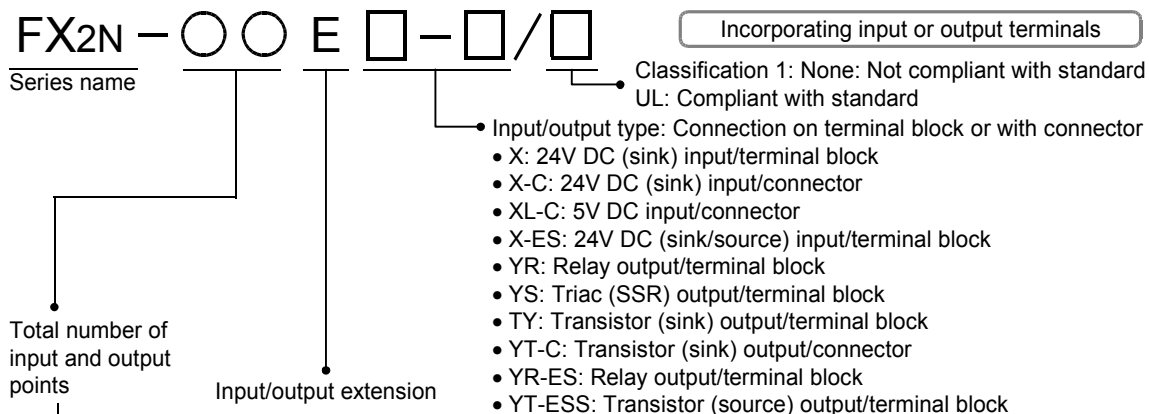

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

Number of input/ output points			Model name	Input type	Output type	Connection form	CE		UL cUL	Marine
Total number of points	Number of input points	Number of output points					EMC	LVD		
Input extension type										
16	16	—	FX2N-16EX-ES/UL	24V DC	—	Terminal block	✓	□	✓	✓
16	16	—	FX2N-16EX	24V DC	—	Terminal block	—	—	—	—
16	16	—	FX2N-16EX-C	24V DC	—	Connector	—	—	—	—
16	16	—	FX2N-16EXL-C	5V DC	—	Connector	—	—	—	—
Output extension type										
16	—	16	FX2N-16EYR-ES/UL	—	Relay	Terminal block	✓	✓	✓	✓
16	—	16	FX2N-16EYT-ESS/UL	—	Transistor (source)	Terminal block	✓	□	✓	✓
16	—	16	FX2N-16EYR	—	Relay	Terminal block	—	—	—	—
16	—	16	FX2N-16EYS	—	Triac	Terminal block	—	—	—	—
16	—	16	FX2N-16EYT	—	Transistor (sink)	Terminal block	—	—	—	—
16	—	16	FX2N-16EYT-C	—	Transistor (sink)	Connector	—	—	—	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.4 [D] [E] Special function units/blocks

For the details of each product, refer to the product manual.

1. Analog control

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

D

Model name	Analog		Description	CE		UL cUL	Marine
	Input	Output		EMC	LVD		
Analog input							
FX2N-2AD	2ch	–	Voltage/current input	✓	□	✓	△
FX2N-4AD	4ch	–	Voltage/current input	✓	□	✓	✓
FX2N-8AD	8ch	–	Voltage/current/temperature (thermocouple) input	✓	□	✓	–
FX2N-4AD-PT	4ch	–	Temperature (resistance thermometer sensor) input	✓	□	✓	✓
FX2N-4AD-TC	4ch	–	Temperature (thermocouple) input	✓	□	✓	✓
Analog output							
FX2N-2DA	–	2ch	Voltage/current output	✓	□	✓	△
FX2N-4DA	–	4ch	Voltage/current output	✓	□	✓	✓
Analog input/output mixed							
FX0N-3A	2ch	1ch	Voltage/current input/output	✓	□	–	–
FX2N-5A	4ch	1ch	Voltage/current input/output	✓	□	✓	–
Temperature control							
FX2N-2LC	2 loops	–	Temperature control (resistance thermometer sensor/ thermocouple)	✓	□	✓	–

→ For more information for CE, UL and cUL, refer to Page 15.

2. High-speed counter

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

D

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
FX2N-1HC	1-ch high-speed counter	✓	✓	✓	✓

→ For more information for CE, UL and cUL, refer to Page 15.

3. Pulse output and positioning

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

D

E

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
FX2N-1PG D	Pulse output for independent 1-axis control (manual in Japanese supplied) [100 kHz open collector output]	–	–	–	–
FX2N-1PG-E D	Pulse output for independent 1-axis control (manual in English supplied) [100 kHz open collector output]	✓	✓	✓	✓
FX2N-10PG D	Pulse output for independent 1-axis control [1 MHz differential line driver output]	✓	□	–	–
FX2N-10GM E	Pulse output for independent 1-axis control [200 kHz open collector output]	✓	✓	✓	–
FX2N-20GM E	Pulse output for simultaneous 2-axis (independent 2-axis) control [200 kHz open collector output]	✓	✓	✓	–
FX2N-1RM-SET E *1	1-axis programmable cam switch (manual in Japanese supplied)	–	–	–	–
FX2N-1RM-E-SET E *1	1-axis programmable cam switch (manual in English supplied)	✓	✓	–	△

→ For more information for CE, UL and cUL, refer to Page 15.

- *1. Up to 3 units can be connected to one system. Connect them to the end of the system. For the details, refer to FX2N-1RM(-E)-SET Handy Manual.

Number of connected units	Number of input/output points occupied	Count of number of connected special function units/blocks
1 unit	8 points	1
2 units		
3 units		

4.Data link and communication functions

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

D

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
FX2N-232IF	1-ch RS-232C no-protocol communication	✓	□	—	✓
FX2N-16CCCL-M	Master for CC-Link Connectable stations: Remote I/O station: 7 stations Remote device station: 8 stations	✓	□	—	—
FX2N-32CCL	Remote device station for CC-Link [1 to 4 stations occupied]	✓	□	—	—
FX2N-64CL-M	Master for CC-Link/LT	✓	□	✓	—
FX2N-16LNK-M	Master for MELSEC I/O Link	✓	✓	✓	—
FX2N-32ASI-M	Master for AS-i system	✓	□	—	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.5 [F] Display modules and holder

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

F

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
FX3U-7DM	Display module that can be incorporated in FX3U Series main unit	✓*1	□	—	—
FX3U-7DM-HLD	Holder and extension cable to fit FX3U-7DM display module on panel	—	—	—	—
FX-10DM(-SET0)	Display module to be connected to peripheral device connector with cable (manual in Japanese supplied)	—	—	—	—
FX-10DM-E	Display module to be connected to peripheral device connector with cable (manual in English supplied)	✓	□	—	—

- *1. Products manufactured in and after May, 2005 will comply with the overseas standard.

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.6 [G] Expansion boards

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

G

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
FX3U-CNV-BD	Conversion of connector for fitting special adapter	✓*1	□	—	—
FX3U-232-BD	For RS-232C communication	✓*1	□	—	—
FX3U-422-BD	For RS-422 communication (having the same function as that of peripheral device connector incorporated in main unit)	✓*1	□	—	—
FX3U-485-BD	For RS-485 communication	✓*1	□	—	—
FX3U-USB-BD	For USB communication (for personal computer for programming)	✓*1	□	—	—

- *1. Products manufactured in and after May, 2005 will comply with the overseas standard.

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.7 [H] Special adapters

1. Analog functions

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

H	Model name	Description	CE		UL cUL	Marine
			EMC	LVD		
	FX3U-4AD-ADP	4-ch voltage input/current input	✓*1	□	✓*1	—
	FX3U-4DA-ADP	4-ch voltage output/current output	✓*1	□	✓*1	—
	FX3U-4AD-PT-ADP	4-ch platinum resistance thermometer sensor input	✓*1	□	✓*1	—
	FX3U-4AD-TC-ADP	4-ch thermocouple (K, J type) temperature sensor input	✓*1	□	✓*1	—

*1. Products manufactured in and after May, 2005 will comply with the overseas standard.

→ For more information for CE, UL and cUL, refer to Page 15.

2. Communication functions

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

H	Model name	Description	CE		UL cUL	Marine
			EMC	LVD		
	FX3U-232ADP	RS-232C communication	✓*1	□	✓*1	—
	FX3U-485ADP	RS-485 communication	✓*1	□	✓*1	—

*1. Products manufactured in and after May, 2005 will comply with the overseas standard.

→ For more information for CE, UL and cUL, refer to Page 15.

3. High-speed input/output functions

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

H	Model name	Description	CE		UL cUL	Marine
			EMC	LVD		
	FX3U-4HSX-ADP	For differential line driver input (for high-speed counter)	✓	□	✓	—
	FX3U-2HSY-ADP	For differential line driver output (for positioning output)	✓	□	✓	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.8 [I] Power supply unit

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

I	Model name	Description	Driving power supply	CE		UL cUL	Marine
				EMC	LVD		
	FX2N-20PSU	24V DC power supply	100 to 240V AC	✓	✓	✓	—

→ For more information for CE, UL and cUL, refer to Page 15.

3.1.9 [J] Extension cables and connector conversion adapter [K] Battery [L] Memory cassettes

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

	Classification	Model name	Description	CE		UL cUL	Marine
				EMC	LVD		
J	Extension cables J	FX0N-65EC*1	0.65m (2'1")	-	-	-	-
		FX0N-30EC*1	0.3m (0'11")				
		FX2N-GM-65EC	0.65m (2'1")				
	Connector conversion adapter J	FX2N-CNV-BC	Connector conversion adapter to connect input/ output extension blocks for FX2N and special function blocks with model FX0N-30/65EC extension cable	-	-	-	-
	Battery K	FX3U-32BL	This battery backs up the following data. • Program memory in built-in RAM • Keep devices (battery backup devices) • Results of sampling trace • Time on clock	-	-	-	-
L	Memory cassettes L	FX3U-FLROM-16	16k-step flash memory	✓	□	-	-
		FX3U-FLROM-64	64k-step flash memory	✓*2	□	-	-
		FX3U-FLROM-64L	64k-step flash memory (with transfer switch)	✓	□	-	-

*1. When the extension cable (FX0N-30EC or FX0N-65EC) is used, use up to one cable for one system.
When an extension block is added, use FX2N-CNV-BC in addition to the cable.
These extension cables are unusable for FX2N-20GM and FX2N-10GM.

*2. Products manufactured in and after May, 2005 will comply with the overseas standard.
→ For more information for CE, UL and cUL, refer to Page 15.

3.1.10 [M] FX Series terminal blocks (cables and connectors)

1. FX Series terminal blocks

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

M

Model name	Number of input points	Number of output points	Function	CE		UL cUL	Marine
				EMC	LVD		
FX-16E-TB	16 input points or 16 output points		To be directly connected to the PLC input/output connector	–	□	✓	–
FX-32E-TB	32 input points, 32 output points or 16 input/output points			–	□	✓	–
FX-16EX-A1-TB	16	–	100V AC input	–	–	✓	–
FX-16EYR-TB	–	16	Relay output	–	–	✓	–
FX-16EYS-TB	–	16	Triac output	–	–	–	–
FX-16EYT-TB	–	16	Transistor output (sink)	–	□	✓	–
FX-16EYT-H-TB	–	16	Transistor output (sink)	–	–	–	–

→ For more information for CE, UL and cUL, refer to Page 15.

2. Input/output cables

Model name	Function	
FX-16E-500CAB-S	5m(16'4")	Bulk wire
FX-16E-150CAB	1.5m(4'11")	Flat cable (with tube). Both ends are provided with 20-pin connectors.
FX-16E-300CAB	3m(9'10")	
FX-16E-500CAB	5m(16'4")	
FX-16E-150CAB-R	1.5m(4'11")	Round multicore cable. Both ends are provided with 20-pin connectors.
FX-16E-300CAB-R	3m(9'10")	
FX-16E-500CAB-R	5m(16'4")	
FX-A32E-150CAB	1.5m(4'11")	Flat cable (with tube). The end on the PLC side is provided with two 20-pin connectors, and the end on the terminal block side is provided with a exclusive connector. 1 common terminal for 32 input/output points
FX-A32E-300CAB	3m(9'10")	
FX-A32E-500CAB	5m(16'4")	

3. Input/output connector


Model name	Function	
FX2C-I/O-CON	10-piece set	Input/output connector for flat cable
FX2C-I/O-CON-S	5-piece set	Input/output connector for bulk wire for 0.3 mm ² [AGW22]
FX2C-I/O-CON-SA	5-piece set	Input/output connector for bulk wire for 0.5 mm ² [AGW20]

3.1.11 [N] Remote I/O

N

For the remote I/O of CC-Link, CC-Link/LT and AS-i system, refer to the manual and catalog of each master.

3.2 Connector Types and Cables for Program Communication

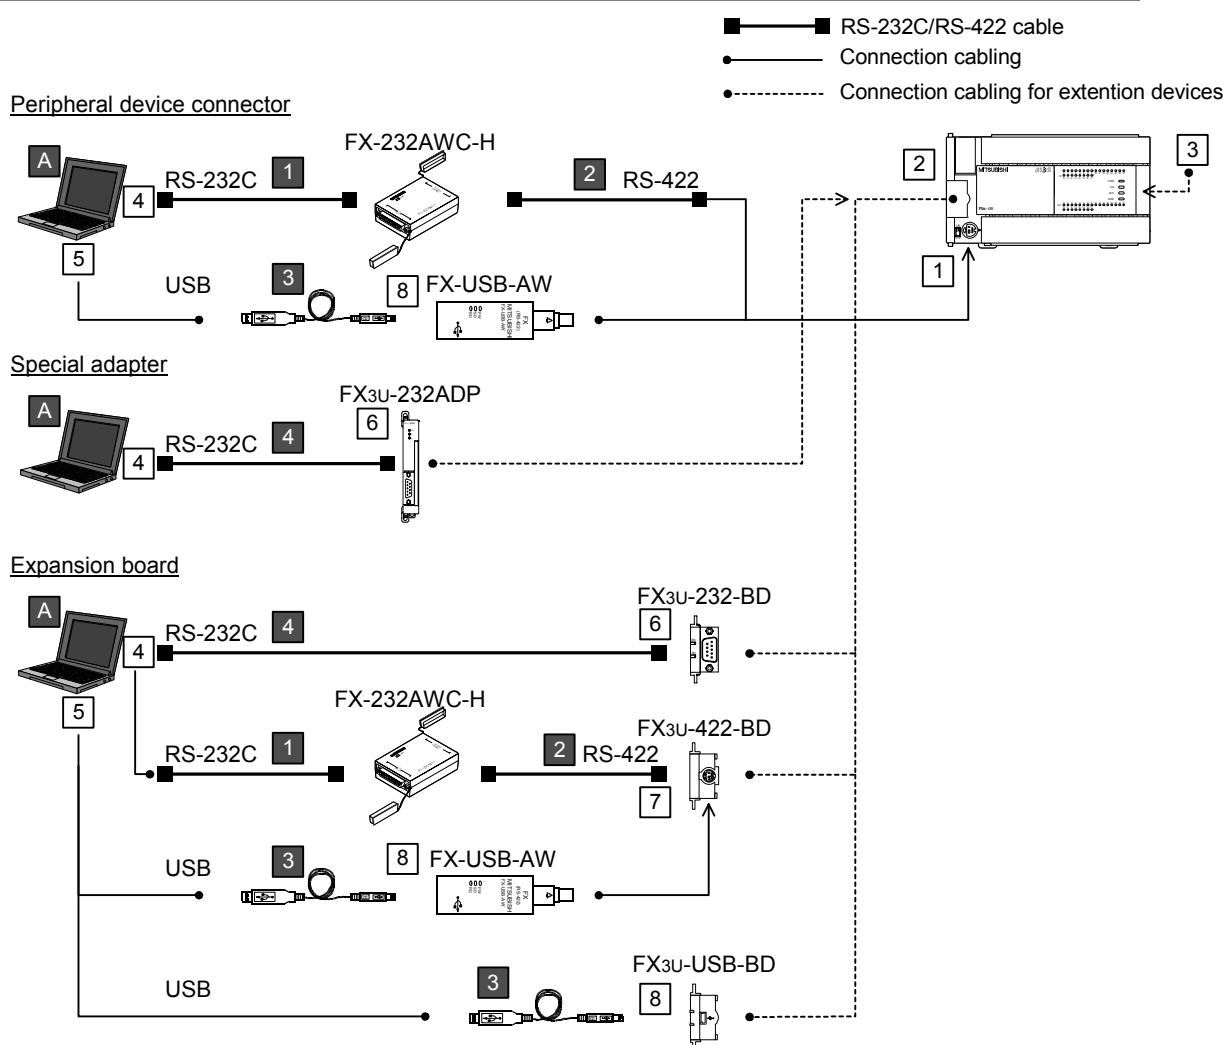

No.	Shape of connector or combination with cable	No.	Shape of connector or combination with cable
1	Peripheral device connector [RS-422] MINI DIN 8Pin	5	USB A plug, female
2	Expansion board (special adapter) connector	3	USB cable (supplied with FX-USB-AW or FX3U-USB-BD)
3	Extension device (input/output powered extension unit/block and special function unit/block) connector	6	FX3U-232-BD D-SUB 9Pin [RS-232C] FX3U-232ADP D-SUB 9Pin [RS-232C]
4	D-SUB 9Pin	7	FX3U-422-BD MINI DIN 8Pin [RS-422]
	Half pitch 14Pin	8	FX3U-USB-BD USB MINI B plug female [USB2.0]
	D-SUB 25Pin		
	2 "FX-422CAB0" + 1 "F2-232CAB-1" + "FX-232AW/FX-232AWC/FX-232AWC-H"		
	4 FX-232CAB-1		
	2 "FX-422CAB0" + 1 "F2-232CAB-2" + "FX-232AW/FX-232AWC/FX-232AWC-H"		
	4 FX-232CAB-2		
	2 "FX-422CAB0" + 1 "F2-232CAB" + "FX-232AW/FX-232AWC/FX-232AWC-H"		
	4 F2-232CAB-1		

*1. When FX-232AW or FX-232AWC is used, the communication baud rate is 19,200 bps or less.

→ For the details, refer to section 3.2.3.

3.2.1 Programming tool

The following programming tool supports FX3U Series PLCs.

Model name	Description
GX Developer	Version 8.23Z or later of SW□D5C-GPPW-J and SW□D5C-GPPW-E supports FX3U. Although the tool earlier than version 8.23Z can be used for programming by selecting FX3U(C) or FX2N(C), restrictions will be made on programming.

→ For more information, refer to chapter 5 "Version Information and Application of Programming Tool."

3.2.2 Communication cables

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

1	Model name	Description	CE		UL cUL	Marine
			EMC	LVD		
2	USB cable					
3	USB cable 3	USB MINI B plug ↔ USB A plug	-	-	-	-
4		3m (9'10") For connection between personal computer and FX3U-USB-BD USB cable (3m(9'10")) supplied with FX3U-USB-BD or commercially available cable (up to 5m(16'4"))				
RS-232C cable						
F2-232CAB-1	1	3m (9'10") D-SUB 25Pin ↔ D-SUB 9Pin For connection between personal computer and RS-232C/RS-422 converter	-	-	-	-
F2-232CAB	1	3m (9'10") D-SUB 25Pin ↔ D-SUB 25Pin For connection between personal computer and RS-232C/RS-422 converter	-	-	-	-
F2-232CAB-2	1	3m (9'10") D-SUB 25Pin ↔ Half-pitch 14-pin For connection between personal computer and RS-232C/RS-422 converter	-	-	-	-
FX-232CAB-1	4	3m (9'10") D-SUB 9Pin ↔ D-SUB 9Pin For connection between GOT-F900 Series personal computer and FX3U-232-BD	-	-	-	-
FX-232CAB-2	4	3m (9'10") D-SUB 9Pin ↔ Half-pitch14Pin For connection between GOT-F900 Series personal computer and FX3U-232-BD	-	-	-	-
RS-422 cable						
FX-422CAB0	2	1.5m (4'11") D-SUB 25Pin ↔ MINI DIN 8Pin For connection between RS-232C/RS-422 converter and FX3U programming port FX3U-422-BD	-	-	-	-

3.2.3 Converters and interface

✓ : Compliance with standard or self-declaration □ : Not targeted △ : Partial compliance

Model name	Description	CE		UL cUL	Marine
		EMC	LVD		
RS-232C/RS-422 Converters					
FX-232AWC-H*1	RS-232C/RS-422 converter (high-speed type) Communication speed: Applicable to 9,600 to 115,000 bps .	✓*2	□	—	—
FX-232AW*1	RS-232C/RS-422 converters Communication speed: Applicable to 9,600/19,200 bps	—	—	—	—
FX-232AWC*1	(These converters are applicable only to 9,600 bps depending on the PLC version.)	—	—	—	—
USB Interface					
FX-USB-AW*1	USB-RS-422 converter (with 3m(9'10") USB cable)	✓*3	□	—	—

*1. When the programming software is not applicable to FX_{3U} or FX_{3UC}, the converter is applicable only to 9,600 or 19,200 bps.

*2. Products manufactured in and after July, 2004 conform to the overseas standard.

*3. Products manufactured in and after August, 2004 conform to the overseas standard.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

4. Specifications, External Dimensions and Terminal Layout (Main Units)

This Chapter explains the specifications, external dimensions and terminal layout of the main units.

→ For the specifications for the input/output powered extension units, refer to Chapter 15.


→ For the specifications for the input/output extension blocks, refer to Chapter 16.

4.1 Generic Specifications

Item	Specification				
Ambient temperature	0 to 55°C (32 to 131°F) when operating and -25 to 75°C (-4 to 158°F) when stored				
Ambient humidity	5 to 95%RH (no condensation) when operating				
Vibration resistance	Compliant with EN 68-2-6				
		Frequency (Hz)	Acceleration (m/s ²)	Half amplitude (mm)	Sweep Count for X, Y, Z: 10 times (80 min in each direction)
	When installed on DIN rail	10 to 57	–	0.035	
		57 to 150	4.9	–	
	When installed directly	10 to 57	–	0.075	
		57 to 150	9.8	–	
Shock resistance	Compliant with EN 68-2-27 (147 m/s ² Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z)				
Noise resistance	By noise simulator at noise voltage of 1,000 Vp-p, noise width of 1 μs, rise time of 1 ns and period of 30 to 100 Hz				
Dielectric withstand voltage*2	1.5kV AC for one minute		Compliant with JEM-1021 Between each terminals*2 and ground terminal		
	500V AC for one minute				
Insulation resistance*2	5MΩ or more by 500V DC megger		Compliant with JEM-1021 Between each terminals*2 and ground terminal		
Grounding	Class D grounding (grounding resistance: 100 Ω or less) <Common grounding with a heavy electrical system is not allowed.>*1				
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dusts				
Working altitude	Compliant with IEC61131-2 (<2000m)*3				

*1. Ground the PLC independently or jointly.

→ Refer to Section 9.4.

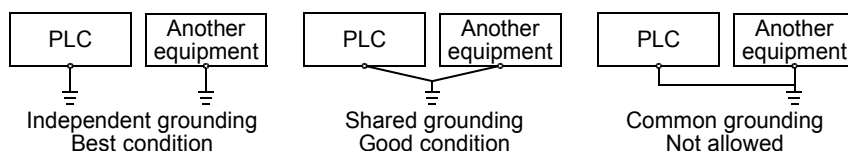

*2. For more information on the dielectric withstand voltage test and the insulation resistance test of the terminals of each product, refer to the following.

→ Refer to Subsection 4.1.1.

*3. Do not use the PLC under pressure higher than the atmospheric pressure. Doing so may damage the PLC.

4.1.1 Dielectric withstand voltage test and insulation resistance test

Perform dielectric withstand voltage test and insulation resistance test at the following voltage between each terminals and the main unit ground terminal.

Between terminals	Dielectric strength	Insulation resistance	Remarks
Terminals of main unit and input/output powered extension unit/block			
• Between power supply terminal and ground terminal	1.5kV AC for 1 min	5M Ω or more on 500V DC Megger	—
• Between 24V DC service power supply connected to input terminal (24V DC) and ground terminal	500V AC for 1 min		—
• Between input terminal (100V AC) and ground terminal	1.5kV AC for 1 min		—
• Between output terminal (relay) and ground terminal	1.5kV AC for 1 min		—
• Between output terminal (transistor) and ground terminal	500V AC for 1 min		Only input/output powered extension unit/block
• Between output terminal (triac) and ground terminal	1.5kV AC for 1 min		Only input/output powered extension unit/block
Terminals of expansion board, special adapter and special function unit/block			
• Between terminal of expansion board (except FX3U-USB-BD and FX3U-CNV-BD) and ground terminal	Not allowed	Not allowed	Since the communication line and the main unit CPU are not insulated, it is not allowed to perform the dielectric withstand voltage test and insulation resistance test between them.
• Between terminal of expansion board (FX3U-USB-BD) and ground terminal	Not allowed	Not allowed	Do not perform the dielectric withstand voltage test and insulation resistance test between the communication line and the main unit CPU.
• Between terminal of special adapter and ground terminal	500V AC for 1 min	5M Ω or more on 500V DC Megger	—
• Special function unit/block	Each manual		Refer to the manual for each special function unit/block.

1

Introduction

2

Features and Part Names

3

Product Introduction

4

Specifications

5

Version and Peripheral Devices

6

System Configuration

7

Input/Output Nos., Unit Nos.

8

Installation

9

Preparation and Power Supply Wiring

10

Input Wiring

4.2 Power Supply Specifications

The specifications for the main unit power supply are explained below.

For the power (current) consumed by the special function units/blocks, refer to this manual or special function units/blocks manual.

Item	Specifications				
	FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Supply voltage	100 to 240V AC				
Allowable supply voltage range	85 to 264V AC				
Rated frequency	50 / 60 Hz				
Allowable instantaneous power failure time	Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less. When the supply voltage is 200V AC, the time can be change to 10 to 100 ms by editing the user program.				
Power fuse	250V AC, 3.15A		250V AC, 5A		
Rush current	30 A max. 5 ms or less/100V AC, 65 A max. 5 ms or less/200V AC				
Power consumption*1	30 W	35 W	40 W	45 W	50 W
24V DC service power supply*2	400 mA or less		600 mA or less		
5V DC built-in power supply*3	500 mA or less				

*1. These power consumption values are maximum values which apply to the main unit's 24V DC service power supply when there are input/output extension blocks and special function units/blocks.

→ **For input/output powered extension units/blocks power consumption information, refer to Section 7.5.**

*2. When input/output extension blocks are connected, 24V DC service power is consumed by the blocks, and the power to be consumed by the main unit is reduced.

→ **For the details of 24V DC service power supply, refer to Section 6.5.**

*3. The power supply is not for external use.

The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.

4.3 Input Specifications

The main unit input specifications are explained below.

4.3.1 24V DC Input (sink/source)

The input numbers in the table indicate the main unit terminal numbers. "X010 or more" means the numbers from X010 to the largest number that the main unit has.

(The input numbers for FX3U-16M□ are X000 to X007.)

→ For the details of sink input and source input, refer to Subsection 10.1.1.


Item		Specifications				
		FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Number of input points		8 points	16 points	24 points	32 points	40 points
Input connecting type		Fixed terminal block (M3 screw)	Removable terminal block (M3 screw)			
Input form		sink/source				
Input signal voltage		24V DC ±10%				
Input impedance	X000 to X005	3.9 kΩ				
	X006,X007	3.3 kΩ				
	X010 or more	—	4.3 kΩ			
Input signal current	X000 to X005	6 mA / 24V DC				
	X006,X007	7 mA / 24V DC				
	X010 or more	—	5 mA / 24V DC			
ON input sensitivity current	X000 to X005	3.5 mA or more				
	X006,X007	4.5 mA or more				
	X010 or more	—	3.5 mA or more			
OFF input sensitivity current		1.5 mA or less				
Input response time		Approx. 10 ms				
Input signal form		No-voltage contact input Sink input: NPN open collector transistor Source input: PNP open collector transistor				
Input circuit insulation		Photocoupler insulation				
Input operation display		LED on panel lights when photocoupler is driven.				
Input circuit configuration *1 Input impedance		<div><div>Sink input wiring</div><div>Source input wiring</div></div>				

4.4 Output Specifications

The main unit output specifications are explained below.

4.4.1 Relay output

The output numbers in the table indicate the main unit terminal numbers. "Y010 or more" means the numbers from Y010 to the largest number that the main unit has.
(The output numbers of FX3U-16M□ are Y000 to Y007.)

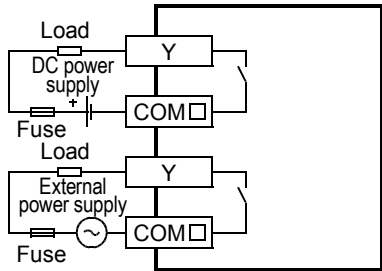Item		Relay output specifications				
		FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Number of output points		8 points	16 points	24 points	32 points	40 points
Connecting type		Fixed terminal block (M3 screw)	Removable terminal block (M3 screw)			
Output type		Relay				
External power supply		30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)				
Max. load	Resistance load	2 A / point The total load current of resistance loads per common terminal should be the following value. → For the details of the common terminal for each model, refer to the terminal block layout. • 1 output point/common terminal: 2 A or less • 4 output points/common terminal: 8 A or less • 8 output points/common terminal: 8 A or less				
	Inductive load	80 VA → For the approximate life, refer to Subsection 4.4.2. → For the cautions in external wiring, refer to Subsection 12.2.4.				
Min. load		5V DC, 2 mA (reference value)				
Open circuit leakage current		—				
Response time	OFF→ON	Approx. 10 ms				
	ON→OFF	Approx. 10 ms				
Circuit insulation		Mechanical insulation				
Display of output operation		LED on panel lights when power is applied to relay coil.				
Output circuit configuration		<div></div> <p>A number (1 or more) is entered in □ of [COM □].</p>				

4.4.2 Life of relay output contact

The standard life of the contact used for conductive AC loads, such as contactors and solenoid valves, is 500,000 times at 20 VA.

The following table shows the approximate life of the relay based on the results of our life test.

Test condition: 1 sec. ON / 1 sec.OFF

Load capacity		Contact life	Example of applicable loads (Magnetic switch manufactured by our company)
20 VA	0.2 A / 100V AC	3,000,000 times	S-K10 to S-K95
	0.1 A / 200V AC		
35 VA	0.35 A / 100V AC	1,000,000 times	S-K100 to S-K150
	0.17 A / 200V AC		
80 VA	0.8 A / 100V AC	200,000 times	S-K180,S-K400
	0.4 A / 200V AC		

If rush overcurrent is shut off even under the above condition, the life of the relay contact is considerably decreased.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

4.5 Performance Specifications

The performance specifications are common to FX3U Series PLCs.

Item		Performance		
Operation control system		Stored program repetitive operation system (dedicated LSI) with interruption function		
Input/output control system		Batch processing system (when END instruction is executed) Input/output refresh instruction and pulse catch function are provided.		
Programming language		Relay symbol system + step-ladder system (SFC notation possible)		
Program memory	Max. memory capacity	64000-step (2k-, 4k-, 8k-, 16k- or 32k-step memory can be selected by parameter settings.) Comments and file registers can be created in the program memory by parameter settings. <ul style="list-style-type: none">• Comments: Up to 6350 points (50 points/500 steps)• File registers: Up to 7000 points (500 points/500 steps)		
	Built-in memory capacity/type	64000-step RAM (backed up by built-in lithium battery) <ul style="list-style-type: none">• Battery life: Approx. 5 years (guarantee for 1 year)• With password protection function (with entry code function)		
	Memory cassette (Option)	Flash memory (The max. memory capacity varies depending on the model of the memory cassette.) <ul style="list-style-type: none">• FX3U-FLROM-64L: 64000 steps (with loader function)• FX3U-FLROM-64: 64000 steps (without loader function)• FX3U-FLROM-16: 16000 steps (without loader function) Max. allowable write: 10,000 times		
	Writing function during running	Provided (Program can be modified while the PLC is running.)		
Real-time clock	Clock function	Built-in 2- or 4-digit year, accuracy within ± 45 seconds/month at 25°C		
Kinds of instructions	Basic instructions	<ul style="list-style-type: none">• Sequence instructions: 27• Step-ladder instructions: 2		
	Applied instructions	209 kinds, 486 instructions		
Processing speed	Basic instructions	0.065 μ s/instruction		
	Applied instructions	0.642 μ s to several hundred μ s/instruction		
Number of input/output points	(1)Extension-combined number of input points	248 points	Total number of points	(1) + (2) \leq (3) total number of points is 256 or less.
	(2)Extension-combined number of output points	248 points		
	(4)Remote I/O number of points (CC-Link)	224 points or less		Either the CC-Link or AS-i master can be used (the two cannot be used concurrently)
	(4)Remote I/O number of points (AS-i)	248 points or less		
	(3) + (4) total number of points	384 points or less		
Input/output relay	Input relay	X000 to X367	248 points	The device numbers are octal. The total number of input and output points is 256.
	Output relay	Y000 to Y367	248 points	
Auxiliary relay	For general [changeable]	M0 to M499	500 points	The retentive status can be changed by parameter settings.
	For keeping [changeable]	M500 to M1023	524 points	
	For keeping [fixed]	M1024 to M7679	6656 points	—
	For special	M8000 to M8511	512 points	—

Item		Performance		
State	Initial state (for general) [changeable]	S0 to S9	10 points	The retentive status can be changed by parameter settings.
	For general [changeable]	S10 to S499	490 points	
	For keeping [changeable]	S500 to S899	400 points	
	For annunciator (For keeping) [changeable]	S900 to S999	100 points	–
	For keeping [fixed]	S1000 to S4095	3096 points	–
Timer (on-delay timer)	100 ms	T0 to T191	192 points	0.1 to 3,276.7 sec
	100 ms [for subroutine/interruption subroutine]	T192 to T199	8 points	0.1 to 3,276.7 sec
	10 ms	T200 to T245	46 points	0.01 to 327.67 sec
	1 ms accumulating type	T246 to T249	4 points	0.001 to 32.767 sec
	100 ms accumulating type	T250 to T255	6 points	0.1 to 3,276.7 sec
	1 ms	T256 to T511	256 points	0.001 to 32.767 sec
Counter	Increment for general (16 bits) [changeable]	C0 to C99	100 points	Counting from 0 to 32,767 The retentive status can be changed by parameter settings.
	Increment for keeping (16 bits) [changeable]	C100 to C199	100 points	
	Both directions for general (32 bits) [changeable]	C200 to C219	20 points	Counting from -2,147,483,648 to +2,147,483,647 The retentive status can be changed by parameter settings.
	Increment for keeping (32 bits) [changeable]	C220 to C234	15 points	
High-speed counter	1-phase 1-count input in both directions (32 bits) [changeable]	C235 to C245	Up to 8 points can be used in range from C235 to C255.	Counting from -2,147,483,648 to +2,147,483,647 The retentive status can be changed by parameter settings. → For the high-speed counter operating frequency, refer to the table shown in the next page.
	1-phase 2-count input in both directions (32 bits) [changeable]	C246 to C250		
	2-phase 2-count input in both directions (32 bits) [changeable]	C251 to C255		
Data register (32 bits when paired)	For general (16 bits) [changeable]	D0 to D199	200 points	The retentive status can be changed by parameter settings.
	For keeping (16 bits) [changeable]	D200 to D511	312 points	
	For keeping (16 bits) [fixed] <File register>	D512 to D7999 <D1000 to D7999>	7488 points <7000 points>	D1000 and later in 7488 points of fixed data register for keeping can be set as file register points in 500-point units by changing the parameter settings.
	For special (16 bits)	D8000 to D8511	512 points	–
	For index (16 bits)	V0 to V7 Z0 to Z7	16 points	–
Extension register (16 bits)		R0 to R32767	32768 points	Retained by battery during power failure
Extension file register (16 bits)		ER0 to ER32767	32768 points	Usable only when memory cassette is mounted

1

Introduction

2

Features and Part Names

3

Product Introduction

4

Specifications

5

Version and Peripheral Devices

6

System Configuration

7

Input/Output Nos., Unit Nos.

8

Installation

9

Preparation and Power Supply Wiring

10

Input Wiring

Item		Performance		
Pointer	For branching of JAMP and CALL	P0 to P4095	4096 points	For CJ instructions and CALL instructions
	Input interruption and input delay interruption	I0□□ to I5□□	6 points	—
	Timer interruption	I6□□ to I8□□	3 points	
	Counter interruption	I010 to I060	6 points	For HSCS instructions
Nesting	For master control	N0 to N7	8 points	For MC instructions
Constant	Decimal number (K)	16 bits	-32,768 to +32,767	
		32 bits	-2,147,483,648 to +2,147,483,647	
	Hexadecimal number (H)	16 bits	0 to FFFF	
		32 bits	0 to FFFFFFFF	
	Real number (E)	32 bits	-1.0 x 2 ¹²⁸ to -1.0 x 2 ⁻¹²⁶ , 0, 1.0 x 2 ⁻¹²⁶ to 1.0 x 2 ¹²⁸ Decimal-point and exponential notations are possible.	
	Character string (" ")	Character string	Designation by characters enclosed with " " Up to 32 one-byte characters can be used for a constant in an instruction.	

Operating frequency of high-speed counter

For hardware and software counter device numbers, refer to the following section.


→ Refer to Section 11.5.

Kind of high-speed counter		Input terminals (X000 to X007) of main unit	High-speed input special adapter (FX _{3U} -4HSX-ADP)
Hardware counter	1-phase	100 kHz x 6 points, 10 kHz x 2 points	200 kHz x 8 points
	2-phase	50 kHz (multiply by 1), 50 kHz (multiply by 4)	100 kHz (multiply by 1), 100 kHz (multiply by 4)
Software counter	1-phase	40 kHz	40 kHz
	2-phase	40 kHz (multiply by 1), 10 kHz (multiply by 4)	40 kHz (multiply by 1), 10 kHz (multiply by 4)

4.6 External Dimensions (Weight and Installation)

The external dimensions of the main unit are explained.

4.6.1 FX3U-16MR/ES, FX3U-32MR/ES

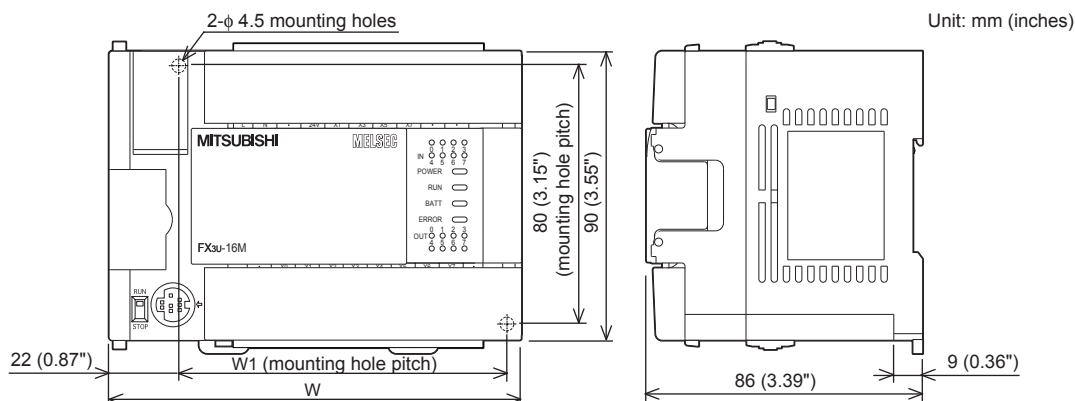


Series	Model name	W: mm (inches)	W1: mm (inches)	MASS (weight): kg (lbs)
FX3U-16M□	FX3U-16MR/ES	130 (5.12")	103 (4.06")	0.6 (1.32 lbs)
FX3U-32M□	FX3U-32MR/ES	150 (5.91")	123 (4.85")	0.65 (1.43 lbs)

1) Installation

- 35 mm (1.38") wide DIN rail or Direct installation (with screws) (M4 x 2))

4.6.2 FX3U-48MR/ES, FX3U-64MR/ES, FX3U-80MR/ES

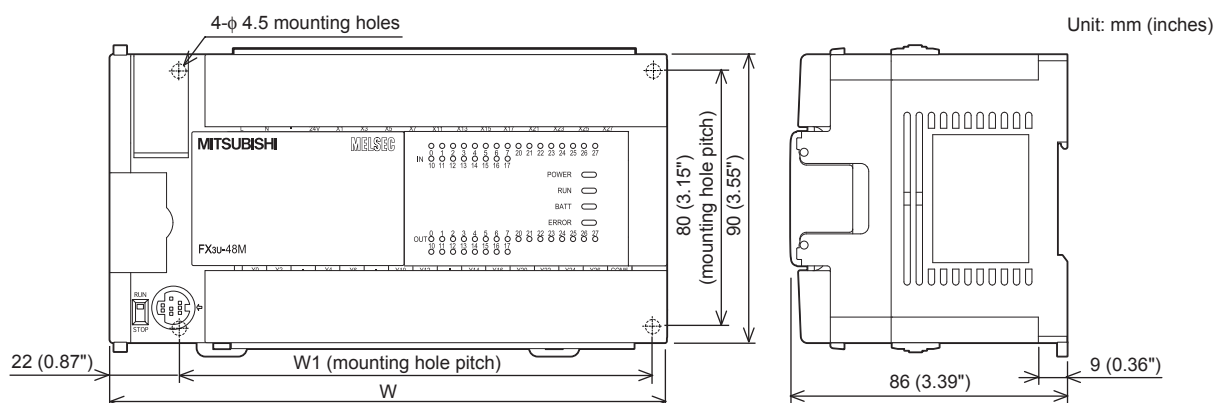

Series	Model name	W: mm (inches)	W1: mm (inches)	MASS (weight): kg (lbs)
FX3U-48M□	FX3U-48MR/ES	182 (7.17")	155 (6.11")	0.85 (1.87 lbs)
FX3U-64M□	FX3U-64MR/ES	220 (8.67")	193 (7.6")	1.00 (2.2 lbs)
FX3U-80M□	FX3U-80MR/ES	285 (11.23")	258 (10.16")	1.20 (2.64 lbs)

1) Installation


- 35 mm (1.38") DIN rail or Direct installation (with screws) (M4 x 4))

4.7 Terminal Layout and Examples of Wiring

The terminal layout in the main unit and examples of wiring are shown below.

4.7.1 Interpretation


1. Interpretation of terminal block layout

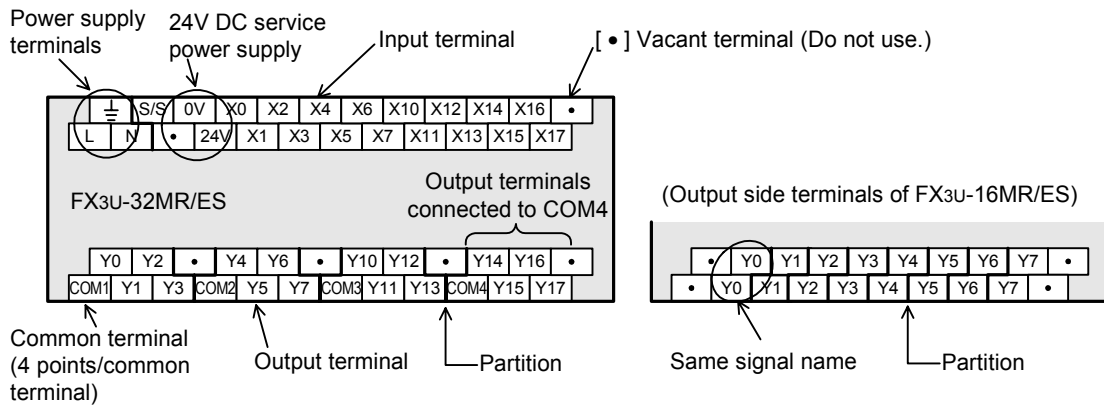

- Indication of output terminals connected to common terminal (COM□)
One common terminal covers 1, 4 or 8 output points.
The output numbers (Y) connected to a common terminal are enclosed with heavy partition lines.
- Output terminals of FX3U-16MR/ES (top right figure)
One output point is connected to one common terminal. Both ends of a relay output contact are wired, and the same signal name is shown on both sides.

2. Interpretation of wiring examples


- External wiring of power supply input terminals
Schematic drawings are given.
For the external wiring, refer to the explanation of power supply wiring stated below.
→ **Refer to Chapter 9.**
- Wiring of external load power supply to output terminal
When the polarity of the DC power supply is not specified, the wiring is indicated as shown below.



- Protection fuse of output circuit
For the fuse specifications, refer to the explanation of output wiring stated below.
→ **Refer to Chapter 12.**


4.7.2 FX3U-16MR/ES

1. Terminal layout

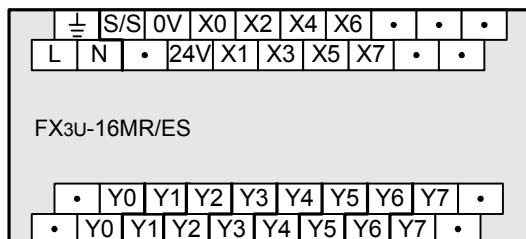


2. Examples of input wiring


1) Sink

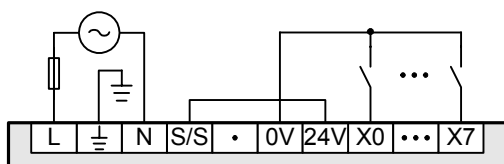

2) Source

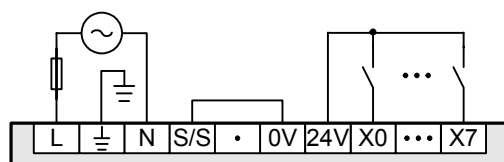


3. Example of output wiring

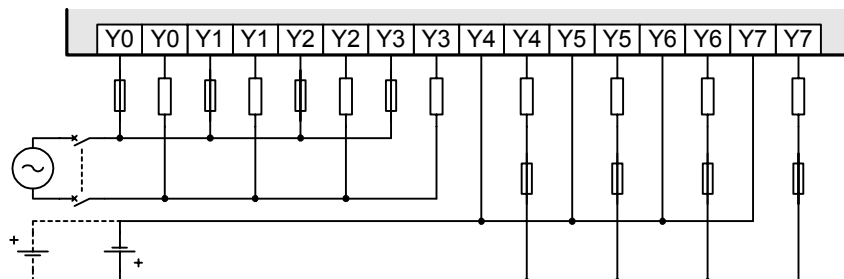


4.7.3 FX_{3U}-32MR/ES

1. Terminal layout

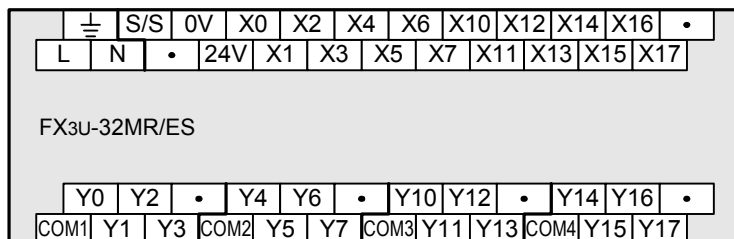


2. Examples of input wiring


1) Sink

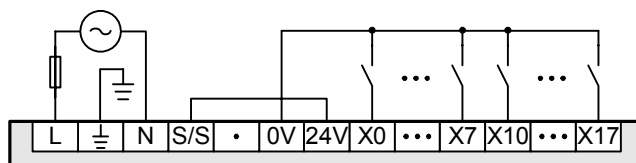

2) Source

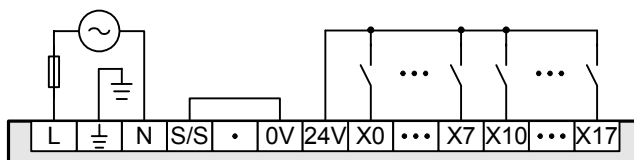


3. Example of output wiring

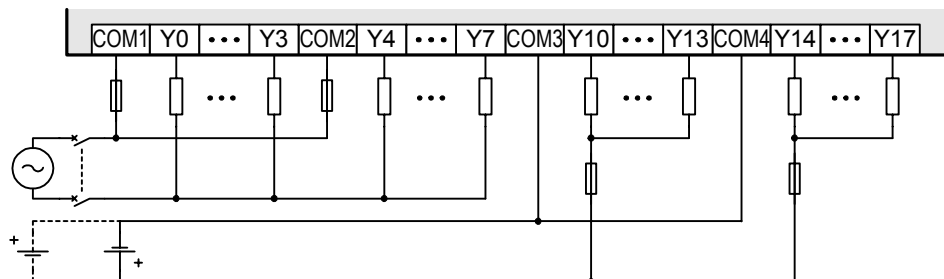


4.7.4 FX_{3U}-48MR/ES

1. Terminal layout

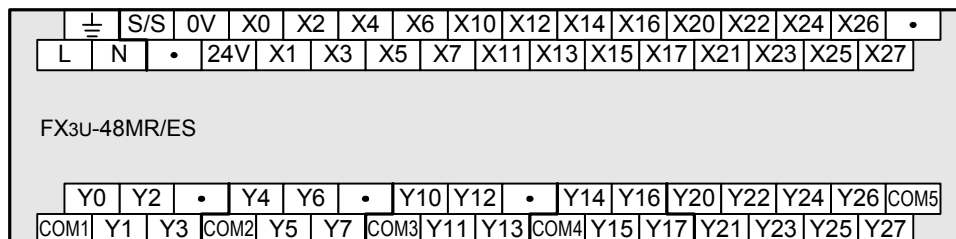


2. Examples of input wiring


1) Sink

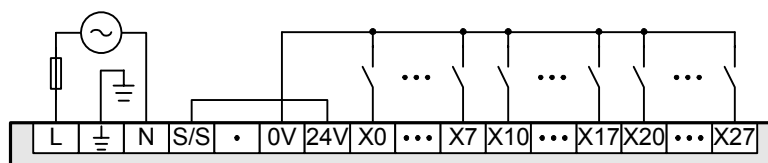

2) Source

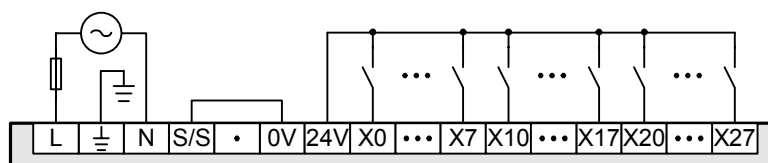


3. Example of output wiring

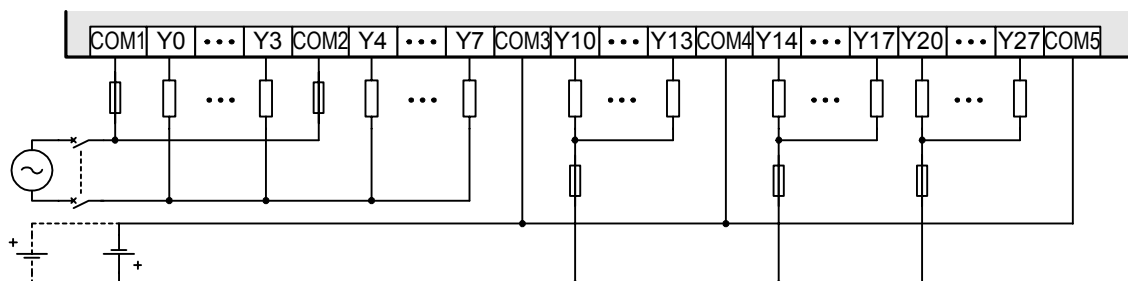


4.7.5 FX3U-64MR/ES

1. Terminal layout

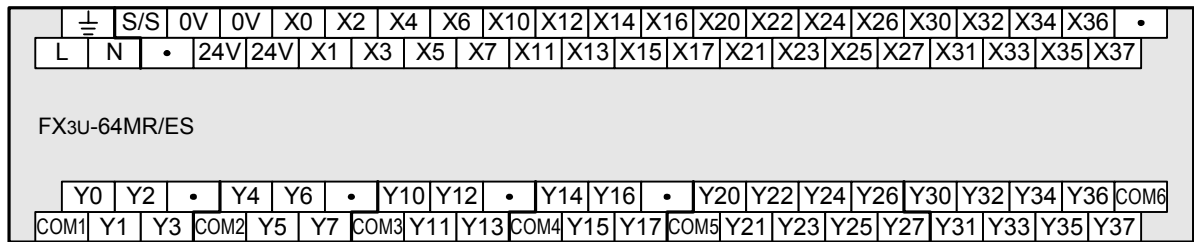


2. Examples of input wiring

1) Sink

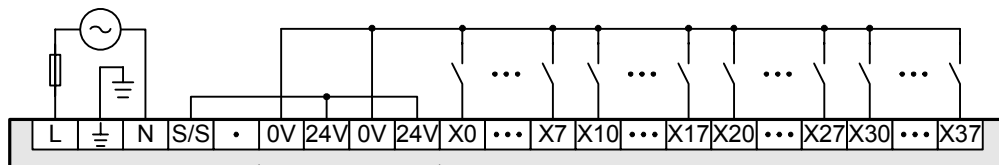


The 0V and 24V terminals are connected internally. They can be used without external short-circuiting.

2) Source

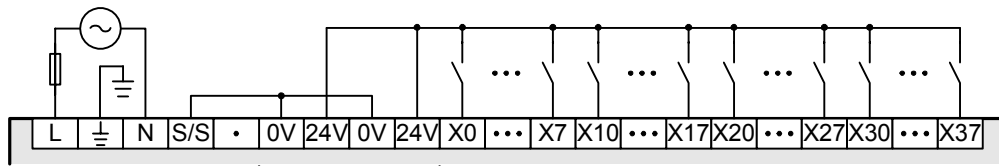


The 0V and 24V terminals are connected internally. They can be used without external short-circuiting.

3. Example of output wiring

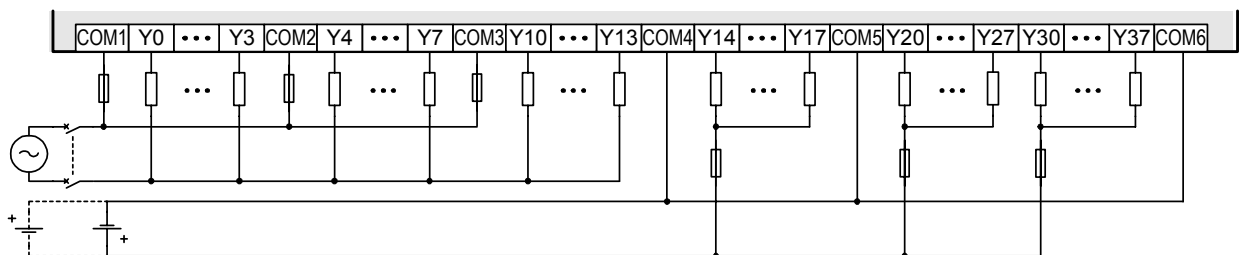


4.7.6 FX3U-80MR/ES

1. Terminal layout

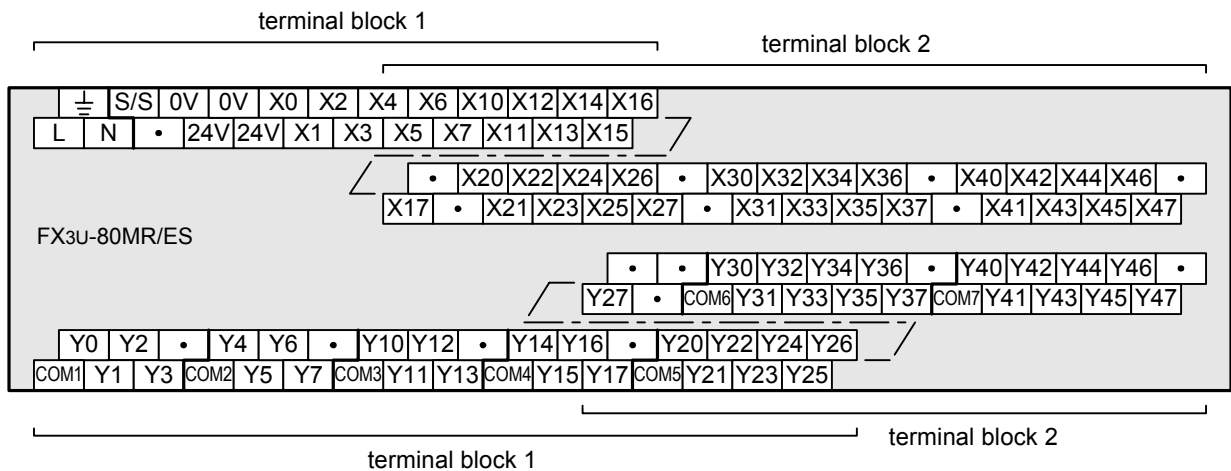


2. Examples of input wiring

1) Sink

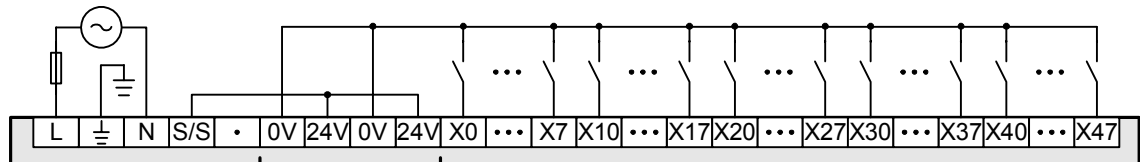


The 0V and 24V terminals are connected internally. They can be used without external short-circuiting.

2) Source

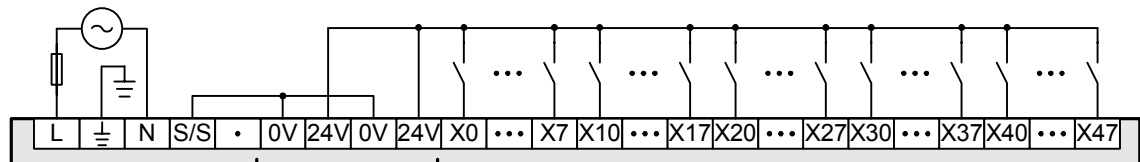

The 0V and 24V terminals are connected internally. They can be used without external short-circuiting.

3. Example of output wiring

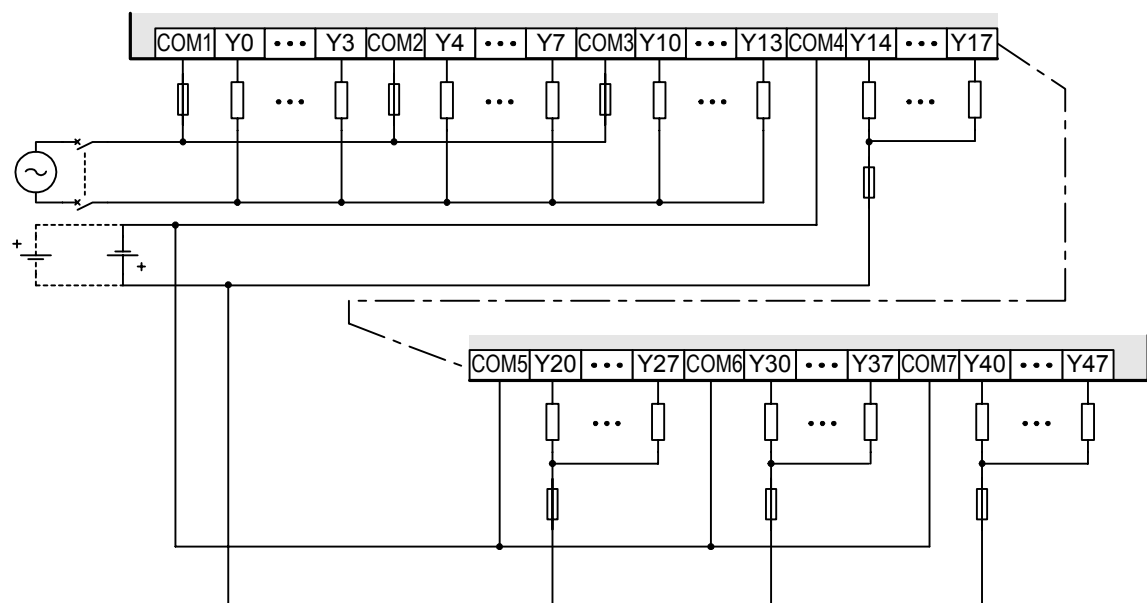


5. Programming Tool Applicability and Version Upgrade History

5.1 Version Upgrade History

5.1.1 Version check method


In FX3U PLCs, users can obtain the PLC version information by monitoring special data register D8001 (decimal number), or the PLC version can be checked in "PLC Status" in the display module.

→ For the operating procedure of the display module, refer to chapter 18.

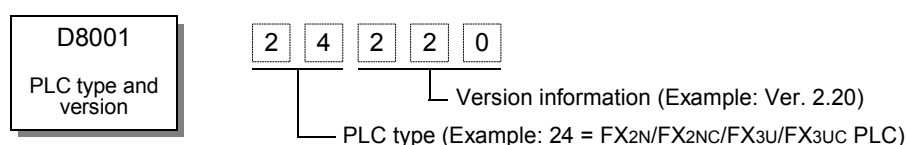

5.1.2 How to look at manufacturer's serial number

The year and month of production of the product can be checked in the control number indicated in "SERIAL" on a label adhered on the right side seen from the front face.

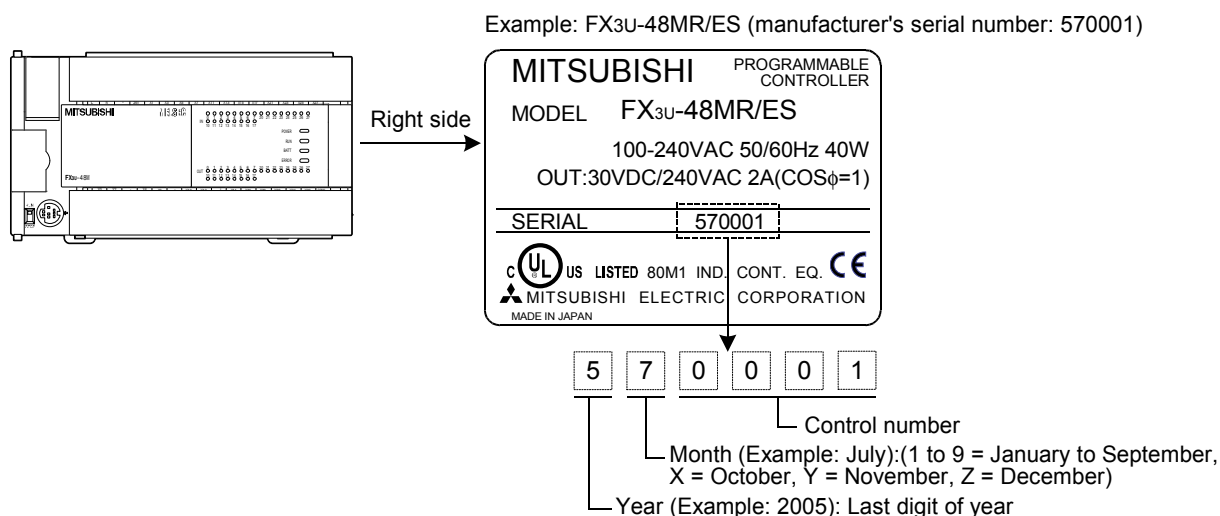

5.1.3 Version upgrade history

Version	Manufacturer's serial number	Contents of version upgrade
Ver.2.20	55***** (May, 2005)	First product Corresponds to FX3UC PLC Ver. 2.20.

5.2 Programming Tool Applicability

5.2.1 Applicable versions of programming tool

GX Developer is applicable to FX3U PLCs from the following version:

FX3U PLC version	FX3UC PLC version	Model name (Media model name is shown below.)	Applicable GX Developer version	Remarks
Available with restrictions	Ver.1.00 to	GX Developer SW□D5C(F)-GPPW-J SW□D5C(F)-GPPW-E	Ver.8.13P or later	Supports FX3UC PLCs (Ver.1.00 or later). Model selection: FX3UC
Available with restrictions	Ver.1.30 to		Ver.8.18U or later	Supports FX3UC PLCs (Ver.1.30 or later). Model selection: FX3UC
Ver.2.20 to	Ver.2.20 to		Ver.8.23Z or later	Supports FX3U PLCs (Ver.2.20 or later). Model selection: FX3U(C)

5.2.2 In the case of programming tool (version) not applicable

Inapplicable programming tools can programme by setting alternative model.

1. Alternative model setting

Model to be programmed	Model to be set						Priority High → Low
FX3U PLC	FX3U(C)	→	FX3UC	→	FX2N	→	FX2

2. Contents of restrictions

Even using a programming tool not applicable to the FX3U and FX3UC PLCs, programming is enabled when an alternative model is set.

In this case, however, programming is enabled only in the function ranges such as instructions, device ranges and program sizes available in a PLC selected as the alternative model.

5.2.3 Program transfer speed and programming tool

When either of the following interfaces is used for GX Developer (Ver.8.13P or later), writing and reading of programs and monitoring of devices can be executed at high speed (115.2 kbps) in FX3U and FX3UC PLCs.

1. Applicable interface

- Standard built-in port or function extension board FX3U-422-BD for RS-422
When the RS-232C/RS-422 converter FX-232AWC-H or USB/RS-422 converter FX-USB-AW is connected
- Function extension board FX3U-232-BD for RS-232C
- Special adapter FX3U-232ADP for RS-232C
- Function extension board FX3U-USB-BD for USB

2. Communication speed setting by GX Developer

The communication speed can be set in the following position:

Select "Online" → "Transfer setup..." → "PC side I/F", and double-click the "Serial" icon.

3. In programming software not applicable to the FX3U Series

Communication is executed at 9,600 or 19,200 bps.

5.2.4 Cautions on write during RUN

In FX3U PLCs, write during RUN (program changes in the RUN mode) is enabled using the following programming tools.

→ **For the operating procedure of and cautions on write during RUN, refer to the manual of the used programming tool.**

Programming tools supporting write during RUN

Programming tool	Version	Remarks
GX Developer	Ver.2.00A or later	Supports write during RUN in the instruction and device ranges in FX2N PLCs Ver.1.00 or later.
	Ver.7.00A or later	Supports write during RUN in the instruction and device ranges in FX2N PLCs Ver.3.00 or later.
	Ver.8.13P or later	Supports write during RUN in the instruction and device ranges in FX3UC PLCs Ver.1.00 or later.
	Ver.8.18U or later	Supports write during RUN in the instruction and device ranges in FX3UC PLCs Ver.1.30 or later.
	Ver.8.23Z or later	Supports write during RUN in the instruction and device ranges in FX3U and FX3UC PLCs Ver.2.20 or later.
FX-PCS/WIN(-E)	Ver.1.00 or later	Supports write during RUN in the instruction and device ranges in FX2 PLCs Ver.3.30 or later.
	Ver.2.00 or later	Supports write during RUN in the instruction and device ranges in FX2N PLCs Ver.1.00 or later.
	Ver.4.20 or later	Supports write during RUN in the instruction and device ranges in FX2N PLCs Ver.3.00 or later.

Cautions on write during RUN

Item	Caution
Program memories which can be written in RUN mode	Built-in RAM and optional memory cassette (whose write protect switch is set to OFF)
Number of program steps which can be written for circuit change in RUN mode	• GX Developer Ver.8.23Z or later 256 steps or less after edition (addition/deletion) (including NOP immediately after circuit blocks except final circuit)
	• GX Developer Ver.8.22Y or former 127 steps or less after edition (addition/deletion) (including NOP immediately after circuit blocks except final circuit)
	• FX-PCS/WIN(-E)
Circuit blocks which cannot be written in RUN mode	Circuit blocks in which labels P and I are added, deleted or changed in edited circuits
	Circuit blocks in which 1-ms timers (T246 to T249 and T255 to T511) are added in edited circuits
	Circuit blocks in which the following instructions are included in edited circuits <ul style="list-style-type: none"> • Instruction to output high speed counters C235 to C255 (OUT instruction) • SORT2 (FNC149), TBL (FNC152), RBFM (FNC278) and/or WBFM (FNC279) instruction

Item	Caution								
Circuit blocks which require attention on operation after write during RUN	Avoid write during RUN to a circuit block including the following instructions during execution. If write during RUN is executed to such a circuit block, the PLC decelerates and stops pulse output. <ul style="list-style-type: none">DSZR (FNC150), DVIT (FNC151), ZRN (FNC156), PLSV (FNC157) instruction [with acceleration/deceleration operation], DRVI (FNC158) and/or DRVA (FNC159) instruction								
	Avoid write during RUN to a circuit block including the following instruction during execution. If write during RUN is executed to such a circuit block, the PLC immediately stops pulse output. <ul style="list-style-type: none">PLSV (FNC157) instruction [without acceleration/deceleration operation]								
	Avoid write during RUN to a circuit block including the following instructions during execution of communication. If write during RUN is executed to such a circuit block, the PLC may stop communication after that. If the PLC stops communication, set the PLC to the STOP mode once, and then set it to the RUN mode again. <ul style="list-style-type: none">IVCK (FNC270), IVDR (FNC271), IVRD (FNC272), IVWR (FNC273) and/or IVBWR (FNC274) instructionInstructions for falling edge pulse When write during RUN is completed for a circuit including an instruction for falling edge pulse (LDF, ANDF, or ORF instruction), the instruction for falling edge pulse is not executed without regard to the ON/OFF status of the target device. When write during RUN is completed for a circuit including an instruction for falling edge pulse (PLF instruction), the instruction for falling edge pulse is not executed without regard to the ON/OFF status of the device that is set as the operation condition. It is necessary to set to ON the target device or operation condition device once and then set it to OFF for executing the instruction for falling edge pulse.Instructions for rising edge pulse When write during RUN is completed for a circuit including an instruction for rising edge pulse, the instruction for rising edge pulse is executed if a target device of the instruction for rising edge pulse or the operation condition device is ON. Target instructions for rising edge pulse: LDP, ANDP, ORP, and pulse operation type applied instructions (such as MOVP)								
	<table><tr><th>Contact ON/OFF status (while write during RUN is executed)</th><th>Instruction for rising edge pulse</th><th>Instruction for falling edge pulse</th></tr><tr><td>OFF</td><td>Not executed</td><td>Not executed</td></tr><tr><td>ON</td><td>Executed*1</td><td>Not executed</td></tr></table>	Contact ON/OFF status (while write during RUN is executed)	Instruction for rising edge pulse	Instruction for falling edge pulse	OFF	Not executed	Not executed	ON	Executed*1
Contact ON/OFF status (while write during RUN is executed)	Instruction for rising edge pulse	Instruction for falling edge pulse							
OFF	Not executed	Not executed							
ON	Executed*1	Not executed							
	*1. The PLS instruction is not executed.								
Others	When the number of program steps is reduced by deletion of contacts, coils and applied instructions, the program capacity becomes smaller by as many as the reduced number of steps.								

5.3 Cautions on using transparent function by way of USB in GOT1000 Series

When monitoring circuits, device registration, etc. or reading/writing programs in an FX3u PLC from GX Developer Ver.8.22Y or later using the transparent function by way of USB in the GOT1000 Series, make sure to execute the following setting.


If the following setting is not provided, a communication error occurs.

	GX Developer Ver.8.21X or former	GX Developer Ver.8.22Y or later*1
When using transparent function by way of USB in GOT1000 Series	Not supported (not available)	Setting shown below is required.
When using transparent function by way of RS-232 in GOT1000 Series	Set "COM port" and "Transmission speed" on "PC side I/F Serial setting" dialog box.	Select "RS-232C" in setting shown below, and set "COM port" and "Transmission speed".
When directly connecting GX Developer to PLC		

*1. GX Developer Ver.8.23Z or later supports the FX3u Series.

Setting in GX Developer (Ver. 8.22Y or later)

- 1 Select [Online] → [Transfer setup...] to open the "Transfer setup" dialog box.
- 2 Double-click [Serial] in [PC side I/F] to open the "PC side I/F Serial setting" dialog box.
- 3 Select "USB (GOT Transparent mode)".

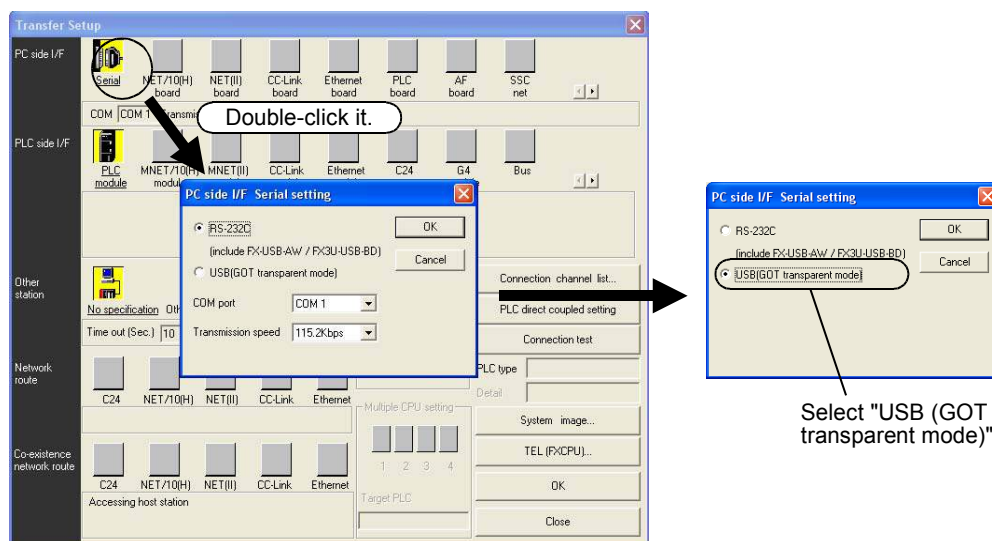

- 4 Click the [OK] button to finish the setting.

5.4 Cautions on using transparent port (2-port) function of GOT-F900 Series


When monitoring circuits, device registration, etc. in an FX3U PLC from GX Developer Ver. 8.13P or later using the transparent (2-port) function in the GOT-F900 Series, make sure to execute the following setting. If the following setting is not provided, monitoring cannot be executed normally.

	GX Developer Ver.8.12N or later	GX Developer Ver.8.13P or later	GX Developer Ver.8.22Y or later*1
When using transparent function in GOT-F900 Series	Setting shown below is required.	Setting shown below is not required.	Select "RS-232C" on "PC side I/F Serial setting" dialog box, and execute setting shown below.
When directly connecting GX Developer to PLC	Set "COM port" and "Transmission speed" on "PC side I/F Serial setting" dialog box.		Select "RS-232C" on "PC side I/F Serial setting" dialog box, and set "COM port" and "Transmission speed."

*1. GX Developer Ver.8.23Z or later supports the FX3U Series.

Setting in GX Developer (Ver.8.13P or later)

- 1 Select [Online] → [Transfer setup...] to open the "Transfer Setup" dialog box.
- 2 Double-click [PLC module] in [PLC side I/F] to open the [PLC side I/F Detailed setting of PLC module] dialog box.
- 3 Put a check mark to the check box [via GOT-F900 transparent mode] as shown below.

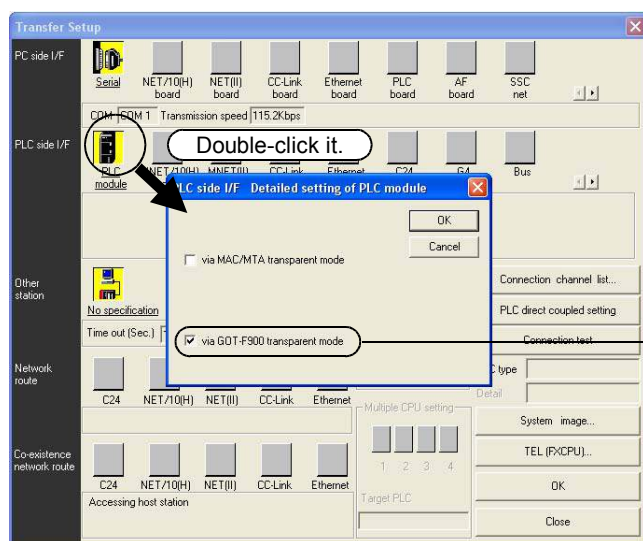


Put a check mark to the check box "via GOT-F900 transparent mode."

- 4 Click the [OK] button to finish the setting.

6. Examination of System Configuration

6.1 Configuration of Whole System

The configuration of the whole system is shown below.

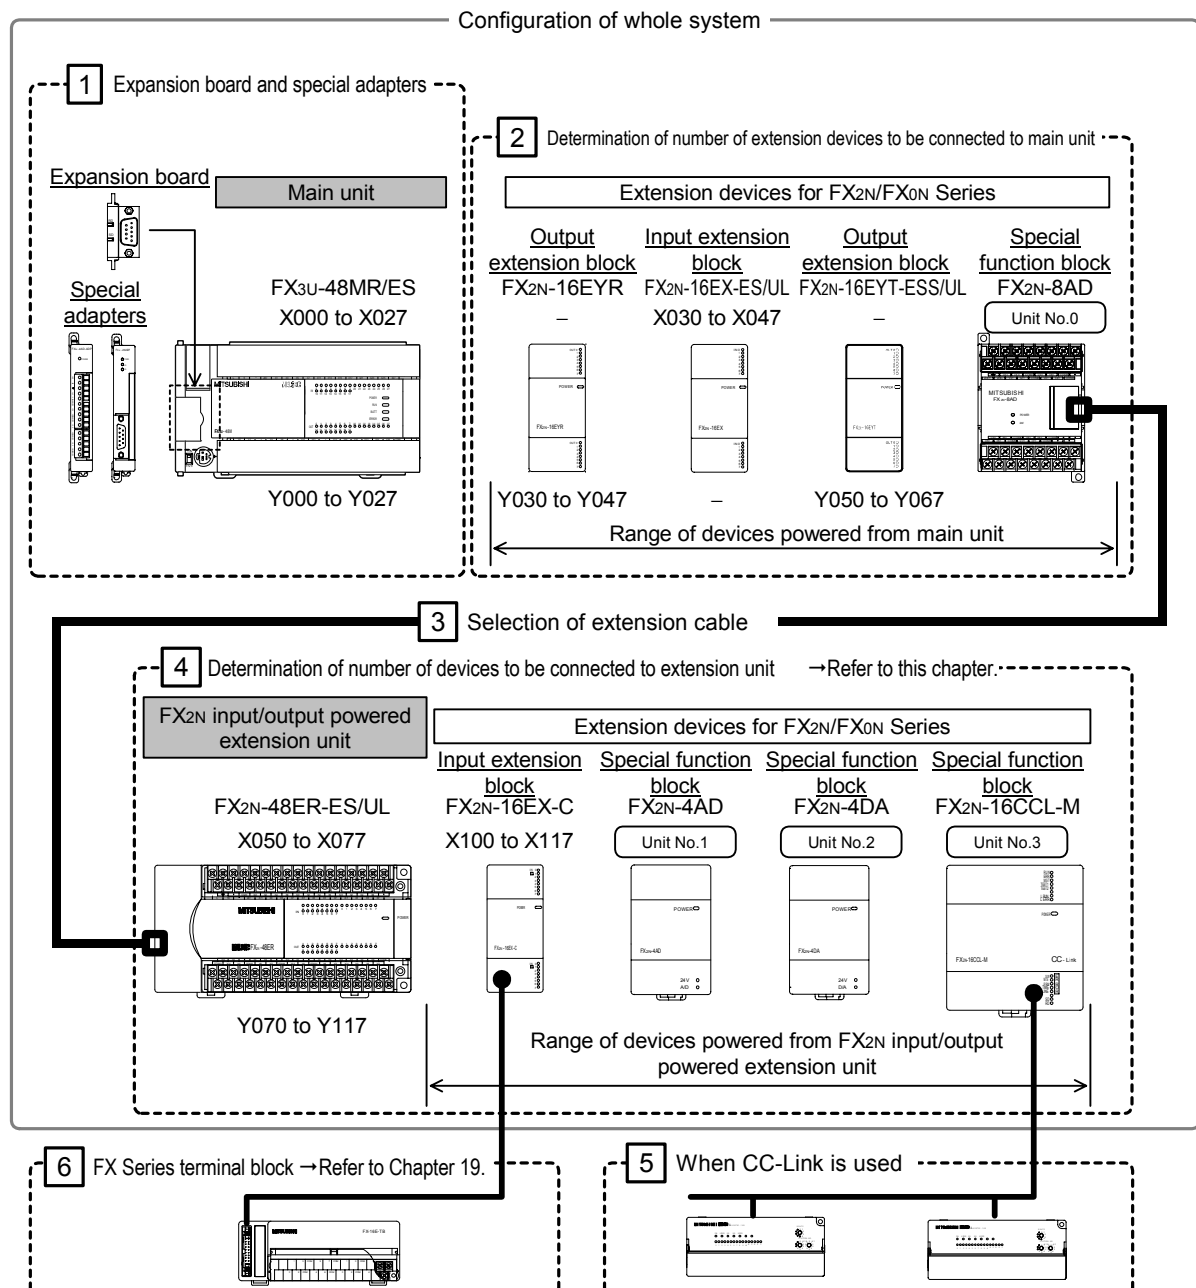

6.1.1 List of system components

Classification		Types (extracted) *1	Max. number of connect- able units	Other items to be considered				Reference
				Max. number of input/ output points	Number of input/output (occupied) points	5V DC power supply	24V DC power supply	
A Main unit		FX3U-16MR/ES : FX3U-80MR/ES	1 unit	✓ 256 points or less	✓*6	—	—	Subsection 6.7.1
D Input/output powered extension unit		FX2N-32ER FX2N-48ER	Not specified	✓ 256 points or less	✓*6	—	—	Subsection 6.7.4
D Input/output extension block		FX2N-16EX FX2N-16EYR	Not specified	✓ 256 points or less	✓*6	—	✓	
B Expansion board		FX3U-232-BD FX3U-422-BD FX3U-CNV-BD	1 unit	—	—	✓	—	Subsection 6.7.2
C Special adapter	Analog	FX3U-4AD-ADP FX3U-4AD-TC-ADP	Up to 4 units	—	—	✓	✓*4	Subsection 6.7.3
	Communi- cation	FX3U-232-ADP FX3U-485-ADP	Up to 2 units*2	—	—	✓	—	
	High- speed input	FX3U-4HSX-ADP	Up to 2 units	—	—	✓	✓	
	High- speed output	FX3U-2HSY-ADP	Up to 2 units	—	—	✓	✓	
E Special function unit/block	Analog	FX0N-3A FX2N-2AD FX2N-2DA	Up to 8 units*2	✓ 256 points or less	✓*7	✓	✓	Subsection 6.7.5
		FX2N-4AD FX2N-8AD FX2N-2LC		✓ 256 points or less	✓*7	✓	✓*4	
	Communi- cation	FX2N-232IF		✓ 256 points or less	✓*7	✓	✓*4	
	Position- ing	FX2N-10PG FX2N-10/20GM FX2N-1RM-SET		✓ 256 points or less	✓*7	✓	✓*4	
	Network	FX2N-64CL-M		✓ 256 points or less	✓*7	—	✓*4	
		FX2N-16CCL-M		✓*3 384 points or less	✓*7	—	✓*4	
		FX2N-32ASI-M				✓		
Extension cable		FX0N-30EC FX0N-65EC FX2N-GM-65EC	One of them*5	—	—	✓	—	Subsection 6.7.1

*1. For the types of connectable products, refer to the following chapter.

→ For the details, refer to Chapter 3 "Introduction of products (complying with overseas standards)."

*2. For some products, there are restrictions on combination and number of connected units.

→ For the details of the special adapters, refer to Subsection 6.4.1.


→ For the details of the special function units/blocks, refer to Subsection 6.4.2.

- *3. When CC-Link master or AS-i master is used, the maximum number of input/output points is 384.
 - **For the outline of CC-Link master, refer to Subsection 6.3.2 "Maximum number of input/output points when CC-Link master is used."**
 - **For the outline of AS-i master, refer to Subsection 6.3.3 "Maximum number of input/output points when AS-i master is used."**
- *4. When the special function units/blocks are externally wired to 24V DC power supply, the current consumed by them is added to the current consumption.
- *5. One extension cable can be used on a system. The cable to be used depends on the products to be added. The extension cable must be selected carefully.
 - **For the outline of the extension cable, refer to Subsection 6.4.3 "Extension cable."**
- *6. The number of input/output points varies depending on the type.
- *7. The special function units/blocks (except FX_{2N}-16LNK-M) occupy eight input/output points each.
 - **For the details of the special function units/blocks, refer to Subsection 6.4.2.**

6.1.2 System configuration with special adapters


1. When high-speed input/output special adapters are used

When only high-speed input/output special adapters are connected, the adapters can be used without an expansion board.

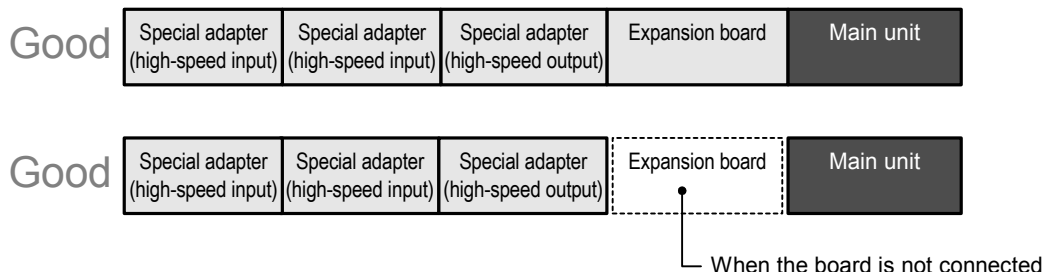


2. When analog and communication special adapters are used

1) Analog and communication special adapters must be used with an expansion board.

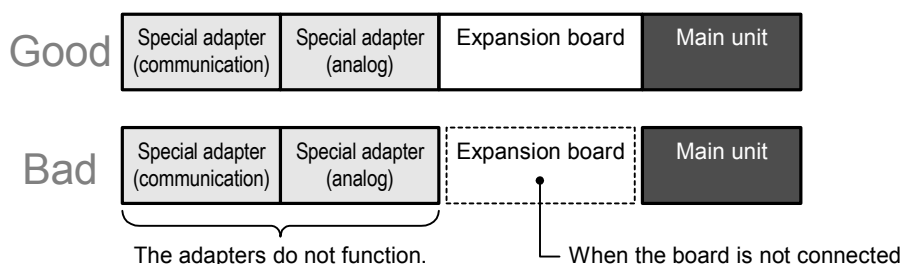


2) When an expansion board (except FX3U-CNV-BD) is used, one communication special adapter is usable.

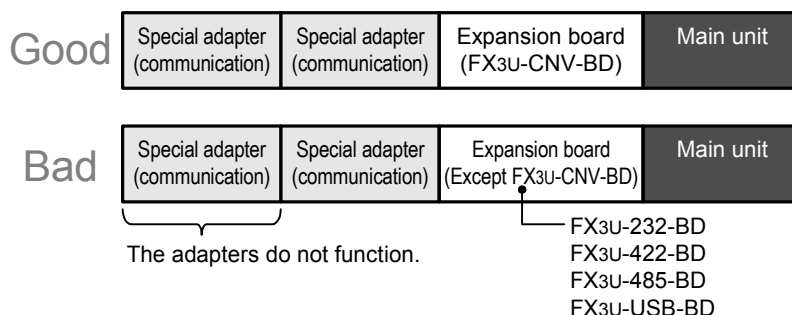

3. When high-speed input/output, analog and communication adapters are used

When these adapters are used, connect the high-speed input/output special adapters on the left side of the main unit.

The high-speed input/output special adapters cannot be connected on the downstream side of any communication/analog special adapter.

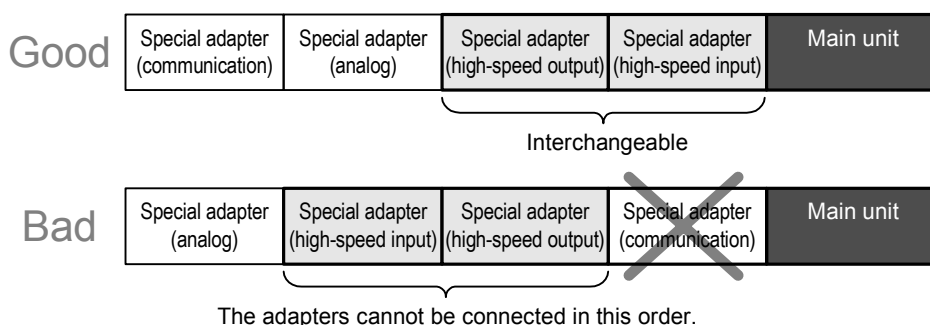


6.2 Rules of System Configuration

The system configuration must meet the following three requirements.

1 Number of input/output points

The total number of input/output points and remote I/O points on CC-Link or AS-i system must be 384 points or less on the whole system.

→ For the details, refer to Section 6.3 "Number of input/output points and maximum number of input/output points."

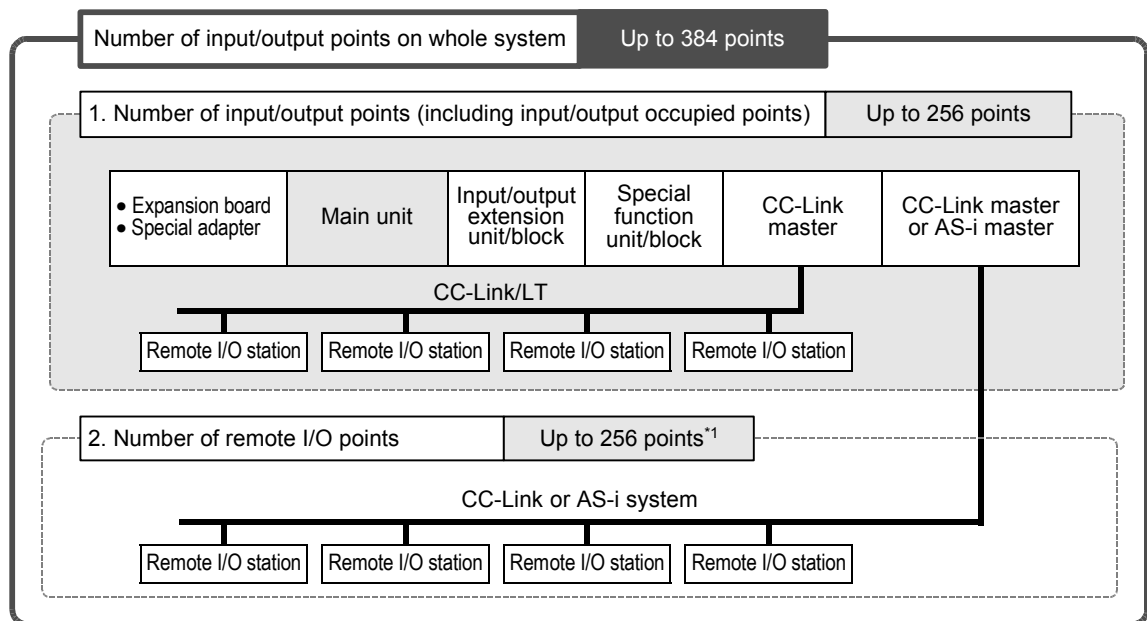


*1. Regarding the type of network, the number of remote I/O is up to 224 points in CC-Link and is up to 248 points in AS-i.

2 Number of connected special extension devices

The numbers of connectable expansion boards, special adapters and special function units/blocks are shown below.

→ For the details, refer to Section 6.4 "Number of connected special extension devices (including extension cable)."

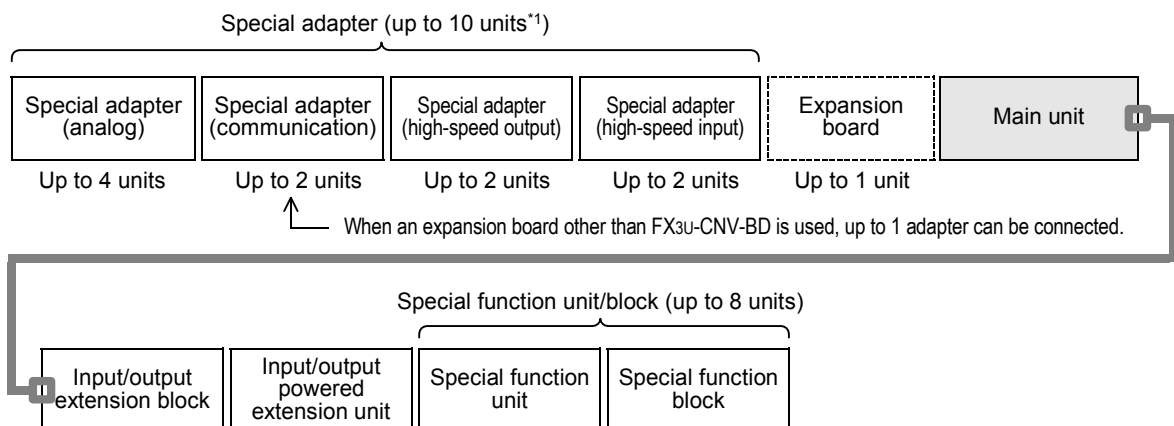


*1. When an expansion board other than FX3U-CNV-BD is used, up to 9 adapters can be connected.

3 Calculation of current consumption

Power is supplied to each connected device from the main unit or the built-in power supply of the input/output powered extension unit.

There are two types of built power supplies; 24V DC service power and 5V DC power. The power to be consumed varies depending on the type of product to be added.

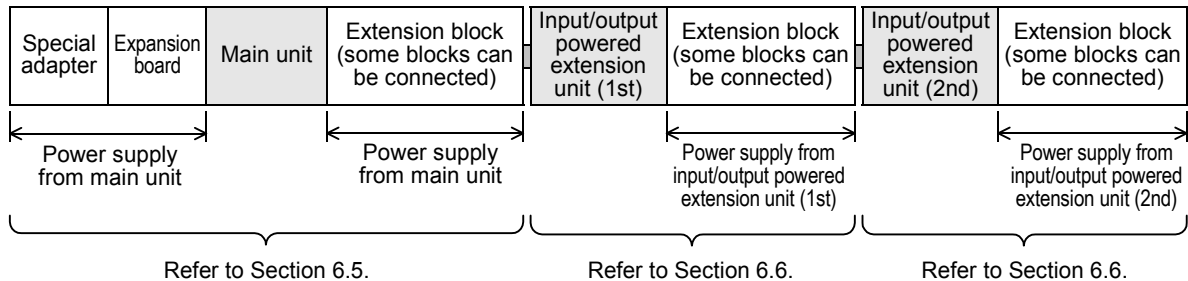

→ For the details, refer to Section 6.5 "Possibility of Addition to Main Unit (Calculation of Current Consumption)."

→ For the details, refer to Section 6.6 "Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)."

6.3 Number of Input/Output Points and Maximum Number of Input/Output Points

6.3.1 Calculation of number of input/output points

To obtain the total number of input/output points, count the input/output points of input/output powered extension units/blocks and the input/output occupied points of special function units/blocks.
The number of remote I/O points on CC-Link or AS-i master network must be excluded.

1 Total the number of input/output points on the main unit and the number of those on the input/output powered extension units/blocks.

To obtain the total number of input/output points, count the input points (X000 and more) and output points (Y000 and more) of the main unit and input/output powered extension units/blocks.
The number of input/output points of each type of device is shown on the list below.

→ The list of numbers of input/output points is shown in Section 6.7.

2 Count the input/output points of the remote I/O stations connected on FX2N-64CL-M or FX2N-16LNK-M network.

Add the number of remote I/O points to the number of input/output points from the main unit and input/output powered extension units/blocks calculated in the above step.


→ For the method of calculating the number of remote I/O points, refer to the manual for each master.

3 Count the number of input/output occupied points of special function units/blocks.

The number of occupied input/output points per unit is 8.

The number of occupied input/output points of each type of device can be obtained by the following formula or from the list shown below.

→ For the number of occupied input/output points, refer to Section 6.7.

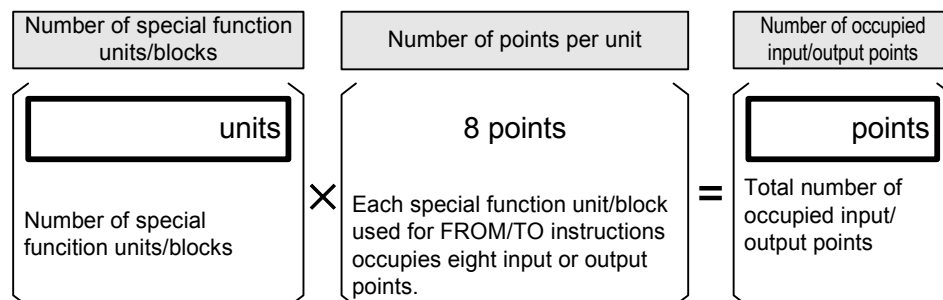


Observe the following instructions when using the following products.

- FX2N-1RM(-SET)
Up to 3 units can be sequentially connected to the end of one system.
However, when three units are connected, they are counted as one unit, and the number of input/output occupied points is 8.
- FX2N-16CCL-M(CC-Link master)
This master cannot be used together with FX2N-32ASI-M.
When more than one master station is connected, a remote I/O station cannot be connected to the 2nd and following master stations.
- FX2N-32ASI-M(AS-i master)
This master cannot be used together with FX2N-16CCL-M.
Only one station can be used for the whole system.

4 Calculate the total number of input/output points.

Total the number of points counted in Steps 1, 2 and 3, and check that it does not exceed 256 points (maximum number of input/output points).

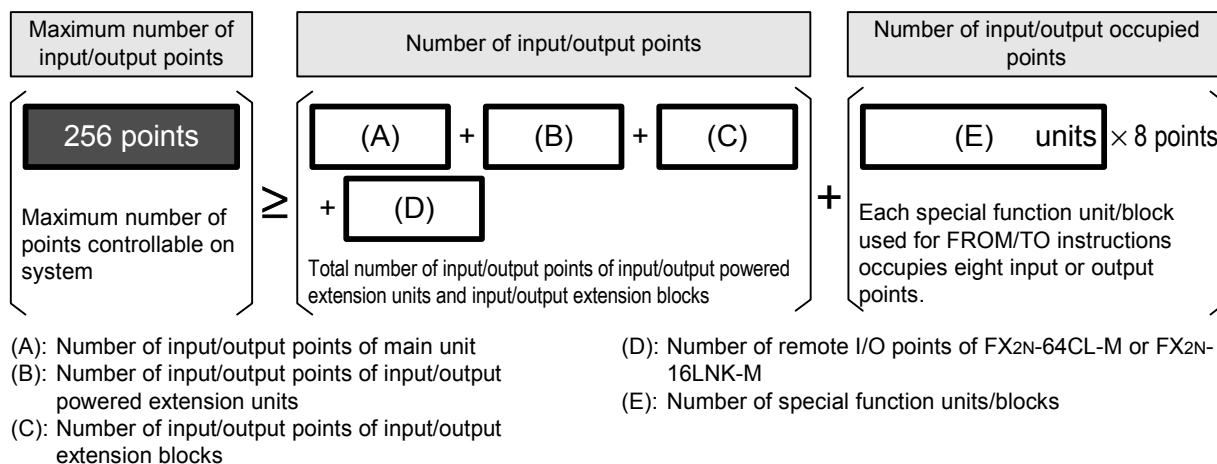

5 When CC-Link or AS-i master is used, count the remote I/O points.

When CC-Link or AS-i master is used, (the total number of input/output points of the remote I/O stations connected on the network) and the number of input/output points calculated in the previous step is 384 or less.

For the details, refer to the following subsection.

1. FX2N-16CCL-M(CC-Link master)

Calculate the number of remote I/O points connected on the network in the following step.

→ When CC-Link master is used, refer to Subsection 6.3.2.

2. FX2N-32ASI×M(AS-i master)


Calculate the number of remote I/O points connected on the network in the following step.

→ When AS-i master is used, refer to Subsection 6.3.3.

6.3.2 Maximum number of input/output points when CC-Link master is used

1. Calculation of maximum number of input/output points

When CC-Link master block is used, the following maximum number of input/output points can be connected.

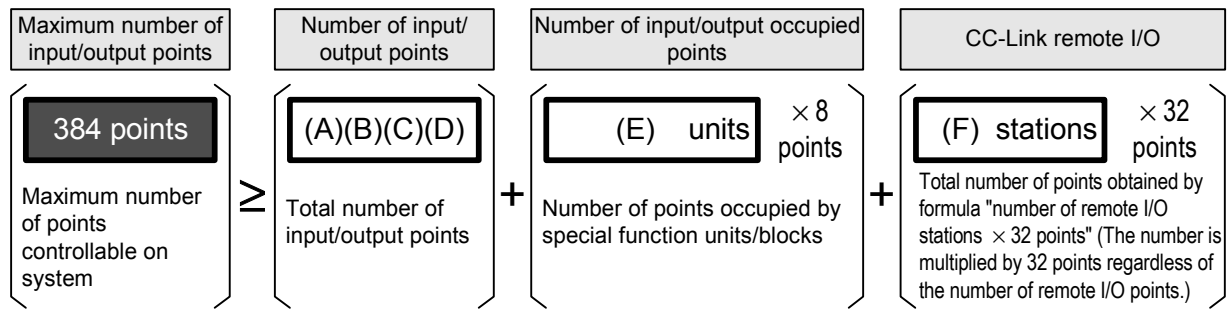


(A): Number of input/output points of main unit
(B): Number of input/output points of input/output powered extension units
(C): Number of input/output points of input/output extension blocks

(D): Number of remote I/O points of FX2N-64CL-M or FX2N-16LNK-M
(E): Number of input/output points occupied by special function units/blocks
(F): Number of remote I/O stations (units) connected to CC-Link master

- *1. When seven 32-point type remote I/O stations are used, the number of CC-Link remote I/O points reaches the maximum number.
The number of CC-Link points is calculated by the formula "32 points × number of stations" even when remote I/O stations having less than 32 points are used.
For the details, refer to FX2N-16CCL-M User's Manual.

2. Procedures for calculating number of input/output points based on example of system configuration


As to the main unit, input/output powered extension units/blocks and CC-Link remote I/O stations, the number of input/output points and the total number of points are restricted.

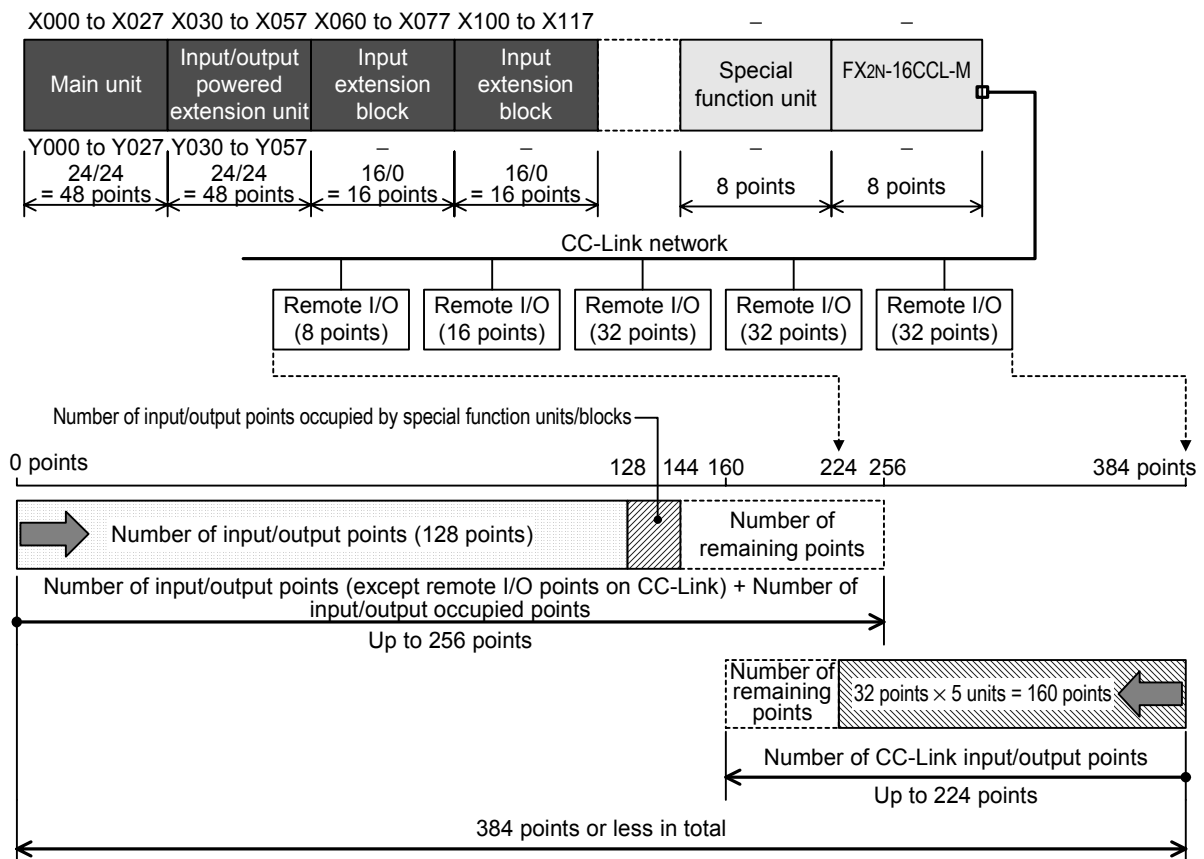

6.3.3 Maximum number of input/output points when AS-i master is used

1. Calculation of maximum number of input/output points

When AS-i system master block is used, the following maximum number of input/output points can be connected.

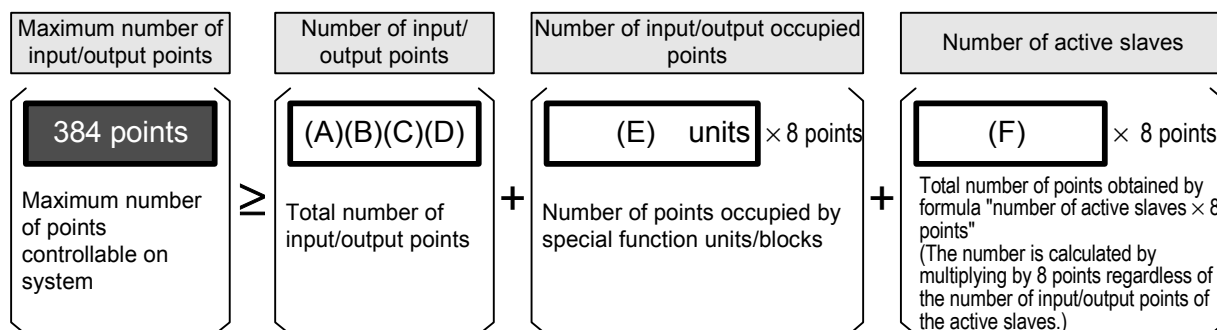


- (A): Number of input/output points of main unit
(B): Number of input/output points of input/output powered extension units
(C): Number of input/output points of input/output extension blocks

- (D): Number of remote I/O points of FX2N-64CL-M or FX2N-16LNK-M
(E): Number of input/output points occupied by special function units/blocks
(F): Number of active slaves connected to AS-i system master block

- *1. Up to 31 slaves can be connected to the AS-i system master block.
The maximum number is calculated by the formula "8 points × number of slaves" regardless of the number of I/O points used on one slave.
For the details, refer to AS-i System User's Manual.

2. Procedures for calculating number of input/output points based on example of system configuration

As to the main unit, input/output powered extension units/blocks and AS-i system, the number of input/output points and the total number of points are restricted.

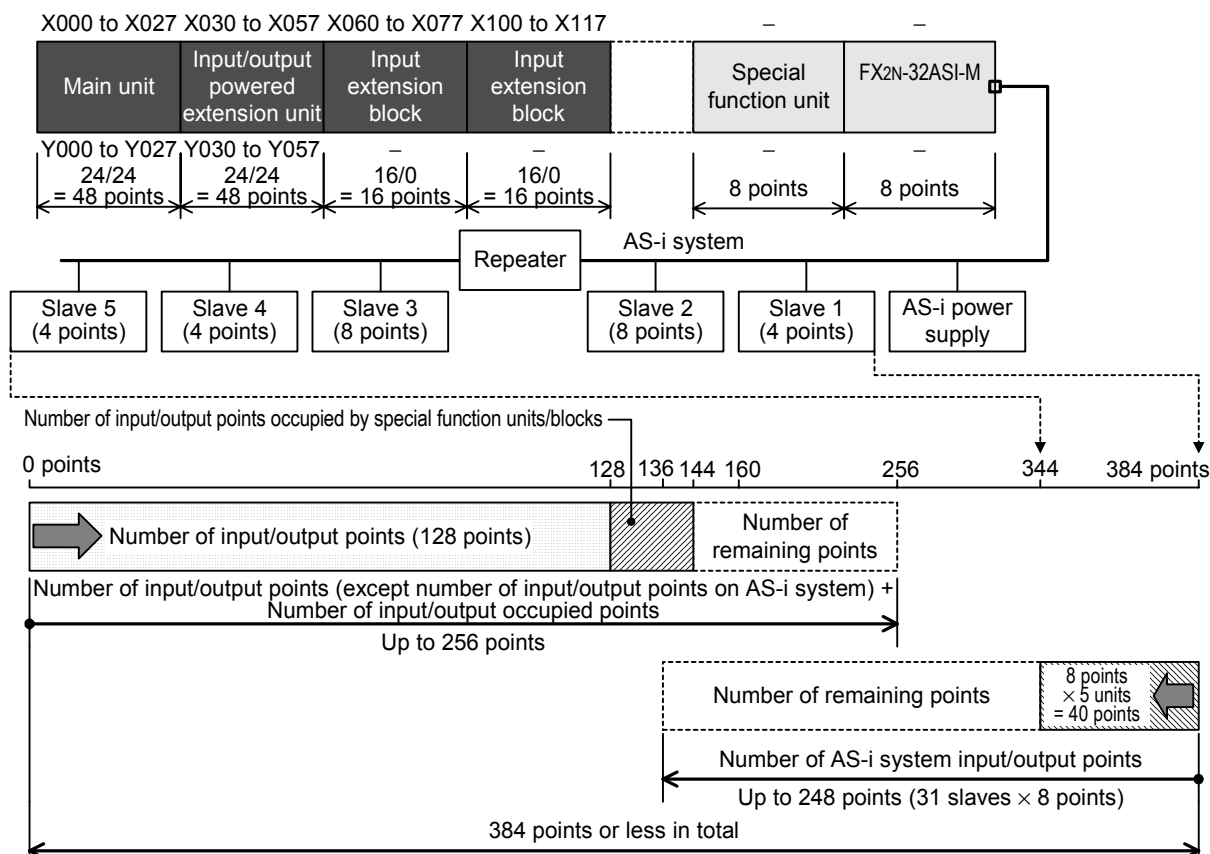

6.4 Number of Connected Special Extension Devices (Including Extension Cable)

6.4.1 Expansion board and special adapter

The number of connected special adapters is restricted depending on the type of special adapters attached as explained below.

The number of communication special adapters is restricted depending on the combination of a communication expansion board.

The number of special adapters other than communication adapters is restricted as shown in the following table.

Type and function of expansion board to be used	Number of connectable special adapters of each type			
	Communi- cation	Analog	High-speed input	High-speed output
When expansion board is not used	Cannot be connected.		2 unit	2 unit
When FX3U-232-BD, FX3U-422-BD, FX3U-485-BD or FX3U-USB-BD is used	1 unit	4 unit	2 unit	2 unit
When FX3U-CNV-BD is used	2 unit	4 unit	2 unit	2 unit

6.4.2 Special function units/blocks

Up to eight special function units/blocks can be connected in one system.

When connecting the following products, take into consideration the combination, number of units/blocks and connecting order.

Type	Limitations
FX2N-16CCL-M	<ul style="list-style-type: none"> It cannot be used together with FX2N-32ASI-M. When some units are used, a remote I/O station cannot be connected to the second and following master stations.
FX2N-32ASI-M	<ul style="list-style-type: none"> It cannot be used together with FX2N-16CCL-M. Only one unit can be used on the whole system.
FX2N-1RM(-E)-SET	<ul style="list-style-type: none"> Up to 3 units can be sequentially connected to the end of one system. However, when three units are connected, they are counted as one unit, and the number of input/output occupied points is 8.
FX0N-3A FX2N-2AD FX2N-2DA	<p>When any of these products is connected to FX2N Series input/output powered extension unit, the current consumption is restricted.</p> <p>The total current consumption of FX0N-3A, FX2N-2AD and FX2N-2DA must be the following value or less.</p> <ul style="list-style-type: none"> FX2N-32E□:190mA or less FX2N-48E□:300mA or less

6.4.3 Extension cable

One extension cable can be used in a system.

The type of cable varies according to the product being connected.

- FX0N-65EC
- FX0N-30EC
- FX2N-GM-65EC (for FX2N-10GM and FX2N-20GM)

2 Confirm the current capacity of 24V DC service power supply from the value shown in the quick reference matrix.

This remaining power supply capacity (current) can be used as a power supply to external loads (sensors or the like) by the user.

→ Refer to "quick reference matrix" described previously.

When special adapters and special function units/blocks are connected, it is necessary to consider whether they can be covered by this remaining power supply capacity.

6.5.2 When special extension devices are also added (calculation of current consumption)

1 Select a main unit.

Select a main unit.

Select one main unit appropriate to the required number of input/output points from the following table.

Classification	Type	Input/output type	Number of input/output points [points]	Capacity of built-in power supply	
				5V DC power supply[mA]	24V DC power supply[mA]
A			1-1	1-2	1-3
A main unit	FX3U-16MR/ES	24V DC input/relay output	16	500	400
	FX3U-32MR/ES		32		
	FX3U-48MR/ES		48		600
	FX3U-64MR/ES		64		
	FX3U-80MR/ES		80		

When the number of input/output points is insufficient, add input/output extension blocks.

2 Enter the specifications for the selected main unit.

Enter the number of input/output points and power supply type of the main unit according to the above table.

	Classification	Number of connected units	Type	Number of input/output points [points]	Capacity of built-in power supply	
					5V DC power supply[mA]	24V DC power supply[mA]
				1-1	1-2	1-3
1	With built-in power supply	<div>A</div> main unit	1	FX3U-		
Example of entry→				FX3U-32MR/ES	32	500
						400

3 Enter the specifications for the products to be added.

Enter the data on the input/output extension blocks and special function units/blocks to be connected to the main unit in the following table, and calculate the current.

→ For the data on the number of input/output occupied points and current consumption of each type, refer to Section 6.7.

	Classification	Number of connected units	Type	Number of input/output (occupied) points [points]	Calculation of current consumption of built-in power supply	
					5V DC power supply[mA]	24V DC power supply[mA]
Enter the products connected to the main unit.	B Expansion board	1	FX3U-	—		—
	C Special adapter	10	FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
			FX3U-	—		
	D2 Input/output extension block	—	FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
	E Special function unit/block	8	FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
	G Display module	1	FX3U-7DM			
				2-1	2-2	2-3
Calculate the totals.						

2

4 Determine whether the devices can be connected to the main unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

Capacity of 24V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
<div style="border: 1px solid black; padding: 5px; display: inline-block;">1-3</div> mA	<div style="border: 1px solid black; padding: 5px; display: inline-block;">2-3</div> mA	<div style="border: 1px solid black; padding: 5px; display: inline-block; width: 100px;"></div> mA

$$\geq 0\text{mA}$$

2. Calculate the current consumption of the built-in 5V DC power supply.

Capacity of 5V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
<div style="border: 1px solid black; padding: 5px; display: inline-block;">1-2</div> mA	<div style="border: 1px solid black; padding: 5px; display: inline-block;">2-2</div> mA	<div style="border: 1px solid black; padding: 5px; display: inline-block; width: 100px;"></div> mA


$$\geq 0\text{mA}$$

If the results of calculation of current consumption of 24V DC power supply and 5V DC power supply are negative values, this means that the current consumption exceeds the capacity of the built-in power supply. Reexamine the system configuration adding input/output powered extension units.

6.6 Expansion of FX2N Series I/O Powered Extension Unit (Calculation of Current Consumption)

If the selected devices could not be connected in the previous section, select an input/output powered extension unit.

Since input/output powered extension units have built-in input/output terminals, reexamine the input/output devices connected to the main unit to ensure the required number of points.

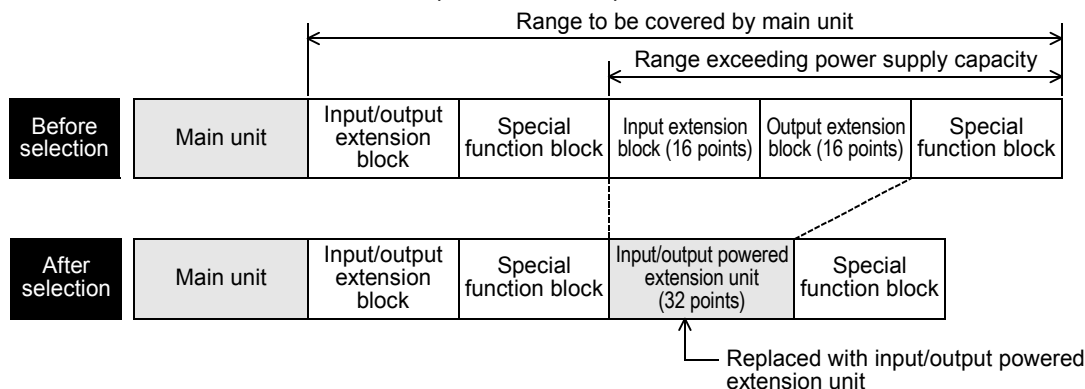

Determine whether extension devices can be connected to the input/output powered extension unit by the following method.

- When only input/output extension devices are added, use the quick reference matrix.
→ Refer to Subsection 6.6.1 "Quick reference matrix (when only input/output devices are added)."
- When also special extension devices are added, calculate the current consumption to ensure that the total current to be consumed by the added extension devices can be supplied by the built-in power supply.
→ Refer to 6.6.2 "When special extension devices are also added (calculation of current consumption)."

6.6.1 Quick reference matrix (when only input/output devices are added)


In the following quick reference matrix, the value at the intersection of the number of input points to be added (horizontal axis) with the number of output points to be added (vertical axis) indicates the remaining power supply capacity.

1 Select the input/output extension block (number of points) to be connected to the main unit.

Check that the number of input/output points can be added.

1. AC power supply/DC input type

- FX2N-32ER, FX2N-32ET, FX2N-32ES
FX2N-32ER-ES/UL, FX2N-32ET-ESS/UL

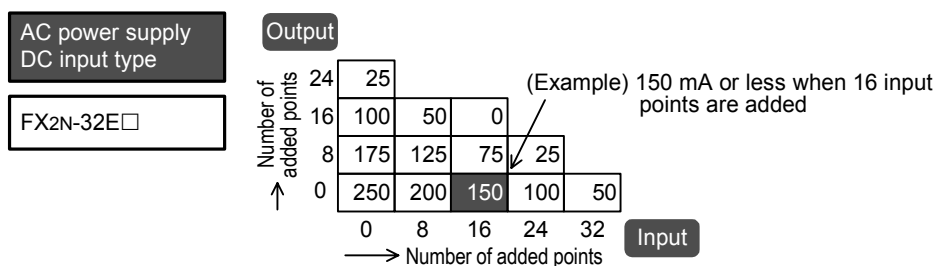

When a 16-input and 0-output point extension block is connected to FX2N-32E□, the current of 24V DC service power supply becomes 150 mA or less.

AC power supply
DC input type

FX2N-48E□

Output

(Example) 110 mA or less when 32 input points and 16 output points are added

48	10																		
40	85	35																	
32	160	110	60	10															
24	235	185	135	85	35														
16	310	260	210	160	110	60	10												
8	385	335	285	235	185	135	85	35											
0	460	410	360	310	260	210	160	110	60										
		0	8	16	24	32	40	48	56	64									

Number of added points

Number of added points

Input

2. AC power supply/AC input type

AC power supply
DC input type

FX2N-48ER-UA1/UL

Output

(Example) Up to 32 output points can be added when 24 input points are added.

Number of added points

48	✓									
40	✓		✓							
32	✓	✓	✓	✓	✓					
24	✓	✓	✓	✓	✓	✓				
16	✓	✓	✓	✓	✓	✓	✓			
8	✓	✓	✓	✓	✓	✓	✓	✓	✓	
0	—	✓	✓	✓	✓	✓	✓	✓	✓	✓
	0	8	16	24	32	40	48	56	64	

Number of added points

Input

1. In the case of AC power supply/DC input type

2. In the case of AC power supply/AC input type

When two input/output powered extension units or more are connected, calculate the power supply capacities of the input/output extension blocks and special function units/blocks connected to them, and check the capacity.

6.6.2 When special extension devices are also added (calculation of current consumption)

1 Select an input/output powered extension unit.

→ For the data on the number of input/output occupied points and current consumption of each type, refer to Section 6.7

Power supply classification	Classification	Number of connected units	Type	Number of input/output points [points]	Capacity of built-in power supply	
					5V DC power supply[mA]	24V DC power supply[mA]
				3-1	3-2	3-3
With built-in power supply	D1 Input/output powered extension unit	—	FX2N-			
Example of entry→ FX2N-48ER-ES/UL				48	690	460

2 Enter the specifications for the products to be added.

Enter the data on the input/output extension blocks and special function units/blocks to be connected to the input/output powered extension unit, and calculate the current.

→ For the data on the number of input/output occupied points and current consumption of each type, refer to Section 6.7

Power supply classification	Classification	Number of connected units	Type	Number of input/output points [points]	Calculation of current consumption of built-in power supply	
					5V DC power supply[mA]	24V DC power supply[mA]
Enter the products connected to the input/output powered extension unit.	<div>D2</div> Input/output extension block	—	FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
			FX2N-		—	
	<div>E</div> Special function unit/block	8*1	FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
			FX0N/FX2N-			
				4-1	4-2	4-3
Calculate the totals.						

*1. The number of connected special function units/blocks including the units/blocks connected to the main unit must be up to 8.

3 Determine whether FX0N-3A, FX2N-2AD and FX2N-2DA can be added.

Determine the number of analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) to be connected to the input/output powered extension unit by the following method.

- When connecting to FX2N-32E□

Analog special function block			Total current consumption
FX0N-3A	FX2N-2AD	FX2N-2DA	
$90\text{mA} \times \boxed{\text{units}}$	$+ 50\text{mA} \times \boxed{\text{units}}$	$+ 85\text{mA} \times \boxed{\text{units}}$	$= \boxed{\text{mA}} \leq 190\text{mA}$

- When connecting to FX2N-48E□

Analog special function block			Total current consumption
FX0N-3A	FX2N-2AD	FX2N-2DA	
$90\text{mA} \times \boxed{\text{units}}$	$+ 50\text{mA} \times \boxed{\text{units}}$	$+ 85\text{mA} \times \boxed{\text{units}}$	$= \boxed{\text{mA}} \leq 300\text{mA}$

4 Determine whether the devices can be added to the input/output powered extension unit.

Calculate the current to confirm whether the selected extension devices can be connected.

1. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

Capacity of 24V DC power supply	Current consumption	Calculation result
Input/output powered extension unit	Total of current consumed by extension devices	
$\boxed{3-3} \text{ mA}$	$\boxed{4-3} \text{ mA}$	$= \boxed{\text{mA}} \geq 0\text{mA}$

2. Calculate the current consumption of the built-in 5V DC power supply.

Capacity of 5V DC power supply	Current consumption	Calculation result
Input/output powered extension unit	Total of current consumed by extension devices	
$\boxed{3-2} \text{ mA}$	$\boxed{4-2} \text{ mA}$	$= \boxed{\text{mA}} \geq 0\text{mA}$

If the results of calculation of current consumption of 24V DC power supply and 5V DC power supply are negative values, this means that the current consumption exceeds the capacity of the built-in power supply. Reexamine the system configuration adding input/output powered extension units.

6.7 Number of Input/Output (Occupied) Points and Current Consumption

The following tables show the number of input/output points or the number of input/output occupied points of each type of device, power supply type and current consumption necessary for selection of products.

- Number of input/output points or input/output occupied points on each type of device
- Output current of 5V DC power supply and 24V DC service power supply of main unit and input/output powered extension units
- Current consumed by expansion boards, special adapters, input/output extension blocks, special function units/blocks and display module

The current consumption is determined differently in the following cases.

- 5V DC and internal 24V DC are supplied to the products through the extension cable, and the current consumption must be calculated
Subtract the consumption current of internal 24V DC from the current of 24V DC service power supply.
- External 24V DC is consumed when the power supply terminal of any of the following products is connected to 24V DC service power supply terminal on the main unit or the input/output powered extension unit. Include the current in the calculation of current consumption.
When the terminal is connected with an external power supply, the current is not included in the calculation of current consumption.

6.7.1 [A] Main units

A

No.	Type	Input/output		Output current (mA)	
		Number of input/ output points [points]	Input/output [points]	5V DC power supply	24V DC service power supply
24V DC input/relay output type					
A1	FX3U-16MR/ES	16	8/8	500	400
	FX3U-32MR/ES	32	16/16		600
	FX3U-48MR/ES	48	24/24		
	FX3U-64MR/ES	64	32/32		
	FX3U-80MR/ES	80	40/40		

6.7.2 [B] Expansion boards

B

No.	Type	Number of input/output occupied points	Current consumed (mA)	
			5V DC	Internal 24V DC
B1	FX3U-232-BD	—	20	—
	FX3U-422-BD	—	20*1	—
	FX3U-485-BD	—	40	—
	FX3U-USB-BD	—	15	—
	FX3U-CNV-BD	—	—	—

*1. When FX3U-422-BD is connected, add the current consumed by GOT/programming tool **F**.

GOT/programming tool

–: Need not be calculated

No.	Type	Number of input/ output occupied points	Current consumed (mA)	
			5V DC	Internal 24V DC
F1	FX-20P(-E)	–	150*1	–
	FX-10P(-E)	–	120	–
	FX-232AW	–	220	–
	FX-232AWC	–	220	–
	FX-232AWC-H	–	120	–
	FX-USB-AW	–	15	–
	FX-10DM(-SET0)(-E)	–	220	–
	F920GOT-BBD5-K(-E)	–	220	–

*1. When FX-20P-RWM is used, the current is 180 mA.

6.7.3 [C] Special adapters

–: Need not be calculated

No.	Type	Number of input/ output occupied points	Current consumed (mA)		
			5V DC	Internal 24V DC	External 24V DC
C1	FX _{3U} -4HSX-ADP	–	30	30	0
	FX _{3U} -2HSY-ADP	–	30	60	0
C2	FX _{3U} -4AD-ADP	–	15	0	40
	FX _{3U} -4DA-ADP	–	15	0	150
	FX _{3U} -4AD-PT-ADP	–	15	0	50
	FX _{3U} -4AD-TC-ADP	–	15	0	45
C3	FX _{3U} -232ADP	–	30	0	0
	FX _{3U} -485ADP	–	20	0	0

6.7.4 [D] Input/output powered extension units/blocks

1. Input/output powered extension units

No.	Type	Number of input/ output points	Output current (mA)	
			5V DC power supply	24V DC service power supply
D1	FX _{2N} -32ER-ES/UL	32	690	250
	FX _{2N} -32ET-ESS/UL	32		
	FX _{2N} -32ER	32		
	FX _{2N} -32ES	32		
	FX _{2N} -32ET	32		
	FX _{2N} -48ER-ES/UL	48		460
	FX _{2N} -48ET-ESS/UL	48		
	FX _{2N} -48ER	48		
	FX _{2N} -48ES	48		
	FX _{2N} -48ET	48		

2. Input/output extension blocks

–: Need not be calculated

D

No.	Type	Number of input/ output points	Current consumed (mA)		
			5V DC	Internal 24V DC	External 24V DC
	Types for addition of input				
	FX2N-16EX-ES/UL	16	—	100	0
	FX2N-16EX	16	—	100	0
	FX2N-16EX-C	16	—	100	0
	FX2N-16EXL-C	16	—	100	0
	Types for addition of output				
	FX2N-16EYR-ES/UL	16	—	150	0
	FX2N-16EYT-ESS/UL	16	—	150	0
	FX2N-16EYR	16	—	150	0
	FX2N-16EYS	16	—	150	0
D2	FX2N-16EYT	16	—	150	0
	FX2N-16EYT-C	16	—	150	0

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

6.7.5 [E] Special extension devices

1. Special function blocks

No.	Type	Number of input/ occupied output points	Current consumed (mA)		
			5V DC	Internal 24V DC	External 24V DC
E1	FX2N-2AD	8	20	50 ^{*6}	0
	FX2N-2DA	8	30	85 ^{*6}	0
	FX2N-4AD	8	30	0	55
	FX2N-4DA	8	30	0	200
	FX2N-4AD-TC	8	30	0	50
	FX2N-4AD-PT	8	30	0	50
	FX2N-8AD	8	50	0	80
	FX2N-5A	8	70	0	90
	FX2N-2LC	8	70	0	55
	FX2N-1HC	8	90	0	0
	FX2N-1PG(-E)	8	55	0	40
	FX2N-10PG	8	120	0	70 ^{*1}
	FX2N-232IF	8	40	0	80
	FX2N-16CCL-M	8 ^{*2}	0	0	150
	FX2N-32CCL	8	130	0	50
	FX2N-64CL-M	8 ^{*3}	190	Supplied from power supply for CC-Link/LT	
	FX2N-16LNK-M	0 ^{*4}	200	0	90
	FX2N-32ASI-M	8 ^{*5}	150	0	70
E2	FX0N-3A	8	30	90 ^{*6}	0

- *1. When the voltage of the external DC power supply is 24V DC and 5V DC, the current is 70 mA and 100 mA, respectively.
- *2. This block cannot be used together with FX2N-32ASI-M.
The following number of points is added according to the products connected on the network.
Number of remote I/O stations × 32 points
- *3. The following number of points is added according to the products connected on the network.
Total number of input/output points of remote I/O stations
- *4. The number of points varies according to the products connected on the network.
For the details, refer to FX2N-16LNK-M Manual.
- *5. This block cannot be used together with FX2N-16CCL-M. Only one unit can be added on the whole system.
The following number of points is added according to the products connected on the network.
Number of active slaves × 8 points
- *6. When analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) are connected to the input/output powered extension unit (FX2N-32E□ or FX2N-48E□), the following limitation must be taken into consideration. (When the blocks are connected to the main unit, this limitation is not applied.)
The total current consumption of the analog special function blocks (FX0N-3A, FX2N-2AD and FX2N-2DA) should be less than the following current value.
- Total current consumption of blocks connected to FX2N-32E□: 190 mA or less
 - Total current consumption of blocks connected to FX2N-48E□: 300 mA or less

2. Special function units

No.	Type	Number of input/ occupied output points	Current consumed (mA)		
			5V DC	Internal 24V DC	External 24V DC
E3	FX2N-10GM	8	—	—	5
	FX2N-20GM	8	—	—	10
	FX2N-1RM(-SET)(-E)	8	—	—	5

6.7.6 [G] Display module

—: Need not be calculated

No.	Type	Number of input/ occupied output points	Current consumed (mA)		
			5V DC	Internal 24V DC	External 24V DC
G1	FX3U-7DM	—	20	0	0

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10


Input Wiring

6.8 Example of System Configuration and System Modification

The procedures for evaluating the suitability of the system configuration are explained using an example system configuration consisting of an expansion board, special adapters, input/output powered extension units/blocks and special function blocks.

6.8.1 Example system configuration

The system configuration is examined using the following example.

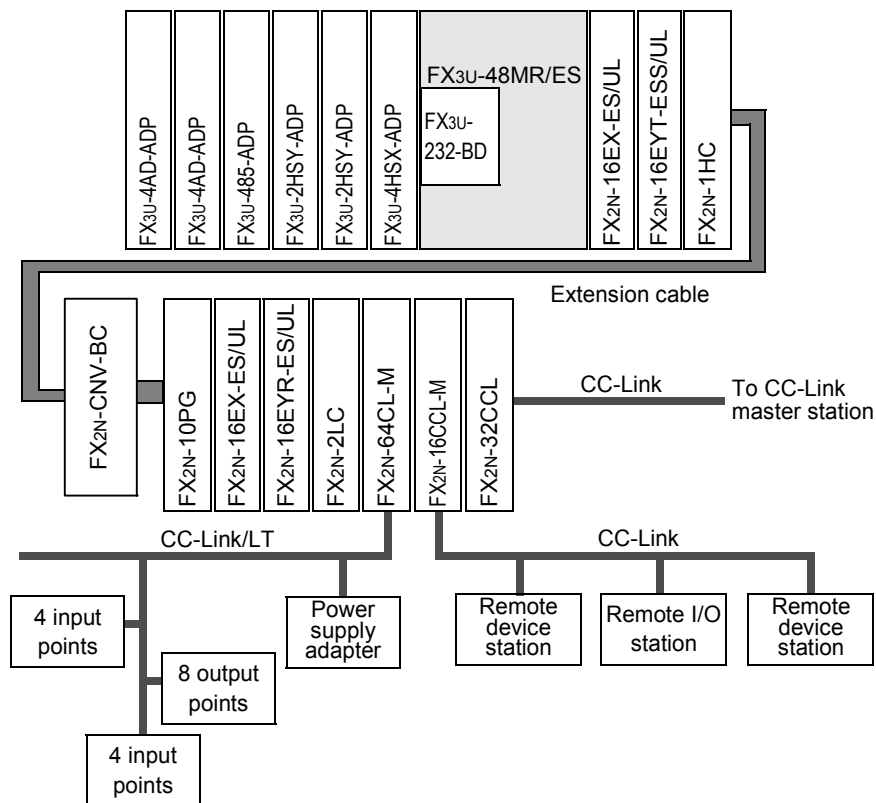

6.8.2 Expansion of main unit

The suitability of the above system configuration is evaluated as shown below.

1 Enter the specifications for the main unit.

	Classification	Number of connected units	Type	Number of input/output points [points]	Capacity of built-in power supply	
					5V DC power supply[mA]	24V DC service power supply[mA]
				1-1	1-2	1-3
With built-in power supply	A Main unit	1	FX3U-48MR/ES	48	500	600

2 Enter the specifications for the products to be connected to the main unit.

	Classification	Number of connected units	Type	Number of input/output (occupied) points [points]	Calculation of current consumption of built-in power supply	
					5V DC power supply[mA]	24V DC power supply[mA]
Enter the products connected to the main unit.	B Expansion board	1	FX3U-232-BD	—	20	0
	C Special adapter	6	FX3U-4HSX-ADP	—	30	30
			FX3U-2HSY-ADP	—	30	60
			FX3U-2HSY-ADP	—	30	60
			FX3U-485ADP	—	20	0
			FX3U-4AD-ADP	—	15	0
			FX3U-4AD-ADP	—	15	0
	D2 Input/output extension block	4	FX2N-16EX-ES/UL	16	—	100
			FX2N-16EYT-ESS/UL	16	—	150
			FX2N-16EX-ES/UL	16	—	100
			FX2N-16EYR-ES/UL	16	—	150
	E Special function unit/block	6	FX2N-1HC	8	90	0
			FX2N-10PG	8	120	0
			FX2N-2LC	8	70	0
			FX2N-64CL-M	8+16*1	190	0
			FX2N-16CCL-M	8	0	0
			FX2N-32CCL	8	130	0
				2-1	2-2	2-3
Calculate the totals.				128	760	650

*1. The number for FX2N-64CL-M is calculated by adding the number of input/output points at the connected remote I/O station to 8 points.

3 Calculate the number of input/output points.

Calculate the number of input/output points on the whole system.

1. Calculate the number of input/output points of the main unit and extension devices.

Number of input/output points				
Main unit	Total input/output points of extension devices	Calculation result	Max. number of input/output points	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">1-1</div> <div style="border: 1px solid black; padding: 2px;">48 points</div> </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">2-1</div> <div style="border: 1px solid black; padding: 2px;">128 points</div> </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">A</div> <div style="border: 1px solid black; padding: 2px;">176 points</div> </div>	≤ 256 points	OK

2. Calculate the number of remote I/O points on the network.

Since this system uses CC-Link, calculate the number of the remote I/O stations.

Input/output on network	Calculation result	Max. number of input/output points
Number of CC-Link remote I/O stations <div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="border: 1px solid black; padding: 2px;">1 station</div> </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">B</div> <div style="border: 1px solid black; padding: 2px;">32 points</div> </div>	≤ 224 points <div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">OK</div> </div>

└─ FX2N-16CCL-M: up to 7 stations

3. Calculate the total number of input/output occupied points (number of input/output points).

Total number of input/output points		Calculation result	Max. number of input/output points
Number of input/output occupied points <div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">A</div> <div style="border: 1px solid black; padding: 2px;">176 points</div> </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">B</div> <div style="border: 1px solid black; padding: 2px;">32 points</div> </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="border: 1px solid black; padding: 2px;">208 points</div> </div>	≤ 384 points <div style="border: 1px solid black; padding: 2px; display: inline-block;"> <div style="background-color: black; color: white; padding: 2px;">OK</div> </div>
Total obtained in Step 1	Total obtained in Step 2		

4 Determine whether the devices can be added to the main unit.

Calculate the current consumption to confirm whether the extension devices selected in the above step can be connected.

4. Calculate the current consumption of the built-in 5V DC power supply.

Capacity of 5V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
1-2 500mA	2-2 760mA	= -260mA NG

5. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

Capacity of 24V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
1-3 600mA	2-3 650mA	= -50mA NG

Since the calculated values of the current consumption of the 5V DC and 24V DC power supplies are negative, it is necessary to reexamine the configuration.


The next subsection explains the procedures for evaluating the reexamined and modified configuration.

6.8.3 Re-examination of suitability for configuration

When the main unit is short of 5V DC or 24V DC current, use an input/output powered extension unit.

Reexamine the above system configuration using an input/output powered extension unit.

Example of reexamined system configuration

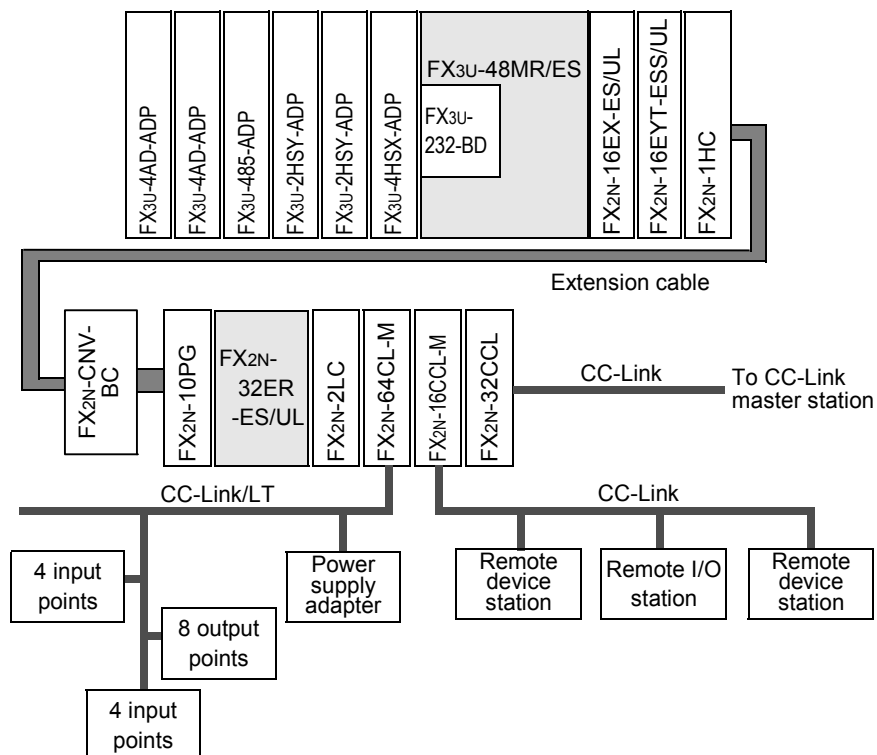

1 Enter the specifications for the main unit.

	Classification	Number of connected units	Type	Number of input/output points [points]	Capacity of built-in power supply	
					5V DC power supply[mA]	24V DC service power supply[mA]
				1-1	1-2	1-3
With built-in power supply	A Main unit	1	FX3U-48MR/ES	48	500	600

2 Enter the specifications for the products to be added to the main unit.

	Classification	Number of connected units	Type	Number of input/output (occupied) points [points]	Calculation of current consumption of built-in power supply	
					5V DC power supply[mA]	Internal 24V DC power supply[mA]
Enter the products connected to the main unit.	B Expansion board	1	FX3U-232-BD	—	20	0
	C Special adapter	6	FX3U-4HSX-ADP	—	30	30
			FX3U-2HSY-ADP	—	30	60
			FX3U-2HSY-ADP	—	30	60
			FX3U-485ADP	—	20	0
			FX3U-4AD-ADP	—	15	0
			FX3U-4AD-ADP	—	15	0
	D2 Input/output extension block	2	FX2N-16EX-ES/UL	16	—	100
			FX2N-16EYT-ESS/UL	16	—	150
	E Special function unit/block	2	FX2N-1HC	8	90	0
			FX2N-10PG	8	120	0
				2-1	2-2	2-3
Calculate the totals.				48	370	400

3 Enter the specifications for the input/output powered extension unit.

Power supply classification	Classification	Number of connected units	Type	Number of input/output points [points]	Capacity of built-in power supply	
					5V DC power supply[mA]	24V DC service power supply[mA]
				3-1	3-2	3-3
With built-in power supply	D1 Input/output powered extension unit	1	FX2N-32ER-ES/UL	32	690	250

4 Enter the specifications for the products to be added to the input/output powered extension unit.


	Classification	Number of connected units	Type	Number of input/output occupied points [points]	Calculation of current consumption of built-in power supply	
					5V DC power supply[mA]	Internal 24V DC power supply[mA]
Enter the products connected to the Input/ output powered extension unit	<div>E</div> Special function unit/block	4	FX2N-2LC	8	70	0
			FX2N-64CL-M	8+16 ^{*1}	190	0
			FX2N-16CCL-M	8	0	0
			FX2N-32CCL	8	130	0
				4-1	4-2	4-3
Calculate the totals				48	390	0

*1. The number for FX2N-64CL-M is calculated by adding the number of input/output points at the connected remote I/O station to 8 points.

5 Calculate the number of input/output points.


Calculate the number of input/output points on the whole system.

1. Calculate the number of input/output points of the main unit and extension devices.

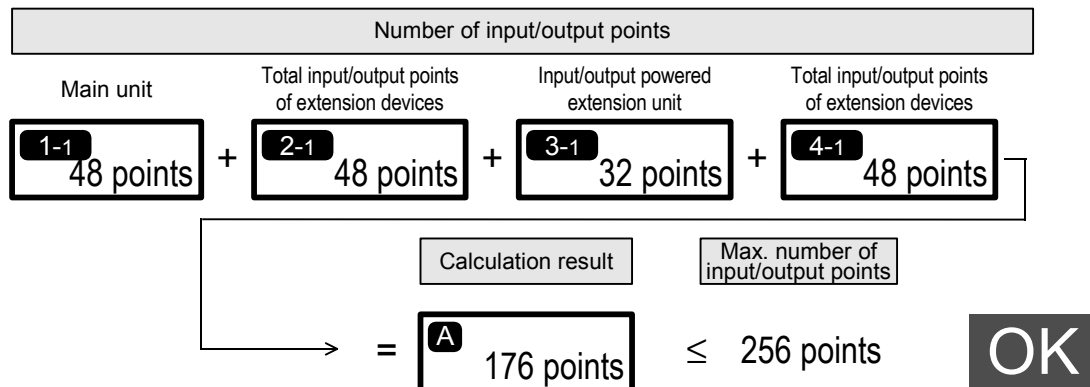

2. Calculate the number of remote I/O points on the network.

Since this system uses CC-Link, calculate the number of the remote I/O stations.

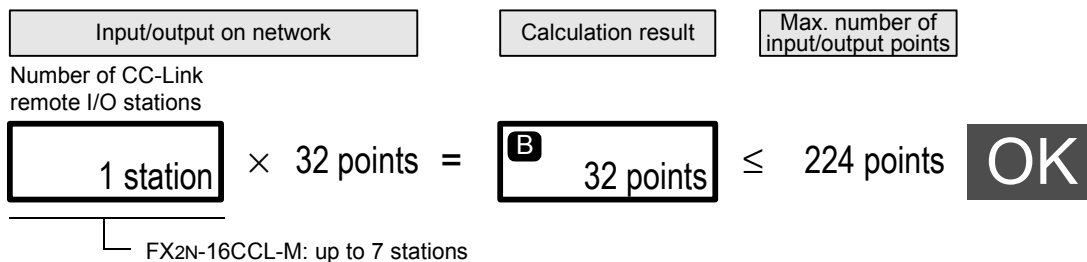

3. Calculate the total number of input/output occupied points (number of input/output points).

Total number of input/output points		Calculation result	Max. number of input/output points
Number of input/output occupied points	Input/output on network		
A 176 points Total obtained in Step 1	+ B 32 points Total obtained in Step 2	= 208 points	≤ 384 points

OK

6 Determine whether the devices can be added to the main unit.

Calculate the current by the following formula to confirm whether the extension devices selected in Step 2 can be connected.

1. Calculate the current consumption of the built-in 5V DC power supply.

Capacity of 5V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
1-2 500mA	- 2-2 370mA	= 130mA

≥ 0mA **OK**

2. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads.

Capacity of 24V DC power supply	Current consumption	Calculation result
Main unit	Total of current consumed by extension devices	
1-3 600mA	- 2-3 400mA	= 200mA

≥ 0mA **OK**

7 Determine whether the devices can be connected to the input/output powered extension unit.

Calculate the current by the following formula to confirm whether the extension devices selected in Step 4 can be connected.

1. Calculate the current consumption of the built-in 5V DC power supply.

Capacity of 5V DC power supply Input/output powered extension unit	Current consumption Total of current consumed by extension devices	Calculation result
3-2 690mA	4-2 390mA	300mA ≥ 0mA OK

2. Calculate the current consumption of the built-in 24V DC power supply (24V DC service power supply).

The value obtained by this calculation (when the value is positive) indicates the remaining capacity of 24V DC service power supply, and the capacity can be used for external loads

Capacity of 24V DC power supply Input/output powered extension unit	Current consumption Total of current consumed by extension devices	Calculation result
3-3 250mA	4-3 0mA	250mA ≥ 0mA OK

8 Verify the evaluation results.

Since the capacities of the 5V DC and 24V DC power supplies and the number of input/output points are within the specified ranges, the reexamined system configuration is feasible.

7. Assignment of Input/Output Numbers (X/Y) and Unit Numbers

7.1 Assignment of Input/Output Numbers (X/Y)

If input/output powered extension units/blocks have been connected when power is turned on, the main unit automatically assigns the input/output numbers (X/Y) (octal) to the units/blocks.

Therefore, it is unnecessary to specify the input/output numbers with parameters.

Input/output numbers are not assigned to special function units/blocks.

Input/output numbers are assigned to the special function blocks FX2N-64CL-M and FX2N-16LNK-M.

7.1.1 Concept of assigning

When power is turned on, input/output numbers (X/Y) are assigned in accordance with the following rules.

For special function blocks, such as FX2N-64CL-M and FX2N-16LNK-M, that assign input/output numbers to connected remote I/O stations, refer to the manual for each block.

1. Input/output numbers (X/Y) are octal.

Octal numbers are assigned as input/output numbers (X/Y) as shown below.

- X000 to X007, X010 to X017, X020 to X027....., X070 to X077, X100 to 107...
- Y000 to Y007, Y010 to Y017, Y020 to Y027....., Y070 to Y077, Y100 to Y107...

2. Numbers for added input/output unit/block

To an added input/output powered extension unit/block, input numbers and output numbers following the input numbers and output numbers given to the preceding device are assigned.

The last digit of the assigned numbers must begin with 0.

For example, when the last number on the preceding device is Y103, the output numbers are assigned to the next device starting from Y110.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring


10

Input Wiring

7.1.2 Example of assigning


An example of assignment of input/output numbers (X/Y) is shown below.

1. Example of configuration

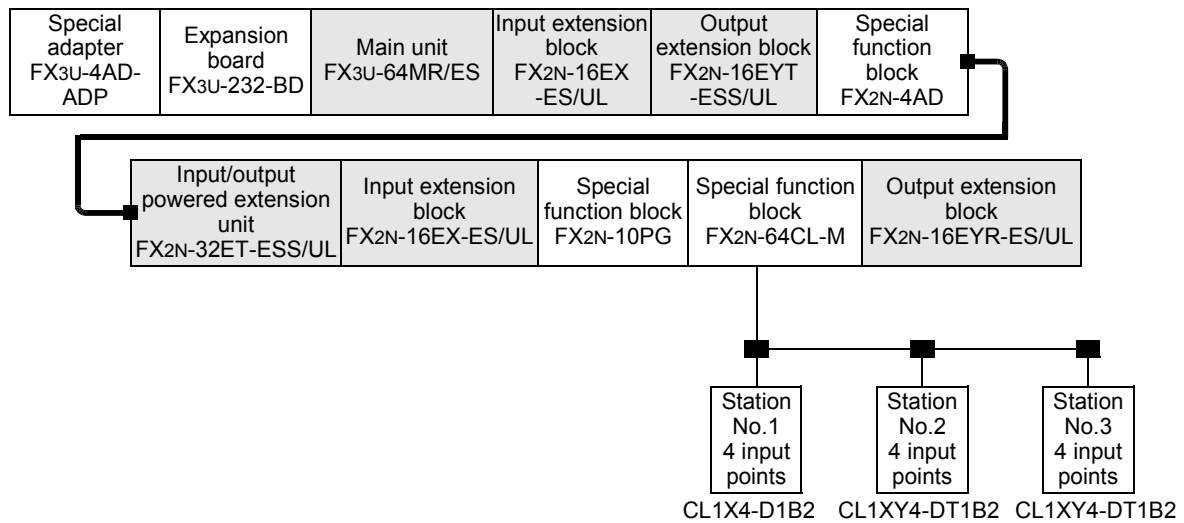

2. Assignment of input/output numbers


Input/output numbers are assigned to the above example configuration as shown below.

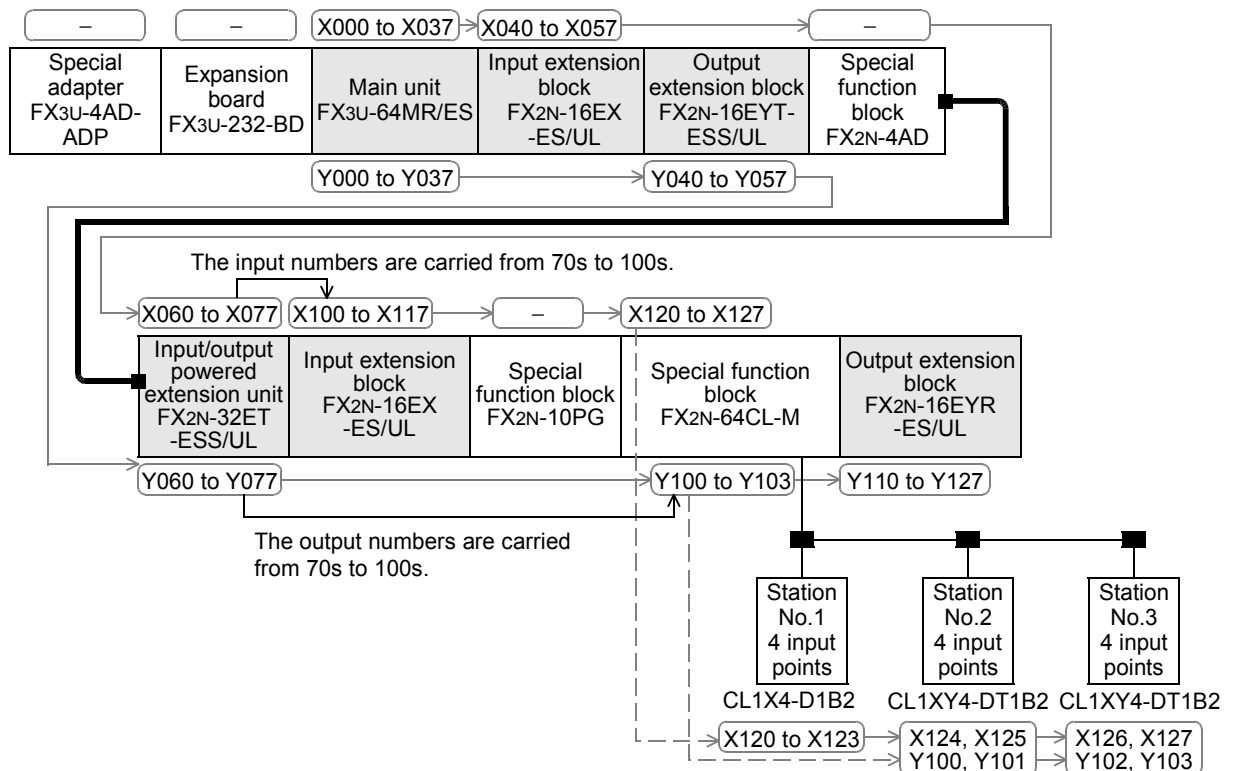

7.1.3 Application of I/O number label

The input/output powered extension units/blocks come with an I/O number label.

Apply the I/O number label to spaces on the enclosure (see the following figure) so that the input/output numbers can be identified.

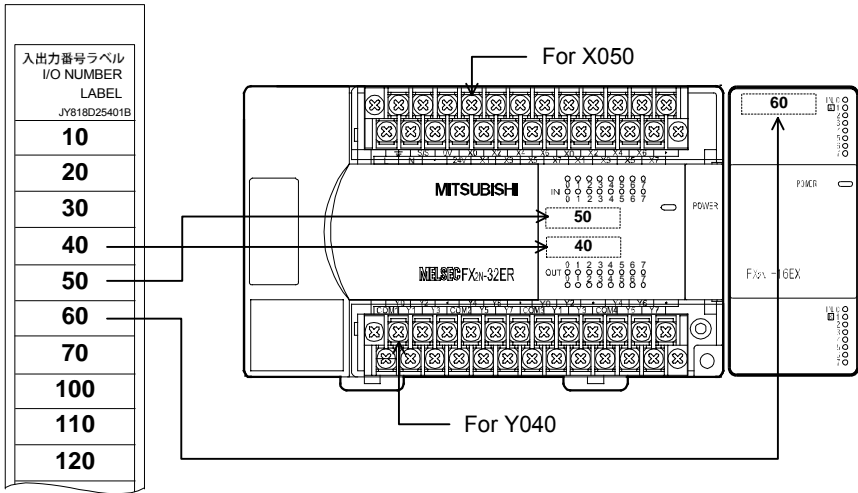

1	Introduction
2	Features and Part Names
3	Product Introduction
4	Specifications
5	Version and Peripheral Devices
6	System Configuration
7	Input/Output Nos., Unit Nos.
8	Installation
9	Preparation and Power Supply Wiring
10	Input Wiring

7.2 Unit Numbers of Special Function Units/Blocks

7.2.1 Concept of assigning

When power is turned on, the main unit (CPU) automatically assigns the numbers 0 to 7 to special function units/blocks starting from the one closest to the main unit.

Unit numbers are not given to input/output powered extension units/blocks.

1. special function units/blocks connected to main unit

The numbers 0 to 7 are assigned to the special function units/blocks starting from the one closest to the main unit.

2. FX2N-1RM(-E)-SET

Up to three FX2N-1RM(-E)-SET can be sequentially connected to the end of one system.

All these connected units have the same number as the unit number of the first unit (FX2N-1RM(-E)-SET).

→ **For FX2N-1RM, refer to FX2N-1RM-SET Handy Manual.**


3. Products to which unit numbers are not assigned

- Input/output powered extension units: FX2N-32ER-ES/UL, FX2N-48ET-ESS/UL, etc.
- Input/output extension blocks: FX2N-16EX-ES/UL, FX2N-16EYR-ES/UL, etc.
- special function block: FX2N-16LNK-M
- Connector conversion adapter: FX2N-CNV-BC
- Expansion boards: FX3U-232-BD, etc.
- Special adapters: FX3U-232ADP, etc.


7.2.2 Example of assigning

Unit numbers are assigned to the special function units/blocks in the following configuration.

→ **For the assignment of input/output numbers, refer to Section 7.1.**

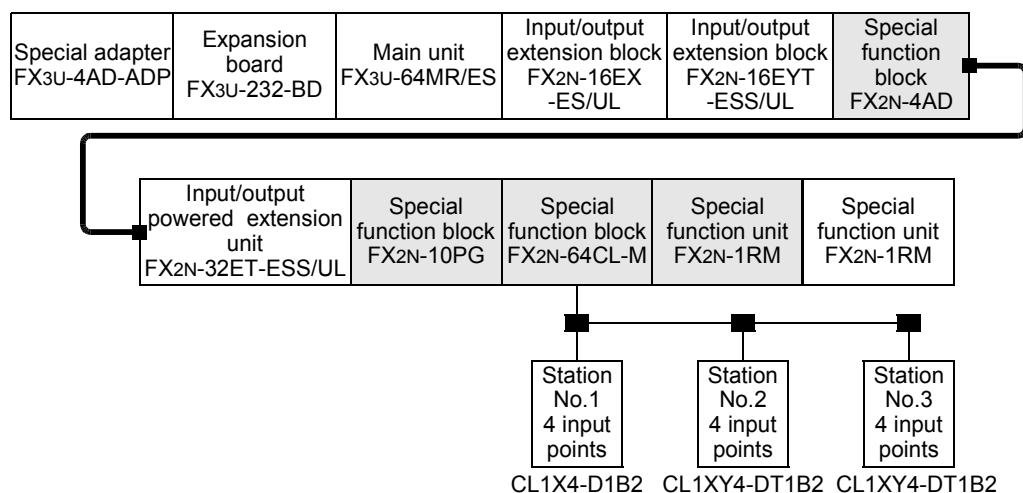


Unit numbers are assigned to the special function units/blocks in the above configuration as shown below.

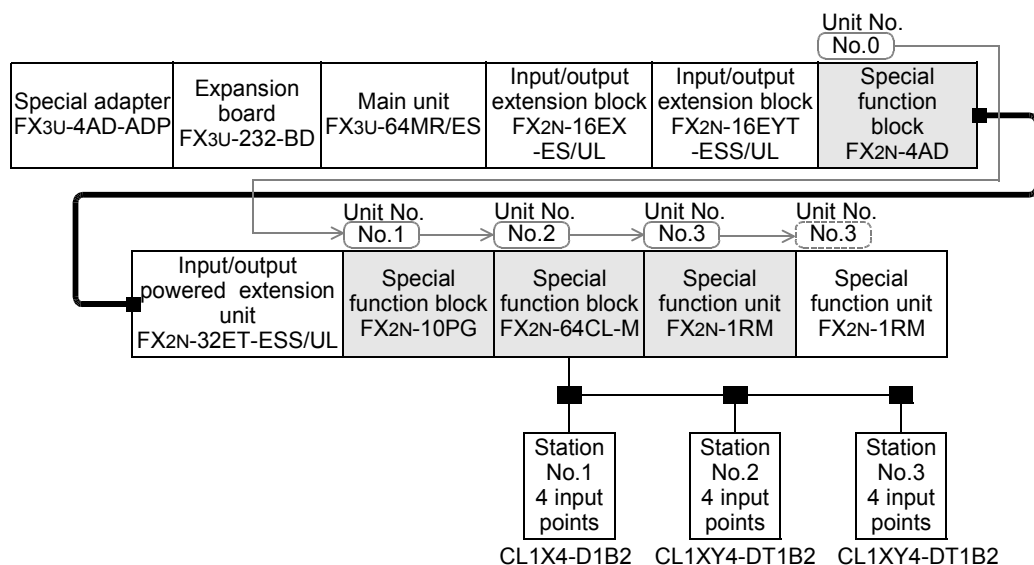

7.2.3 Application of unit number labels

The special function units/blocks come with unit number labels.

Apply the unit number labels to spaces on the enclosure (see the following figure) so that the unit numbers can be identified.

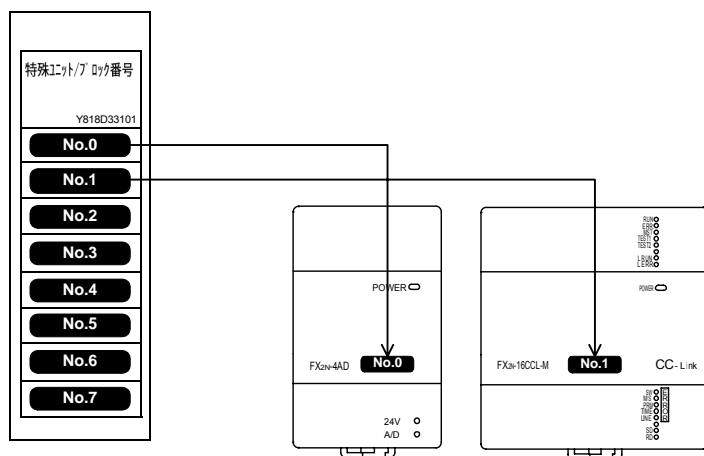

8. Installation In Enclosure

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

INSTALLATION PRECAUTIONS



DANGER

- Make sure to cut off all phases of the power supply externally before starting the installation or wiring work.
Failure to do so may cause electric shock.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

INSTALLATION PRECAUTIONS



- Use the product in the environment within the generic specifications described in section 4.1 of this manual. Never use the product in areas with dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or wind and rain. If the product is used in such a place described, electrical shock, fire, malfunctions, damage, or deterioration may be caused.
- Do not touch the conductive parts of the product directly, thus avoiding failure or malfunctions.
- Install the product securely using a DIN rail or mounting screws.

FX2N-10GM, FX2N-20GM, and terminal block	DIN rail only
Main unit, FX2N Series I/O extension unit/block, and FX0N/FX2N Series special extension block/special adapter	DIN rail or direct mounting

- Install the product on a flat surface.
If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- Make sure to fix the function extension board with tapping screws for fixation.
Tightening torque: 0.3 to 0.6 N•m
Contact failures may cause malfunctions.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Be sure to remove the dust proof sheet from the PLC's ventilation port when the installation work is completed.
Failure to do so could cause fires, equipment failures, and malfunctions.
- Fit the extension cables, peripheral device connecting cables, input/output cables and battery connecting cable securely to the designated connectors.
Contact failures may cause malfunctions.
- Fit the display module, memory cassette, and function extension board securely to the designated connectors.
Contact failures may cause malfunctions.
- Before attaching or detaching the following devices, turn off power.
Failure to do so may cause device failures or malfunctions.
 - Peripheral devices, display module , expansion boards and special adapters
 - Extension units/blocks and FX Series terminal block
 - Battery and memory cassette

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX_{0N}/FX_{2N} Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

This chapter explains the procedures for installing the PLC in enclosure.

The procedures for wiring the input and output terminals are described in the following chapters.

- Installation location and layout in enclosure
- Procedures for connecting extension devices
- Procedures for power supply wiring

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10


Input Wiring

8.1 Generic Specifications

Item	Specification				
Ambient temperature	0 to 55°C (32 to 131°F) when operating and -25 to 75°C (-4 to 158°F) when stored				
Ambient humidity	5 to 95%RH (no condensation) when operating				
Vibration resistance	Complies with EN 68-2-6				
		Frequency (Hz)	Acceleration (m/s ²)	Half amplitude (mm)	Sweep Count for X, Y, Z: 10 times (80 min in each direction)
	When installed on DIN rail	10 to 57	–	0.035	
		57 to 150	4.9	–	
	When installed directly	10 to 57	–	0.075	
		57 to 150	9.8	–	
Shock resistance	Complies with EN 68-2-27 (147 m/s ² Acceleration, Action time: 11ms, 3 times by half-sine pulse in each direction X, Y, and Z)				
Noise resistance	By noise simulator at noise voltage of 1,000 Vp-p, noise width of 1 μs, rise time of 1 ns and period of 30 to 100 Hz				
Dielectric withstand voltage*2	1.5kV AC for one minute		Complying with JEM-1021 Between each terminals and ground terminal		
	500V AC for one minute				
Insulation resistance*2	5MΩ or more by 500V DC megger		Complying with JEM-1021 Between each terminals and ground terminal		
Grounding	Class D grounding (grounding resistance: 100 Ω or less) <Common grounding with a heavy electrical system is not allowed.>*1				
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dusts				
Working altitude	Complies with IEC61131-2 (<2000m)*3				

*1. Ground the PLC independently or jointly.

→ Refer to Section 9.4.

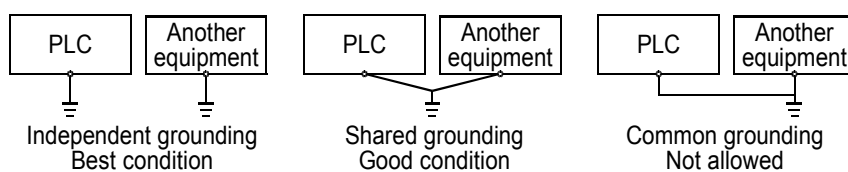

*2. For more information on the dielectric withstand voltage test and the insulation resistance test of the terminals of each product, refer to the following subsection.

→ Refer to Subsection 4.1.1.


*3. Do not use the PLC under pressure higher than the atmospheric pressure. Doing so may damage the PLC.

8.2 Installation location

Use the PLC under the environmental conditions complying with the generic specifications (Section 8.1).

Notes	
	• Keep a space of 50 mm (1.97") away between the unit main body and other devices and structure.
	• Install the unit as far away as possible from high-voltage lines, high-voltage devices and power equipment.
	• To prevent temperature rise, do not install the PLC on a floor or a ceiling or in the vertical direction. Install it horizontally on a wall as shown below.
	• Arrange the extension cable in such a way that the left connectors of the input/output powered extension units/blocks or special function units/blocks are connected on the side closer to the main unit.

8.2.1 Installation location in enclosure

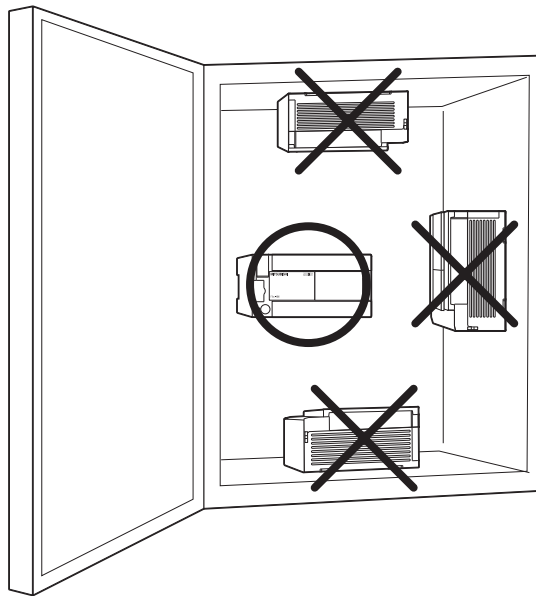

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring


10

Input Wiring


8.2.2 Spaces in enclosure

Extension devices can be connected on the left and right sides of the main unit of the PLC.
If you intend to add extension devices in the future, keep necessary spaces on the left and right sides.

1. Configuration without extension cable

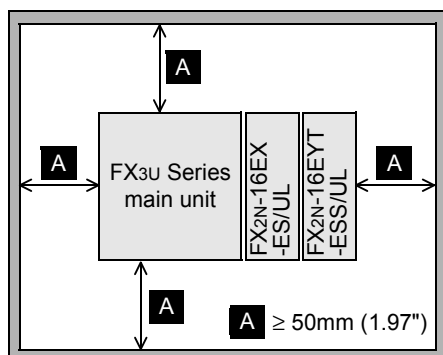


2. Configuration in 2 stages with extension cable

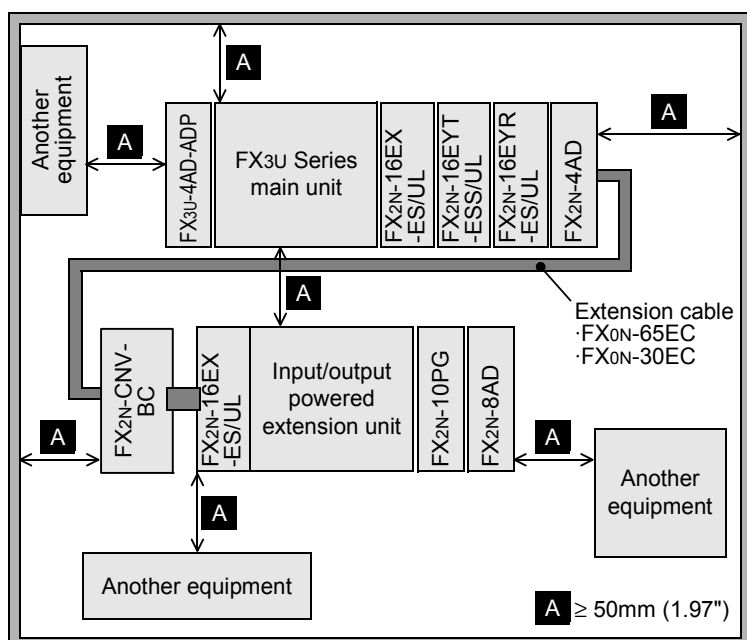

8.3 Layout in Enclosure

The PLC components can be laid out in one stage or in two stages, upper and lower. The connecting procedures in each case are explained below.


8.3.1 1-stage layout

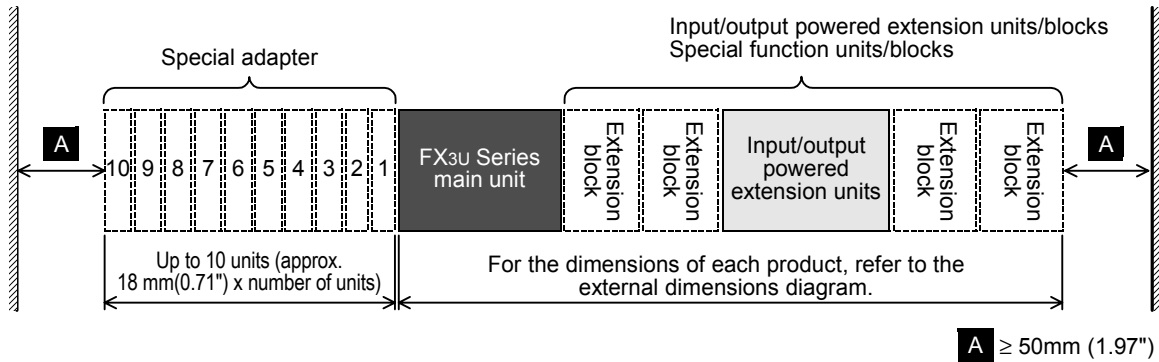

8.3.2 2-stage layout


In the case of a 2-stage layout, connect the first stage and the second stage with the extension cable. When an extension block is connected at the top of the second stage, FX2N-CNV-BC (connector conversion box) is necessary.

1. When an input/output powered extension unit is connected at the top of the 2nd stage

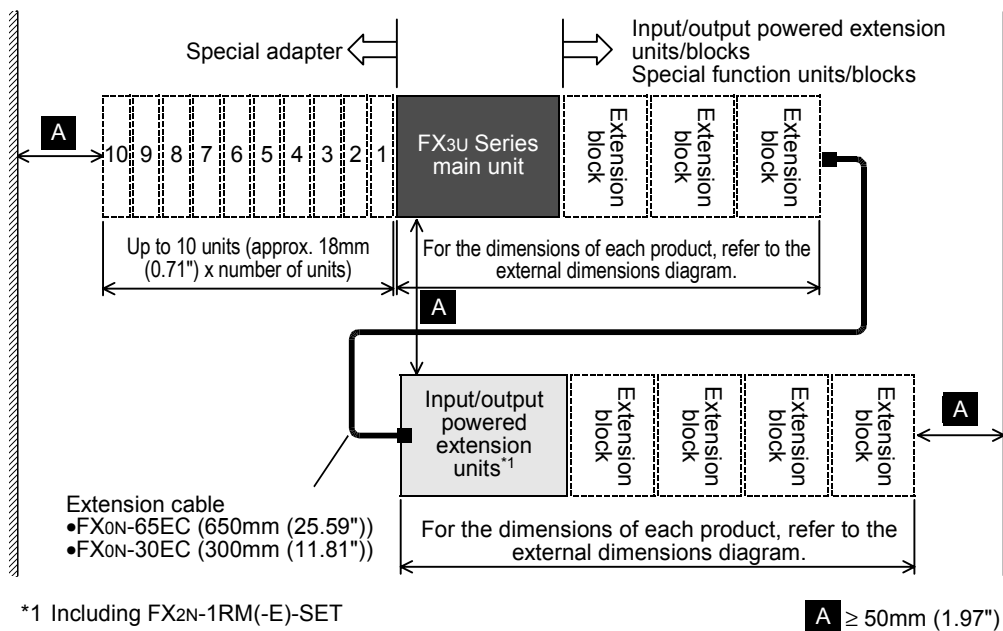


*1 Including FX2N-1RM(-E)-SET
In this case, however, only an FX2N-1RM(-E)-SET can be connected at the subsequent stage.

2. When an input/output extension block or a special function block is connected at the top of the 2nd stage

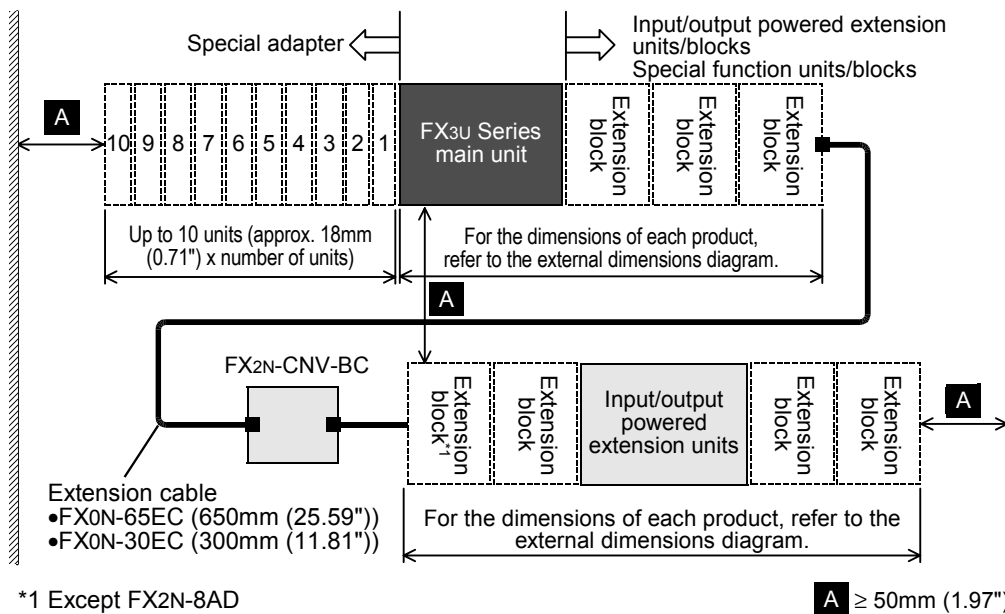

3. When a special function block (FX2N-10GM/20GM) is connected at the 2nd stage

→ Refer to previous page for FX2N-1RM(-E)-SET information.

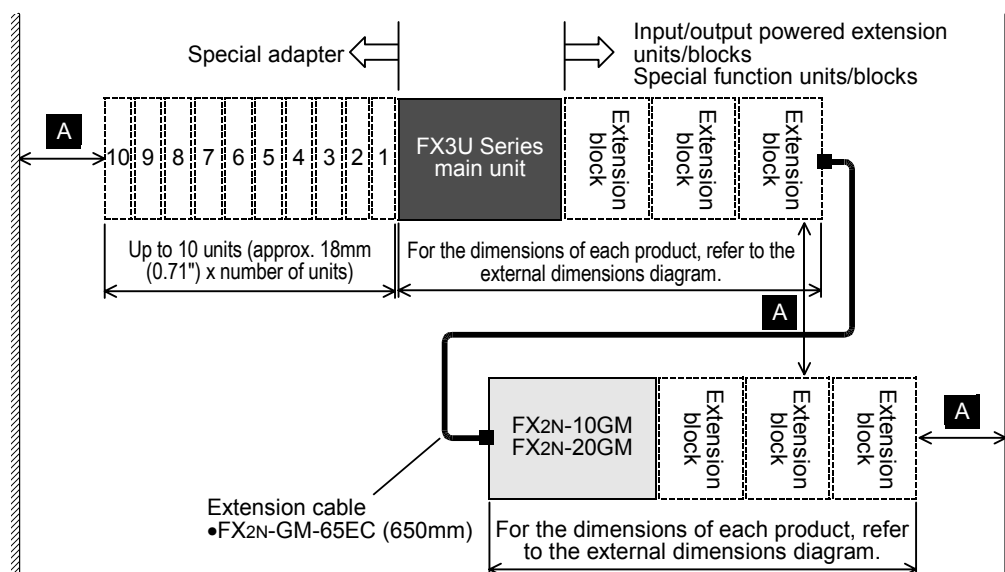

8.4 Examination for Installing Method in Enclosure

Examine the installation location of PLC in consideration of the environmental conditions (generic specifications).

8.4.1 Installing methods

The PLC can be installed by the following two methods.

1. Installing on DIN rail

- The PLC can be installed on a DIN46277 rail (35 mm (1.38") wide).
- The PLC can be easily moved and removed.
- The PLC is installed higher by the height of the DIN rail.
→ For the details of the procedures on mounting and removing the DIN rail, refer to Section 8.5.

2. Direct installing (with screws)

- The PLC can be installed directly in the enclosure with M4 screws.
→ For the mounting hole pitch, refer to Section 8.6.

8.4.2 Cautions in examining installing method

→ Refer to Section 8.3.

1. Cautions when FX2N-8AD is used

When the system is laid out in two stages, do not mount FX2N-8AD at the top of the second stage, or FX2N-CNV-BC cannot be installed directly.


2. Cautions when FX2N-10GM or FX2N-20GM is used

FX2N-10GM and FX2N-20GM can be installed only on the DIN rail.
They cannot be installed directly in the enclosure.

8.4.3 Examples of installation


As shown in the following example, when the main unit is installed on the DIN rail, the extension devices connected with the extension cable can be installed directly in the enclosure.

1. Example of installation on DIN rail

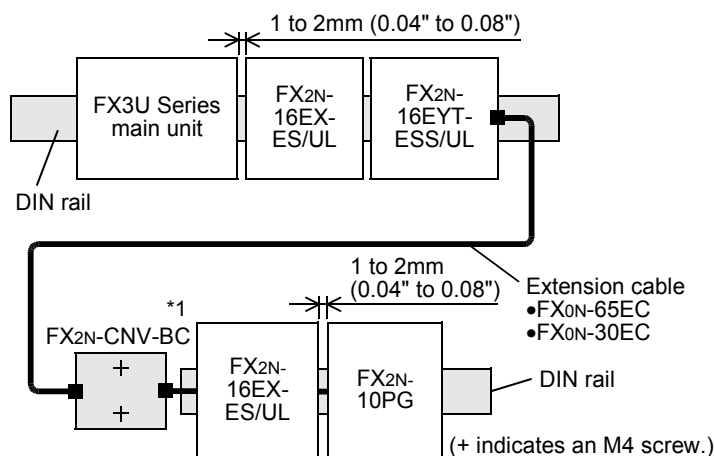


*1. FX2N-CNV-BC can be installed directly in the enclosure but cannot be installed on the DIN rail.

2. Example of direct installation

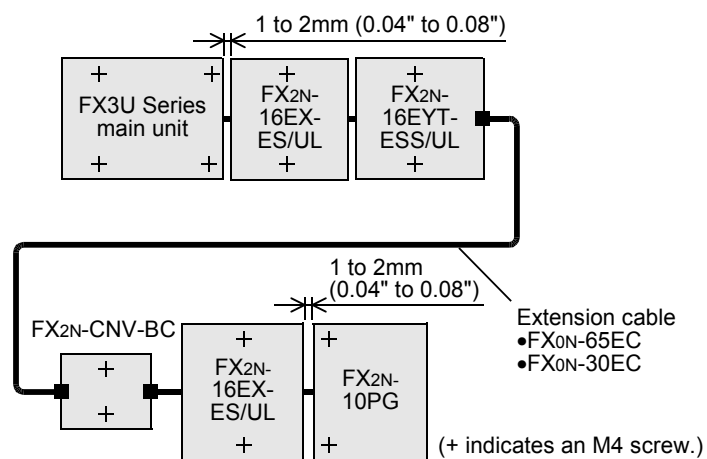

3. Example of combination of installation on DIN rail and direct installation

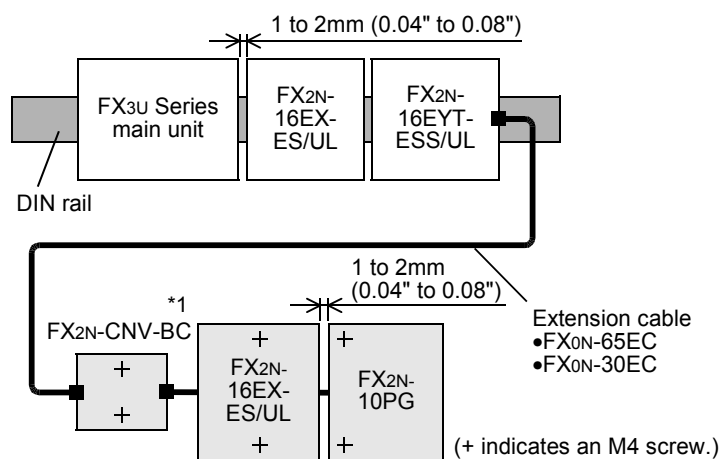

*1. FX2N-CN-BC can be installed directly in the enclosure but cannot be installed on the DIN rail.

8.5 Procedures for Installing on and Detaching from DIN Rail

The main unit can be installed on a DIN46277 rail (35 mm (1.38") wide).

8.5.1 Preparation for installation

1. Connecting extension devices

Some extension devices must be mounted on the main unit before the unit is installed in the enclosure.

- Mount the expansion board and special adapters on the main unit before installing it in the enclosure.
- Mount the input/output powered extension units/blocks and the special function units/blocks in the enclosure after installing the main unit in the enclosure.
- The memory cassette and the display module can be fitted to the main unit after it is installed.
- The battery can be replaced with a new one in the state where the main unit is in the enclosure.

→ **For the replacement procedures, refer to Subsection 14.4.4.**

2. Affixing The Dust Proof Sheet

The dust proof sheet should be affixed to the ventilation port before beginning the installation and wiring work.

→ **For the affixing procedure, refer to the instructions on the dust proof sheet.**

Be sure to remove the dust proof sheet when the installation and wiring work is completed.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

8.5.2 Installation of main unit


The main unit must be installed before installing an expansion board or special adapter on the enclosure.

→ For the connection procedure, refer to Subsections 8.7.2, 8.7.3, and 9.5.2.



1 Connect the expansion board and special adapters to the main unit.

→ For the connecting procedures, refer to Subsection 9.5.2.


2 Push out all DIN rail mounting hooks (A in the right figure).

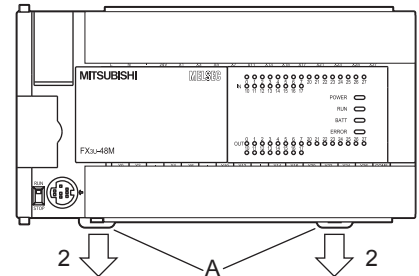

3 Fit the upper edge of the DIN rail mounting groove (C in the right figure) onto the DIN rail.

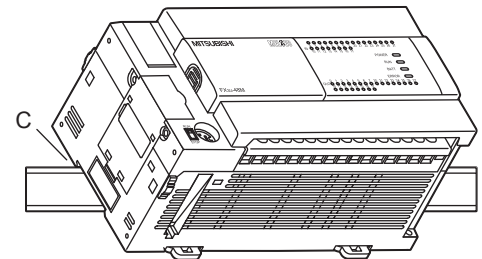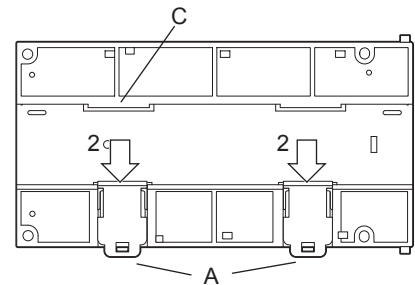


4 Lock the DIN rail mounting hooks (D in the figure) while pressing the PLC against the DIN rail.

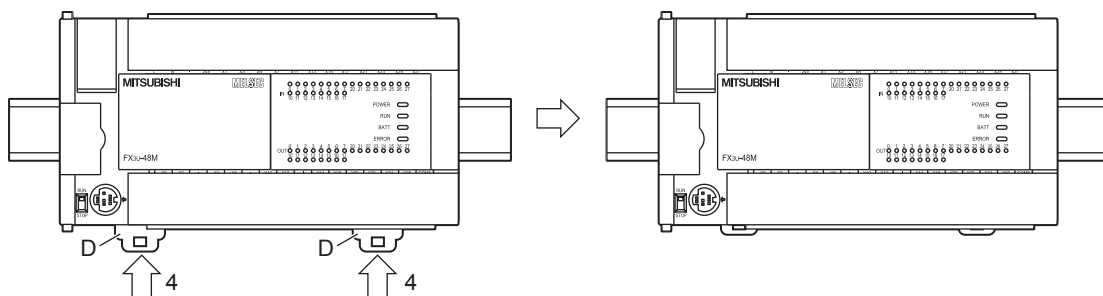

8.5.3 Installation of input/output powered extension unit/block and special function unit/block

1 Push out the DIN rail mounting hook (A in the right figure) of the input/output extension block.


- For an input/output powered extension unit or a special function unit/block, this step is unnecessary.

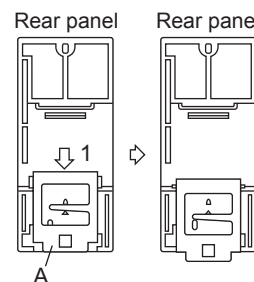

2 Fit the upper edge of the DIN rail mounting groove (B in the right figure) onto the DIN rail.

3 Push the product against the DIN rail.

- Keep a gap of 1 to 2 mm (0.04" to 0.08") between the products.

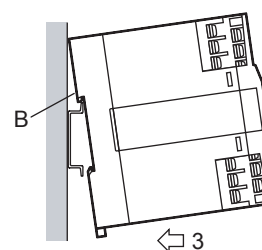

4 Connect the extension cable.


→ For the procedures on connecting the extension cable, refer to Subsection 8.7.4.

8.5.4 Removal of main unit

1 Open the terminal block covers, and remove the protective terminal covers (A in the right figure).

2 Gradually loosen the left and right terminal block mounting screws (B in the right figure), and remove the terminal blocks.

- The terminal block cannot be removed from the FX3U-16M□ main unit.

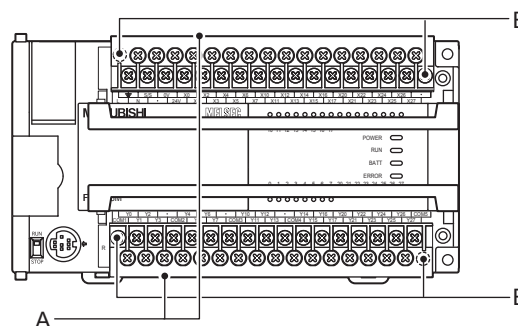


3 Disconnect the extension cables and the connecting cables (including expansion board and special adapters).

4 Insert the tip of a flathead screwdriver into the hole of the DIN rail mounting hook (C in the right figure).

- This step also applies for the DIN rail mounting hooks of the special adapters.


5 Move the flathead screwdriver as shown in the right figure to draw out the DIN rail mounting hooks of all devices.

6 Remove the product from the DIN rail (D in the right figure).

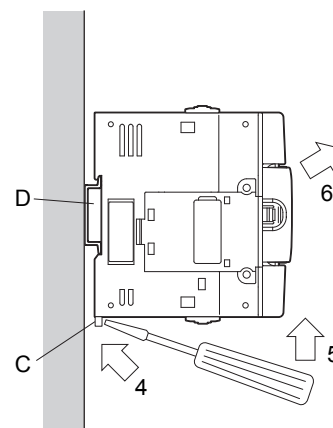

7 Push in the DIN rail mounting hooks (E in the right figure).

- For FX_{0N}/FX_{2N} Series input/output extension blocks and FX_{0N}/FX_{2N} Series special function blocks, this step is unnecessary.

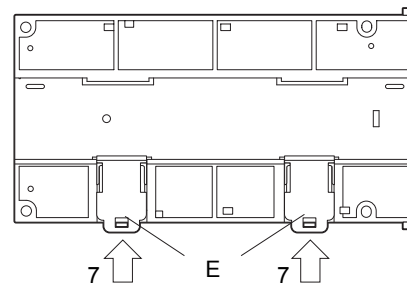

8.6 Procedures for Installing Directly (with M4 Screws)

The product can be installed directly in the enclosure (with screws).

Point


Position the holes so that there is a gap of 1 to 2 mm (0.04" to 0.08") between the products.

8.6.1 Hole pitches for direct mounting

The product mounting hole pitches are shown below.

For the pitch that varies depending on the product, refer to the table.


1. Main unit (A or B)

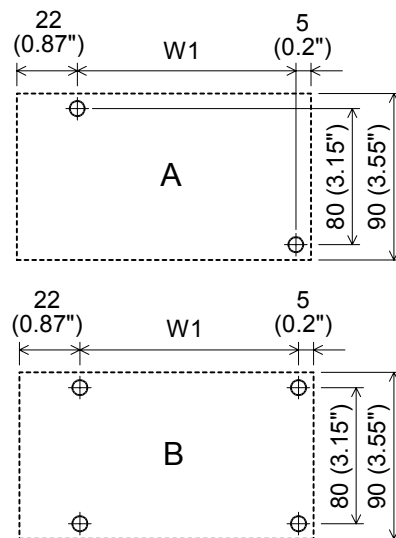

Unit: mm (inches)

	Model name	Mounting hole pitch (W1)
A	FX3U-16MR/ES	103 (4.06")
	FX3U-32MR/ES	123 (4.85")
B	FX3U-48MR/ES	155 (6.11")
	FX3U-64MR/ES	193 (7.6")
	FX3U-80MR/ES	258 (10.16")


2. Special adapter (C)

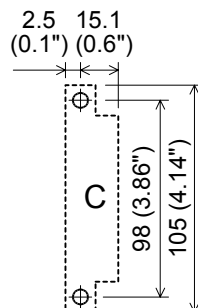

Unit: mm (inches)

	Model name	Mounting hole pitch(W1)
C	FX3U-4AD-ADP	Refer to the figure shown left.
	FX3U-4DA-ADP	
	FX3U-4AD-PT-ADP	
	FX3U-4AD-TC-ADP	
	FX3U-232ADP	
	FX3U-485ADP	
	FX3U-4HSX-ADP	
	FX3U-2HSY-ADP	


3. Input/output powered extension unit (D or E)

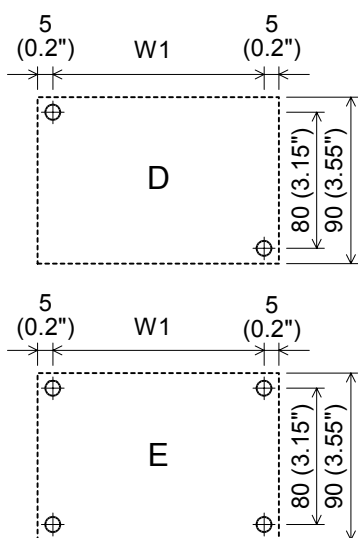

Unit: mm (inches)

	Model name	Mounting hole pitch(W1)
D	FX _{2N} -32ER-ES/UL FX _{2N} -32ET-ESS/UL FX _{2N} -32ER FX _{2N} -32ET FX _{2N} -32ES	140 (5.52")
E	FX _{2N} -48ER-ES/UL FX _{2N} -48ET-ESS/UL FX _{2N} -48ER FX _{2N} -48ET	172 (6.78")
	FX _{2N} -48ER-UA1/UL	210 (8.27")


4. Input/output extension block (F)

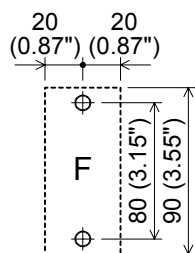

Unit: mm (inches)


	Model name	Mounting hole pitch (W1)
F	FX _{2N} -16EX-ES/UL FX _{2N} -16EX FX _{2N} -16EX-C FX _{2N} -16EXL-C FX _{2N} -16EYR-ES/UL FX _{2N} -16EYR FX _{2N} -16EYT-ESS/UL FX _{2N} -16EYT FX _{2N} -16EYT-C FX _{2N} -16EYS	Refer to the figure shown left.

5. Special function unit/block (G, H or I)

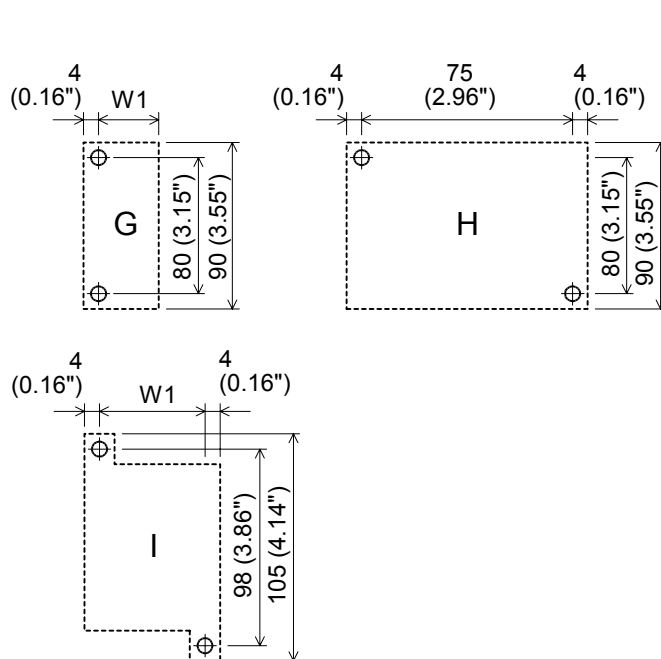

Unit: mm (inches)		
	Model name	Mounting hole pitch(W1)
G	FX0N-3A FX2N-2AD FX2N-2DA FX2N-1PG FX2N-1PG-E FX2N-10PG FX2N-64CL-M FX2N-32CCL FX2N-16LNK-M	39 (1.54")
	FX2N-4AD FX2N-4DA FX2N-4AD-PT FX2N-4AD-TC FX2N-5A FX2N-2LC FX2N-1HC FX2N-1RM-SET FX2N-1RM-SET-E FX2N-232IF FX2N-32ASI-M	51 (2.01")
	H	FX2N-16CCL-M
	Refer to the figure shown left.	
	I	FX2N-8AD
		FX2N-20PSU
	-	67 (2'64")
		52 (2'05")
	-	These units cannot be installed directly.
	-	
	-	
	-	

8.6.2 Example of mounting hole pitches

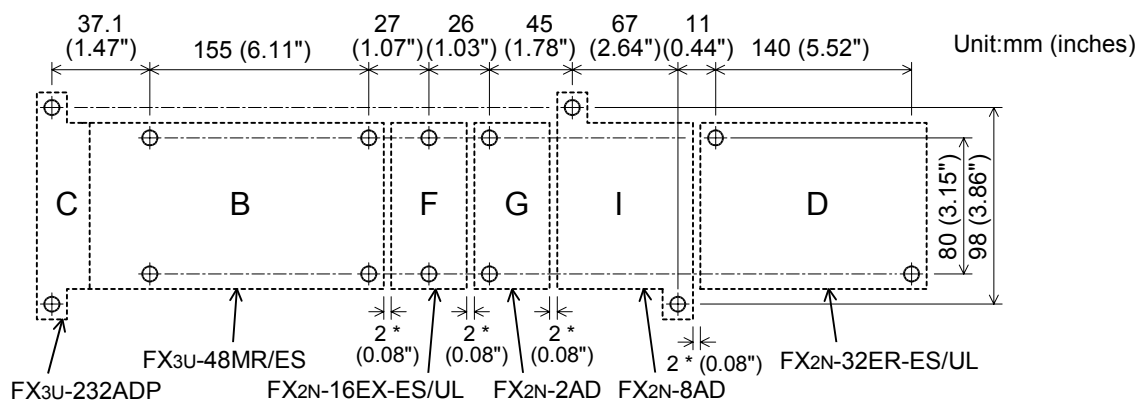


* The gap between products is 2 mm (0.08").

8.6.3 Installation of main unit

Mount the expansion board and special adapters on the main unit before installing the unit in the enclosure.
→ For the connection procedure, refer to Subsections 8.7.2, 8.7.3, and 9.5.2.

- 1** Make mounting holes in the mounting surface according to the external dimensions diagram.
- 2** Fit the main unit (A in the right figure) based on the holes, and secure it with M4 screws (B in the right figure).

The positions and number of screws depend on the product. Refer to the external dimensions diagram.
→ For the external dimensions, refer to Section 4.6.

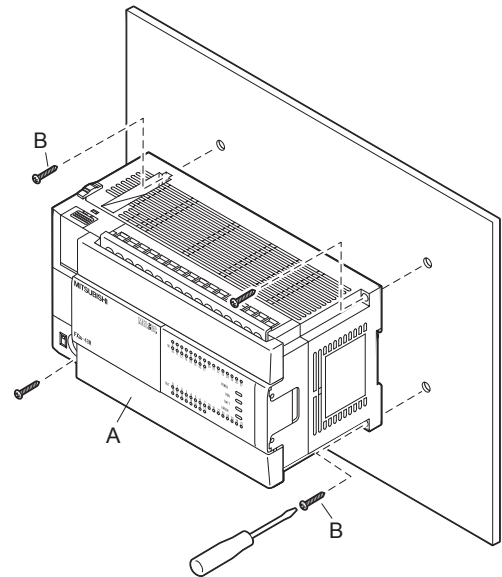

8.6.4 Installation of input/output powered extension unit/block and special function unit/block

- 1** Make mounting holes in the mounting surface according to the external dimensions diagram
- 2** Push in the DIN rail mounting hook (A in the right figure) of the input/output extension block.


If the DIN rail mounting hook is not pushed in, the screw hole is covered, and the block cannot be mounted.

For input/output powered extension units and special function units/blocks, this operation is unnecessary.

- 3** Fit the input/output extension block (B in the right figure) based on the holes, and secure it with M4 screws (C in the right figure).

The positions and number of screws depend on the product. Refer to the external dimensions diagram.

- For the external dimensions of the input/output powered extension unit, refer to Chapter 15.
- For the external dimensions of the input/output extension block, see Chapter 16.
- For the external dimensions of the special function units/blocks, see Chapter 17.

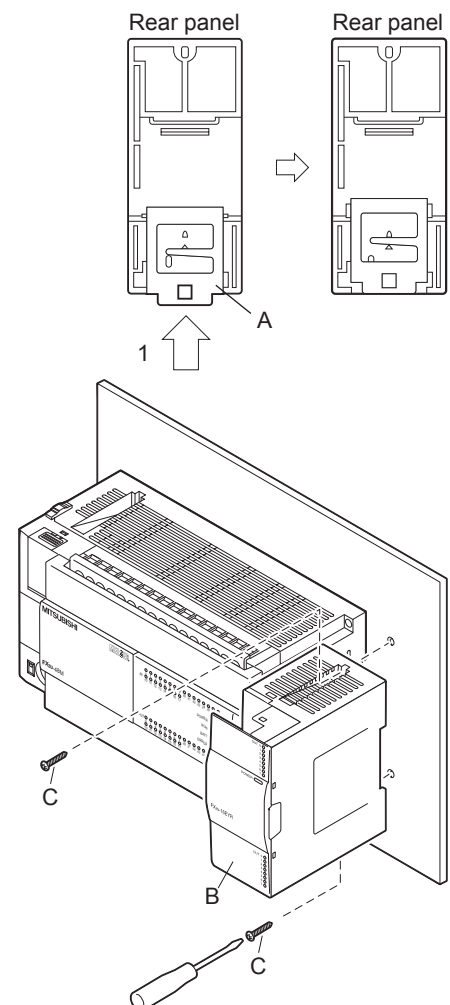


8.7 Connecting Methods for Main Unit and Extension Devices

This section explains the connecting methods for extension devices.

8.7.1 Connection of extension devices

The connecting method varies depending on the combination of the products, i.e. the main unit, expansion board, special adapters, input/output extension blocks and special function units/blocks. The connecting methods are explained with the following configuration examples.

Example of configuration

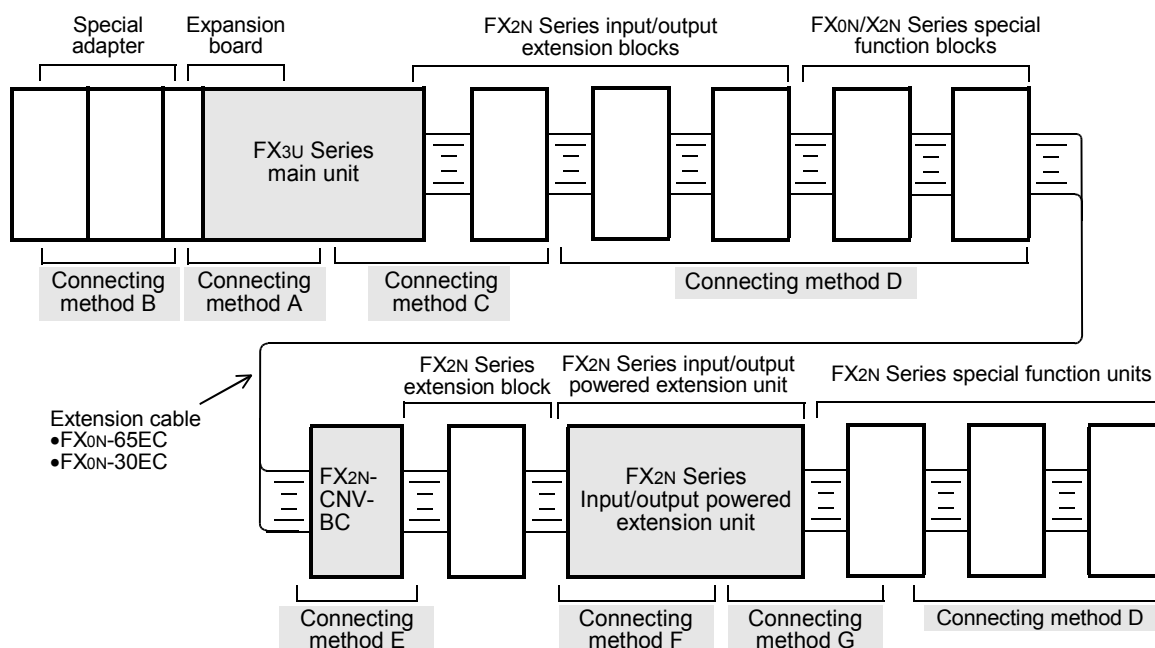

8.7.2 Connecting method A - connection of expansion board

To connect an expansion board to the main unit in the enclosure, it is necessary to remove the main unit from the enclosure.

- Refer to Subsection 8.5.4 for the "removal from DIN rail" procedure.
- Refer to Section 8.6 for the "direct mounting" removal procedure.

- 1** Insert the tip of a flathead screwdriver into the part A of the expansion board compartment dummy cover (B in the right figure) on the left side of the main unit, and slightly lift the dummy cover.




- Put the main unit on the edge of a desk or so to insert the screwdriver.

Caution

Take care not to damage the wiring board and electronic components with the screwdriver.

- 2** Remove the expansion board compartment dummy cover (B in the right figure).
- 3** Hold the expansion board (C in the right figure) parallel to the main unit, and fit the board to the expansion board connector.
- 4** Secure the expansion board (C in the right figure) on the main unit with the supplied M3 tapping screws (D in the right figure).

- Tightening torque: 0.3 to 0.6 N·m

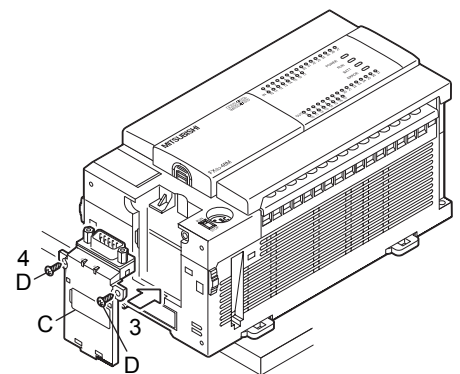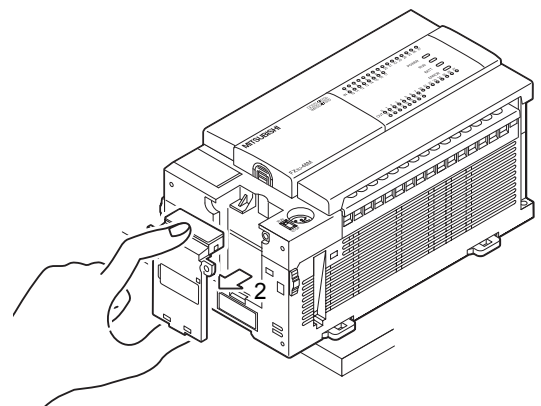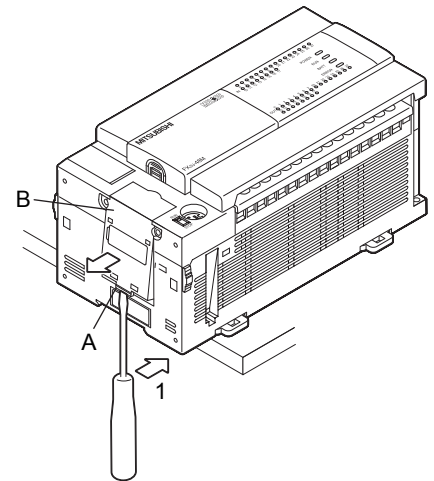


8.7.3 Connecting method B - connection of special adapter

When an expansion board is used, connect the board as stated in the previous subsection before connecting the special adapter.

When a high-speed input/output special adapter is used, fit the adapter before connecting other special adapters.

1 Remove the special adapter connector cover (A in the right figure) from the expansion board.

- When fitting a high-speed input/output special adapter, also remove the high-speed input/output special adapter connector cover (C in the right figure).
- When adding a special adapter to the special adapter that has been connected to the expansion board, read "expansion board" as "special adapter."

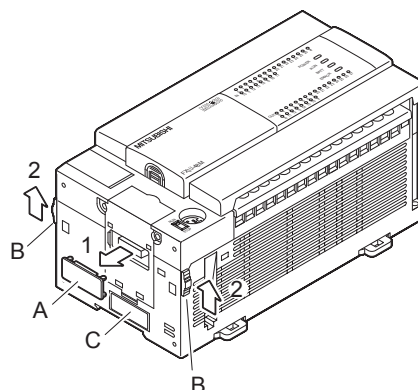


2 Slide the special adapter connecting hooks (B in the right figure) of the main unit.

- When adding a special adapter to the special adapter that has been connected to the main unit, read "main unit" as "special adapter." (This applies to the following steps.)

3 Connect the special adapter (C in the right figure) to the main unit as shown in the right figure.

4 Slide the special adapter connecting hooks (B in the right figure) of the main unit to secure the special adapter (C in the right figure).

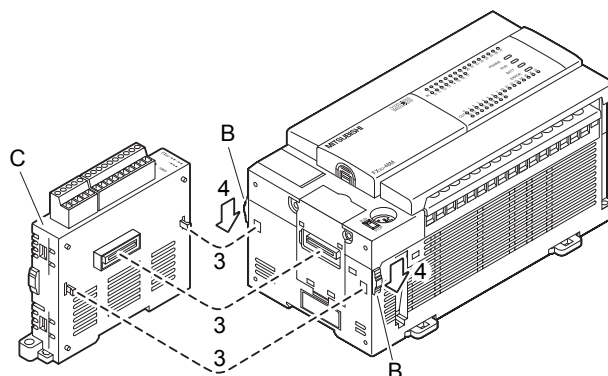


8.7.4 Connecting method C - connection of powered extension unit/block to main unit

The procedures for connecting an powered extension unit/block to the main unit are explained below.

1 Remove the extension device connector cover (A in the right figure) on the right side of the main unit.

2 Connect the extension cable (B in the right figure) from the extension block to be connected (right side) to the extension device connector of the main unit.

- When connecting FX2N Series input/output powered extension unit, FX2N-10GM, FX2N-20GM or FX2N-1RM(-E)-SET, connect the unit to be added (right side) and the existing unit (main unit) with the supplied extension cable.

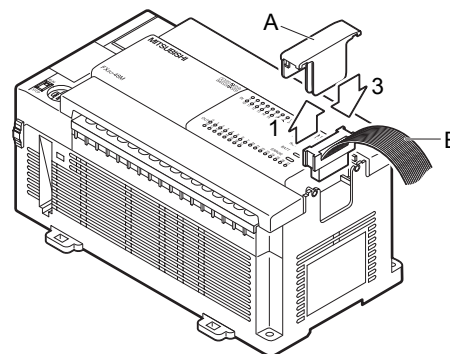


3 Fit the extension device connector cover (A in the right figure).

8.7.5 Connecting method D - connection of powered extension units/blocks

This subsection explains the procedures for connecting FX2N Series input/output powered extension units/blocks or FX0N/FX2N Series special function units/blocks.

- 1 Remove the top cover (B in the right figure) of the existing unit/block (left side) (A in the right figure).**

- When connecting FX2N-10GM or FX2N-20GM, remove the PLC extension block connector cover.
- When connecting FX2N-1RM(-E)-SET, remove the top cover of FX2N-1RM(-E)-SET.

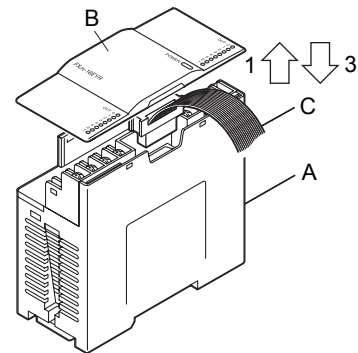

- 2 Connect the extension cable (C in the above figure) of the block to be connected (right side) to the existing unit/block (A in the above figure).**

- When FX2N Series input/output powered extension units, FX2N-10GM, FX2N-20GM or FX2N-1RM(-E)-SET units are connected, connect the unit to be added (right side) and the existing unit (left side) with the supplied extension cable.

- 3 Fit the top cover (B in the above figure) (except when connecting FX2N-10GM or FX2N-20GM).**

8.7.6 Connecting method E - connection of extension cable and FX2N-CNV-BC

This subsection explains the procedures for connecting an extension cable and FX2N-CNV-BC to the extension cable of the powered extension unit/block.

1 Separate the case of FX2N-CNV-BC into two pairs as shown right.


To separate the case, use a precision flathead screwdriver.

Slightly insert the tip of the screwdriver into the part A shown in the right figure, and the hook (B in the right figure) will come off (4 places).

2 Connect the extension cable on the upstream side (C in the right figure).

3 Connect the extension cable on the downstream side (D in the right figure).

4 Fit the upper cover (E in the right figure) and the lower cover (F in the right figure), and press down the upper cover until it is hooked.

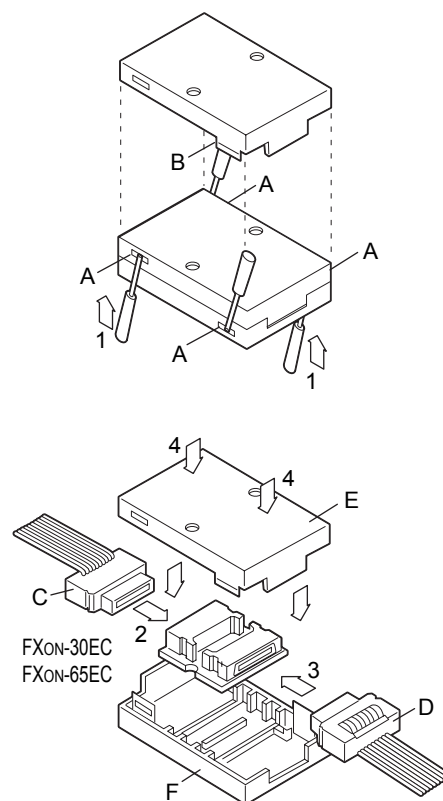

8.7.7 Connecting method F - connection of input/output powered extension unit


This subsection explains the procedures for connecting an input/output powered extension unit.

1 Remove the top cover (A in the right figure) on the left side of the input/output powered extension unit.

2 Connect the connector of the extension cable (supplied) (B in the right figure) to the extension connector.

3 Connect the connector of the extension cable (supplied) (B in the right figure) to the extension connector of the unit to be added (right side).

4 Fit the top cover (A in the right figure).

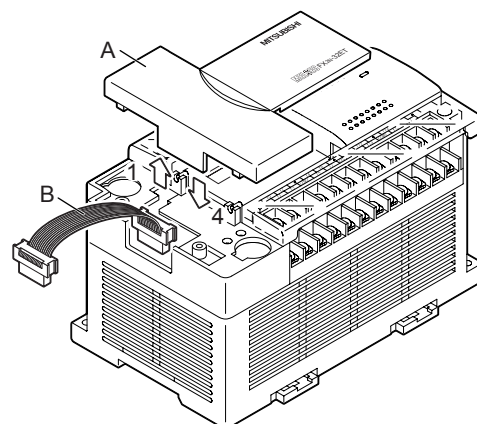


8.7.8 Connecting method G - connection of extension block to input/output powered extension unit

This subsection explains the procedures for connecting an input/output extension block to an input/output powered extension unit.

1 Remove the extension connector cover (A in the right figure) on the right side of the input/output powered extension unit.

2 Connect the extension cable (B in the right figure) from the extension block to be added (right side) to the extension connector of the input/output powered extension unit.

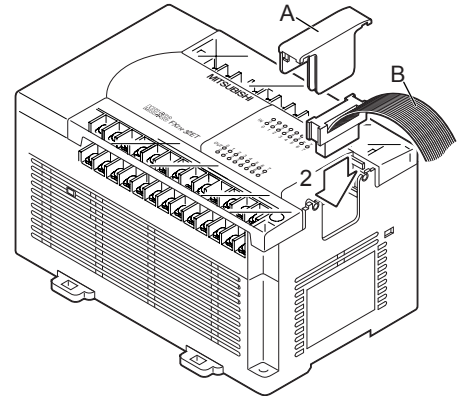

- When connecting FX2N-10GM, FX2N-20GM or FX2N-1RM(-E)-SET, read "input/output powered extension unit" as the unit.
- When connecting FX2N Series input/output powered extension unit, FX2N-10GM, FX2N-20GM or FX2N-1RM(-E)-SET, connect the unit to be added (right side) and the existing unit (main unit) with the supplied extension cable or the optional extension cable.
 - For FX2N Series input/output powered extension unit or FX2N-1RM(-E)-SET, the extension cable FX0N-30EC or FX0N-65EC can be used.
 - For FX2N-10GM or FX2N-20GM, the extension cable FX2N-GM-65EC can be used.

3 Fit the extension connector cover (A in the right figure).

9. Preparation for Wiring and Power Supply Wiring Procedures

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

WIRING PRECAUTIONS



DANGER

- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

This chapter explains the procedures for wiring, cabling and wiring the power supply.
The input/output wiring procedures are stated in the following chapter.

- Wiring procedures
- Procedures for connecting cables to various shapes of power supply and input/output terminals
- Procedures for the wiring power supply

9.1 Preparation for Wiring

9.1.1 Wiring procedures

Before starting the wiring work, make sure that the main power is off.

1 Prepare the parts for wiring.

Prepare the solderless terminals and cables necessary for wiring.

→ For details, refer to Section 9.2.

2 Wire the power supply terminals L and N.

Connect the power supply to the terminals.

Provide the power supply circuit with the protection circuit shown in this subsection.

→ For details, refer to Section 9.5.

3 Wire the ground terminal [] at a grounding resistance of 100Ω or less (Class D).

Connect a class D ground wire to the terminal.

→ For details, refer to Section 9.4 and Section 9.5.

4 Wire the input [X] terminals.

For a type (24V DC input type) common to sink/source input, select sink or source input by the following connection.

- For sink input, connect the 24V and S/S terminals.
- For source input, connect the 0V and S/S terminals.

Connect sensors and switches to the terminals.

→ For details, refer to Chapter 10.

5 Wire the output [Y] terminals.

Connect loads to the terminals.

→ For details, refer to Chapter 12.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

9.2 Cable Connecting Procedures

For cable connection, a terminal block or a connector is used. The cable connecting procedures are explained below.

9.2.1 Input/output terminal block (power supply and input/output wiring)

WIRING PRECAUTIONS



- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

For the main unit, FX2N Series input/output powered extension units/blocks and FX0N/FX2N Series special function units/blocks, an M3 or M3.5 screw terminal block is used.

1. Applicable products

Product type	Model name
Main unit	All models of FX3U Series main units
Input/output powered extension unit	All models of FX2N Series input/output powered extension units
Input/output extension block	All models of FX2N Series input/output extension blocks (except FX2N-16EX-C, FX2N-16EXL-C and FX2N-16EYT-C)
Special function unit/block	Refer to the manual for each special function unit/block.
FX Series terminal block	All models
Power supply unit	FX2N-20PSU

2. Terminal block screw size

The size of the terminal screws for each product is shown below. For the solderless terminals, refer to the following page.

Product	Terminal screw	Tightening torque
Main unit	M3	0.5 to 0.8N•m
FX2N Series input/output powered extension units		
FX2N Series input/output extension blocks		
FX2N Series special function unit/block*1		
FX Series terminal block	M3.5	

- *1. M3.5 screws may be used for terminals.
For the details, refer to the manual for each special extension device.

3. Wire end treatment



The solderless terminal size depends on the terminal screw size and wiring method.

- Use solderless terminals of the following size.
- Tighten the terminals to a torque of 0.5 N·m to 0.8 N·m.



In the case of M3 terminal screw

Main unit, input/output powered extension unit/block and special function unit/block

- When one wire is connected to one terminal

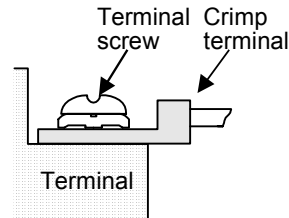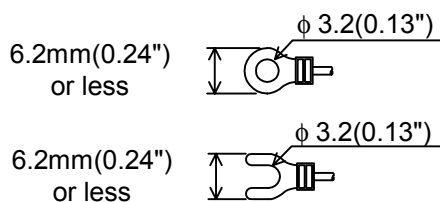



- When two wires are connected to one terminal

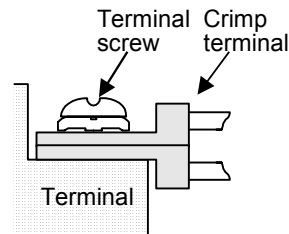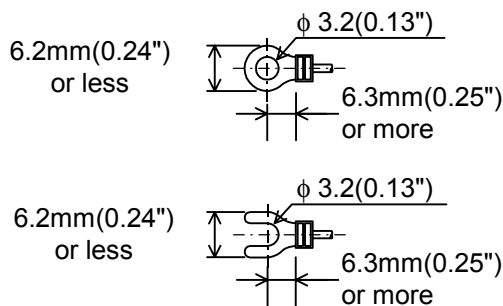



In the case of M3.5 terminal screw

FX Series terminal block, FX2N-20PSU

- When one wire is connected to one terminal

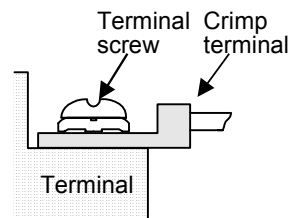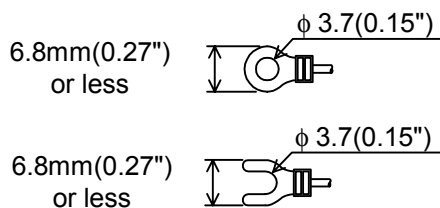

- When two wires are connected to one terminal

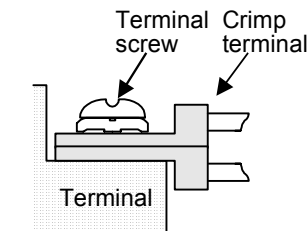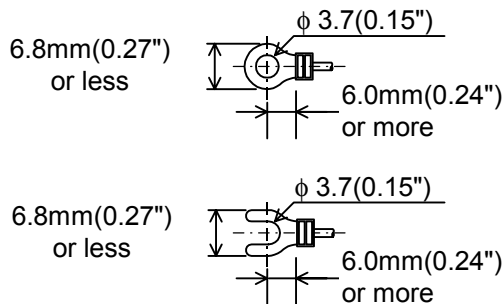

9.2.2 Input/output connectors (FX2N input/output extension blocks)

The input/output connectors of FX2N Series input/output extension blocks (connector type) and special function units/blocks conform to MIL-C-83503.

Prepare the input/output cables, referring to the following tables.

1. Applicable products

Classification	Model names
Input/output extension blocks	FX2N-16EX-C, FX2N-16EXL-C, FX2N-16EYT-C
Special function units/blocks	FX2N-10PG, FX2N-10GM, FX2N-20GM

2. Preparation of input/output connectors

- Compliant connectors (commercially available connectors)
Use 20-pin (1-key) sockets conforming to MIL-C-83503.
In advance, make sure that no interference is caused with peripheral parts, such as the connector cover.
- Input/output cables (our options)
Input/output cables with attached connectors are available.

Model names	Length	Description	Shape
FX-16E-500CAB-S	5m(10'4")	General-purpose input/output cable	A 20-pin connector is fitted only to one end of bulk wire. (Wire color: red)
FX-16E-150CAB	1.5m(4'11")	Cables for connecting FX Series terminal block and input/output connector For the connection with FX Series terminal block, refer to the following section. → Chapter 19 "Specifications for FX Series Terminal Blocks and Examples of External Wiring"	Flat cables (with tube) with a 20-pin connector at both ends
FX-16E-300CAB	3m(9'10")		
FX-16E-500CAB	5m(10'4")		
FX-16E-150CAB-R	1.5m(4'11")		Round multicore cables with a 20-pin connector at both ends
FX-16E-300CAB-R	3m(9'10")		
FX-16E-500CAB-R	5m(10'4")	Cables for connecting A Series Model A6TBXY36 connector/terminal block conversion unit and input/output connector type	Flat cables (with tube) that have two 20-pin connectors in 16-point units on the PLC side and a dedicated connector on the terminal block side. One common terminal covers 32 input/output terminals.
FX-A32E-150CAB	1.5m(4'11")		
FX-A32E-300CAB	3m(9'10")		
FX-A32E-500CAB	5m(10'4")		

- Connectors for making input/output cables by users (our options)
The users should prepare the electric wires and pressure bonding tool.

Model name and composition of input/output connector			Applicable electric wire (UL-1061 are recommended) and tool	
Our model name		Details of part (made by DDK Ltd.)	Electric wire size	Pressure bonding tool (made by DDK Ltd.)
FX2c-I/O-CON for flat cable	10-piece set	Solderless connector FRC2-A020-30S	AWG28 (0.1mm ²), 1.27 pitch, 20-core	357J-4674D: Main body 357J-4664N: Attachment
FX2c-I/O-CON-S for bulk wire	5-piece set	Housing HU-200S2-001 Solderless contact HU-411S	AWG22 (0.3mm ²)	357J-5538
FX2c-I/O-CON-SA for bulk wire	5-piece set	Housing HU-200S2-001 Solderless contact HU-411SA	AWG20 (0.5mm ²)	357J-13963

- 4) Certified connectors (commercially available connectors)
Connectors made by DDK Ltd. shown in Item (3) described in the previous page and connectors made by Matsushita Electric Works, Ltd. shown in the following table

Model name of connector		Compliant electric wires (UL-1061 is recommended)	Pressure bonding tool
Housing	AXW1204A	AWG22 (0.3mm ²) AWG24 (0.2mm ²)	AXY52000
Contact	AXW7221		
Semi-cover	AXW62001A		

9.2.3 Terminal block (for europe) [expansion board and special adapters]

WIRING PRECAUTIONS

⚠ DANGER

- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.

The expansion board and special adapters of a terminal block type have terminal blocks for Europe.

1. Applicable products

Classification	Model names
Expansion Board	FX3U-485-BD
Special Adapters	FX3U-485ADP, FX3U-4AD-ADP, FX3U-4DA-ADP, FX3U-4AD-PT-ADP, FX3U-4AD-TC-ADP, FX3U-4HSX-ADP, FX3U-2HSY-ADP

2. Electric wires

Compliant electric wires and tightening torque


	Electric wire size (stranded wire/solid wire)	Tightening torque	End treatment
One electric wire	0.3mm ² to 0.5mm ² (AWG22 to 20)	0.22 to 0.25N•m	• Remove the coating of the stranded wire, twist the core wires, and connect the wires directly.
Two electric wires	0.3mm ² (AWG22)		• Remove the coating from the solid wire, and connect the wire directly.
Bar terminal with insulating sleeve	0.3 mm ² to 0.5 mm ² (AWG22 to 20) (Refer to the following outline drawing of bar terminal.)		• Bar terminal with insulating sleeve (recommended product) AI 0.5-8WH (Phoenix Contact) • Caulking tool CRIMPFOX UD6 (Phoenix Contact)

3. Treatment of electric wire ends

Treat the ends of stranded wires and solid wires without coating or using bar terminals with insulating sleeve.

- Treatment of stranded wires and solid wires without coating
 - Twist the ends of stranded wires tightly so that loose wires will not stick out.
 - Do not solder-plate the electric wire ends.

- Stranded wire/solid wire

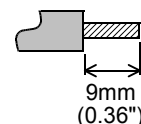

- Treatment using bar terminal with insulating sleeve
It may be difficult to insert the electric wire into the insulating sleeve depending on the thickness of the electric wire sheath. Select the electric wire referring to the outline drawing.



Manufacturer	Model names	Caulking tool
Phoenix Contact	AI 0.5-8WH	CRIMPFOX UD6

4. Tool

- For tightening the terminal, use a commercially available small screwdriver having a straight form that is not widened toward the end as shown right.

Manufacturer	Model names
Phoenix Contact	SZS 0.4 x 2.5

- Bar terminal with insulating sleeve

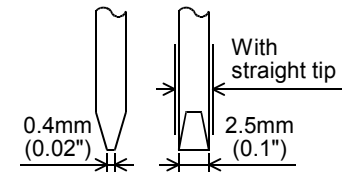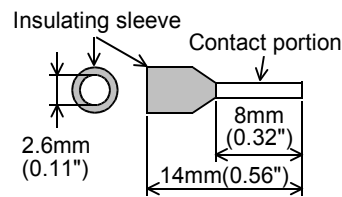

9.3 Power Supply Specifications

The specifications for power supply input to the main unit are explained below.

For the power consumption by the special function units/blocks, refer to this manual or the manual of each product.


Item	Specifications				
	FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Supply voltage	100 to 240V AC				
Allowable supply voltage range	85 to 264V AC				
Rated frequency	50/60Hz				
Allowable instantaneous power failure time	Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less. When the supply voltage is 200V AC, the time can be changed to 10 to 100 ms by editing the user program.				
Power fuse	250V AC 3.15A		250V AC 5A		
Rush current	30 A max. 5 ms or less/100V AC 65 A max. 5 ms or less/200V AC				
Power consumption*1	30W	35W	40W	45W	50W
24V DC service power supply*2	400 mA or less		600 mA or less		
5V DC built-in power supply*3	500 mA or less				

- *1. These power consumption values are maximum values which apply to the main unit's 24V DC service power supply when there are input/output extension blocks and special function units/blocks.
→ **For input/output powered extension units/blocks power consumption information, refer to Section 7.5.**
- *2. When input/output extension blocks are connected, 24V DC service power is consumed by the blocks, and the power to be consumed by the main unit is reduced.
→ **For the details of the service power supply 24V DC, refer to Section 6.5.**
- *3. The power supply is not for external use.
The current capacity specified above is for the input/output extension blocks, special function blocks, special adapters and expansion boards.


9.4 Grounding

Ground the PLC as stated below.

- Perform class D grounding. (Grounding resistance: 100Ω or less)
- Ground the PLC independently if possible.
If it cannot be grounded independently, ground it jointly as shown below.

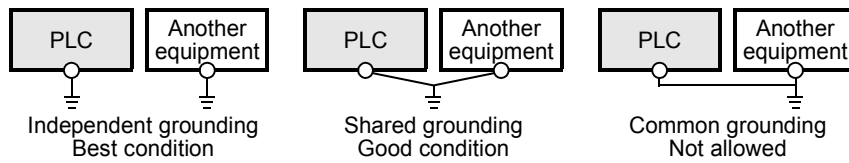

Extension devices of PLC (except expansion board and special communication/high-speed input/output adapter)

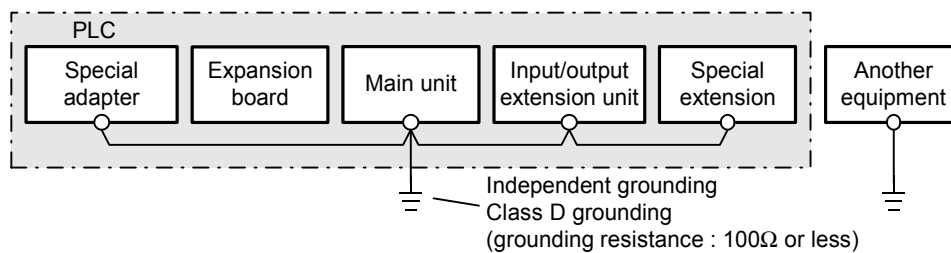


- Use ground wires thicker than AWG14 (2 mm²).
- Position the grounding point as close to the PLC as possible to decrease the length of the ground wire.

9.5 Examples of External Wiring

9.5.1 Example of input/output wiring with 24V DC service power supply

24V DC service power supply of the main unit can be used as a power supply for loads. However, the power consumed by extension devices should be subtracted from the 24V DC service power, and the remainder can be used as power for loads.

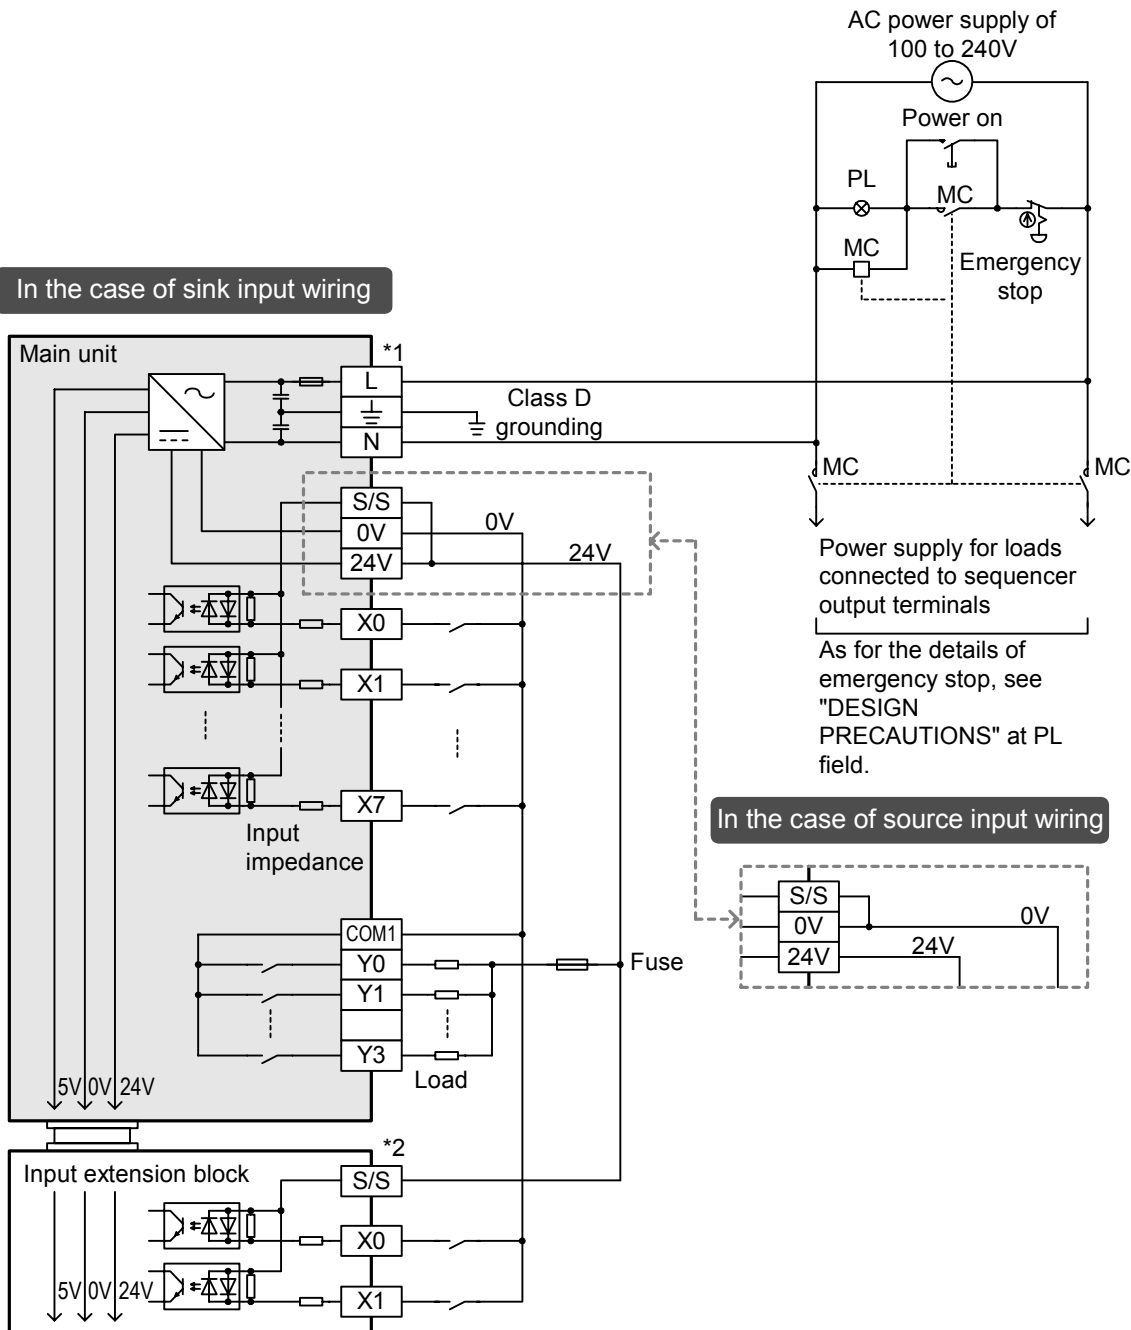


*1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). As for the details, see "WIRING PRECAUTIONS" at PL field.

*2 Connect the 24V terminal (in the case of sink input) or the 0V terminal (in the case of source input) to the S/S terminal on the input extension block.

9.5.2 Example of sink input [-common] wiring

An example of sink input [-common] wiring is given below. When connecting input/output powered extension units/blocks, carefully check the signal names on the terminal block because the sink and source input type units/blocks and the sink input type units/blocks vary in signal names on the terminal block.

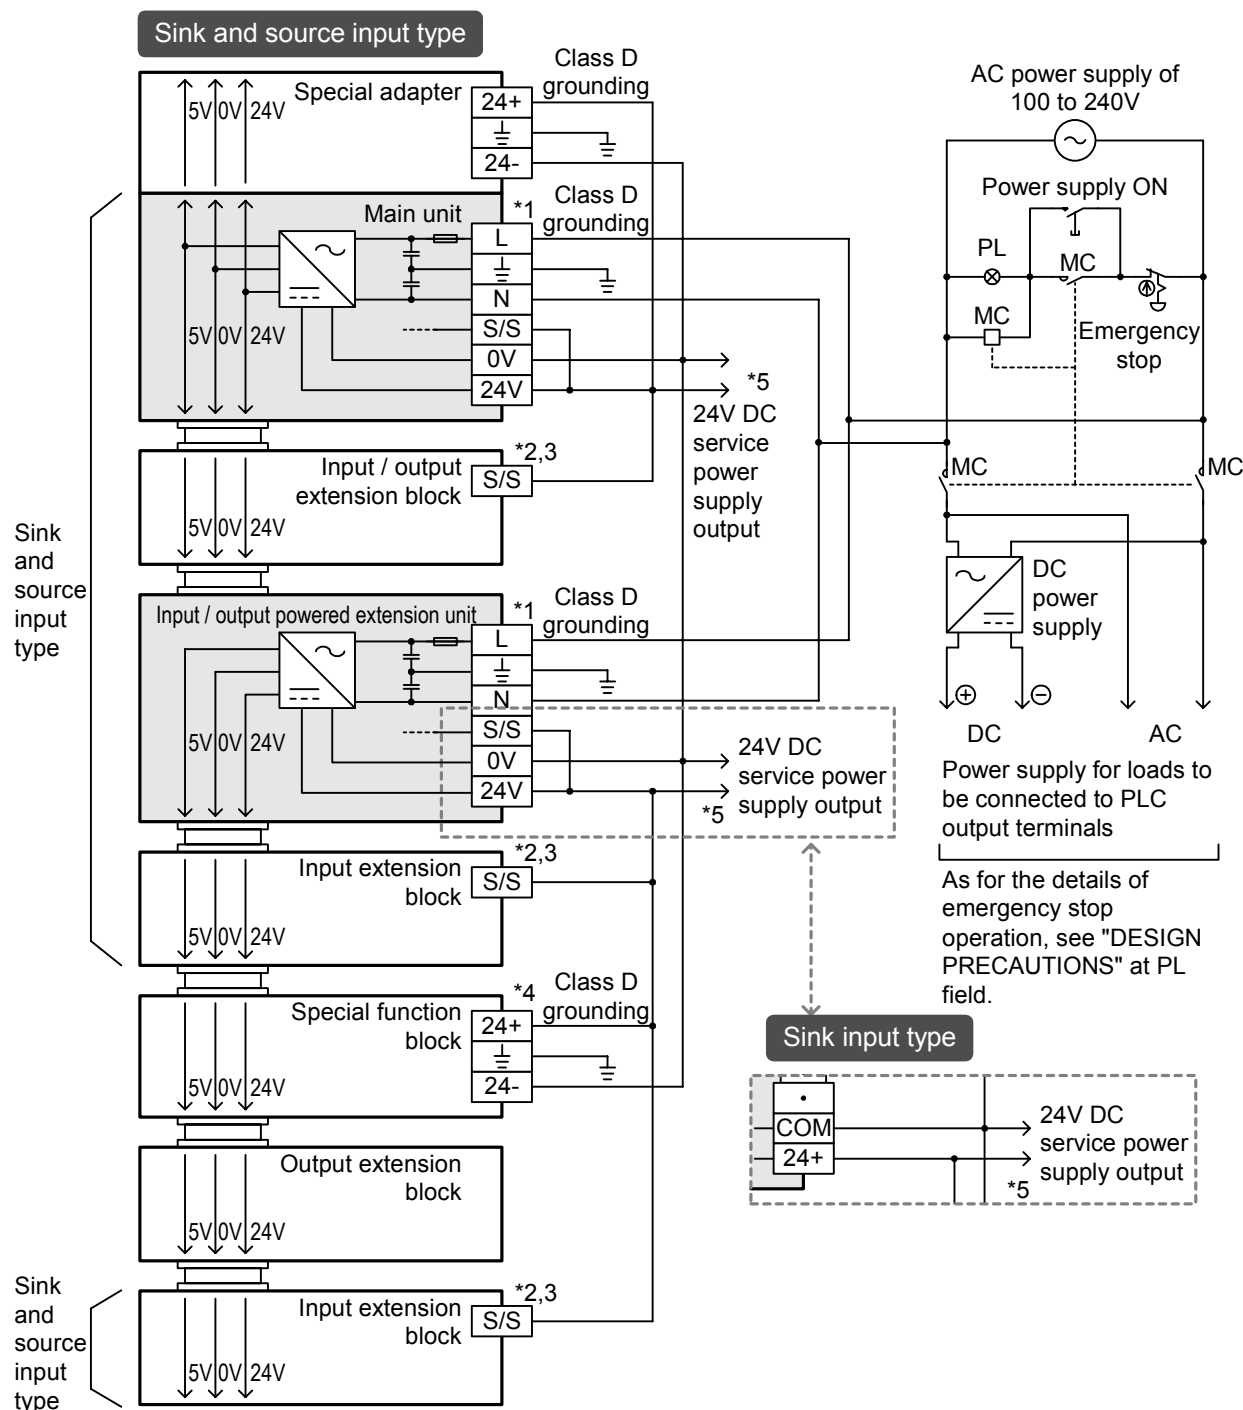


- *1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). As for the details, see "WIRING PRECAUTIONS" at PL field.
- *2 Connect the 24V terminal of the main unit or the input/output extension unit to the S/S terminal of the input extension block.

- *3 In the case of the sink input type, the S/S terminal is used as the 24+ terminal.
- *4 Some special function units/blocks do not have the power supply terminal.
- *5 Do not connect the 24V terminals (24V DC service power supply) of the main unit and the input/output extension unit with each other. Connect the 0V terminal.

9.5.3 Example of source input [+common] wiring

An example of source input [+common] wiring is shown below.

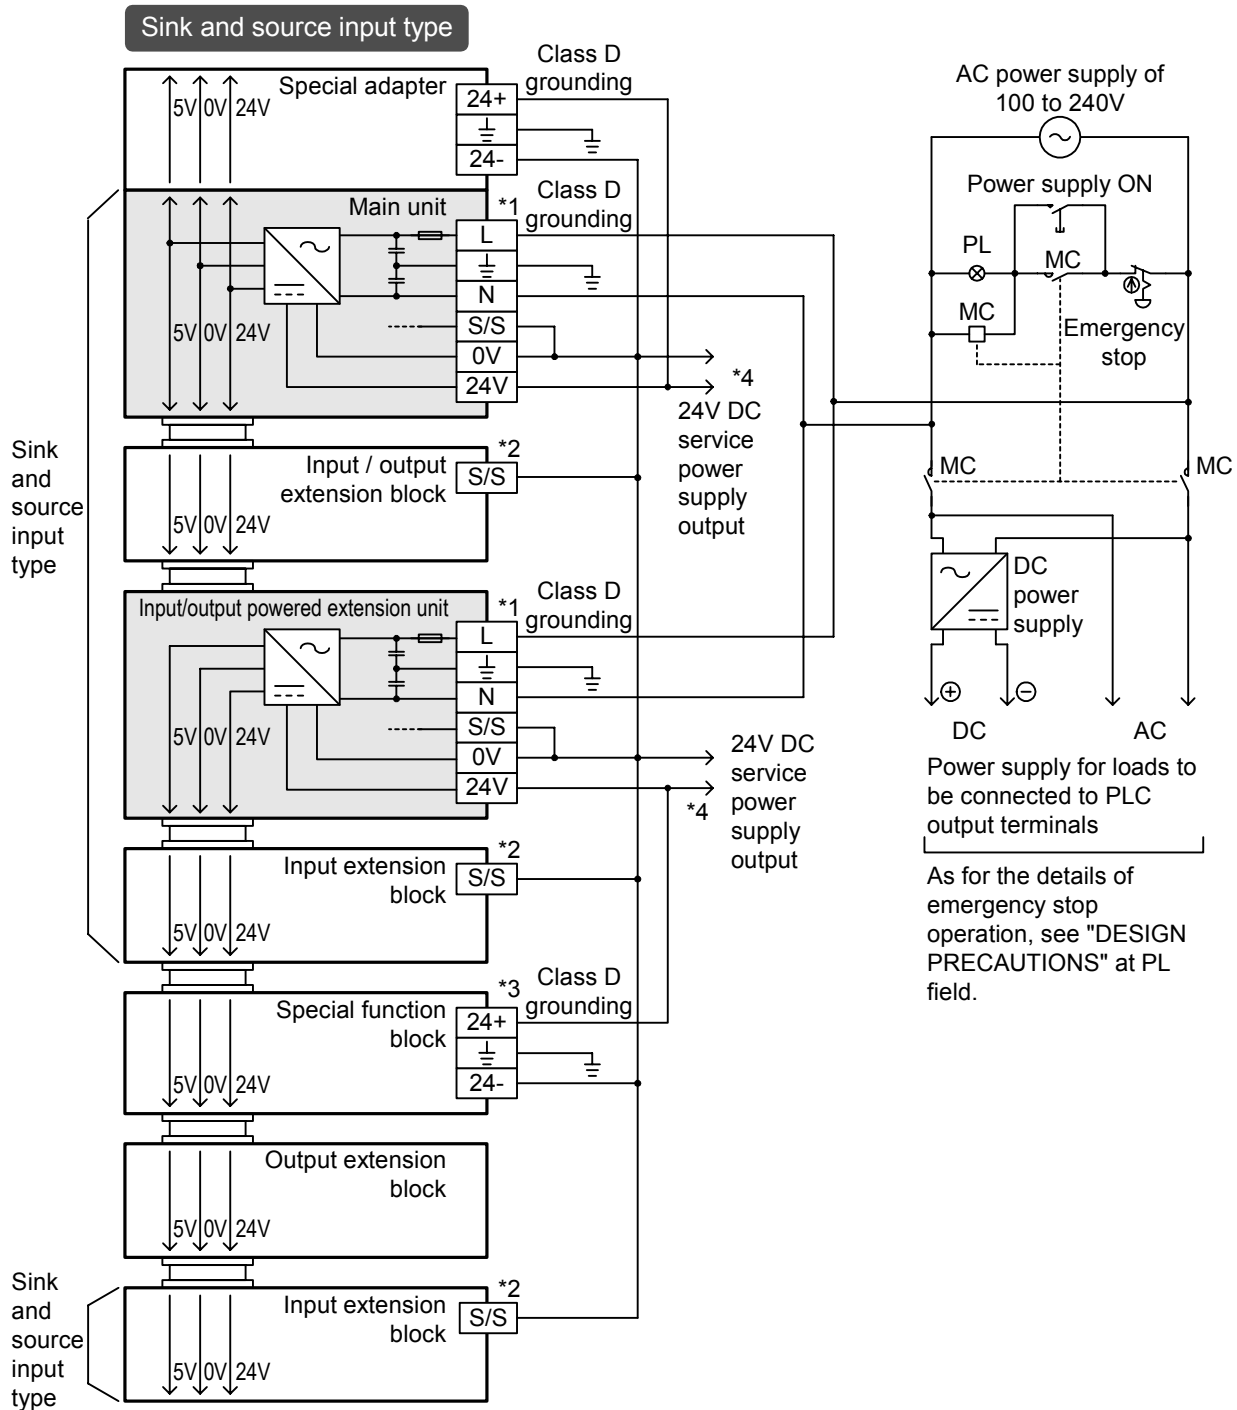

*1 Connect the AC power supply to the L and N terminals (in any case of 100V AC system and 200V AC system). As for the details, see "WIRING PRECAUTIONS" at PL field.

*2 Connect the 0V terminal of the main unit or extension unit to the S/S terminal of the input extension block.

*3 Some special function units/blocks do not have the power supply terminal.

*4 Do not connect the 24V terminals (24V DC service power supply) of the main unit and the input/output extension unit with each other. Connect the 0V terminal.

10. Input Wiring Procedures (Input Interruption and Pulse Catch)

DESIGN PRECAUTIONS



- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

1

Introduction

2

Features and
Part Names

3

Product
Introduction

4

Specifications

5

Version and
Peripheral
Devices

6

System
Configuration

7

Input/Output
Nos., Unit Nos.

8

Installation

9

Preparation and
Power Supply
Wiring

10

Input Wiring

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

This chapter explains the followings.

- Sink/source input (24V DC input)
- Input specifications (main unit), instructions for wiring and examples of external wiring
- Input interruption function
- Pulse catch function


10.1 Before Starting Input Wiring

10.1.1 Sink and source input (24V DC input type)


The input terminals (X) of the main unit are common to sink/source input of 24V DC internal power. FX2N Series input/output powered extension units/blocks have input terminals common to sink/source input or only for sink input.

1. Difference between circuits

- Sink input [-common]
Sink input means a DC input signal with current-flow from the input (X) terminal.
When sensor with a transistor output is connected, NPN open collector transistor output can be used.

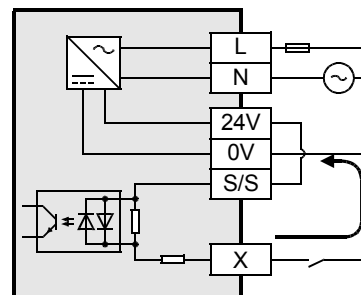

- Source input [+common]
Source input means a DC input signal with current-flow into the input (X) terminal.
When sensor with a transistor output is connected, PNP open collector transistor output can be used.

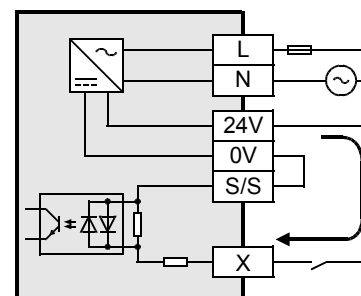

2. Method of switching between sink/source input

To switch the input type to sink or source input, wire the S/S terminal to the 0V or 24V terminal.

→ Refer to Subsections 10.2.4 and 10.2.5 for wiring examples.

- Sink input: 24V terminal and S/S terminal are connected.
- Source input: 0V terminal and S/S terminal are connected.

3. Instructions for using

- Concurrent use of sink/source input
It is possible to set all input terminals (X) of the main unit to the sink input mode or the source input mode. However, sink and source input terminals cannot be used concurrently.
 - The main unit and input/output powered extension units are individually set to the sink or source input mode.
 - The input mode of an input/output extension block is determined according to the selection of the sink or source input mode on the powered extension unit (power source).
- Caution in selecting model
A type common to sink/source input and a type only for sink input are both available. Select a proper type.

Differences from FX2N PLCs in input specifications (reference)

FX2N PLCs only for sink input (manuals in Japanese are supplied) and those common to sink/source input (manuals in English are supplied) have different model names.

- In FX2N PLCs only for sink input, the S/S terminal and the 24V terminal are connected unlike in FX3U PLCs.
- FX2N PLCs common to sink/source input are switched to the sink or source input mode by external wiring like FX3U PLCs.

10.2 24V DC Input Type (Common to Sink/Source Input)

The input specifications for the main unit, cautions in wiring the unit and examples of wiring are given below.

10.2.1 Input specifications (main unit)

The input numbers in the table indicate the main unit terminal numbers. "X010 or more" means the numbers from X010 to the largest number that the main unit has.

(The input numbers of FX3U-16M□ are X000 to X007.)

→ For the details of sink/source input, refer to subsection 10.1.1.

Item		Specifications				
		FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Number of input points		8 points	16 points	24 points	32 points	40 points
Input connecting type		Fixed terminal block (M3 screw)	Removable terminal block (M3 screw)			
Input form		sink/source				
Input signal voltage		24V DC ±10%				
Input impedance	X000 to X005	3.9 kΩ				
	X006, X007	3.3 kΩ				
	X010 or more	—	4.3 kΩ			
Input signal current	X000 to X005	6 mA/24V DC				
	X006, X007	7 mA/24V DC				
	X010 or more	—	5 mA/24V DC			
ON input sensitivity current	X000 to X005	3.5 mA or more				
	X006, X007	4.5 mA or more				
	X010 or more	—	3.5 mA or more			
OFF input sensitivity current		1.5 mA or less				
Input response time		Approx. 10 ms				
Input signal form		No-voltage contact input Sink input: NPN open collector transistor Source input: PNP open collector transistor				
Input circuit insulation		Photocoupler insulation				
Input operation display		LED on panel lights when photocoupler is driven.				
Input circuit configuration *1 Input impedance		Sink input wiring				
		Source input wiring				

10.2.2 Handling of 24V DC input

1. Input terminals

Sink input

When a no-voltage contact or NPN open collector transistor output is connected between an input (X) terminal and the 0V terminal and the circuit is closed, the input (X) is turned on. Then, the input display LED lights.

Source input

When a no-voltage contact or PNP open collector transistor output is connected between an input (X) terminal and the 24V terminal and the circuit is closed, the input (X) is turned on. Then, the input display LED lights.

Display module (option)

When the display module is mounted, the ON/OFF status can be checked on the LCD display.

RUN terminal setting

X000 to X017 (up to the largest input number in the main unit*1) of the main unit can be used as RUN input terminals by setting parameters.

*1. The FX3U-16M□ main unit input range is X000 to X007.

→ For the functions of the RUN terminals, refer to subsection 14.2.1.

2. Input circuit

Function of input circuit

The primary and secondary circuits for input are insulated with a photocoupler, and the second circuit is provided with a C-R filter.

The C-R filter is designed to prevent malfunctions caused by chattering of the input contact and noise from the input line.

There is a delay of approx. 10ms in response to input-switching from ON to OFF and from OFF to ON.


Change of filter time

X000 to X017 (up to the largest number in the main unit) have digital filters, and the filter time can be changed in increments of 1ms in the range from 0 to 60ms through applied instructions. When 0 is specified for the time, the input filter values are set as shown in the following table.

Input number	Input filter value when 0 is specified	Remarks
X000 to X005	5 μ s*1	—
X006, X007	50 μ s	—
X010 to X017*2	200 μ s	Except FX3U-16MR/ES

*1. When the circuit is used at an input filter value of 5 μ s, be careful when wiring.
(The details are stated later.)

*2. The FX3U-16M□ main unit input range is X000 to X007.
The filter time for input numbers X010 to X017 is kept 10 ms because the input filters of the input/output powered extension units/blocks are used for them.

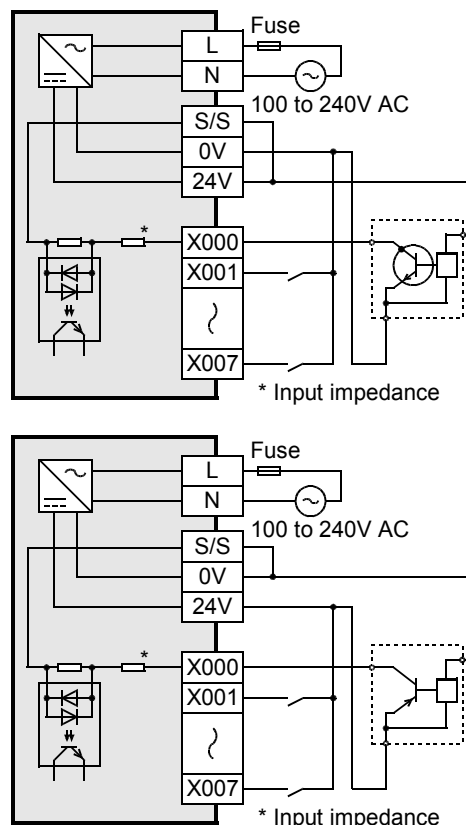

Cautions in wiring when changing filter time

When setting the input filter to 5 μ s or capturing pulses of a response frequency of 50 to 100kHz with a high-speed counter, wire the terminals as stated below.

- 1) The wiring length should be 5m or less.
- 2) Connect a bleeder resistance of 1.5k Ω (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device and the input current of the main body is 20 mA or more.

3. Input sensitivity

The PLC input current and input sensitivity are shown in the following table.

When there is a series diode or resistance at the input contact or there is a parallel resistance or leakage current at the input contact, wire the terminals in accordance with the following table.

→ For the instructions for connecting input devices, refer to subsection 10.2.3.

Item		X000 to X005	X006 to X007	X010 to max input number of the main unit
Input voltage		24V DC \pm 10%		
Input current		6 mA	7 mA	5 mA
Input sensitivity current	ON	3.5 mA or more	4.5 mA or more	3.5 mA or more
	OFF	1.5 mA or less	1.5 mA or less	1.5 mA or less

4. Examples of input wiring

For the wiring of input interruption, pulse catch and rotary encoder, refer to the following sections.

→ Example of wiring of input interruption: Refer to section 10.4.

→ Example of wiring of pulse catch: Refer to section 10.5.

→ Example of wiring of rotary encoder: Refer to section 11.10.

10.2.3 Instructions for connecting input devices

1. In the case of no-voltage contact

The input current of this PLC is 5 to 7 mA/24V DC.

Use input devices applicable to this minute current.

If no-voltage contacts (switches) for large current are used, contact failure may occur.

Input number	Input current
X000 to X005	6 mA/24V DC
X006, X007	7 mA/24V DC
X010 or more	5 mA/24V DC

<Example> Products of OMRON



Type	Model name
Microswitch	Models Z, V and D2RV
Proximity switch	Model TL

Type	Model name
Operation switch	Model A3P
Photoelectric switch	Model E3S

2. In the case of input device with built-in series diode

The voltage drop of the series diode should be approx. 4V or less.

When lead switches with a series LED are used, up to two switches can be connected in series.

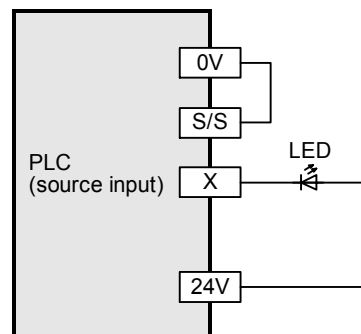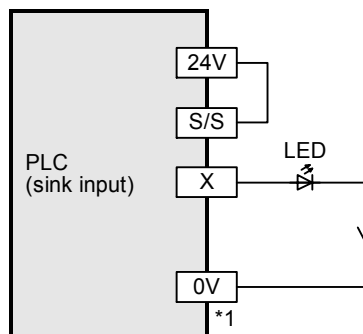



*1 In the case of a type only for sink input, connect the device to the COM terminal.

3. In the case of input device with built-in parallel resistance

Use a device having a parallel resistance, R_p , of 15kΩ or more.

If the resistance is less than 15kΩ, connect a bleeder resistance, R_b , obtained by the following formula as shown in the following figure.

$$R_b \leq \frac{4R_p}{15-R_p} \text{ (k}\Omega\text{)}$$

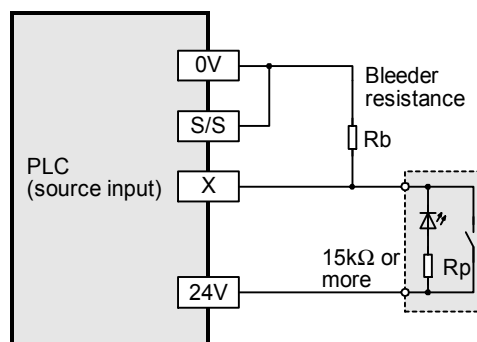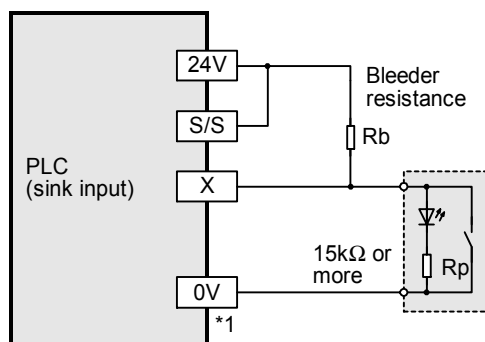



*1 In the case of a type only for sink input, connect the device to the COM terminal.

4. In the case of 2-wire proximity switch

Use a two-wire proximity switch whose leakage current, I_l , is 1.5 mA or less when the switch is off.


When the current is 1.5 mA or more, connect a bleeder resistance, R_b , determined by the following formula as shown in the following figure.

$$R_b \leq \frac{6}{I_l - 1.5} \text{ (k}\Omega\text{)}$$

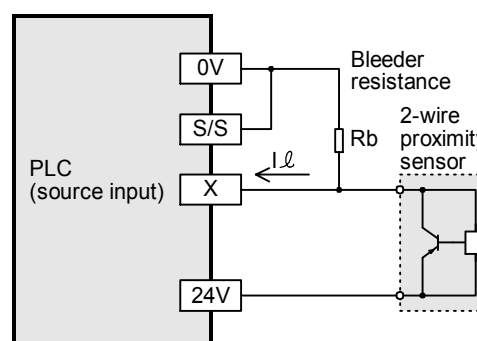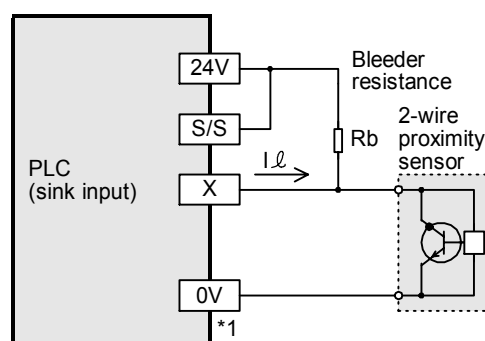


*1 In the case of a type only for sink input, connect the device to the COM terminal.

10.2.4 Examples of external wiring (sink input)

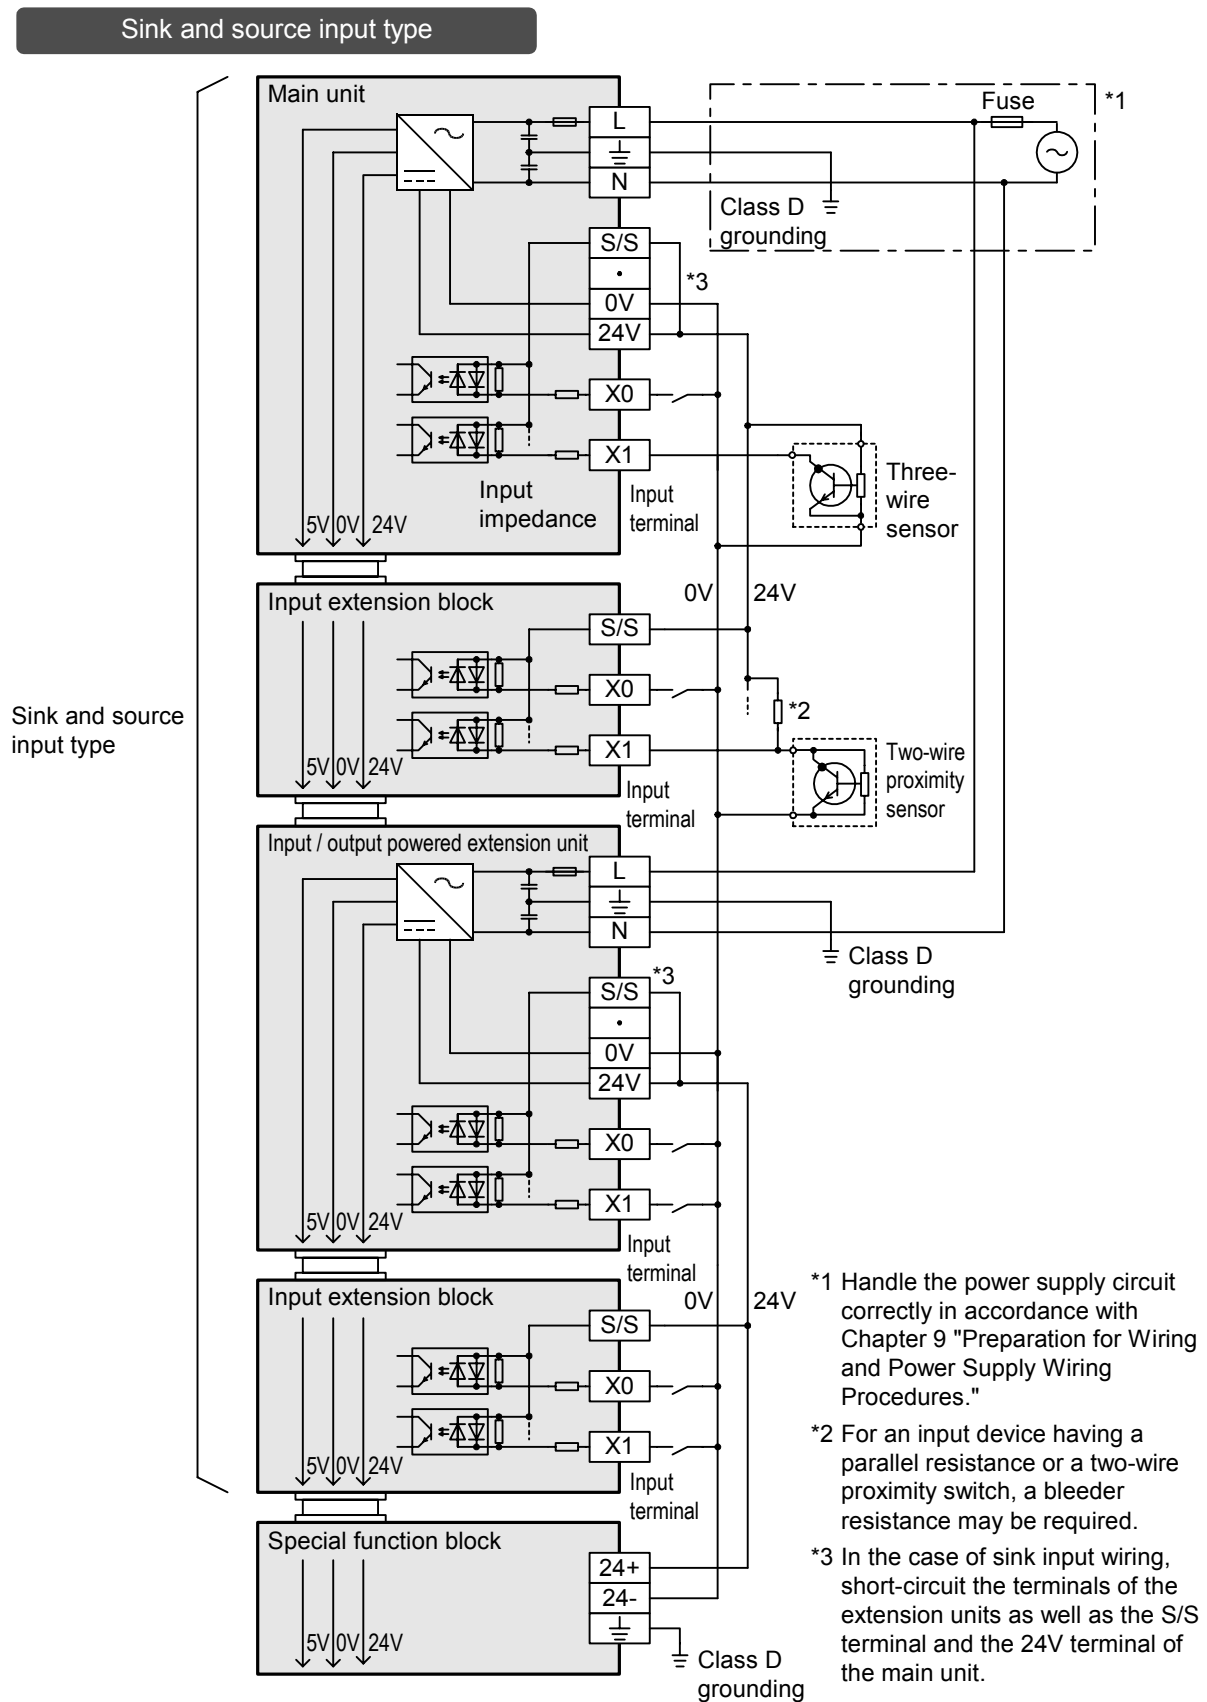

Use of input/output extension units/blocks of sink input type

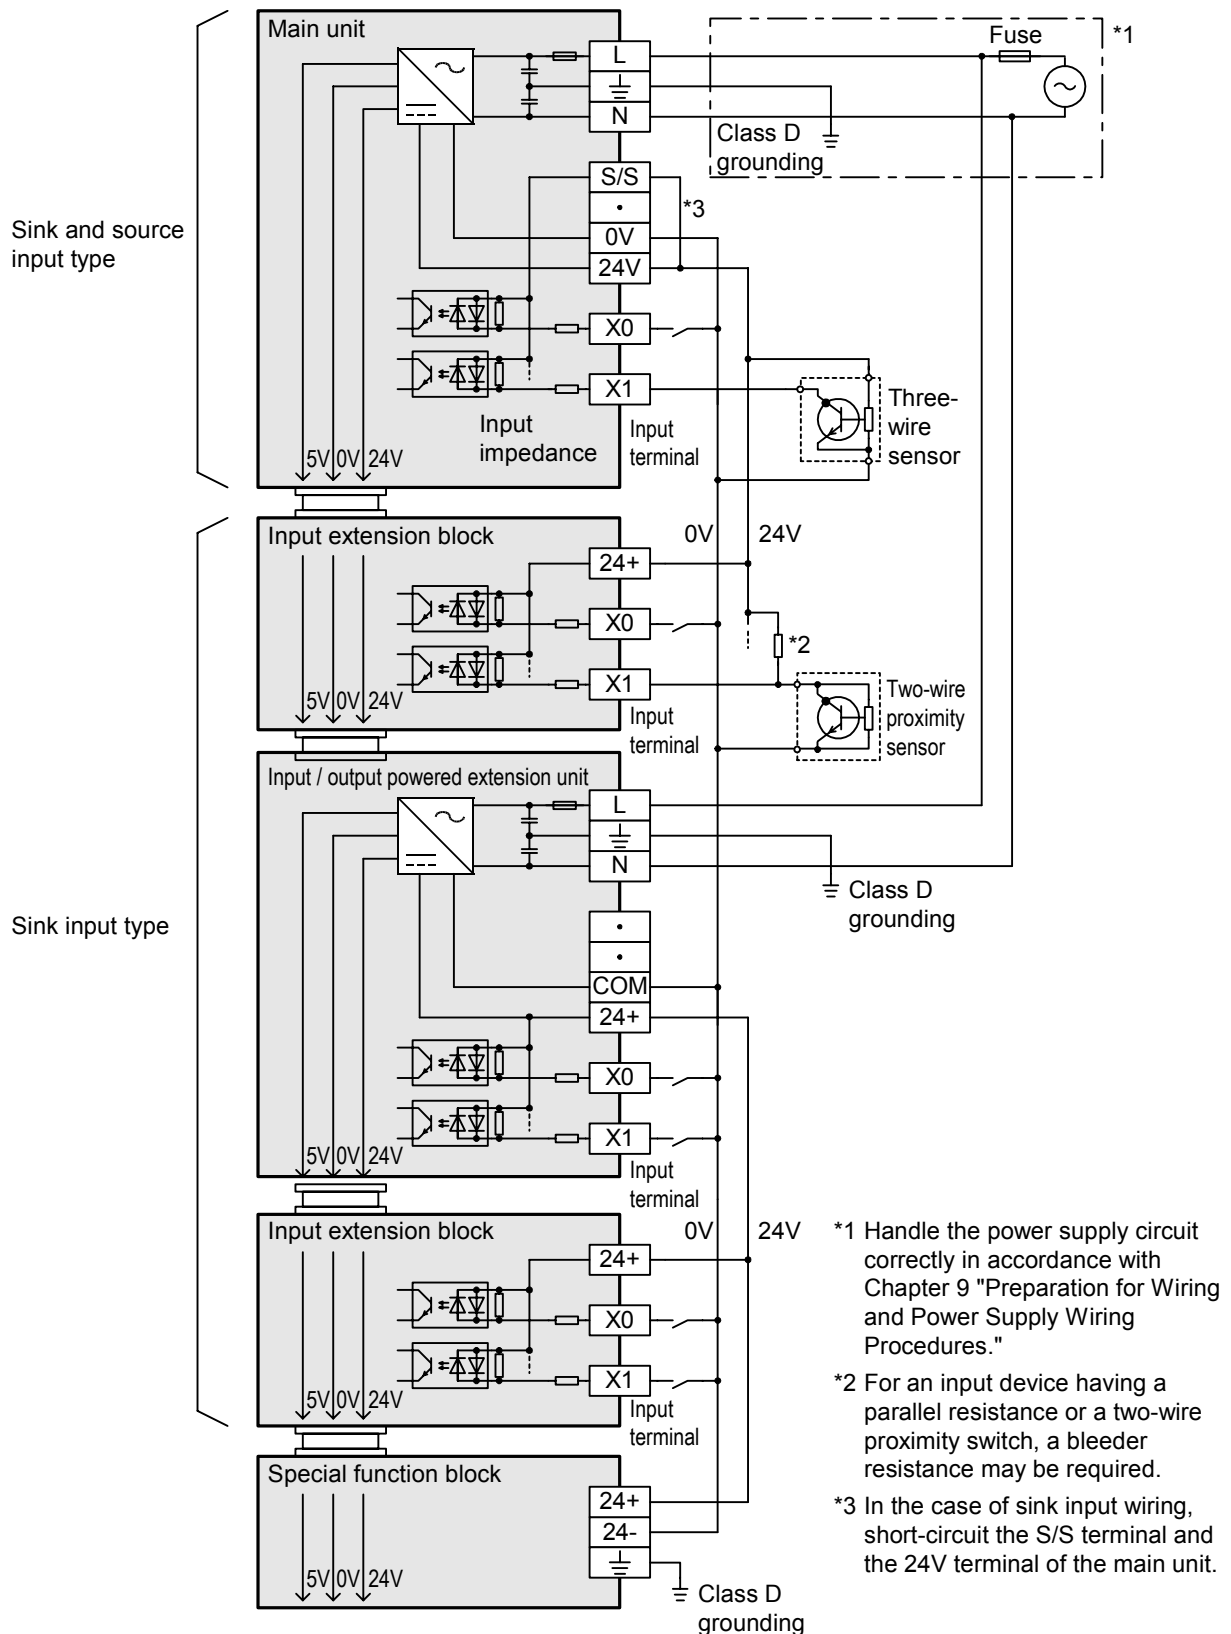

Sink and source input type



10.3 100V AC Input (Except Main Unit)

10.3.1 Input specifications

Select the input for the input/output powered extension units/blocks.
Main units of a 100V AC input type are not available.

- For the specifications on input/output powered extension units, refer to Chapter 15.
- For the specifications on input/output extension blocks, refer to Chapter 16.


10.3.2 Handling of 100V AC Input

1. Input terminal

When voltage of 100 to 120V AC is applied between the input terminal and COM terminal, the input terminal is turned on. The input display LED lights.
Do not connect the COM terminal of an AC input type input/output powered extension unit/block with the COM terminal of a DC system.

2. Input circuit

The primary input circuit and the secondary input circuit are insulated with a photocoupler.
There is a delay of approx. 25 to 30ms in response to input switching from ON to OFF and from OFF to ON.

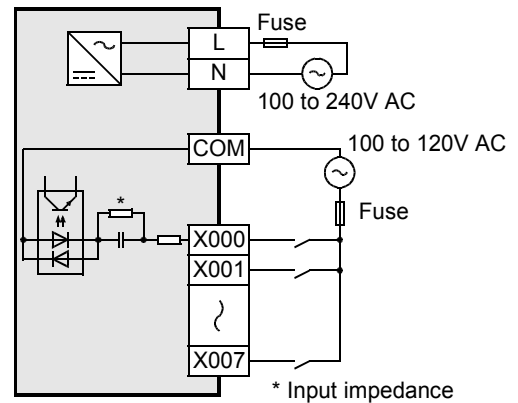


3. Input sensitivity

The input current and input sensitivity of these PLCs are shown in the following table.

Input		Specifications	
Input voltage		100 to 120V AC +10%, -15% 50/60Hz	
Input current		6.2 mA/110V 60Hz 4.7 mA/100V 50Hz	Percentage of simultaneous power-on: 70% or less
Input sensitivity	ON	3.8 mA/80V AC	
	OFF	1.7 mA/30V AC	

10.3.3 Example of external wiring

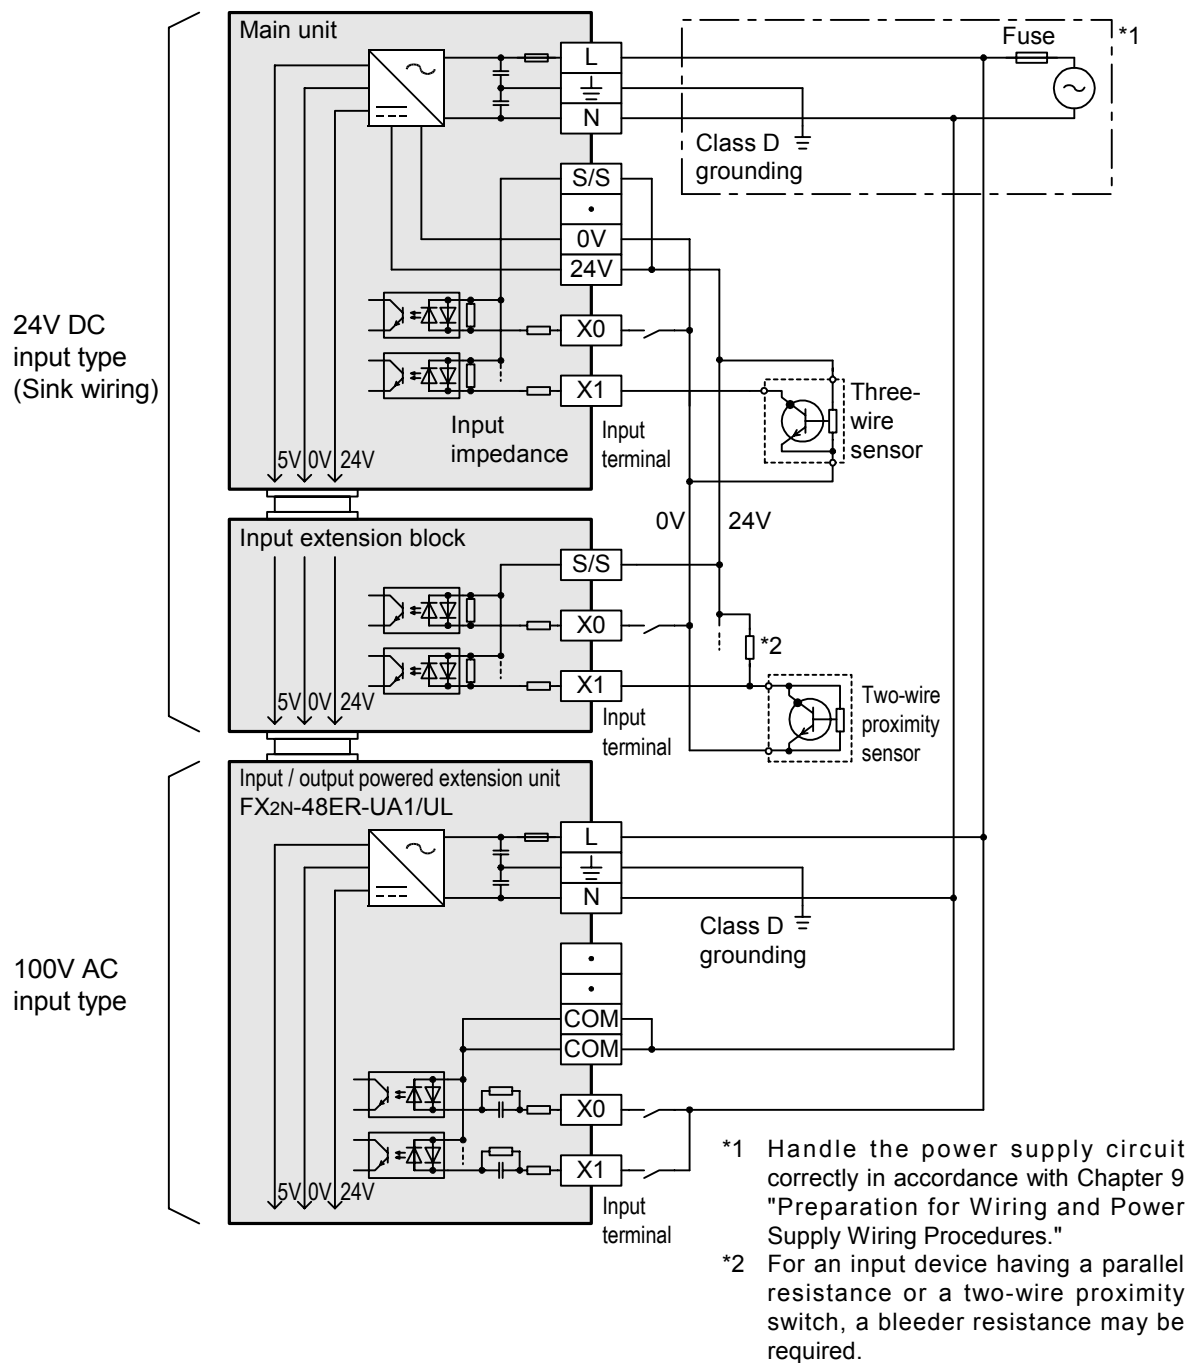

10.4 Input Interruption (I00□ to I50□) - With Delay Function

The PLC (main unit) is provided with an input interruption function (input delay interruption function) and has six interruption input points.

The ON or OFF duration of interruption input signals should be 5μs or more.

→ For the details of programming, refer to the programming manual.

10.4.1 Allocation of pointers to input numbers (input signal ON/OFF duration)

Input No.	Interrupt pointer		Interrupt disable control	ON or OFF duration of input signal
	Interruption on leading edge	Interruption on trailing edge		
X000	I001	I000	M8050	5μs or more
X001	I101	I100	M8051	
X002	I201	I200	M8052	
X003	I301	I300	M8053	
X004	I401	I400	M8054	
X005	I501	I500	M8055	

10.4.2 Input interruption delay function

This input interruption has a function to delay execution of interruption routine in 1ms units.

With this delay function, the position of the sensor used for input interruption can be adjusted in the sequence program. It is necessary to adjust the actual position of the sensor.

→ For the programming, refer to the programming manual.

10.4.3 Cautions for input interruption

1. Non-overlap of of input numbers

The input terminals X000 to X007 can be used for high-speed counter, input interruption, pulse catch, SPD, ZRN, DSZR and DVIT instructions and general-purpose inputs.



Take care not to overlap the input numbers.

Example:

When the input interrupt pointer "I001" is used, X000 is occupied. Therefore, it is impossible to use C235, C241, C244, C246, C247, C249, C252 and C254, input interruption (including delay interruption) pointer I000, pulse catch contact M8170 and SPD, ZRN, DSZR and DVIT instructions at the same time.

2. Cautions in wiring

- The wiring length should be 5m or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the other side device and the input current of the main body is 20 mA or more.
 - Source input: PNP open collector transistor
 - Sink input: NPN open collector transistor

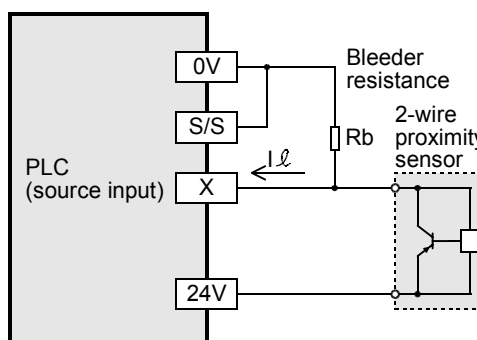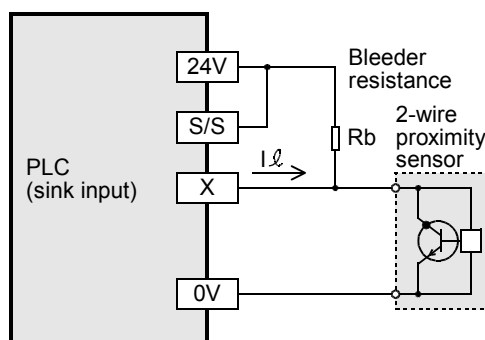


10.4.4 Examples of external wiring

Use shielded twisted-pair cables for connecting cables.
Ground the shield of each shielded cable only on the PLC side.

1. Examples of input interruption (I000 or I001) wiring using X000


When another input terminal is used, wire it according to the following diagrams.

- 1) When 24V DC service power supply is used

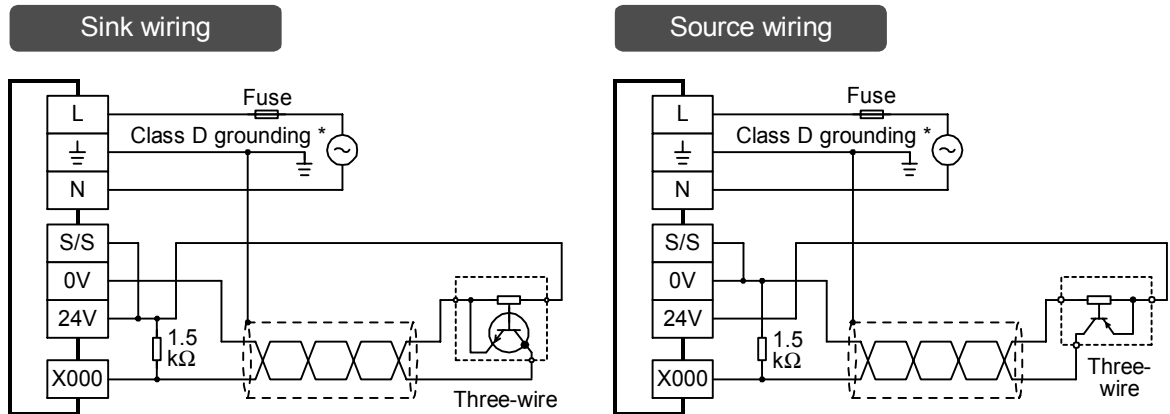

* The grounding resistance should be 100Ω or less.

- 2) When 24V DC external power supply is used

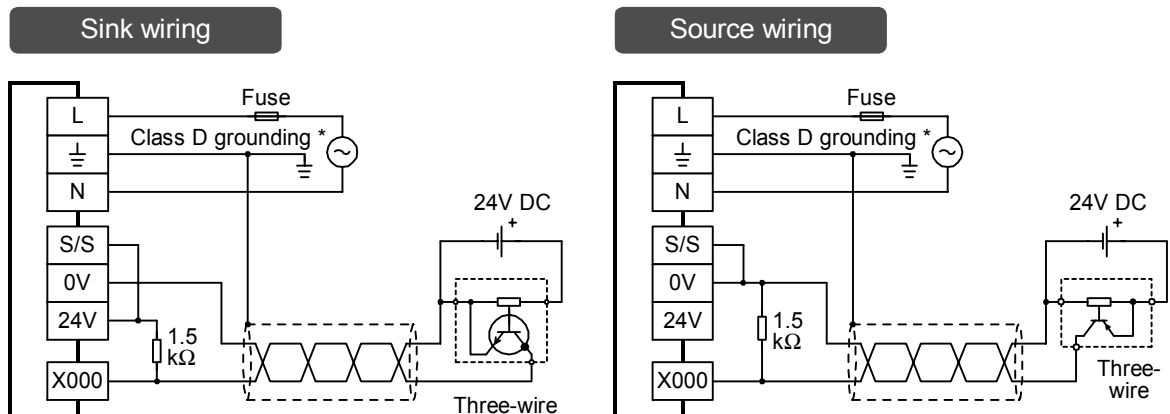

* The grounding resistance should be 100Ω or less.

10.5 Pulse Catch (M8170 to M8177)

The PLC (main unit) is provided with a pulse catch function and has 8 pulse catch input points.

→ For the details of programming, refer to the programming manual.

10.5.1 Allocation of special memories to input numbers (ON duration of input signals)

Input No.	Contact on sequence program	ON duration of input signal
X000	M8170	5μs or more
X001	M8171	
X002	M8172	
X003	M8173	
X004	M8174	
X005	M8175	50μs or more
X006	M8176	
X007	M8177	

10.5.2 Cautions for pulse catch

1. Non-overlap of input numbers

The input terminals X000 to X007 can be used for high-speed counter, input interruption, pulse catch, pulse density (SPD) instructions and general-purpose input.

Take care not to overlap the input numbers.

Example:

When the pulse catch input contact M8170 is used, X000 is occupied. Therefore, it is impossible to use C235, C241, C244, C246, C247, C249, C252 and C254, input interruption (including delay interruption) pointers I000 and I001 and SPD, ZRN, DSZR and DVIT instructions at the same time.

2. Cautions in wiring

- The wiring length should be 5 m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the other side device and the input current of the main body is 20 mA or more.


10.5.3 Examples of external wiring

Use shielded twisted-pair cables for connecting cables.
Ground the shield of each shielded cable only on the PLC side.

1. Examples of pulse catch (M8170) wiring using X000


When another input terminal is used, wire it according to the following diagrams.

- 1) When 24V DC service power supply is used

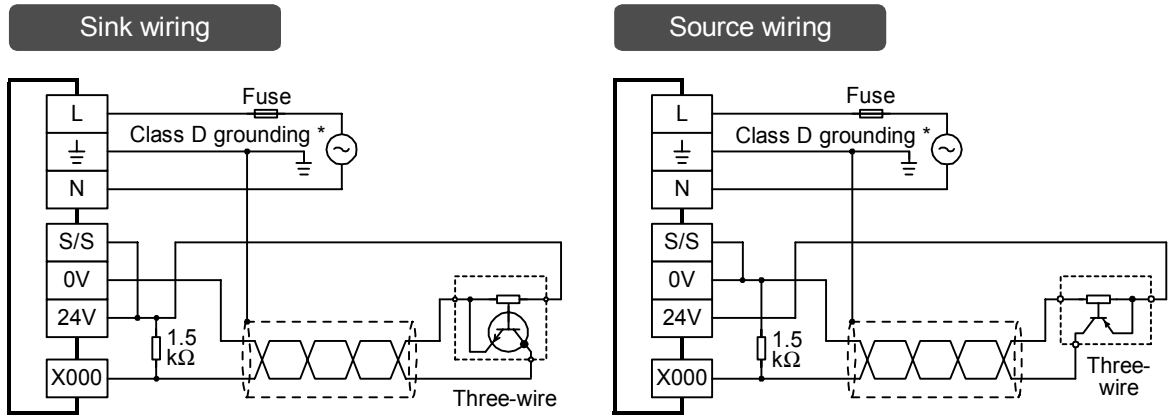

* The grounding resistance should be 100Ω or less.

- 2) When 24V DC external power supply is used

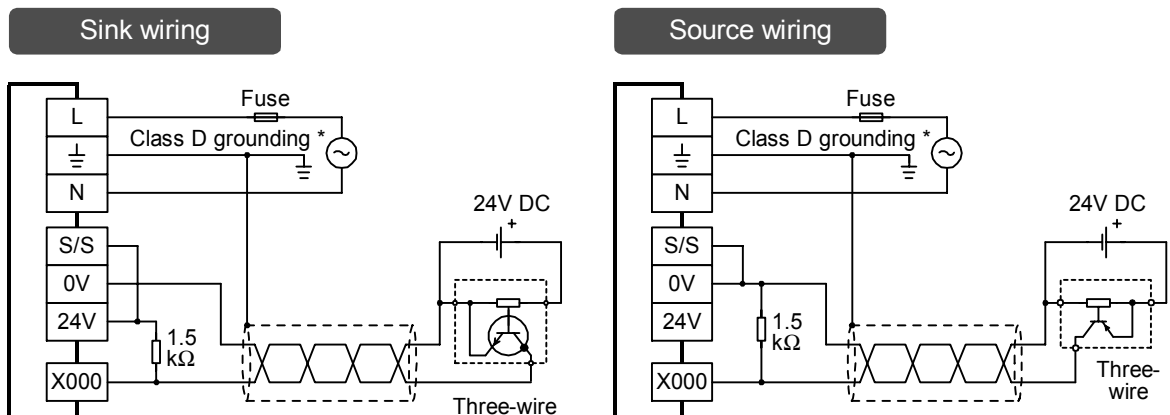

* The grounding resistance should be 100Ω or less.


11. Use of High-speed Counters (C235 to C255)

11.1 Outline

The high-speed counters can count the signals to the general-purpose input terminals to the main unit or the signals to the high-speed input special adapters (options). These two types of counters differ in the maximum response frequency and type of input signals to be counted.

→ For the details, refer to Section 11.2.

- General-purpose input terminals of main unit
Signals of the open collector transistor output can be input to the counters. The counters can count signals of up to 100kHz (1-phase).
- High-speed input special adapters
Signals of the differential line driver output can be input to the counters. The counters can count signals of up to 200kHz (1-phase).

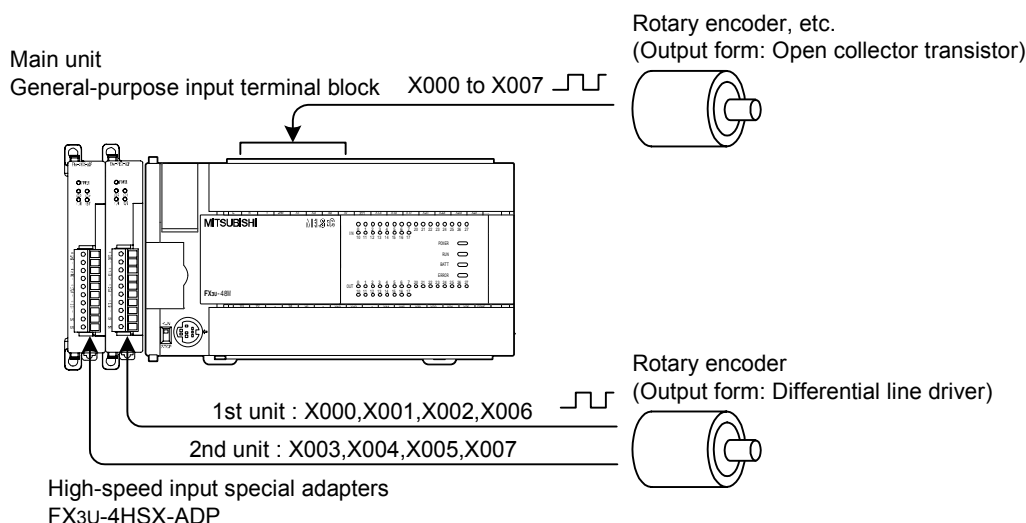

Cautions for high-speed input special adapters

Do not use the same input number for both high-speed input special adapter terminal and main unit terminal.

- When wiring the input numbers assigned to a high-speed input special adapter, do not wire the same input number in main unit.
- When not wiring the input numbers assigned to a high-speed input special adapter, terminals of input numbers in main unit can be used as general inputs.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

11.2 Input Specifications

For input of the high-speed counters, the input terminals X000 to X007 of the main unit or high-speed input adapter are used.

→ For the input specifications for X000 to X007 of the main unit, refer to Section 10.2.

11.2.1 High-speed input special adapter (FX3U-4HSX-ADP)

1. Performance specifications

Item	Specification		
Number of input points	4 points (These points are not included in the total number of PLC input/output points.)		
Input form	Differential line receiver (equivalent to AM26C32)		
Max. input frequency	1-phase 1-input	200kHz	High-speed counter operating with hardware counter*1
	1-phase 2-input		
	2-phase 2-input	100kHz	
Min. pulse width	1 μs or more		
Insulation	The external wiring of the input block and the PLC are insulated with a photocoupler or a transformer.		
Wiring length	Up to 10m		


*1. The maximum input frequency to the software counters^{*2} is the same as that of signals to be captured to the input terminals of the main unit.

→ For the details of the response frequency, refer to Subsection 11.9.2.

*2. The software counters include hardware counters that operate as software counters.

→ For the conditions under which the hardware counters operate as software counters, refer to Subsection 11.8.1.

2. Internal circuit of input interface

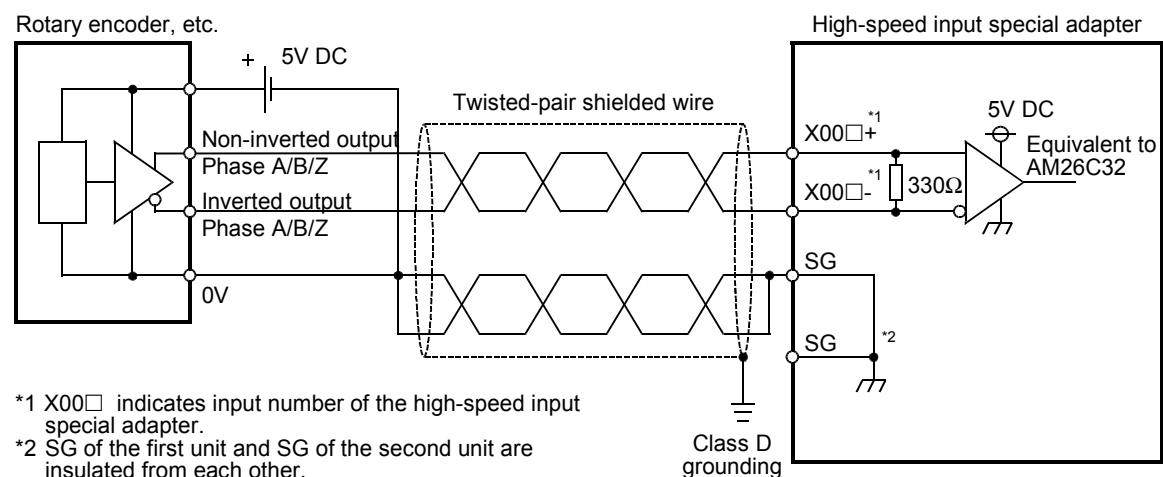

11.2.2 Cautions in connecting mating device

Encoders of the output forms shown in the following table can be connected to the terminals. (The encoders may not function correctly depending on electrical compatibility. Check the specifications in advance.) Voltage output type encoders and absolute encoders cannot be connected to the high-speed counter input terminals.

Terminals for connecting	Output form that can be directly connected
Input terminals of main unit	Open collector transistor output form (applicable to 24V DC)
Input terminals of FX3U-4HSX-ADP	Differential line driver output form Set the input voltage of FX3U-4HSX-ADP to 5V DC or less.

11.3 Types of Counting and Operations

The main unit has 32-bit high speed bi-directional counters (1-phase 1-count input, 1-phase 2-count input and 2-phase 2-count input) built-in. The high-speed counters are classified into hardware counters and software counters according to the counting method.

For some high-speed counters, external reset input terminals or external start input terminals (start of counting) can be selected.

11.3.1 Classification according to counting method

Classification	Details
Hardware counters	Counting by hardware They are switched to software counters under some working conditions.
Software counters	Counting through interrupt handling by CPU Each counter must be used within limitations on maximum response frequency and overall frequency.

11.3.2 Types and input signal forms

The types and input signals (waveforms) of high-speed counters (1-phase 1-count input, 1-phase 2-count input and 2-phase 2-count input) are shown below.

Type of counter	Input signal form	Counting direction
1-phase 1-count input	UP/DOWN	Down-counting or up-counting is specified by turning on or off M8235 to M8245. ON: Down-counting OFF: Up-counting
1-phase 2-count input	UP DOWN	Up-counting or down-counting The counting direction can be checked with M8246 to M8250. ON: Down-counting OFF: Up-counting
2-phase 2-count input	1 edge count Phase A Phase B Up-counting Down-counting	Automatic up-counting or down-counting according to change in input status of phase A/B The counting direction can be checked with M8251 to M8255. ON: Down-counting OFF: Up-counting
	4 edge count Phase A Phase B Up-counting Down-counting	

11.3.3 High-speed counter device notations

The input terminal assignments for FX3U PLC high-speed counters can be switched when used in combination with a special auxiliary relay.

This section classifies these high-speed counter devices under the following notations. Note that an "(OP)" input cannot be programmed.

Standard Device Numbers	Switched Device Numbers	Standard Device Numbers	Switched Device Numbers
C244	C244(OP)	C248	C248(OP)
C245	C245(OP)	C253	C253(OP)

11.4 List of Device Numbers and Functions

→ For the details of the counter number (OP), refer to Subsection 11.3.3.

Counter type	Device No. (counter)	Classification	1 edge count/ 4 edge count	Data length	External reset input terminal	External start input terminal
1-phase 1-count input	C235 ^{*2} C236 ^{*2} C237 ^{*2} C238 ^{*2} C239 ^{*2} C240 ^{*2}	Hardware counter ^{*1}	—	32-bit bi-directional counter	None	None
	C244(OP) ^{*3} C245(OP) ^{*3}		—			
	C241 C242 C243	Software counter	—		Provided ^{*5}	None
	C244 ^{*3} C245 ^{*3}		—		Provided ^{*5}	Provided
1-phase 2-count input	C246 ^{*2} C248(OP) ^{*2*3}	Hardware counter ^{*1}	—	32-bit bi-directional counter	None	None
	C247 C248 ^{*3}	Software counter	—		Provided ^{*5}	None
	C249 C250		—		Provided ^{*5}	Provided
2-phase 2-count input	C251 ^{*2}	Hardware counter ^{*1}	1 edge count ^{*4}	32-bit bi-directional counter	None	None
			4 edge count ^{*4}			
	C253 ^{*2}		1 edge count ^{*4}		Provided ^{*5}	
			4 edge count ^{*4}			
	C252	Software counter	1 edge count ^{*4}		Provided ^{*5}	None
			4 edge count ^{*4}			
	C253(OP) ^{*6}		1 edge count ^{*4}		None	
			4 edge count ^{*4}			
	C254 C255		1 edge count ^{*4}		Provided ^{*5}	Provided
			4 edge count ^{*4}			

- *1. These counters are handled as software counters depending on working conditions. When they are handled as software counters, they have limitations on maximum response frequency and overall frequency.
→ For the conditions under which they are handled as software counter, refer to Section 11.8.
→ For the overall frequency, refer to Section 11.9.
- *2. When the input terminals of the main unit receive pulses having a response frequency of 50k to 100kHz, wire the terminals as stated below.
- The wiring length should be 5m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1W or more) to the input terminal, so that the load current of the open collector transistor output on the mating device side is 20mA or more.
→ For the wiring, refer to Section 11.10.
- *3. C244, C245 and C248 are usually used as software counters. When they are used in combination with special auxiliary relays (M8388 and M8390 to M8392), they can be used as hardware counters C244(OP), C245(OP) and C248(OP).
→ For the procedures on switching the counter function, refer to Subsection 11.11.3.
- *4. The 2-phase 2-input counters are 1 edge count counters. When they are used in combination with special auxiliary relays (M8388, M8198 and M8199), they can be used as 4 edge count counters.
→ For the procedures on using them as 4 edge count counters, refer to Subsection 11.11.4.

- *5. The external reset input terminals are reset when they are turned on. When they are used in combination with special auxiliary relays (M8388 and M8389), they can be reset when turned off.
→ **For the procedures on changing the external reset input logic, refer to Subsection 11.11.3.**
- *6. C253 is usually used as a hardware counter. When it is used in combination with the special auxiliary relay (M8388 and M8392), it can be used as a counter C253(OP) without reset input.
In this case, C253(OP) is handled as a software counter.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

11.5 Allocation of Device Numbers to Input Numbers

The high-speed counter numbers are allocated to the input terminals X000 to X007 as shown in the following table.

The input terminals not allocated for high-speed counters can be used as general input terminals.

11.5.1 Allocation table

The allocation of the first unit of FX3U-4HSX-ADP is shown in the heavy-line frames.

H/W: Hardware counter S/W: Software counter U: Up-count input D: Down-count input

A: A-phase input B: B-phase input R: External reset input S: External start input

Terminals to be connected		Input allocation							
		X000	X001	X002	X003	X004	X005	X006	X007
• Input terminals of main unit		✓	✓	✓	✓	✓	✓	✓	✓
• FX3U-4HSX-ADP High-speed input special adapters	1st unit	✓	✓	✓	–	–	–	✓	–
	2nd unit	–	–	–	✓	✓	✓	–	✓

Type of counter	Counter No.	Classification	Input allocation							
			X000	X001	X002	X003	X004	X005	X006	X007
1-phase 1-count input	C235 ^{*1}	H/W ^{*2}	U/D							
	C236 ^{*1}	H/W ^{*2}		U/D						
	C237 ^{*1}	H/W ^{*2}			U/D					
	C238 ^{*1}	H/W ^{*2}				U/D				
	C239 ^{*1}	H/W ^{*2}					U/D			
	C240 ^{*1}	H/W ^{*2}						U/D		
	C241	S/W	U/D	R						
	C242	S/W			U/D	R				
	C243	S/W					U/D	R		
	C244	S/W	U/D	R					S	
	C244(OP) ^{*3}	H/W ^{*2}							U/D	
	C245	S/W			U/D	R				S
1-phase 2-count input	C245(OP) ^{*3}	H/W ^{*2}								U/D
	C246 ^{*1}	H/W ^{*2}	U	D						
	C247	S/W	U	D	R					
	C248	S/W				U	D	R		
	C248(OP) ^{*1*3}	H/W ^{*2}				U	D			
	C249	S/W	U	D	R				S	
2-phase 2-count input ^{*4}	C250	S/W				U	D	R		S
	C251 ^{*1}	H/W ^{*2}	A	B						
	C252	S/W	A	B	R					
	C253 ^{*1}	H/W ^{*2}				A	B	R		
	C253(OP) ^{*3}	S/W				A	B			
	C254	S/W	A	B	R				S	
	C255	S/W				A	B	R		S

*1. When the input terminals of the main unit receive pulses having a response frequency of 50k to 100kHz, wire the terminals as stated below.

- The wiring length should be 5m (16'4") or less.
- Connect a bleeder resistance of 1.5kΩ (1 W or more) to the input terminal, so that the load current of the open collector transistor output on the mating device side to 20mA or more.

→ For the wiring, refer to Section 11.10.

- *2. When the comparison set/reset instructions (DHSCS, DHSCR, DHSZ and DHSCT) for high-speed counters are used, the hardware (H/W) counters are switched to software (S/W) counters. When the input signal logic is inverted by the reset input signal logic switching function (M8388 and M8389), C253 is switched from a hardware counter to a software counter.
→ **For the conditions under which it is handled as a software counter, refer to Section 11.8.**
- *3. The input terminals to be used and the functions are switched by driving the special auxiliary relays in the program.
→ **For the procedures on switching to hardware counters, refer to Subsection 11.11.3.**
- *4. The 2-phase 2-count input counters are 1 edge count counters. The use of special auxiliary relays changes them to 4 edge count counters.
→ **For the procedures on operating them as 4 edge count counters, refer to Subsection 11.11.4.**

11.5.2 Inhibition of redundant use of input numbers

- The input terminals X000 to X007 can be used for high-speed counters, input interruption, pulse catch, SPD, ZRN, DSZR and DVIT instructions and general-purpose inputs. Take care not to overlap the input terminals.
For example, when C251 is used, X000 and X001 are occupied. Therefore, it is impossible to use C235, C236, C241, C244, C246, C247, C249, C252 and C254, input interruption pointers I000 and I101, pulse catch contacts M8170 and M8171 and SPD, ZRN, DSZR and DVIT instructions at the same time.
- The same input numbers are allocated to the input terminals on FX3U-4HSX-ADP and the input terminals of the main unit of FX3U PLC. Use one of the terminals with the same number. If both input terminals are being used, intended operation cannot be realized because the input terminals on FX3U-4HSX-ADP and the main unit operate in the OR relation.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20


Memory
Cassette

11.6 Handling of High-speed Counters

11.6.1 1-phase 1-count input


Examples of program

1) For C235

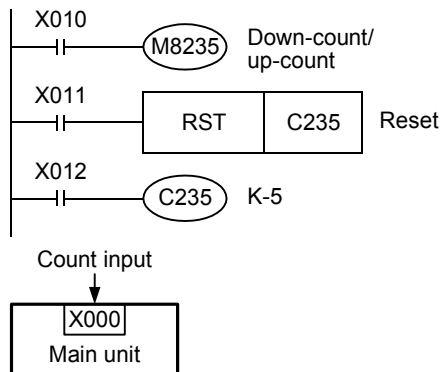

- C235 counts the number of times the input terminal X000 is switched from OFF to ON while X012 is on.
- While X011 is on, the counter is reset when the RST instruction is executed.
- The counters C235 to C245 are switched to the down-count or up-count mode by turning on or off M8235 to M8245.


2) For C244

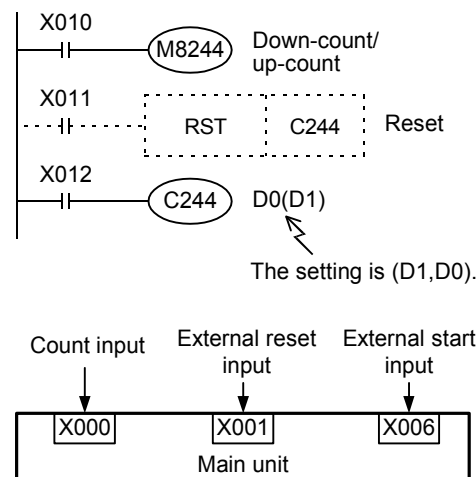

- C244 starts counting immediately when the input terminal X006 is turned on while X012 is on. The count input terminal is X000. The setting for this example is the data of the indirectly designated data register (D1,D0).
- C244 can be reset by X011 on the sequence. For C244, X001 is allocated as the external reset input. The counter is reset immediately when X001 is turned on.
- The counters C235 to C245 are switched to the down-count or up-count mode by turning on or off M8235 to M8245.

Example of operation

The above counter C235 operates as shown below.

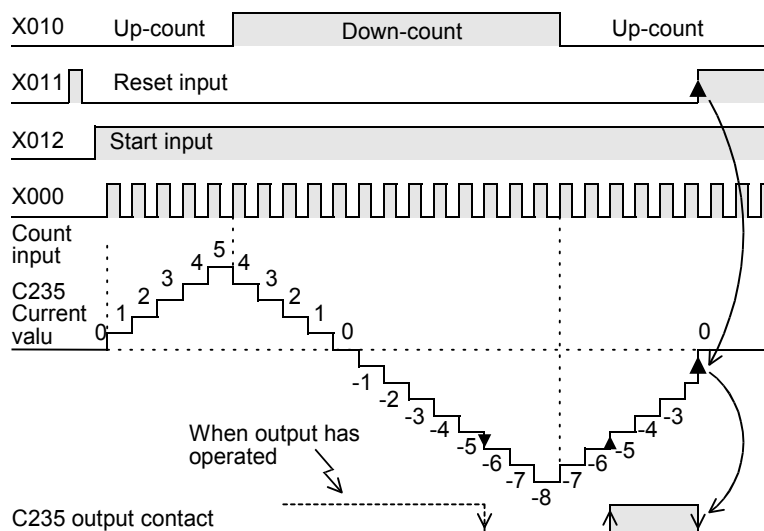

C235 is set to the up-count or down-count mode through interruption by the count input X000.

- When the current value is increased from -6 to -5, the output contact is set, and when the value is decreased from -5 to -6, it is reset.
- The current value increases and decreases regardless of the operation of the output contact. However, when the counter's value increments from 2,147,483,647, it changes to -2,147,483,648. In the same manner, when it decrements from -2,147,483,648, it changes to 2,147,483,647. (This type of counter is called a ring counter.)
- When RST instruction is executed after the reset input X011 is turned on, the current counter's value is reset to 0, and the output contact is restored.
- The current values, output contact operations and reset status of the high-speed counters for retention upon power failure are kept even if power is turned off.


11.6.2 1-phase 2-count input

These counters are 32-bit up-count/down-count binary counters.

The operations of the output contact according to the current value are the same as those of the above-mentioned 1-phase 1-count input high-speed counters.


Examples of program

1) For C246

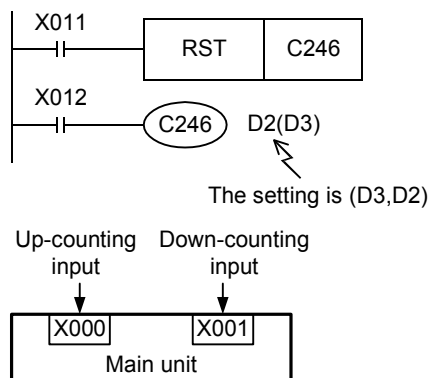

- While X012 is on, C246 increments the value when the input terminal X000 is switched from OFF to ON and decrements the value when the input terminal X001 is switched from OFF to ON.
- The down-count/up-count operations of C246 to C250 can be monitored through the ON/OFF operations of M8246 to M8250.
ON: Down-counting
OFF: Up-counting

2) For C249

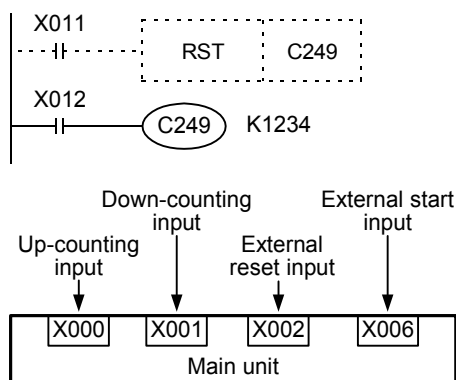

- While X012 is on, C249 starts counting immediately when the input terminal X006 is turned on. The up-counting input terminal is X000, and the down-counting input terminal is X001.
- C249 can be reset on the sequence by X011. For C249, X002 is allocated as reset input. When X002 is turned on, C249 is immediately reset.
- The down-count/up-count operations of C246 to C250 can be monitored through the ON/OFF operations of M8246 to M8250.
ON: Down-counting
OFF: Up-counting


11.6.3 2-phase 2-count input

These counters are 32-bit up-count/down-count binary counters.

The operations of the output contact according to the current value are the same as those of the above-mentioned 1-phase 1-count input high-speed counters.


Examples of program

1) For C251

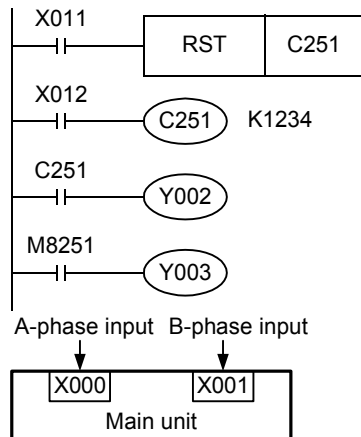

- While X012 is on, C251 counts the operations of the input terminals X000 (A-phase) and X001 (B-phase) through interruption. While X011 is turned on, the counter is reset when RST instruction is executed.
- When the current value exceeds the setting, Y002 is turned on, and when the current value becomes lower than the setting, Y002 is turned off.
- Y003 is turned on (down-count) or off (up-count) according to the counting direction.


2) For C254

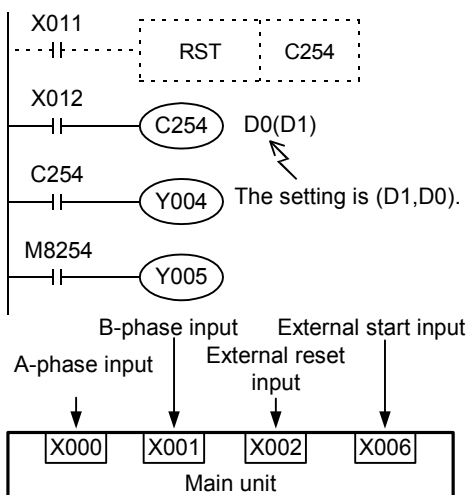


- C254 starts counting immediately when the input terminal X006 is turned on while X012 is on. The count input terminals are X000 (A-phase) and X001 (B-phase).
- C254 is reset by X011 on the sequence, and it is reset immediately when X002 is turned on.
- When the current value exceeds the setting (D1,D0), Y004 operates, and when the current value becomes lower than the setting, Y004 is turned off.
- Y005 is turned on (down-count) or off (up-count) according to the counting direction.

- A 2-phase encoder generates A-phase output and B-phase output between which there is a 90° phase difference. The high-speed counter automatically counts up or down according to the output as shown below.

- Operation by 1 edge count

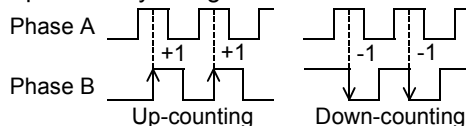

- Operation by 4 edge count

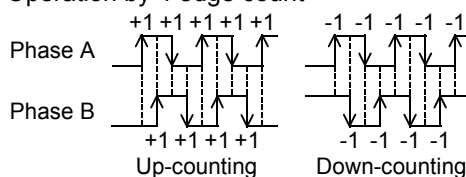

- The down-count/up-count operations of C251 to C255 can be monitored through the ON/OFF operations of M8251 to M8255.
ON: Down-counting
OFF: Up-counting

11.7 Timing of Updating of Current Value and Comparison of Current Value

11.7.1 Timing of updating of current value

When a pulse is input to a high-speed counter input terminal, the counter increments or decrements. The current value of the device is updated at the timing shown in the following table.

Therefore, when the hardware counter directly handles the current value of the high-speed counter for MOV instruction or CMP instruction or an applied instruction (such as a contact comparison instruction), it uses the current value updated at the timing shown in the following table. As a result, the counter operation is affected by the scan time.

Classification	Timing of updating of current value
Hardware counter	OUT instruction of counter HCMOV instruction
Software counter	When count is input

11.7.2 Comparison of current value

To compare and output the current value of a high-speed counter, the following two methods are available.

1. Use of comparison instruction (CMP), band comparison instruction (ZCP) or contact comparison instruction

When the comparison results are necessary for counting operation, the value can be compared with time *1 in the main program by using HCMOV instruction just before a comparison command (CMP command/ZCP command) or a contact comparison instruction.

- *1. To compare the value with the high-speed counter's changing value and to change the output contact (Y), use Comparison instruction for high-speed counter (HSCS/HSCR/HSZ/HSCT instruction).

2. Use of Comparison instruction for high-speed counter (HSCS/HSCR/HSZ/HSCT instruction)

Comparison instructions for high-speed counter (HSCS, HSCR, HSZ and HSCT instructions) perform comparison and output the comparison results when the relevant high-speed counting operation. These instructions have limitations on the number of times of use as shown in the following table.

When the output relay (Y) has been designated for comparison results, the ON/OFF status of output is affected directly until END instruction output is refreshed.

When the PLC is a relay output type, a mechanical delay in operation (approx. 10ms) is caused. Therefore, use a transistor output type PLC.

Applied instruction	Limitation on number of times of use of instruction
HSCS	Up to 32 times including the number of times of use of HSCT instruction
HSCR	
HSZ*1	
HSCT*1	Only once

- *1. When HSZ or HSCT instruction is used, the maximum response frequencies and overall frequency of all software counters becomes limited.

→ **For the maximum response frequencies and overall frequency of software counters, refer to Section 11.9.**

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20




Memory
Cassette

11.8 Conditions for Hardware Counter to be Handled as Software Counter

The high-speed counters are classified into hardware counters and software counters. Some hardware counters are handled as software counters depending on the operating conditions. In this case, use hardware counters within the range of maximum response frequency and total frequency determined for software counters.

11.8.1 Conditions under which counters are handled as software counters

The hardware counters can perform counting with the hardware of FX3U regardless of the overall frequency. However, under the following conditions, they are handled as software counters. When using them in the condition below, the maximum response frequencies and overall frequency of the counters are considered to be the same as those of other software counters.

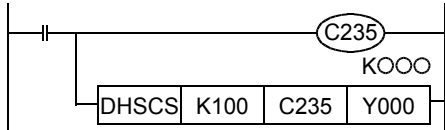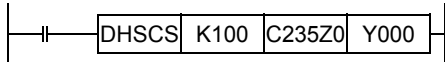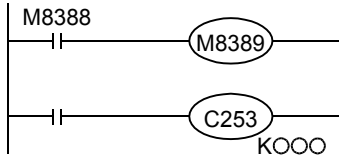Hardware counter No.	Conditions under which counters are handled as software counters
	<p>When DHSCS (FNC53), DHSCR (FNC54), DHSZ (FNC55) or DHSCT (FNC280) instruction is used for a hardware counter number, the hardware counter is handled as a software counter. Ex.: C235</p> 
C235 C236 C237 C238 C239 C240 C244(OP) C245(OP) C246 C248(OP) C251 C253	<p>In this case, C235 works as a software counter.</p> <p>When the index register is used for the counter number designated by DHSCS (FNC53), DHSCR (FNC54), DHSZ (FNC55) or DHSCT (FNC280) instruction, all hardware counters are handled as software counters. Ex.: C235Z0</p> 
	<p>When the logic is inverted by the external reset input signal logic change function, C253 is switched to a software counter. Ex.: The logic of the external reset input signal of C253 (software counter) is inverted. → For the inversion of the logic of external reset input signal, refer to Subsection 11.11.2.</p> 

11.8.2 Method of confirming operation status of counters

The high-speed counter mode, hardware or software, can be confirmed by checking whether the operation status (M8380 to M8387) is on or off.

→ **For the list of operation status of high-speed counters, refer to Subsection 11.11.1.**

11.9 Calculation of Response Frequency and Overall Frequency

11.9.1 Response frequencies of hardware counters

The maximum response frequencies of the hardware counters are shown in the following table. Depending on the working conditions, the maximum response frequencies of hardware counters are the same as those of the software counters, and limitations on overall frequency are set up.

→ For the conditions under which the hardware counters are handled as software counters, refer to the previous page.

Counter type		Counter Nos.	Max. response frequency	
			Main unit	FX3U-4HSX-ADP
1-phase 1-count input		C235,C236,C237,C238,C239,C240	100kHz	200kHz
		C244(OP),C245(OP)	10kHz	
1-phase 2-count input		C246,C248(OP)	100kHz	
2-phase 2-count input	1 edge count	C251,C253	50kHz	100kHz
	4 edge count		50kHz	100kHz

11.9.2 Response frequencies and overall frequency of software counters

The maximum response frequencies and overall frequency of software counters are shown below. When HSZ or HSCT instruction is used in the program, limitations are put on the maximum response frequencies and overall frequency of all software counters regardless of the instruction operand. When examining the system or creating the program, use the counters within the maximum response frequency and overall frequency ranges suitable to the conditions in consideration of the limitations.

1. When FX3U Series special function units/blocks and analog special adapters are not used

Examples of calculation are given in the heavy-line frame.

Counter type	Counter Nos.	Software counters with HSCS, HSCR, HSZ or HSCT instruction*1	Magnification for calculation of overall frequency	Response frequency and overall frequency depending on conditions of instruction to be used							
				Neither HSZ nor HSCT instruction		Only HSCT instruction		Only HSZ instruction		Both HSZ and HSCT instructions	
				Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)
1-phase 1-count input	C241, C242, C243, C244, C245	C235, C236, C237, C238, C239, C240	×1	40	80	30	60	40 - (number of instruction) *2	80 - 1.5 × (number of instruction)	30 - (number of instruction) *2	60 - 1.5 × (number of instruction)
	—	C244(OP), C245(OP)	×1	10		10					
1-phase 2-count input	C247, C248, C249, C250	C246, C248(OP)	×1	40		30					
2-phase 2-count input	1 edge count	C252, C253 (OP), C254, C255	×1	40	7.5	30		(40 - number of instruction) / 4		(30 - number of instruction) / 4	
	4 edge count	C251, C253	×4	10		7.5					

*1. When the index register is added to the counter number specified by HSCS, HSCR, HSZ or HSCT instruction, all hardware counters are switched to software counters.

*2. The high-speed counters C244(OP) and C245(OP) cannot count signals of 10kHz or more.

1) Calculation of overall frequency

The overall frequency is calculated by the high-speed comparison instruction used in the program based on the above table.

Overall frequency ≥ Sum of "response frequency of high-speed counter × Magnification for calculation of overall frequency"

2) Example of calculation

When only HSZ instruction is used six times in the program, the frequency is calculated by the formulas shown in the "Only HSZ instruction" column in the above table.

High-speed counter No. to be used		Input frequency	Calculation of max. response frequency	Magnification for calculation of overall frequency	Instruction to be used
C237	Operation as software counter	30kHz	40 - 6(times) = 34kHz	×1	HSZ instruction is used six times.
C241	Software counter	20kHz	40 - 6(times) = 34kHz	×1	
C253(OP) [4 edge count]		4kHz	{40 - 6(times)} / 4 = 8.5kHz	×4	

1) The overall frequency is calculated as shown below because HSZ instruction is used six times.

$$\text{Overall frequency} = 80 - 1.5 \times 6 = \underline{71\text{kHz}}$$

2) The sum of the response frequencies of the high-speed counters used is calculated as shown below.

$$"30\text{kHz} \times 1[\text{C237}]" + "20\text{kHz} \times 1[\text{C241}]" + "4\text{kHz} \times 4[\text{C253(OP)}]" = 66\text{kHz} \leq \underline{71\text{kHz}}$$

2. When FX_{3U} Series special function units/blocks and analog special adapters are used

Counter type	Counter Nos.	Software counters with HSCS, HSCR, HSZ or HSCT instruction *1	Magnification for calculation of overall frequency	Response frequency and overall frequency depending on conditions of instruction to be used							
				Neither HSZ nor HSCT instruction		Only HSCT instruction		Only HSZ instruction		Both HSZ and HSCT instructions	
				Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)	Max. response frequency (kHz)	Overall frequency (kHz)
1-phase 1-count input	C241, C242, C243, C244, C245	C235, C236, C237, C238, C239, C240	×1	30	60	25	50	30 - (number of instructions) *2	50 - 1.5 × (number of instructions)	25 - (number of instructions) *2	50 - 1.5 × (number of instructions)
	—	C244(OP), C245(OP)	×1	10		10					
1-phase 2-count input	C247, C248, C249, C250	C246, C248(OP)	×1	30		25					
2-phase 2-count input	1 edge count	C252, C253 (OP), C254, C255	×1	30	7.5	25	6.2	(30 - number of instructions) / 4		(25 - number of instructions) / 4	
	4 edge count	C251, C253	×4	7.5		6.2					

*1. When the index register is added to the counter number specified by HSCS, HSCR, HSZ or HSCT instruction, all hardware counters are switched to software counters.

*2. The high-speed counters C244(OP) and C245(OP) cannot count signals of 10 kHz or more.

1) Calculation of overall frequency

The overall frequency is calculated by the high-speed comparison instruction used in the program based on the above table.

Overall frequency \geq Sum of "response frequency of high-speed counter \times Magnification for calculation of overall frequency"

2) Example of calculation

When only HSZ instruction is used six times in the program, the frequency is calculated by the formulas shown in the "Only HSZ instruction" column in the above table.

High-speed counter No. to be used		Input frequency	Calculation of max. response frequency	Magnification for calculation of overall frequency	Instruction to be used
C237	Operation as software counter	20kHz	$30 - 6(\text{times}) = 24\text{kHz}$	$\times 1$	HSZ instruction is used six times.
C241	Software counter	10kHz	$30 - 6(\text{times}) = 24\text{kHz}$	$\times 1$	
C253(OP) [4 edge count]		2kHz	$\{30 - 6(\text{times})\} / 4 = 6\text{kHz}$	$\times 4$	

1) The overall frequency is calculated as shown below because HSZ instruction is used six times.

$$\text{Overall frequency} = 50 - 1.5 \times 6 = \underline{41\text{kHz}}$$

2) The sum of the response frequencies of the high-speed counters used is calculated as shown below.

$$"20\text{kHz} \times 1[\text{C237}]" + "10\text{kHz} \times 1[\text{C241}]" + "2\text{kHz} \times 4[\text{C253(OP)}]" = 38\text{kHz} \leq \underline{41\text{kHz}}$$

11.10 Examples of External Wiring (Rotary Encoder)

11.10.1 1-phase 1-input [C235 to C245]


The following examples of wiring apply to the cases where C235 is used. When another high-speed counter number is used, wire the counter referring to the following diagrams.

1. When the input terminals of the main unit are used

When pulses having a response frequency of 50 k to 100 kHz are captured to the high-speed counter using the input terminals X000 to X005, wire the counter as stated below.


- The wiring length should be 5m (16'4") or less.
- As connecting cables, use shielded twisted-pair cables. Ground the shield of each shielded cable only on the PLC side.
- Connect a bleeder resistance of 1.5k Ω (1W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device side and the input current of the main unit is 20 mA or more.

1) NPN open collector transistor output rotary encoder

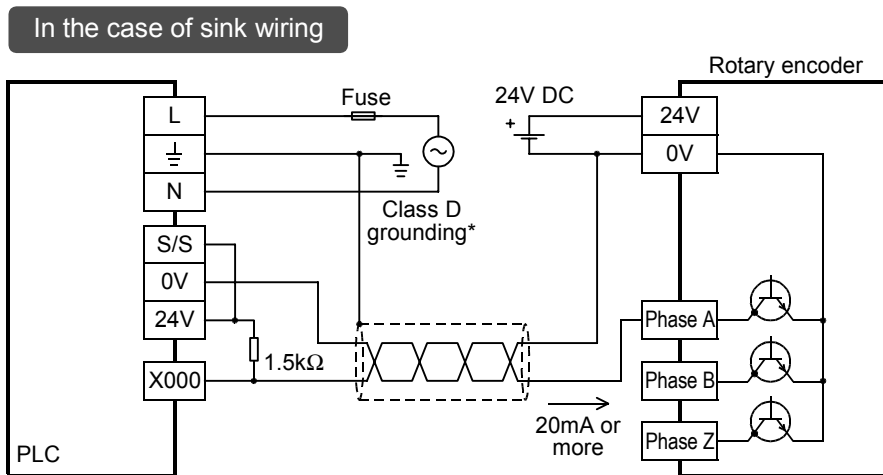

* The grounding resistance should be 100 Ω or less.


2) PNP open collector transistor output rotary encoder

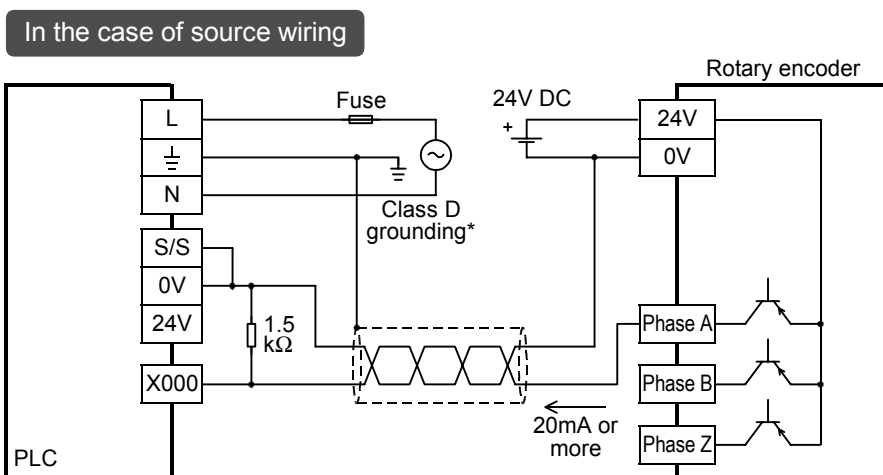

* The grounding resistance should be 100 Ω or less.

2. When high-speed input special adapter (FX_{3U}-4HSX-ADP) is used

1) Differential line driver output rotary encoder

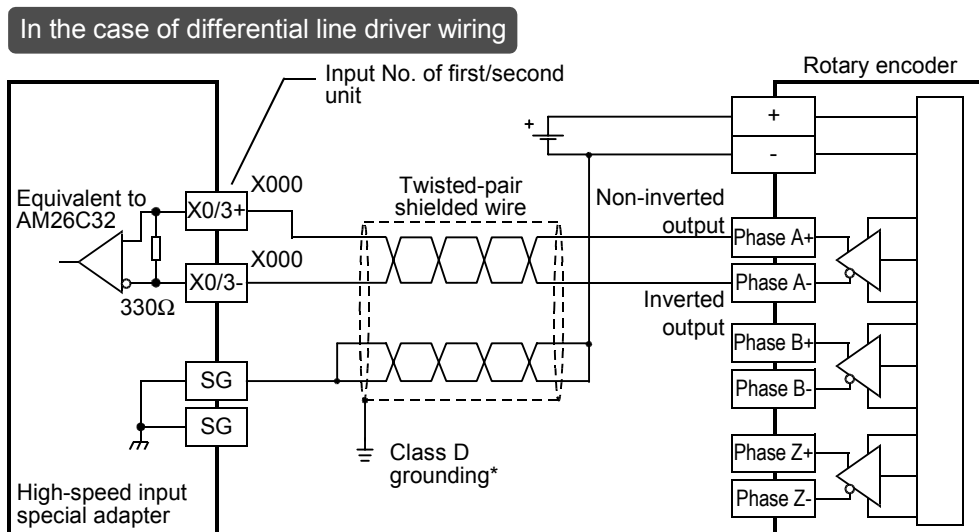

* The grounding resistance should be 100Ω or less.

11.10.2 2-phase 2-input [C251 to C255]


The following examples of wiring apply to the cases where C251 is used. When another high-speed counter number is used, wire the counter referring to the following diagrams.

1. When the input terminals of the main unit are used

When pulses having a response frequency of 50 k to 100 kHz are captured to the high-speed counter using the input terminals X000 to X005, wire the counter as stated below.

- The wiring length should be 5m (16'4") or less.
- For connecting cables, use shielded twisted-pair cables. Ground the shield of each shielded cable only on the PLC side.
- Connect a bleeder resistance of 1.5kΩ (1W or more) to the input terminal, so that the sum of the load current of the open collector transistor output on the mating device side and the input current of the main unit is 20mA or more.


1) NPN open collector transistor output rotary encoder

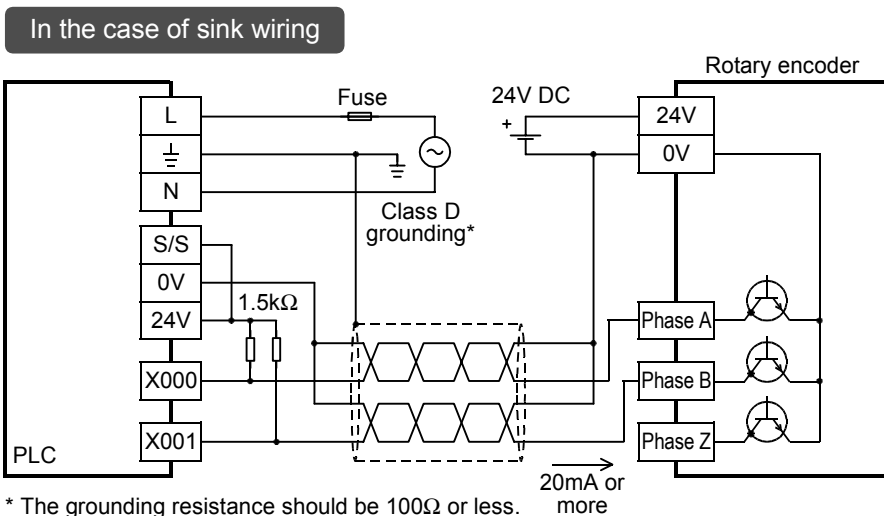

* The grounding resistance should be 100Ω or less.

2) PNP open collector transistor output rotary encoder


In the case of source wiring

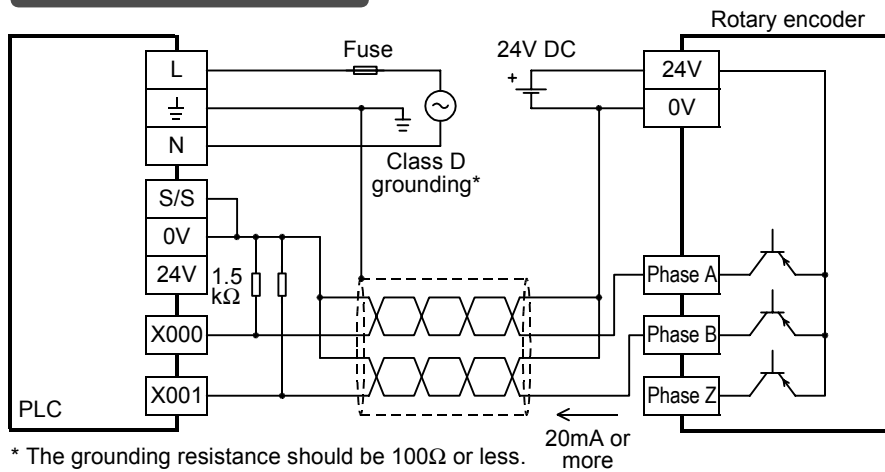

2. When high-speed input special adapter (FX3U-4HSX-ADP) is used

1) Differential line driver output rotary encoder

In the case of differential line driver wiring

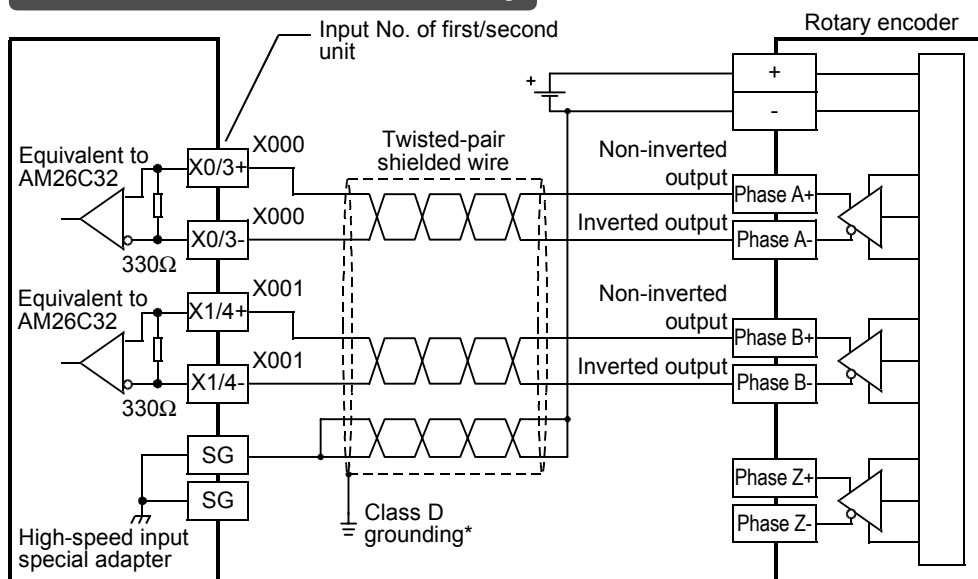

11.10.3 Cautions for the other side device

Encoders having the output forms shown in the following table can be connected to the terminals. (The encoders may not function correctly depending on electrical compatibility. Check the specifications in advance.)

Voltage output type encoders and absolute encoders cannot be connected to the high-speed counter input terminals.

Terminal for connecting	Output form that can be directly connected
Input terminals of main unit	Open collector transistor output form (applicable to 24V DC)
Input terminals of FX3U-4HSX-ADP	Differential line driver output form Set the input voltage of FX3U-4HSX-ADP to 5V DC or less.

11.11 Related Devices and Function Switching Procedures

11.11.1 Related devices

1. For switching 1-phase 1-count input counter mode to up-count or down-count

Counter type	Counter No.	Specifying device	Up-counting	Down-counting
1-phase 1-count input	C235	M8235	OFF	ON
	C236	M8236		
	C237	M8237		
	C238	M8238		
	C239	M8239		
	C240	M8240		
	C241	M8241		
	C242	M8242		
	C243	M8243		
	C244	M8244		
	C245	M8245		

2. For monitoring of up-count/down-count counting direction of 1-phase 2-count input and 2-phase 2-count input counters

Counter type	Counter No.	Monitoring device	Up-counting	Down-counting	Counter type	Counter No.	Monitoring device	Up-counting	Down-counting
1-phase 2-count input	C246	M8246	OFF	ON	2-phase 2-count input	C251	M8251	OFF	ON
	C247	M8247				C252	M8252		
	C248	M8248				C253	M8253		
	C249	M8249				C254	M8254		
	C250	M8250				C255	M8255		

3. For switching high-speed counter function

Device No.	Name	Description	Reference
M8388	Contact for changing high-speed counter function	Contact for changing the high-speed counter function	—
M8389	Function switching devices	Switching of logic of external reset input	Subsection 11.11.2
M8390		Function switching device for C244	Subsection 11.11.3
M8391		Function switching device for C245	Subsection 11.11.3
M8392		Function switching device for C248 and 253	Subsection 11.11.3
M8198		Device for switching C251, C252 and C254 to single or 4 edge count	Subsection 11.11.4
M8199		Device for switching C253, C255 and C253 (OP) to single or 4 edge count	Subsection 11.11.4


4. Operation status of hardware counter/software counter

Device No.	Name	Description	ON	OFF
M8380*1	Operation status	Operation status of C235, C241, C244, C246, C247, C249, C251, C252 and C254	Software counter	Hardware counter
M8381*1		Operation status of C236		
M8382*1		Operation status of C237, C242 and C245		
M8383*1		Operation status of C238, C248, C248(OP), C250, C253 and C255		
M8384*1		Operation status of C239 and C243		
M8385*1		Operation status of C240		
M8386*1		Operation status of C244(OP)		
M8387*1		Operation status of C245(OP)		

*1. To be cleared when the device turns RUN from STOP.

11.11.2 [Function switching] switching of logic of external reset input signal

The external reset input for the counters C241 to C245, C247 to C250 and C252 to C255 resets the counters when it is turned ON. If the logic is inverted by the following program, the counters can be reset by turning OFF the input.




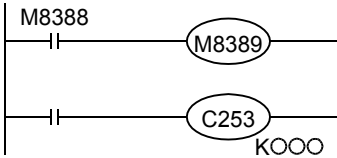
Counter No.	Inversion of logic of external reset input signal	Details of change
C241 to C245 C247 to C250 C252 to C255		The logic of external reset input is inverted to reset the counters when the input is turned OFF. (The logic for all applicable counter numbers is inverted.)

Cautions in inverting the logic of the external reset input signal

Although C253 is a hardware counter, it is switched to a software counter by inverting the logic of the external reset input signal.

11.11.3 [Function switching] switching of allocation and functions of input terminals

When the software counters C244, C245, C248 and C253 are combined with the following special auxiliary relays, the allocation of the input terminals and functions are changed. Program the special auxiliary relays just before the counters.

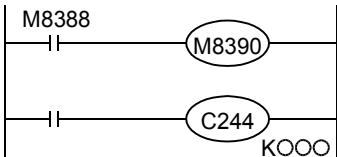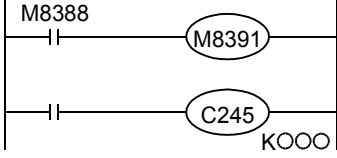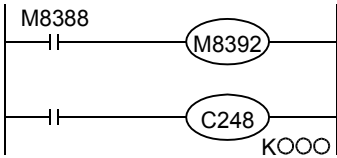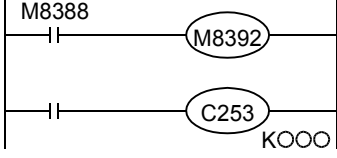Counter No.	When used as hardware counter	Details of change
C244(OP)		<ul style="list-style-type: none"> The count input terminal is changed from X000 to X006. Reset input is not given. Start input is not given. The counter functions as a hardware counter.
C245(OP)		<ul style="list-style-type: none"> The count input terminal is changed from X001 to X007. Reset input is not given. Start input is not given. The counter functions as a hardware counter.
C248(OP)		<ul style="list-style-type: none"> Reset input is not given. The counter functions as a hardware counter.
C253(OP)		<ul style="list-style-type: none"> Reset input is not given. The counter functions as a software counter.

11.11.4 [Function switching] procedures for using 2-phase 2-count input counters C251 to C255 in 4 edge count mode

The 2-phase 2-count input counters C251 to C255 are in the 1 edge count mode. The counters can be operated in the 4 edge count mode by programming as shown below.

Counter No.	To use 4 edge count 2-phase 2-input counter	Details of change
C251		<p>1 edge count (before change)</p> <p>Phase A </p> <p>Phase B </p> <p>Up-counting</p> <p>Phase A </p> <p>Phase B </p> <p>Down-counting</p> <p>↓</p> <p>4 edge count (after change)</p> <p>Phase A </p> <p>Phase B </p> <p>Up-counting</p> <p>Phase A </p> <p>Phase B </p> <p>Down-counting</p>
C252		
C253		
C253(OP)		
C254		
C255		

12. External Wiring Procedures

DESIGN PRECAUTIONS



- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

This chapter explains the procedures for wiring the output terminals.



- Wiring procedures
- Procedures for cabling according to shape of output terminal
- Output wiring procedures

12.1 Sink and Source Output (Transistor)

FX2N Series input/output powered extension units/blocks of transistor sink and source output types are available.

1. Differences in circuit

- Sink output [-common]
Output to make load current flow into the output (Y) terminal is called sink output.
- Source output [+common]
Output to make load current flow out of the output (Y) terminal is called source output.

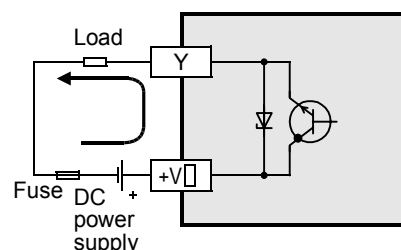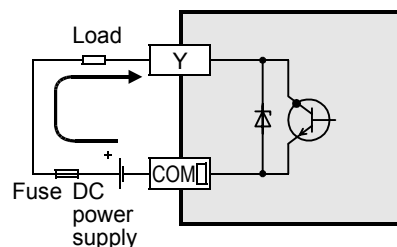

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20


Memory
Cassette

12.2 External Wiring for Relay Output

This section explains the relay output specifications (main unit) and external wiring.

- For the main unit, refer to Subsection 12.2.1 "Specifications," Subsection 12.2.3 "Handling of relay output," Subsection 12.2.4 "Cautions in external wiring" and Subsection 12.2.5 "Examples of wiring" in this section.
- For the input/output powered extension units/blocks, refer to Subsection 12.2.3 "Handling of relay output" and Subsection 12.2.4 "Cautions in external wiring" in this section. For their specifications and examples of wiring, refer to the specification for each model.
 - For the specifications on the input/output powered extension unit, refer to Chapter 15.
 - For the specifications on the input/output extension block, refer to Chapter 16.

12.2.1 Output specifications (main unit)

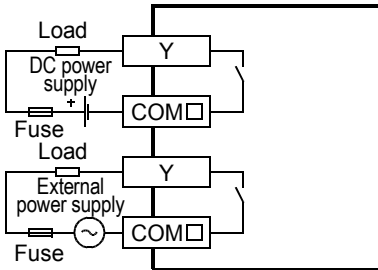Item		Relay output specifications				
		FX3U-16MR/ES	FX3U-32MR/ES	FX3U-48MR/ES	FX3U-64MR/ES	FX3U-80MR/ES
Number of output points		8 points	16 points	24 points	32 points	40 points
Output connecting type		Fixed terminal block (M3 screw)	Removable terminal block (M3 screw)			
Output form		Relay				
External power supply		30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)				
Max. load	Resistance load	2 A/point The total load current of resistance loads per common terminal should be the following value. → For details on the common terminal for each model, refer to the terminal block layout. • 1 output point/common terminal: 2 A or less • 4 output points/common terminal: 8 A or less • 8 output points/common terminal: 8 A or less				
	Inductive load	80 VA → For the approximate life, refer to Subsection 12.2.2. → For cautions on external wiring, refer to Subsection 12.2.4.				
Min. load		5V DC, 2mA (reference value)				
Open circuit leakage current		—				
Response time	OFF→ON	Approx. 10ms				
	ON→OFF	Approx. 10ms				
Circuit insulation		Mechanical insulation				
Display of output operation		LED on panel lights when power is applied to relay coil.				
Output circuit configuration		<div></div> <p>A number (1 or more) is entered in □ of [COM□].</p>				

Number of output points per common terminal

- On FX3U-16M□, one common terminal is used for one output point.
- On models other than FX3U-16M□, one common terminal is used for four or eight output points.

12.2.2 Contact life of relay output contact

The standard life of the contact used for conductive AC loads, such as contactors and solenoid valves, is 500,000 times at 20 VA.

The following table shows the approximate life of the relay based on the results of our life test.

Test condition: On for 1 sec and off for 1 sec


Load capacity		Contact life	Example of applicable loads (Magnetic switch manufactured by our company)
20VA	0.2A/100V AC	3,000,000 times	S-K10 to S-K95
	0.1A/200V AC		
35VA	0.35A/100V AC	1,000,000 times	S-K100 to S-K150
	0.17A/200V AC		
80VA	0.8A/100V AC	200,000 times	S-K180,S-K400
	0.4A/200V AC		

If rush overcurrent is shut off even under the above conditions, the life of the relay contact is considerably decreased.

12.2.3 Handling of relay output

1. Output terminal

One common terminal is used for 1, 4 or 8 relay output points. The common terminal blocks can drive loads of different circuit voltage systems (for example, 200V AC, 100V AC and 24V DC).

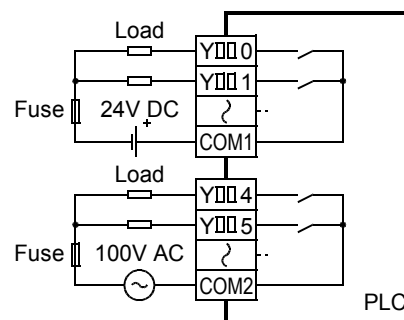

2. External power supply

Use an external power supply of 30V DC or less or 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards) for loads.

3. Circuit insulation

The PLC internal circuit and external load circuits are electrically insulated between the output relay coil and contact. The common terminal blocks are separated from one another.

4. Display of operation

When power is applied to the output relay coil, the LED is lit, and the output contact is turned on.

5. Response time

The response time of the output relay from when the power is applied to the coil until the output contact is turned on and from when the coil is shut off until the output contact is turned off is approx. 10ms.

6. Output current

At a circuit voltage of 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards), a resistance load of 2A per point or an inductive load of 80VA or less (100V AC or 200V AC) can be driven.

→ **For the life of the contact for switching an inductive load, refer to Subsection 12.2.2.**

When an inductive load is switched, connect a diode (for commutation) or a surge absorber in parallel with this load.

DC circuit	Diode (for commutation)
AC circuit	Surge absorber


7. Open circuit leakage current

When the output contact is turned off, no current leaks.

12.2.4 Cautions on external wiring

1. Protection circuit for load short-circuiting

A short-circuit at a load connected to an output terminal could cause burnout at the PCB. To prevent this, a protection fuse should be inserted at the output.

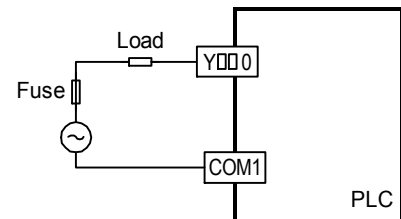

2. Contact protection circuit for inductive loads

The relay output circuit in the terminal block is not equipped with a protection circuit.


Therefore, when an inductive load is connected. For the expected product life and noise reduction, it is recommended to insert a contact protection circuit.

1) DC circuit

Connect a diode in parallel with the load.

The diode (for commutation) must comply with the following specifications.


Item	Guide
Reverse voltage	5 to 10 times the load voltage
Forward current	Load current or more

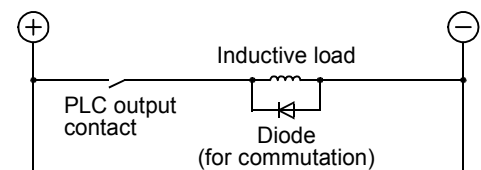

2) AC circuit

Connect the surge absorber shown below (combined CR components such as a surge killer and spark killer, etc.), parallel to the load.

Item	Guide
Rated voltage	240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)
Electrostatic capacity	Approx. 0.1μF
Resistance value	Approx. 100 to 120Ω

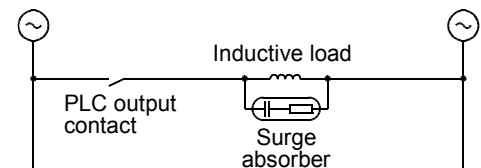


Reference

Manufacturer	Model name
Marcon Electronics Co., Ltd.	RFD2E104K
Okay Electric Industries Co., Ltd.	CR-10201

Manufacturer	Model name
Rubycon Corporation	250MCRA104100M B0325


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

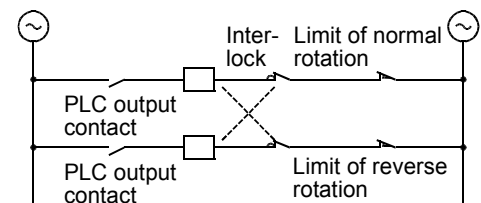


4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

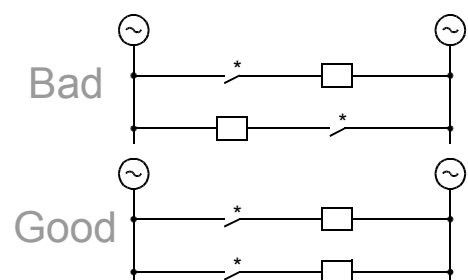

12.2.5 Example of external wiring

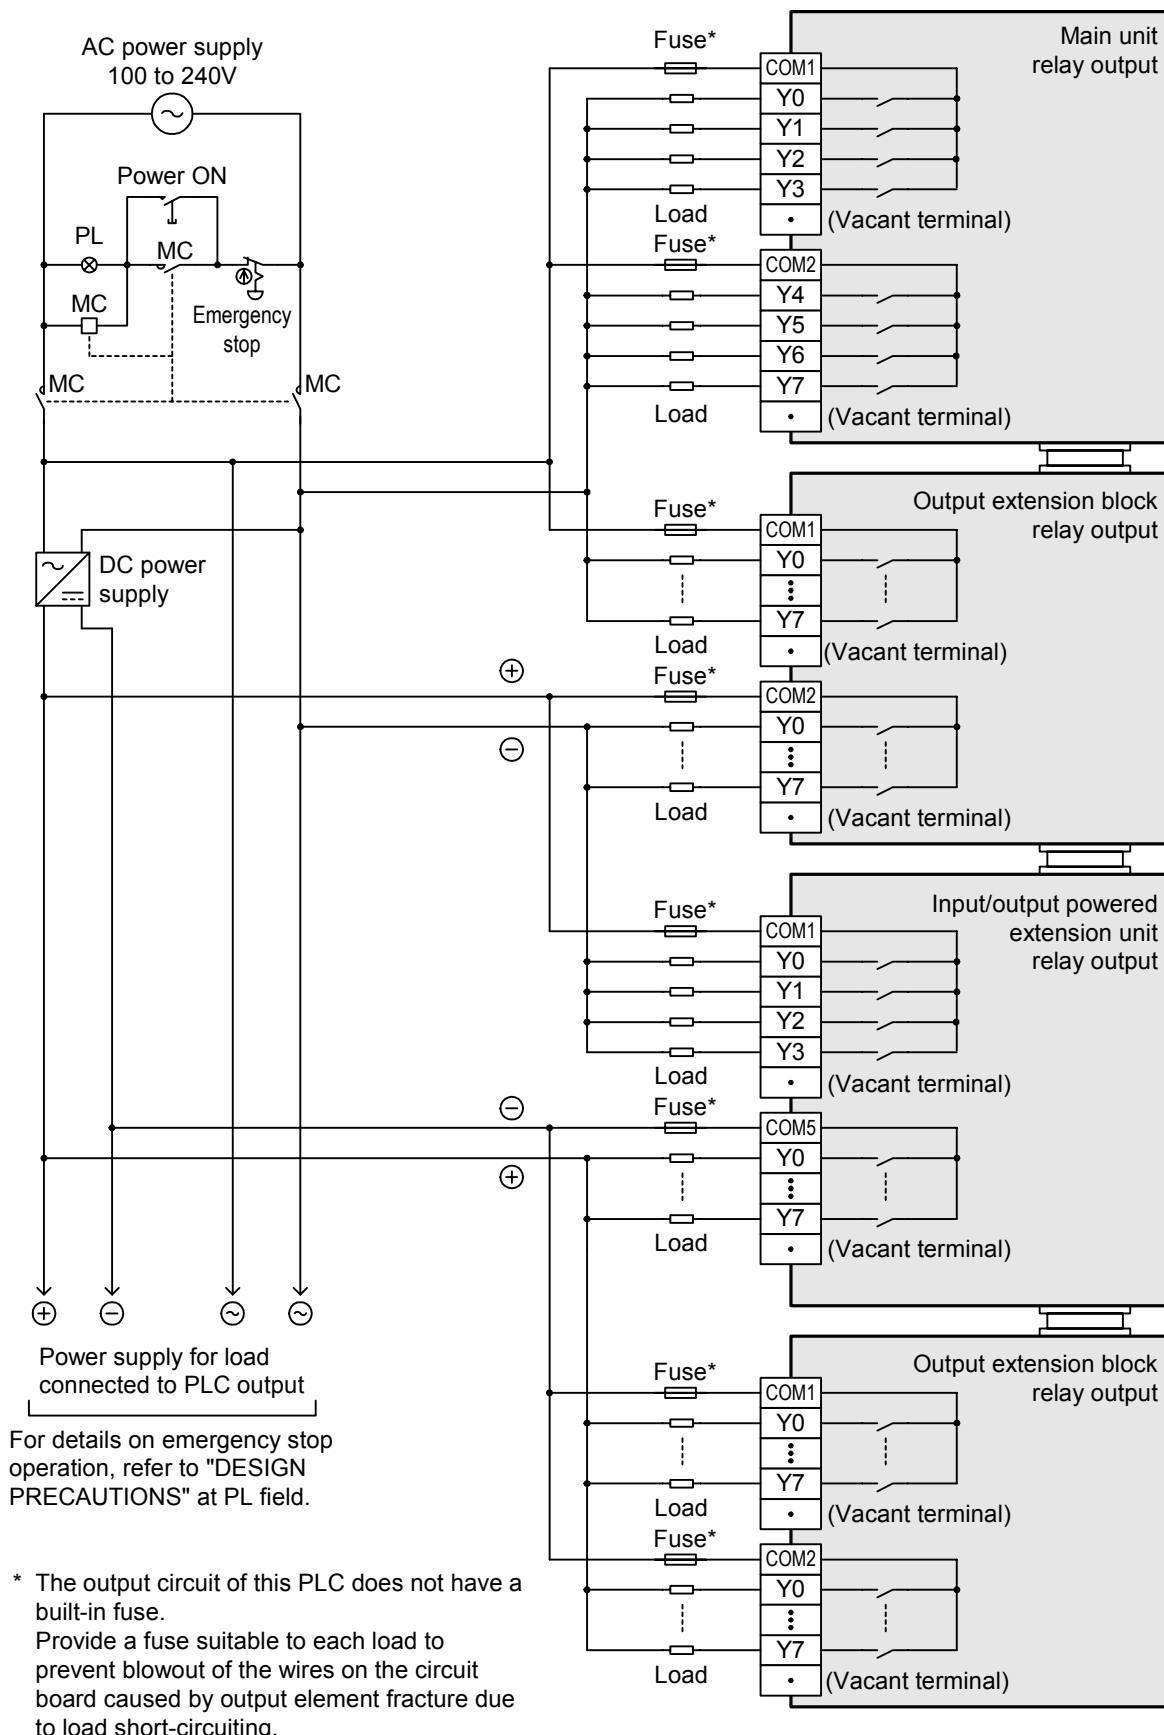

Cautions in wiring

Do not wire the vacant terminals externally. Doing so may damage the product.

12.3 External Wiring of Transistor Output (Sink/Source) Type

This section explains the handling and external wiring of transistor output.

- There are not transistor output type of main units.
Select from the input/output powered extension units/blocks.
- For the input/output powered extension units/blocks, refer to Subsection 12.3.1 "Handling of Transistor Output" and Subsection 12.3.2 "Cautions on External Wiring" in this section. For the specifications and examples of wiring, refer to the specifications for each model.
→ **For the specifications on the input/output powered extension units, refer to Chapter 15.**
→ **For the specifications on the input/output extension blocks, refer to Chapter 16.**

12.3.1 Handling of transistor output

1. Output terminals


4 or 8 transistor output points are covered by one common terminal.

Sink output

Load current flows into the output (Y) terminals.

Connect each COM□ (number) terminal to the minus side of the load power supply.

The COM□ terminals are not connected internally.

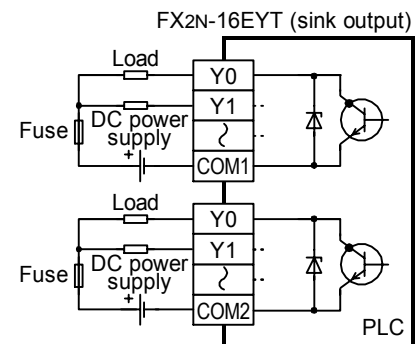


Source output

Load current flows out of the output (Y) terminals.

Connect each +V□ (number) terminal to the plus side of the load power supply.

The +V□ terminals are not connected internally.

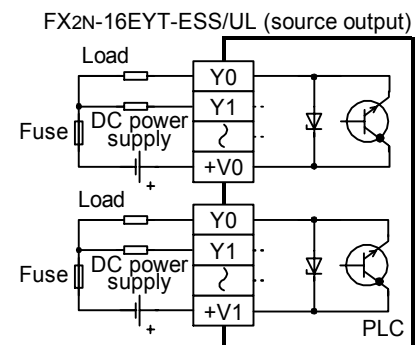

2. External power supply

For driving the load, use a smoothing power supply of 5 to 30V DC that can output current two or more times the rated current of the fuse connected to the load circuit.

3. Insulation of circuit

The internal circuit of the PLC and the output transistor are insulated with a photocoupler.

The common blocks are separated from one another.

4. Display of operation

The input/output powered extension units and output extension blocks have LEDs for displaying the operation condition. When any photocoupler operates, the corresponding LED is lit.


If the display module (optional) is mounted on the main unit, the condition can be monitored on the screen.

5. Response time

The time from when the PLC drives (or shuts down) the photocoupler until the transistor is turned on (or off) is shown in the following table.

Classification	Response time	Load current
Input/output powered extension unit Output extension block	0.2ms or less	24V DC 100mA ^{*1}

*1. The transistor OFF time is longer under lighter loads. For example, under a load of 24V DC 40mA, the response time is approx. 0.3ms. When response performance is required under light loads, provide a dummy resistance as shown to the right to increase the load current.

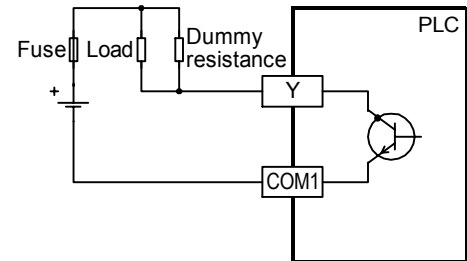

6. Output current

The maximum resistance loads for the input/output powered extension units and output extension blocks are shown in the following table.

The ON voltage of the output transistor is approx. 1.5V.

When driving a semiconductor element, carefully check the input voltage characteristics of the applied element.

Model	Output current	Limitation
Input/output powered extension units	0.5A/point	The total load current of resistance loads per common terminal should be the following value. 4 points/common: 0.8A or less 8 points/common: 1.6A or less For FX _{2N} -16EYT-C: 16 points/common: 1.6A or less
FX _{2N} -32ET-ESS/UL		
FX _{2N} -48ET-ESS/UL		
FX _{2N} -32ET		
FX _{2N} -48ET		
Extension blocks	0.3A/point	
FX _{2N} -16EYT-ESS/UL		
FX _{2N} -16EYT		
FX _{2N} -16EYT-C		

7. Open circuit leakage current


0.1mA or less

12.3.2 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

Use a load power supply capacity that is at least 2 times larger than the total rated fuse capacity.

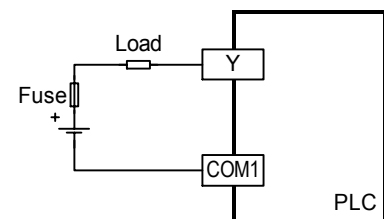

2. Interlock


For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs, as shown to the right.

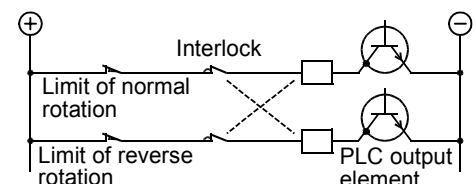

3. Contact protection circuit for inductive loads


When an inductive load is connected, connect a diode (for commutation) in parallel with the load as necessary. The diode (for commutation) must comply with the following specifications.

Item	Guide
Reverse voltage	5 to 10 times of the load voltage
Forward current	Load current or more

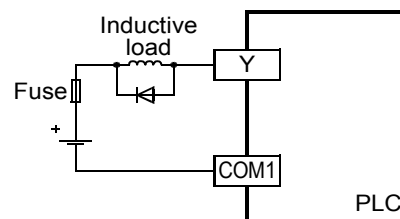

12.3.3 Example of external wiring

1. Transistor output (sink)

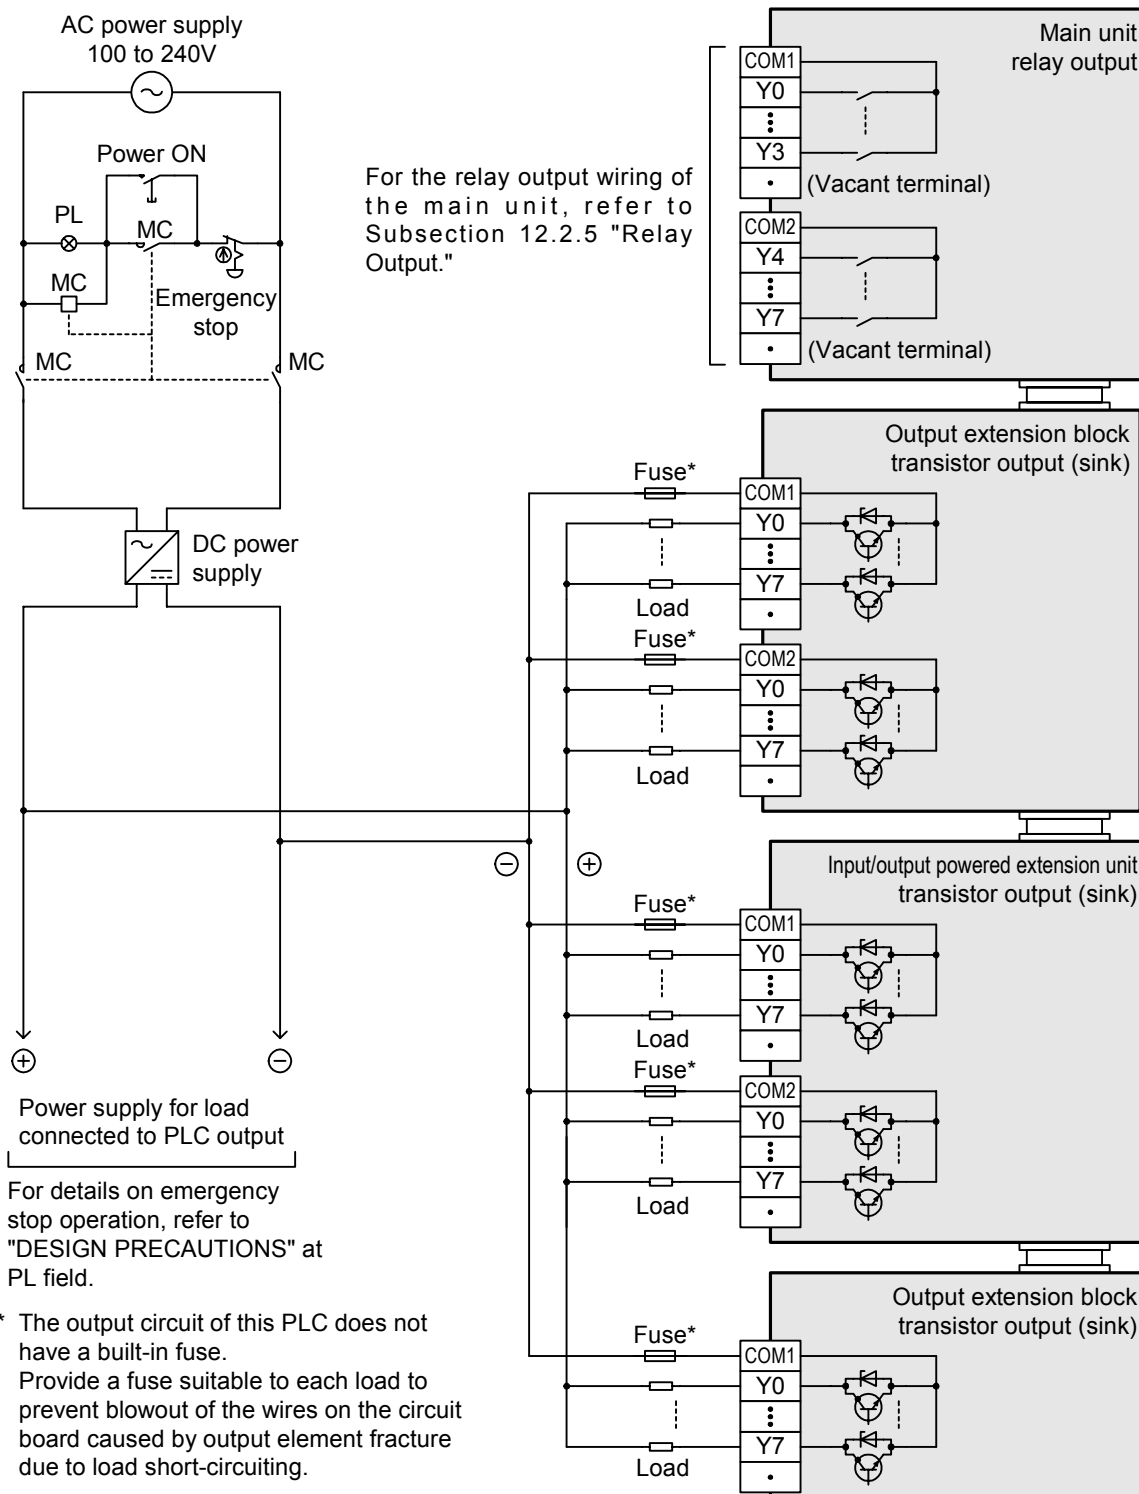


WIRING PRECAUTIONS



- Do not wire vacant terminals externally. Doing so may damage the product.

2. Transistor output (source)

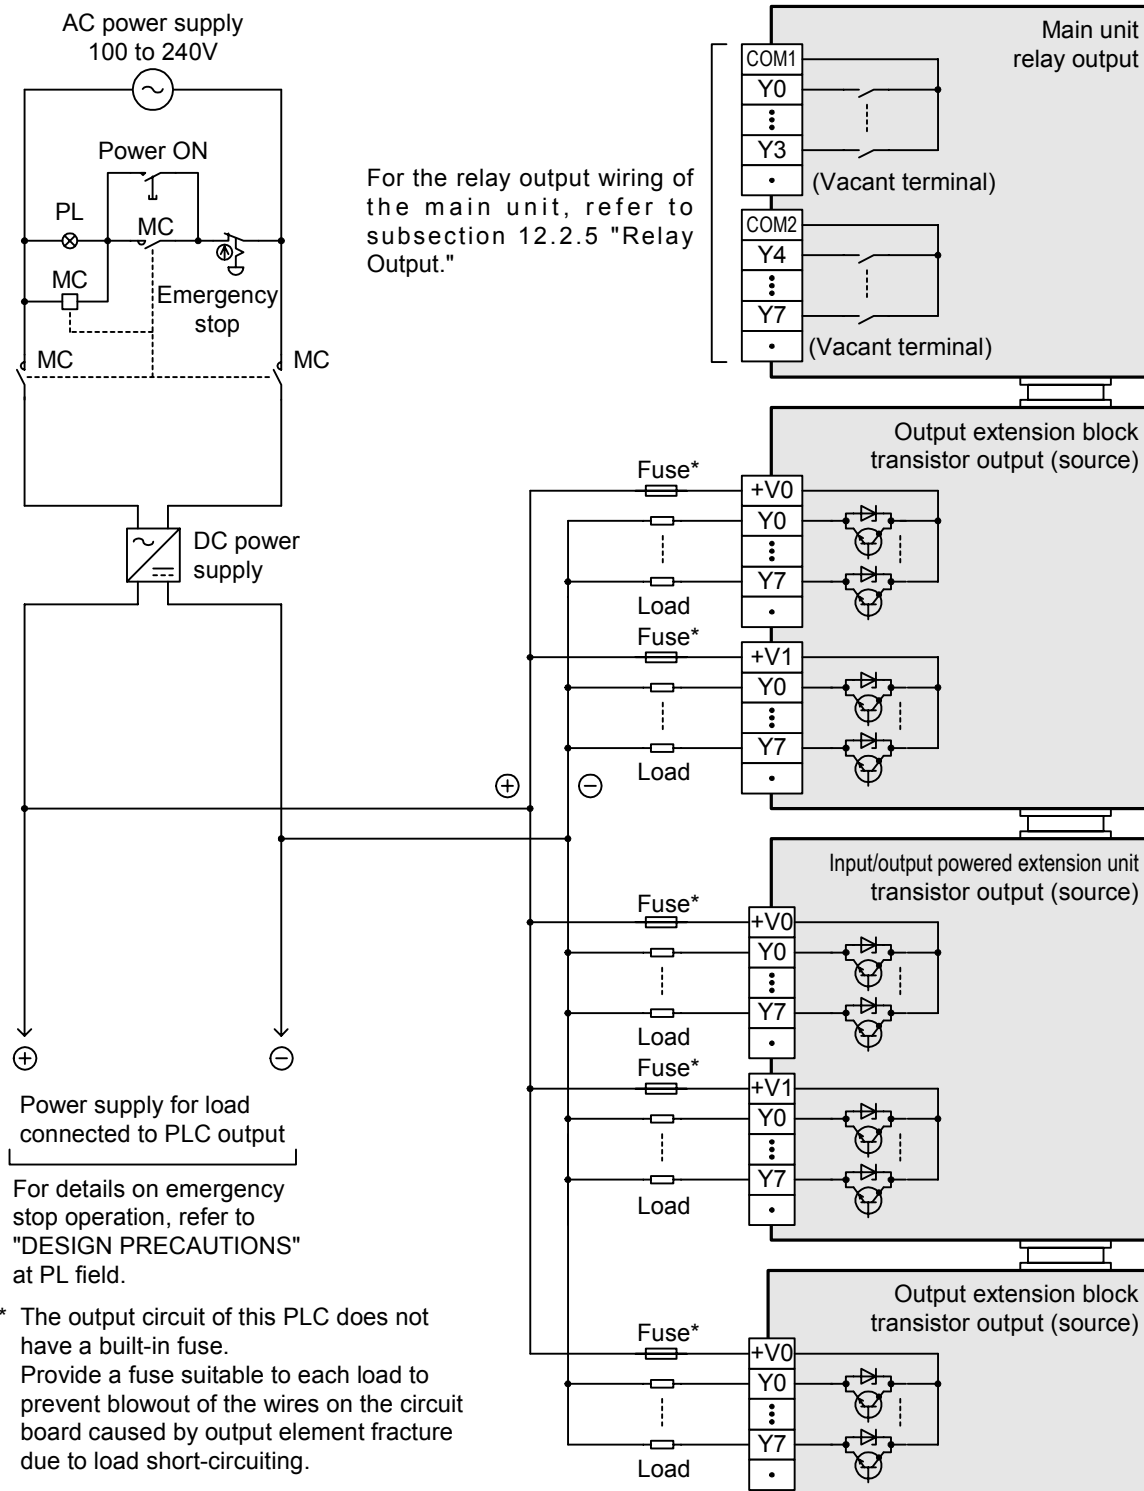

WIRING PRECAUTIONS



- Do not wire vacant terminals externally. Doing so may damage the product.

12.4 External Wiring for Triac (SSR) Output Type

This section explains the procedures for handling triac output and external wiring.


- There are not triac output type of main units.
Select from the input/output powered extension units/blocks.
- For the input/output powered extension units/blocks, refer to Subsection 12.4.1 "Handling of Triac Output" and Subsection 12.4.2 "Cautions in External Wiring." For the specifications and wiring examples, refer to the specifications for each model.
→ For specifications on the input/output powered extension units, refer to Chapter 15.
→ For specifications on the input/output extension blocks, refer to Chapter 16.

12.4.1 Handling of triac output

1. Output terminals

On the triac output type units/blocks, one common terminal is used for 4 or 8 points.

Therefore, the common terminal blocks can drive loads of different circuit voltage systems (for example, 100V AC and 200V AC).

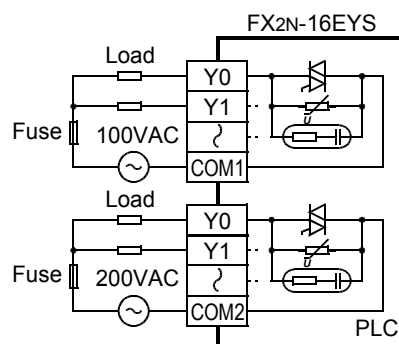

2. Circuit insulation

The PLC internal circuit and the output element (triac) are insulated with a photo-thyristor. The common terminal blocks are separate from one another.

3. Display of operation

When the photo-thyristor is driven, the LED is lit, and the output triac is turned on.

4. Response time

The time from when the photo-thyristor is driven or shut down until the output triac is turned on and until it is turned off is 1ms or less and 10ms or less, respectively.


5. Output current

The max current per output point is 0.3A. However, to restrict temperature rise, the max current per one output from four points should be 0.8A (average per point is 0.2A).

When a load with high rush current is turned on and off frequently, the root-mean-square current should be 0.2A or less.

<Example>

$$\sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}} = 0.2A$$

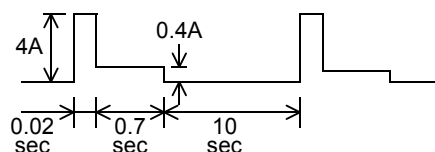

6. Open circuit leakage current

A C-R absorber is connected for turn-off in parallel with the triac output terminal of this type of PLC. Therefore, when the circuit opens, a leakage current will be 1mA at 100V AC and 2mA at 200V AC.


Since the triac output type devices leak current when the circuits are open, small-size relays and micro current loads having low rated operating current may keep operating even when the triac output is turned off. Therefore, use a load of 0.4VA or more at 100V AC or 1.6VA or more at 200V AC. If the load is less than this value, connect a surge absorber as stated below in parallel with the load.

→ For the connection of the surge absorber, refer to Subsection 12.4.2 "Cautions in External Wiring."

12.4.2 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

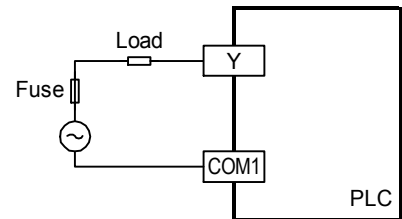

2. Micro current load

The PLC's internal Triac output circuit is equipped with a turn-off C-R absorber. When a micro current load is connected, be sure to connect a surge absorber parallel to the load.

In this manual, the term "micro current load" refers to a load of 0.4VA/100V AC or less, and 1.6VA/200V AC or less.

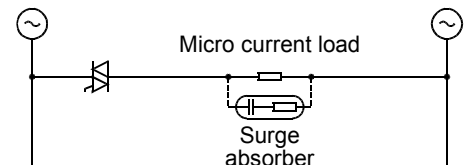

Item	Standard
Rated voltage	250V AC
Static electricity capacity	Approx. 0.1μF
Resistance value	Approx. 100 to 120Ω


Reference

Manufacturer	Model name
Marcon Electronics Co., Ltd.	RFD2E104K
Okaya Electric Industries Co., Ltd.	CR-10201

Manufacturer	Model name
Rubycon Corporation	250MCRA104100M B0325


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

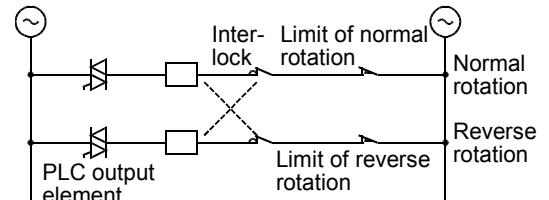


4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

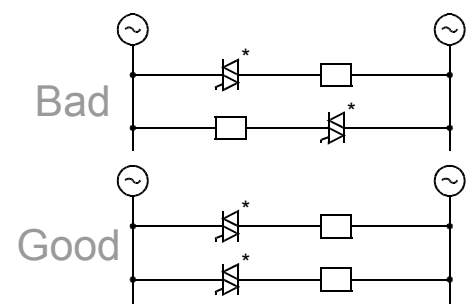

12.4.3 Example of external wiring

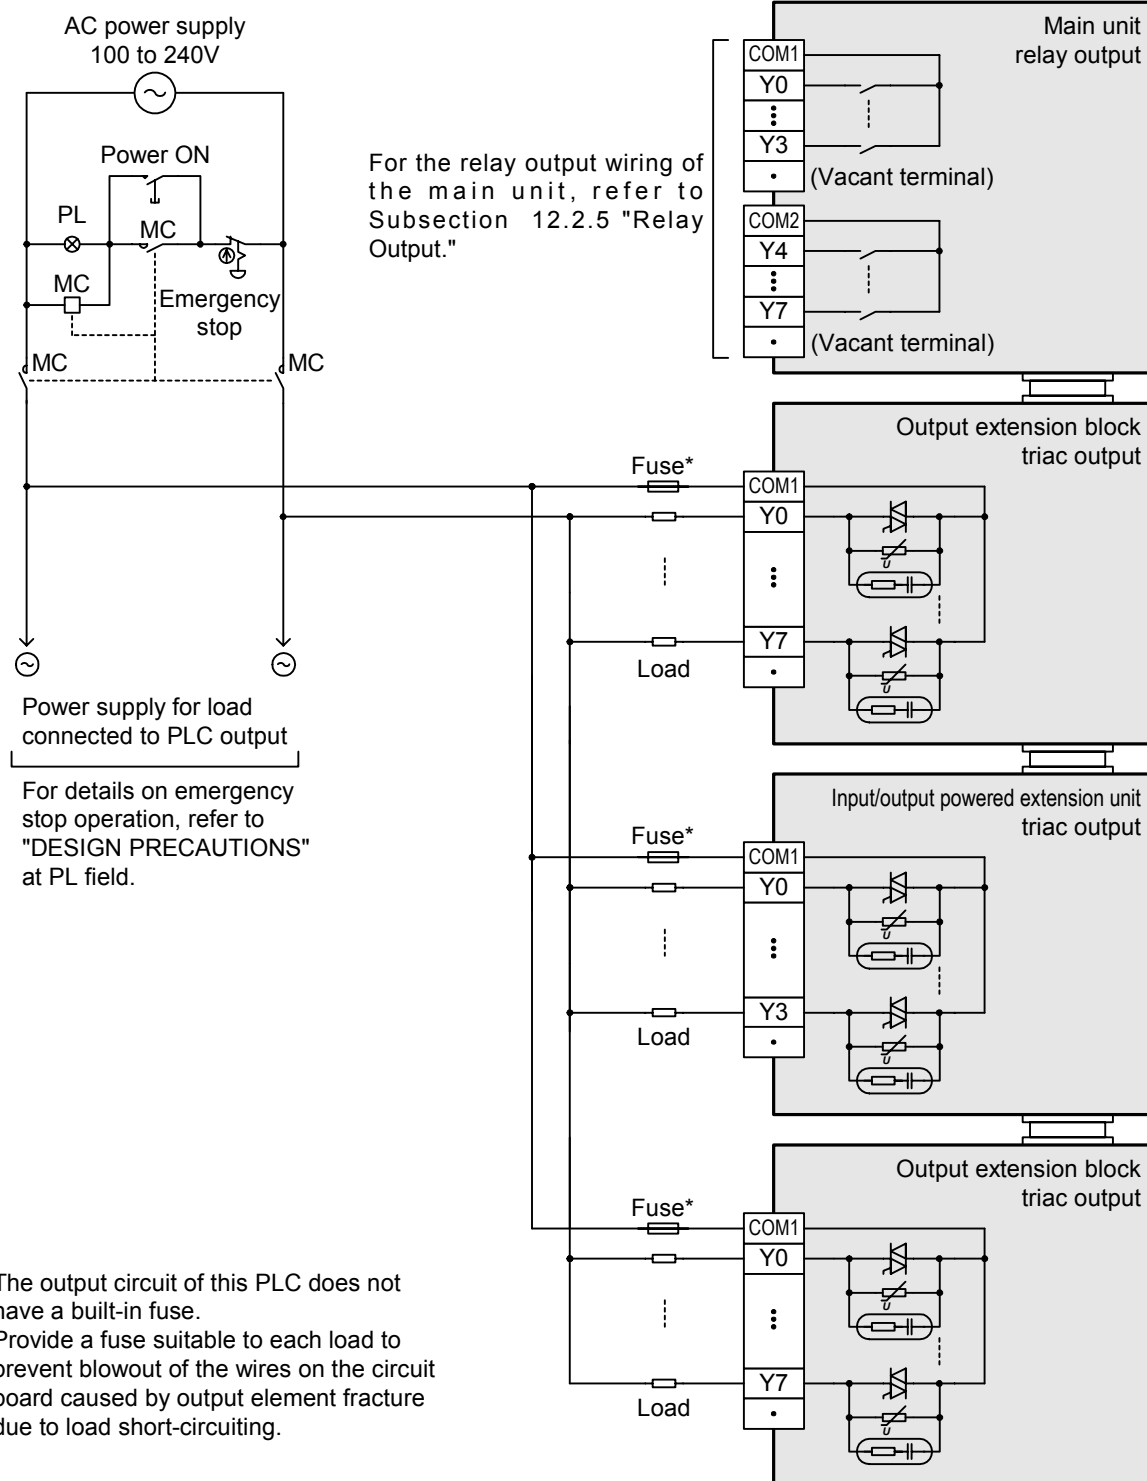

WIRING PRECAUTIONS



- Do not wire vacant terminals externally. Doing so may damage the product.

13. Examples of Wiring for Various Uses

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

WIRING PRECAUTIONS



DANGER

- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.
- Observe the following items to wire the lines to the European terminal board. Ignorance of the following items may cause electric shock, short circuit, disconnection, or damage of the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.22 to 0.25 N•m.
 - Twist the end of strand wire and make sure there is no loose wires.
 - Do not solder-plate the electric wire ends.
 - Do not connect electric wires of unspecified size or beyond the specified number of electric wires.
 - Fix the electric wires so that the terminal block and connected parts of electric wires are not directly stressed.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

13.1 Notes about Examples of Wiring

The examples of wiring are given under the following conditions.

- The input/output numbers are the actual numbers on the program. (They may differ from the numbers shown on the product terminals.)
- Some examples show wiring to be used for transistor output. They are examples of wiring for the transistor output types of input/output powered extension units/blocks.
- Product input/output specifications
Check the product input/output specifications when using any example of wiring.
 - Products only for sink input and products both for sink input and for source input are available.
 - Products for sink output and products for source output are available.
- The examples of programming (applied instructions) are given based on the allocation of the input/output numbers for wiring.

→ For the applied instructions, refer to the Programming Manual.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette


13.2 Digital Switch [DSW Instructions (FNC72)/BIN Instructions (FNC19)]

13.2.1 When DSW instructions are used

Examples of wiring for capturing values from a 4-digit digital switch to the data register D100 are given below.

1. Main unit + input/output powered extension unit/block


Example of program



Examples of wiring

In the case of sink wiring

When the main unit and a transistor output (sink) type input/output powered extension unit/block are used

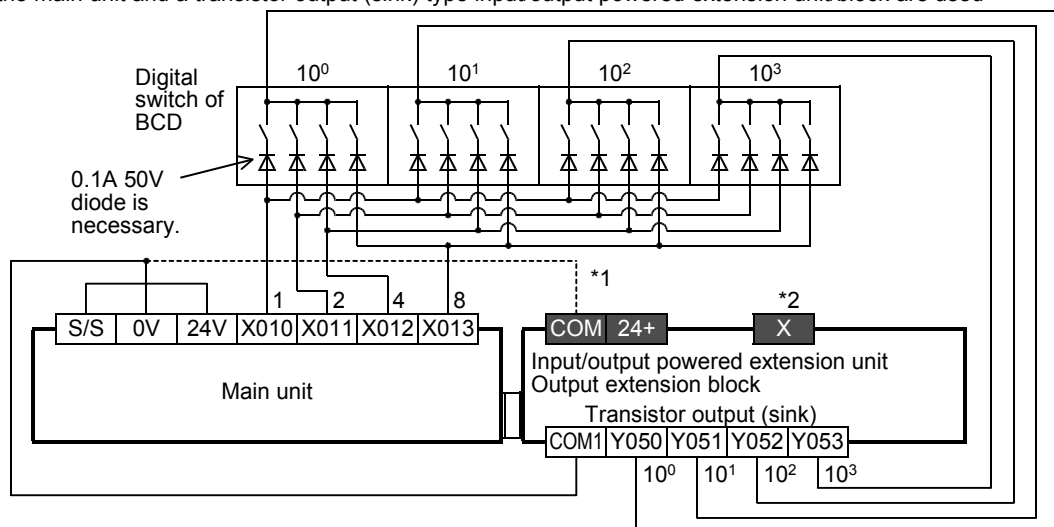


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX_{2N}-32ET). Output extension blocks do not have the terminals.

In the case of source wiring

When the main unit and a transistor output (source) type input/output powered extension unit/block are used

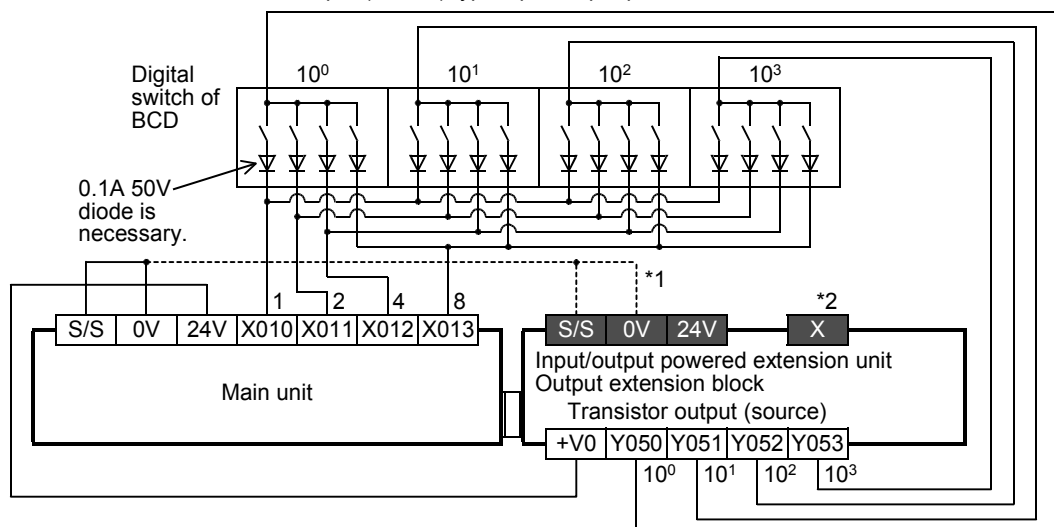


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX_{2N}-32ET-ESS/UL). Output extension blocks do not have the terminals.

2. Input/output powered extension unit


Example of program



Examples of wiring


In the case of sink wiring

When an input/output powered extension unit/block with transistor-output (sink) is used with main unit.

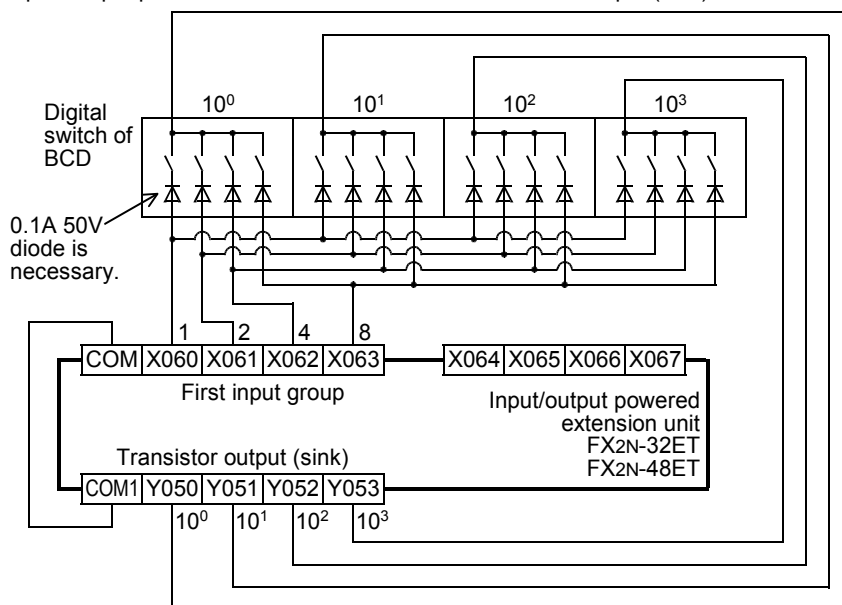

In the case of source wiring


When an input/output powered extension unit/block with transistor-output (source) is used with main unit.

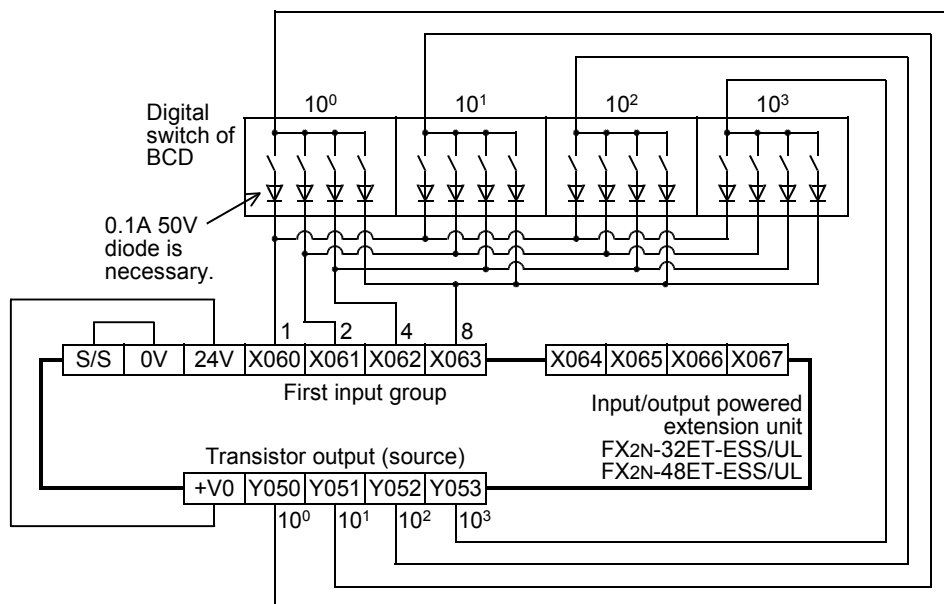

13.2.2 When BIN instructions are used

Examples of wiring for capturing values from a 2-digit digital switch to the data register D102 are given below.


Example of program




Examples of wiring

In the case of sink wiring

When a sink and source input type unit is used

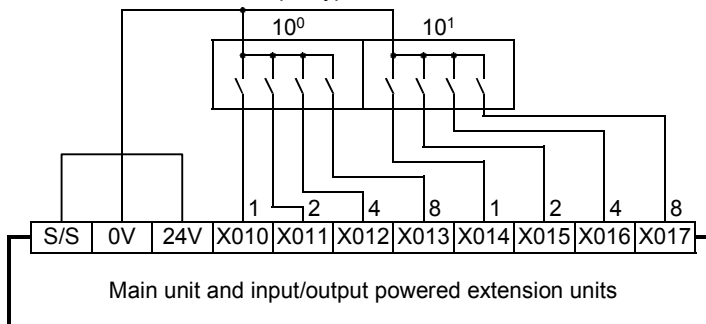


When a sink input type unit is used

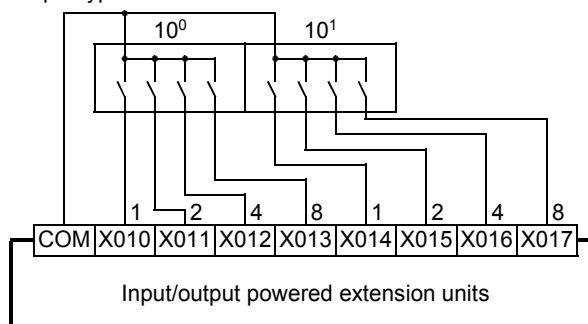

In the case of source wiring


When a sink and source input type unit is used

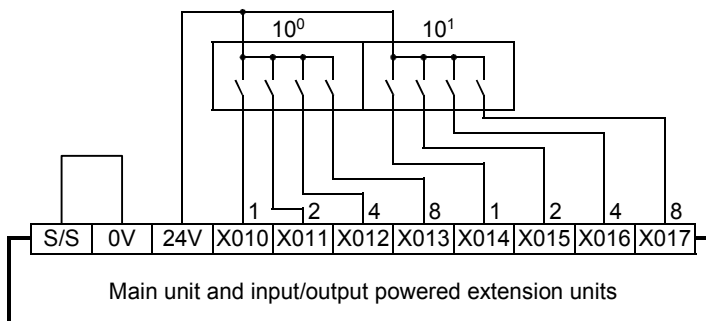

13.3 10-key Input [TKY Instructions (FNC70)]



This section gives examples of wiring for capturing values from ten-key pad to D100 using TKY instructions.

Example of program




Examples of wiring

In the case of sink wiring

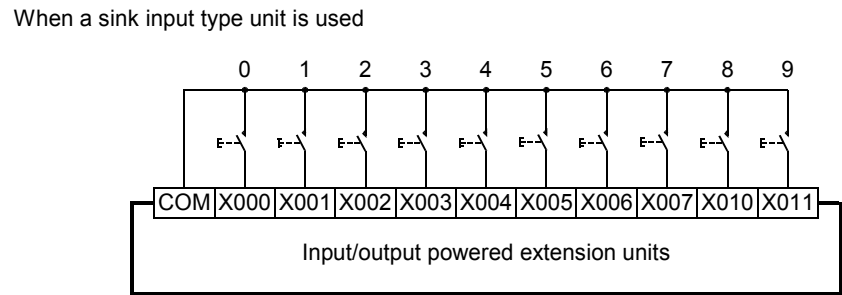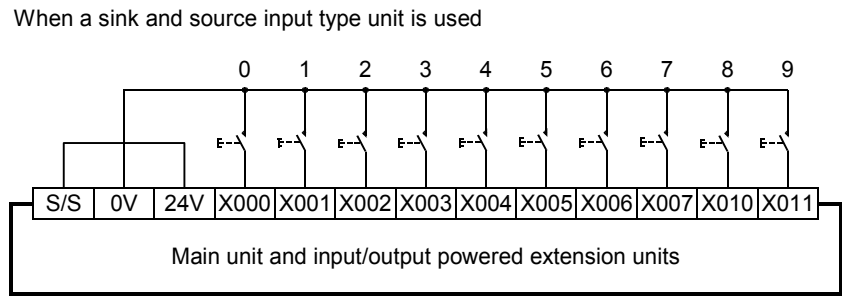

In the case of source wiring

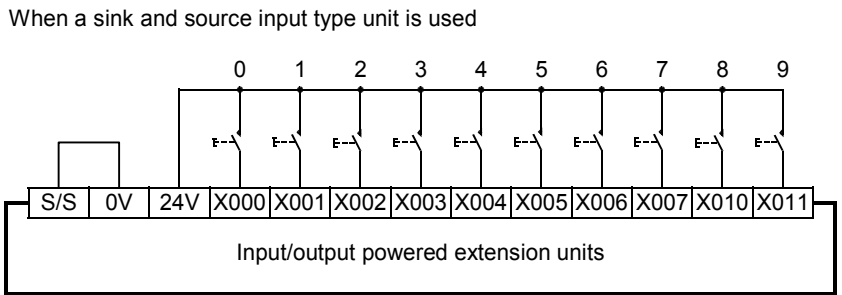


11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

13.4 16-key Input [HKY Instructions (FNC71)]

This section gives examples of wiring for capturing values (0 to 9) and function keys (A to F) from 16 switches (16 keys) to D100 and M0 to M5 using HKY instructions. (Hexadecimal values can be captured.)

1. Main unit + input/output powered extension unit/block


Example of program



Examples of wiring

In the case of sink wiring

When the main unit and a transistor output (sink) type input/output powered extension unit/block are used

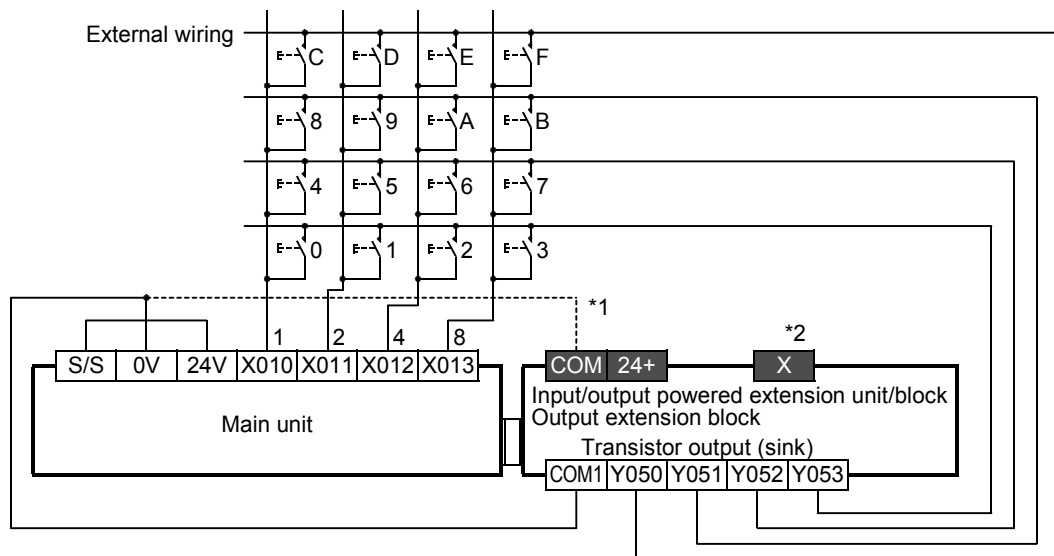


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX2N-32ET). Output extension blocks do not have the terminals.

In the case of source wiring

When the main unit and a transistor output (source) type input/output powered extension unit/block are used

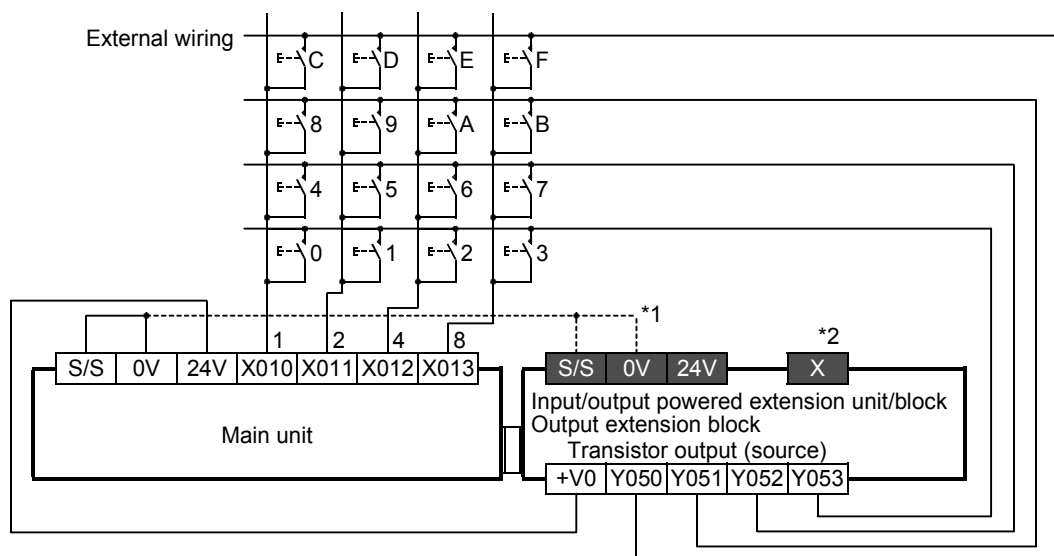


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX2N-32ET-ESS/UL). Output extension blocks do not have the terminals.

2. Input/output powered extension unit


Example of program



Examples of wiring


In the case of sink wiring

When a sink input type unit is used

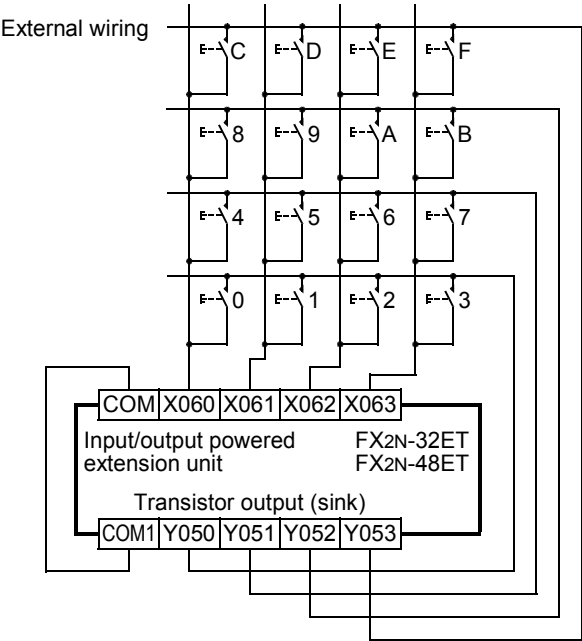

In the case of source wiring

When a source input type unit is used

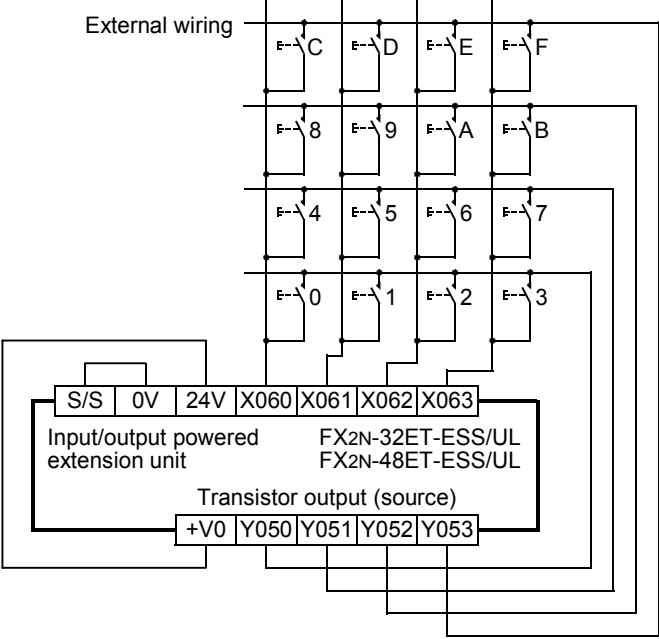


11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

13.5 Matrix Input [MTR Instructions (FNC52)]

This section gives examples of wiring for capturing the ON/OFF status of 24 switches to M30 to M37, M40 to M47 and M50 to M57 using MTR instructions.

1. Main unit + input/output powered extension unit/block


Example of program



Examples of wiring

In the case of sink wiring

When the main unit and a transistor output (sink) type input/output powered extension unit/block are used

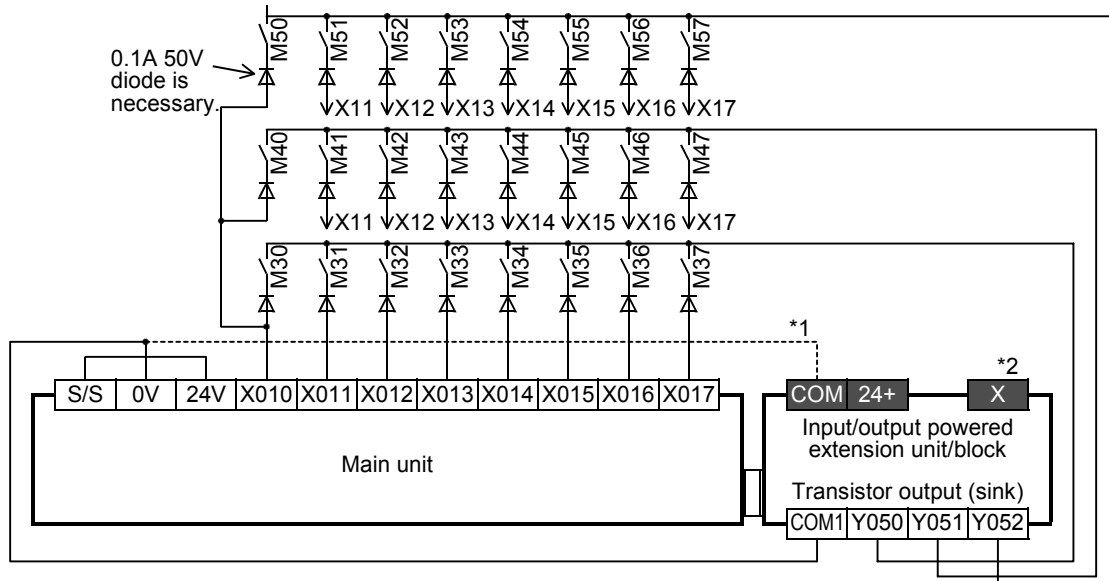


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX2N-32ET). Output extension blocks do not have the terminals.

In the case of source wiring

When the main unit and a transistor output (source) type input/output powered extension unit/block are used

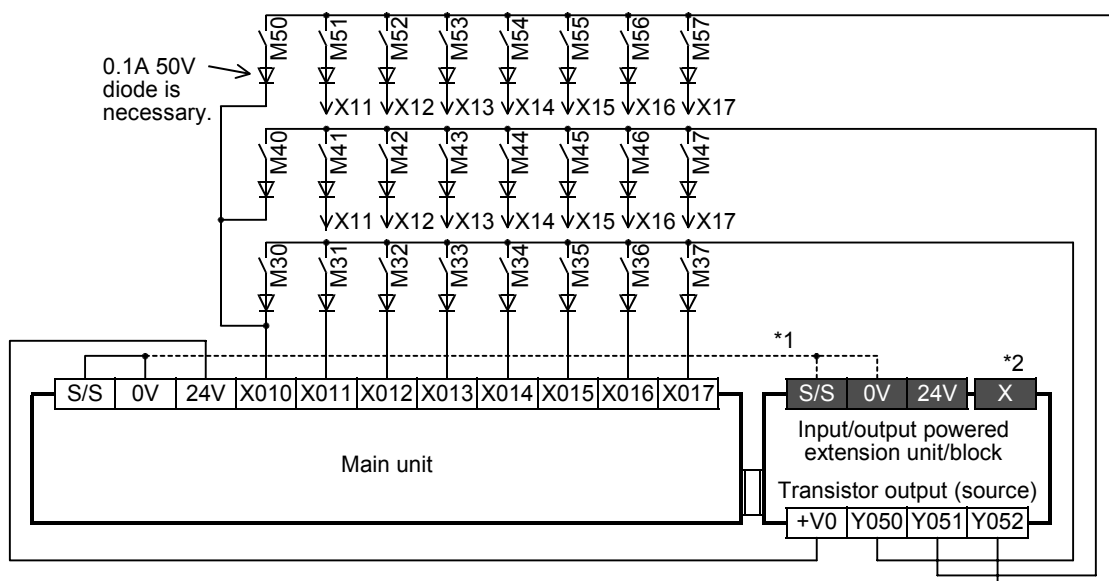


*1 To use the input terminal (X) of the input/output extension unit, wire the terminal as shown by the dotted line.

*2 The terminals in the shaded areas are provided on input/output extension units (ex.: FX2N-32ET-ESS/UL). Output extension blocks do not have the terminals.

2. Input/output powered extension unit


Example of program



Examples of wiring


In the case of sink wiring

When a sink input type unit is used

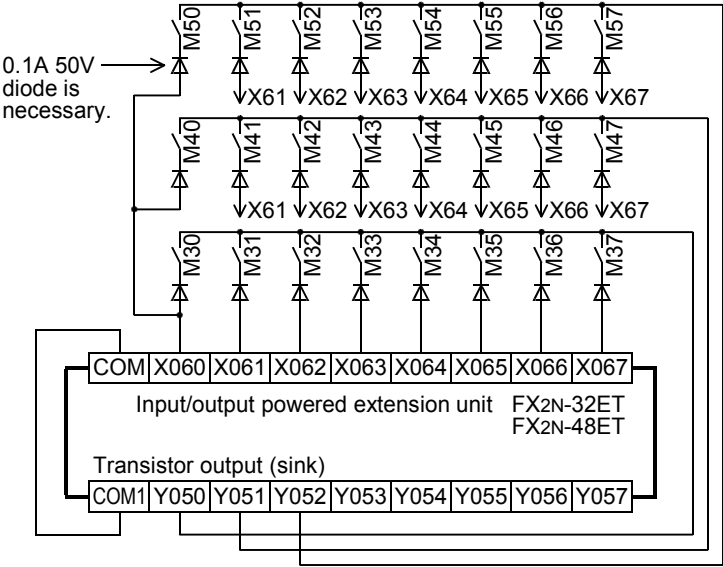

In the case of source wiring

When a source input type unit is used

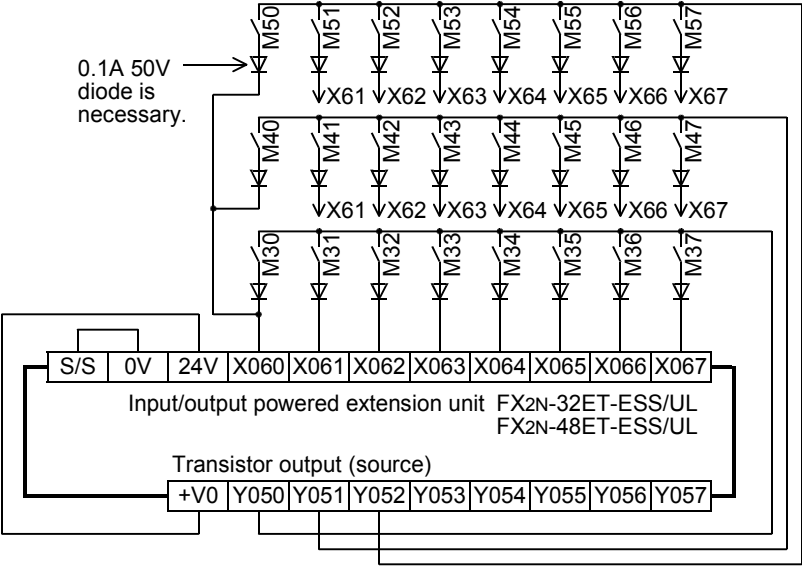

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette


13.6 7-segment Display [SEGL Instructions (FNC74)/BCD Instructions (FNC18)]

13.6.1 When SEGL instructions are used

This subsection gives examples of wiring for displaying the current value of D100 on the 4-digit 7-segment display.


1. Input/output powered extension unit/block

Example of program




Examples of wiring

In the case of sink wiring

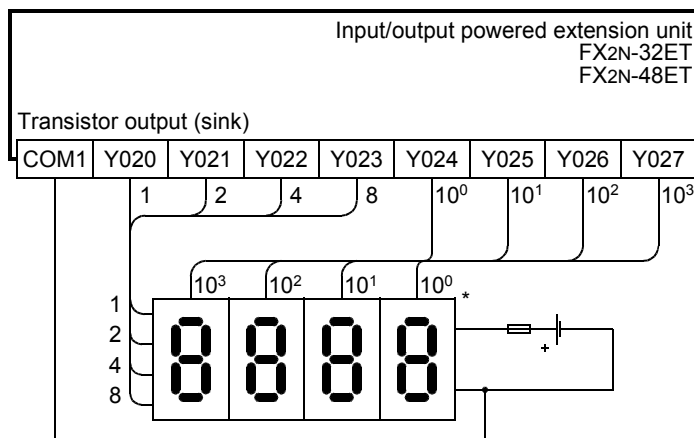


* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for sink wiring
(in the case of transistor output)

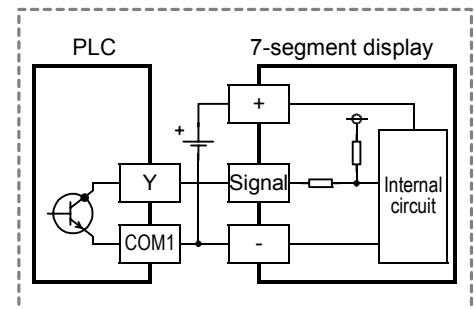


In the case of source wiring

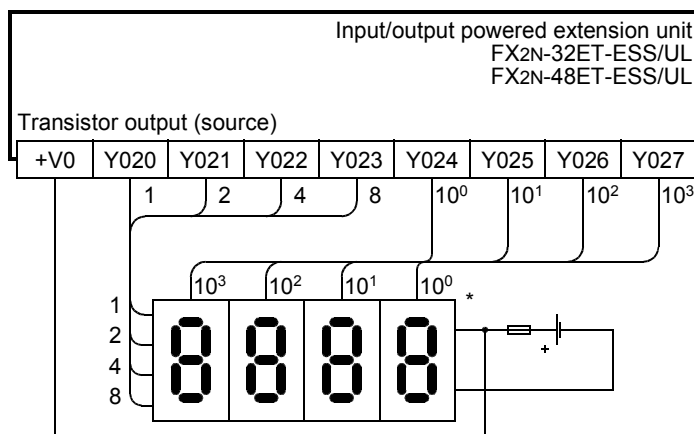

* Use a 7-segment display with a latch and a built-in BCD decoder.

7-segment display to be used for source wiring
(in the case of transistor output)

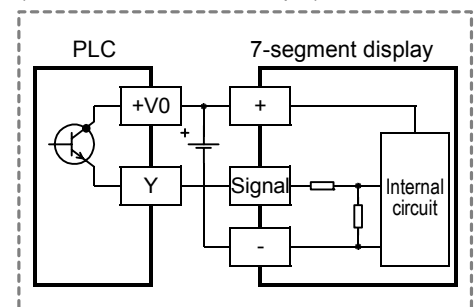


13.6.2 When BCD instructions are used

This subsection gives examples of wiring for displaying the current value of D100 on the 2-digit 7-segment display.


1. Main unit and input/output powered extension units

Example of program




Examples of wiring


In the case of sink wiring

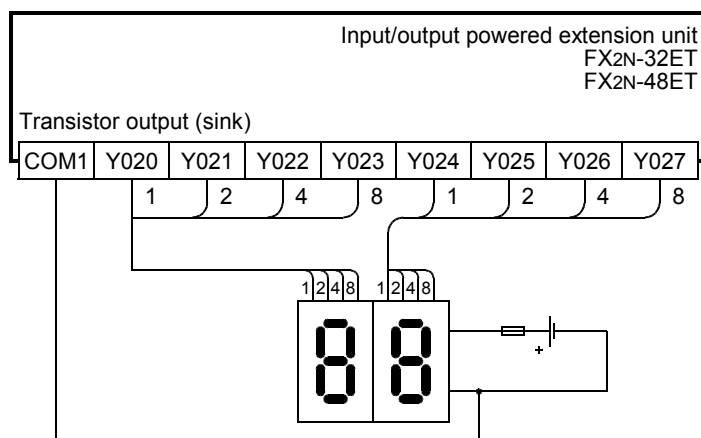


7-segment display to be used for sink wiring (in the case of transistor output)

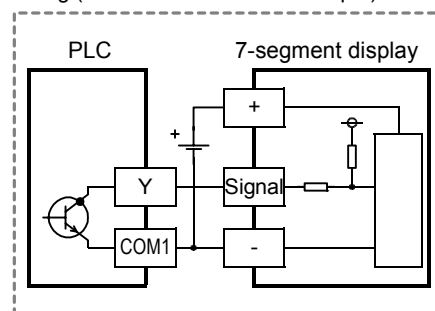

In the case of source wiring

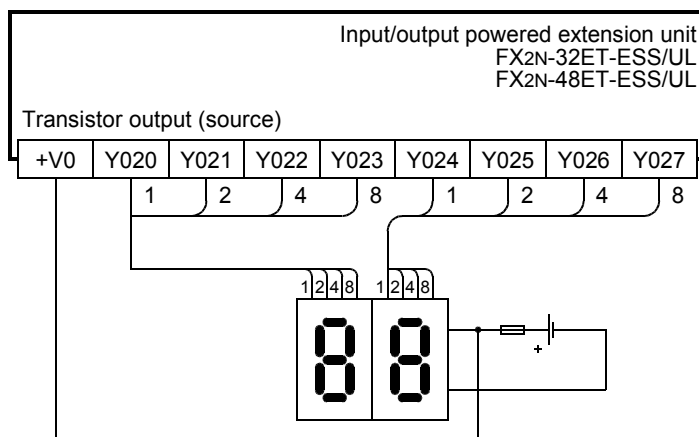

7-segment display to be used for source wiring (in the case of transistor output)

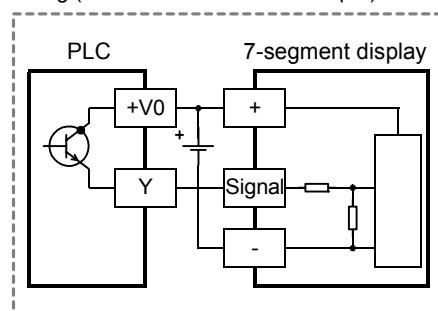

14. Test Operation, Adjustment, Maintenance and Troubleshooting

STARTUP AND MAINTENANCE PRECAUTIONS



DANGER

- Do not touch any terminal while the PLC's power is on.
Doing so may cause electrical shock or malfunctions.
- Before cleaning or retightening terminals, externally cut off all phases of the power supply.
Failure to do so may expose you to shock hazard.
- Correctly connect the battery for memory backup.
Do not charge, disassemble, heat or short-circuit the battery. Do not throw it into the fire.
Doing so may rupture or ignite it.
- Before modifying the program under operation or performing operation for forcible output, running or stopping, carefully read the manual, and sufficiently ensure the safety.
An operation error may damage the machine or cause accidents.
- Do not change programs in the PLC from two or more peripheral equipment (such as the programming tool and GOT) at the same time.
Such changes may cause destruction or malfunction of programs in the PLC.

STARTUP AND MAINTENANCE PRECAUTIONS



CAUTION

- Before attaching or detaching the memory cassette, turn off power. If it is attached or detached while PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
Doing so may cause failures, malfunctions or fire.
For repair, contact your local Mitsubishi Electric distributor.
- Before connecting or disconnecting any extension cable, turn off power.
Failure to do so may cause unit failure or malfunctions.
- Before attaching or detaching the following devices, turn off power.
Failure to do so may cause device failure or malfunctions.
 - Peripheral devices, display module, expansion boards and special adapters
 - Extension blocks, connector conversion adapter and FX Series terminal block
 - Battery and memory cassette

DISPOSAL PRECAUTIONS



DANGER

- Please contact a company certified in the disposal of electronic waste for environmentally safe recycling and disposal of your device.

TRANSPORTATION PRECAUTIONS



CAUTION

- Before transporting the PLC, turn on power to the PLC to check that the BATT LED is off and check the battery life.
If the PLC is transported with the BATT LED on or the battery exhausted, the backed up data may be unstable during transportation.
- The PLC is precision equipment. During transportation, avoid impacts larger than that is specified in the manual (section 4.1) of the PLC main unit. Failure to do so may cause failures in the PLC.
After transportation, check the operations of the PLC.

14.1 Preparation for Test Operation

14.1.1 Preliminary inspection [power OFF]

Incorrect connection of the power supply terminal, contact of the DC input wire and power supply wire, or short-circuiting of output wires may result in serious damage.

Before applying power, check that the power supply and ground terminals are connected correctly and input/output devices are wired properly.

Notes

The dielectric withstand voltage and insulation resistance test of the PLC should be measured in accordance with the following procedures.

- 1) Remove all input/output wires and power supply wires from the PLC.
- 2) Connect a crossing wire to each of the PLC terminals (power supply terminal, input terminals and output terminals) except the ground terminal.

For the dielectric withstand voltage test of each terminal, refer to the generic specifications for the product.

→ **Refer to Section 4.1.**


- 3) Measure the dielectric withstand voltage and insulation resistance between each terminal and the ground terminal.

Dielectric withstand voltage: 1.5kV AC or 500V for 1min (The terminals vary in dielectric withstand voltage.)

Insulation resistance: 500V DC / 5MΩ or more

14.1.2 Connection to built-in programming connector

When connecting the communication cable of a peripheral device, align the positioning mark of the cable with that of the main unit.

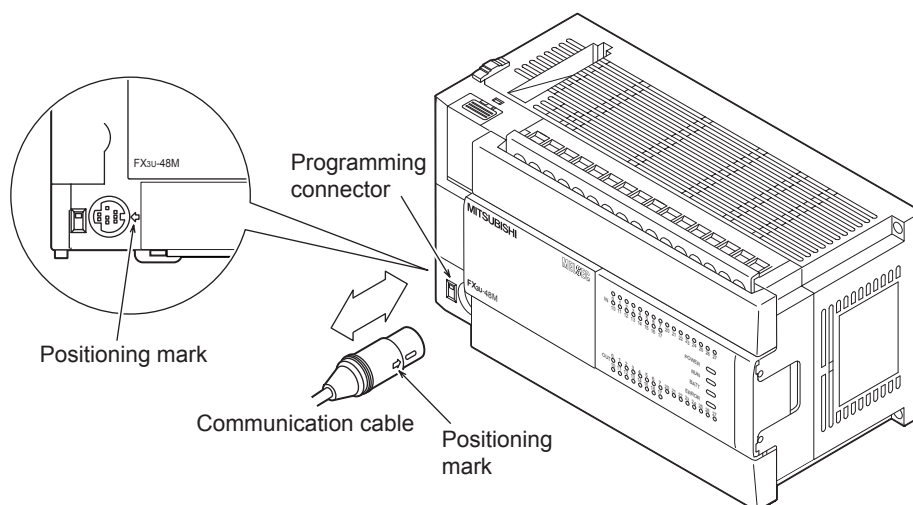

14.1.3 Writing of program and program check [power ON and PLC stopped]

1 Turn on the PLC power.

Make sure that the RUN/STOP switch of the PLC is set to STOP, and turn the power on.

2 Check the program.


Check for circuit errors and grammatical errors with the program check function of the programming tool.

3 Transfer the sequence program.

Write the program to the memory cassette with the programming tool.

Make sure to set the PROTECT switch of the memory cassette to OFF (shown right).

→ For the details of handling of the memory cassette, refer to Chapter 20.

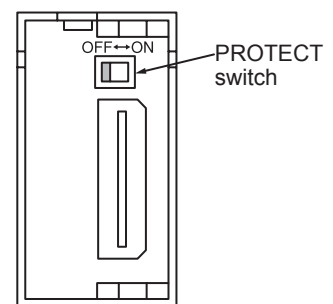

4 Verify the sequence program.

Verify that the program has been correctly written to the memory cassette.

5 Execute PLC diagnosis.

Check for errors in the PLC main body with the PLC diagnostic function of the programming tool.

→ For the details of the PLC diagnosis with the display module or GX Developer, refer to Section 14.6.


14.2 Running and Stopping Procedures [Power ON]

14.2.1 Methods of running and stopping

FX3U PLCs can be started or stopped by any of the following three methods.
Two of the methods can be combined.

1. Operation with built-in RUN/STOP switch

Operate the RUN/STOP switch on the front panel of the main unit to start and stop the PLC (refer to the right figure).
Turn the switch to RUN, and the PLC will start. Turn it to STOP, and the PLC will stop.

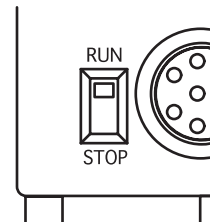


2. Running and stopping with general-purpose input (RUN terminal)

Operation with one switch (RUN)

One of the input terminals X000 to X017 of the main unit (X000 to X007 on a 16-point type unit) can be used as a RUN input terminal by parameter setting (refer to the figure below).
When the specified input terminal is turned on, the PLC starts. When it is turned off, the PLC is started or stopped depending on the state of the built-in RUN/STOP switch.


→ For details, refer to "Kinds of Parameters and Setting" in Programming Manual.

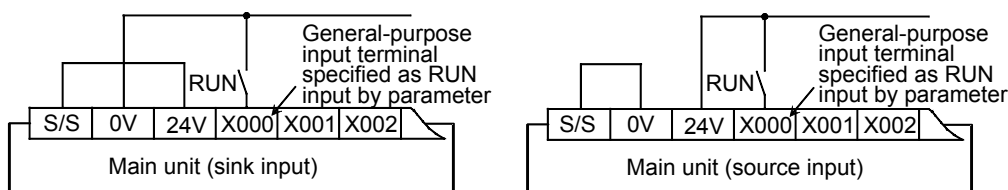

Operation with two switches (RUN and STOP)

The PLC can be started and stopped with individual RUN and STOP pushbutton switches.
For this operation, a sequence program using M8035 to M8037 is necessary.

→ For details, refer to "Operations of Special Devices" in Programming Manual.

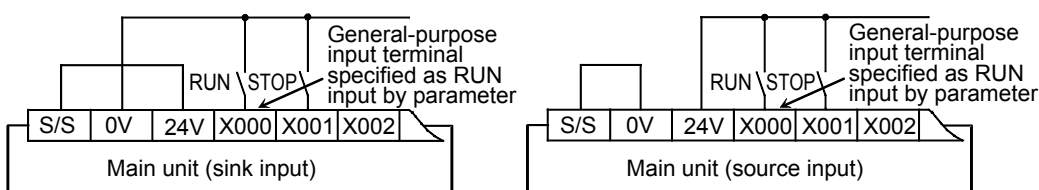

3. Starting and stopping by remote control from programming software

The programming software has a function to forcibly start and stop the PLC by remote control (remote RUN/STOP function).

However, when power is reapplied, the remote RUN/STOP function is disabled. The RUN/STOP status is then determined by the RUN/STOP switch or RUN terminal.

The remote operation for starting and stopping from the programming software is used in combination with the built-in RUN/STOP switch.

14.2.2 Use of several running/stopping methods

1. When the built-in RUN/STOP switch and the general-purpose RUN terminal are used

(without remote running/stopping operation from the programming software)

The RUN/STOP status of the PLC is determined by the conditions shown in the following table.

Condition of built-in RUN/STOP switch	Condition of general-purpose input terminal specified as RUN terminal by parameter	Status of PLC
RUN	OFF	RUN
	ON	RUN
STOP	OFF	STOP
	ON	RUN

Use either built-in RUN/STOP switch or the general input specified as RUN terminal.

(When specifying the general-purpose terminal as the RUN terminal, always set the built-in RUN/STOP switch to STOP.)

2. When the remote running/stopping operation from the programming software is performed

For this operation, keep both the built-in RUN/STOP switch and the general-purpose input RUN terminal in the STOP position.

If the stop command is given from the programming software after the PLC is started by either the built-in RUN/STOP switch or the general-purpose input RUN terminal, the PLC will be restored to the running status by giving the RUN command from the programming software. This can also be accomplished by setting the built-in RUN/STOP switch or the general-purpose input RUN terminal to STOP and then to RUN.

14.3 Operation and Test [Power ON and PLC Running]

14.3.1 Self-diagnostic function

When the PLC's power is turned on, its self-diagnostic function starts automatically. If there are no problems with the hardware, parameters or program, the PLC will start and the RUN command (refer to Section 14.2) is given (RUN LED is lit).

If any problems are found, the "ERROR" LED flashes or lights.

14.3.2 Test functions

Functions of the programming tool to turn on/off the PLC devices and change the current values/settings are effective or ineffective depending on the PLC status as shown below.

✓ : Effective △ : Conditionally effective – : Ineffective

Item		In running status	In stopped status
Forcible ON/OFF*1	Devices used in program	△*1	✓*1
	Devices not in use	✓	✓
Change of current values of timers, counters, data registers, extension registers, extension file registers and file registers*4	Devices used in program	△*2*3	✓*3
	Devices not in use	✓*3	✓*3
Change of settings of timers and counters*5	When the program memory is the built-in RAM	✓	✓
	When the program memory is in the memory cassette and the PROTECT switch is on	–	–
	When the program memory is in the memory cassette and the PROTECT switch is off	–	✓

*1. Forcible ON/OFF

- The forcible ON/OFF function is effective on the input relays (X), output relays (Y), auxiliary relays (M), state (S), timers (T) and counters (C). On the display module, the function cannot be operated for the input relays (X).
- The forcible ON/OFF function can turn on or off the devices only for one scan.
While the PLC is running, the function is substantially effective in clearing the current values of the timers (T), counters (C), data registers (D), index registers (Z and V) and extension registers (R) and in controlling the SET/RST circuit and self-retaining circuit. (The operation to forcibly turn on timers is effective only when the timers are driven by the program.)
- The results of forcible ON/OFF operation performed while the PLC in the stopped state or performed for devices not used in the program are retained.
However, the results of the operation performed for the input relays (X) are not retained because the relays refresh input even while the PLC is in the stopped state. (They are updated according to the input terminal conditions.)

*2. Since the current values may be changed according to the MOV instruction in the program and the operation results, the most recently obtained values are retained.

*3. Only display modules can change the current value by the extension file register test function.

*4. The current values of the file registers stored in the program memory cannot be monitored or tested on the display module.

*5. Change of timer and counter settings

The settings of the timers (T) and counters (C) can be changed only when the timers are driven by the program.

14.3.3 Program modification function

The sequence program can be transferred while the PLC is running or in the stopped state as shown below.

✓ : Effective – : Ineffective

Item		In running status	In stopped status
Batch writing of file registers (D) and extension file registers (ER)		–	✓
Writing of program to PLC	Partial modification of program	✓*1	✓
	Modification of whole program (batch writing)	–	✓
Writing of parameters to PLC		–	✓
Writing of comments to PLC		–	✓

- *1. Since the writing function is used during running, the programming tool must be applicable to the writing function while running, such as GX Developer.


14.4 Maintenance and Periodic Inspection

This PLC does not incorporate consumable parts that are factors in the reduction of service life. However, the batteries and output relays (points of contact) have a limited life expectancy.


14.4.1 Procedures for checking model name

The model name of the main unit can be checked on the nameplate on the right side. After extension devices are connected, the nameplate cannot be seen. Check the model name in the following places.

When the terminal block cover (output side) is opened

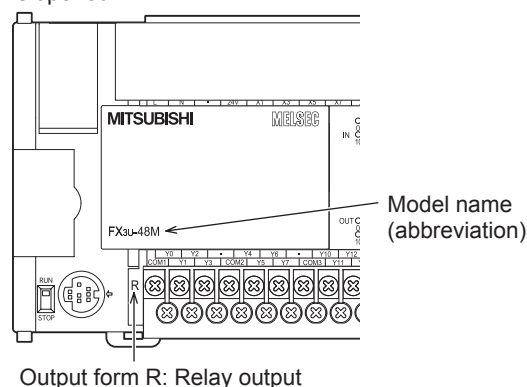

When the top cover is removed

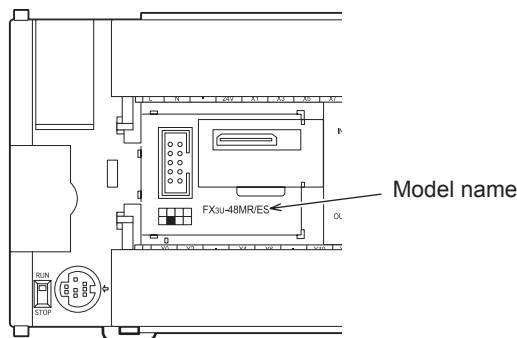

14.4.2 Periodic inspection - battery life, etc.

1. Battery

Part	Life
Model FX3U-32BL battery	Standard life: 5 years (at ambient temperature of 25°C (77°F)) [Guarantee for 1 year]

Standard life of FX3U-32BL: 5 years (at ambient temperature of 25°C (77°F))
[Free guarantee period: 1 year after delivery or up to 18 months after manufacture]

Standard frequency of replacement of FX3U-32BL: 4 to 5 years

Although the standard life is 5 years, the life varies depending on the ambient temperature. Replace the battery every 4 to 5 years. Batteries discharge spontaneously. Purchase the battery in advance in consideration of the frequency of replacement shown above.

2. Other devices

When inspecting the battery, check the following points.

- Check that the temperature in the panel is not abnormally increased by other heat generating bodies or direct sunlight.
- Check that dust or conductive dust has not entered the panel.
- Check for loosening of wiring and other abnormalities.

14.4.3 Maintenance - life of relay contacts

1. Main unit, input/output powered extension units and output extension blocks

Applicable models: FX_{3U}-16MR/ES, FX_{3U}-32MR/ES, FX_{3U}-48MR/ES, FX_{3U}-64MR/ES, FX_{3U}-80MR/ES, FX_{2N}-32ER-ES/UL, FX_{2N}-48ER-ES/UL, FX_{2N}-48ER-UA1/UL, FX_{2N}-32ER, FX_{2N}-48ER, FX_{2N}-16EYR, FX_{2N}-16EYR-ES/UL

The standard life of the contact used for conductive AC loads, such as contactors and solenoid valves, is 500,000 times at 20 VA.

The following table shows the approximate life of the relay based on the results of our life test.

Test condition: 1 sec. ON / 1 sec.OFF

Load capacity		Contact life	Example of applicable loads (Magnetic switch manufactured by our company)
20VA	0.2A/100V AC	3,000,000 times	S-K10 to S-K95
	0.1A/200V AC		
35VA	0.35A/100V AC	1,000,000 times	S-K100 to S-K150
	0.17A/200V AC		
80VA	0.8A/100V AC	200,000 times	S-K180, S-K400
	0.4A/200V AC		

2. FX Series terminal blocks

Applicable models: FX-16EYR-TB

The standard life of the contact used for conductive AC loads, such as contactors and solenoid valves, is 500,000 times at 35 VA.

The following table shows the approximate life of the relay based on the results of our life test.

Test condition: 1 sec. ON / 1 sec.OFF

Load capacity		Contact life	Example of applicable loads (Magnetic switch manufactured by our company)
35VA	0.35A/100V AC	3,000,000 times	S-K10 to S-K150 S-N10 to S-N35
	0.17A/200V AC		
80VA	0.8A/100V AC	1,000,000 times	S-K180 to S-K400
	0.4A/200V AC		
120VA	1.2A/100V AC	200,000 times	S-K600, S-K800
	0.6A/200V AC		

14.4.4 Procedures for replacing battery

When the battery voltage drops while the PLC power is on, the "BATT" LED on the panel is lit in red, and M8005 and M8006 (latch) are turned on.

The memory can be retained for about one month after the lamps turn on. However, the operators may not immediately find the lamps to be on. Prepare a new battery promptly, and replace the battery with the new one.

→ For details on the specifications and functions of the battery, refer to Chapter 21 "Battery (FX_{3U}-32BL)."

14.5 Troubleshooting with LEDs

When trouble occurs, check the LEDs on the PLC to identify the problem with the PLC.

14.5.1 POWER LED [on/flashing/off]

State of LED	State of PLC	Remedies
On	Power of the specified voltage is being correctly supplied to the power supply terminal.	The power supply is normal.
Flashing	One of the following problems may have occurred. <ul style="list-style-type: none"> Power of the specified voltage and current is not being supplied to the power supply terminal. External wiring is incorrect. Internal error of PLC 	<ul style="list-style-type: none"> Check the supply voltage. After disconnecting the cables other than the power cable, re-apply power to the PLC, and check for changes in the state. If no improvement is obtained, consult your local Mitsubishi Electric distributor.
Off	One of the following problems may have occurred. <ul style="list-style-type: none"> The power supply is off. External wiring is incorrect. Power of the specified voltage is not being supplied to the power supply terminal. The power cable is broken. 	<ul style="list-style-type: none"> If the power is not off, check the power supply and the power supply route. If power is being supplied correctly, consult your local Mitsubishi Electric distributor. After disconnecting the cables other than the power cable, re-apply power to the PLC, and check for changes in the state. If no improvement is obtained, consult your local Mitsubishi Electric distributor.

14.5.2 BATT LED [on/off]

State of LED	State of PLC	Remedies
On	The battery voltage is low.	Immediately replace the battery. Refer to Chapter 21 "Battery (FX _{3U} -32BL)."
Off	The battery voltage is higher than the value set with D8006.	Normal

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

14.5.3 ERROR LED [on/flashing/off]

State of LED	State of PLC	Remedies
On	A watchdog timer error may have occurred, or the hardware of the PLC may be damaged.	<p>1) Stop the PLC, and re-apply power. If ERROR LED goes off, a watchdog timer error may have occurred. Take any of the following measures.</p> <ul style="list-style-type: none"> - Review the program. The maximum value (D8012) of the scan time should not exceed the setting (D8000) of the watchdog timer. - Check that the input used for input interruption or pulse catch is not being abnormally turned on and off in one scan. - Check that the frequency of the pulse (duty of 50%) input to the high-speed counter does not exceed the specified range. - Add the WDT instructions. Add some WDT instructions to the program, and reset the watchdog timer several times in one scan. - Change the setting of the watchdog timer. Change the watchdog timer setting (D8000) in the program so that the setting is larger than the maximum value of the scan time (D8012). <p>2) Remove the PLC and supply power to it from another power supply on a desk. If the ERROR LED goes off, noise may have affected the PLC. Take the following measures.</p> <ul style="list-style-type: none"> - Check the ground wiring, and reexamine the wiring route and installation location. - Fit a noise filter onto the power supply line. <p>3) If the ERROR LED does not go off even after the measures stated in (1) and (2) are taken, consult your local Mitsubishi Electric distributor.</p>
Flashing	One of the following errors has occurred in the PLC. <ul style="list-style-type: none"> • Parameter error • Syntax error • Ladder error 	<p>Perform PLC diagnosis and program check with the programming tool. For the remedies, refer to Section 14.6 "Judgment by Error Codes and Representation of Error Codes."</p>
Off	No errors that stop the PLC have occurred.	<p>If the operations of the PLC are abnormal, perform PLC diagnosis and program check with the programming tool. An I/O error, Comms.error or Runtime error may have occurred.</p>


14.6 Judgment by Error Codes and Representation of Error Codes

Error codes can be checked with the programming tool or on the display module (FX3U-7DM).

14.6.1 Operation and check on display module (FX3U-7DM)

- 1) Move the cursor to "ErrorCheck" pressing the + or - button on the menu screen (shown right).
For the menu configuration, refer to Section 18.6.
The buttons on the menu screen work as stated below.

Operation button	Operation
ESC	The screen returns to the top screen (time display).
-	The cursor moves upward. When the button is held for 1 second or more, the cursor moves quickly. When the cursor is in the uppermost position, the button is ineffective.
+	The cursor moves downward. When the button is held for 1 second or more, the cursor moves quickly. When the cursor is in the lowermost position, the button is ineffective.
OK	The flashing item at the cursor is selected.

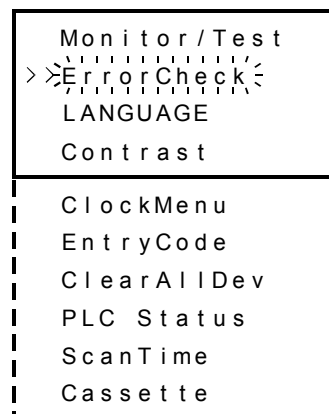


- 2) When the OK button is pressed, an error check is performed. The results are displayed on the error display screen (shown to the right).
Pressing the ESC button on the menu screen cancels the operation and returns the screen to the top screen (time display).
- 3) If some errors have occurred, the pages can be switched with the + or - button.

Operation button	Operation
ESC	The screen returns to the Menu screen.
-	1 error or less: Ineffective operation 2 errors or more: The previous page of the error display screen is displayed.
+	1 error or less: Ineffective operation 2 errors or more: The following page of the error display screen is displayed.
OK	The screen returns to the Menu screen.


Displayed data

	Displayed data
[1]	Flag of occurred error
[2]	Error name
[3]	Error code
[4]	Number of simultaneously occurring errors (displayed only when more than one error has occurred)


When no errors have occurred

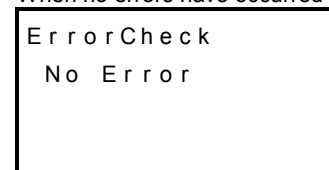


When one error has occurred

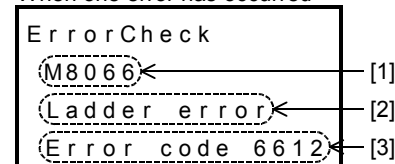

When more than one error has occurred

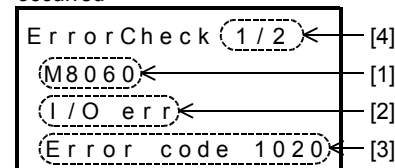

↑ / ↓

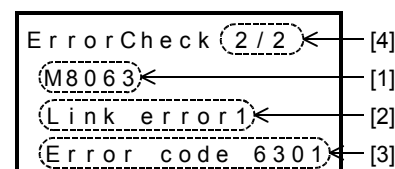


- 4) Pressing the ESC button cancels the operation and returns the screen to the Menu screen.

14.6.2 Operation and check by GX developer


- 1 Connect the personal computer and the PLC.
- 2 Execute the PLC diagnosis.

Click [Diagnostics] → [PLC diagnostics] on the tool menu, and the diagnosis of PLC will start.

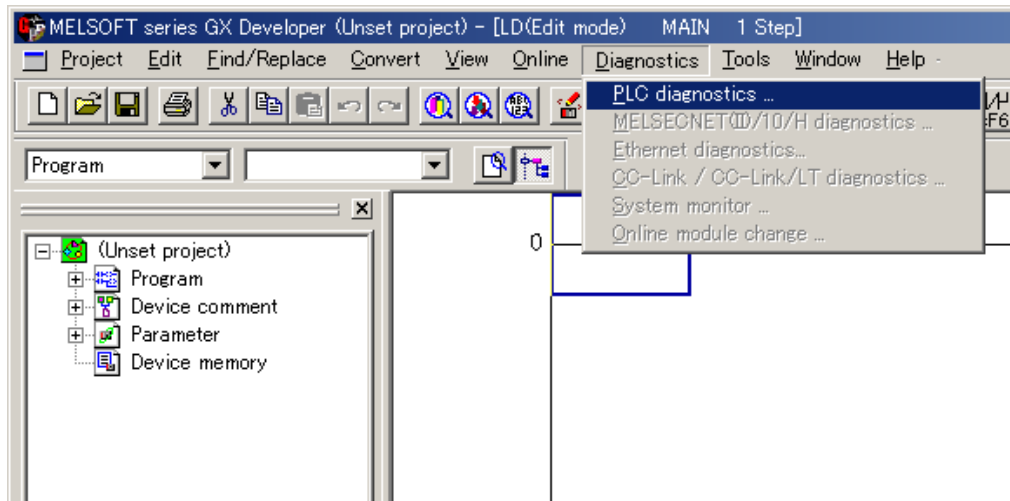

- 3 Check the results of diagnosis.

Display the following window to check the errors.

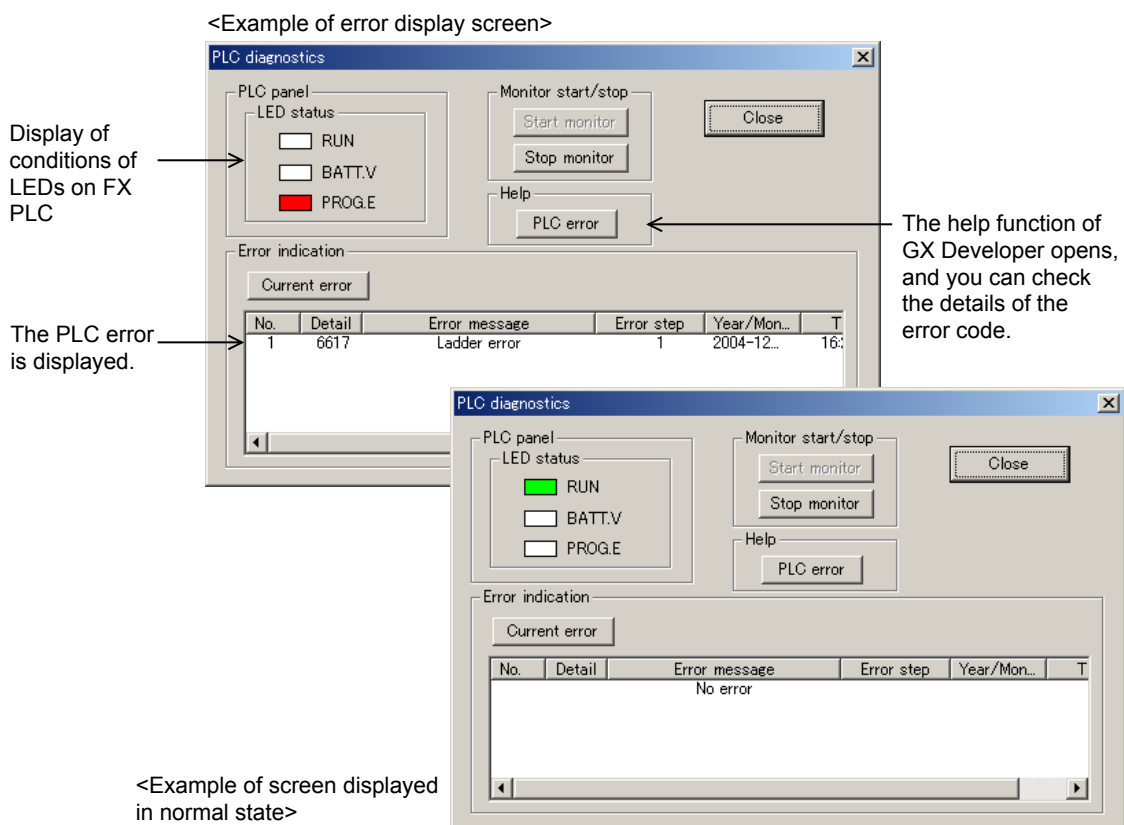

14.6.3 Representation of errors

Errors are represented in this manual, GX Developer, and the display module as shown in the following table.

This manual	GX Developer		Display module	
	Japanese version	English version	Display in Japanese	Display in English
I/O configuration error	I/O 構成エラー	I/O config err	I/O構成エラー	I/O error
PLC hardware error	PC ハードウェアエラー	PLC H/W error	PCハードエラー	PC H/W error
PLC/PP communication error	PC/PP 通信 エラー	PLC/PP comm err	PC/PP通信エラー	Comms.error
Serial communication error 1 [ch1]	リンク エラー	Link error	シリアル通信エラー1	Link error1
Serial communication error 2 [ch2]	シリアル通信エラー2 [ch2]	Link error2	シリアル通信エラー2	Link error2
Parameter error	パラメータ エラー	Param error	パラメータエラー	Parameter error
Syntax error	文法 エラー	Syntax error	文法エラー	Grammar error
Circuit error	回路 エラー	Ladder error	回路エラー	Ladder error
Operation error	演算 エラー	Operation err	演算エラー	Runtime error
I/O refresh error	—	—	—	—
Unconnected I/O designation error	—	—	—	—
BFM initialization failure	—	—	—	—
Special block error	—	—	特殊ブロックエラー	SFB error

14.6.4 Error Code List and Action

When a program error occurs in the PLC, the error code is stored in special data registers D8060 - D8067 and D8438. The following actions should be followed for diagnostic errors.

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
I/O configuration error [M8060(D8060)]			
Ex-ample: 1020	Continues operation	<p>The head number of unconnected I/O device</p> <p>Example: When X020 is unconnected</p> <div><div><div>1</div><div>0</div><div>2</div><div>0</div></div><div>BCD conversion value</div></div> <p>Device number: 10 to 337</p> <p>1: Input (X), 0: Output (Y)</p> <ul style="list-style-type: none">1st to 3rd digits: Device number4th digit: I/O type (1 = input (X), 0 = output (Y)) <p>Example: When 1020 is stored in D8060 Inputs X020 and later are unconnected.</p>	Unconnected I/O relay numbers are programmed. The PLC continues its operation. Modify the program, check wiring connection, or add the appropriate unit/block.
Serial communication error 2 [M8438 (D8438)]			
0000	—	No error	
3801	Continues operation	Parity, overrun or framing error	<ul style="list-style-type: none">Inverter communication, computer link and programming: Ensure the communication parameters are correctly set according to their applications.N:N network, parallel link, etc.: Check programs according to applications.Remote maintenance: Ensure modem power is ON and check the settings of the AT commands.Wiring: Check the communication cables for correct wiring.
3802		Communication character error	
3803		Communication data sum check error	
3804		Communication data format error	
3805		Command error	
3806		Communication time-out detected	
3807		Modem initialization error	
3808		N:N network parameter error	
3812		Parallel link character error	
3813		Parallel link sum error	
3814	Parallel link format error		
3820	Inverter communication error		
PLC hardware error [M8061(D8061)]			
0000	—	No error	
6101	Stops operation	RAM error	
6102		Operation circuit error	
6103		I/O bus error (M8069 = ON)	Check for the correct connection of extension cables.
6104		Powered extension unit 24 V failure (M8069 = ON)	
6105		Watchdog timer error	Check user program. The scan time exceeds the value stored in D8000.
6106		I/O table creation error (CPU error)	When turning the power ON to the main unit, a 24V power failure occurs in a powered extension unit. (The error occurs if the 24V power is not supplied for 10 seconds or more after the main power is turned ON.)
6107		System configuration error	Check the number of the connected special function units/blocks. For a few special function units/blocks, the connectable number is limited.

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
PLC/PP communication error (D8062)			
0000	—	No error	
6201	Continues operation	Parity, overrun or framing error	Check the cable connection between the programming panel (PP) / programming device and the PLC. This error may occur when a cable is disconnected and reconnected during PLC monitoring.
6202		Communication character error	
6203		Communication data sum check error	
6204		Data format error	
6205		Command error	
Serial communication error 1 [M8063 (D8063)]			
0000	—	No error	
6301	Continues operation	Parity, overrun or framing error	<ul style="list-style-type: none">• Inverter communication, computer link and programming: Ensure that the communication parameters are correctly set according to their applications.• N:N network, parallel link, etc.: Check programs according to applications.• Remote maintenance: Ensure modem power is ON and check the settings of the AT commands.• Wiring: Check the communication cables for correct wiring.
6302		Communication character error	
6303		Communication data sum check error	
6304		Communication data format error	
6305		Command error	
6306		Communication time-out detected	
6307		Modem initialization error	
6308		N:N network parameter error	
6312		Parallel link character error	
6313		Parallel link sum error	
6314		Parallel link format error	
6320		Inverter communication error	
Parameter error [M8064(D8064)]			
0000	—	No error	
6401	Stops operation	Program sum check error	STOP the PLC, and correctly set the parameters.
6402		Memory capacity setting error	
6403		Latched device area setting error	
6404		Comment area setting error	
6405		File register area setting error	
6406		Special unit (BFM) initial value setting, positioning instruction setting sum check error	
6407		Special unit (BFM) initial value setting, positioning instruction setting error	
6409		Other setting error	
Syntax error [M8065(D8065)]			
0000	—	No error	
6501	Stops operation	Incorrect combination of instruction, device symbol and device number	During programming, each instruction is checked. If a syntax error is detected, modify the instruction correctly.
6502		No OUT T or OUT C before setting value	
6503		<ul style="list-style-type: none">• No setting value after OUT T or OUT C• Insufficient number of operands for an applied instruction	
6504		<ul style="list-style-type: none">• Same label number is used more than once.• Same interrupt input or high speed counter input is used more than once.	
6505		Device number is out of allowed range.	
6506		Invalid instruction	
6507		Invalid label number [P]	
6508		Invalid interrupt input [I]	
6509		Other error	
6510		MC nesting number error	

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
Circuit error [M8066(D8066)]			
0000	—	No error	
6610	Stops operation	LD, LDI is continuously used 9 times or more.	This error occurs when a combination of instructions is incorrect in the entire circuit block or when the relationship between a pair of instructions is incorrect. Modify the instructions in the program mode so that their mutual relationship becomes correct.
6611		More ANB/ORB instructions than LD/LDI instructions	
6612		Less ANB/ORB instructions than LD/LDI instructions	
6613		MPS is continuously used 12 times or more.	
6614		No MPS instruction	
6615		No MPP instruction	
6616		No coil between MPS, MRD and MPP, or incorrect combination	
6617		Instruction below is not connected to bus line: STL, RET, MCR, P, I, DI, EI, FOR, NEXT, SRET, IRET, FEND or END	
6618		STL, MC or MCR can be used only in main program, but it is used elsewhere (e.g. in interrupt routine or subroutine).	
6619		Invalid instruction is used in FOR-NEXT loop: STL, RET, MC, MCR, I (interrupt pointer) or IRET.	
6620		FOR-NEXT instruction nesting level exceeded	
6621		Numbers of FOR and NEXT instructions do not match.	
6622		No NEXT instruction	
6623		No MC instruction	
6624		No MCR instruction	
6625		STL instruction is continuously used 9 times or more.	
6626		Invalid instruction is programmed within STL-RET loop: MC, MCR, I (interrupt pointer), SRET or IRET.	
6627		No RET instruction	
6628		Invalid instruction is used in main program: I (interrupt pointer), SRET or IRET	
6629		No P or I (interrupt pointer)	
6630		No SRET or IRET instruction	
6631		SRET programmed in invalid location	
6632		FEND programmed in invalid location	
Operation error [M8067(D8067)]			
0000		No error	
6701	Continues operation	<ul style="list-style-type: none">No jump destination (pointer) for CJ or CALL instructionLabel is undefined or out of P0 to P4095 due to indexingLabel P63 is executed in CALL instruction; cannot be used in CALL instruction as P63 is for jumping to END instruction.	This error occurs in the execution of operation. Review the program, or check the contents of the operands used in the applied instructions. Even if the syntax or circuit design is correct, an operation error may still occur. For example: "T200Z" itself is not an error. But if Z had a value of 400, the timer T600 would attempt to be accessed. This would cause an operation error since there is no T600 device available.
6702		CALL instruction nesting level is 6 or more	
6703		Interrupt nesting level is 3 or more	
6704		FOR-NEXT instruction nesting level is 6 or more.	
6705		Operand of applied instruction is inapplicable device.	
6706		Device number range or data value for operand of applied instruction exceeds limit.	
6707		File register is accessed without parameter setting of file register.	

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
Operation error [M8067(D8067)]			
6708	Continues operation	FROM/TO instruction error	This error occurs in the execution of the operation. <ul style="list-style-type: none"> Review the program, or check the contents of the operands used in the applied instructions. Check whether the specified buffer memories exist in the equipment. Check whether the extension cables are correctly connected.
6709		Other (e.g. improper branching)	This error occurs in the execution of operation. Review the program, or check the contents of the operands used in the applied instructions. Even if the syntax or circuit design is correct, an operation error may still occur. For example: "T200Z" itself is not an error. But if Z had a value of 400, the timer T600 would attempt to be accessed. This would cause an operation error since there is no T600 device available.
6710		Mismatch among parameters	This error occurs when the same device is used within the source and destination in a shift instruction, etc.
6730		Incorrect sampling time (Ts) ($Ts \leq 0$)	<PID instruction is stopped.> This error occurs in the parameter setting value or operation data executing PID instruction. Check the contents of the parameters.
6732		Incompatible input filter constant (α) ($\alpha < 0$ or $100 \leq \alpha$)	
6733		Incompatible proportional gain (KP) ($KP < 0$)	
6734		Incompatible integral time (Ti) ($Ti < 0$)	
6735		Incompatible derivative gain (KD) ($KD < 0$ or $201 \leq KD$)	
6736		Incompatible derivative time (TD) ($TD < 0$)	<Auto tuning is continued.> The operation is continued in the condition "sampling time (Ts) = cyclic time (scan time)".
6740		Sampling time (Ts) \leq Scan time	
6742		Variation of measured value exceeds limit. ($\Delta PV < -32768$ or $+32767 < \Delta PV$)	
6743		Deviation exceeds limit. ($EV < -32768$ or $+32767 < EV$)	
6744		Integral result exceeds limit. (Outside range from -32768 to $+32767$)	
6745		Derivative value exceeds limit due to derivative gain (KD).	<PID operation is continued.> The operation is continued with each parameter set to the maximum or minimum value.
6746		Derivative result exceeds limit. (Outside range from -32768 to $+32767$)	
6747		PID operation result exceeds limit. (Outside range from -32768 to $+32767$)	
6748		PID output upper limit set value < PID output lower limit set value.	<Transpose of output upper limit value and output lower limit value. → PID operation is continued.> Check whether the target setting contents are correct.
6749		Abnormal PID input variation alarm set value or output variation alarm set value (Set value < 0)	<Alarm output is not given. → PID operation is continued.> Check whether the target setting contents are correct.

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
Operation error [M8067(D8067)]			
6750	Continues operation	<Step response method> Improper auto tuning result	<p><Auto tuning is finished. → PID operation is started.></p> <ul style="list-style-type: none"> When auto tuning was started, the difference between the measured value and the target value was 150 or less. ($SV - PV \leq 150$) When auto tuning was started, the difference between the measured value and the target value was 1/3 or more. Check the measured value and target value, and then execute auto tuning again.
6751		<Step response method> Auto tuning operation direction mismatch	<p><Auto tuning is forcibly finished. → PID operation is not started.></p> <p>The operation direction estimated from the measured value at the start of auto tuning was different from the actual operation direction of the output during auto tuning.</p> <p>Correct the relationship among the target value, output value for auto tuning, and the measured value, and then execute auto tuning again.</p>
6752		<Step response method> Improper auto tuning operation	<p><Auto tuning is finished. → PID operation is not started.></p> <p>Because the set value was fluctuated during auto tuning, auto tuning was not executed correctly.</p> <p>Set the sampling time to a value larger than the output change cycle, or set a larger value for the input filter constant.</p> <p>After changing the setting, execute auto tuning again.</p>
6753		<Limit cycle method> Abnormal output set value for auto tuning [ULV (upper limit) \leq LLV (lower limit)]	<p><Auto tuning is forcibly finished. → PID operation is not started.></p> <p>Check whether the target setting contents are correct.</p>
6754		<Limit cycle method> Abnormal PV threshold (hysteresis) set value for auto tuning (SHPV < 0)	
6755		<Limit cycle method> Abnormal auto tuning transfer status (Data of device controlling transfer status is abnormally overwritten.)	<p><Auto tuning is forcibly finished. → PID operation is not started.></p> <p>Ensure that devices occupied by PID instruction are not overwritten in the program.</p>
6756		<Limit cycle method> Abnormal result due to excessive auto tuning measurement time ($\tau_{on} > \tau$, $\tau_{on} < 0$, $\tau < 0$)	<p><Auto tuning is forcibly finished. → PID operation is not started.></p> <p>The auto tuning time is longer than necessary.</p> <p>Increase the difference (ULV - LLV) between the upper limit and lower limit of the output value for auto tuning, set a smaller value to the input filter constant (α), or set a smaller value to the PV threshold (SHPV) for auto tuning, and then check the result for improvement.</p>
6757		<Limit cycle method> Auto tuning result exceeds proportional gain. (KP = outside range from 0 to 32767)	<p><Auto tuning is finished (KP = 32767). → PID operation is started.></p> <p>The variation of the measured value (PV) is small compared with the output value. Multiply the measured value (PV) by "10" so that the variation of the measured value will increase during auto tuning.</p>
6758		<Limit cycle method> Auto tuning result exceeds integral time. (TI = outside range from 0 to 32767)	<p><Auto tuning is finished (KP = 32767). → PID operation is started.></p> <p>The auto tuning time is longer than necessary.</p>
6759		<Limit cycle method> Auto tuning result exceeds derivative time. (TD = outside range from 0 to 32767)	<p>Increase the difference (ULV - LLV) between the upper limit and lower limit of the output value for auto tuning, set a smaller value to the input filter constant (α), or set a smaller value to the PV threshold (SHPV) for auto tuning, and then check the result for improvement.</p>

Error codes in shaded columns are added in FX3U PLCs.

Error code	PLC operation at error occurrence	Contents of error	Action
Operation error [M8067(D8067)]			
6760	Continues operation	ABS data read from servo sum check error	Check servo wiring and parameter setting. Also check the ABS instruction.
6762		Port specified by inverter communication instruction is already used in another communication.	Check to make sure the port is not specified by another instruction.
6763		1) Input (X) specified by DSZR, DVIT or ZRN instruction is already used in another instruction. 2) The interrupt signal device for DVIT instruction is outside the allowable setting range.	1) Check to make sure the input (X), as specified by DSZR, DVIT or ZRN instruction, is not being used for the following purposes: - Input interrupt (including the delay function) - High speed counter C235 to C255 - Pulse catch M8050 to M8057 - SPD instruction 2) Check the contents of D8336 for the correct interrupt signal specification for DVIT instruction.
6764		Pulse output number is already used in a positioning instruction or pulse output instruction (PLSY, PWM, etc.).	Check to make sure the pulse output destination is not being driven by another positioning instruction.
6765		Number of applied instruction exceeds limit.	The number of times an applied instruction is used in the program exceeds the specified limit.
6770		Writing error to flash memory cassette	
6771		Flash memory cassette is not connected.	Check for the correct attachment of the memory cassette.
6772		Flash memory cassette is protected against writing.	The write-protect switch of the flash memory cassette was set to ON when data was transferred to the flash memory.
6773		Access error to flash memory during writing in RUN mode	While data was written in the RUN mode, data was transferred to (read from or written to) the flash memory.
Special block error [M8449 (D8449)]			
□020*1	Continues operation	General data sum error	Check for the correct connection of extension cables.
□021*1		General data message error	
□080*1		FROM/TO error	This error occurs in the execution of operation. • Review the program, or check the contents of the operands used in the applied instructions. • Check whether the specified buffer memories exist in the counterpart equipment. • Check for the correct connection of extension cables.
□090*1		Peripheral equipment access error	• Check the cable connection between the programming panel (PP) / programming device and the PLC. • Check for the correct connection of extension cables.

*1. The unit number 0 to 7 of the special function unit/block error is put in □.

11 High-Speed Counters
12 External Wiring
13 Wiring for Various Uses
14 Test Run, Maintenance, Troubleshooting
15 Input/Output Powered Extension Units
16 Input/Output Extension Blocks
17 Other Extension Units and Options
18 Display Module
19 Terminal Block
20 Memory Cassette

14.7 Troubleshooting

- For the procedures on running and stopping the PLC, refer to Section 14.2.
- For the procedures on operating the display module, refer to Chapter 18.
- For the procedures on operating peripheral devices, refer to the manuals for the peripheral devices.
- For the phone numbers and addresses of Mitsubishi Electric System & Service Co., Ltd., refer to the service network at the end of this manual.

14.7.1 Output does not operate (main unit and input/output extension blocks)

1. Output does not turn on.

Stop the PLC, and forcibly turn the inoperable output on then off with a peripheral device or the display module to check its operation.

Check for troubles with external wiring.

- When the output operates
The output may be turned off unintentionally in the program. Reexamine the program.
(Duplicate coil or RST instructions)
- When the output does not operate
Check the configuration of the connected devices and the connection of the extension cables.
If the configuration of the external wiring and connected devices and the connection of the extension cables are acceptable, the output circuit may be damaged.
Consult your local Mitsubishi Electric distributor.

2. Output does not turn off.

Stop the PLC, and check that the output turns off.

Check for trouble with external wiring.

→ For the procedures on running and stopping the PLC, refer to Section 14.2.

- When the output turns off
The output may be turned on unintentionally in the program.
Check that there are no duplicate coils in the program.
- When the output does not turn off
The output circuit may be damaged. Consult your local Mitsubishi Electric distributor.

14.7.2 24V DC input does not operate (main unit and input/output extension blocks)

1. Input does not turn on.

Disconnect the external wiring and connect the S/S terminal and the 0V terminal or the 24V terminal.

Short-circuit the 0V terminal or 24V terminal not connected to the S/S terminal and the input terminal, then check the input display LED or a peripheral device to confirm that the input turns on.

	Measures
When input turns on	Check that the input device does not have a built-in diode or parallel resistance. If so, refer to Subsection 10.2.3.
When input does not turn on	Measure the voltage between the 0V terminal or 24V terminal not connected to the S/S terminal and the input terminal with a tester to confirm that the voltage is 24V DC. • Check the configuration of the external wiring and connected devices and the connection of the extension cables.

2. Input does not turn off.

Check for leakage current from input devices.

If the leakage current is 1.5mA or more, it is necessary to connect a bleeder resistance.

→ For details on the measures, refer to Subsection 10.2.3.

14.7.3 Cautions in registering keyword

1. Cautions in registering keyword

The keyword limits access to the program prepared by the user from peripheral devices.

Keep the keyword carefully.

If you forget the keyword, you cannot operate the PLC online from the programming tool depending on the type of the programming tool and the registered keyword.

2. Cautions in using peripheral devices not applicable to 2nd keyword

A sequence program for which the second keyword has been registered with a programming tool (GX Developer earlier than Ver. 8.23Z) cannot be cleared.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

15. FX_{2N}-32/48E^{*-*} (Input/Output Powered Extension Units)

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.

WIRING PRECAUTIONS



DANGER

- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



- Do not supply power to the [24+] and [24V] terminals (24V DC service power supply) in the main unit and extension units from the outside.
Such power supply may cause damages to the product.
- Perform class D grounding (grounding resistance: 100 Ω or less) to the grounding terminal in the main unit and extension units with a 2mm² or thicker wire.
Do not connect the grounding terminal at the same point as a heavy electrical system (refer to section 9.4).
- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

15.1 Outline


An input/output powered extension unit is used to expand inputs/outputs.

Power can be supplied to subsequent extension blocks from an input/output powered extension unit with a built-in 24V DC power supply.

An input/output powered extension unit is required when the capacity of the main unit's built-in power supply is insufficient for the current consumption demands of the extension blocks.

15.1.1 Product configuration

There are various types of input/output powered extension units. They differ in supply voltage, number of input/output points, input form, output form and connection type.

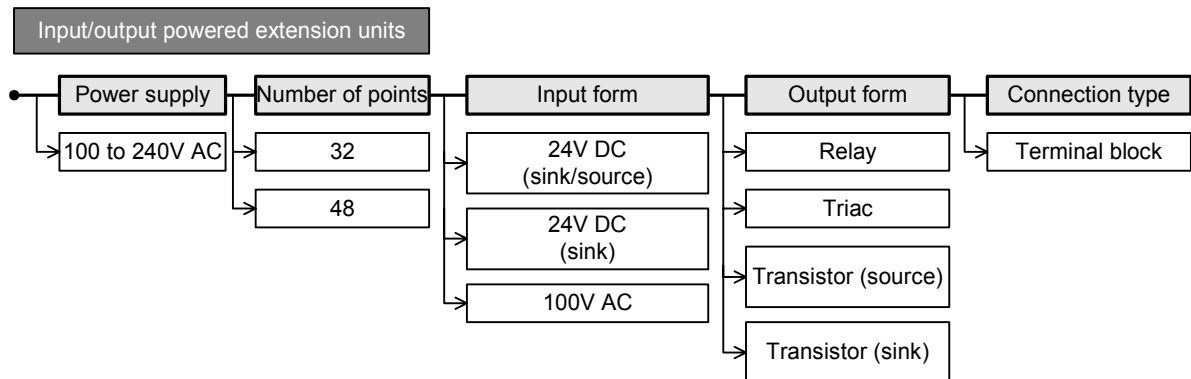

15.1.2 Product list

Each model of input/output powered extension unit has a sink and source type and a sink type. If you intend to add input/output powered extension units, we recommend you to add the same types of units as the main unit or the sink and source type.

→ For the details on sink and source, refer to Subsection 10.1.1.

[Sink] :Sink [-common], [Source] :Source [+common]

Model	Input			Output			Connection type
	Type	Number of points	Common wiring system	Type	Number of points	Common wiring system	
Sink and source input type							
FX2N-32ER-ES/UL	24V DC	16	Sink Source	Relay	16	–	Terminal block
FX2N-48ER-ES/UL		24	Sink Source		24	–	
FX2N-32ET-ESS/UL		16	Sink Source	Transistor	16	Source	
FX2N-48ET-ESS/UL		24	Sink Source		24	Source	
Sink input type							
FX2N-32ER	24V DC	16	Sink	Relay	16	–	Terminal block
FX2N-48ER		24	Sink		24	–	
FX2N-32ES		16	Sink	Triac(SSR)	16	–	
FX2N-32ET		16	Sink	Transistor	16	Sink	
FX2N-48ET		24	Sink		24	Sink	
FX2N-48ER-UA1/UL	100V AC	24	–	Relay	24	–	

15.2 Power Supply Specifications (Power Supply Input/24V DC Service Power Supply)

Item		FX2N-32ER-ES/UL FX2N-32ET-ESS/UL	FX2N-32ER FX2N-32ES FX2N-32ET	FX2N-48ER-ES/UL FX2N-48ET-ESS/UL	FX2N-48ER FX2N-48ET
Classification		FX2N powered extension unit			
Supply voltage		100 to 240V AC			
Allowable supply voltage range		85 to 264V AC			
Rated frequency		50/60 Hz			
Power fuse		250V 3.15 A(3 A) 5φ x 20mm (0.79")		250V 5 A 5φ x 20mm (0.79")	
Rush current	100V AC	Up to 40 A, 5 ms or less			
	200V AC	Up to 60 A, 5 ms or less			
Power consumption		30 W (35 VA)		35 W (45 VA)	
24V DC service power supply	Without extension block	24V DC, 250 mA or less		24V DC, 460 mA or less	
	With extension block	When input/output extension blocks are connected, 24V DC service power is consumed by them. → For details, refer to Section 6.6.			
Connection type		Removable terminal block (M3 screw)			


Item		FX2N-48ER-UA1/UL
Classification		FX2N powered extension unit
Supply voltage		100 to 240V AC
Allowable supply voltage range		85 to 264V AC
Power fuse		250V 5 A 5φ x 20mm (0.79")
Rush current	100V AC	Up to 40 A, 5 ms or less
	200V AC	Up to 60 A, 5 ms or less
Power consumption		35 W (45 VA)
24V DC service power supply		None
Connection type		Removable terminal block (M3 screw)

15.2.1 Weight, accessories, etc.

Item	FX2N-32ER-ES/UL FX2N-32ET-ESS/UL	FX2N-32ER FX2N-32ES FX2N-32ET	FX2N-48ER-ES/UL FX2N-48ET-ESS/UL	FX2N-48ER FX2N-48ET	FX2N-48ER- UA1/UL
Weight	0.65 kg (1.43 lbs)		0.85 kg (1.87 lbs)		1.00 kg (2.2 lbs)
Accessories	<ul style="list-style-type: none">Terminal protective cover (2 pcs.) (Fitted to FX2N-32ER-ES/UL, FX2N-32ET-ESS/UL, FX2N-48ER-ES/UL, FX2N-48ET-ESS/UL and FX2N-48ER-UA1/UL)Extension cable (55 mm (2.16")) Optional extension cables (FX0N-30EC and FX0N-65EC) are available.Input/output number label				
Others	<ul style="list-style-type: none">The terminal block uses M3 terminal screws.Installation of the DIN46277 (35 mm (1.37") wide) rail or screws.				


15.2.2 Part names

1. Front

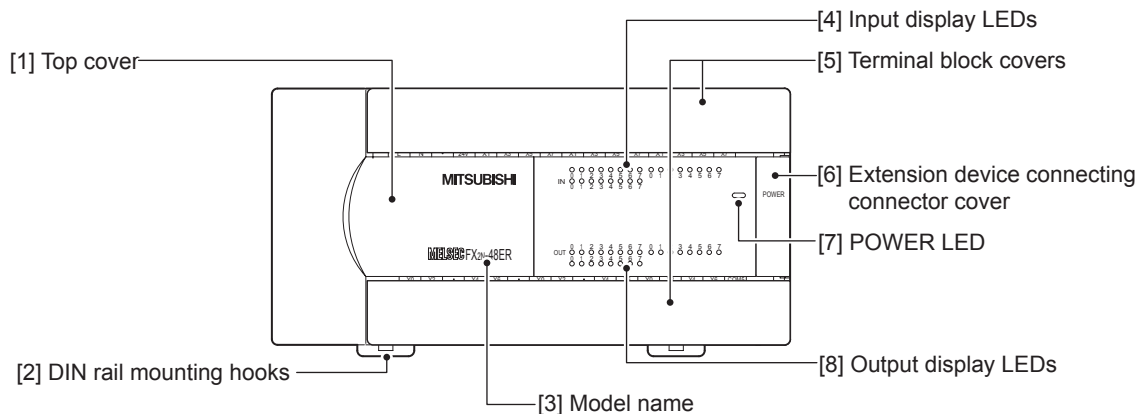

- | | |
|--|---|
| [1] Top cover | When adding this to the main unit, connect the supplied extension cable or the optional extension cable to the connector under this top cover. |
| [2] DIN rail mounting hooks (2 places) | The input/output powered extension unit can be installed on DIN rail (35 mm (1.38") wide). |
| [3] Model name (abbreviation) | The model name of the input/output powered extension unit is indicated. |
| [4] Input display LEDs (red) | When an input terminal (X0, X1, etc.) is turned on, the corresponding LED lamps are also turned on.
The input numbers change depending on input/output allocation. |
| [5] Terminal block covers | The covers can be opened about 90° for wiring.
Keep the covers closed while the PLC is running (the unit power is on). |
| [6] Extension device connecting connector cover | Connect the extension cable of input/output powered extension unit/block or special function unit/block to the extension device connecting connector under this cover.
FX _{2N} Series extension devices and FX _{0N} Series special function devices are compatible and can be connected.
→ For details on extension devices, refer to Chapter 15, Chapter 16 and Section 17.1. |
| [7] POWER LED (green) | The LED lamp is on (green) while the power supply terminal is on. |
| [8] Output display LEDs (red) | When an output terminal (Y0, Y1, etc.) is turned on, the corresponding LED lamps are also turned on. The output numbers change depending on input/output allocation. |


When the terminal block covers are open

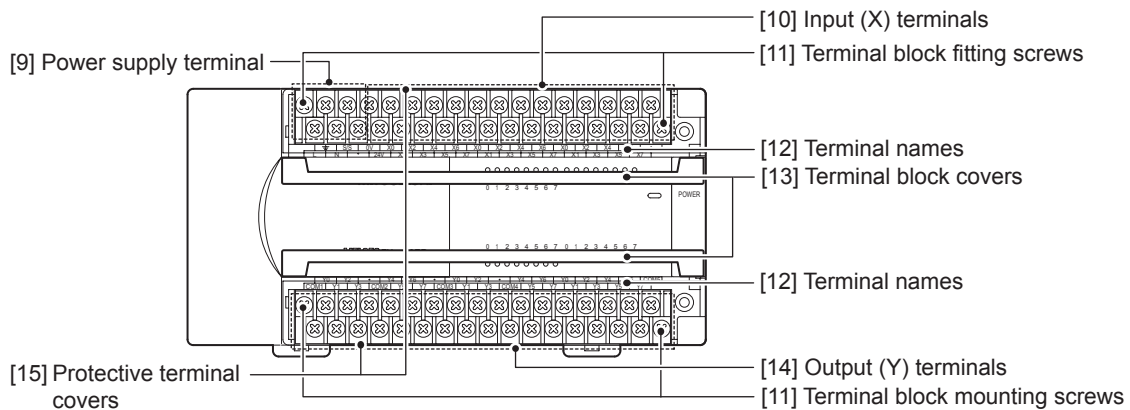

- | | |
|--|--|
| [9] Power supply terminal | Connect the power supply to the input/output powered extension unit at this terminal. |
| [10] Input (X) terminals | Wire switches and sensors to these terminals. |
| [11] Terminal block mounting screws | If the input/output powered extension unit must be replaced, loosen these screws to remove the upper part of the terminal block. |
| [12] Terminal names | The signal names for the power supply, input terminals and output terminals are shown. |
| [13] Terminal block covers | Protects the upper and lower stages of the terminal block. |
| [14] Output (Y) terminals | Wire the intended loads (contactors, solenoid valves, etc.) to these terminals. |
| [15] Protective terminal covers | A protective terminal cover (refer to the following drawing) is fitted to the lower stage of each terminal block to prevent fingers from touching terminals, thereby improving the safety. |



2. Side

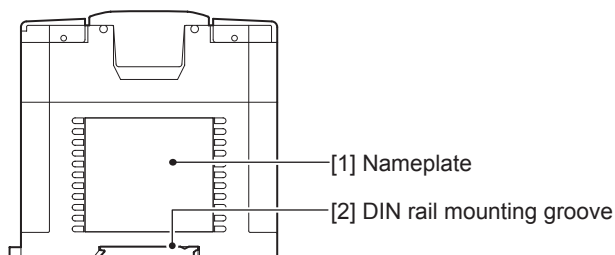

- | | |
|-------------------------------------|---|
| [1] Nameplate | The product model name, control number and power supply specifications are shown. |
| [2] DIN rail mounting groove | The unit can be installed on DIN46277 rail (35 mm (1.38") wide). |

15.3 FX_{2N}-32ER-ES/UL and FX_{2N}-48ER-ES/UL

15.3.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (for sink input [-common] and source input [+common])


Item		FX _{2N} -32ER-ES/UL	FX _{2N} -48ER-ES/UL
Number of input points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Input form		sink/source	
Input signal voltage		24V DC \pm 10%	
Input signal current		5 mA/24V DC	
Input impedance		4.3 k Ω	
Input sensitivity current	Input ON current	3.5 mA or more/24V DC	
	Input OFF current	1.5 mA or less	
Input response time		About 10 ms	
Input signal form		No-voltage contact input Sink: NPN open collector transistor Source: PNP open collector transistor	
Input circuit insulation		Insulation with photocoupler	
Indication of input operation		LED on panel is lit when there is input.	
Input circuit diagram		<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Sink input wiring</p> </div> <div style="text-align: center;"> <p>Source input wiring</p> </div> </div>	

3. Output specifications (relay output type)

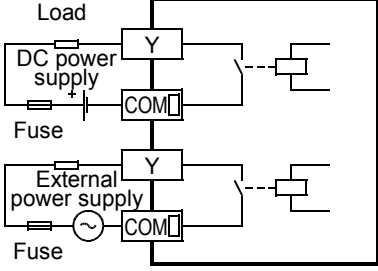Item		FX _{2N} -32ER-ES/UL	FX _{2N} -48ER-ES/UL
Number of output points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Output unit		Relay	
External power supply		30V DC or less 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)	
Output circuit insulation		Mechanical insulation	
Indication of output operation		When power is applied to relay coil, LED is lit.	
Max. load	Resistance load	2A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 8 A or less	2A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 8 A or less • 8 output points/common terminal: 8 A or less
	Inductive load	80 VA → For the approximate contact life, refer to Subsection 4.4.2. → For the cautions in external wiring, refer to Subsection 12.2.4.	
Open circuit leakage current		—	
Min. load		5V DC, 2 mA (reference value)	
Response time	OFF→ON	Approx. 10 ms	
	ON→OFF	Approx. 10 ms	
Output circuit diagram		 <p>A number (1 or more) is entered in [] of [COM []].</p>	


15.3.2 External dimensions

FX_{2N}-32ER-ES/UL

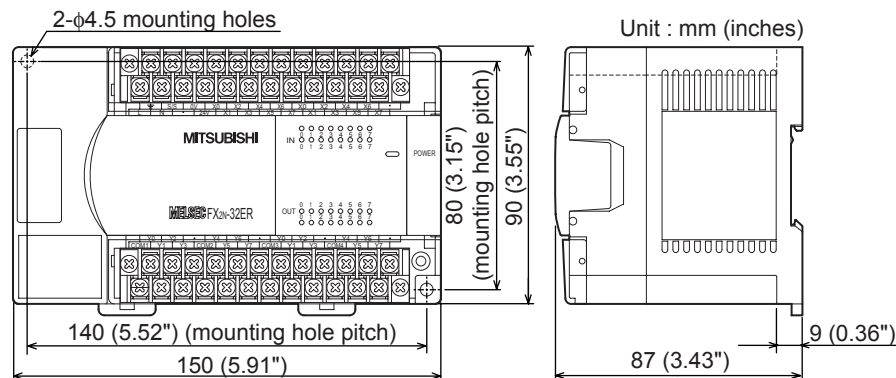

The terminal block uses M3 terminal screws.


FX_{2N}-48ER-ES/UL

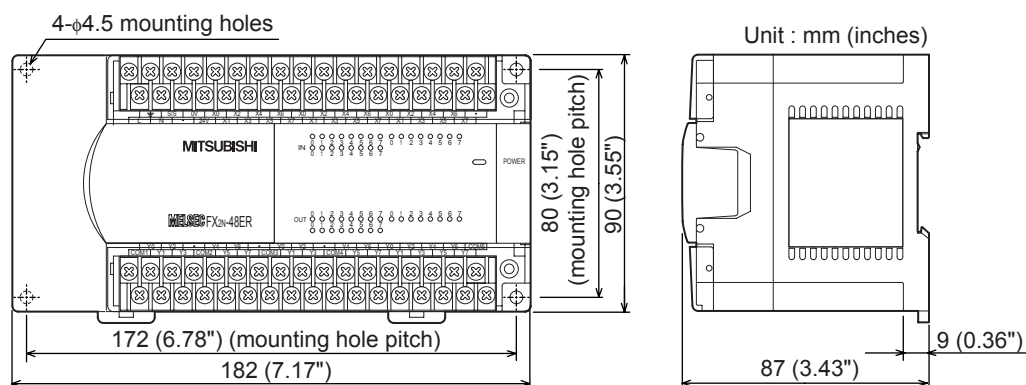


The terminal block uses M3 terminal screws.

15.3.3 Terminal layout

FX_{2N}-32ER-ES/UL

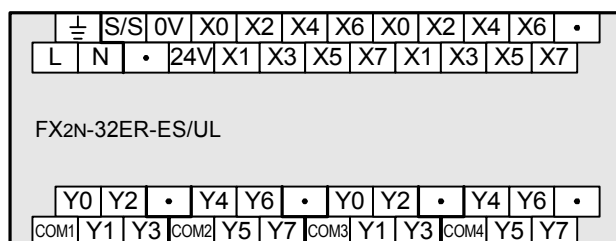


FX_{2N}-48ER-ES/UL

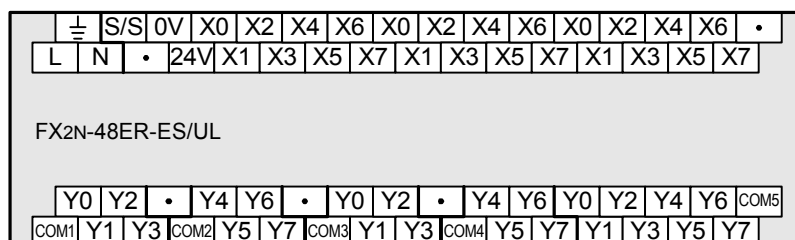


15.3.4 Examples of wiring

1. Input wiring


1) Sink input [-common]

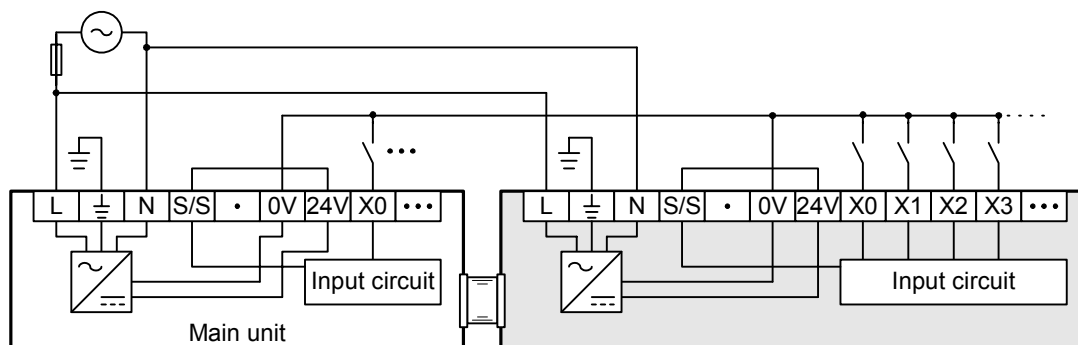

2) Source input [+common]

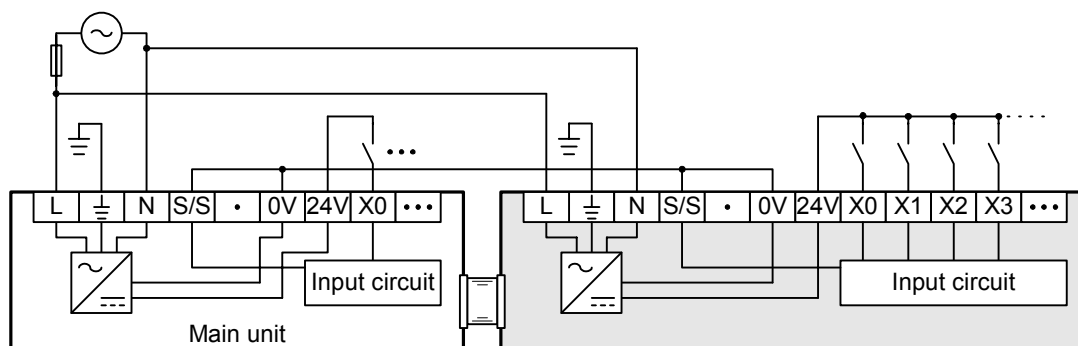

2. Output wiring

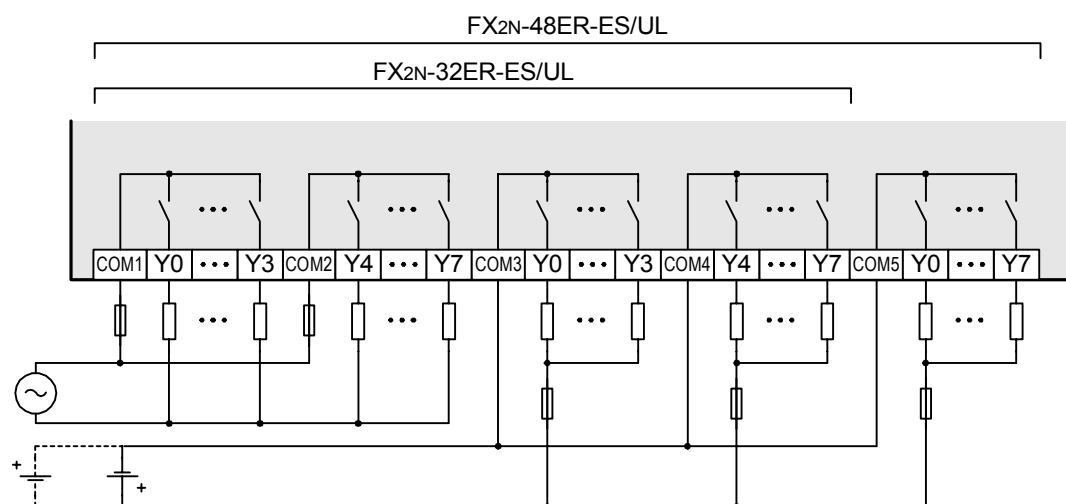

15.4 FX_{2N}-32ET-ESS/UL, FX_{2N}-48ET-ESS/UL

15.4.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (for sink input [-common] and source input [+common])


Item		FX _{2N} -32ET-ESS/UL	FX _{2N} -48ET-ESS/UL
Number of input points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Input form		sink/source	
Input signal voltage		24V DC \pm 10%	
Input signal current		5 mA/24V DC	
Input impedance		4.3 k Ω	
Input sensitivity current	Input ON current	3.5 mA or more/24V DC	
	Input OFF current	1.5 mA or less	
Input response time		About 10 ms	
Input signal form		No-voltage contact input Sink: NPN open collector transistor Source: PNP open collector transistor	
Input circuit insulation		Insulation with photocoupler	
Indication of input operation		LED on panel is lit when there is input.	
Input circuit diagram		<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Sink input wiring</p> </div> <div style="text-align: center;"> <p>Source input wiring</p> </div> </div>	

3. Output specifications (transistor output type)

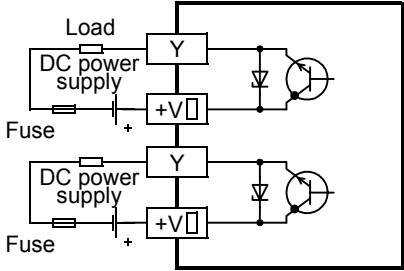Item		FX2N-32ET-ESS/UL	FX2N-48ET-ESS/UL
Number of output points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Output unit/type		Transistor/source output	
External power supply		5 to 30V DC	
Output circuit insulation		Insulation with photocoupler	
Indication of output operation		When photocoupler is driven, LED on panel is lit.	
Max. load	Resistance load	0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less	0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less • 8 output points/common terminal: 1.6 A or less
	Inductive load	12 W/24V DC	
Open circuit leakage current		0.1 mA/30 A DC	
Min. load		—	
Response time	OFF→ON	0.2 ms or less/100 mA (at 24V DC)	
	ON→OFF	0.2 ms or less/100 mA (at 24V DC)	
Output circuit diagram		 <p>A number (0 or more) is entered in [] of [+V []].</p>	


15.4.2 External dimensions

FX2N-32ET-ESS/UL

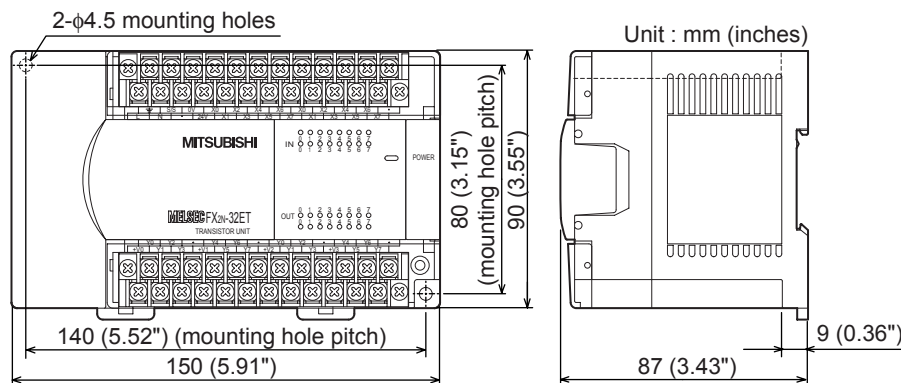

The terminal block uses M3 terminal screws.

FX2N-48ET-ESS/UL

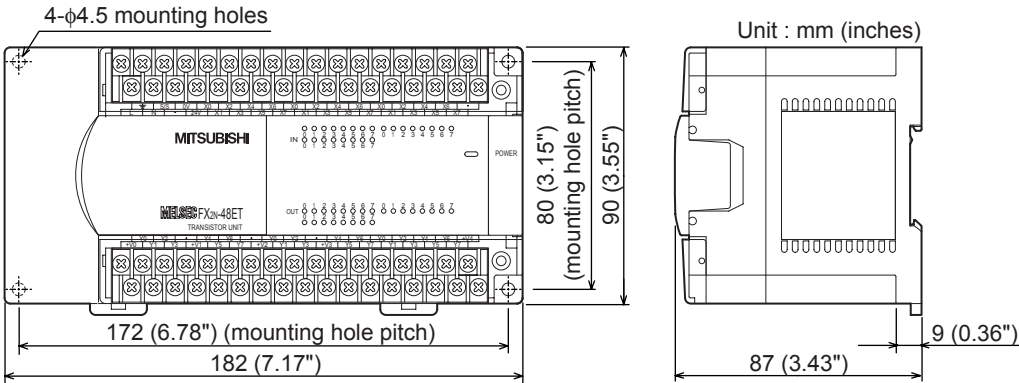

15.4.3 Terminal layout

FX2N-32ET-ESS/UL

$\frac{1}{2}$	S/S	0V	X0	X2	X4	X6	X0	X2	X4	X6	.
L	N	.	24V	X1	X3	X5	X7	X1	X3	X5	X7
FX2N-32ET-ESS/UL											
Y0	Y2	.	Y4	Y6	.	Y0	Y2	.	Y4	Y6	.
+V0	Y1	Y3	+V1	Y5	Y7	+V2	Y1	Y3	+V3	Y5	Y7


FX2N-48ET-ESS/UL

$\frac{1}{2}$	S/S	0V	X0	X2	X4	X6	X0	X2	X4	X6	X0	X2	X4	X6	.
L	N	.	24V	X1	X3	X5	X7	X1	X3	X5	X7	X1	X3	X5	X7
FX2N-48ET-ESS/UL															
Y0	Y2	.	Y4	Y6	.	Y0	Y2	.	Y4	Y6	Y0	Y2	Y4	Y6	+V4
+V0	Y1	Y3	+V1	Y5	Y7	+V2	Y1	Y3	+V3	Y5	Y7	Y1	Y3	Y5	Y7


15.4.4 Examples of wiring

1. Input wiring


1) Sink input [-common]

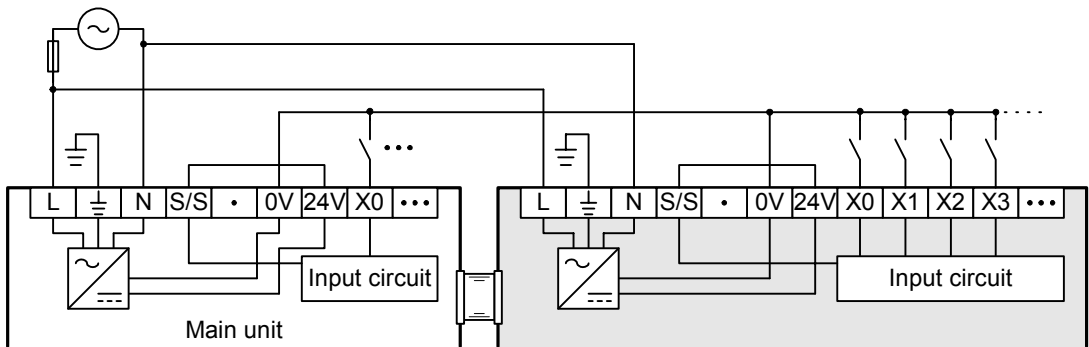

2) Source input [+common]

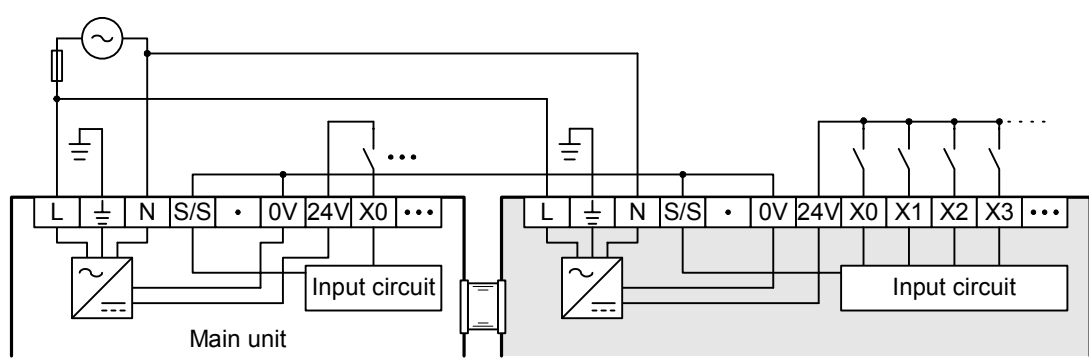

2. Output wiring

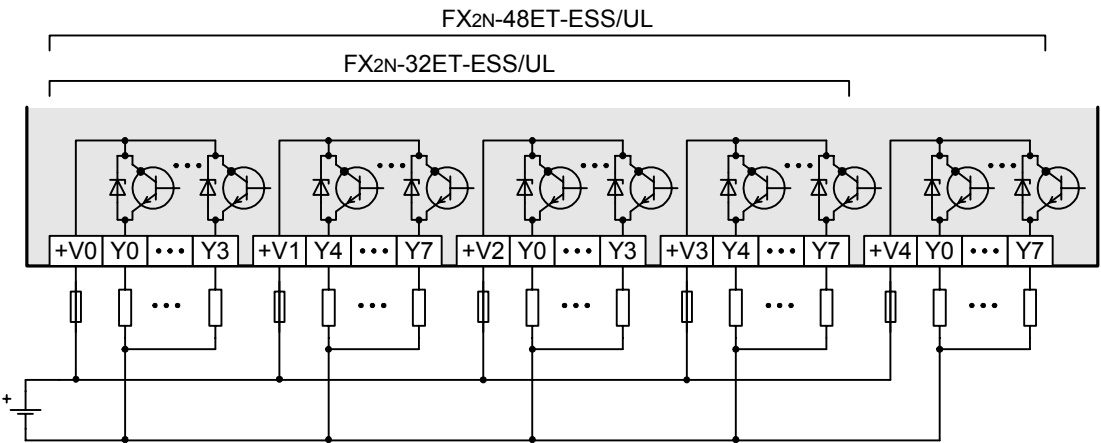

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

15.5 FX_{2N}-32ER, FX_{2N}-48ER

15.5.1 Product specifications


The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (sink input [-common])

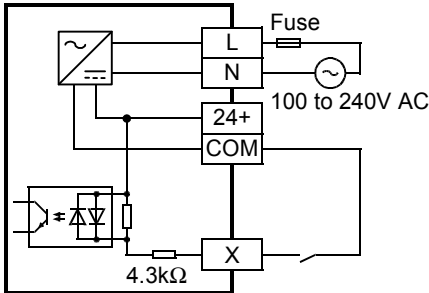
Item		FX _{2N} -32ER	FX _{2N} -48ER
Number of input points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Input form		Sink	
Input signal voltage		24V DC \pm 10%	
Input signal current		5 mA/24V DC	
Input impedance		4.3 k Ω	
Input sensitivity current	Input ON current	3.5 mA or more/24V DC	
	Input OFF current	1.5 mA or less	
Input response time		About 10 ms	
Input signal form		No-voltage contact input or NPN open collector transistor	
Input circuit insulation		Insulation with photocoupler	
Indication of input operation		LED on panel is lit when there is input.	
Input circuit diagram		<p>Sink input wiring</p> 	

3. Output specifications (relay output type)

Item		FX2N-32ER	FX2N-48ER
Number of output points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Output unit		Relay	
External power supply		250V AC/30V DC or less	
Output circuit insulation		Mechanical insulation	
Indication of output operation		When power is applied to relay coil, LED on panel is lit.	
Max. load	Resistance load	2 A/point The total load current per common terminal should be the following value. • 8 output points/common terminal: 8 A or less	2 A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 8 A or less • 8 output points/common terminal: 8 A or less
	Inductive load	80 VA → For the approximate contact life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4.	
Open circuit leakage current		—	
Min. load		5V DC, 2 mA (reference value)	
Response time	OFF→ON	Approx. 10 ms	
	ON→OFF	Approx. 10 ms	
Output circuit diagram		<p>A number (1 or more) is entered in [] of [COM].</p>	


15.5.2 External dimensions

FX2N-32ER

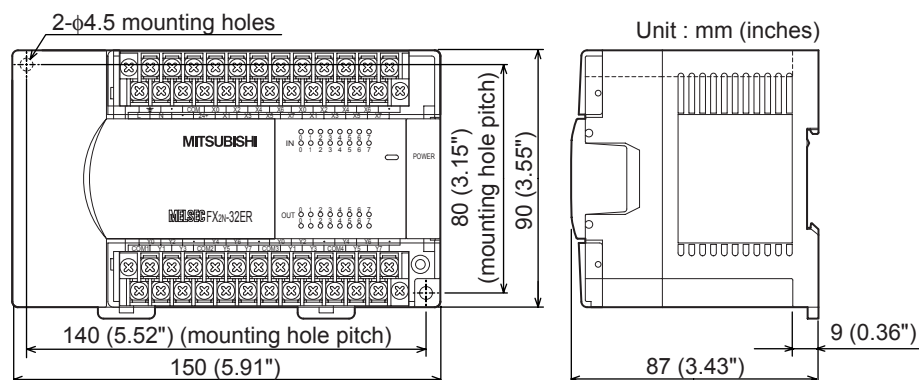


The terminal block uses M3 terminal screws.

FX_{2N}-48ER

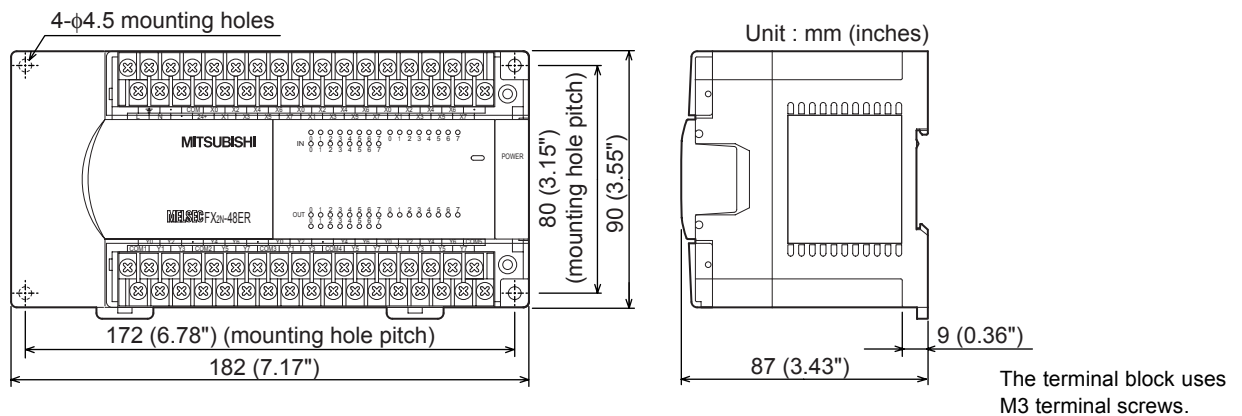

15.5.3 Terminal layout

FX_{2N}-32ER

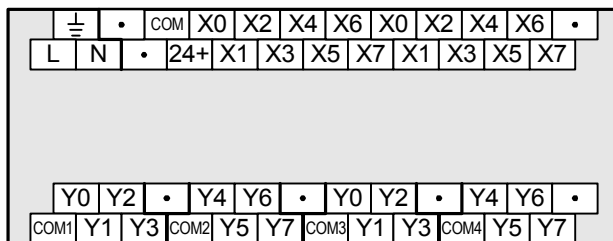


FX_{2N}-48ER




15.5.4 Examples of wiring

1. Input wiring

1) Sink input [-common]

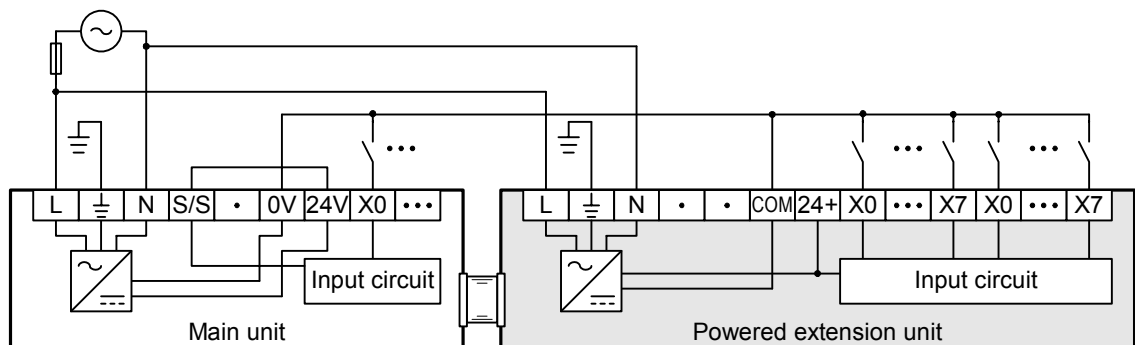

2. Output wiring

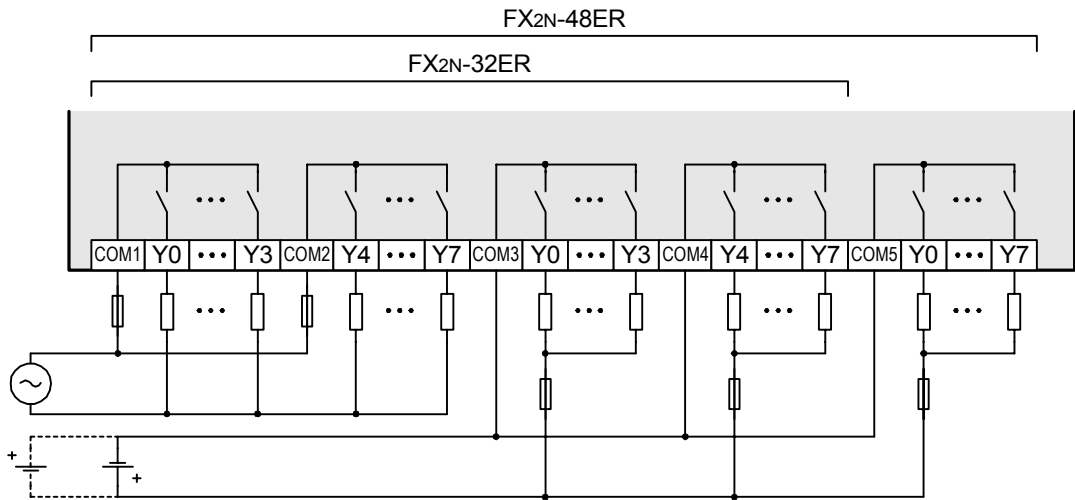

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

15.6 FX_{2N}-32ET, FX_{2N}-48ET

15.6.1 Product specifications


The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (sink input [-common])

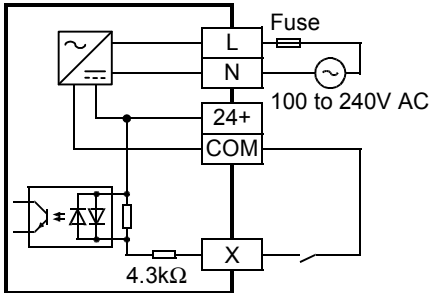
Item		FX _{2N} -32ET	FX _{2N} -48ET
Number of input points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Input form		Sink	
Input signal voltage		24V DC \pm 10%	
Input signal current		5 mA/24V DC	
Input impedance		4.3 k Ω	
Input sensitivity current	Input ON current	3.5 mA or more/24V DC	
	Input OFF current	1.5 mA or less	
Input response time		About 10 ms	
Input signal form		No-voltage contact input or NPN open collector transistor	
Input circuit insulation		Insulation with photocoupler	
Indication of input operation		LED on panel is lit when there is input.	
Input circuit diagram		<p>Sink input wiring</p> 	

3. Output specifications (transistor output type)

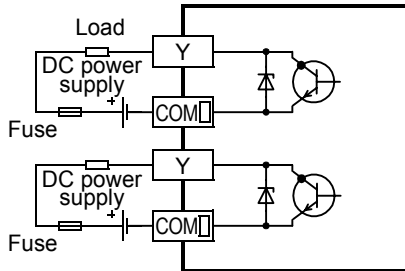
Item		FX2N-32ET	FX2N-48ET
Number of output points		16 points	24 points
Connection type		Removable terminal block (M3 screw)	
Output unit/type		Transistor/sink output	
External power supply		5 to 30V DC	
Output circuit insulation		Insulation with photocoupler	
Indication of output operation		When photocoupler is driven, LED on panel is lit.	
Max. load	Resistance load	0.5A/point The total load current per common terminal should be the following value. • 8 output points/common terminal: 1.6 A or less	0.5A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less • 8 output points/common terminal: 1.6 A or less
	Inductive load	12 W/24V DC	
Open circuit leakage current		0.1 mA or less/30V DC	
Min. load		—	
Response time	OFF→ON	0.2 ms or less/100 mA (at 24V DC)	
	ON→OFF	0.2 ms or less/100 mA (at 24V DC)	
Output circuit diagram		 <p>A number (1 or more) is entered in □ of [COM □].</p>	

15.6.2 External dimensions

FX2N-32ET

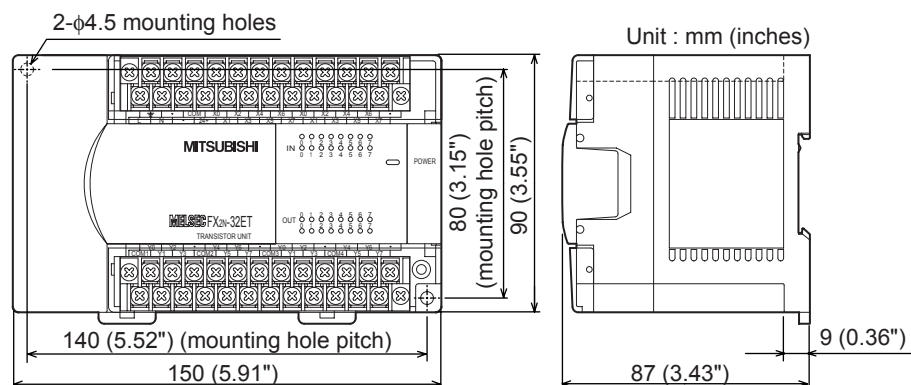


The terminal block uses M3 terminal screws.

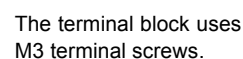


15.6.4 Examples of wiring

1. Input wiring

1) Sink input [-common]

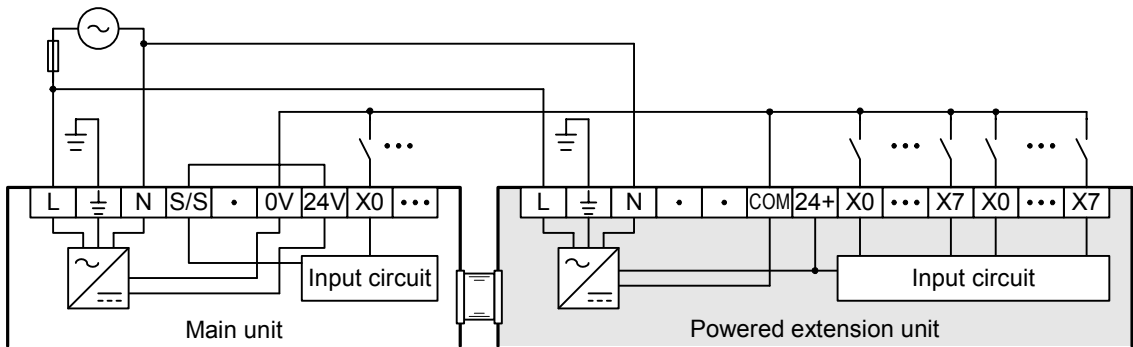

2. Output wiring

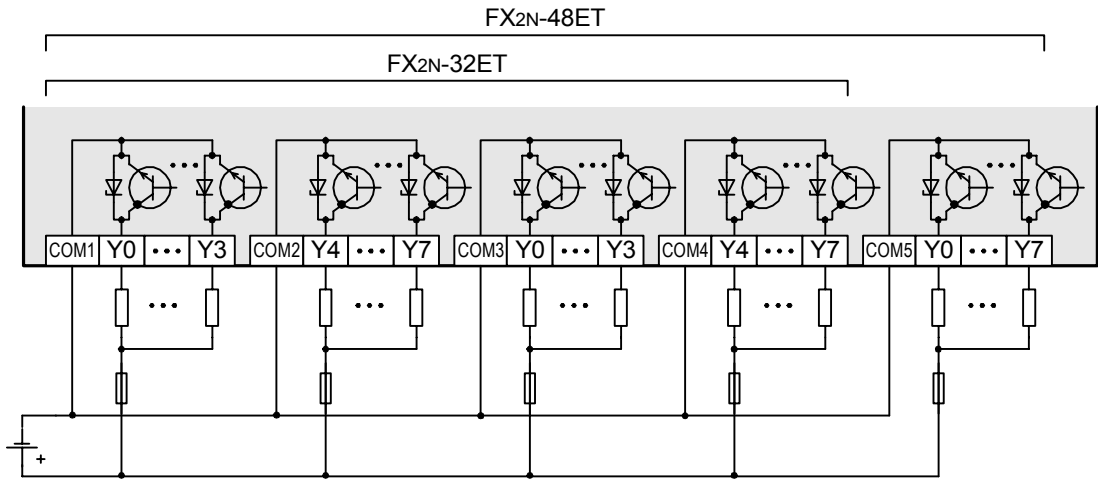

15.7 FX_{2N}-32ES

15.7.1 Product specifications


The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.


1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (sink input [-common])

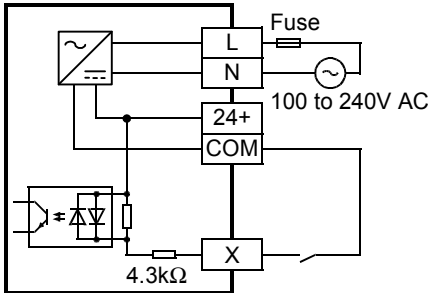
Item		FX _{2N} -32ES
Number of input points		16 points
Connection type		Removable terminal block (M3 screw)
Input form		Sink
Input signal voltage		24V DC \pm 10%
Input signal current		5 mA/24V DC
Input impedance		4.3 k Ω
Input sensitivity current	Input ON current	3.5 mA or more/24V DC
	Input OFF current	1.5 mA or less
Input response time		About 10 ms
Input signal form		No-voltage contact input or NPN open collector transistor
Input circuit insulation		Insulation with photocoupler
Indication of input operation		LED on panel is lit when there is input.
Input circuit diagram		<p>Sink input wiring</p> 

3. Output specifications (triac output type)

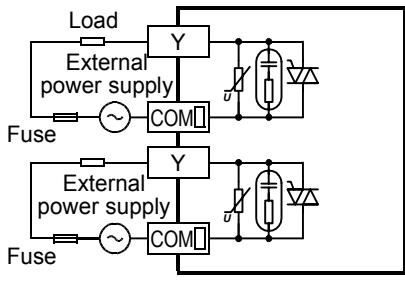Item		FX2N-32ES
Number of output points		16 points
Connection type		Removable terminal block (M3 screw)
Output unit		Triac output (SSR)
External power supply		85 to 242V AC
Output circuit insulation		Insulation with photo-thyristor
Indication of output operation		When photo-thyristor is driven, LED on panel is lit.
Max. load	Resistance load	0.3A/point The total load current per common terminal should be the following value. • 4 output points/common terminal: 0.8 A or less
	Inductive load	15 VA/100V AC, 30 VA/200V AC
Open circuit leakage current		1 mA/100V AC, 2 mA/200V AC
Min. load		0.4 VA/100V AC, 1.6 VA/200V AC
Response time	OFF→ON	1 ms or less
	ON→OFF	10 ms or less
Output circuit diagram		 <p>A number (1 or more) is entered in □ of [COM □].</p>

15.7.2 External dimensions


FX2N-32ES

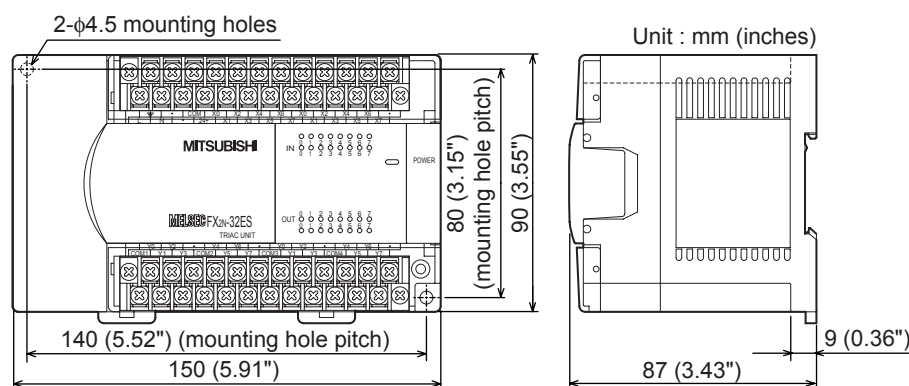

The terminal block uses M3 terminal screws.

15.7.3 Terminal layout


FX2N-32ES

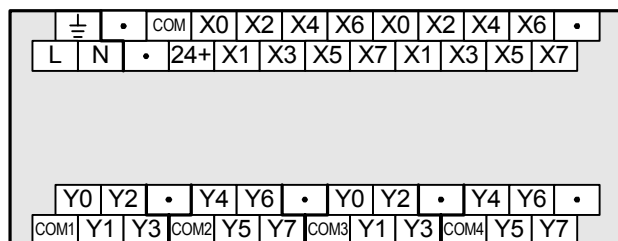


15.7.4 Examples of Wiring

1. Input wiring

1) Sink input [-common]

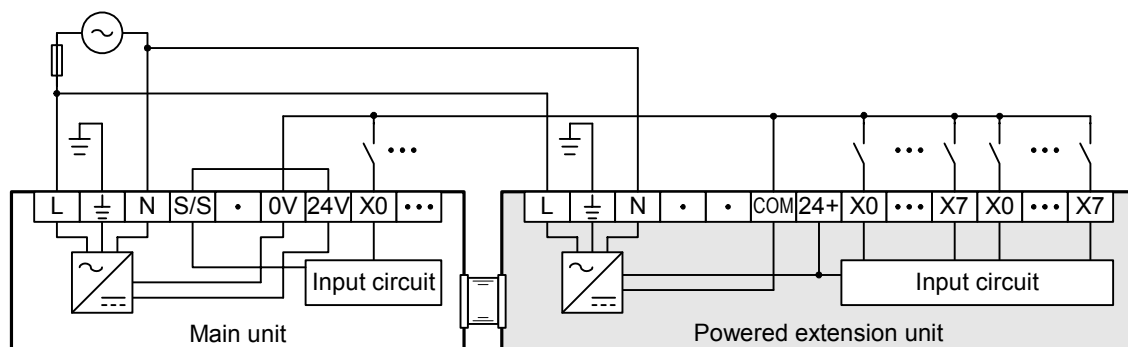

2. Output wiring

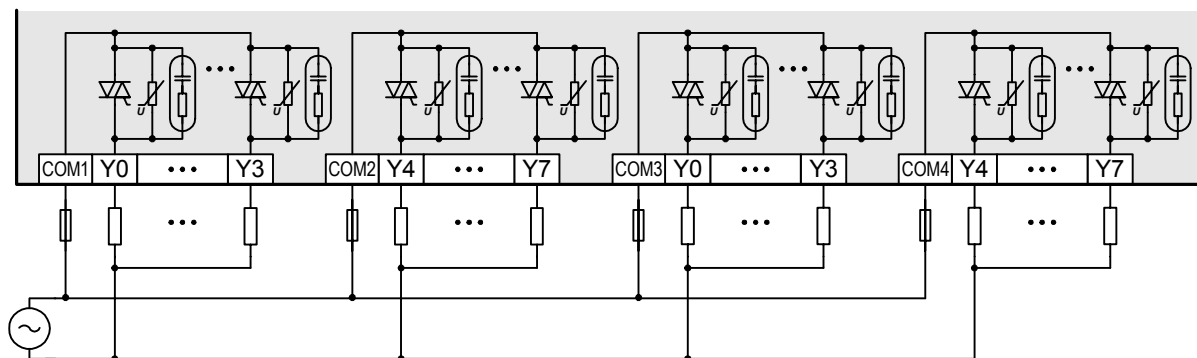

15.8 FX2N-48ER-UA1/UL

15.8.1 Product specifications

The generic specifications are the same as those for the main unit.

→ For the generic specifications, refer to Section 4.1.

1. Power supply specifications

→ For the power supply specifications, refer to Section 15.2.

2. Input specifications (100V AC Input)

Item		FX2N-48ER-UA1/UL
Number of input points		24 points
Connection type		Removable terminal block (M3 screw)
Input form		AC input
Input signal voltage		100 to 120V AC +10%,-15% 50/60 Hz
Input signal current		4.7 mA/100V AC 50 Hz (70% or less when turned on simultaneously) 6.2 mA/110V AC 60 Hz (70% or less when turned on simultaneously)
Input impedance		Approx. 21 kΩ/50 Hz Approx. 18 kΩ/60 Hz
Input sensitivity current	Input ON current	3.8 mA or more/80V AC
	Input OFF current	1.7 mA or less/80V AC
Input response time		Approx. 25 to 30 ms
Input signal form		Contact input
Input circuit insulation		Photocoupler insulation
Indication of input operation		LED on panel is lit when there is input.
Input circuit diagram		<p>*1 Input impedance</p>

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20


Memory
Cassette

3. Output specifications (relay output type)

Item		FX _{2N} -48ER-UA1/UL
Number of output points		24 points
Connection type		Removable terminal block (M3 screw)
Output unit		Relay
External power supply		30V DC or less 240V AC or less (250V AC or less when the unit does not comply with CE, UL or cUL standards)
Output circuit insulation		Mechanical insulation
Indication of output operation		When power is applied to relay coil, LED on panel lights.
Max. load	Resistance load	2A/point The total load current of resistance loads per common terminal should be the following value. <ul style="list-style-type: none"> 4 output points/common terminal: 8 A or less 8 output points/common terminal: 8 A or less
	Inductive load	80 VA → For the approximate contact life, refer to Subsection 4.4.2. → For cautions on external wiring, refer to Subsection 12.2.4.
Open circuit leakage current		—
Min. load		5V DC, 2 mA (reference value)
Response time	OFF→ON	Approx. 10 ms
	ON→OFF	Approx. 10 ms
Output circuit diagram		<p>A number (1 or more) is entered in [] of [COM] [].</p>

15.8.2 External dimensions


FX_{2N}-48ER-UA1/UL

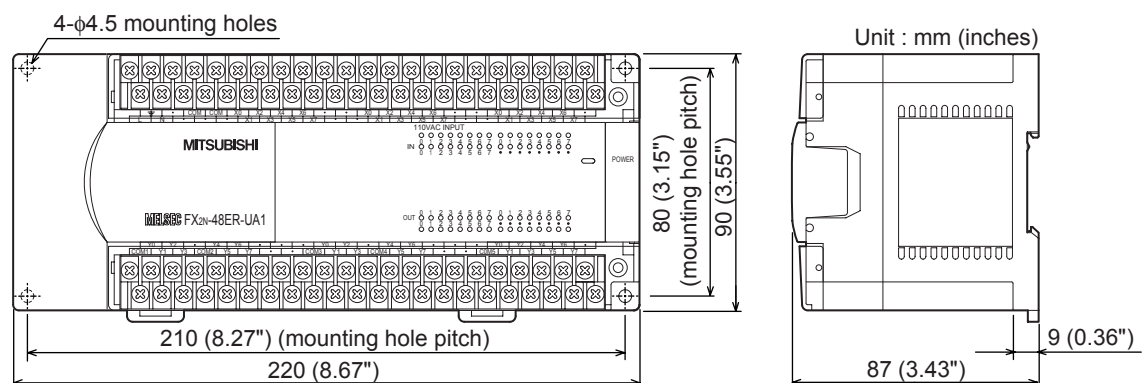

The terminal block uses M3 terminal screws.

15.8.3 Terminal layout


FX2N-48ER-UA1/UL

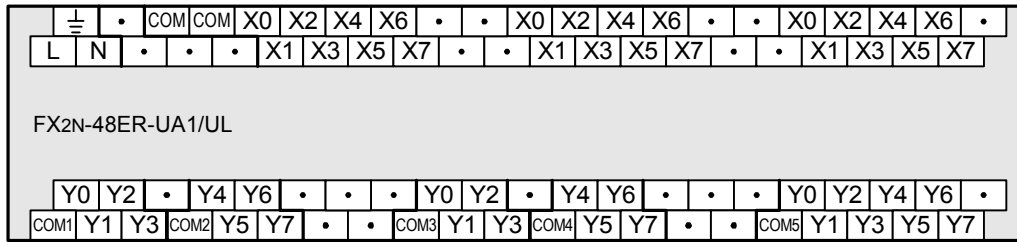


15.8.4 Examples of wiring

1. Input wiring

1) 100V AC Input

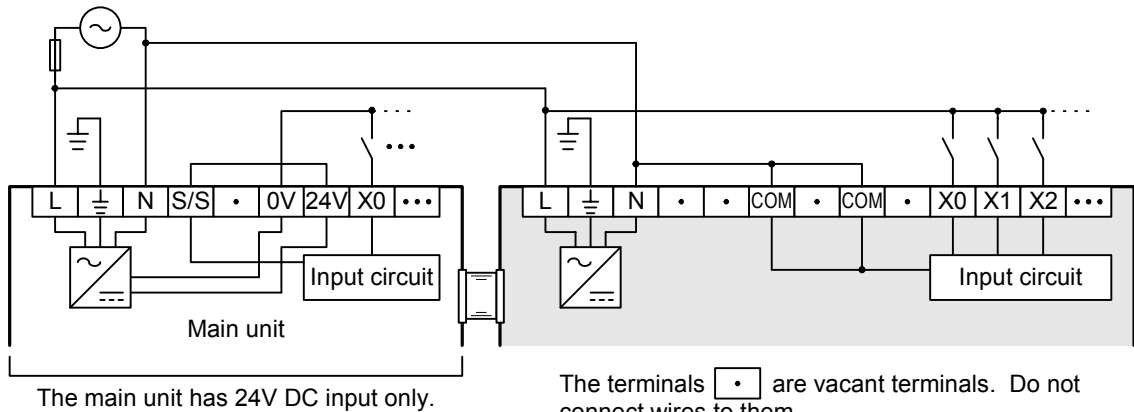

2. Output wiring

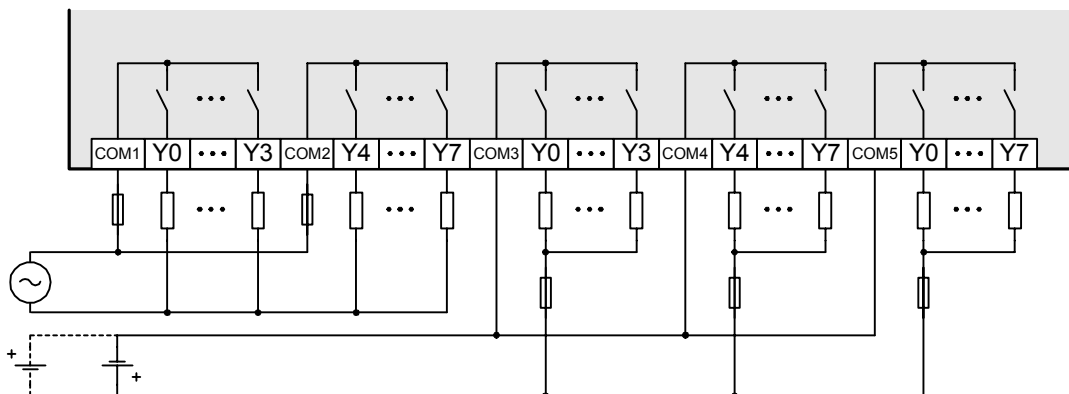

16. FX2N-16E*-(Input/Output Extension Blocks)

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100 mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.

WIRING PRECAUTIONS



DANGER

- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



CAUTION

- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Perform wiring properly to the FX0N/FX2N Series extension equipment of the terminal block type in accordance with the following precautions.
Failure to do so may cause electric shock, short-circuit, wire breakage, or damages to the product.
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N•m.


16.1 Outline

Connect input/output extension blocks to the PLC to add more input/output points. 16 points can be added by an input/output extension block.

Since the power is supplied from the main unit, it is not necessary to prepare another power supply unit for each input/output extension block.

16.1.1 Product type

There are various types of input/output extension blocks. Select optimum blocks considering the input type, output type, and connection unit of your system.

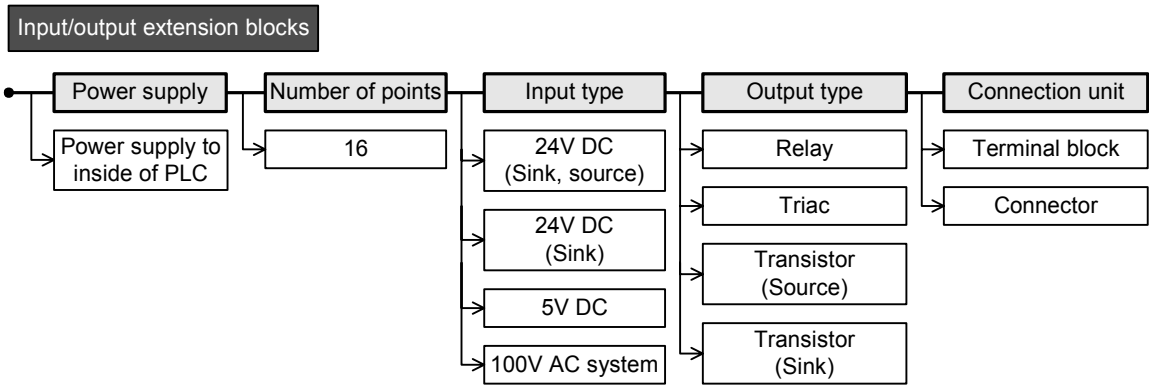

16.1.2 List of products

1. For input extension

[Sink] :Sink [-common], **[Source]** :Source [+common]

Model	Input			Output			Connection unit
	Type	Number of points	Common system	Type	Number of points	Common system	
Common to both sink and source inputs							
FX2N-16EX-ES/UL	24V DC	16	<div><div>Sink</div><div>Source</div></div>	—	—	—	Terminal block
Dedicated to sink input only							
FX2N-16EX	24V DC	16	<div>Sink</div>	—	—	—	Terminal block
FX2N-16EX-C	24V DC	16	<div>Sink</div>	—	—	—	Connector
FX2N-16EXL-C	5V DC	16	<div>Sink</div>	—	—	—	Connector

2. For output extension

[Sink] :Sink [-common], **[Source]** :Source [+common]

Model	Input			Output			Connection unit
	Type	Number of points	Common system	Type	Number of points	Common system	
Dedicated to source output only							
FX2N-16EYR-ES/UL	—	—	—	Relay	16	—	Terminal block
FX2N-16EYT-ESS/UL	—	—	—	Transistor	16	<div>Source</div>	Terminal block
Dedicated to sink output only							
FX2N-16EYR	—	—	—	Relay	16	—	Terminal block
FX2N-16EYS	—	—	—	Triac(SSR)	16	—	Terminal block
FX2N-16EYT	—	—	—	Transistor	16	<div>Sink</div>	Terminal block
FX2N-16EYT-C	—	—	—	Transistor	16	<div>Sink</div>	Connector

16.2 FX2N-16EX-ES/UL (24V DC Sink/Source Input)

16.2.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

1. Power supply specifications


Item	FX2N-16EX-ES/UL
Product type	FX2N extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)

2. Weight and Other specifications

Item	FX2N-16EX-ES/UL
MASS (Weight)	0.3 kg (0.66lbs)
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.


3. Input specifications (common to both sink and source inputs)

Item		FX2N-16EX-ES/UL
Input points		16 points
Connection unit		Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit.
Input type		sink/source
Input signal voltage		24V DC ± 10%
Input signal current		5 mA/24V DC
Input impedance		4.3kΩ
Input sensitivity current	Input-ON current	3.5 mA or more at 24V DC
	Input-OFF current	1.5 mA or less
Input response time		Approx. 10 ms
Input signal type		Sink input: No-voltage contact input, NPN open collector transistor Source input: No-voltage contact input, PNP open collector transistor
Input circuit insulation		Photocoupler insulation
Indication of input operation		LED on panel lights when input.

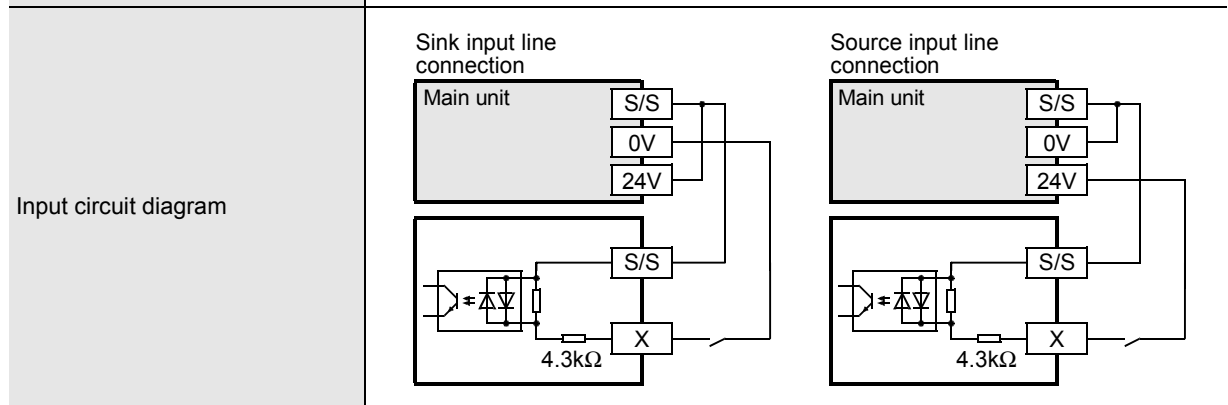


16.2.2 Parts identification and terminal arrangement

When an input (X) number is assigned, 8 points on the upper side will be used for the lower input numbers, and 8 points on the lower side will be used for the higher input numbers.

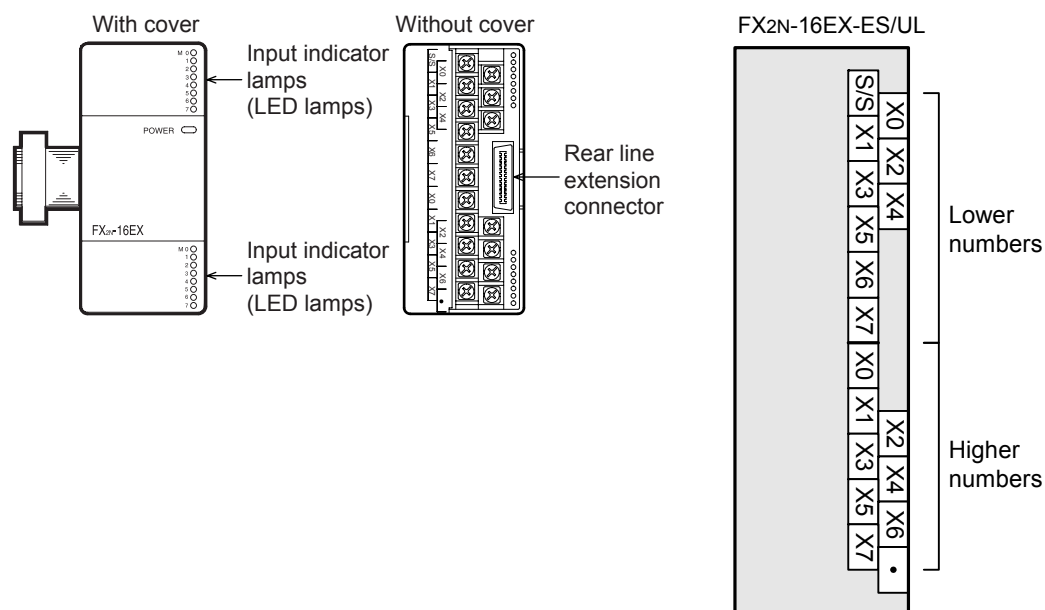


16.2.3 External dimensions

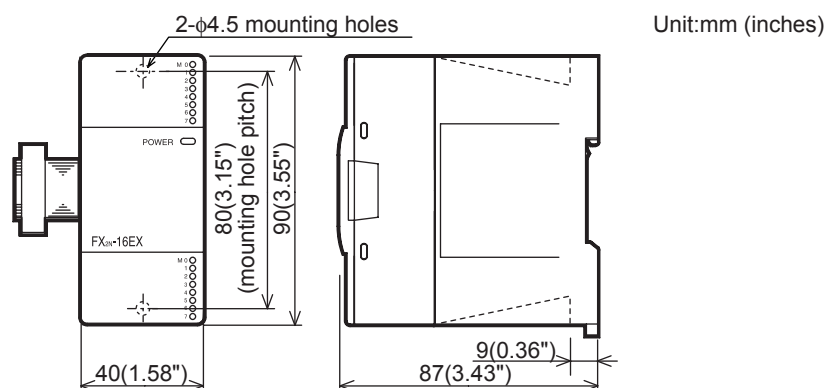


16.2.4 Example of terminal arrangement

1. Wiring on input side

Sink input

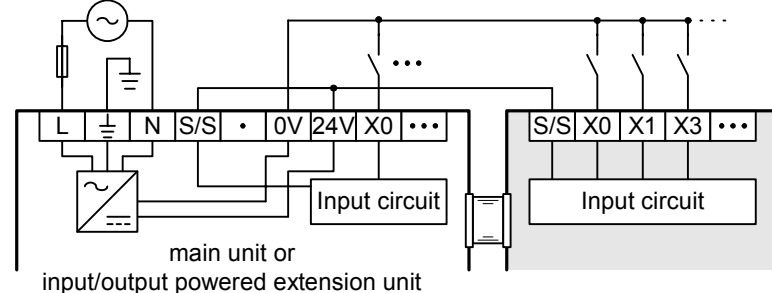

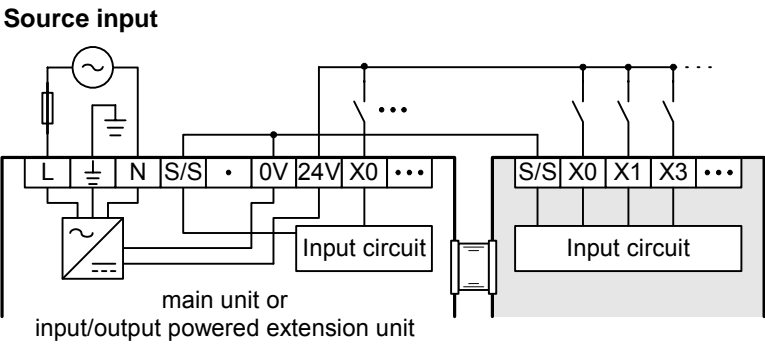

16.3 FX2N-16EX and FX2N-16EX-C (24V DC Input: 16 Points)

16.3.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX2N-16EX	FX2N-16EX-C
Product type	FX2N extension block	FX2N connector type extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)	

2. Weight and Other specifications

Item	FX2N-16EX	FX2N-16EX-C
MASS (Weight)	0.3 kg (0.66lbs)	
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. 	


3. Input specifications

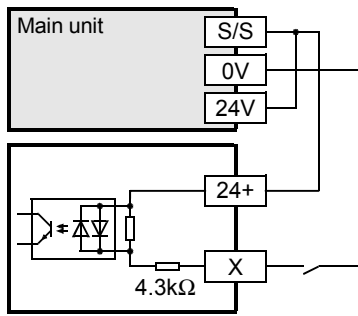Item		FX2N-16EX	FX2N-16EX-C
Input points		16 points	
Connection unit		Vertical terminal block (M3 screws) / For a detailed description of wiring, refer to the input line connection diagram of the main unit.	Connector terminal block
Input type		Sink	
Input signal voltage		24V DC \pm 10%	
Input signal current		5 mA/24V DC	
Input impedance		4.3k Ω	
Input sensitivity current	Input-ON current	3.5 mA or more at 24V DC	
	Input-OFF current	1.5 mA or less	
Input response time		Approx. 10 ms	
Input signal type		No-voltage contact input NPN open collector transistor	
Input circuit insulation		Photo-coupler insulation	
Indication of input operation		LED on panel lights when input.	
Input circuit diagram		<p>Sink input line connection</p> 	

16.3.2 Parts identification and terminal arrangement


FX2N-16EX

When an input (X) number is assigned, 8 points on the upper side will be used for the lower input numbers, and 8 points on the lower side will be used for the higher input numbers.

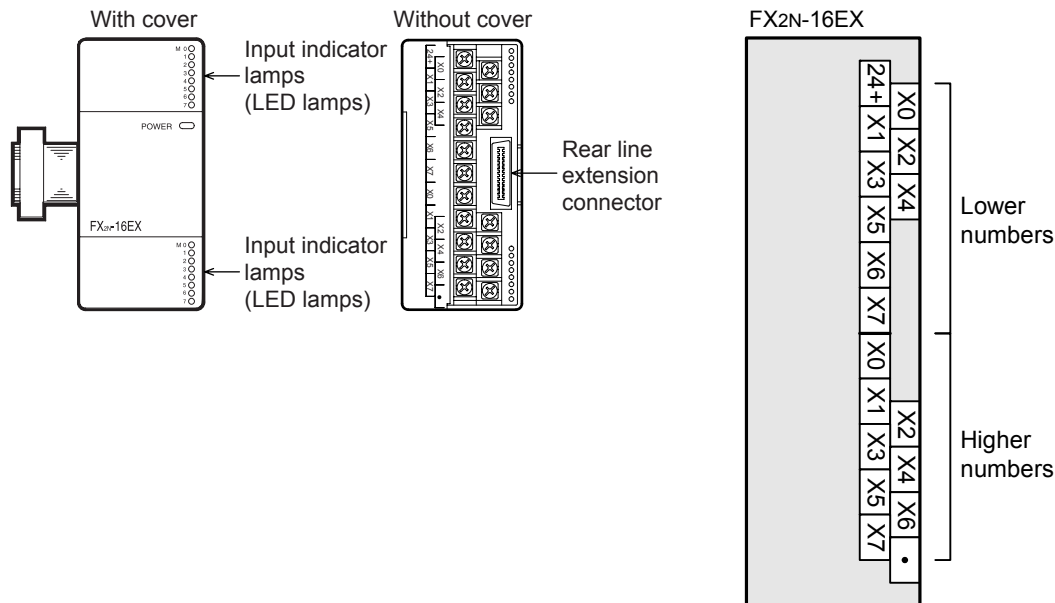


FX2N-16EX-C

When an input (X) number is assigned, 8 points on side A will be used for the lower input numbers, and 8 points on side B will be used for the higher input numbers.

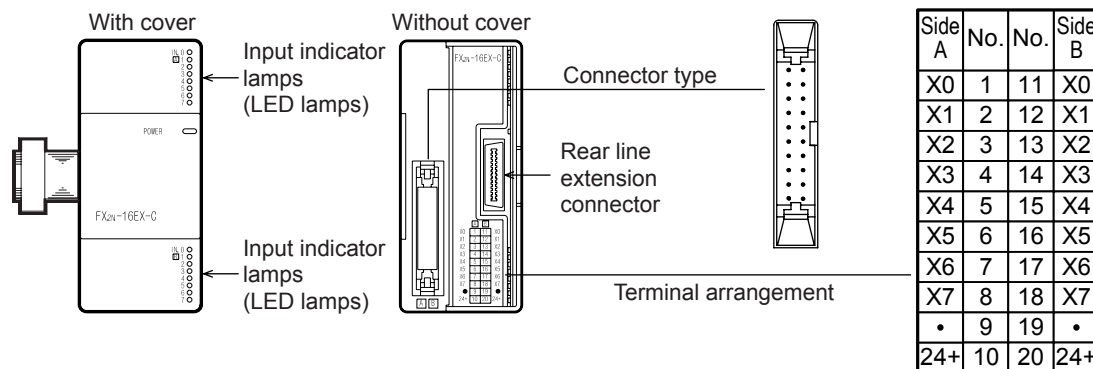


16.3.3 External dimensions

FX2N-16EX

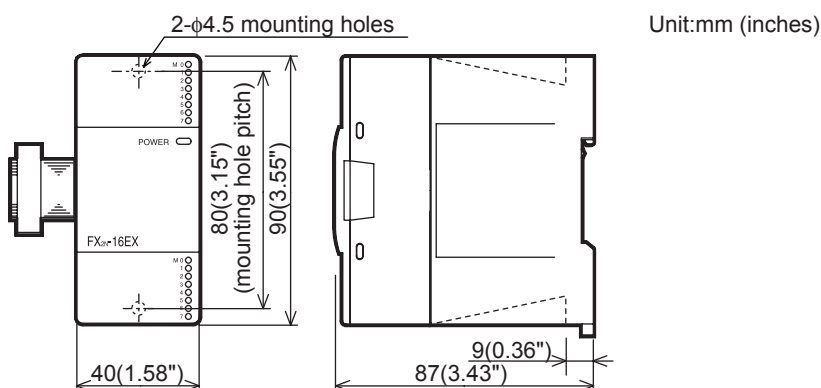


FX2N-16EX-C

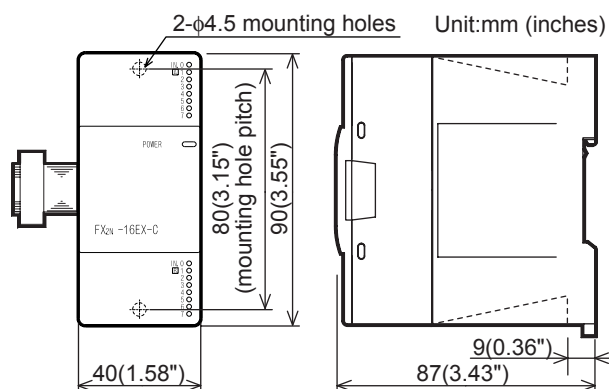


16.3.4 Example of wiring

1. Wiring on input side

Sink input

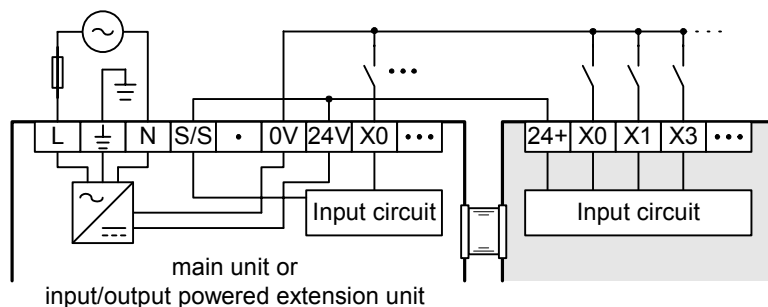

How to connect connector (FX2N-16EX-C)

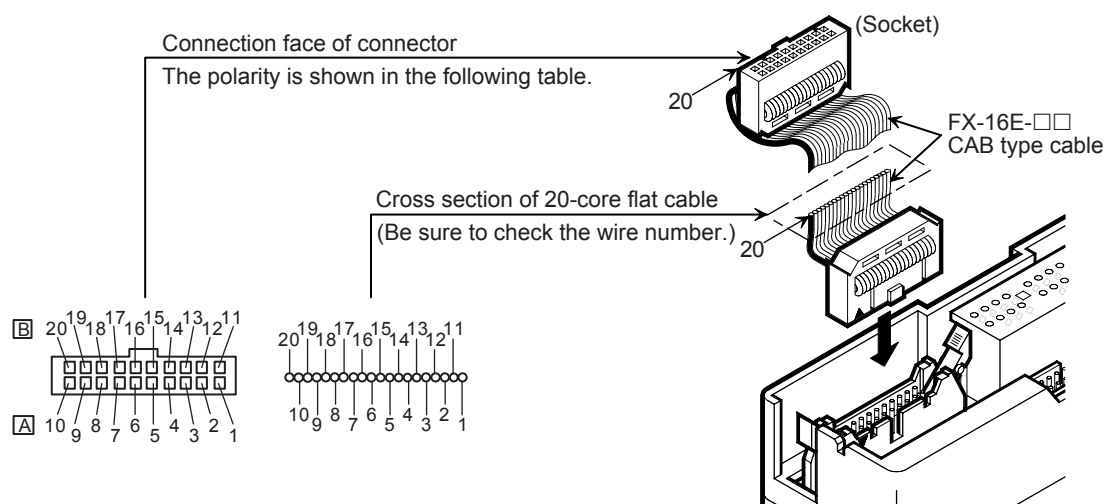

Side B	24+	•	X7	X6	X5	X4	X3	X2	X1	X0
Side A	24+	•	X7	X6	X5	X4	X3	X2	X1	X0

Side B is for the higher input numbers,
and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

16.4 FX2N-16EXL-C (5V DC Input: 16 Points)

16.4.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX2N-16EXL-C
Product type	FX2N connector type extension block for each application
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)


2. Weight and Other specifications

Item	FX2N-16EXL-C
MASS (Weight)	0.3 kg (0.66lbs)
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.

3. Input specifications

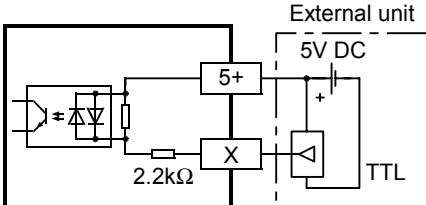Item		FX2N-16EXL-C
Input points		16 points
Connection unit		Connector terminal block
Input type		TTL level
Input signal voltage		5V DC \pm 5%
Input signal current		20 mA (at 5V DC), maximum
Input impedance		2.2k Ω
Input sensitivity current	ON(Low)	1 mA or more
	OFF(High)	0.4 mA or less
Input sensitivity voltage	ON(Low)	1.5V DC or less
	OFF(High)	3.5V DC or more
Input response time	OFF \rightarrow ON (High \rightarrow Low)	1 ms +1 ms, -0.5 ms
	ON \rightarrow OFF (Low \rightarrow High)	1 ms +1 ms, -0.5 ms
Input signal type		TTL input
Input circuit insulation		Photo-coupler insulation
Indication of input operation		LED on panel lights when input.
Input circuit diagram		

How to connect connector

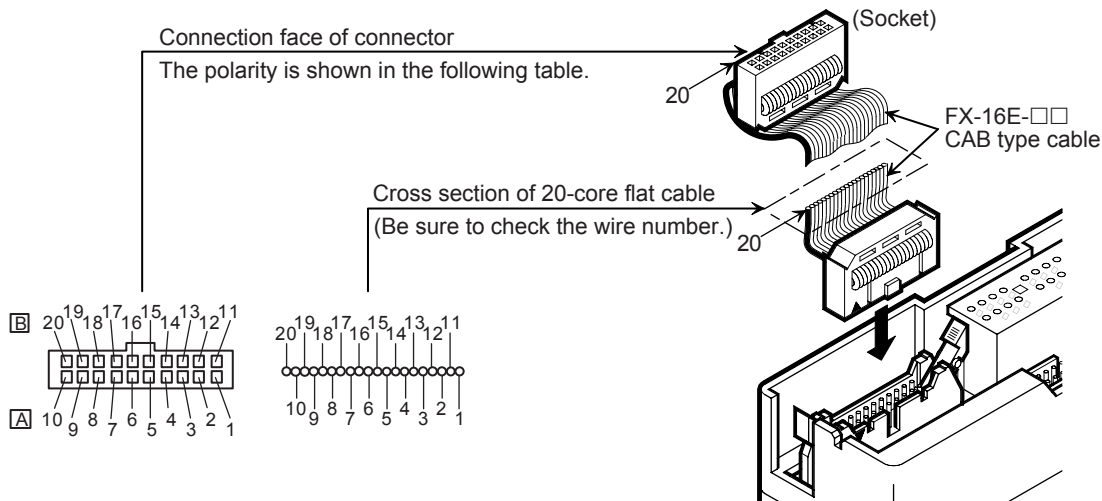

Side B	5+	•	X7	X6	X5	X4	X3	X2	X1	X0
Side A	5+	•	X7	X6	X5	X4	X3	X2	X1	X0

Side B is for the higher input numbers,
and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

16.5 FX2N-16EYR-ES/UL (Relay Output: 16 Points)

16.5.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX2N-16EYR-ES/UL
Product type	FX2N extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)

2. Weight and Other specifications


Item	FX2N-16EYR-ES/UL
MASS (Weight)	0.3 kg (0.66lbs)
Others	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.

3. Output specifications (Relay output type)

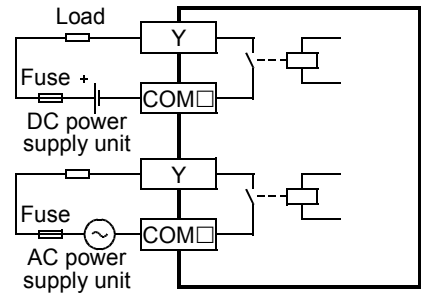
Item	FX2N-16EYR-ES/UL
Output points	16 points
Connection unit	Vertical terminal block (M3 screws)
Output unit	Relay
External power supply	5 to 30V DC 240V AC or less (250V AC or less when the unit does not comply with CE, UL, or cUL standards)
Output circuit insulation method	Mechanical insulation
Indication of output operation	Supplying power to the relay coil will light the LED indicator lamp on panel.
Maximum load	Resistance load 2 A/point The total resistance load current per common should be as follows: • 8 output points/common: 8A or less
	Inductive load 80 VA → For the approximate contact life, refer to Subsection 4.4.2. → For the cautions in external wiring, refer to Subsection 12.2.4.
Open circuit leakage current	—
Minimum load	24V DC, 2 mA (reference values)
Response time	OFF→ON Approx. 10 ms
	ON→OFF Approx. 10 ms
Output circuit diagram	 <p>COM□:□represents a number (1 or more).</p>

16.5.2 Parts identification and terminal arrangement

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

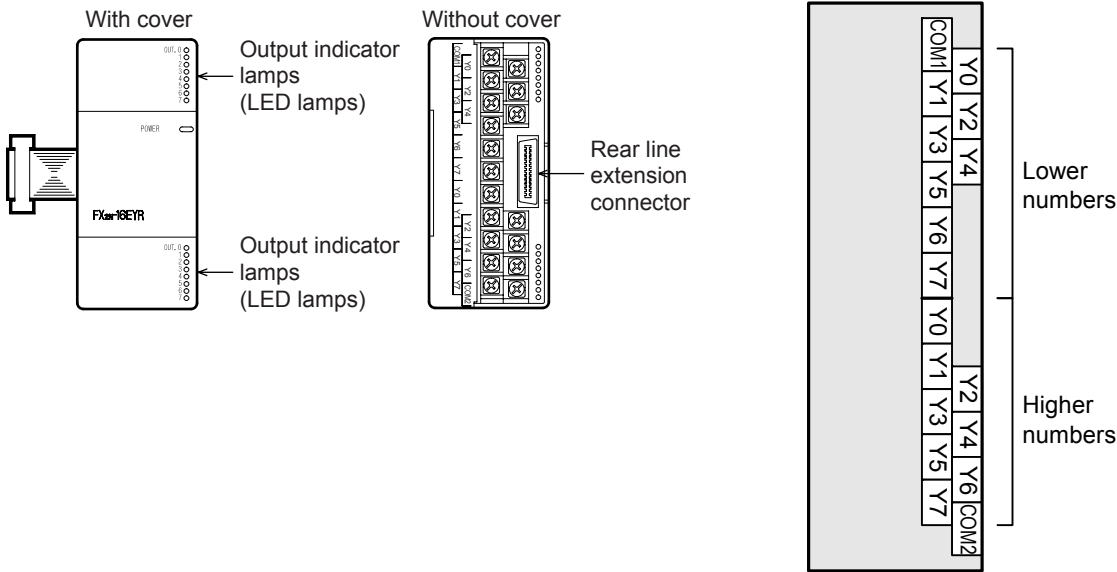


16.5.3 External dimensions

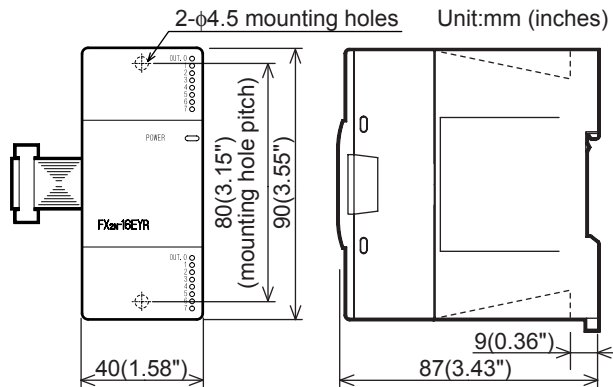

16.5.4 Example of wiring

1. Wiring on output side

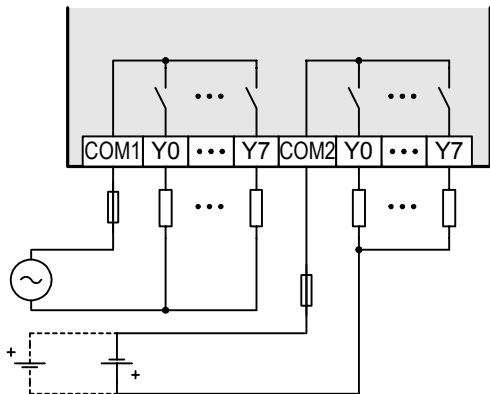

16.6 FX_{2N}-16EYT-ESS/UL (Transistor Output: 16 Points)

16.6.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX _{2N} -16EYT-ESS/UL
Product type	FX _{2N} extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)

2. Weight and Other specifications


Item	FX _{2N} -16EYT-ESS/UL
MASS (Weight)	0.3 kg (0.66lbs)
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.

3. Output specifications (Transistor output type)

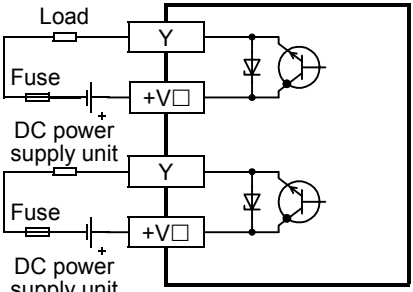
Item	FX _{2N} -16EYT-ESS/UL
Output points	16 points
Connection unit	Vertical terminal block (M3 screws)
Output unit/type	Transistor/source output
External power supply	5 to 30V DC
Output circuit insulation method	Photo-coupler insulation
Indication of output operation	Activation of the photo-coupler will light the LED indicator lamp on panel.
Maximum load	Resistance load 0.5 A/point The total load current per common should be as follows: • 8 output points/common: 1.6A or less
	Inductive load 12 W/24V DC
Open circuit leakage current	0.1 mA/30 A DC
Minimum load	—
Response time	OFF→ON 0.2 ms or less for 100 mA (at 24V DC)
	ON→OFF 0.2 ms or less for 100 mA (at 24V DC)
Output circuit diagram	 <p>+V□:□represents a number (0 or more).</p>

16.6.2 Parts identification and terminal arrangement

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

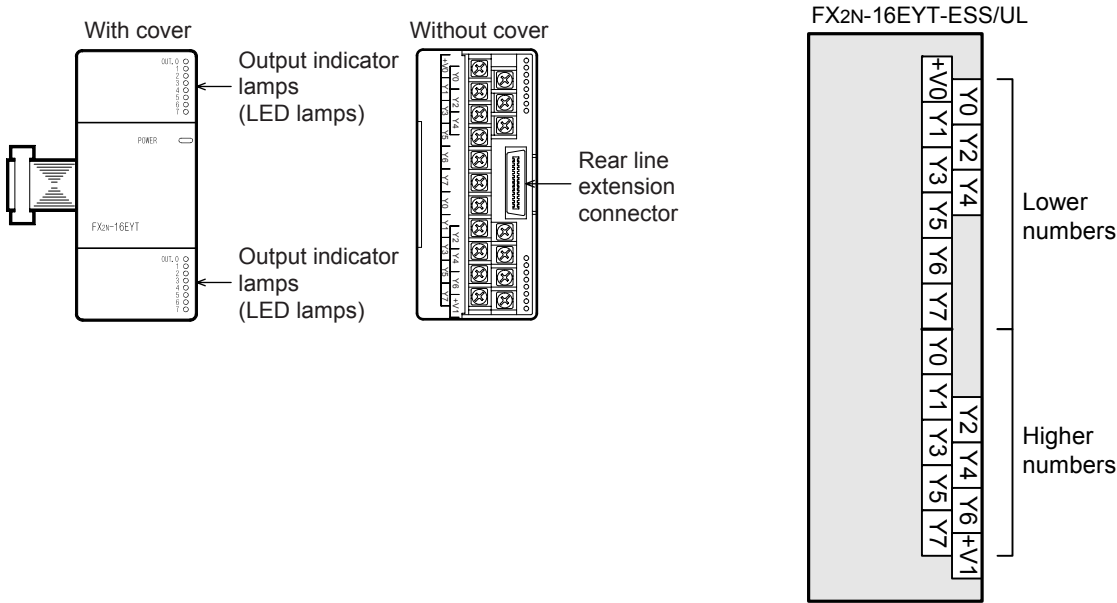


16.6.3 External dimensions

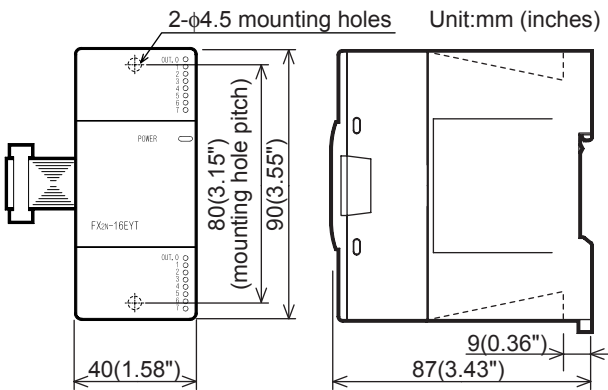

16.6.4 Example of wiring

1. Wiring on output side

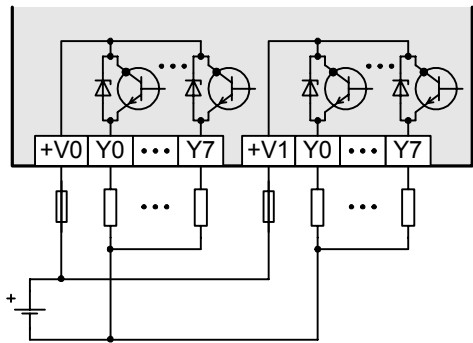

16.7 FX2N-16EYR (Relay Output: 16 Points)

16.7.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX2N-16EYR
Product type	FX2N extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)

2. Weight and Other specifications


Item	FX2N-16EYR
MASS (Weight)	0.3 kg (0.66lbs)
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.

3. Output specifications (Relay output type)

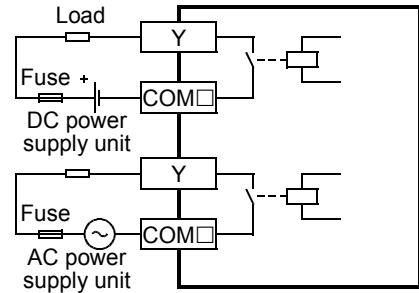
Item	FX2N-16EYR
Output points	16 points
Connection unit	Vertical terminal block (M3 screws)
Output unit	Relay
External power supply	250V AC 30V DC or less
Output circuit insulation method	Mechanical insulation
Indication of output operation	Supplying power to the relay coil will light the LED indicator lamp on panel.
Maximum load	Resistance load 2 A/point The total resistance load current per common should be as follows: 8 output points/common: 8A or less
	Inductive load 80 VA → For the approximate contact life, refer to Subsection 4.4.2. → For the cautions in external wiring, refer to Subsection 12.2.4.
Open circuit leakage current	—
Minimum load	5V DC, 2 mA (reference values)
Response time	OFF→ON Approx. 10 ms
	ON→OFF Approx. 10 ms
Output circuit diagram	 <p>COM□:□represents a number (1 or more).</p>

16.7.2 Parts identification and terminal arrangement

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

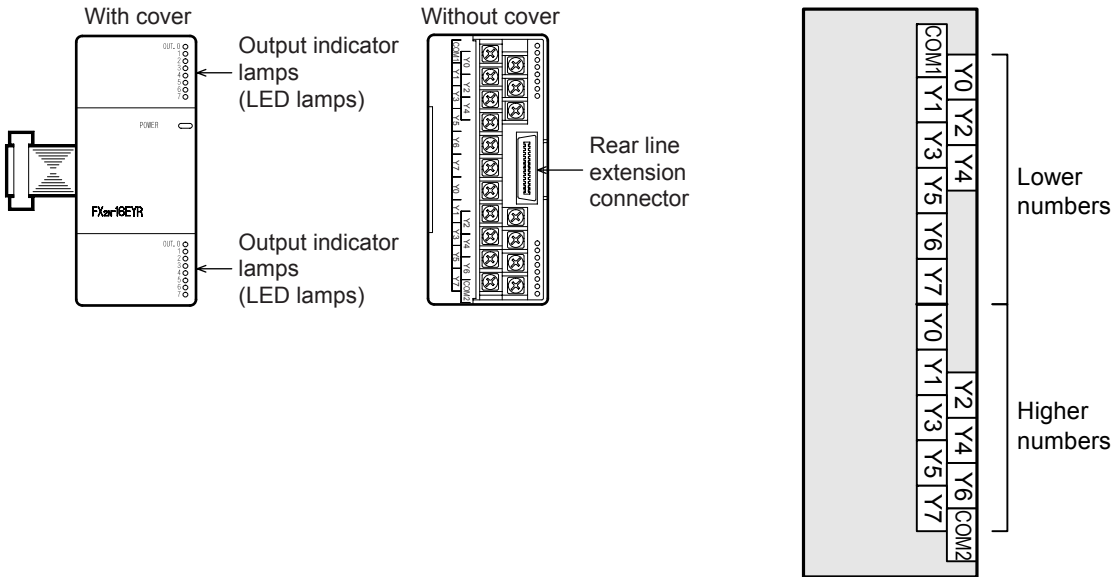


16.7.3 External dimensions

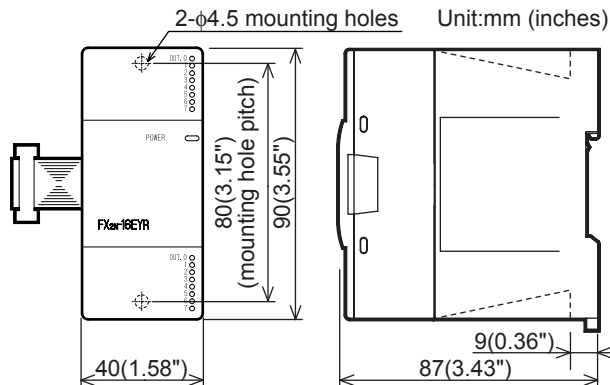

16.7.4 Example of wiring

1. Wiring on output side

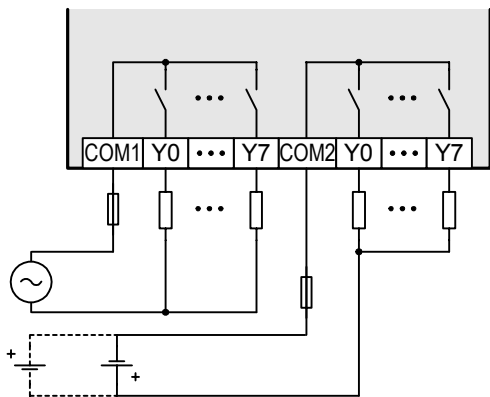

16.8 FX2N-16EYT and FX2N-16EYT-C (Transistor Output: 16 Points)

16.8.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.

1. Power supply specifications

Item	FX2N-16EYT	FX2N-16EYT-C
Product type	FX2N extension block	FX2N connector type extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)	

2. Weight and Other specifications


Item	FX2N-16EYT	FX2N-16EYT-C
MASS (Weight)	0.3 kg (0.66lbs)	
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation. 	

3. Output specifications (Transistor output type)


Item	FX2N-16EYT	FX2N-16EYT-C
Output points	16 points	
Connection unit	Removable terminal block (M3 screws)	Connector terminal block
Output unit/type	Transistor/sink output	
External power supply	5 to 30V DC	
Output circuit insulation method	Photo-coupler insulation	
Indication of output operation	Activation of the photo-coupler will light the LED indicator lamp on panel.	
Maximum load	Resistance load	0.5 A/point The total load current per common should be as follows: • 8 output points/common: 1.6A or less
	Inductive load	0.3 A/point The total load current per common should be as follows: • 16 output points/common: 1.6A or less
		12 W/24V DC
Open circuit leakage current	0.1 mA/30 A DC	
Minimum load	—	
Response time	OFF→ON	0.2 ms or less for 100 mA (at 24V DC)
	ON→OFF	0.2 ms or less for 100 mA (at 24V DC)
Output circuit diagram		

16.8.2 Parts identification and terminal arrangement


FX2N-16EYT
When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

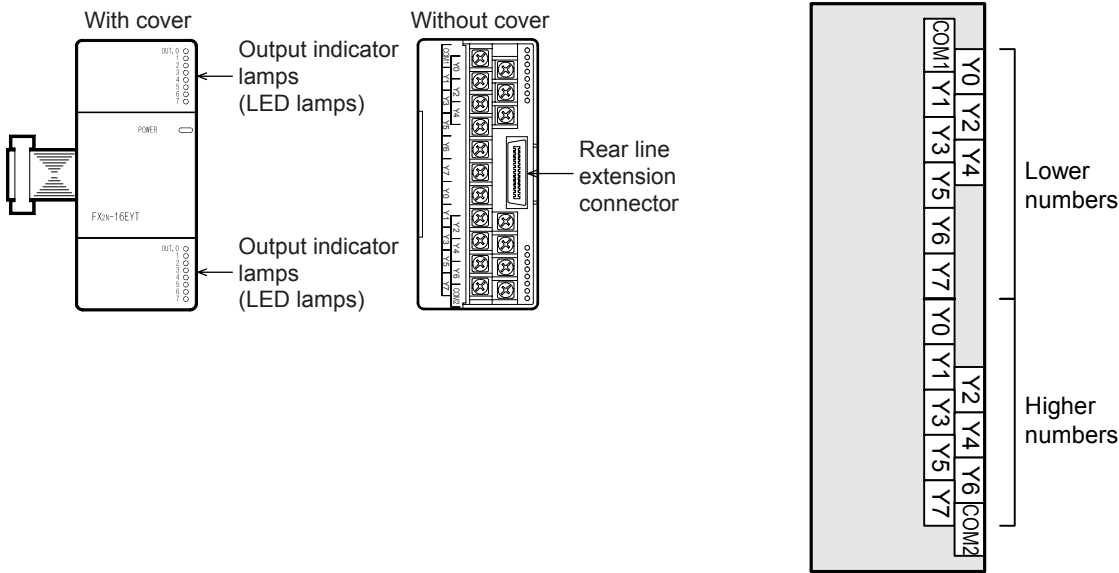


FX2N-16EYT-C
When an output (Y) number is assigned, 8 points on side A will be used for the lower output numbers, and 8 points on side B will be used for the higher output numbers.

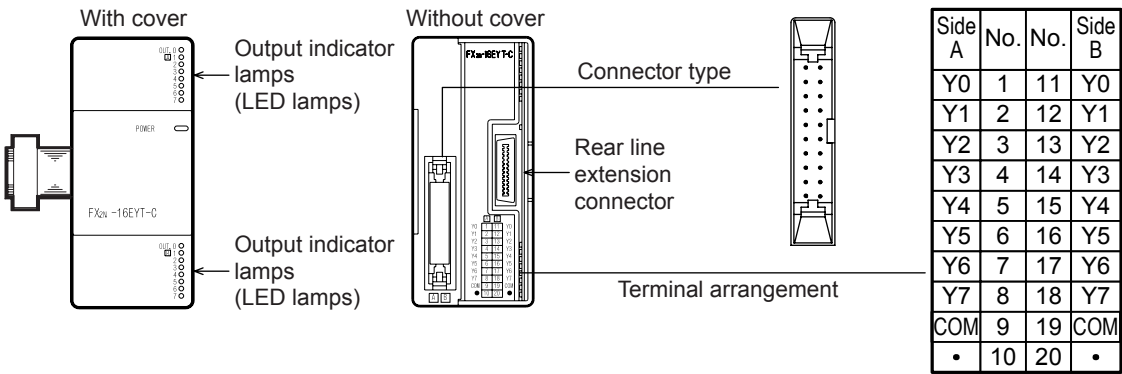

16.8.3 External dimensions

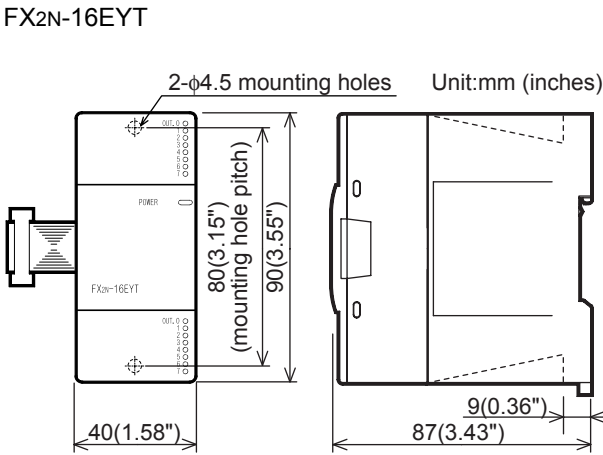


FX2N-16EYT-C

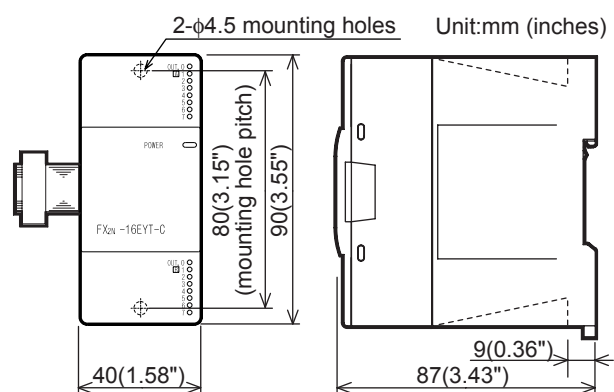


16.8.4 Example of wiring

1. Wiring on output side


FX2N-16EYT

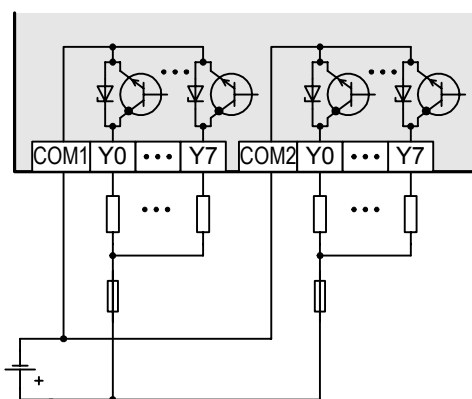

FX2N-16EYT-C

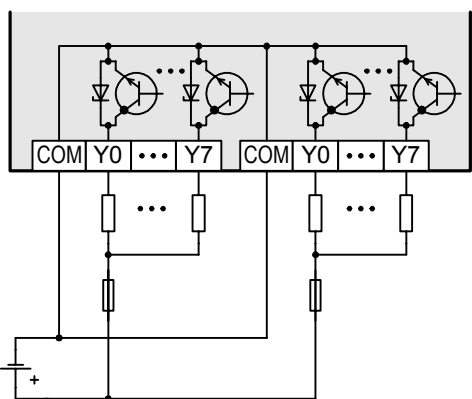

How to connect connector (FX2N-16EYT-C)

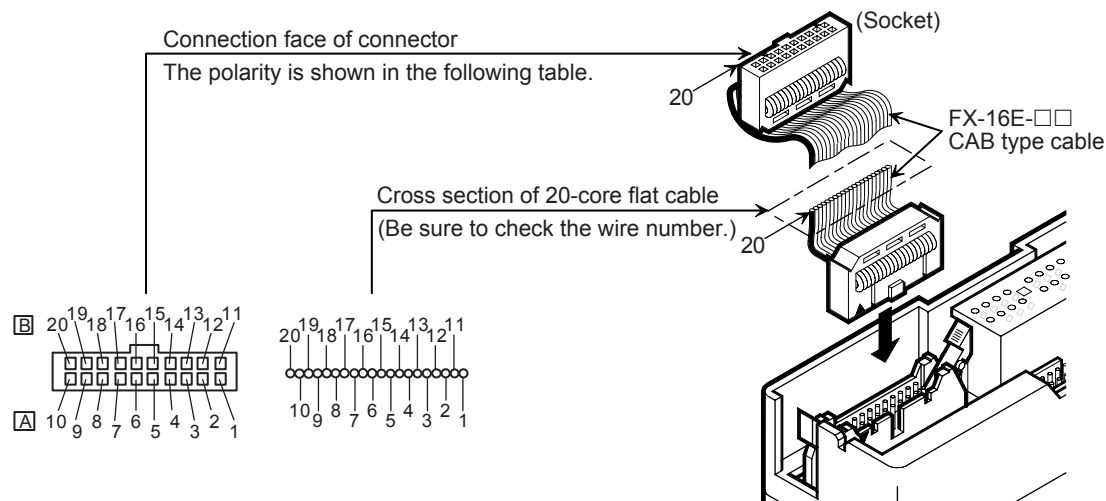

Side B	•	COM	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
Side A	•	COM	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0

Side B is for the higher input numbers, and side A is for the lower input numbers.
(Exe.) Side B X050 to X057
Side A X040 to X047

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

16.9 FX2N-16EYS (Triac Output: 16 Points)

16.9.1 Product specifications

The generic specifications are identical to the main unit specifications.

→ Refer to Section 4.1 for generic specifications.


1. Power supply specifications

Item	FX2N-16EYS
Product type	FX2N extension block
Rated voltage	24V DC (supplied from main unit and input/output powered extension unit)

2. Weight and Other specifications


Item	FX2N-16EYS
MASS (Weight)	0.3 kg (0.66lbs)
Other	<ul style="list-style-type: none"> The extension cable is already connected to the extension block. Accessories: Label for indication of input/output number The DIN46277 rail (width: 35 mm (1.38")) or direct installation.

3. Output specifications (Triac output type)

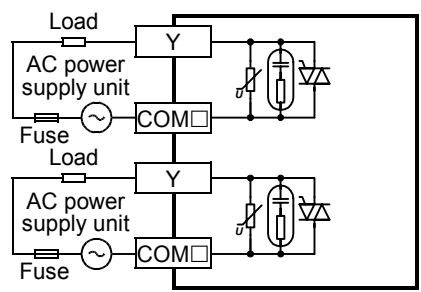
Item	FX2N-16EYS
Output points	16 points
Connection unit	Vertical terminal block (M3 screws)
Output unit	Triac output (SSR)
External power supply	85 to 242V AC
Output circuit insulation method	Photo-coupler insulation
Indication of output operation	Activation of the photo-thyristor will light the LED indicator lamp on panel.
Maximum load	Resistance load
	Inductive load
Open circuit leakage current	
Minimum load	
Response time	OFF→ON
	ON→OFF
Output circuit diagram	 <p>COM□:□represents a number (1 or more).</p>

16.9.2 Parts identification and terminal arrangement

When an output (Y) number is assigned, 8 points on the upper side will be used for the lower output numbers, and 8 points on the lower side will be used for the higher output numbers.

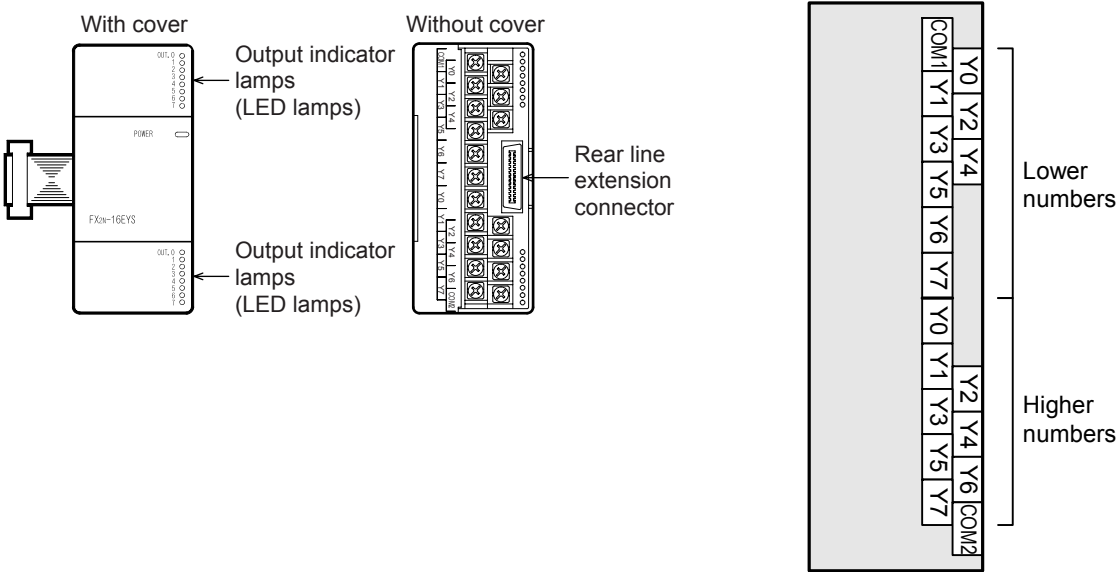


16.9.3 External dimensions

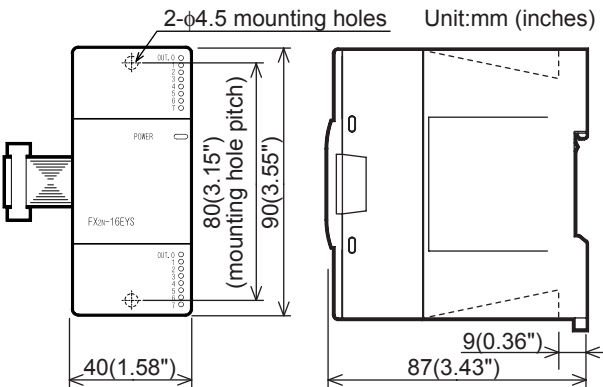

16.9.4 Example of wiring

1. Wiring on output side

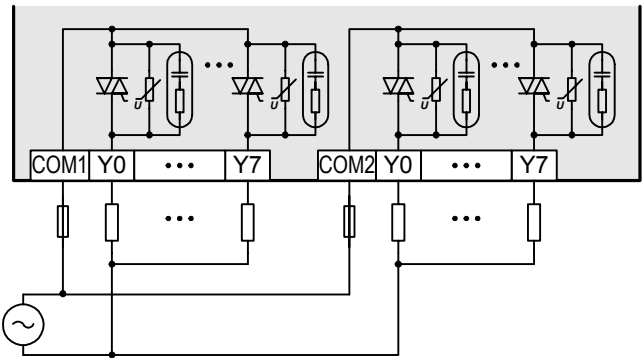


17. Other Extension Devices and Optional Units (External Dimensions and Terminal Arrangement)


17.1 Special Function Units/Blocks

17.1.1 FX0N-3A

External Dimensions

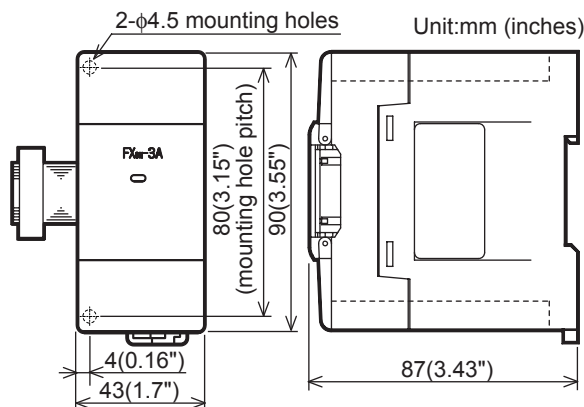


Terminal Layout

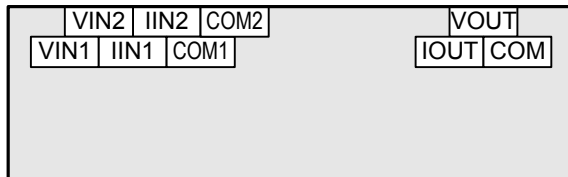


- MASS(Weight): 0.2kg (0.44lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

17.1.2 FX2N-2AD

External Dimensions

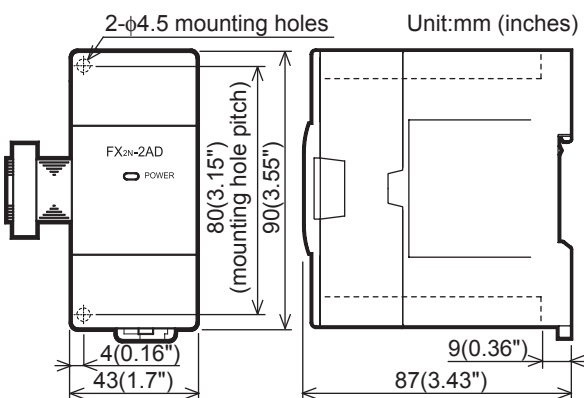


Terminal Layout

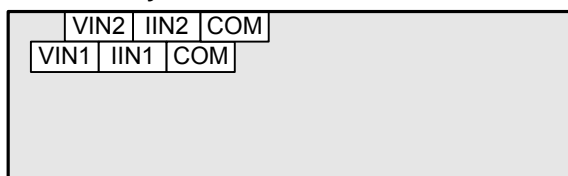


- MASS(Weight): 0.2kg (0.44lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

17.1.3 FX2N-2DA

External Dimensions

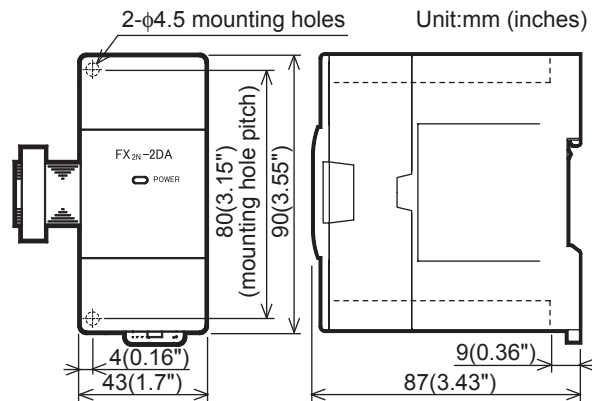


Terminal Layout

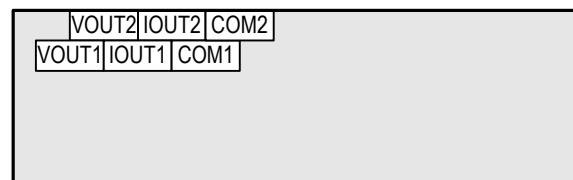


- MASS(Weight): 0.2kg (0.44lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

17.1.4 FX2N-4AD

External Dimensions

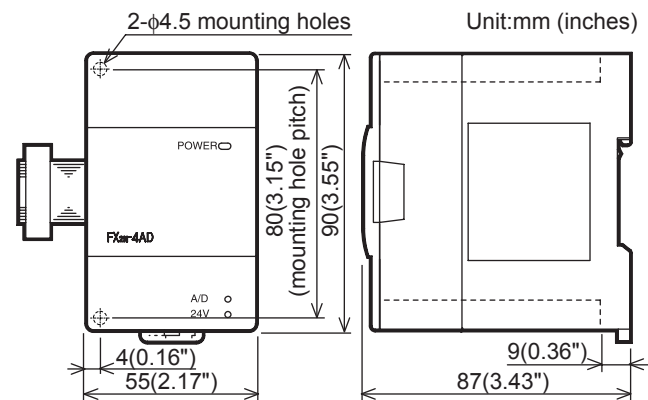

Terminal Layout

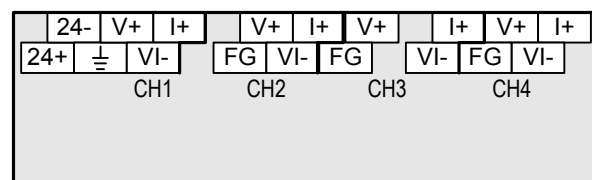


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette


17.1.5 FX_{2N}-4DA

External Dimensions

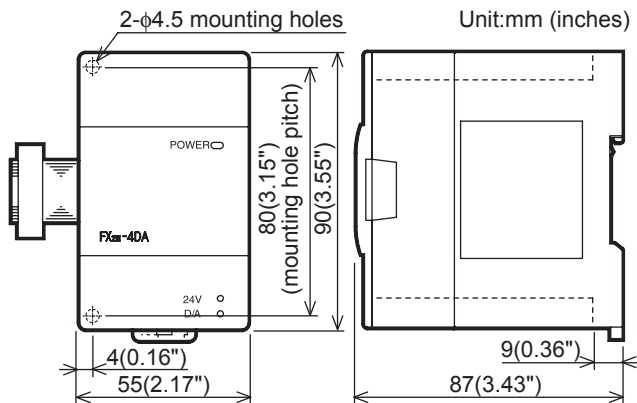


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

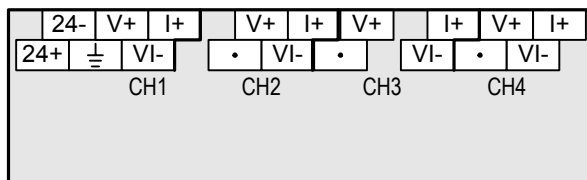


17.1.6 FX_{2N}-4AD-PT

External Dimensions

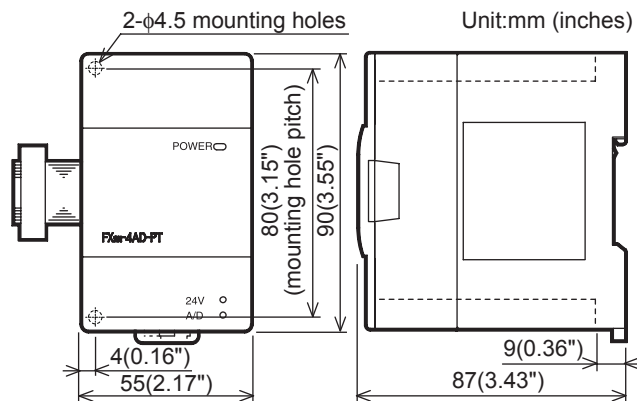


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

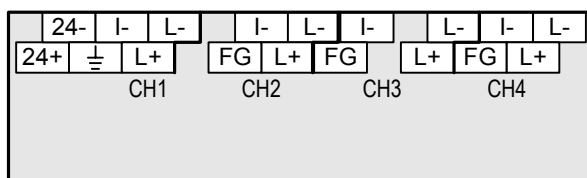


17.1.7 FX2N-4AD-TC

External Dimensions

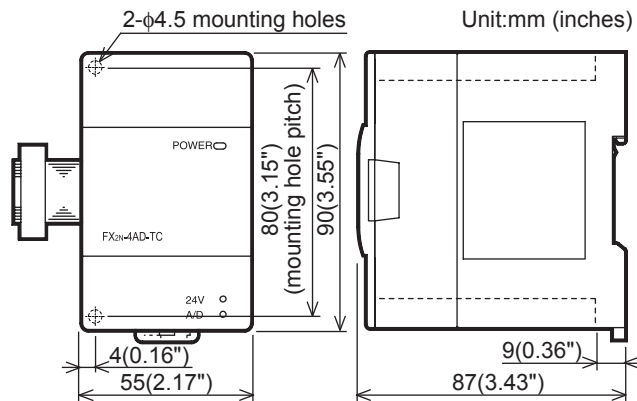


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

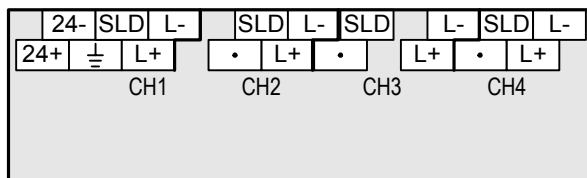


17.1.8 FX2N-5A

External Dimensions

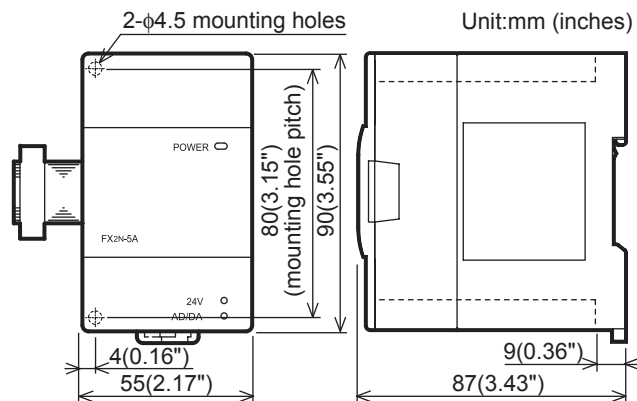


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

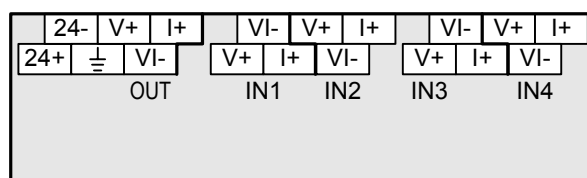


17.1.9 FX2N-2LC

External Dimensions

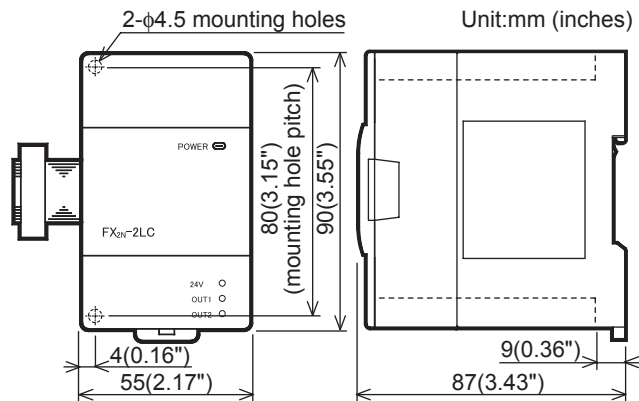


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

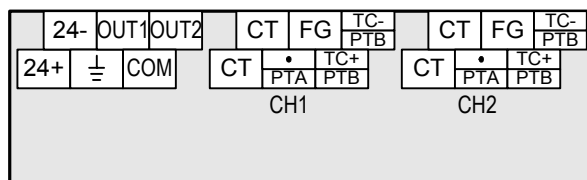


17.1.10 FX2N-8AD

External Dimensions

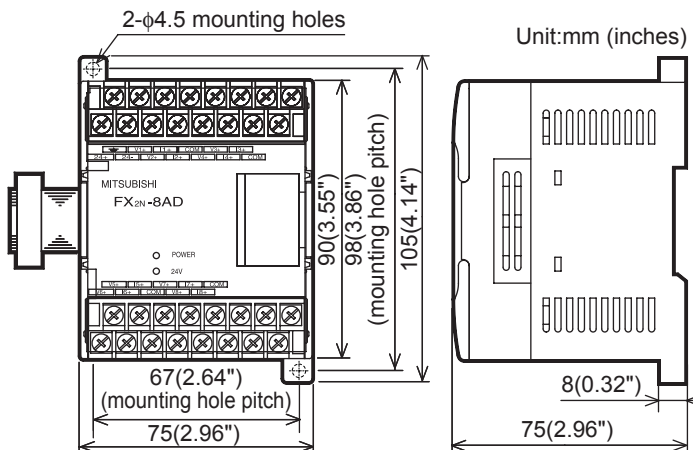


- MASS(Weight): 0.4kg (0.88lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3.5 screws
- The extension cable is already connected to the extension block.

Terminal Layout

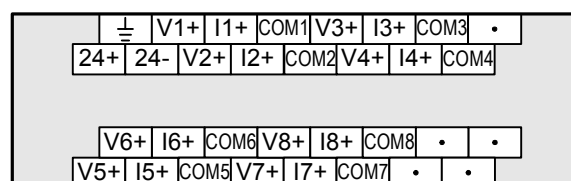


17.1.11 FX2N-1HC

External Dimensions

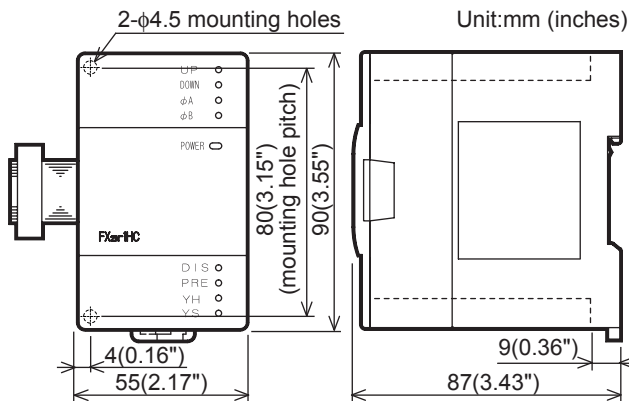


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

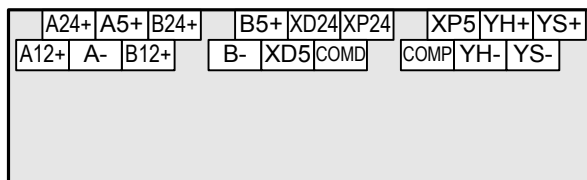


17.1.12 FX2N-1PG(-E)

External Dimensions

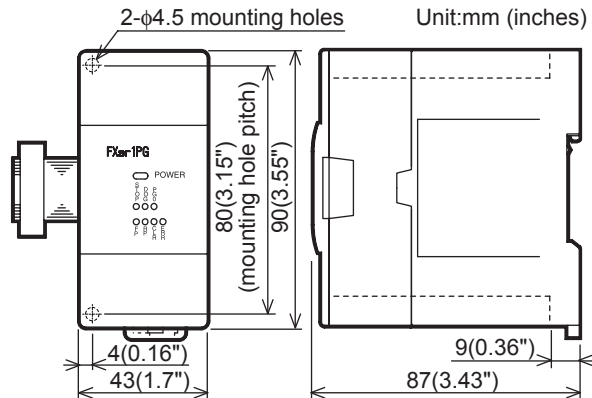


- installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

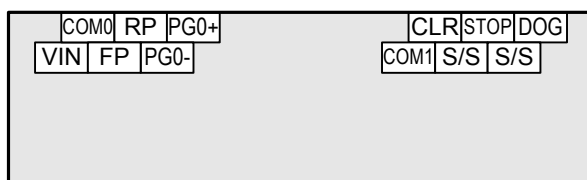


17.1.13 FX_{2N}-10PG

External Dimensions

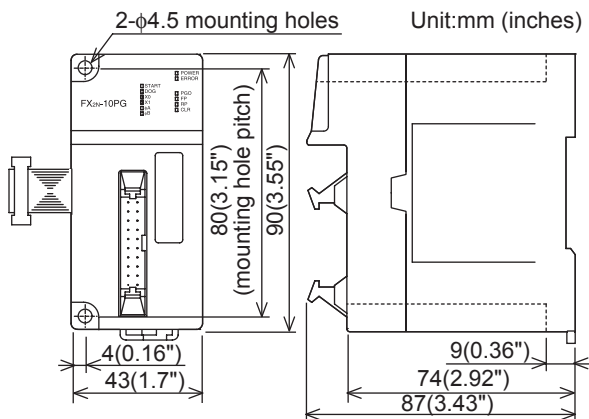


- MASS(Weight):0.2kg (0.44lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: Connector
- The extension cable is already connected to the extension block.

Terminal Layout

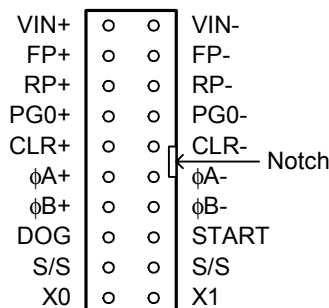


17.1.14 FX_{2N}-10GM

External Dimensions

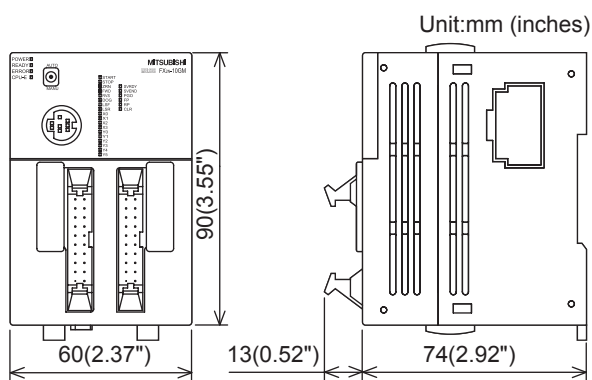


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35mm (1.38") in width only can be used for installation.
- Accessories: FX_{2N}NC-100MPCB power cable, FX_{2N}-GM-5EC extension cable, label for indication of special unit/block number
- Terminal block: Connector

Terminal Layout

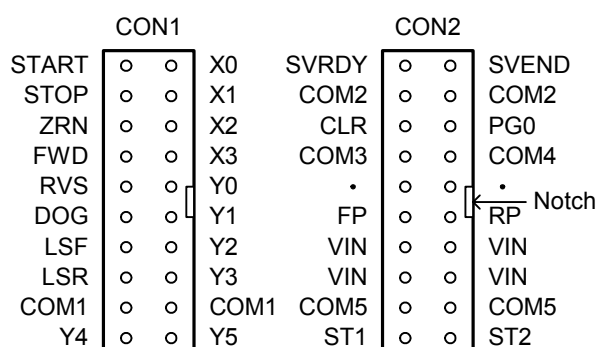

17.1.15 FX2N-20GM

External Dimensions

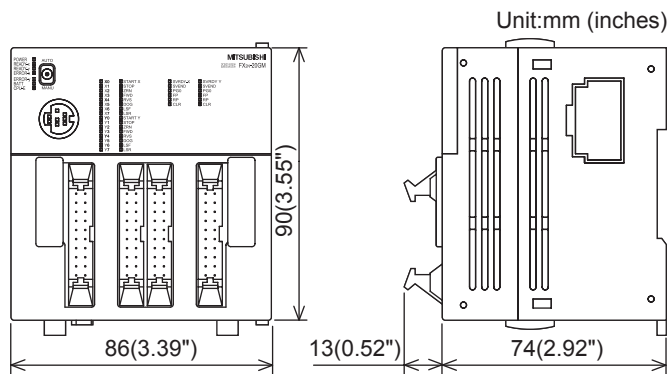

- MASS(Weight): 0.4kg (0.88lbs)
- Installation: DIN rail of 35mm (1.38") in width only.
- Accessories: FX2NC-100MPCB power cable, FX2NC-100BPCB crossover power cable, FX2N-GM-5EC extension cable, label for indication of special unit/block number
- Terminal block: Connector


Terminal Layout

CON1			Y axis	CON2			X axis	CON3			(X axis)	CON4			(Y axis)
Y00	○	○	X00	START	○	○	START	SVRDY	○	○	SVEND	SVRDY	○	○	SVEND
Y01	○	○	X01	STOP	○	○	STOP	COM2	○	○	COM2	COM6	○	○	COM6
Y02	○	○	X02	ZRN	○	○	ZRN	CLR	○	○	PG0	CLR	○	○	PG0
Y03	○	○	X03	FWD	○	○	FWD	COM3	○	○	COM4	COM7	○	○	COM8
Y04	○	○	X04	RVS	○	○	RVS	.	○	○	.	.	○	○	.
Y05	○	○	X05	DOG	○	○	DOG	FP	○	○	RP	FP	○	○	RP
Y06	○	○	X06	LSF	○	○	LSF	VIN	○	○	VIN	VIN	○	○	VIN
Y07	○	○	X07	LSR	○	○	LSR	VIN	○	○	VIN	VIN	○	○	VIN
COM1	○	○	COM1	COM1	○	○	COM1	COM5	○	○	COM5	COM9	○	○	COM9
.	○	○	.	.	○	○	.	ST1	○	○	ST2	ST3	○	○	ST4


Notch

17.1.16 FX2N-1RM(-E)-SET


External Dimensions

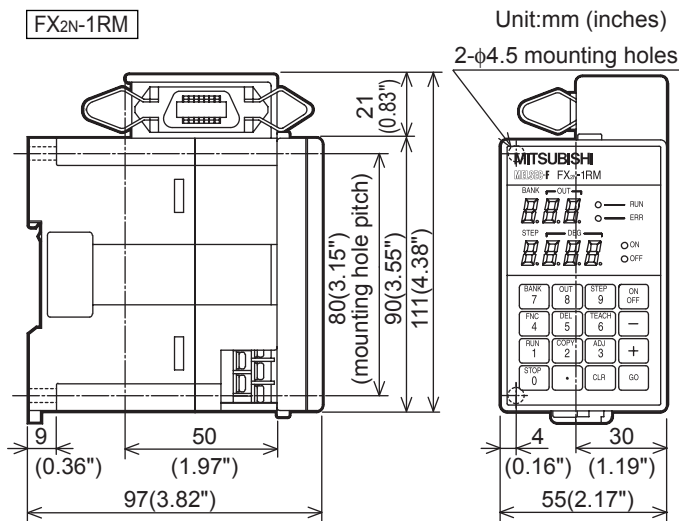

- MASS(Weight): 0.5kg (1.1lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: FX2N-RS-5CAB signal cable (5m(16'4")), F2-720RSV resolver, extension cable (55mm(2.06")), label for indication of special unit/block number
- Terminal block: M3 screws

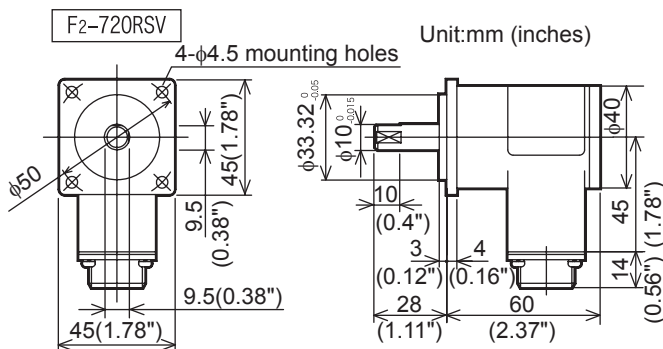


Terminal Layout

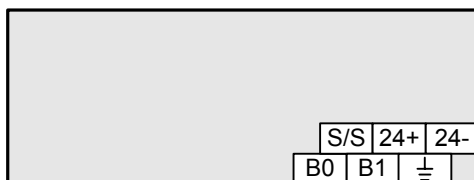


17.1.17 FX2N-232IF

External Dimensions

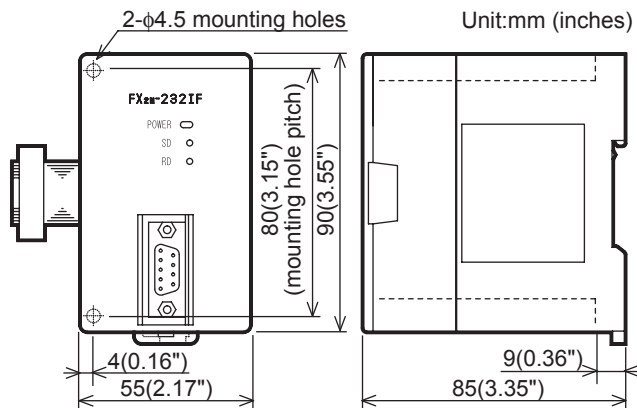


- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Connector: RS-232C (D-SUB 9-pin, male)
- The extension cable is already connected to the extension block.

Terminal Layout

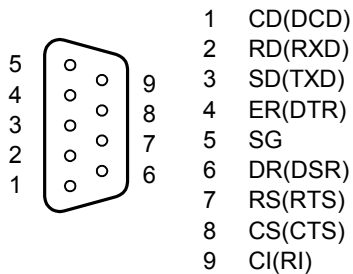


17.1.18 FX2N-32ASI-M

External Dimensions

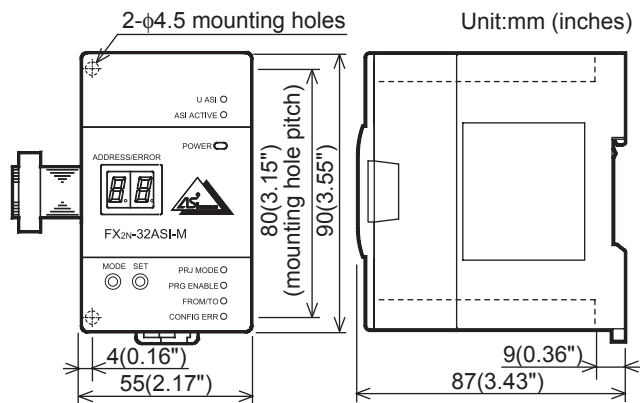


- MASS(Weight): 0.2kg (0.44lbs)
- installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

Terminal Layout

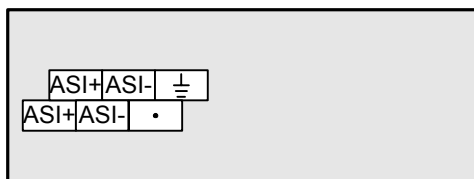

17.1.19 FX2N-64CL-M


External Dimensions

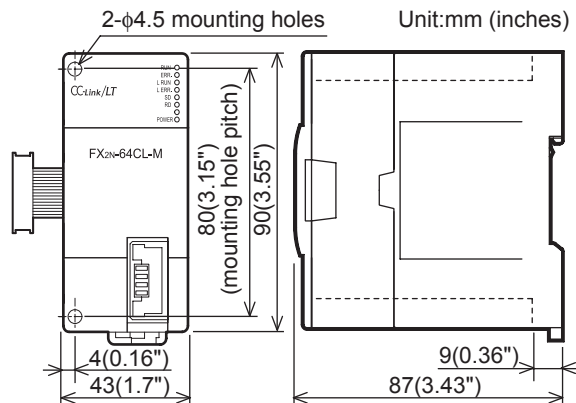

- MASS(Weight): 0.15kg (0.01lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- The connector for CC-Link/LT interface is on the front face of the product.
- The extension cable is already connected to the extension block.


17.1.20 FX2N-16CCL-M

External Dimensions

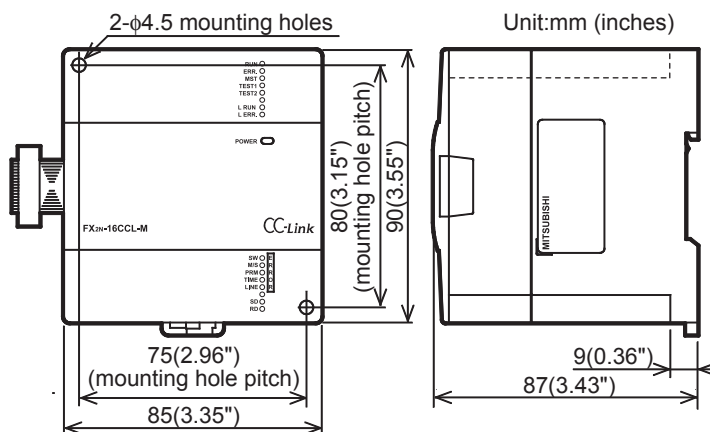


- MASS(Weight): 0.4kg (0.02lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
Terminal resistor:
2 resistors for standard cable
2 resistors for high-performance cable
- Terminal block: M3 screw for power supply terminal
M3.5 screw for signal terminal
- The extension cable is already connected to the extension block.

Terminal Layout

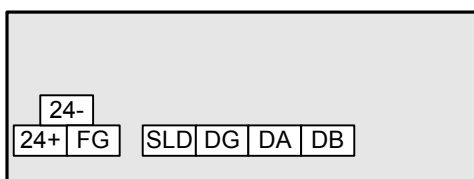


17.1.21 FX2N-32CCL

External Dimensions

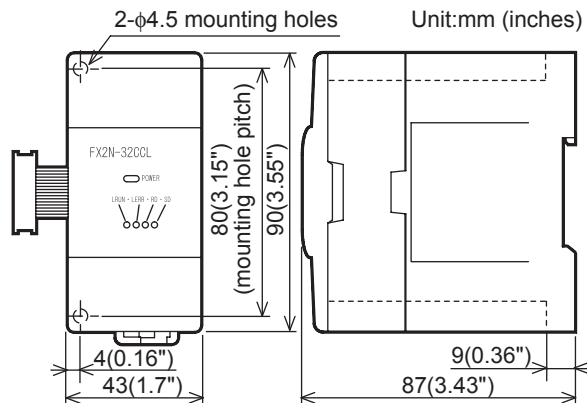


Terminal Layout

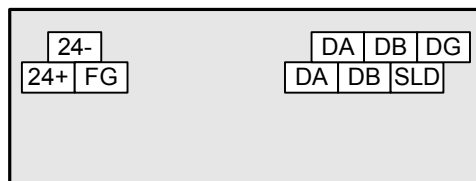

- MASS(Weight): 0.2kg (0.44lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number, Label for indication of link station number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

17.1.22 FX2N-16LNK-M

External Dimensions

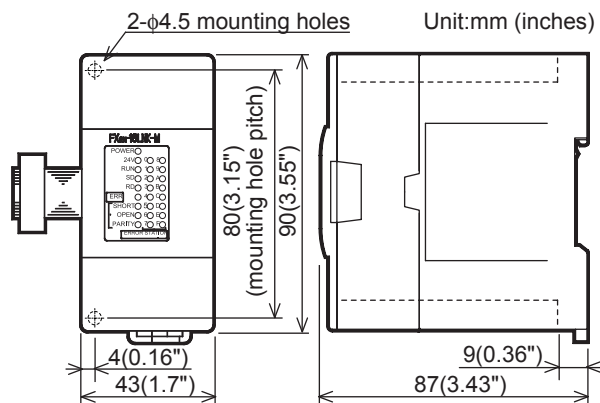

Terminal Layout




- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of special unit/block number
- Terminal block: M3 screws
- The extension cable is already connected to the extension block.

17.2 Power Supply


17.2.1 FX2N-20PSU

External Dimensions

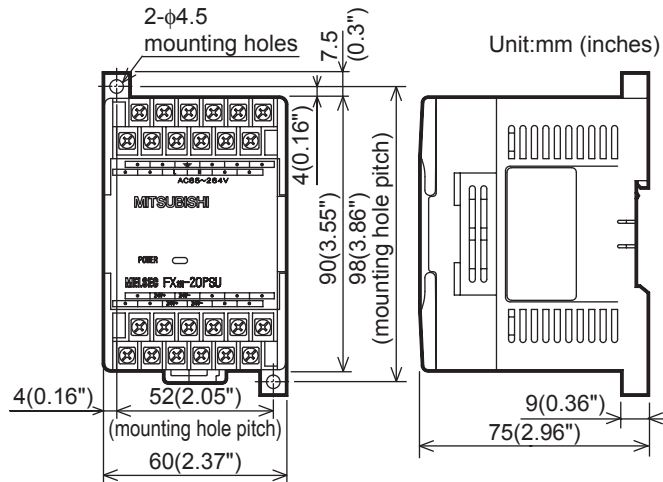

- MASS(Weight): 0.3kg (0.66lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: M3 screws


Terminal Layout

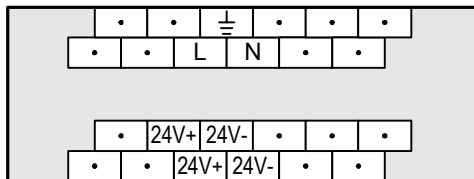

17.3 Special Adapters

17.3.1 FX3U-4AD-ADP


External Dimensions, Terminal Layout

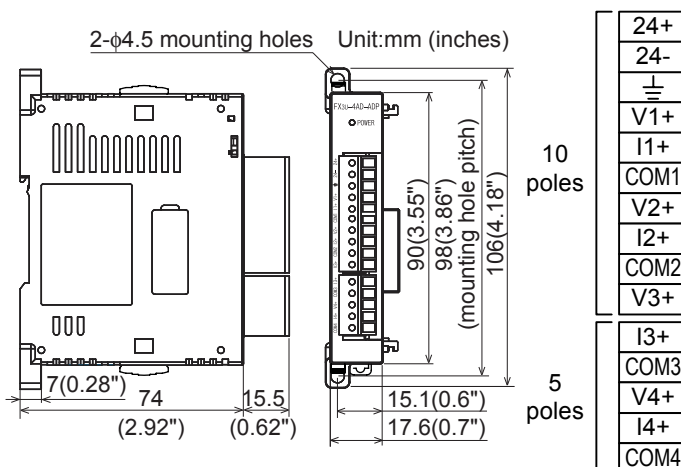

- MASS(Weight): 0.1kg (0.22lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type

17.3.2 FX3U-4DA-ADP


External Dimensions, Terminal Layout

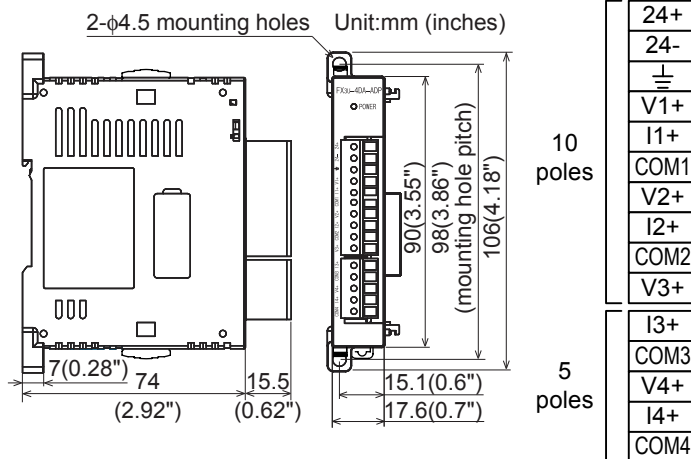

- MASS(Weight): 0.1kg (0.22lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type

17.3.3 FX3U-4AD-PT-ADP


External Dimensions, Terminal Layout

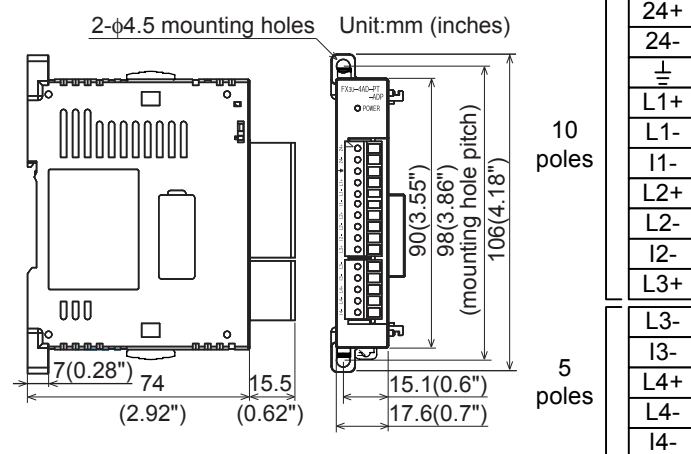

- MASS(Weight): 0.1kg (0.22lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type

17.3.4 FX3U-4AD-TC-ADP

External Dimensions, Terminal Layout

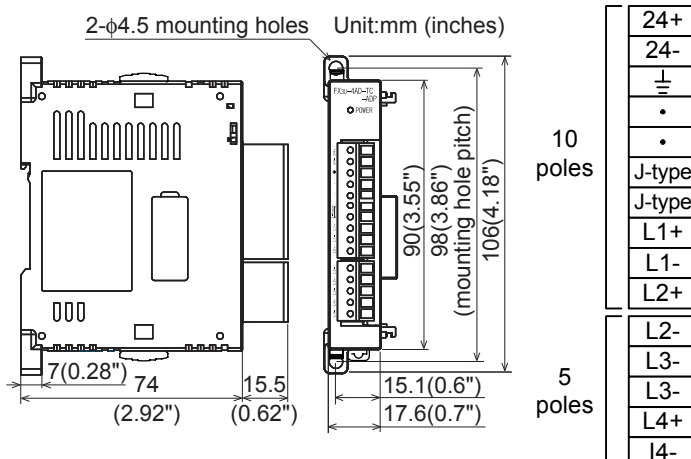


- MASS(Weight): 0.1kg (0.22lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette


17.3.5 FX3U-232ADP

External Dimensions

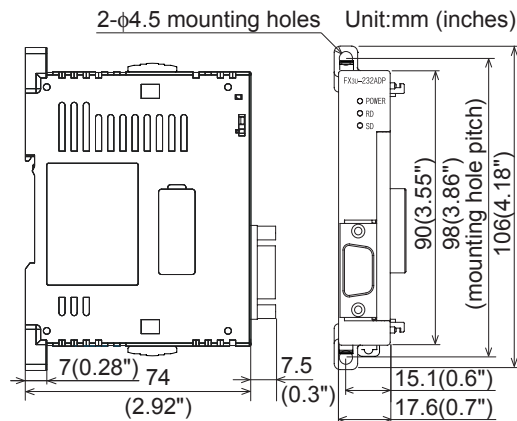


- MASS(Weight): 80g (0.18lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Connector: RS-232C (D-SUB 9-pin, male)

Terminal Layout

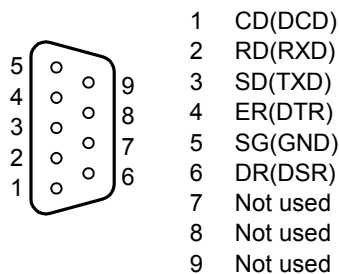


17.3.6 FX3U-485ADP

External Dimensions

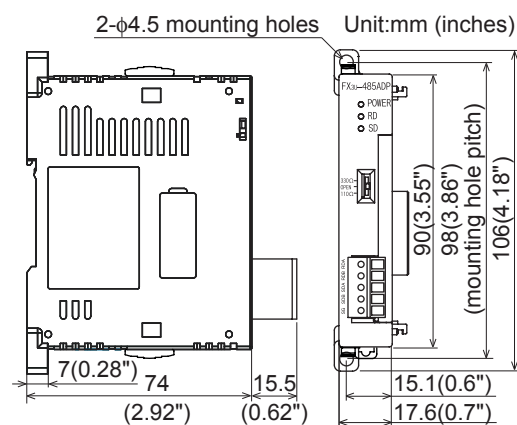


- MASS(Weight): 80g (0.18lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Accessories: Label for indication of link station number
- Terminal block: European type
- Terminal resistance: 330Ω/110Ω, built-in

Terminal Layout

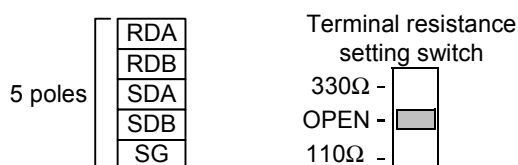

17.3.7 FX3U-4HSX-ADP


External Dimensions, Terminal Layout

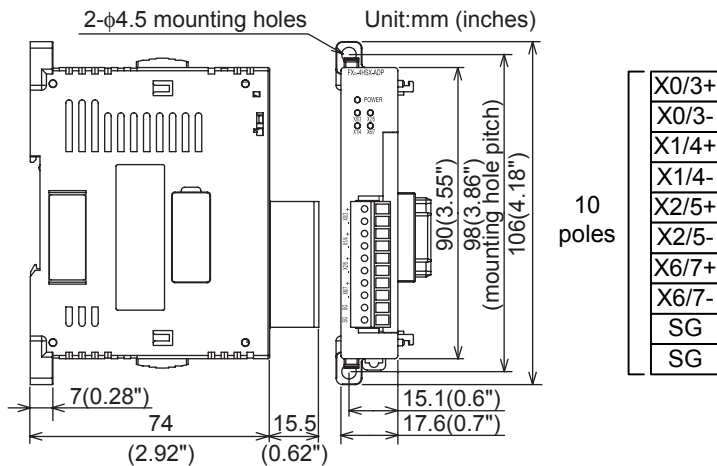

- MASS(Weight): 80g (0.18lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type

17.3.8 FX3U-2HSY-ADP

External Dimensions, Terminal Layout

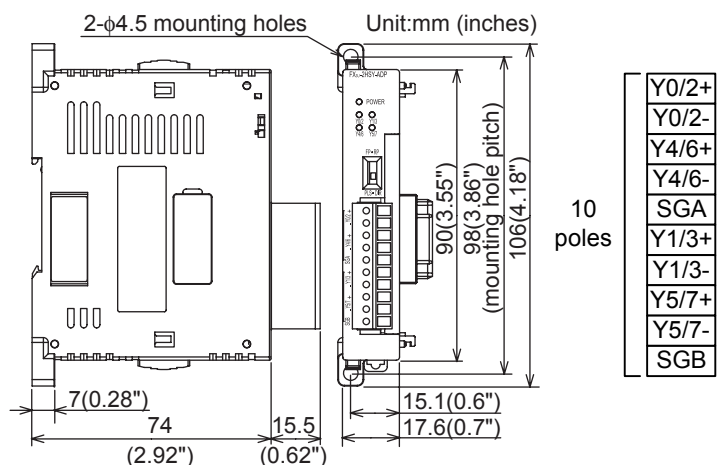


- MASS(Weight): 80g (0.18lbs)
- Installation: DIN rail of 35 mm (1.38") in width or screws.
- Terminal block: European type
- Switch: Output form switching between PLS•EDIR and FP•ERP

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

17.4 Expansion Board

17.4.1 FX3U-USB-BD


External Dimensions

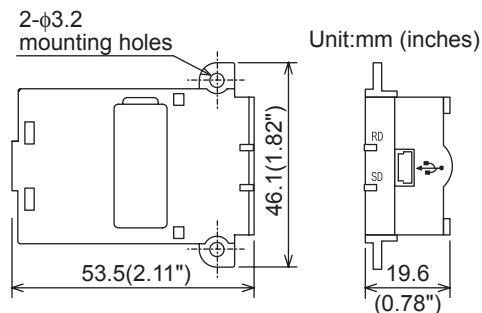

- MASS(Weight): 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board), USB driver software (CD-ROM), USB cable (3m(9'10"))
- Connector: USB (MINI B plug, female)


17.4.2 FX3U-232-BD

External Dimensions

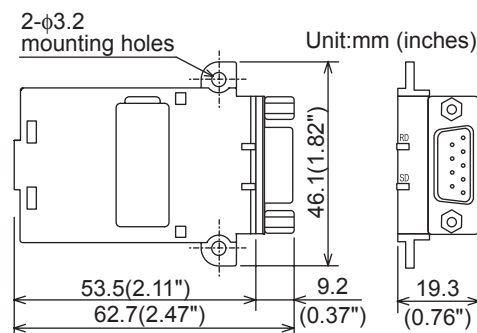


- MASS(Weight): 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board)
- Connector: RS-232C (D-SUB 9-pin, male)

Terminal Layout

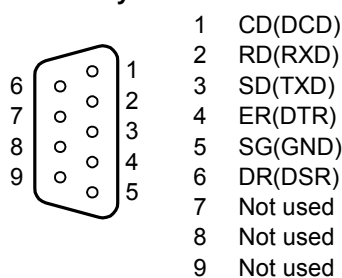

17.4.3 FX3U-422-BD


External Dimensions

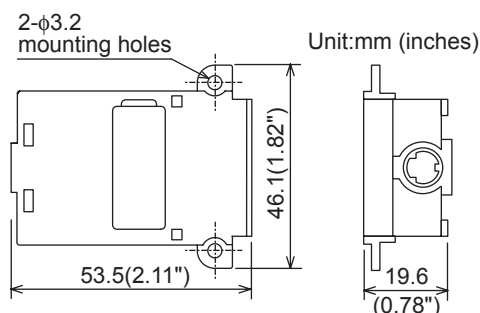


- MASS(Weight): 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board)
- Connector: RS-422 (MINI DIN 8-pin, female)

17.4.4 FX3U-485-BD

External Dimensions

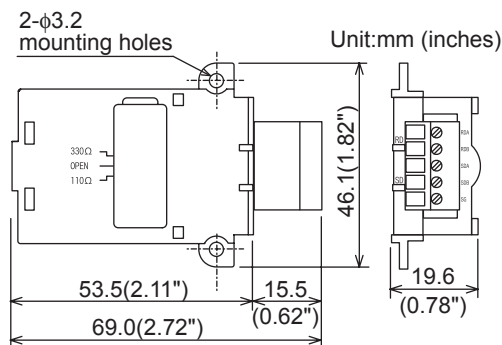


Terminal Layout

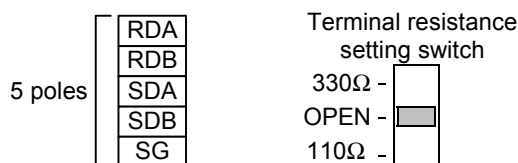

- MASS(Weight): 20g (0.05lbs)
- Accessories: Two M3 tapping screws (for installation of board), Label for indication of link station number
- Terminal block: European type
- Terminal resistance: 330Ω/110Ω, built-in

17.4.5 FX3U-CNV-BD

External Dimensions

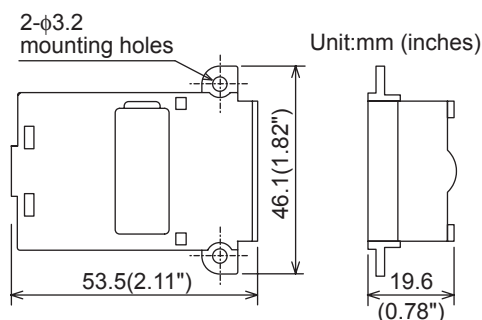


- MASS(Weight): 10g (0.03lbs)
- Accessories: Two M3 tapping screws (for installation of board)

17.5 Connector Conversion Adapter

17.5.1 FX2N-CNV-BC

External Dimensions

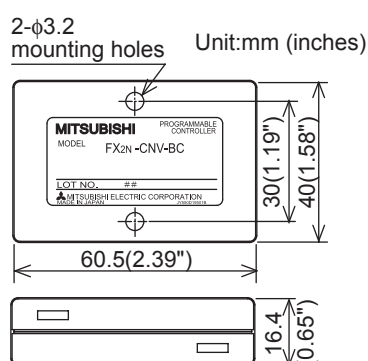


- MASS(Weight): 40g (0.09lbs)
- Installation: Screws only

17.6 Interface Module

17.6.1 FX-232AWC-H


External Dimensions

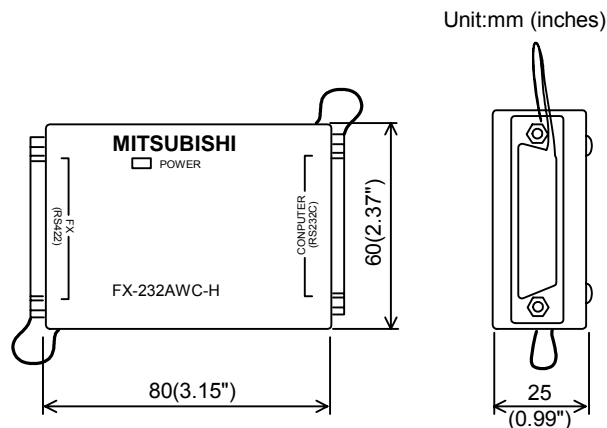

- MASS(Weight): 0.1kg (0.22lbs)
- Connector: RS-232C
(D-SUB 25-pin, female)
RS-422
(D-SUB 25-pin, female)

17.6.2 FX-USB-AW

External Dimensions

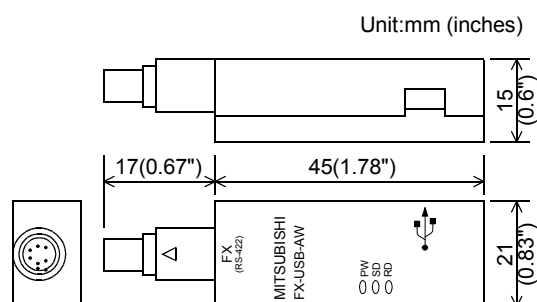


- MASS(Weight): 20g (0.05lbs)
- Accessories: USB driver software
(CD-ROM),
USB cable (3m(9'10"))
- Connector: RS-422
(MINI DIN 8-pin, male)
USB (MINI B plug, female)

17.7 Display Module

17.7.1 FX3U-7DM


External Dimensions

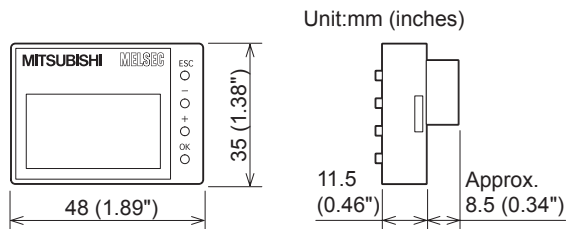

- MASS(Weight): 20g (0.05lbs)
- Accessories: Display module mounting top cover

17.7.2 FX3U-7DM-HLD

External Dimensions

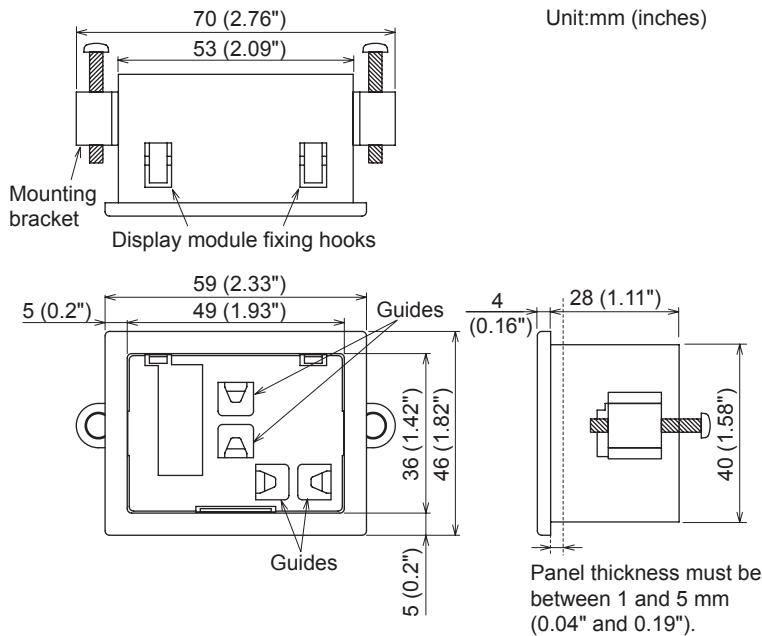

- MASS(Weight): 20g (0.05lbs)
- Accessories: PLC cover
Mounting bracket × 2 pieces
Tightening bolt (M4 × 25) × 2 pieces
1.5m (4'11") extension cable
Clamp × 5 pieces

18. FX3U-7DM (Display Module)

STARTUP AND MAINTENANCE PRECAUTIONS



DANGER

- Do not touch any terminal while the PLC's power is on.
Doing so may cause electrical shock or malfunctions.
- Before cleaning or retightening terminals, externally cut off all phases of the power supply.
Failure to do so may expose you to shock hazard.
- Correctly connect the battery for memory backup.
Do not charge, disassemble, heat or short-circuit the battery. Do not throw it into the fire.
Doing so may rupture or ignite it.
- Before modifying the program under operation or performing operation for forcible output, running or stopping, carefully read the manual, and sufficiently ensure the safety.
An operation error may damage the machine or cause accidents.
- Do not change programs in the PLC from two or more peripheral equipment (such as the programming tool and GOT) at the same time.
Such changes may cause destruction or malfunction of programs in the PLC.

STARTUP AND MAINTENANCE PRECAUTIONS




CAUTION

- Before attaching or detaching the memory cassette, turn off power. If it is attached or detached while PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.
- Do not disassemble or modify the PLC.
Doing so may cause failures, malfunctions or fire.
For repair, contact your local Mitsubishi Electric distributor.
- Before connecting or disconnecting any extension cable, turn off power.
Failure to do so may cause unit failure or malfunctions.
- Before attaching or detaching the following devices, turn off power.
Failure to do so may cause device failure or malfunctions.
 - Peripheral devices, display module, expansion boards and special adapters
 - Extension blocks, connector conversion adapter and FX Series terminal block
 - Battery and memory cassette

18.1 Description of Products (Introduction of Related Products)

The FX3U-7DM display module can be incorporated in the main unit, or can be installed in the enclosure using the FX3U-7DM-HLD display module holder.

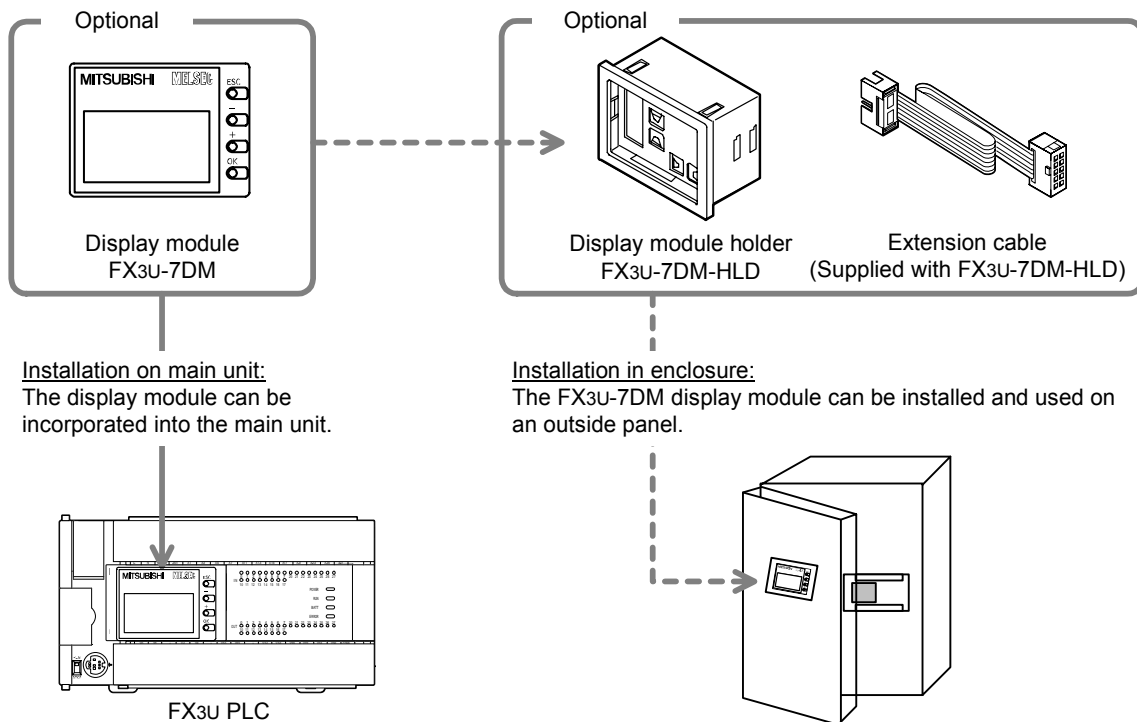

For a detailed description of the display module holder, refer to the "FX3U-7DM-HLD User's Manual".

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

18.2 Specifications


18.2.1 Display/switch specifications

Item		Description
Display device/ backlight		STN monochrome liquid crystal display/Backlight: LED (green)
Displaed letters	Number of letters	16 letters × 4 lines (2 byte letters: 8 letters × 4 lines)
	Characters	English Alphabet, Numbers, Japanese Characters, Shift JIS Level-1, 2
	Language for menu display	Japanese/English
Button		4 operation buttons (OK, ESC, +, and -)

Notes for displaying symbols(ASCII Code)

- ¥ (ASCII Code:5C) symbol is displayed as " ¥ " even if the language display setting at FX3U-7DM is set to English(LANGUAGE:ENGLISH).
- The Character at ASCII Code:7E "~" is not displayed.

18.2.2 Parts layout

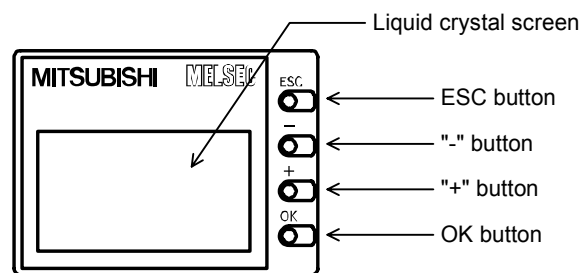


Functions of operation buttons:

The display module has 4 operation buttons as shown in the following table.

Name of button	Function of operation button
ESC	Use this button to cancel the operation and to return to the previous screen.
-	Use this button to move the cursor or to set a numeric value.
+	Use this button to move the cursor or to set a numeric value.
OK	Use this button to select an item or to determine the set numeric value.


18.2.3 External dimensions

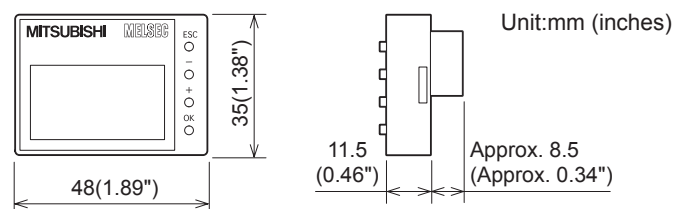

For FX3U PLC installation:

After installing the display module on the main unit, the main unit will be approximately 2.5 mm (0.1") higher than the initial height.

For the other dimensions, refer to the dimensional outline drawing of the main unit.

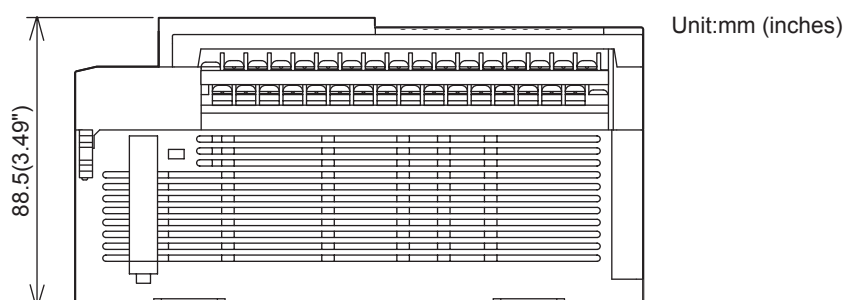

18.3 Installation and Removal


This section describes how to install and remove the display module.

1 Turn off the power of the PLC.

Before installing or removing the display module, be sure to turn off the power to the PLC.

2 Remove the top cover.


While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the right figure.

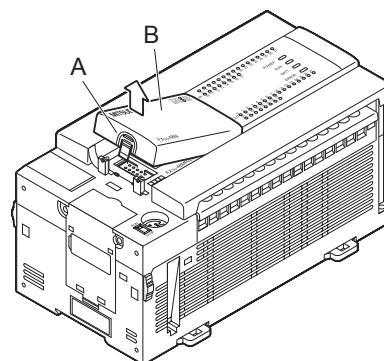

3 Install/remove the display module.

Installation: Push the display module ("C") down at position "E" shown in the lower right figure to install the display module on the main unit ("D").


Removal: Pull the display module outward ("C") to remove the display module from the main unit ("D").

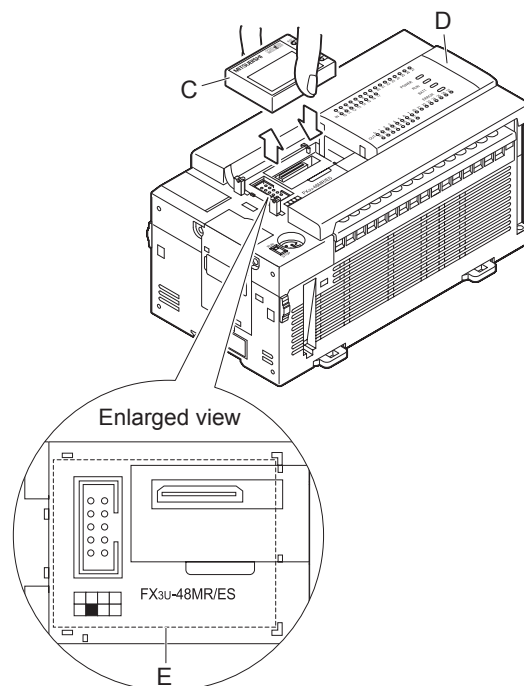

4 Attach the top cover.

Put side "G" of the display module's top cover ("F") on the main unit ("D") as shown, then push down on the top cover ("F") until it locks into place.

The top cover of the display module is supplied with the FX3U-7DM (display module).

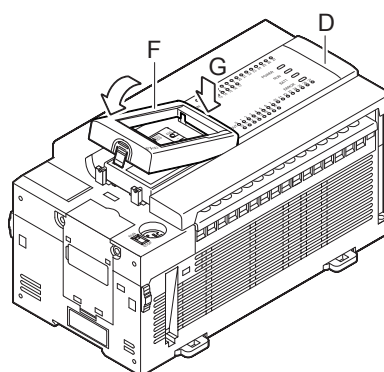

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

18.4 Summary of Functions

The display module functions are summarized below.

Item		Function	Remarks	Reference
Top screen (time display)		Displays the time indicated by the main unit's internal real-time clock.	Button operation	Refer to Subsection 18.5.2
Menu screen functions				
Monitor/Test	Devices	Input (X) ^{*1} , output (Y), auxiliary relay (M), state (S), timer (T), counter (C), data register (D) [16-bit/32-bit], extended register (R), and extended file register (ER) [16-bit/32-bit] monitor/test function.	Button operation	Refer to Section 18.7
	User (User-registered device)	Up to 4 data registers (D) [16-bit/32-bit] can be registered.	Requires program	Refer to Section 18.8 Refer to Section 18.19
ErrorCheck		Performs error checks and displays the results.	Button operation	Refer to Section 18.9
LANGUAGE (selects the menu display language)		Selects either Japanese or English as the menu display language.	Button operation	Refer to Section 18.10
Contrast		Adjusts the contrast (-5 to 10); default setting: 0	Button operation	Refer to Section 18.11
ClockMenu (Time setting)	Setting	Sets the current time.	Button operation	Refer to Subsection 18.12.1
	Display	Displays the current time.		Refer to Subsection 18.12.2
EntryCode		The currently specified entry code can be canceled.	Button operation	Refer to Section 18.13
ClearAllDev (Device all clear)		Initializes the Input (X) ^{*1} , output (Y), auxiliary relay (M), state (S), timer (T), counter (C), data register (D) [16-bit/32-bit], and extended register (R). The file register (D) is excluded from this function. (Bit devices are turned OFF, and word device current values are set to "0".)	Button operation	Refer to Section 18.14
PLC Status		Verifies the version information, entry code status, program memory type status, and battery voltage, etc.	Button operation	Refer to Section 18.15
ScanTime		Displays the scan time (max./min./current value)	Button operation	Refer to Section 18.16
Cassette (Memory cassette transfer)		Allows data transfers (and consistency checks) between the internal RAM and the memory cassette.	Button operation	Refer to Section 18.17
Non-menu functions				
Operation button ON/OFF information		Allows monitoring of operation button ON/OFF status.	Requires program or monitor	Refer to Section 18.20
Hexadecimal current value display setting		Changes the display format of the current values and setting values for the timer, counter, data register, extended register, and extended file register to a hexadecimal display format.	Requires program ^{*2}	Refer to Section 18.21
Display screen protect function		Enables all functions, prohibits change (test) functions, and protects the top screen (time display).	Requires program	Refer to Section 18.22
User message display		The following codes saved at the display device can be used as display commands: Alphanumeric: 20H to 7DH ASCII code Katakana: A1H to DFH ASCII code Japanese character: Shift JIS Level-1, 2	Requires program	Refer to Section 18.23

*1. There is no test function for "Input (X)".

*2. A sequence program is required to enable a hexadecimal display of the timer (T), counter (C), data register (file register) (D), extended register (R) [16-bit/32-bit], and extended file register (ER) [16-bit/32-bit] current values.

→ Refer to Section 18.21 for the setting procedure.

18.5 Procedure for Accessing the Menu Screen from the Title Screen

All operation explanations and display screen examples in this manual are in English. When the menu display language is set to Japanese, please convert the screen messages to their Japanese translations.


→ Refer to Section 18.25 for the Japanese & English display character correspondence table.

→ Refer to Section 18.10 for menu display language setting details.

18.5.1 Title screen


The screen shown at right is displayed for 1.5 seconds after the power is turned on.

	Content
[1]	Model name
[2]	Version

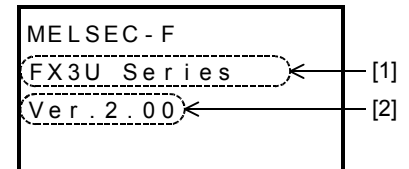

18.5.2 Top screen (time display)

Following the title screen display, the "Current Time screen" is then displayed.

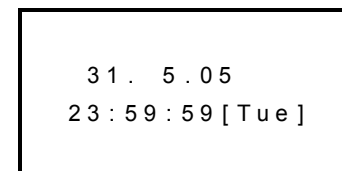

A user screen can also be displayed by using the user message display function.

→ Refer to Section 18.23 for user message display function details.

Although the year displays in a 2-digit format (05), this can be changed to a 4-digit format (2005) by revising the program.


→ Refer to Subsection 18.12.3 for the 2-digit year to 4-digit year change procedure.

18.5.3 Menu screen

As shown in the figure at right, the menu screen displays 4 lines of the total menu. Press the [+] button to scroll downward through the menu.

Button operations at this menu screen are explained below.

Button	Operation Description
ESC	Returns to the "top screen" (time display).
-	Scrolls upward through the menu. Hold for 1 second or longer for high-speed scrolling. This button is disabled when the cursor is located at the beginning of the menu.
+	Scrolls downward through the menu. Hold for 1 second or longer for high-speed scrolling. This button is disabled when the cursor is located at the end of the menu.
OK	Selects the item where the cursor is blinking.

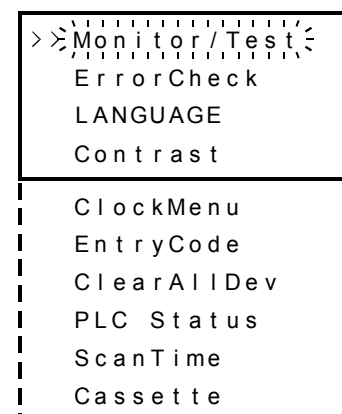

18.6 Menu Structure

Title screen

```
MELSEC - F
FX3U Series
Ver. 2.00
```

↓ Approx. 1.5 secs.

Top screen (Time display)

```
31. 5.05
23:59:59 [Tue]
```

Switched by system information setting

```
User message display function
```

```
<Production>
Target    10000
Production 100
Remaining  9900
```

User creation screen (example)

Menu screen

```
>>Monitor/Test
>>ErrorCheck
>>LANGUAGE
>>Contrast
>>ClockMenu
```

Operation keys

OK → Press the [OK] button
 ←ESC Press the [ESC] button
 -↑/-↓/+ The [+] / [-] button are used to move the cursor and switch between display screens.

```
>>D (16 bit)
DD (32 bit)
T
C
R (16 bit)
DR (32 bit)
ER (16 bit)
DER (32 bit)
X
Y
M
S
User
```

Display example


```
ErrorCheck
No errors
```

```
LANGUAGE
>>日本語
English
```

Display example

```
Contrast
0
(-5 ~ 10)
```

```
>>Current time
Clock Setting
```

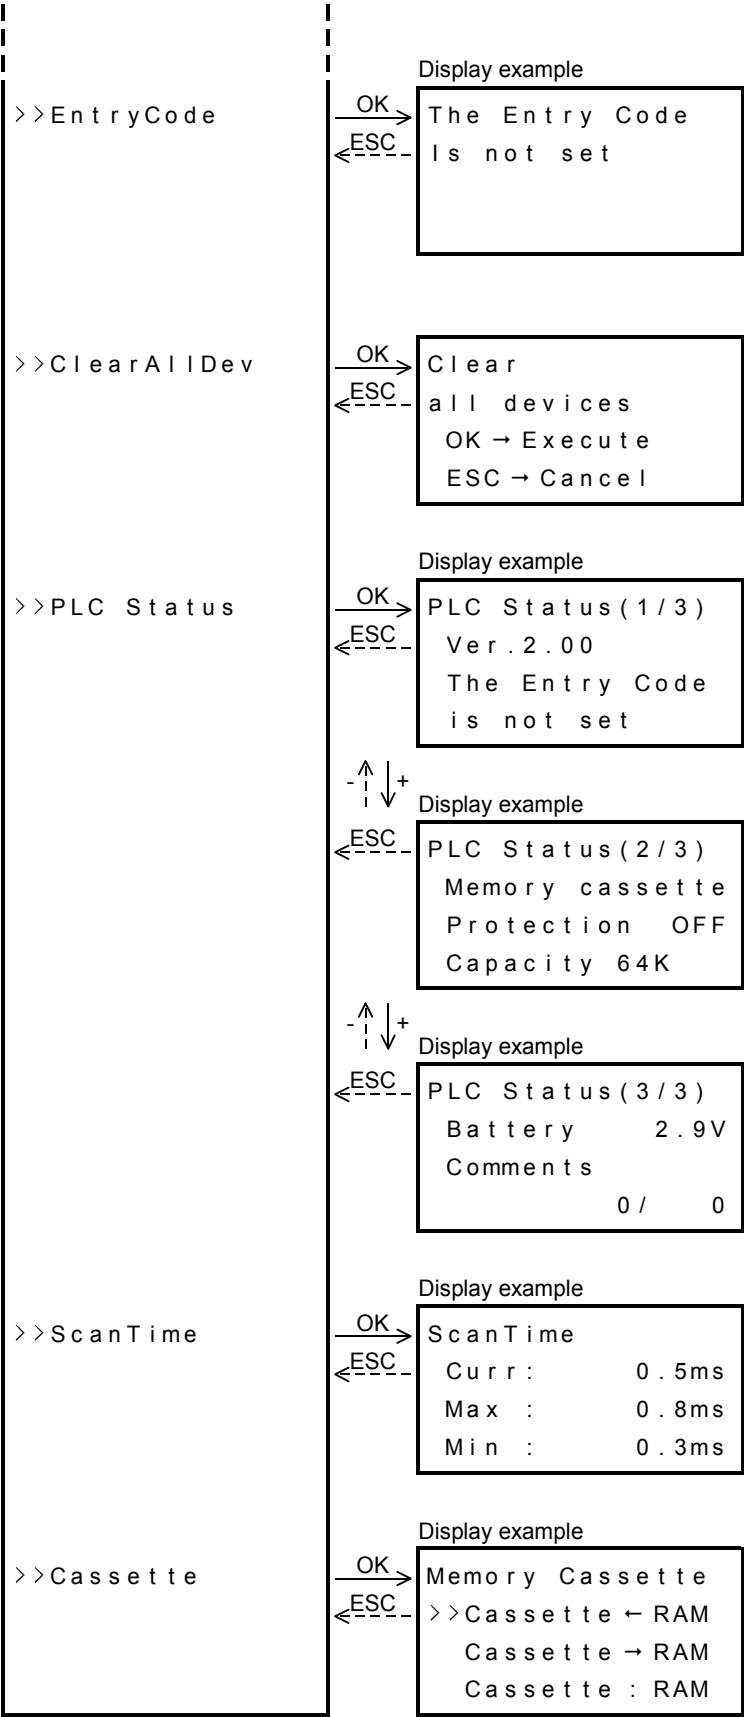

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

18.7 Monitor/Test Mode [Excluding User-Registered Devices]

18.7.1 Relevant devices

Monitoring and testing can be performed from the "Monitor/Test" menu for the devices listed below. (Monitoring/testing is not possible for the file register (D) and the index register (V/Z)).

✓: Possible

△: Possible under certain conditions

□: Not possible

—: Item not supported by this device

Device	Monitored Items					Test Items		
	Contact	Reset	Operation Direction	Current Value	Setting Value	Forced ON/OFF	Current Value Change	Setting Change
Input [X]	✓	—	—	—	—	—	—	—
Output [Y]	✓	—	—	—	—	△*1	—	—
Auxiliary relay [M]	✓	—	—	—	—	△*1	—	—
State [S]	✓	—	—	—	—	△*1	—	—
Timer [T]	✓	✓	—	✓	✓	✓	✓	△*2*3
Counter [C]	✓	✓	✓*4	✓	✓	✓	✓	△*2*3
Data register [D, DD]	—	—	—	✓	—	—	✓	—
File register [D, DD]	—	—	—	□	—	—	□	—
Extended register [R, DR]	—	—	—	✓	—	—	✓	—
Extended file register [ER, DER]*5	—	—	—	✓	—	—	✓	—
Index register (V,Z)	—	—	—	□	—	—	□	—

*1. A forced ON or OFF is executed for only one operation cycle, and therefore has a considerable effect on the SET/RST and self retaining circuits when the PLC is running.
Moreover, a forced ON/OFF result is retained for devices (Y,M,S) which are not being driven by an OUT instruction, etc., in the program.

*2. Setting values of timer and counter can be changed when the PLC status is as shown below.

Program Memory Type		RUN/STOP Status	Setting Change Enabled/Disabled
Internal RAM		RUN	Enabled
		STOP	Enabled
Memory cassette	PROTECT switch ON	RUN	Disabled
		STOP	Disabled
	PROTECT switch OFF	RUN	Enabled
		STOP	Enabled

*3. The following setting changes are possible.

Selectable Setting Values		Changeable Content	Setting Description
Direct setting	Without index modifier [Direct (K,H)]	Direct numeral setting	The directly specified value becomes the setting value.
	With index modifier [direct (K,H) + index register (V0 to V7, Z0 to Z7)]		The [directly specified numerical value] + [index register's current value] becomes the setting value.
Indirect setting	Without index modifier [data register D, extended register (R)]	Indirectly specified device No.	The specified device's current value becomes the setting value.
	With index modifier [data register (D) + index register (V0 to V7, Z0 to Z7)], [Extended register (R) + index register (V0 to V7, Z0 to Z7)]		The [directly specified device No.] + [index register's current value] becomes the device No. specified by the setting value. That device's current value becomes the setting value.

*4. The C200 to C255 32-bit up/down counter and the high-speed counter have counting directions.

*5. Enabled only when a memory cassette is installed.

18.7.2 Monitor mode operation

This section explains the procedure for monitoring the input [X], output [Y], auxiliary relay [M], state [S], timer [T], counter [C], data registers [D, DD], extended registers [R, DR], and the extended file registers [ER, DER]. The file register [D] and the index registers [V, Z] cannot be monitored.

→ Refer to Subsection 18.7.3 for a monitor screen display example.

→ Refer to Section 18.8 for user-registered device operation procedures.

→ Refer to Section 18.21 for the procedure used to display the timer, counter, and data register current values as hexadecimal values.

- 1) At the menu screen, use the [+] and [-] buttons to move the cursor to the "Monitor/Test" item, then press [OK] to display the "device selection screen" shown at right.

To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen

- 2) Use the [+] and [-] buttons to move the cursor to the device which is to be monitored.

To cancel the operation and return to the "menu screen", press [ESC].

>	>	D (1 6 b i t)	<
		DD (3 2 b i t)	
		T	
		C	
		R (1 6 b i t)	
		DR (3 2 b i t)	
		ER (1 6 b i t)	
		DER (3 2 b i t)	
		X	
		Y	
		M	
		S	
		U s e r	

- 3) Press [OK] to display the monitor screen for the device which was selected for monitoring.

To cancel the operation and return to the "device selection screen", press [ESC].

After the power is turned on, the number of the device to be displayed is shown as follows.

>	>	D	0	0
		D	1	0
		D	2	0
		D	3	0

- a) The first time the power is turned on, the display begins with device No.1.

- b) At subsequent power ONs, the device which was being monitored at the previous operation is displayed (they are saved in memory for each device type).

D	3 4	0
D	3 5	0
D	3 6	0
> > D	3 7	0

- 4) Use the [+] and [-] buttons to move the cursor or the screen to the until the device to be monitored is displayed.

→ Refer to Subsection 18.7.3 for status display details.


Selected Device Type	Button	Operation Description
• All devices	ESC	Returns to the "device selection screen".
• Data registers (D, DD)	-	Scrolls upward. Press for 1 second or longer for high-speed scrolling. If pressed again at the beginning of the device No. list, the display jumps to the end of the device No. list.
• Extended registers (R, DR)		
• Extended file registers (ER, DER)	+	Scrolls downward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the end of the device No. list, the display jumps to the beginning of the device No. list.
• Timer (T)		
• Counter (C)	-	Scrolls the display screen upward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the beginning of the device No. list, the display jumps to the end of the device No. list.
• Input (X)		
• Output (Y)	+	Scrolls the display screen downward. Hold for 1 second or longer for high-speed scrolling. If pressed again at the end of the device No. list, the display jumps to the beginning of the device No. list.
• Auxiliary relay (M)		
• State (S)	OK	Switches to the test mode when hold for 1 second or longer.
• All devices except (x)		

18.7.3 Monitor screen & status display

→ Refer to Section 18.21 for the procedure used to display the current values as hexadecimal values.


1. Data register [D (16-bit)] / extended register [R (16-bit)] / extended file register [ER (16-bit)]

	Display Content
[1]	Device No.
[2]	Current value

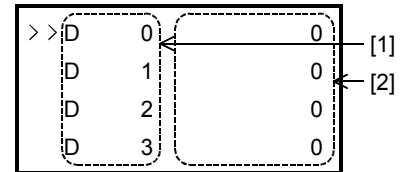

2. Data register [DD (32-bit)] / extended register [DR (32-bit)] / extended file register [DER (32-bit)]

	Display Content
[1]	Device No. [Upper 16-bit device No. (odd number)] [Lower 16-bit device No. (even number)]
[2]	Current value

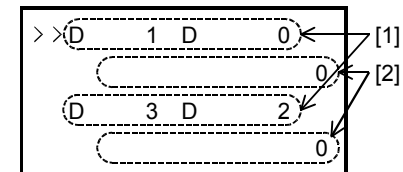


File register (D):

The file register (D) current value cannot be directly monitored at the display module.





3. Timer (T)

	Display Content
[1]	Device No.
[2]	Contact image ON: ■ OFF: Blank
[3]	Reset image ON: ■ OFF: Blank
[4]	Current value
[5]	Setting value or device specified by setting value (if an index modifier is present, the index register's device is also displayed).
[6]	Current value of device specified by setting value.

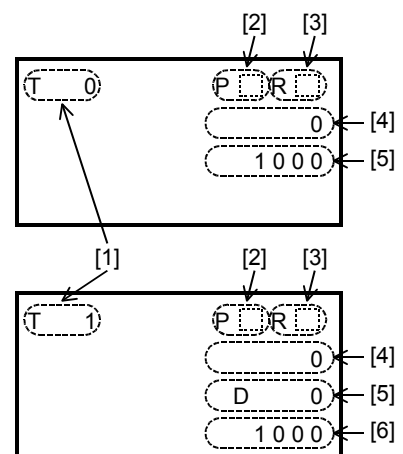



4. Counter [C]

	Display Content
[1]	Device No.
[2]	Contact image ON: ■ OFF: Blank
[3]	Reset image ON: ■ OFF: Blank
[4]	Count direction display UP count: ■ DOWN count: Blank (32-bit up/down counter and high-speed counter only)
[5]	Current value
[6]	Setting value or device specified by setting value (if an index modifier is present, the index register's device is also displayed).
[7]	Current value of device specified by setting value.

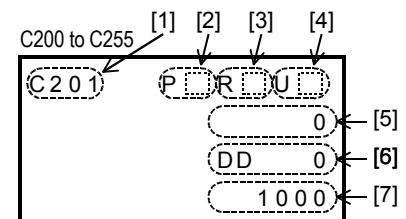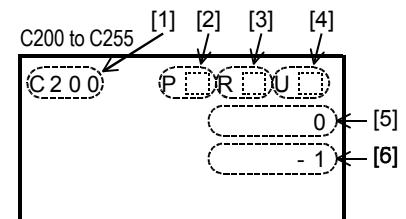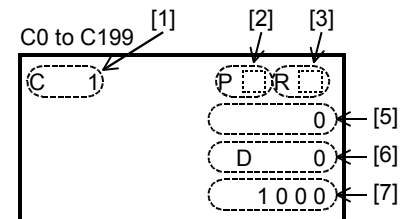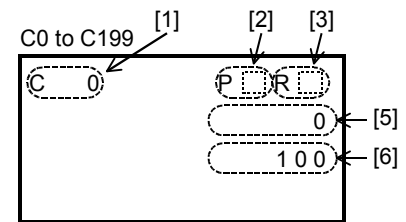

5. Input [X] / Output [Y] / Auxiliary Relay [M] / State [S]

	Display Content
[1]	Device No. at beginning of line. Input (X) and output (Y): 8 points per line. Auxiliary relay (M), special auxiliary relay (M), and state (S): 10 points per line.
[2]	ON/OFF status ON: Last digit of device No.. OFF: "•".

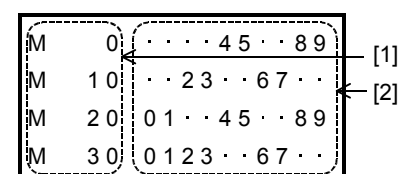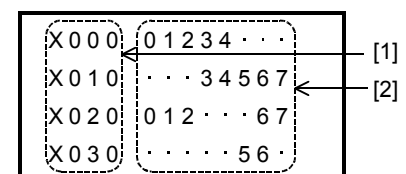

18.7.4 Test mode operation

There are 3 types of test mode operations, depending on the device type. The 3 operations are explained below.

→ Refer to Subsection 18.7.1 for details concerning test mode subject devices.

1. Data registers [D: D (16-bit), DD (32-bit)] / extended registers [R: R (16-bit), DR (32-bit)] / extended file registers [ER: ER (16-bit), DER (32-bit)] / user-registered devices

- 1) Perform a monitor mode operation to display the device whose current value is to be changed.

→ Refer to Subsection 18.7.2 for monitor function operation details.

D 6 2 0 0	0
> > D 6 2 0 1	0
D 6 2 0 2	0
D 6 2 0 3	0

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The current value begins blinking (refer to fig. at right).

D 6 2 0 0	0
D 6 2 0 1	> : : : : : 0 :
D 6 2 0 2	0
D 6 2 0 3	0

- 3) Use the [+] / [-] buttons to change the value as desired.
To cancel the operation and return to the "monitor screen", press [ESC].

Button	Operation Description
ESC	Cancels the operation and returns to the "monitor screen".
-	Reduces the value. Hold for 1 second or longer for high-speed reduction.
+	Increases the value. Hold for 1 second or longer for high-speed increase.
OK	Registers the current value and returns to the "monitor screen".

D 6 2 0 0	
D 6 2 0 1	> : : : : : 5 :
D 6 2 0 2	
D 6 2 0 3	

- 4) Press [OK] to register the current value and return to the "monitor screen".

- File register (D)


The display module's test function cannot be used to change the current value of the file register (D) which is stored in the program memory.

2. Timer [T], counter [C]

- 1) Perform a monitor mode operation to display the device where the test function is to be used.


→ **Refer to Subsection 18.7.2 for monitor function operation details.**

[Monitor screen]

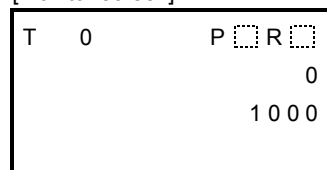


- 2) Press the [OK] button to display the cursor, then select the "test subject selection screen".
To cancel the operation and return to the "monitor screen", press [ESC].

[Test subject selection screen]

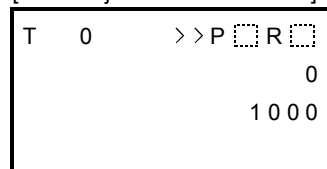


- 3) Use the [+] / [-] buttons to select the test subject.
To cancel the operation and return to the "monitor screen", press [ESC].

Test Subject	Test Description
[1]	Contact forced ON/OFF
[2]	Current value change
[3]	Setting value change

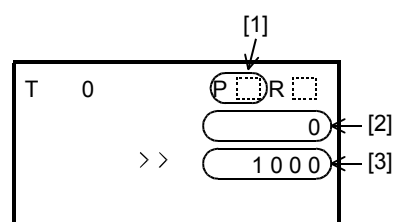

- 4) Hold the [OK] button for 1 second or longer to register the test subject selection, and switch to the test mode.
To cancel the operation and return to the "test subject selection screen", press [ESC].

Test Subject	Status when [OK] is hold for 1 second or longer
[1]	No change
[2]	Numeric value begins blinking.
[3]	

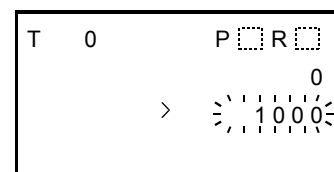


- 5) Operation varies as shown below, depending on the selected test subject.

- a) For "contact forced ON/OFF"

The contact ON/OFF status is highlighted when [OK] is pressed.


Button	Operation Description
ESC	Cancels the operation and returns to the "test subject selection screen".
-	Disabled
+	Disabled
OK	Highlights the contact ON/OFF status, meaning the current value can not be changed.

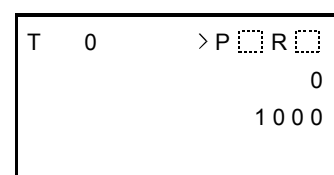

- b) For "current value change"

Use the [+] / [-] buttons to change the value as desired, then press [OK] to register the changed value.

Button	Operation Description
ESC	Cancels the operation and returns to the "test subject selection screen".
-	Reduces the value. Hold for 1 second or longer for high-speed reduction.
+	Increases the value. Hold for 1 second or longer for high-speed increase.
OK	Registers the current value or the setting value and returns to the "test subject selection screen".

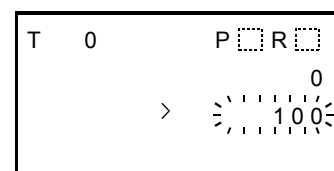

- c) For indirect setting format

- ① Use the [+] / [-] buttons to select the desired setting method (refer to table below), then press [OK] to register this selection.

Selectable Setting Values	Changeable Content	Setting Description
Direct setting (without index modifier) [Direct (K,H)]	Direct numeral setting	The directly specified value becomes the setting value.
Direct setting (with index modifier) [direct (K,H) + index register (V0 to V7, Z0 to Z7)]		The [directly specified numerical value] + [index register's current value] becomes the setting value.
Indirect setting (without index modifier) [data register (D), extended register (R)]	Indirectly specified device No.	The specified device's current value becomes the setting value.
Indirect setting (with index modifier) [data register (D) + index register (V0 to V7, Z0 to Z7)], [Extended register (R) + index register (V0 to V7, Z0 to Z7)]		The [directly specified device No.] + [index register's current value] becomes the device No. specified by the setting value. That device's current value becomes the setting value.

- ② Use the [+] / [-] buttons to determine the setting value.
The content that is changed varies according to the selected setting method, as shown below.
- For "direct setting" or "direct setting + index register" method:
Use the [+] / [-] buttons to change the value as desired, then press [OK] to register the changed value.
 - For "indirect setting" or "indirect setting + index register" method:
Use the [+] / [-] buttons to change the device No. as desired, then press [OK] to register the setting value.

- 6) After the setting operation is completed, return to the "test subject selection screen", where the [ESC] button can then be pressed to return to the "monitor screen".

3. Output [Y] / auxiliary relay [M] / special auxiliary relay [M] / state [S]

Forced ON/OFF operations are possible for the output [Y] / auxiliary relay [M] / special auxiliary relay [M] / state [S] contacts.

- 1) Perform a monitor mode operation to display the device whose ON/OFF status is to be changed.

→ **Refer to Subsection 18.7.2 for monitor function operation details.**

```
Y000 .....
Y010 .....
Y020 .....
Y030 .....
```

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The device then begins blinking (refer to figure at right). To cancel the operation and return to the "test subject selection screen", press [ESC].

```
Y000 .....
Y010 .....
Y020 .....
Y030 .....
```

- 3) Use the [+] / [-] buttons to move the blinking position to the device where a forced ON/OFF is desired. To cancel the operation and return to the "monitor screen", press [ESC].

```
Y000 .....
Y010 .....
Y020 .....
Y030 .....
```

Button	Operation Description
ESC	Cancels the operation and returns to the "monitor screen".
-	Moves in the lower device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling.
+	Moves in the higher device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling.
OK	Highlights the contact's ON/OFF status.

- 4) Press the [OK] button to highlight the contact's ON/OFF status. To cancel the operation and return to the "monitor screen", press [ESC].

```
Y000 .....
Y010 .....
Y020 .....
Y030 .....
```

Button	Operation Description
ESC	Cancels the operation and returns to the "monitor screen".
-	Moves in the lower device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling.
+	Moves in the higher device No. direction (for forced ON/OFF subject selection). Hold for 1 second or longer for high-speed scrolling.
OK	Highlights the contact ON/OFF status.

- 5) Press [ESC] to return to the monitor screen.

18.7.5 Test mode operation notes

When using multiple same-number timers (T) and counters (C).

Operation occurs as follows if multiple timers [T] and counters [C] are used in programs which contain CJ instructions and step ladders.

- When a setting change is performed after switching from the device monitor to the test function mode, the setting change is applied to the timer [T] or counter [C] which is nearest to Step 0.
- When changing the setting values for same-number timers [T] and counters [C], use the programming tool to change the program.


18.8 Monitor/Test Mode [User-Registered Devices]

Regarding user-registered devices at this "Monitor/Test" menu, monitor and test operations can be performed for a maximum of 4 data registers (16-bit/32-bit) specified by the system information.


→ Refer to Section 18.19 for details concerning the user-registered device setting procedure.

18.8.1 Monitor mode operation

- At the menu screen, use the [+] and [-] buttons to move the cursor to the "Monitor/Test" item, then press [OK] to display the "device selection screen" shown to the right.
To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen
- "Use the [+] and [-] buttons to move the cursor to the "User" item.
To cancel the operation and return to the "device selection screen", press [ESC].

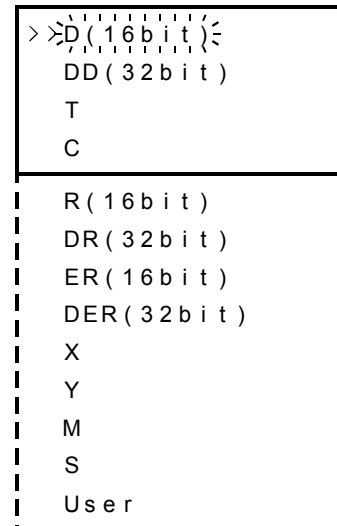


- Press [OK] to display the data registers specified by the system information.
The first time the power is turned on, the display begins with device No.1 of the "user-registered devices". At subsequent power ONs, the device which was being monitored at the previous operation is displayed.
If a specified user-registered device has been changed, the newly specified device is displayed.
To cancel the operation and return to the "device selection screen", press [ESC].

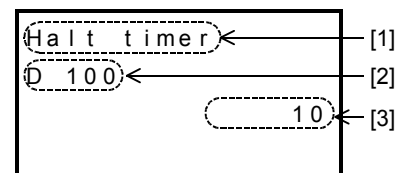

	Display Content
[1]	Device comments (registered at the PLC) is displayed together with the devices. If no device comment has been registered, the device comment area is left blank.
[2]	Device included in the user-registered devices
[3]	Current value

- Use the [+] and [-] buttons to scroll the user-registered devices screen.
To cancel the operation and return to the "device selection screen", press [ESC].

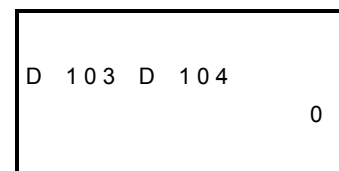

Button	Operation Description
ESC	Returns to the "device selection screen".
-	Scrolls the user-registered devices. (User-specified device 1 → user-specified device 4 → user-specified device 3 → user-specified device 2 → user-specified device 1)
+	Scrolls the user-registered devices. (User-specified device 1 → user-specified device 2 → user-specified device 3 → user-specified device 4 → user-specified device 1)
OK	Switches to the test mode when hold for 1 second or longer.

18.8.2 Test mode operation

- 1) Perform a monitor mode operation to display the user-registered device whose current value is to be changed.
→ Refer to Subsection 18.7.2 for monitor function operation details.

Halt timer
D 100
10

- 2) Hold the [OK] button for 1 second or longer to switch to the test mode. The current value then begins blinking (refer to fig. at right).
- 3) Use the [+] / [-] buttons to change the value as desired. To cancel the operation and return to the "monitor screen", press [ESC].

Halt timer
D 100
>: 10 <

Button	Operation Description
ESC	Cancels the operation and returns to the "monitor screen".
-	Reduces the value. Hold for 1 second or longer for high-speed reduction.
+	Increases the value. Hold for 1 second or longer for high-speed increase.
OK	Registers the current value and returns to the "monitor screen".

Halt timer
D 100
>: 20 <

- 4) Press [OK] to register the current value and return to the "user registered devices screen".

18.9 Error Check

The main unit's error status displays at the "ErrorCheck" menu.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ErrorCheck" item, then press [OK].
The error check result then displays at the "error display screen" (refer to fig. at right).
To cancel the operation and return to the "top screen (time display)", press [ESC] at the menu screen
- 2) If multiple errors have occurred, the [+] / [-] keys can be used to switch between the error display pages.

Button	Operation Description
ESC	Returns to the "menu screen".
-	1 error or less: Disabled 2 errors or more: Displays the previous-page's error screen.
+	1 error or less: Disabled 2 errors or more: Displays the next-page's error screen.
OK	Returns to the "menu screen".

Display Content

	Display Content
[1]	Active error flag
[2]	Error name
[3]	Error code
[4]	Number of concurrent errors (displays only when multiple errors have occurred)

- 3) To cancel the operation and return to the "menu screen", press [ESC].

When no errors have occurred

ErrorCheck
No errors

When 1 error has occurred

ErrorCheck
M8066 [1]
Ladder error [2]
Error code 6612 [3]

When multiple errors have occurred

ErrorCheck 1/2 [4]
M8060 [1]
I/O err [2]
Error code 1020 [3]

↑ / ↓

ErrorCheck 2/2 [4]
M8063 [1]
Link error1 [2]
Error code 6301 [3]

18.10 LANGUAGE (Menu Display Language Setting)

The language used at the display module menus is specified at the "LANGUAGE" menu. The language setting procedure is described below.

All operation explanations and display screen examples in this manual are in Japanese. When the menu display language is set to English, please convert the screen messages to their English translations.

→ Refer to Section 18.25 for the Japanese & English display character correspondence table.

18.10.1 Changing to Japanese menus

The procedure for changing from English menus to Japanese menus is described below.

- 1) Turn the PLC power on.

Following a brief title screen display (1.5 seconds), the "current time screen" or a "user message" is displayed.

Title screen

```
MELSEC - F
FX3U Series
Ver. 2.00
```

↓ Approx.
1.5 secs.

Top screen (Time display)

```
05 . 5 . 31
23 : 59 : 59 [ Tue ]
```

or

User creation screen (example)

```
<Production>
Target      10000
Production   100
Remaining    9900
```

- 2) Press the [OK] button to display the menu screen shown to the right (4 lines of the menu display).

```
>>Monitor/Test<
ErrorCheck
LANGUAGE
Contrast
```

```
ClockMenu
EntryCode
ClearAllDev
PLC Status
ScanTime
Cassette
```

- 3) At the menu screen, use the [+] / [-] buttons to move the cursor to the "LANGUAGE" item, then press [OK] to display the "display language selection screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
LANGUAGE
  日本語
>>English<
```

- 4) Use the [+] / [-] buttons to move the cursor to "日本語".
To cancel the operation and return to the "menu screen", press [ESC].

Button	Operation Description
ESC	Cancels the operation and returns to the "menu screen".
-	Moves the cursor upward.
+	Moves the cursor downward.
OK	Registers the selected display language and returns to the "menu screen".

- 5) Press [OK] to register the selected display language and return to the "menu screen".

18.10.2 Changing to english menus

Refer to Subsection 18.10.1 (Changing to japanese menus) for the access procedure from the title screen.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "LANGUAGE" item, then press [OK] to display the "display language selection screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

LANGUAGE
日本語
> English

- 2) Use the [+] / [-] buttons to move the cursor to "English".
To cancel the operation and return to the "menu screen", press [ESC].

Button	Operation Description
ESC	Cancels the operation and returns to the "menu screen".
-	Moves the cursor upward.
+	Moves the cursor downward.
OK	Registers the selected display language and returns to the "menu screen".


- 3) Press [OK] to register the selected display language and return to the "menu screen".

18.10.3 D8302 changes by program & related devices

Selections made at this menu are saved at D8302.
D8302 has a battery backup for latch.
D8302 changes by user program can also be specified.

D8302 Current Value	Display Language
K0	Japanese
K1	English
Other	English


When the display language is set to "Japanese"




18.11 Contrast

The liquid crystal display contrast setting is specified at the "Contrast" menu. Selections made at this menu are saved at D8302. A contrast setting of "0" is specified at factory default.

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Contrast" item, then press [OK] to display the "contrast adjustment screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

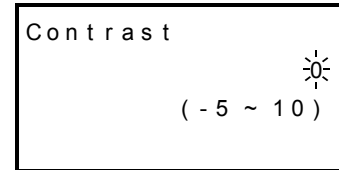

- 2) Use the [+] / [-] buttons to adjust the contrast.
To cancel the operation and return to the "menu screen", press [ESC].

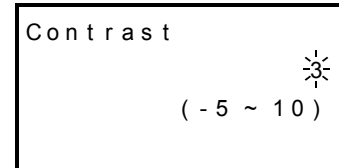

Button	Operation Description
ESC	Cancels the operation and returns to the "menu screen".
-	Lowest the contrast (decreases the numeric value. The value can be decreased to -5.)
+	Increases the contrast (increases the numeric value. The value can be increased to +10.)
OK	Registers the selected setting and returns to the "menu screen".

- 3) Press the [OK] button to register the selected setting and return to the "menu screen".

18.12 Clock Menu (Current Time Setting)

The "ClockMenu" menu consists of "current time display" and the "time setting" items.
The current time should be set before operating the system.

18.12.1 Current time setting procedure

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClockMenu" item, then press [OK] to display the selection screen shown at right.
To cancel the operation and return to the "top screen (time display)", press [ESC].
- 2) Use the [+] / [-] buttons to move the cursor to the "Clock setting" item.
To cancel the operation and return to the "menu screen", press [ESC].
- 3) Press the [OK] button to display the "Clock setting screen".
To cancel the operation and return to the "selection screen", press [ESC].

```
> >Current time<
    Clock setting
```

```
Current time
> >Clock setting<
```

```
Clock setting
    19 . 8 . 1993 *
    7 : 11 : 19 [ Thu ]
```

- 4) Use the [+] / [-] buttons to change the blinking data as desired, then press [OK] to register the change.
Settings are performed in the following sequence: Year → Month → Day → Hours → Minutes → Seconds.
After pressing [OK] to register the final "seconds" setting, a "Current time is set" message is displayed, completing the current time setting procedure.

```
Clock setting
    31 . 1 . 2004 *
    23 : 59 : 59 [ Sat ]
```

The default "Year" display is a 2-digit value indicating the Western calendar year.

Button	Operation Description
ESC	Returns to the previous setting item. Returns to the "selection screen", when at the "Year" item ("Year" is blinking) position.
-	Reduces the value. Hold for 1 second or longer for high-speed reduction.
+	Increases the value. Hold for 1 second or longer for high-speed increase.
OK	Proceeds to the next setting item. "Current time is set" message displays if pressed at the "Seconds" item ("Seconds" is blinking).

- 5) Press [OK] or [ESC] to return to the "selection screen".
- 6) Press [ESC] to return to the "menu screen".

```
Current time
> >Clock setting<
```


18.12.2 Displaying the current time

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClockMenu" item, then press [OK] to display the selection screen shown to the right.
To cancel the operation and return to the "top screen (time display)", press [ESC].
- 2) Use the [+] / [-] buttons to move the cursor to the "Current time" item. To cancel the operation and return to the "menu screen", press [ESC].
- 3) Press the [OK] button to display the current time.
To cancel the operation and return to the "selection screen", press [ESC].

```
> >Current time<
  Clock setting
```

Button	Operation Description
ESC	Returns to the "selection screen".
-	Disabled
+	Disabled
OK	Returns to the "selection screen".

- 4) Press [OK] or [ESC] to return to the "selection screen".
- 5) Press [ESC] to return to the "menu screen".

2-digit display


```
3 1 . 1 . 0 4
2 3 : 5 9 : 5 9 [ S a t ]
```

4-digit display

```
3 1 . 1 . 2 0 0 4
2 3 : 5 9 : 5 9 [ S a t ]
```

18.12.3 Changing the current time's "Year" from 2-digit format to 4-digit format

The "Year" data displays as 2-digit value with a default. This can be changed to a 4-digit display by the following programming.



It is also possible to set the current time with a sequence program.

→ Refer to the "time setting" (special devices D8013 to D8019) section of the Programming Manual.

18.13 Entrycodes

Entry codes registered at the PLC can be canceled from the "EntryCode" menu.
When canceled, all operations are enabled.
Registering or changing entry codes is not possible at the display module.
The programming tool must be used in advance to register new entry codes.

18.13.1 Entry code types & levels

Entry codes can be entered in 2 ways (8-digit or 16-digit), depending on the peripheral device in question.

- For a [entry code (8-digit)] + [2nd entry code (8-digit)] = 16-digit input:
Processing is possible only with a peripheral device version compatible with the FX3U PLC.
- For an entry code (8-digit) input only:
Processing is possible even with a peripheral device version that is not compatible with the FX3U PLC.

Number Of Digits	Registration Method	Peripheral Device		Entry Code Registration Level	Entry Code Description
		FX3U Compatible	Not FX3U Compatible		
16-digit	By selecting the entry code registration level at the GX Developer's setting screen.	✓	—	Reading/writing prohibited	16-digit hexadecimal value (A to F, 0 to 9) [Ex] FAB05C25DAECF293 AABCDEFF34509345
				Writing prohibited	
				All online operations prohibited	
8-digit	By entering the level at the first character when entering the entry code.	✓	✓	A (A, 0 to 9 first char.)	8-digit hexadecimal value beginning with "A" or "0" to "9". [Ex] 0ABCDEF2, AABCD345
				B	8-digit hexadecimal value beginning with "B". [Ex] B1234567, BABCDEF7
				C	8-digit hexadecimal value beginning with "C". [Ex] C8904567, CDEF567F

18.13.2 Level-specific restrictions screen list

- ✓: Function enabled
△: Timer and counter setting values cannot be changed.
–: Function disabled


Function name		None	Entry Code: 8 digits Label entered as the first character at Entry Code input			Entry Code: 16 digits Selected at GX Developer setting screen		
			A	B	C	All online operations prohibited	Writing prohibited	Reading/ writing prohibited
Top screen (time display)		✓	✓		✓	✓		✓
Monitor/ Test	Device	✓	–		△	–		△
	User (User-registered device)	✓	–		✓	–		✓
ScanTime (Scan time display)		✓	–		✓	–		✓
PLC status		✓	–		✓	–		✓
ErrorCheck		✓	–		✓	–		✓
User message display		✓	✓		✓	✓		✓
Display screen protect function		✓	–		–	–		–
Menu display language setting		✓	–		✓	–		✓
Contrast adjustment		✓	–		✓	–		✓
Time	Display	✓	✓		✓	✓		✓
	Setting	✓	–		✓	–		✓
Entry Code (cancel)		–	✓		✓	✓		✓
Clear all device (Device all-clear)		✓	–		✓	–		✓
Memory cassette transfer		✓	–		–	–		–

18.13.3 Entry code storage

The system has no process for recovering registered entry codes which are forgotten.
Therefore, be sure to store the entry codes in a secure location.

18.13.4 Screens requiring entry codes for access

At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display one of the 4 screens shown below (the screen that displays depends on the entry code status).
If no entry codes are registered, press [ESC] to return to the "menu screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

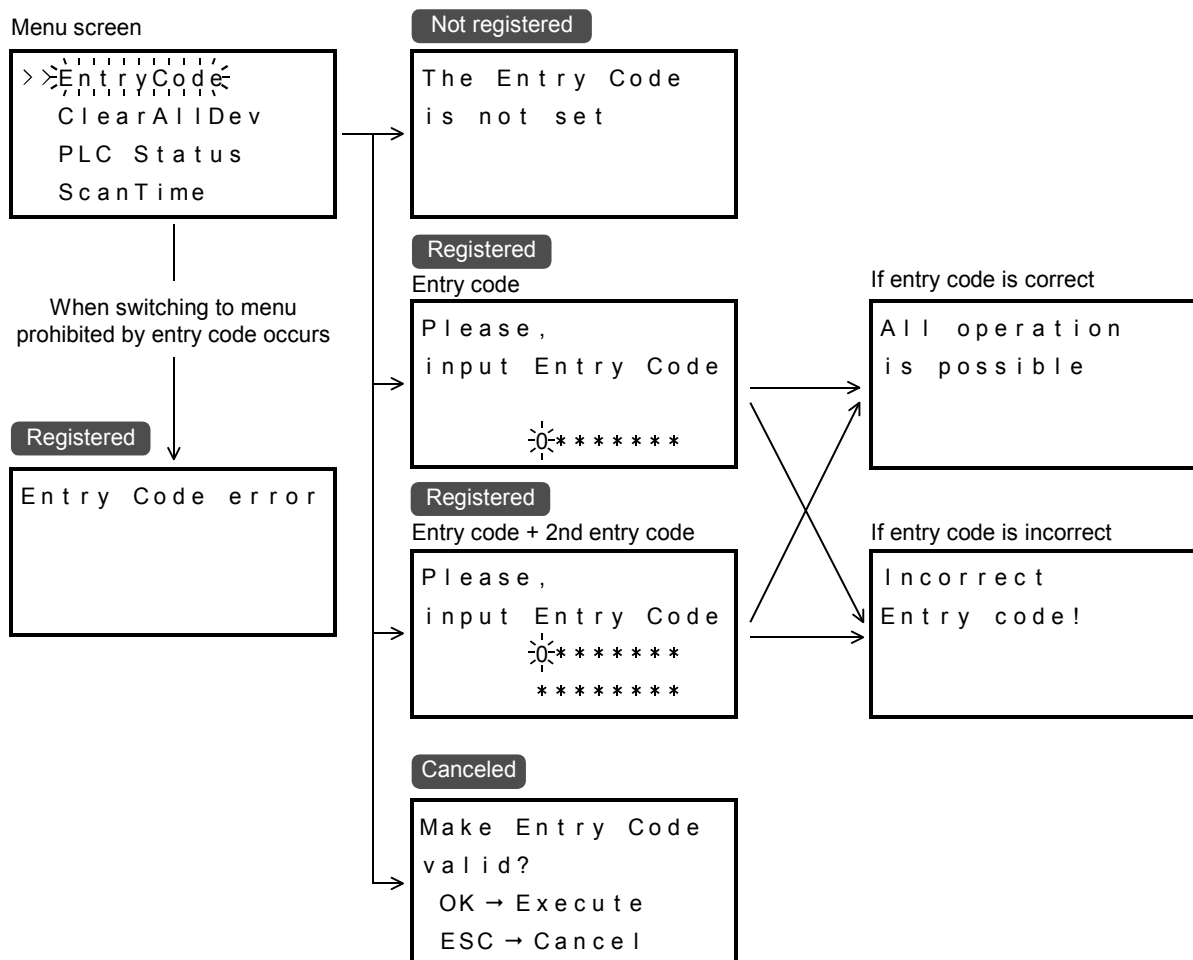


18.13.5 Canceling an entry code


- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display the "entry code input screen".

If an entry code has been registered, one of the following screens is displayed.

- If a 16-digit entry code is registered, an 8-digit × 2-line screen (shown at left below) is displayed.
- If an 8-digit entry code is registered, an 8-digit × 1-line screen (shown at right below) is displayed.

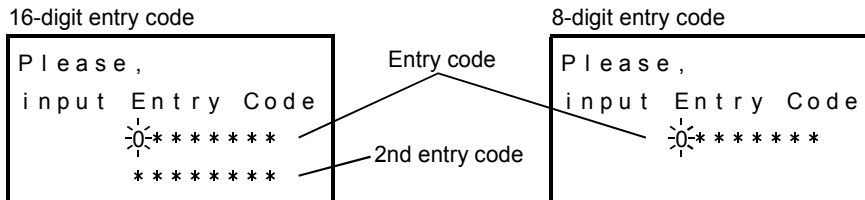

- 2) Use the [+] / [-] buttons to specify the first digit of the entry code, then press [OK] to proceed to the next digit. To cancel the operation and return to the "menu screen", press [ESC].

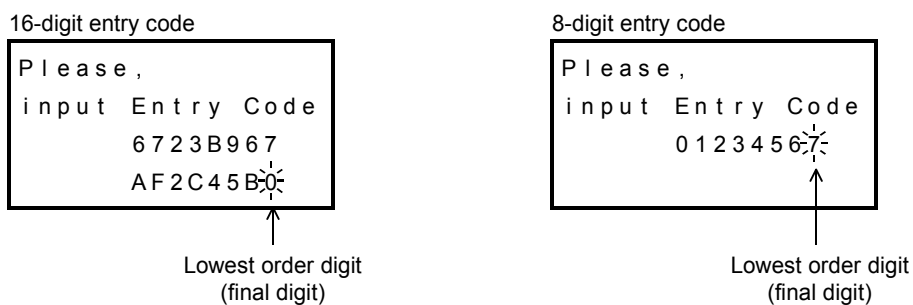

Button		Operation Description	
ESC		Cancels the operation and returns to the "menu screen" if pressed when the entry code's left-most digit (highest order digit) is blinking. Cancels the input and moves leftward to the next digit (higher order digit) if pressed when a digit other than the left-most digit is blinking.	
-		Reduces the value (F→E...2→1→0). Hold for 1 second or longer for high-speed reduction.	
+		Increases the value (0→1→2...E→F). Hold for 1 second or longer for high-speed increase.	
OK	Highest order digit to 2nd digit	Registers the specified value and moves to the next digit input position. If [OK] is pressed at the lowest order digit, and if the entered entry code is correct, the Entry Code is canceled.	
	Lowest order digit (final digit)	Correct Entry Code	An "All operation is possible" message appears, and the Entry Code is canceled.
		Incorrect Entry Code	A "Incorrect Entry Code" message appears.

- 3) If the [OK] button is pressed at the lowest order position, the entered Entry Code is registered and the message shown to the right appears.

If the "Incorrect Entry Code" message appears, press [ESC] and return to step 1).

- 4) Press [OK] or [ESC] to return to the "menu screen".

If entry code is correct

All operation
is possible

If entry code is incorrect

Incorrect
Entry code!

18.13.6 Enabling an entry code

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "EntryCode" item, then press [OK] to display the "enable entry code" screen.
- 2) Press the [OK] button to enable the entry code. Or, to retain the entry code's canceled status, press [ESC].

Button	Operation Description
ESC	Cancels the operation and returns to the "menu screen".
-	Disabled
+	Disabled
OK	Enables the Entry Code and returns to the "menu screen".

```
Make Entry Code
valid?
OK → Execute
ESC → Cancel
```

18.14 Device All-Clear

The devices listed below can be initialized (contact OFF, or current value to "0") from the "Clear all devices" menu when a PLC STOP status is in effect.

Subject devices	Output [X], auxiliary relay (special relay) [M], state [S], timer [T], counter [C], data register (special data register) [D], extended register [R]. File register [D] is not a subject device.
Non-subject devices	Input [Y], file register [D], extended file register [ER].

18.14.1 Device all-clear operation

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "ClearAllDev" item, then press [OK] to display the "Clear all devices" screen.
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Clear
all devices
OK → Execute
ESC → Cancel
```

- 2) Press the [OK] button to initialize the subject devices. Or, to cancel the operation, press [ESC].
If the PLC is running at this time, a "PLC is running" message is displayed and the all-clear is not executed. In this case, press [OK] or [ESC] to return to the "menu screen".

Button	Operation Description
ESC	Cancels the operation and returns to the "menu screen".
-	Disabled
+	Disabled
OK	Initializes the subject devices and returns to the "menu screen".

```
All device
were cleared
```

When PLC is running

```
PLC is running
```

- 3) Press [OK] or [ESC] to display the "menu screen".

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

18.15 PLC Status

The PLC statuses shown below can be displayed from the "PLC Status" menu.

→ Refer to Subsection 18.15.2 for display details.

Page Title	Display Item
PLC Status(1/3)	<ul style="list-style-type: none"> Version Entry code status
PLC Status(2/3)	<ul style="list-style-type: none"> Program memory type Memory cassette's write protect status Program memory capacity
PLC Status(3/3)	<ul style="list-style-type: none"> Battery voltage Number of registered comments

18.15.1 Display operation

- At the menu screen, use the [+] / [-] buttons to move the cursor to the "PLC Status" item, then press [OK] to display the "PLC Status (1/3)" screen.
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
PLC Status ( 1 / 3 )
Ver . 2 . 00
All operation
is unrestricted
```

- Use the [+] / [-] buttons to switch between the PLC Status screen pages.
Press [OK] or [ESC] to return to the "menu screen".

```
PLC Status ( 1 / 3 )
Ver . 2 . 00
PLC operation
is limited
```

Button	Operation Description
ESC	Returns to the "menu screen".
-	Returns to the previous page. ↳ PLC Status(3/3) → PLC Status(2/3) → PLC Status(1/3) —
+	Proceeds to the next page. ↳ PLC Status(1/3) → PLC Status(2/3) → PLC Status(3/3) —
OK	Returns to the "menu screen".


```
PLC Status ( 2 / 3 )
Internal Memory
Protection - -
Capacity 64K
```

```
PLC Status ( 3 / 3 )
Battery      3 . 2V
Comments
1000 / 2000
```

- Press [OK] or [ESC] to return to the "menu screen".


18.15.2 PLC status display items

1. PLC Status 1/3

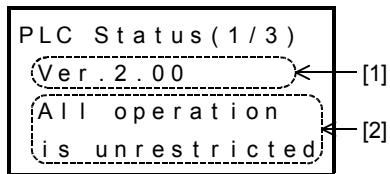


	Display Content										
[1]	Main unit's version information.										
[2]	<p>Indicates the PLC's entry code registration status. Messages vary according to the entry code status. When a 16-bit entry code status is "all online operations prohibited", and when an 8-bit entry code status is "level A", the entry code must be canceled in order to view the PLC information.</p> <table> <tr> <th>Displayed message</th><th>PLC status</th></tr> <tr> <td>PLC operation is limited</td><td> <ul style="list-style-type: none"> For 16-bit entry code: A "writing prohibit" or "reading/writing prohibit" entry code is registered. For 8-bit entry code: A "Level B" or "Level C" entry code is registered. </td></tr> <tr> <td>All operation is unrestricted</td><td>The registered entry code has been canceled by an "entry code" menu operation.</td></tr> <tr> <td>The Entry Code is not set</td><td>No entry codes have been registered.</td></tr> <tr> <td>Fatal error occurred</td><td>→ Refer to Subsection 18.24.1 for details.</td></tr> </table>	Displayed message	PLC status	PLC operation is limited	<ul style="list-style-type: none"> For 16-bit entry code: A "writing prohibit" or "reading/writing prohibit" entry code is registered. For 8-bit entry code: A "Level B" or "Level C" entry code is registered. 	All operation is unrestricted	The registered entry code has been canceled by an "entry code" menu operation.	The Entry Code is not set	No entry codes have been registered.	Fatal error occurred	→ Refer to Subsection 18.24.1 for details.
Displayed message	PLC status										
PLC operation is limited	<ul style="list-style-type: none"> For 16-bit entry code: A "writing prohibit" or "reading/writing prohibit" entry code is registered. For 8-bit entry code: A "Level B" or "Level C" entry code is registered. 										
All operation is unrestricted	The registered entry code has been canceled by an "entry code" menu operation.										
The Entry Code is not set	No entry codes have been registered.										
Fatal error occurred	→ Refer to Subsection 18.24.1 for details.										

2. PLC Status 2/3

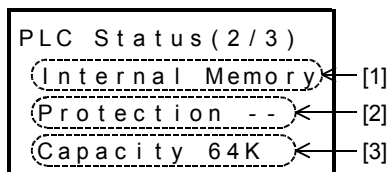

	Display Content								
[1]	<p>Program memory type</p> <table> <tr> <th>Displayed message</th><th>Program memory type</th></tr> <tr> <td>Internal Memory</td><td>PLC internal RAM memory</td></tr> <tr> <td>Memory Cassette</td><td>Memory cassette flash memory</td></tr> </table>	Displayed message	Program memory type	Internal Memory	PLC internal RAM memory	Memory Cassette	Memory cassette flash memory		
Displayed message	Program memory type								
Internal Memory	PLC internal RAM memory								
Memory Cassette	Memory cassette flash memory								
[2]	<p>Memory cassette protect switch status</p> <table> <tr> <th>Displayed message</th><th>Switch Status</th></tr> <tr> <td>Protection switch --</td><td>Internal RAM memory (without protect switch)</td></tr> <tr> <td>Protection switch ON</td><td>Memory cassette protect switch is ON</td></tr> <tr> <td>Protection switch OFF</td><td>Memory cassette protect switch is OFF</td></tr> </table>	Displayed message	Switch Status	Protection switch --	Internal RAM memory (without protect switch)	Protection switch ON	Memory cassette protect switch is ON	Protection switch OFF	Memory cassette protect switch is OFF
Displayed message	Switch Status								
Protection switch --	Internal RAM memory (without protect switch)								
Protection switch ON	Memory cassette protect switch is ON								
Protection switch OFF	Memory cassette protect switch is OFF								
[3]	Program memory's max. setting capacity (in step units)								

3. PLC Status 3/3

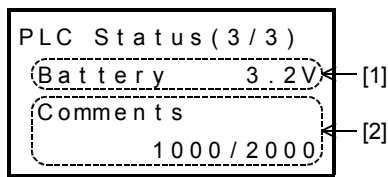

	Display Content
[1]	Battery voltage
[2]	Number of registered comments ([number of registered comments] / [number of parameter-specified comments])

18.16 Scan Time (Scan Time Display)

The scan time's current value, minimum value, and maximum value can be displayed from the "ScanTime" menu.

18.16.1 Scan time display operation

- At the menu screen, use the [+] / [-] buttons to move the cursor to the "ScanTime" item, then press [OK] to display the "scan time screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].
- Press [OK] or [ESC] to return to the "menu screen".

ScanTime	
Curr :	0 . 7ms
Max :	5 . 6ms
Min :	0 . 6ms

18.17 Cassette (Memory Cassette Transfers)

Data transfers (and consistency checks) between the internal RAM memory and a connected memory cassette can be performed from the "Cassette" menu when the PLC is in a STOP state.

This menu is disabled, however, if an entry code is registered in the internal RAM. In this case, remove the memory cassette and use the programming tool to cancel the internal RAM's entry code.

Item	Operation Description
Cassette←RAM	Copies internal program memory (RAM) data to a connected memory cassette.
Cassette→RAM	Copies data from a connected memory cassette to the internal program memory (RAM).
Cassette : RAM	Performs a consistency check of the connected memory cassette data and the internal program memory (RAM) data.

18.17.1 Transfer from internal RAM to memory cassette (Cassette ← RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
> > Cassette ← RAM
Cassette → RAM
Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette ← RAM" item, then press [OK] to display the screen shown to the right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette ← RAM
(W r i t e )
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the transfer.
Or, press [ESC] to cancel the operation.

Button	Operation Description
ESC	Cancels the operation and returns to the "memory cassette transfer screen".
-	Disabled
+	Disabled
OK	Executes the transfer.

```
Cassette ← RAM
(W r i t e )
Please wait...
```

- Caution:
Do not turn the PLC power off or perform writing from the programming tool while a program is being transferred by a "memory cassette transfer" menu operation, as these actions could destroy the program, causing incorrect operation of the PLC.

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:

- The transfer is not executed if a "PLC is running" message appears.
In this case, set the PLC to a STOP state, then perform step 3) described above.

```
PLC is running
```

- The transfer is not executed if a "Transfer failed" message appears.
In this case, turn the power off, check the memory cassette connection, then attempt the operation again from the first step.

```
Cassette ← RAM
(W r i t e )
Transfer
failed
```

- The transfer is not executed if a "Memory Cassette is write-protected" message displays.
In this case, turn the power OFF, set the memory cassette PROTECT switch to OFF, then attempt the operation again from the first step.

```
Memory Cassettes
is
write-protected
```

- A "Transfer completed" message appears when the transfer is completed.
When this message appears, press [OK] or [ESC] to display the "Cassette screen".

```
Cassette ← RAM
(W r i t e )
Transfer
completed
```

- 5) Press [ESC] to display the "menu screen".

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

18.17.2 Transfer from memory cassette to internal RAM (Cassette → RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
  Cassette ← RAM
> >Cassette → RAM<
  Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette → RAM" item, then press [OK] to display the screen shown to the right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette → RAM
                ( Read )
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the transfer.
Or, press [ESC] to cancel the operation.

Button	Operation Description
ESC	Cancels the operation and returns to the "memory cassette transfer screen".
-	Disabled
+	Disabled
OK	Executes the transfer.

```
Cassette → RAM
                ( Read )
Please wait...
```

- Caution:
Do not turn the PLC power off or perform writing from the programming tool while a program is being transferred by a "memory cassette transfer" menu operation, doing so may destroy the program and disorder the PLC.

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:

- The transfer is not executed if a "PLC is running" message appears.
In this case, set the PLC to a STOP state, then perform the step 3) operation described above.

```
PLC is running
```

- The transfer is not executed if a "Transfer failed" message appears.
In this case, turn the power off, check the memory cassette connection, then attempt the operation again from the first step.

```
Cassette → RAM
                ( Read )
Transfer
failed
```

- A "Transfer completed" message appears when the transfer is completed.
When this message appears, press [OK] or [ESC] to display the "memory cassette transfer screen".

```
Cassette → RAM
                ( Read )
Transfer
completed
```

- 5) Press [ESC] to display the "menu screen".

18.17.3 Memory cassette & internal RAM consistency check (Cassette : RAM)

- 1) At the menu screen, use the [+] / [-] buttons to move the cursor to the "Cassette" item, then press [OK] to display the "memory cassette transfer screen".
To cancel the operation and return to the "top screen (time display)", press [ESC].

```
Memory Cassette
  Cassette ← RAM
  Cassette → RAM
> > Cassette : RAM
```

- 2) Use the [+] / [-] buttons to move the cursor to the "Cassette : RAM" item, then press [OK] to display the screen shown at right.
To cancel the operation and return to the "memory cassette transfer screen", press [ESC].

```
Cassette : RAM
              (Verify)
OK → Execute
ESC → Cancel
```

- 3) Press [OK] to begin the consistency check.
Or, press [ESC] to cancel the operation.

Button	Operation Description
ESC	Cancels the operation and returns to the "memory cassette transfer screen".
-	Disabled
+	Disabled
OK	Executes the consistency check.

```
Cassette : RAM
              (Verify)
Please wait...
```

- 4) Press [OK] or [ESC] to return to the "memory cassette transfer screen".

- Result and measures to take:
 - The consistency check is not executed if a "PLC is running" message appears.
In this case, stop the PLC, then perform step 3) described above.

```
PLC is running
```

- 5) Press [ESC] to display the "menu screen".

```
Cassette : RAM
              (Verify)
Programs match
```

```
Cassette : RAM
              (Verify)
Programs
don't match
```

18.18 System Information (Restrictions From PLC)

Some of the display module functions require system information settings in order to enable program control of these functions. Functions which require the use of system information are listed below.

- Monitor/test function
 - For hexadecimal display of current value:
→ **Refer to Section 18.21 for the setting procedure.**
 - To use user-registered devices:
→ **Refer to Section 18.19 for the setting procedure.**
- Display screen protect function
→ **Refer to Section 18.22 for details.**
- Operation button ON/OFF information
→ **Refer to Section 18.20 for details.**
- User message display function
→ **Refer to Section 18.23 for details.**

18.18.1 System information list

Special data register D8300 and D8301 devices with first numbers specified are assigned as system information devices (data register, auxiliary relay). The data register (excluding special data register) should be specified at the system information's "system signal 1", and the auxiliary relay (excluding special auxiliary relay) should be specified at the system information's "system signal 2". Both D8300 and D8301 have default settings of "-1".

→ **Refer to Sections 18.19 to 18.23 for explanations of each system signal.**

1. System signal 1


Special data register	System Information	Description	Remarks
D8300 = K□□ Occupies 41 points	D□□	User-registered device 1 type	Refer to Section 18.19
	D□□+1	User-registered device 1 No.	
	D□□+2	User-registered device 2 type	
	D□□+3	User-registered device 2 No.	
	D□□+4	User-registered device 3 type	
	D□□+5	User-registered device 3 No.	
	D□□+6	User-registered device 4 type	
	D□□+7	User-registered device 4 No.	
	D□□+8	Device for display screen protect function	Refer to Section 18.22
	D□□+9	Device where user message display character strings are saved. Use either character data or the data shown below.	Refer to Section 18.23
	?	<ul style="list-style-type: none"> • Alphanumeric: 20H to 7DH, A1H to DFH ASCII code • Japanese: Shift JIS code 	
	D□□+40		

2. System signal 2

Special data register	System Information	Description	Remarks
D8301 = K△△ Occupies 7 points	M△△	[OK] button ON/OFF	Refer to Section 18.20
	M△△+1	[ESC] button ON/OFF	
	M△△+2	[-] button ON/OFF	
	M△△+3	[+] button ON/OFF	
	M△△+4	User message display command	Refer to Section 18.23
	M△△+5	Device for specifying the "Monitor/Test" menu's current value and setting the value display format (hexadecimal or decimal).	Refer to Section 18.21
	M△△+6	Display screen information	Refer to Section 18.19 Refer to Section 18.23

18.18.2 System information setting program example

The following is a program example in which the system information has been assigned to D50 to D90 and M50 to M56.

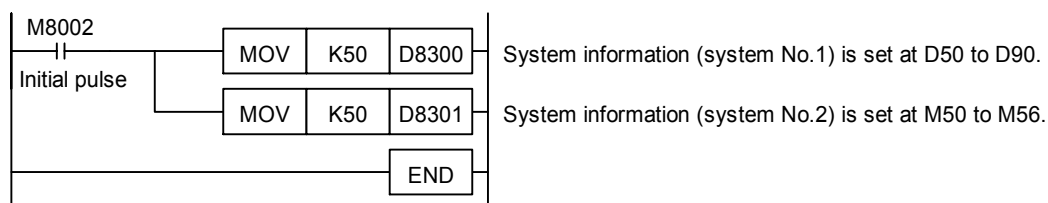

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

18.19 User (User-Registered Device Setting)

The procedure for specifying the devices which display as "User" at the "Monitor/Test" menu is explained below. The user-registered devices are specified by writing the "device type" and "device No." at "D□□ to D□□+7" in the system information (system signal 1).

→ Refer to Section 18.8 for operation details.

→ Refer to Section 18.18 for system information setting details.

→ Refer to Subsections 18.19.3 to 18.19.5 for program examples.

18.19.1 System information - user-registered device setting

1. System signal 1

User-Registered Device No.	System Information	Description	Setting Value
1	D□□	Device type	D□□= K7: Data register [D] (16-bit) D□□= K8: Data register [D] (32-bit)
	D□□+1	Device No.	When D□□ = K7, D□□ + 1 = K0 to K8511 When D□□ = K8, D□□ + 1 = K0 to K7998, K8000 to K8510
2	D□□+2	Device type	D□□+2= K7: Data register [D] (16-bit) D□□+2= K8: Data register [D] (32-bit)
	D□□+3	Device No.	When D□□ = K7, D□□ + 3 = K0 to K8511 When D□□ = K8, D□□ + 3 = K0 to K7998, K8000 to K8510
3	D□□+4	Device type	D□□+4= K7: Data register [D] (16-bit) D□□+4= K8: Data register [D] (32-bit)
	D□□+5	Device No.	When D□□ = K7, D□□ + 5 = K0 to K8511 When D□□ = K8, D□□ + 5 = K0 to K7998, K8000 to K8510
4	D□□+6	Device type	D□□+6= K7: Data register [D] (16-bit) D□□+6= K8: Data register [D] (32-bit)
	D□□+7	Device No.	When D□□ = K7, D□□ + 7 = K0 to K8511 When D□□ = K8, D□□ + 7 = K0 to K7998, K8000 to K8510

2. System signal 2

System Information	Setting Content	Display Screen Status
M△△+6	ON	"User-registered device" screen, or "user message" screen is displayed.
	OFF	Other screen is displayed.

18.19.2 Precaution when setting 3 or fewer devices

When 3 or fewer devices are set as user-registered devices, the "type" setting for unused devices should be set to a value other than 7 and 8.

→ Refer to Subsection 18.19.4 for a program example.

18.19.3 Program example 1 (when 4 devices are displayed as user-registered devices)

Use this program example as a reference when setting 4 devices as user-registered devices.


1. Operation

In this program example, the 4 devices shown in the table below are set as user-registered devices, with a hexadecimal format specified for the current value display.

- 1) The hexadecimal display format applies only to current values which display at the "user-registered device" menu. Other current values display in a decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.

User-Registered Device No.	Devices Set As User-Registered Devices	Data Length	Display Format
1	D100 (D101)	32Bit	Hexadecimal
2	D102	16Bit	
3	D103	16Bit	
4	D104	16Bit	

2. Program

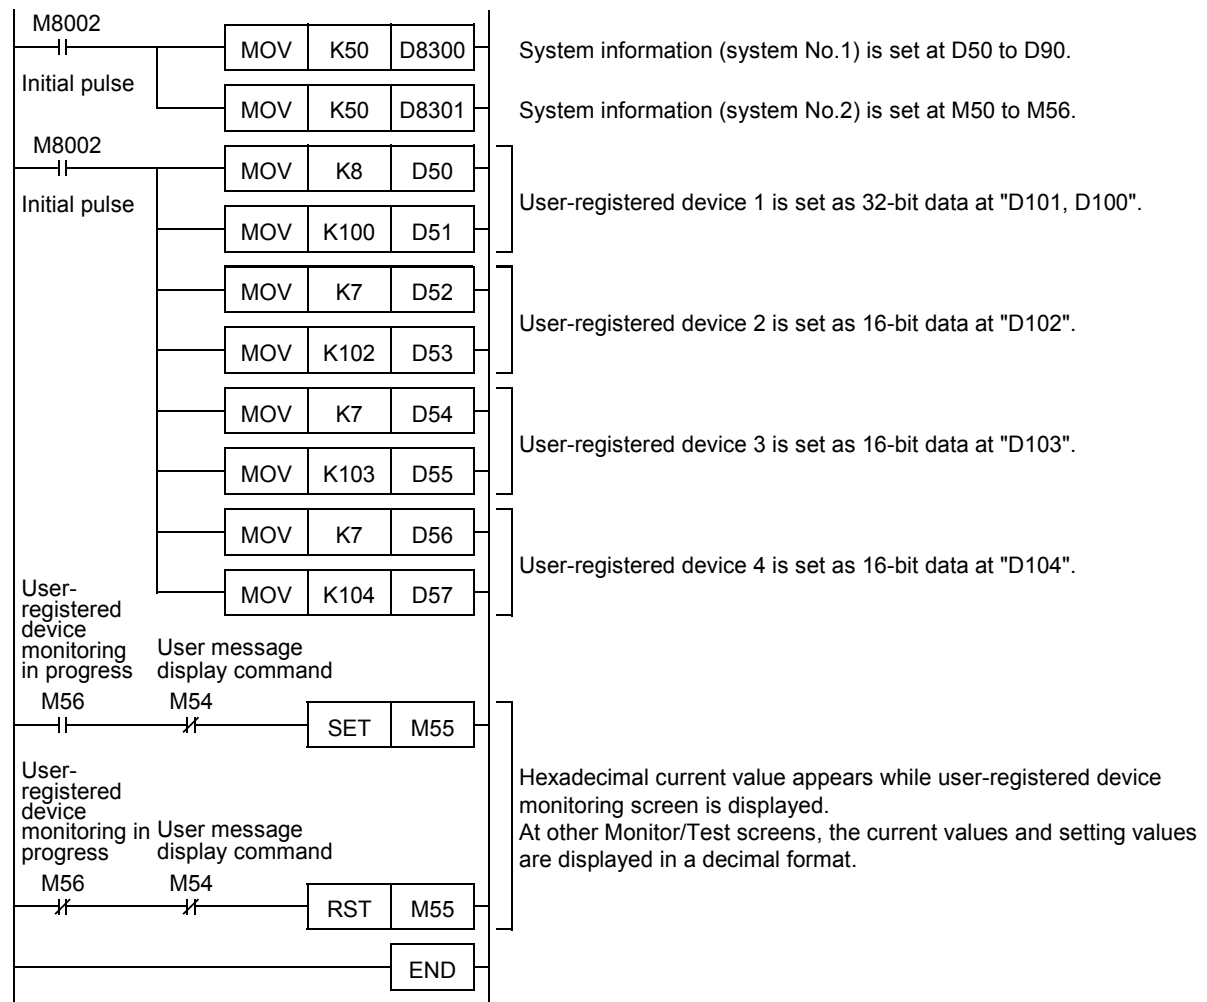

18.19.4 Program example 2 (when 3 or fewer devices are displayed as user-registered devices)

Use this program example as a reference when setting 3 or fewer devices as user-registered devices.

1. Precaution When Setting 3 Or Fewer Devices

When 3 or fewer devices are set as user-registered devices, the "type" setting for unused devices should be set to a value other than 7 and 8.


2. Operation

In this program example, the 3 devices shown in the table below are set as user-registered devices, with a hexadecimal format specified for the current value display.

- 1) The hexadecimal display format applies only to current values which are displayed at the "user-registered device" menu. Other current values are displayed in a decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.

User-Registered Device No.	Devices Set As User-Registered Devices	Data Length	Display Format
1	D100 (D101)	32-Bit	Hexadecimal
2	D102	16-Bit	
3	D103	16-Bit	

3. Program

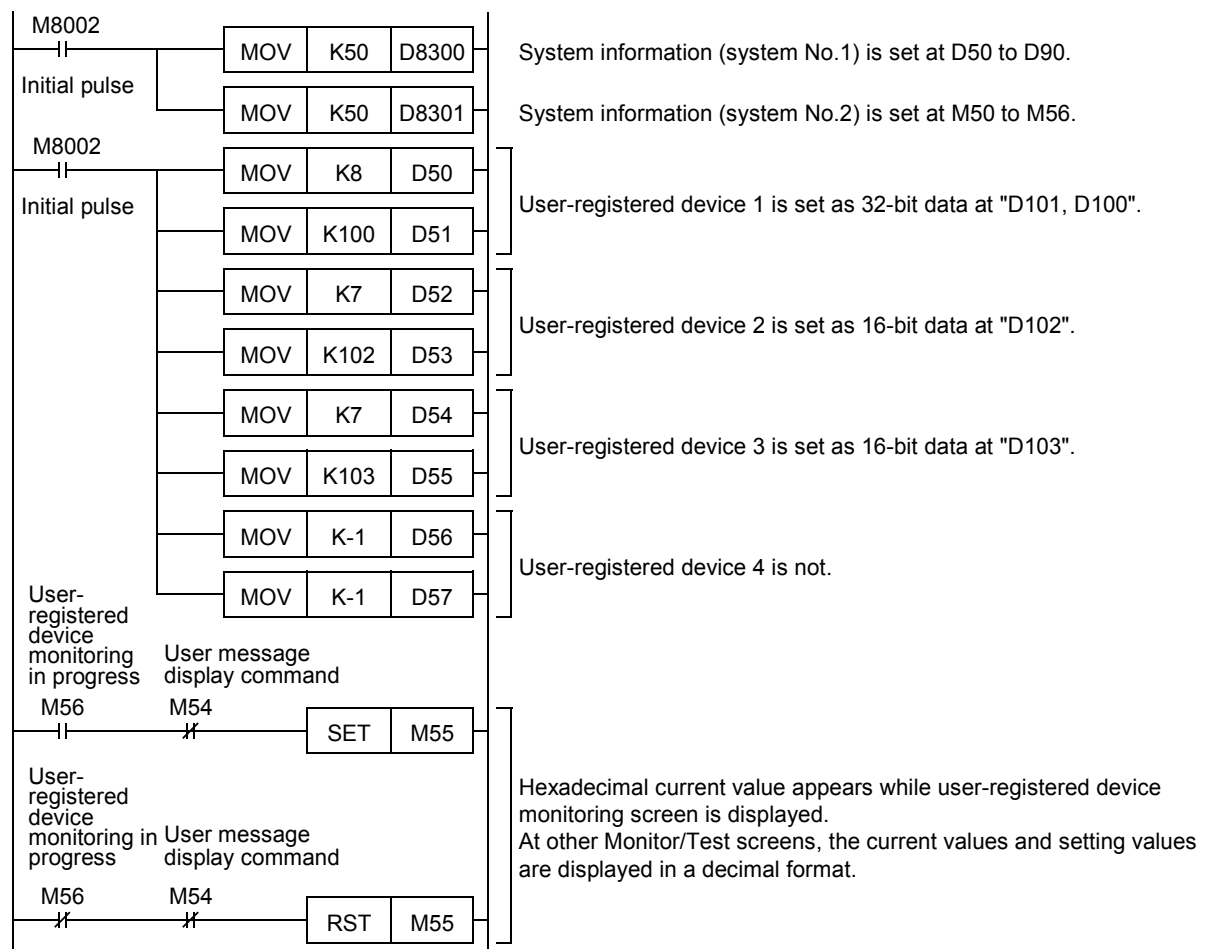

18.19.5 Program example 3 (when 5 or more devices are displayed as user-registered devices)

Use this program example as a reference when setting 5 or more devices as user-registered devices.


1. Operation

In this program example, the 7 devices shown in the table below are set as user-registered devices, with the current value display format set individually for each device.

- 1) The display formats specified here apply only to current values which appear at the "user-registered device" menu. Other current values appear in a decimal format.
- 2) In this program example, system information is assigned from D50 to D90 and from M50 to M56.


User-Registered Device No.	Devices Set As User-Registered Devices	Data Length	Display Format
1	D100 (D101)	32-Bit	Hexadecimal
2	D102	16-Bit	Decimal
3	D103	16-Bit	Decimal
4	D104	16-Bit	Decimal
5	D200	16-Bit	Hexadecimal
6	D210	16-Bit	Decimal
7	D201	16-Bit	Hexadecimal

2. Program

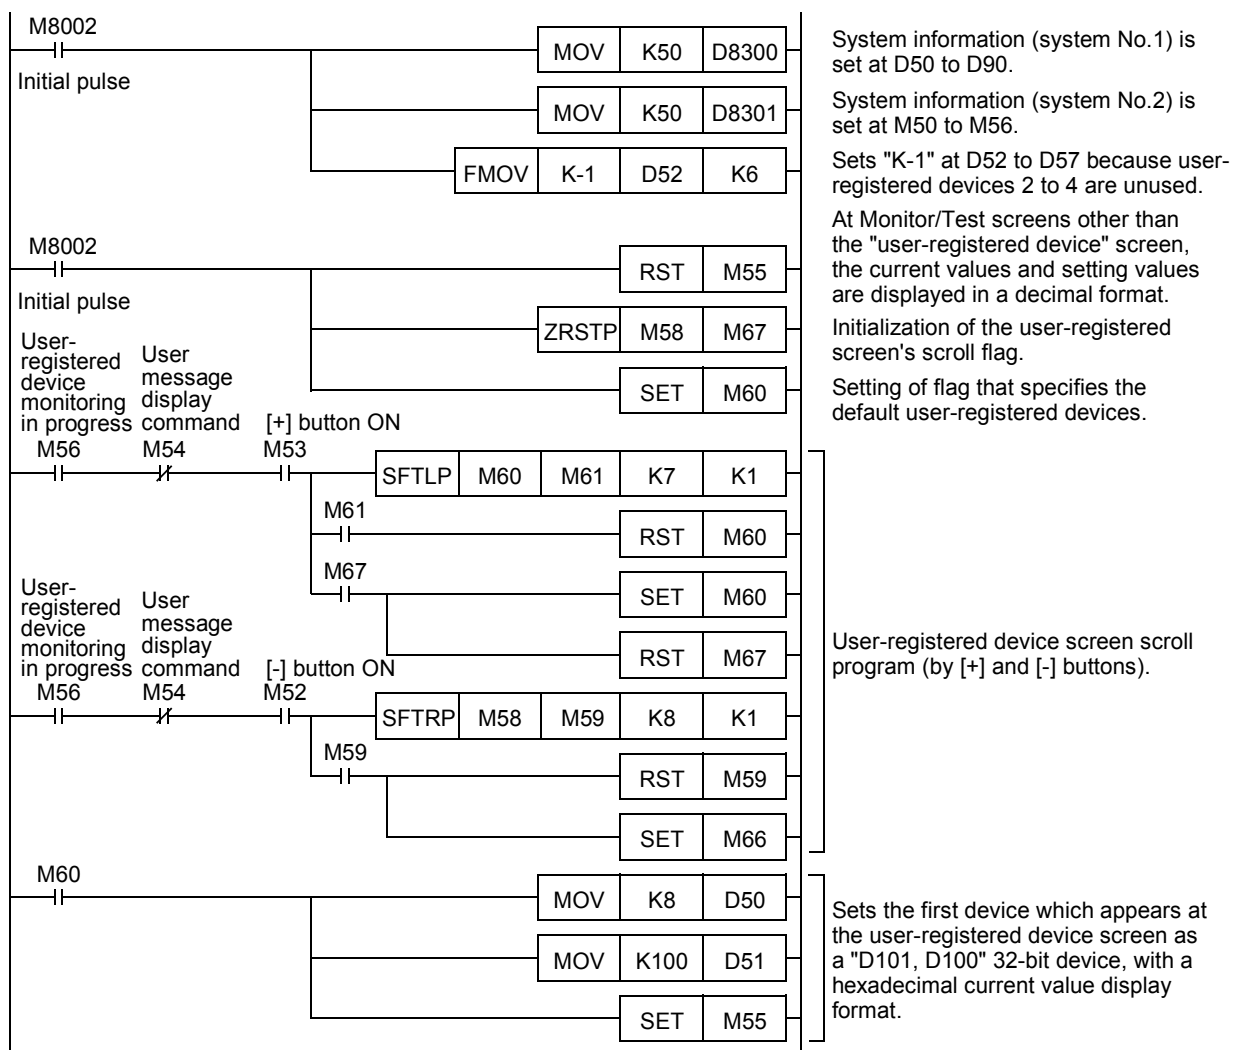

Continued on next page

Continued from previous page

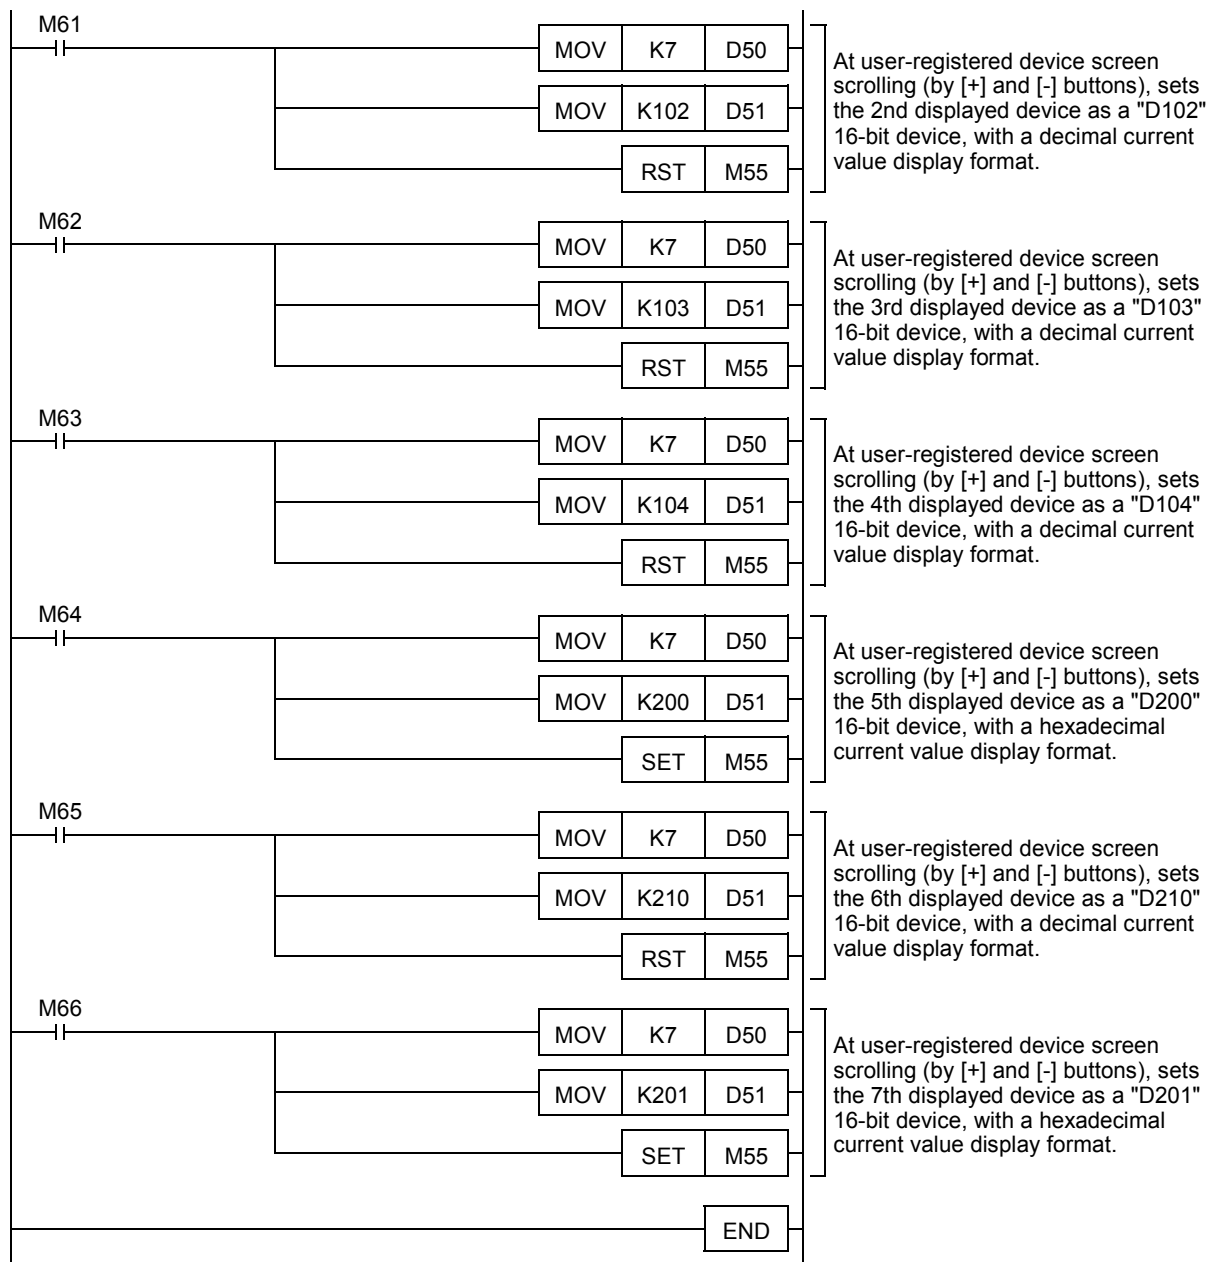

18.20 Operation Button ON/OFF Information

Operation button ON/OFF information can be monitored at the system information (system signal 2) "M△△ to M△△+3" while the PLC is running. Various applications of this function are described below.

→ **Refer to Section 18.18 for system information setting details.**

18.20.1 Various applications

1. Operation button function checks

The programming tool can be used to monitor the system information's (system signal 2) "operation button ON/OFF information", to verify that operation buttons are functioning properly.

2. User-registered device changes

The system information's (system signal 2) "display screen information" and "operation button ON/OFF information" can be used together to change and display 4 or more user-registered devices.

→ **Refer to Section 18.19 for the user-registered device setting procedure.**

→ **Refer to Subsections 18.19.3 to 18.19.5 for program examples.**

3. User message changes

The system information's (system signal 2) "display screen information" and "user message display command", and "operation button ON/OFF information" can be used together while a user message is displayed in order to change (by [+] / [-] button operation) the user message that the program displays.

→ **Refer to Section 18.23 for user message display function details.**

→ **Refer to Subsections 18.23.4 to 18.23.6 for program examples.**

18.20.2 System information - operation button ON/OFF information

1. System signal 1

System signal 1 has no system information related to this function.

2. System signal 2

System Information	Status	Description
M△△	ON	[OK] button is pressed.
	OFF	[OK] button is not pressed.
M△△+1	ON	[ESC] button is pressed.
	OFF	[ESC] button is not pressed.
M△△+2	ON	[-] button is pressed.
	OFF	[-] button is not pressed.
M△△+3	ON	[+] button is pressed.
	OFF	[+] button is not pressed.

18.21 Specifying a Hexadecimal Current Value Display Format

The procedure for specifying a hexadecimal display format for current values which display at the "Monitor/Test" menu explained below. The display format is specified by the system information's (system signal 2) "M□□+5" ON/OFF status.

The display formats which correspond to the ON and OFF statuses are shown in Subsection 18.21.1 below. The display format should either be fixed as decimal or hexadecimal. Switching between the two should be possible by an external operation.

→ Refer to Section 18.18 for system information setting details.

18.21.1 System information - specifying a hexadecimal current value display format

1. System signal 1


System signal 1 is unrelated to this function.

2. System signal 2

System Information	Setting Content	Display Format	Display Subjects
M△△+5	ON	Hexadecimal	Timer (T) [current value], counter (C) [current value], data register (D) [16-bit/32-bit], extended register (R) [16-bit/32-bit], and extended file register (ER) [16-bit/32-bit]
	OFF	Decimal	


18.21.2 Program example 1 (specifying a hexadecimal data display format)

The following program example specifies a hexadecimal display format for current values and setting values which display at the "Monitor/Test" screen. In this program example, system information is assigned from D50 to D90 and from M50 to M56.

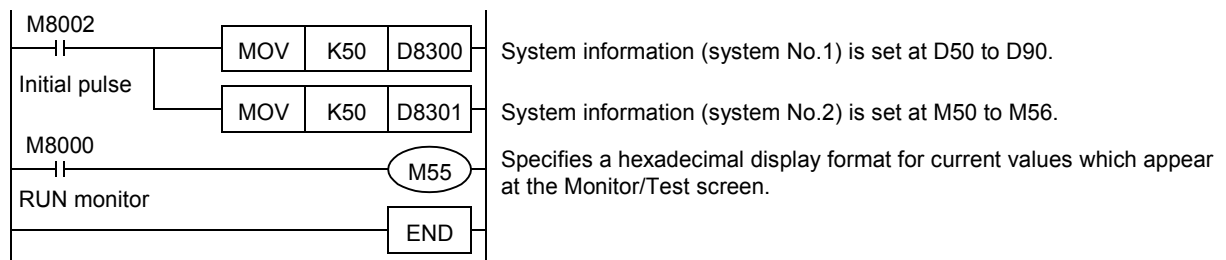

18.21.3 Program example 2 (specifying a decimal data display format)

The following program example specifies a decimal display format for current values and setting values which appear at the "Monitor/Test" screen. In this program example, system information is assigned from D50 to D90 and from M50 to M56.

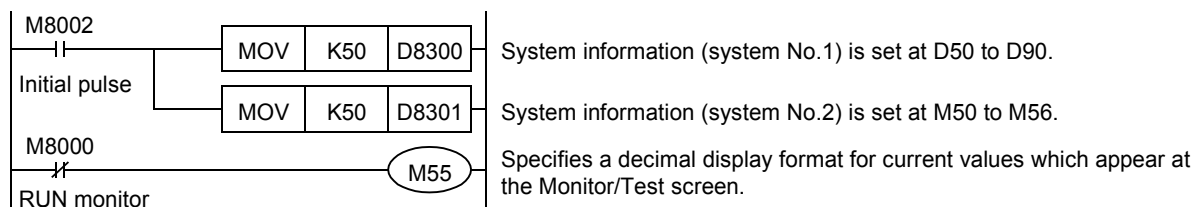

18.22 Display Screen Protect Function

The display screen protect function prevents accidental operation by restricting the display module functions. The display screen protect function is enabled when no entry code is registered. The display screen protect function's protection level is specified in the system information (system signal 1) "D□□+8".

- Refer to Section 18.4 for display module function details.
- Refer to Subsection 18.13.5 for the "entry code cancel" procedure.
- Refer to Section 18.18 for system information setting details.

18.22.1 Entry code & display screen protect function levels and corresponding restrictions

If an entry code has been registered, that entry code related restriction takes priority over the "display screen protect function"

- ✓ :Usable
- △ : Timer and counter settings cannot be changed
- ▲ : Only monitor function is usable (test function is not available)
- : Unusable

Function Name		Entry code				Display Screen Protect		
16-digit entry code setting-->		None	All online operations prohibited	Writing prohibited	Reading/ writing prohibited	None	1	2
8-digit entry code setting (level) -->			A	B	C			
Top screen (time display)		✓	✓	✓	✓	✓	✓	✓
Monitor/Test	Device	✓	□	△	△	✓	□	▲
	User (User-registered device)	✓	□	✓	✓	✓	□	▲
ScanTime (Scan time display)		✓	□	✓	✓	✓	□	✓
PLC status		✓	□	✓	✓	✓	□	✓
ErrorCheck		✓	□	✓	✓	✓	□	✓
User message display		✓	✓	✓	✓	✓	✓	✓
Display screen protect function		✓	□	□	□	✓	✓	✓
Menu display language setting		✓	□	✓	✓	✓	□	□
Contrast adjustment		✓	□	✓	✓	✓	□	□
Time	Display	✓	✓	✓	✓	✓	□	✓
	Setting	✓	□	✓	✓	✓	□	□
Entry code (cancel)		—	✓	✓	✓	✓	□	□
Clear all device (Device all-clear)		✓	□	✓	✓	✓	□	□
Memory cassette transfer		✓	□	□	□	✓	□	□

18.22.2 Relationship between entry code & display screen protect function

If the PLC's entry code registration function is used, that entry code related restriction takes priority over the display module's "display screen protect function". The relationship between entry codes and the display screen protect function is shown below.

Entry code registration	Entry code Status	Display Screen Protect Status	Function Restrictions
Entry code is registered	Entry code is not canceled	Entry code is being used	Restriction of functions is according to the entry code level.
		Entry code is not being used	
	Entry code is canceled	Entry code is being used	All functions are enabled (no restrictions).
		Entry code is not being used	
Entry code is not registered	Entry code is being used		Restriction of functions is according to the display screen protect function.
	Entry code is not being used		All functions are enabled (no restrictions).

18.22.3 Entry code levels

1. For versions prior to Ver.2.20

8-Digit Entry code Level	Entry code Content	Entry code Input Example
A	8-digit hexadecimal value beginning with "A" or "0 to 9" numeral.	0ABCDEF2 AABCD345
B	8-digit hexadecimal value beginning with "B".	B1234567 BABCDEF7
C	8-digit hexadecimal value beginning with "C".	C8904567 CDEF567F

2. For Ver.2.20 and later

16-digit entry codes are used.

If an 8-digit entry code is specified, processing occurs in the same manner as in versions prior to Ver.2.00.

16-Digit Entry code Setting Content	Entry code Content	Entry code Input Example
All online operations prohibited	"A to F", "0 to 9" 16-digit value.	0ABCDEF262297529 AABCDEFB34523724
Writing prohibited	"A to F", "0 to 9" 16-digit value.	B123456789012345 7ABCDEF73DAEB93A
Reading/writing prohibited	"A to F", "0 to 9" 16-digit value.	Z890445234817567 CDEF567FABDFEA46

18.22.4 System information - display screen protect function

1. System signal 1

System Information	Setting Content (Level)	Function Restriction Summary
D□□+8	1	All functions except the "user message display" and "top screen (time display)" functions are disabled.
	2	The following functions are disabled: "monitor/test's 'test' function", "device all-clear", "time change", "contrast setting", "memory cassette transfer", and "menu display language setting".
	Other values	All functions are enabled.


2. System signal 2

System signal 2 is unrelated to this function.

18.22.5 Program example (screen protect function setting)

In this program example, the display screen protect function is set to "level 2". Use this program as a reference when other level settings are specified.

In this program example, system information is assigned from D50 to D90 and from M50 to M56.

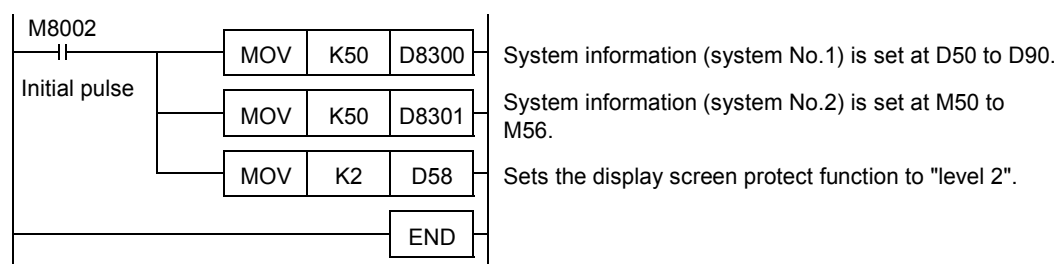

18.22.6 Pointers for using the display screen protect function

The display screen protect function settings should be specified in a sequence program.

- The protect function is enabled by using the display module's "monitor/test function" to change the system information's (system signal 1) "D□□+8" current value to "1" or "2".
- Once the setting is made, it cannot be canceled from the display module.
- To cancel the setting, use the programming tool to change the system information's (system signal 1) "D□□+8" current value to a value other than "1" and "2".
If the system information's (system signal 1) "D□□+8" is set in a general purpose data register, however, the display screen protect function can be canceled by turning the power off, then on again.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

18.23 User Message Display Function

The user message display function allows a user-prepared message to appear in place of the "top screen (time display)".

The [OK] button is then pressed to switch from the "user message screen" to the "menu screen".

If using fixed user messages, the messages (created in GX Developer's "device memory" window) should be saved individually at D□□+9 to D□□+40 of the file register (D), extended register (R), and extended file register (ER).

→ Refer to Section 18.18 for system information setting details.

→ Refer to Subsection 18.23.7 for character data input details.

18.23.1 System information - user message display function

1. System signal 1

System Information	Description
D□□+9	Device where the user message character string is saved.
ι	
D□□+40	

1) Displayable Characters & Codes

Character Type	Code
Alphanumeric	20H to 7DH, A1H to DFH ASCII code
Japanese	Shift JIS Level 1-, 2

2) System information's (system signal 1) D□□+9 to D□□+40 and display position

		Row (horizontal character position)															
		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[13]	[14]	[15]	[16]
Line (vertical character position)	1	D□□+9		D□□+10		D□□+11		D□□+12		D□□+13		D□□+14		D□□+15		D□□+16	
		Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order
	2	D□□+17		D□□+18		D□□+19		D□□+20		D□□+21		D□□+22		D□□+23		D□□+24	
		Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order
	3	D□□+25		D□□+26		D□□+27		D□□+28		D□□+29		D□□+30		D□□+31		D□□+32	
		Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order
	4	D□□+33		D□□+34		D□□+35		D□□+36		D□□+37		D□□+38		D□□+39		D□□+40	
		Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order	Lower order	Higher order

2. System signal 2

System Information	Setting Content	Screen Display
M△△+4	ON	User message display command. This command is enabled only when the "top screen (time display)" is displayed.
	OFF	Cancels the user message display, and displays the "top screen (time display)".
M△△+6	ON	ON when the "user-registered device monitor screen" or the "user message screen" is displayed.
	OFF	OFF when other screens are displayed.

18.23.2 Shift JIS code arrangement precautions

To prevent garbled characters when a 2-byte character (shift JIS code) arrangement extends into the next line, the system replaces those characters with 2 spaces.

[Ex] If a full-size character arrangement exists at D□□+16 (higher order) + D□□+17 (lower order), spaces will display at those positions. Therefore, the use of full-size characters (shift JIS code) should be avoided at the shaded areas shown in the above table.

18.23.3 Displaying a word device current value as a message

A numeric value can be displayed at the user message by combining BCD (FNC18), ASCII (FNC82), and BMOV (FNC15) instructions.

→ Refer to Subsection 18.23.6 for a program example.

18.23.4 Program example 1 (user messages display switching)

The following program example is for user messages that appear in accordance with the auxiliary relay M100 to M102 ON/OFF statuses.


Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The 3 messages shown below appear in accordance with the auxiliary relay M100 to M102 ON/OFF statuses.

When auxiliary relays are ON simultaneously, the messages appear in the No.1 --> No.2 --> No.3 order.

The following is a program example in which the system information has been assigned from D50 to D90 and from M50 to M56.

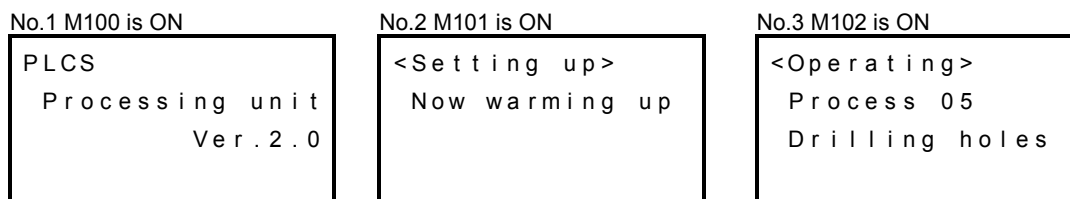


2. Character data

User message data to be displayed is created in GX Developer, and is assigned to the file registers shown below.

→ Refer to Subsection 18.23.7 for character data input details.

Message No.	File Register Where Saved
1	D1000 to D1031
2	D1032 to D1063
3	D1064 to D1095

3. Program

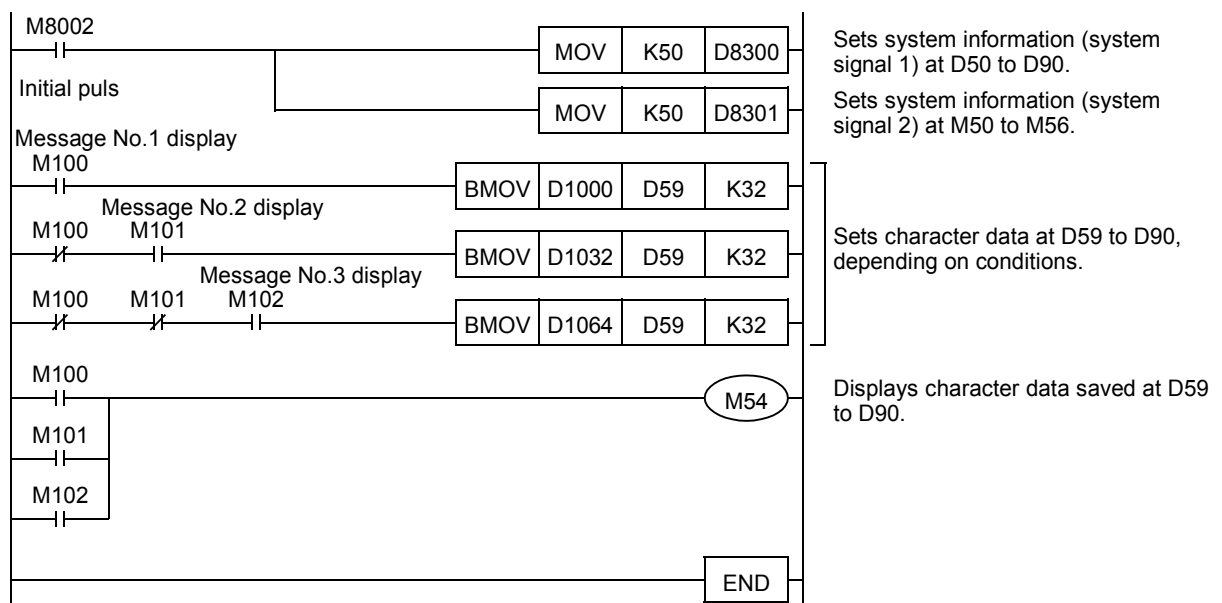


18.23.5 Program example 2 ([+] / [-] buttons of user messages switching)

The following is a program example in which the [+] / [-] buttons are used to switch the displayed user message. Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The No.1 message shown below appears when auxiliary relay M100 switches on, and the [+] / [-] buttons can be used at that time to switch to the other messages as shown below. The system information is assigned from D50 to D90 and from M50 to M56.

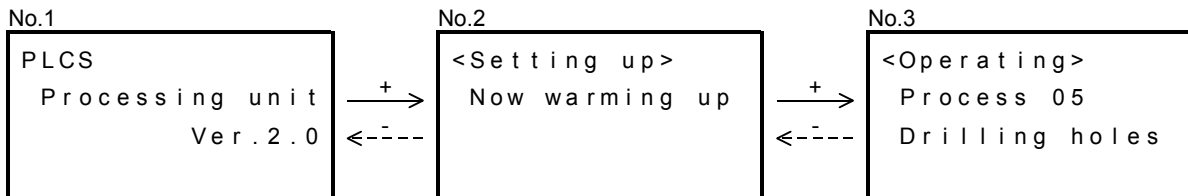


2. Character data

User message data to be displayed is created in GX Developer, and is assigned to the file registers shown below.
→ Refer to Subsection 18.23.7 for character data input details.

Message No.	File Register Where Saved
1	D1000 to D1031
2	D1032 to D1063
3	D1064 to D1095

3. Program

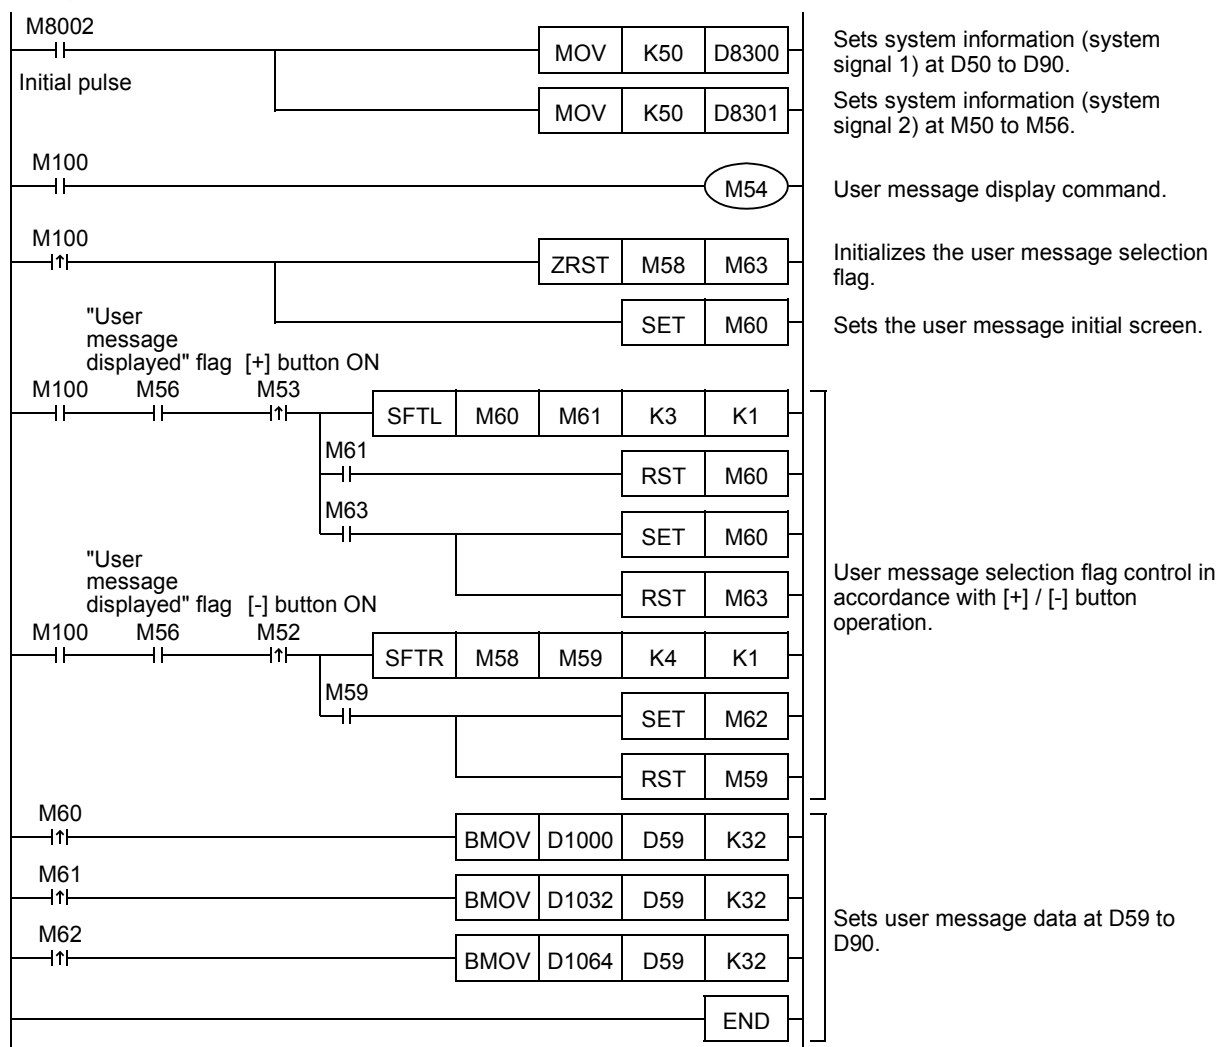

18.23.6 Program example 3 (user messages plus data display)

The following is a program example in which the counter's current value appears at the user message.
Note that user messages do not appear when a screen other than the "top screen (time display)" is displayed.

1. Operation

The message shown below appears when auxiliary relay M100 switches on.
In this program example, the system information is assigned from D50 to D90 and from M50 to M56.

<Production>	
Target	* 1
Production	* 1
Remaining	* 1

- *1. The current values of the devices shown below appear as the target quantity, the production quantity, and the remaining quantity.

Item	Device	Remarks
Target	D200	Specifies the C0 setting.
Production	C0	Counts the number of M101 ON operations.
Remaining	D201	Remaining (D201) = target (D200) - production (C0).


2. Displaying a word device current value as a message

A numeric value can be displayed at the user message by combining BCD (FNC18), ASCII (FNC82), and BMOV (FNC15) instructions, etc.


3. Character data

User message data to be displayed is created in GX Developer, and is assigned to file registers D1000 to D1031.
→ Refer to Subsection 18.23.7 for character data input details.

4. Program

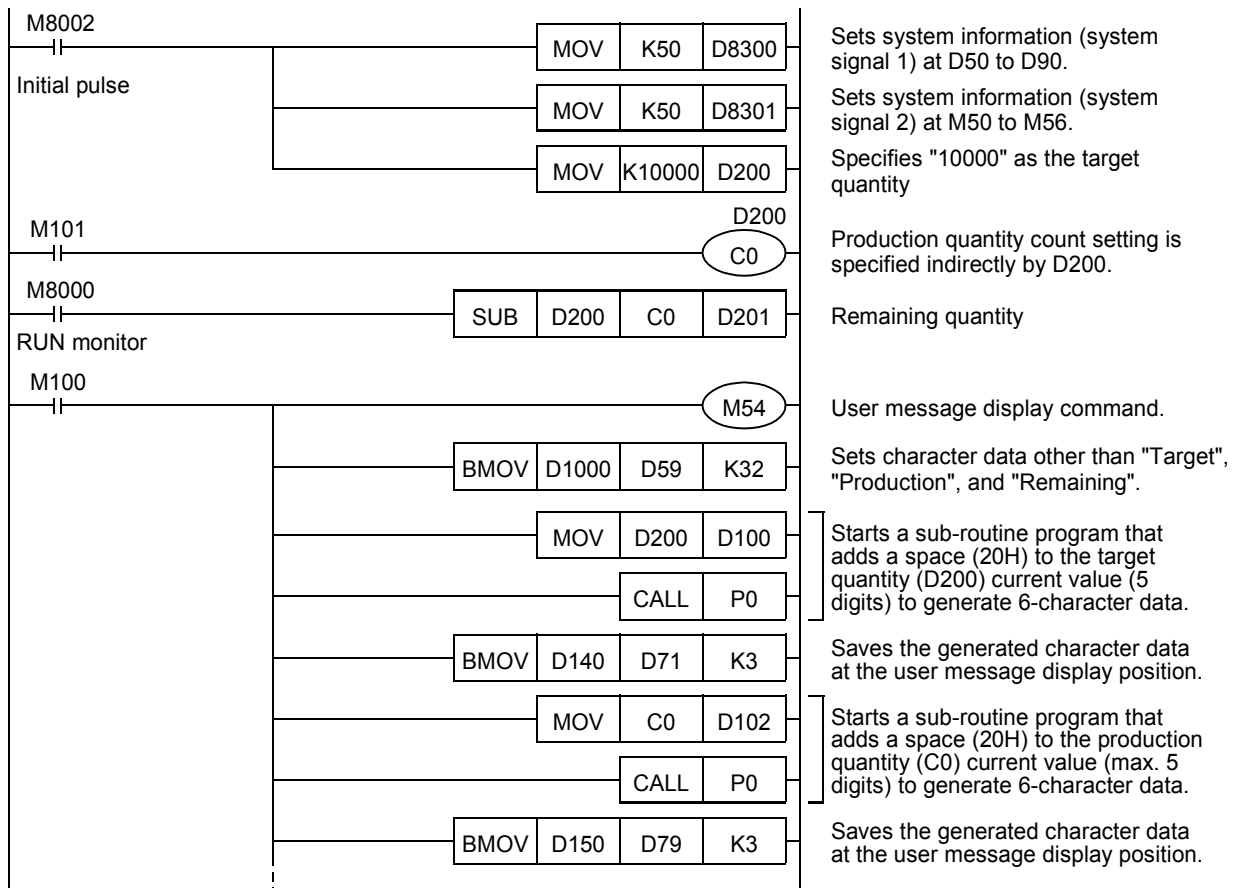


Continued from previous page

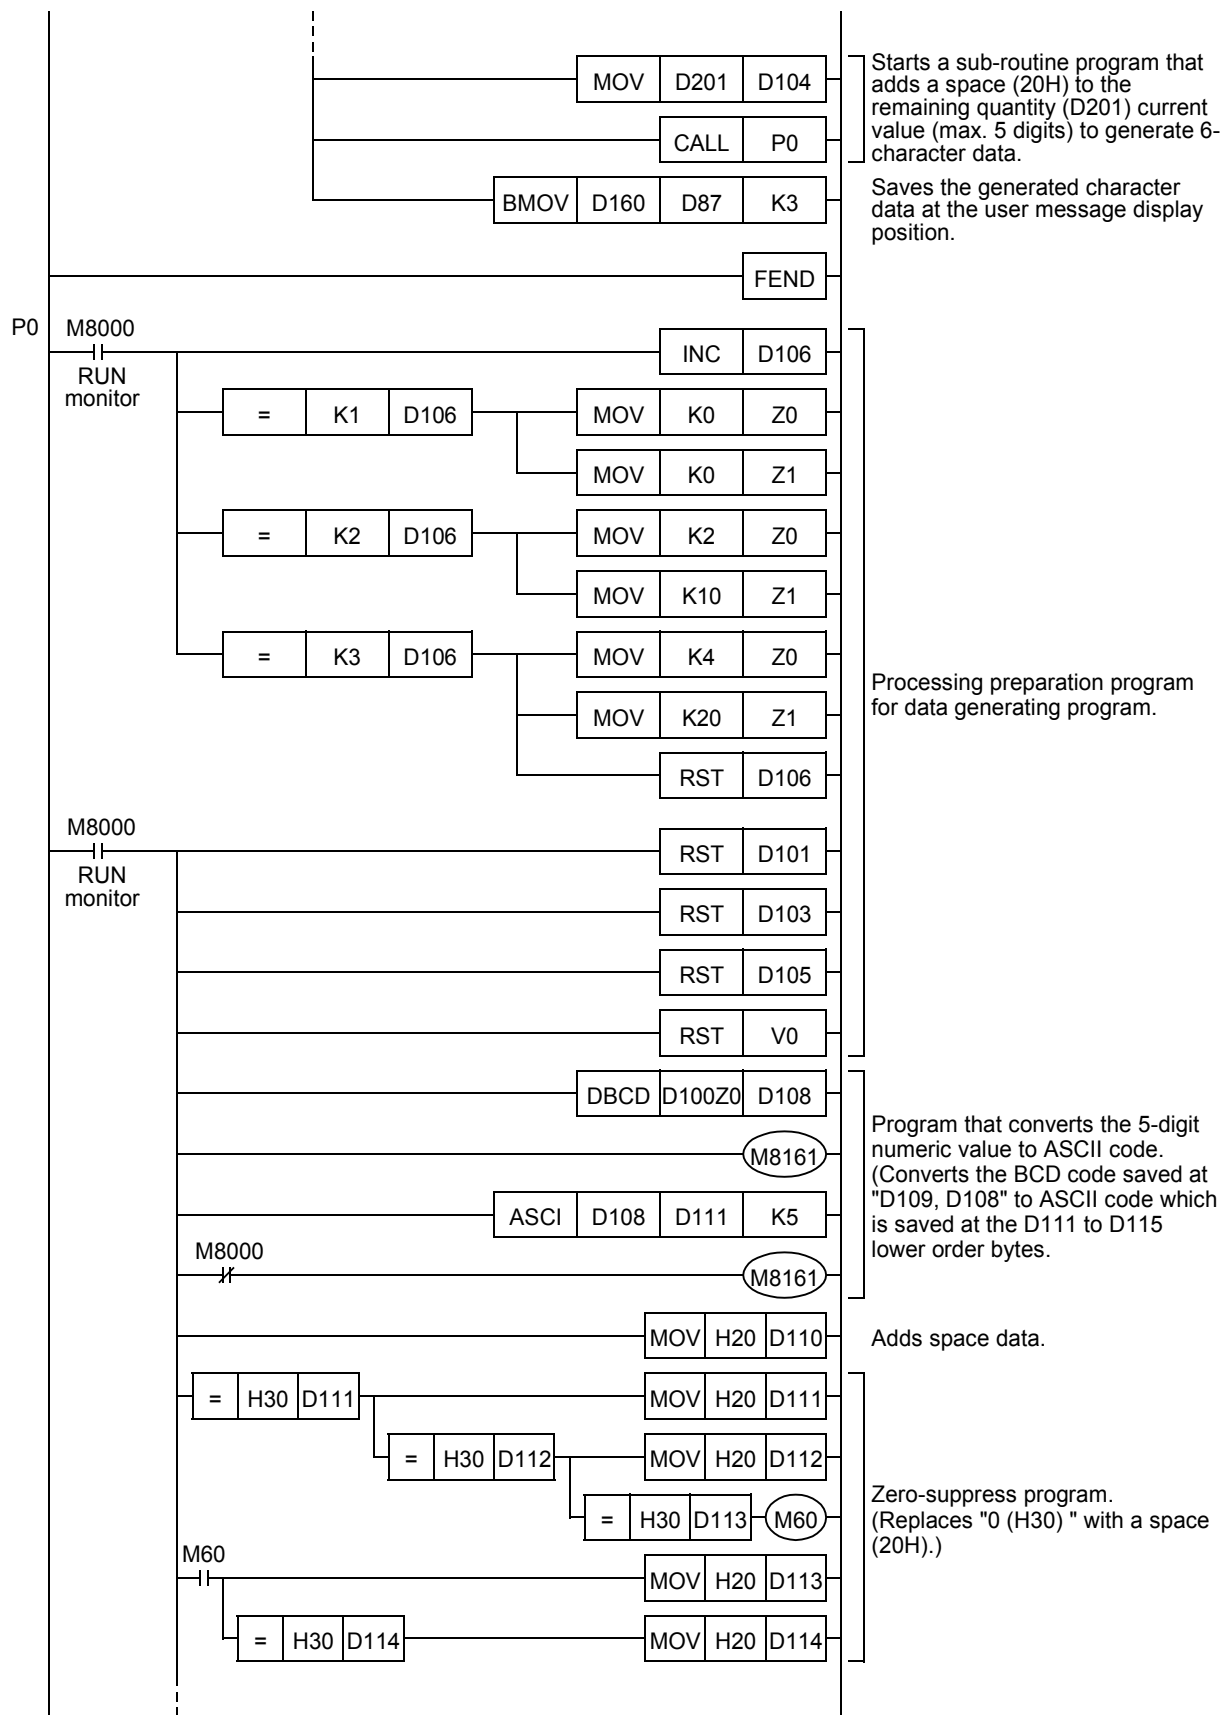

Continued on next page

Continued from previous page

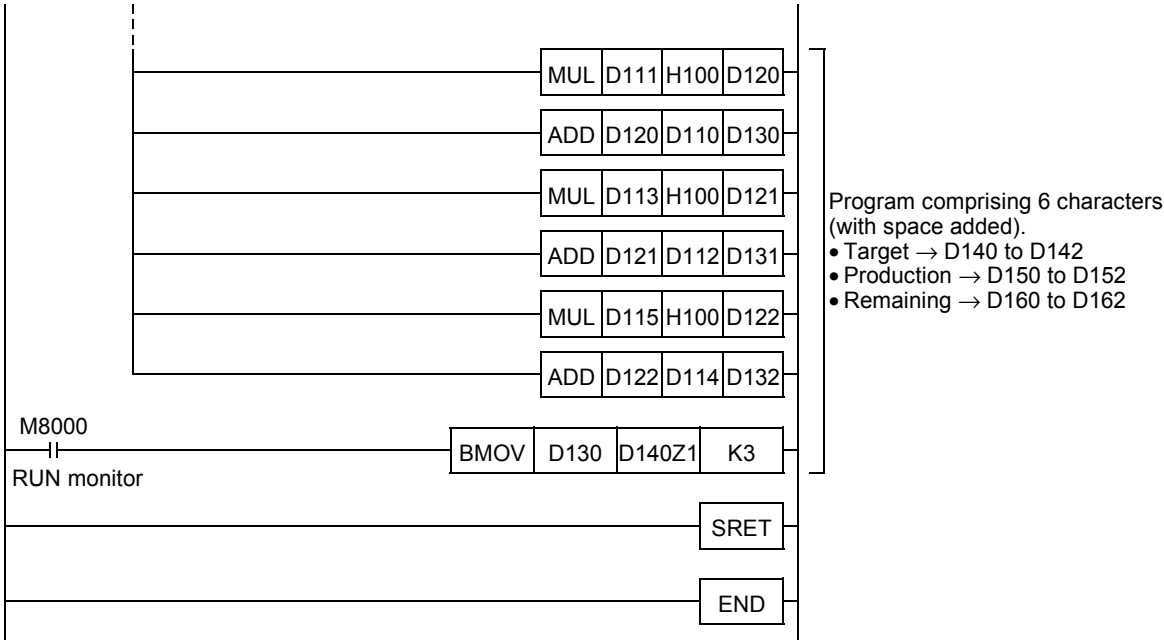

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

18.23.7 Character data input procedure

User messages are entered and assigned to file registers in advance, using GX Developer.
Messages are displayed by a file register → data register transfer, with the message being created in place of the numeric values, etc.
32 data register points are assigned to each message.


1 Starting GX Developer

To start up GX Developer, click the Windows [Start] button, then click [Programs] - [MELSOFT Application] - [GX Developer].

2 Setting The PLC Model Name

Set the "PLC series" and the "PLC Type" settings as shown below.

Required Setting Items	Setting Content
PLC series	FXCPU
PLC Type	FX3U(C)


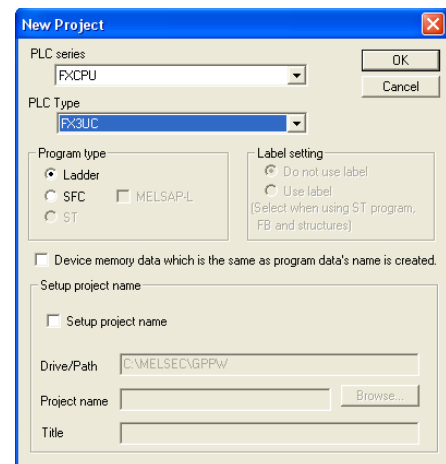


3 Parameter Settings

To specify the parameter settings, select "PLC parameter" from the project data list.


If the project data list does not display, click the toolbar's [Display] - [Project data list] items.

Click the "Memory capacity" tab to perform file register assignments.

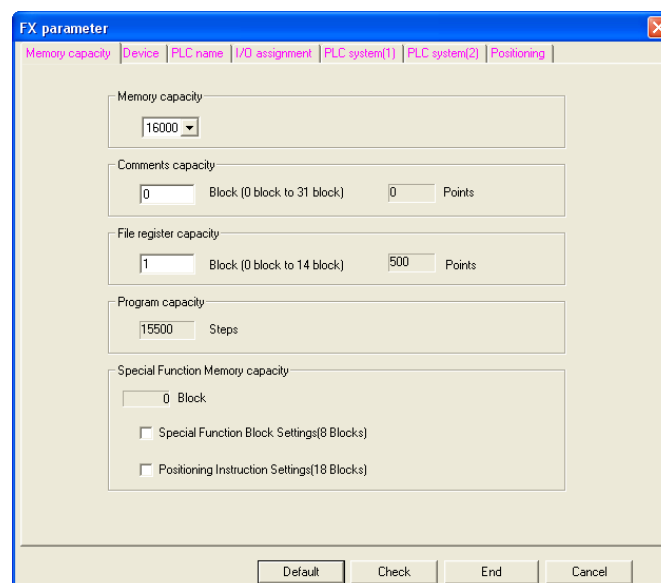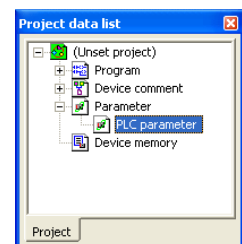


4 Selecting The File Register

1. From the project data list, select "Device memory", then right-click and select [New] at the submenu.
2. The "New" dialog box then appears. Click [OK]

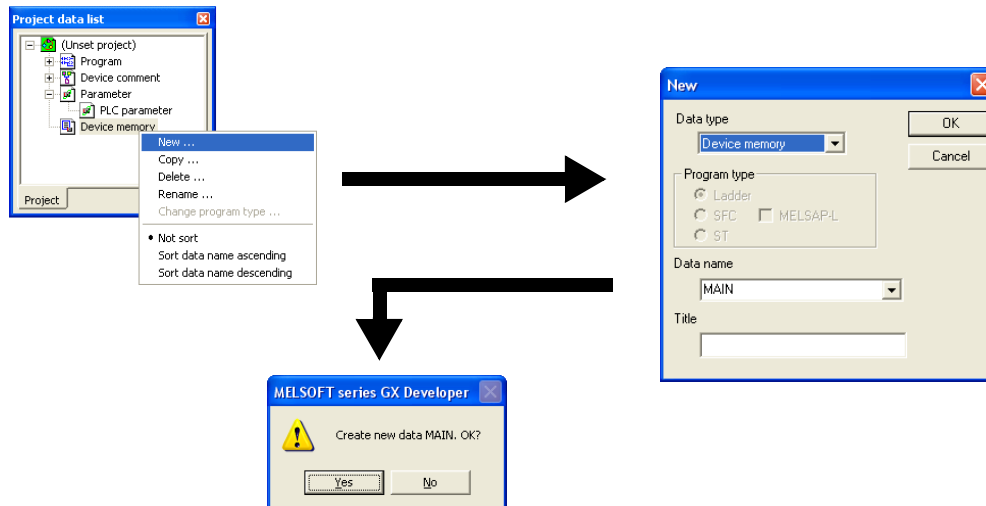

A confirmation dialog box then appears. Click [Yes].

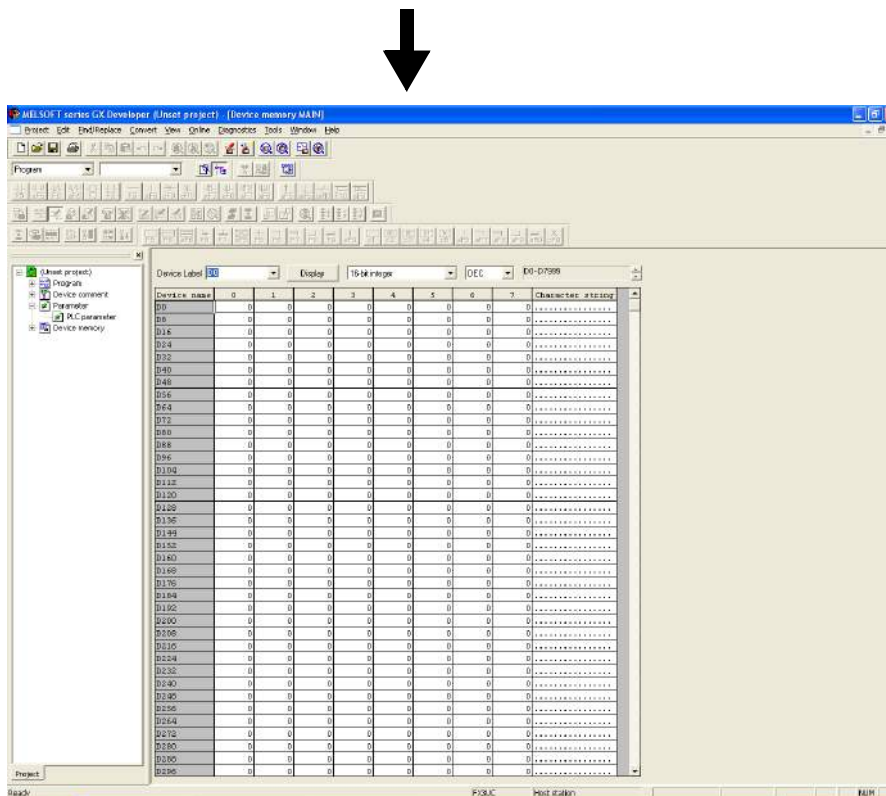


3. Enter "D1000" at the device, then click [Display].
(The first No. of the file register is selected.)
4. At the 2 selection boxes next to the input area, select "16-bit integer" and "HEX".

5 Entering User Messages

As shown in the illustration below, the dialog box for character string inputs is opened by double-clicking on GX Developer's character string display area or the data register display area. When entering Japanese scripts (Chinese characters, etc.), data input automatically occurs in the lower order → higher order sequence, and the input can therefore be used as it is at the display module's user message display.

The GX Developer screen's character string shown below is for "program example 1".

→ Refer to Subsection 18.23.4 for "program example 1" details.

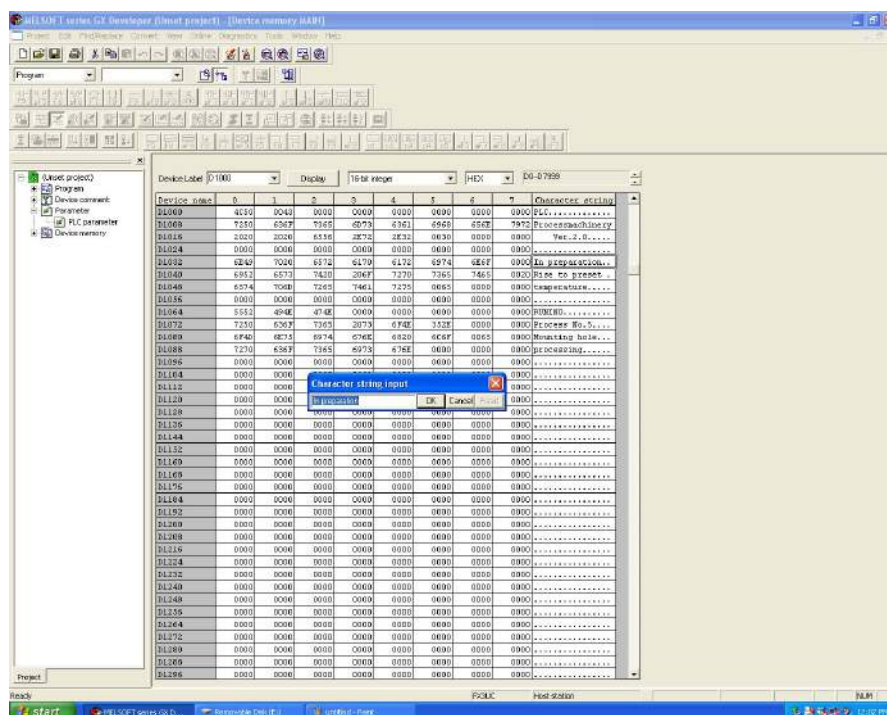

GX Developer character arrangement precautions:

A single line is comprised of 8 data registers.

To prevent garbled characters when a 2-byte character (shift JIS code) arrangement extends into the next line, the system replaces those characters with 2 spaces.

([Ex] spaces display at the end of the 1st line and at the beginning of the 2nd line.)

The condition of the display module line must therefore be considered when entering the characters.

Moreover, the 1st character device should be specified for displaying a 1-line character input.

18.24 Operation Error Messages & Corrective Actions

The following is a list of error messages which the system displays after an operation is performed.

Relevant Menu Screen	Japanese	English	Corrective Action
• All menus	操作できません キーワードによって 保護されています	Entry Code error	Cancel the entry code, then attempt the operation again.
• Entry code	キーワードが設定されて いません	The Entry Code is not set	No entry code has been registered. Entry codes cannot be registered from the display module. A programming tool such as GX Developer, etc., is required to register entry codes.
	キーワード 不一致	Incorrect Entry Code!	The entered entry code does not match the registered entry code. Verify the registered entry code, then enter the correct entry code.
• Monitor/test (user-registered devices)	存在しないデバイス が登録されていま す	The wrong device is registered	A device has been specified that does not exist among the system information (system signal 1) "user-registered device" monitor devices. Check the program.
• Monitor/test (setting change)	RUN中です！	PLC is running	Stop the PLC, then attempt the operation again.
• Memory cassette transfer	書き込み禁止です	Memory Cassette is write-protected	Turn the memory cassette's write-protected status to OFF, then attempt the operation again.
	書き込みエラー	Write error	Writing failed. Verify that the memory cassette is properly installed.
	読み込みエラー	Read error	Reading failed. Verify that the memory cassette is properly installed.
• PLC Status • Monitor/test (setting change) • Memory cassette transfer	フェータルエラー発生中	Fatal error occurred	→ Refer to Subsection 18.24.1 for details.
• Memory cassette transfer	メモリカセットが装着さ れていません	Memory Cassette is misconnected	Turn the PLC power OFF, install the memory cassette, then attempt the operation again.
	内蔵メモリにキーワード が設定されていま す	The Entry Code is set in the Internal Memory	Remove the memory cassette, restart the unit (power OFF→ON), then use the programming tool to cancel the entry code in the internal RAM.
• Memory cassette transfer (consistency check)	プログラムが一致し ています	Programs match	The memory cassette program matches the RAM program.
	プログラム不一致	Programs don't match	The memory cassette program does not match the RAM program.
• Memory cassette transfer (reading/writing)	転送成功しました	Transfer completed	Transfer successful.
	転送失敗しました	Transfer failed	Check if the memory cassette is properly installed.

18.24.1 When a "Fatal error occurred" message appears

Operation is possible with the "Level C" or "Level B" entry code function restrictions.

However, the system is probably in one of the statuses described below. Check these statuses in the order shown below, and take the appropriate corrective action.

1. **Perform an error check at the display module, and if an error is active, take the appropriate corrective action.**

→ Refer to Section 18.9 for the error check procedure.

If a program error is active:

The fatal error was probably activated due to a program error.

Use the programming tool to correct the program.

→ Refer to Section 14.6 for error codes and corrective actions.

→ Refer to Subsection 12.5.3 for watchdog timer error corrective actions.

If no program error is active:

There may be a problem with the PLC's memory content. Perform the following procedure.

- 1) Use the programming tool to perform a program memory all-clear.
- 2) Rewrite the program.
- 3) Stop the PLC, turn the power ON, display the "PLC Status (1/3)" screen and check to refer to if the "Fatal error occurred" message appears.
 - If the "Fatal error occurred" message appears, perform the corrective action described at item "2" below.
 - If the "Fatal error occurred" message does not appear, set the PLC to a RUN state, then check again if the message appears.
If the message appears, a watchdog timer error has probably occurred. In this case, the program should be re-examined.

→ Refer to Subsection 14.5.3 for the watchdog timer error corrective action.

2. **If the "Fatal error occurred" message still appears after performing the corrective actions described in item 1 above, perform the following procedure to check for symptom changes.**

Turn the power OFF and disconnect all extension devices.

(extension connectors, extension cables, expansion board connectors, and CC-Link/LT dedicated flat cable)

Turn the power ON again at the main unit, display the "PLC Status(1/3)" screen again, and check if the "Fatal error occurred" message appears.

- 1) If the "Fatal error occurred" message appears:
The main unit hardware may have failed. Contact your local Mitsubishi Electric distributor.
- 2) If the "Fatal error occurred" message does not appear:
Turn the power OFF, connect the extension devices, then operate the system again to check for errors.
If the problem persists, there may be main unit or extension device hardware failure. Contact your local Mitsubishi Electric distributor.

18.25 Menu Display Characters - Japanese & English Display Character Correspondence Table.

Menu Screen	Japanese	English
Menu	モニタ/テスト	Monitor/Test
	エラーチェック	ErrorCheck
	LANGUAGE	LANGUAGE
	コントラスト	Contrast
	時刻設定	ClockMenu
	キーワード	EntryCode
	デバイスオールクリア	ClearAllDev
	PCステータス	PLC Status
ErrorCheck	スキャンタイム表示	ScanTime
	メモリカセット転送	Cassette
	エラーチェック	ErrorCheck
	エラー無し	No errors
ErrorCheck	エラーチェック	ErrorCheck
	エラーコード	Error code
LANGUAGE (Menu display language setting)	LANGUAGE 日本語 English	LANGUAGE 日本語 English
Contrast	コントラスト	Contrast
ClockMenu (Current time setting)	現在時刻	Current time
	時刻変更	Clock setting
	時刻変更	Clock setting
	現在時刻を設定しました	Current time is set
EntryCode	キーワードを入力してください	Please, input Entry Code
	*****	*****
	キーワードを有効にしますか OK → 実行 ESC → キャンセル	Make Entry Code valid? OK → Execute ESC → Cancel
	操作が可能になりました	All operation is possible
	キーワード不一致	Incorrect Entry Code
ClearAllDev (Device all-clear)	デバイスオールクリア	Clear all devices
	OK → 実行 ESC → キャンセル	OK → Execute ESC → Cancel
	デバイスオールクリアしました	All device were cleared

Menu Screen	Japanese	English
PLC Status	PLC status(1)	PC情報(1/3) Ver. -. --
		PLC Status(1/3) Ver. -- --
		フェールエラー発生中
		Fatal error occurred
		キーワードは設定されていません
		The Entry Code is not set
	PLC status(2)	操作が制限されています
		PLC operation is limited
		すべての操作が可能です
		All operation is unrestricted
		操作が禁止されています
		PLC operation is unavailable
PLC status(3)	PLC status(2)	PC情報(2/3)
		PLC Status(2/3)
		内蔵RAM
		Internal Memory
	PLC status(3)	メモリカセット
		Memory Cassette
		プロテクトスイッチ --
		Protection --
	PLC status(3)	メモリ容量 -- K
		Capacity --K
		PC情報(3/3)
		PLC Status(3/3)
ScanTime (Scan time display)	ScanTime (Scan time display)	バッテリー電圧 -. -V
		Battery -. -V
		登録コメント数
		Comments
	Cassette (Memory cassette transfer)	スキャンタイム 現在値: -. -ms 最大値: -. -ms 最小値: -. -ms
		ScanTime Curr: -. -ms Max: -. -ms Min: -. -ms
	Cassette (Memory cassette transfer)	メモリカセット転送 メモリカセット←RAM メモリカセット→RAM メモリカセット: RAM
		Memory Cassette Cassette←RAM Cassette→RAM Cassette:RAM
	Cassette ←RAM	メモリカセット←RAM (書き込み) 実行中...
		Cassette←RAM (Write) Please wait...
	Cassette →RAM	メモリカセット→RAM (読み出し) 実行中...
		Cassette→RAM (Read) Please wait...
	Cassette →RAM Cassette ←RAM	転送成功しました
		Transfer completed
		転送失敗しました
		Transfer failed
Cassette:RAM	Cassette:RAM	メモリカセット: RAM (照合) 実行中...
		Cassette:RAM (Verify) Please wait...
	Cassette:RAM	プログラムが一致しています
		Programs match
	Cassette:RAM	プログラム不一致
		Programs don't match

19. FX-16/32E*-TB (Terminal Block)

DESIGN PRECAUTIONS



DANGER

- Provide a safety circuit on the outside of the PLC so that the whole system operates to ensure the safety even when external power supply trouble or PLC failure occurs.
Otherwise, malfunctions or output failures may result in an accident.
 - 1) An emergency stop circuit, a protection circuit, an interlock circuit for opposite movements, such as normal and reverse rotations, and an interlock circuit for preventing damage to the machine at the upper and lower positioning limits should be configured on the outside of the PLC.
 - 2) When the PLC CPU detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. When an error that cannot be detected by the PLC CPU occurs in an input/output control block, output control may be disabled.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 3) The output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension blocks. If overload is applied, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.
Design external circuits and mechanisms to ensure safe operations of the machine in such a case.
 - 4) When some sort of error occurs in a relay, triac or transistor of the output unit, output may be kept on or off.
For output signals that may lead to serious accidents, design external circuits and mechanisms to ensure safe operations of the machine in such cases.

DESIGN PRECAUTIONS



CAUTION

- Do not bundle the control line together with the main circuit or power line. Do not lay the control line near them. As a rule, lay the control line at least 100mm(3.94") or more away from the main circuit or power line.
Noise may cause malfunctions.
- Install in a manner which prevents excessive force from being applied to the connectors for peripheral device connections.
Failure to do so may result in wire breakage or failure of the PLC.

INSTALLATION PRECAUTIONS



DANGER

- Make sure to cut off all phases of the power supply externally before starting the installation or wiring work.
Failure to do so may cause electric shock.

INSTALLATION PRECAUTIONS



- Use the product in the environment within the generic specifications described in section 4.1 of this manual. Never use the product in areas with dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl₂, H₂S, SO₂ or NO₂), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or wind and rain. If the product is used in such a place described, electrical shock, fire, malfunctions, damage, or deterioration may be caused.
- Do not touch the conductive parts of the product directly, thus avoiding failure or malfunctions.
- Install the product securely using a DIN rail or mounting screws.

FX2N-10GM, FX2N-20GM, and terminal block	DIN rail only
Main unit, FX2N Series I/O extension unit/block, and FX0N/FX2N Series special extension block/special adapter	DIN rail or direct mounting

- Install the product on a flat surface.
If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Be sure to remove the dust proof sheet from the PLC's ventilation port when the installation work is completed. Failure to do so could cause fires, equipment failures, and malfunctions.
- Fit the extension cables, peripheral device connecting cables, input/output cables and battery connecting cable securely to the designated connectors.
Contact failures may cause malfunctions.
- Before attaching or detaching the following devices, turn off power.
Failure to do so may cause device failures or malfunctions.
 - Peripheral devices, display module, expansion boards and special adapters
 - Extension units/blocks and FX Series terminal block
 - Battery and memory cassette

WIRING PRECAUTIONS



- Connect the AC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Cut off all phases of the power source externally before installation or wiring work in order to avoid electric shock or damage of product.
- Make sure to attach the terminal cover offered as an accessory to the product before turning on the power or starting the operation after installation or wiring work.
Failure to do so may cause electric shock.

WIRING PRECAUTIONS



- Connect the DC power supply wiring to the dedicated terminals described in this manual.
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will be burnt out.
- Do not wire vacant terminals externally.
Doing so may damage the product.
- When drilling screw holes or wiring, cutting chips or wire chips should not enter ventilation slits. such an accident may cause fire, failures or malfunctions.
- Properly perform wiring to the FX Series terminal blocks following the precautions below in order to prevent electrical shock, short-circuit, breakage of wire, or damage to the product:
 - The disposal size of the cable end should follow the dimensions described in this manual.
 - Tightening torque should be between 0.5 to 0.8 N·m.

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19


Terminal Block

20

Memory
Cassette

19.1 Overview

A terminal block is used to convert connector type input/output terminals into a terminal block. Moreover, dedicated input and output terminal blocks (built-in element types) can be used to receive AC input signals for conversion to relay / transistor / triac output types.

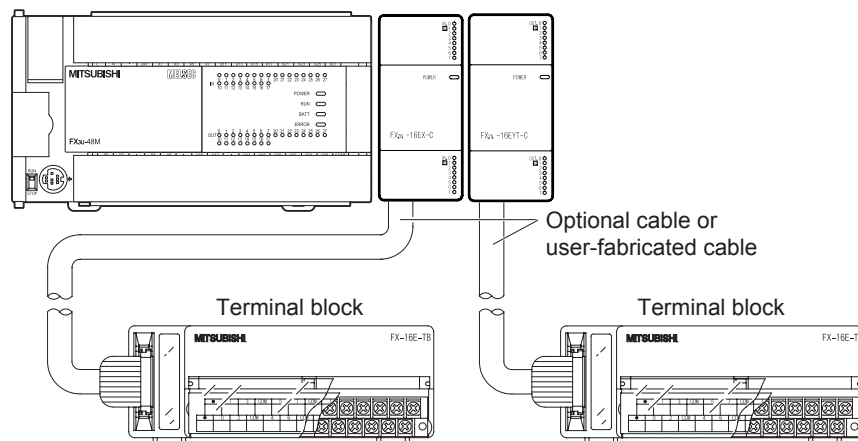

19.1.1 Product configuration

The connection destinations shown below are products which can be connected by "connector ⇔ connector" cables. An individual-wire type can also be used for wiring to the terminal blocks of PLC-side input/output products.

Model Name	Number of Input Points	Number of Output Points	Function	Connection Destination	Drive Power Supply
FX-16E-TB	16 input points or 16 output points		Connects directly to PLC input/output terminals.	FX2N-16EX-C (sink input) FX2N-16EYT-C (sink output)	*1
FX-32E-TB	32 input points, 32 output points, or 16 input & 16 output points				
FX-16EX-A1-TB*2	16	—	100V AC input type	FX2N-16EX-C (sink input)	*4
FX-16EYR-TB*3		16	Relay output type	FX2N-16EYT-C (sink output)	24V DC 80 mA
FX-16EYS-TB*3	—	16	Triac output type	FX2N-16EYT-C (sink output)	24V DC 112 mA
FX-16EYT-TB*3	—	16	Transistor output (sink) type	FX2N-16EYT-C (sink output)	24V DC 112 mA
FX-16EYT-H-TB*3	—	16	Transistor output (sink) type	FX2N-16EYT-C (sink output)	24V DC 112 mA

- *1. A power supply for the input circuit is required when connected to the FX2N-16EX-C.
The current consumption is shown in the table below.

	Power Supply Voltage	Current Consumption
FX2N-16EX-C	24V DC	112 mA

- *2. The applications shown below are not supported.

	Unsupported Applications
High-speed processing	High-speed counter, input interruption, pulse catch, pulse density (SPD) instruction
Time division input	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Other	Input refresh (REFF) instruction, ten-key input (TKY) instruction, ABS current value readout (ABS) instruction

- *3. The applications shown below are not supported.


	Unsupported Applications
Pulse output	Pulse output (PLSY) instruction, pulse output with acceleration/deceleration (PLSR) instruction, pulse width modulation (PWM) instruction, zero return with DOC search function (DSZR) instruction, interruption positioning (DVIT) instruction, positioning by batch setting format (TBL) instruction, ABS current value readout (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, relative positioning (DRVI) instruction, absolute positioning (DRVA) instruction
Time division input	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Time division output	7-segment display (SEGL) instruction, ASCII code print (PR) instruction

- *4. A power supply for the input circuit is required when connected to the FX2N-16EX-C.
The current consumption is shown in the table below.


	Power Supply Voltage	Current Consumption
FX2N-16EX-C	24V DC	160 mA

19.2 External Dimensions & Component Names


FX-16E-TB

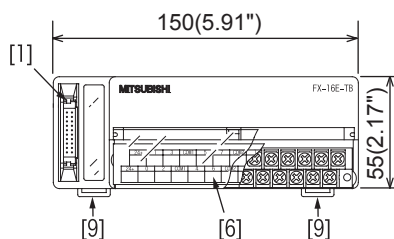


FX-32E-TB

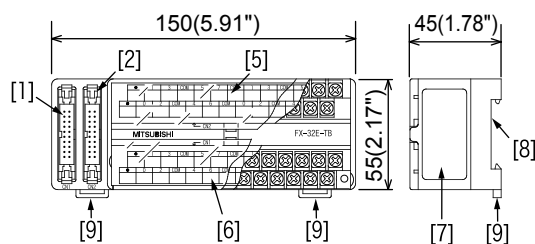

FX-16EX-A1-TB

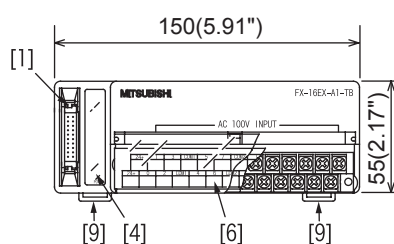

FX-16EYR-TB
FX-16EYS-TB
FX-16EYT-TB, FX-16EYT-H-TB

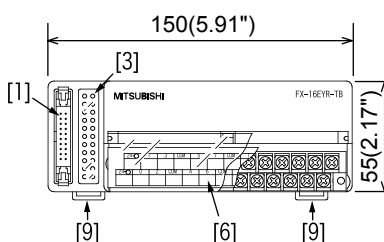


Units: mm (inches)
Accessories: Input/output No. labels, terminal block arrangement cards

No.	Name	Remarks
[1]	CN1 connector	—
[2]	CN2 connector	Present at FX-32E-TB.
[3]	Operation indicator LED	Present at FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB.
[4]	POWER LED	Present at FX-16EX-A1-TB.
[5]	CN2 terminal block (M3.5 screws)	Present at FX-32E-TB.
[6]	CN1 terminal block (M3.5 screws)	—
[7]	Nameplate	—
[8]	DIN rail mounting groove (DIN rail width: 35mm(1.38"))	—
[9]	DIN rail mounting hook	—

19.3 Terminal Arrangement


1. FX-16E-TB

When connected to the FX2N-16EYT-C

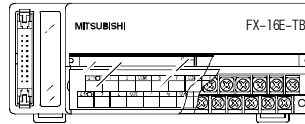

Lower numbers								Higher numbers							
•	1	3	COM	5	7	COM		1	3	COM	5	7	COM		
•	0	2	COM	4	6	COM		0	2	COM	4	6	COM		

When connected to the FX2N-16EX-C

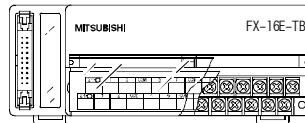


Lower numbers								Higher numbers							
24+	1	3	•	5	7	•		1	3	•	5	7	•		
24-	0	2	•	4	6	•		0	2	•	4	6	•		

2. FX-32E-TB

When connected to the FX2N-16EYT-C


Lower numbers								Higher numbers							
CN2	•	1	3	COM	5	7	COM	1	3	COM	5	7	COM		
	•	0	2	COM	4	6	COM	0	2	COM	4	6	COM		

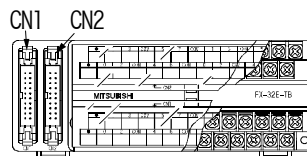

Lower numbers								Higher numbers							
CN1	•	1	3	COM	5	7	COM	1	3	COM	5	7	COM		
	•	0	2	COM	4	6	COM	0	2	COM	4	6	COM		


When connected to the FX2N-16EX-C

Lower numbers								Higher numbers							
CN2	24+	1	3	•	5	7	•	1	3	•	5	7	•		
	24-	0	2	•	4	6	•	0	2	•	4	6	•		

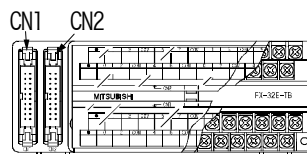


Lower numbers								Higher numbers							
CN1	24+	1	3	•	5	7	•	1	3	•	5	7	•		
	24-	0	2	•	4	6	•	0	2	•	4	6	•		

3. FX-16E-A1-TB

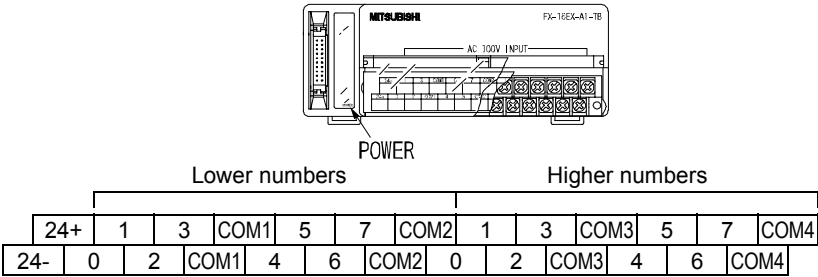

4. FX-16EYR-TB, FX-16EYS-TB, FX-16EYT-TB, FX-16EYT-H-TB

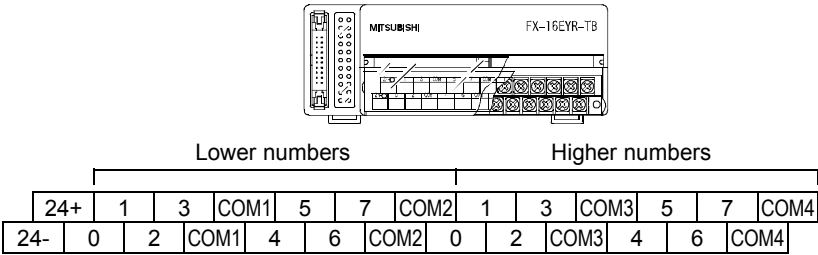


19.4 Installation Work

→ Refer to Section 8.2 for installation location.


19.4.1 Mounting

- 1** Turn OFF all power supplies connected to the PLC, input/output devices, and terminal blocks.
- 2** Align the top side of the "DIN rail mounting groove" (refer to Fig.1 at right) with the DIN rail.
- 3** Press the product onto the DIN rail (refer to Fig.2 at right).

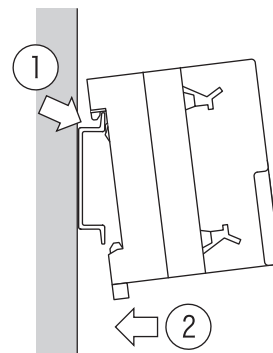

19.4.2 Removal


- 1** Turn the power supply OFF.
- 2** Disconnect the wiring and input/output cables.
- 3** Place a flathead screwdriver against the DIN rail mounting hook in the posture shown (refer to Fig.1 at right)
- 4** Move the flathead screwdriver in direction shown at right (refer to Fig.2) to detach the DIN rail mounting hook from the DIN rail.
- 5** Remove the product from the DIN rail.

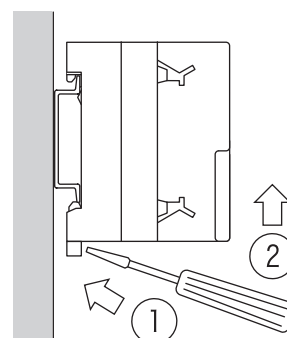

19.4.3 Input/output cable connection

The terminal block's CN1 and CN2 connectors comply with the MIL-83503 standard.

→ Refer to Subsection 9.2.2 for input/output cable information.

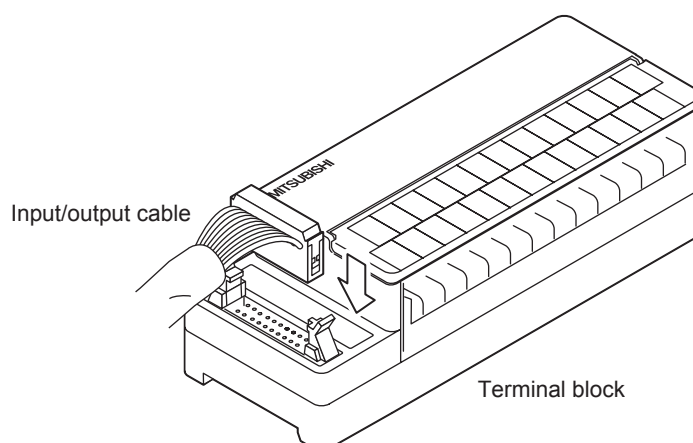

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

19.4.4 Connection to terminal block


1. The product terminal screws are as shown in the table below.

Model Name	Terminal Screw Size
<ul style="list-style-type: none"> FX-16E-TB, FX-32E-TB FX-16EX-A1-TB FX-16EYR-TB FX-16EYS-TB FX-16EYT-TB, FX-16EYT-H-TB 	M3.5


2. Crimp terminal sizes vary according to the wiring method.

Use the sizes shown below.

- When 1 wire is connected to 1 terminal:
Use a crimp terminal of the size shown below, and install it as shown in the lower right figure.

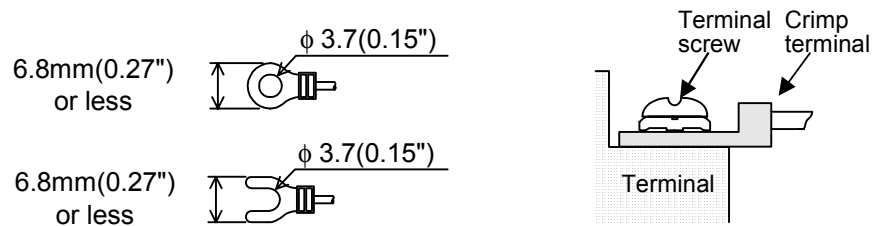

- When 2 wires are connected to 1 terminal:
Use a crimp terminal of the size shown below, and install it as shown in the lower right figure.

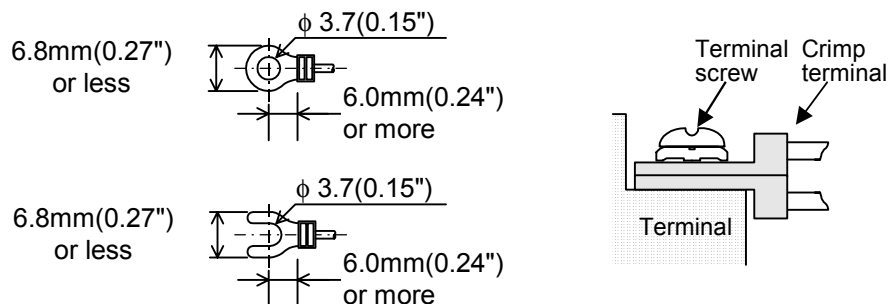


19.5 FX-16E-TB, FX-32E-TB

The FX-16E-TB and FX-32E-TB items must be connected using an FX2N series input/output connector type expansion block.

	Input Connector	Output Connector
Connectable models	FX2N-16EX-C (sink input)	FX2N-16EYT-C (sink output)

19.5.1 Internal circuit

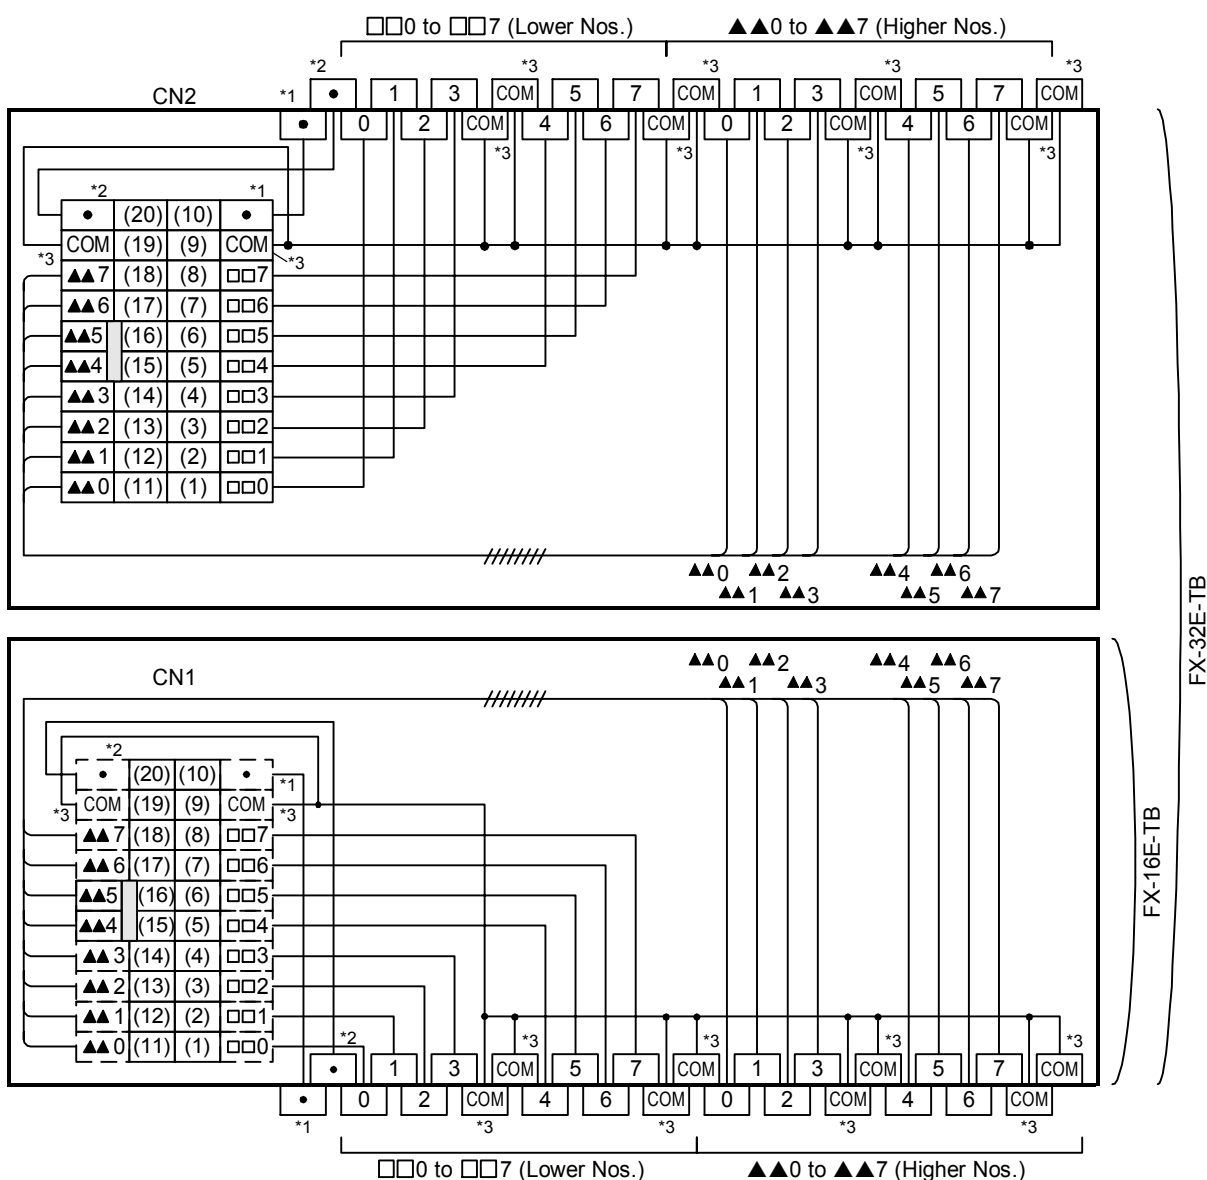

- *1 "24-" when connected to FX2N-16EX-C.
- *2 "24+" when connected to FX2N-16EX-C.
- *3 "•" when connected to FX2N-16EX-C.


19.5.2 Example of input external wiring

WIRING PRECAUTIONS



- Do not wire vacant terminals externally.
Doing so may damage the product.

1. When connected to an FX2N-16EX-C (sink input) input expansion block:

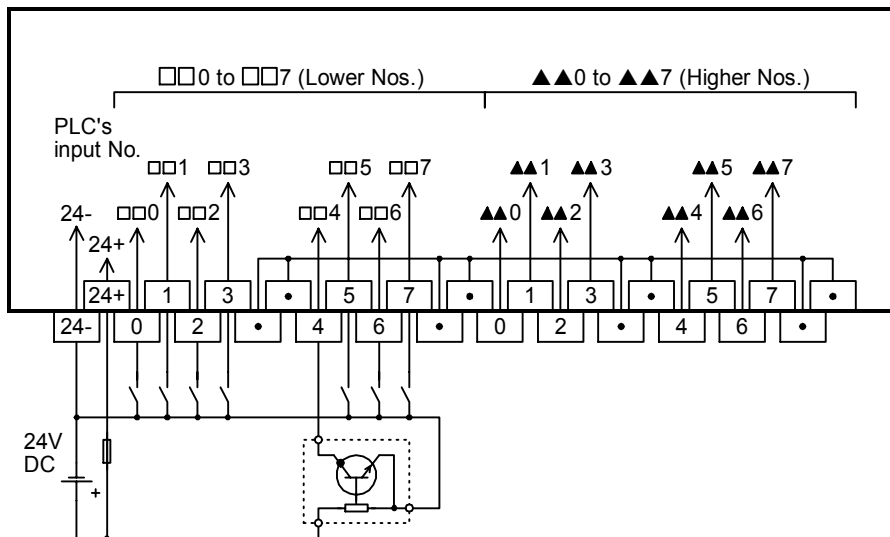


19.5.3 Output external wiring

WIRING PRECAUTIONS



- Do not wire vacant terminals externally.
Doing so may damage the product.

1. When connected to an FX2N-16EX-C (sink output) output expansion block:

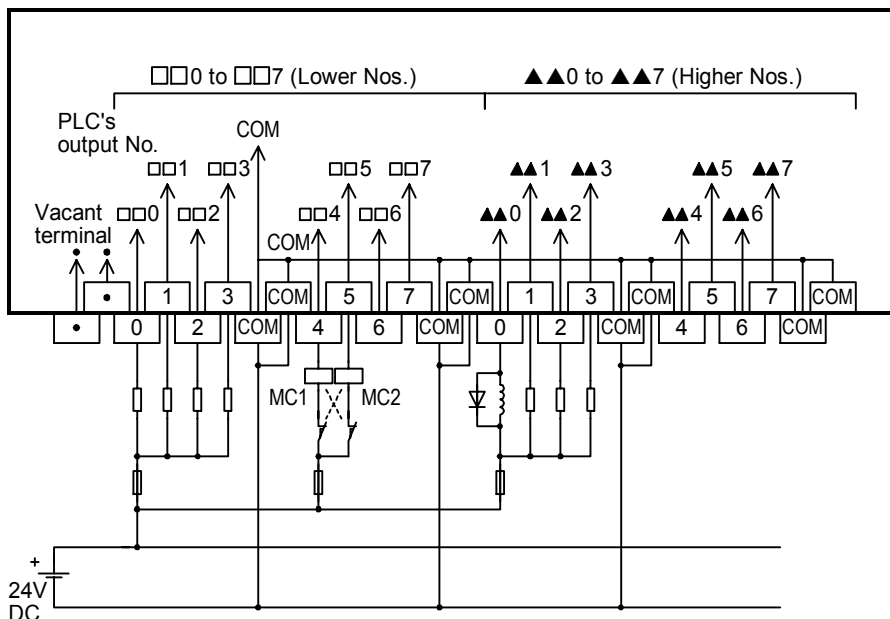

19.6 FX-16EX-A1-TB


The FX-16EX-A1-TB is used by connecting it to the FX_{2N} series input expansion block (24V DC).

	Input Connector
Connectable models	FX _{2N} -16EX-C (sink input)

The applications shown below are not supported.



	Unsupported Applications
High-speed processing	High-speed counter, input interruption, pulse catch, pulse density (SPD) instruction
Time division input	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Other	Input refresh (REFF) instruction, ten-key input (TKY) instruction, ABS current value readout (ABS) instruction

19.6.1 Specifications

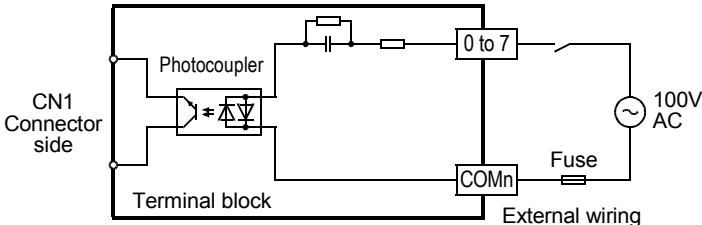Item	AC Input Type	
Input/output circuitry		
Input signal voltage	100 to 120V AC+10%-15% 50 / 60 Hz	
Input signal current	4.7 mA / 100V AC 50 Hz 6.2 mA / 110V AC 60 Hz	
Input impedance	Approx. 21 kΩ / 50 Hz Approx. 18 kΩ / 60 Hz	
Input sensitivity	ON	3.8 mA / 80V AC or more
	OFF	1.7 mA / 30V AC or more
Response time ^{*1}	25 to 30 ms	
Input signal format	Voltage contact	
Circuit isolation	Photocoupler isolation	
Input operation display	No input LEDs (equipped with 24V power supply LED indicator)	
Power consumption	1.2 W (48 mA 24V DC) ^{*2}	

*1. This response time does not include the response delay at the PLC.

*2. 3.9W (160mA, 24V DC) is required when connected to the FX_{2N}-16EX-C.



19.7 FX-16EYR-TB

The FX-16EYR-TB is used by connecting it to the FX_{2N} series output expansion block (transistor).

	Output Connector
Connectable models	FX _{2N} -16EYT-C (sink output)

The applications shown below are not supported.


	Unsupported Applications
Pulse outputs	Pulse output (PLSY) instruction, pulse output with acceleration/deceleration (PLSR) instruction, pulse width modulation (PWM) instruction, zero return with DOC search function (DSZR) instruction, interruption positioning (DVIT) instruction, positioning by batch setting format (TBL) instruction, ABS current value readout (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, relative positioning (DRVI) instruction, absolute positioning (DRVA) instruction
Time division input	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Time division output	7-segment display (SEGL) instruction, ASCII code print (PR) instruction

19.7.1 Specifications


Item	Relay output
Input/output circuitry	
Load voltage	250V AC or less, 30V DC or less
Max. load	<div>Resistance load</div> <div>2 A / point</div> <div>The total load current per common (4 points) should not exceed 8A.</div>
	<div>Inductive load</div> <div>80 VA</div>
Min. load	5V DC, 2mA Reference value
Open-circuit leakage current	—
Response time ^{*1}	Approx. 10 ms
Circuit isolation	Mechanical isolation
Operation indicators	LED lights when relay coil power is supplied
Power consumption	1.92 W (80 mA 24V DC)

*1. This response time does not include the response delay at the PLC.

19.7.2 Internal circuit

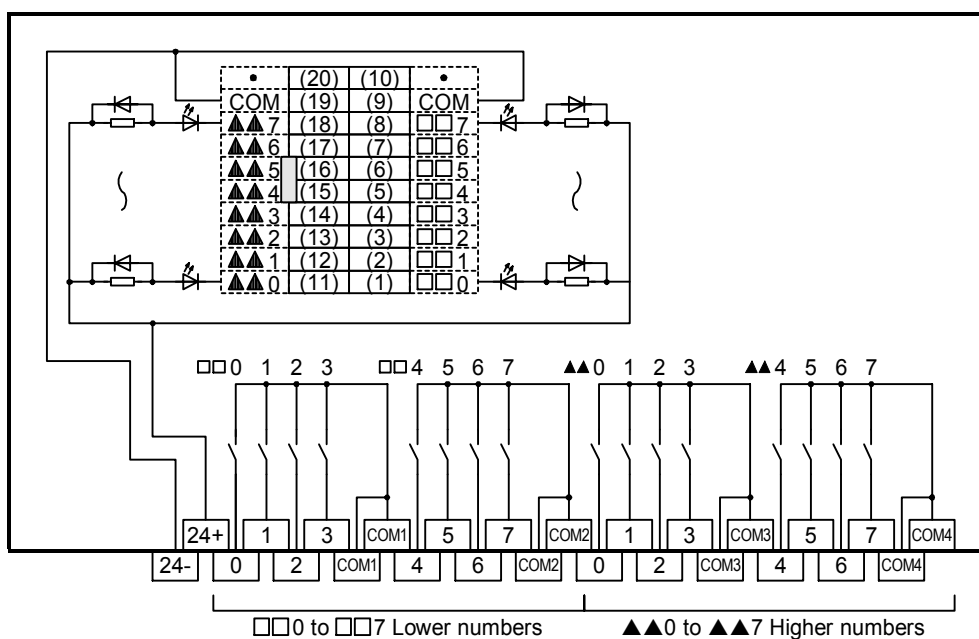


19.7.3 Example of output external wiring

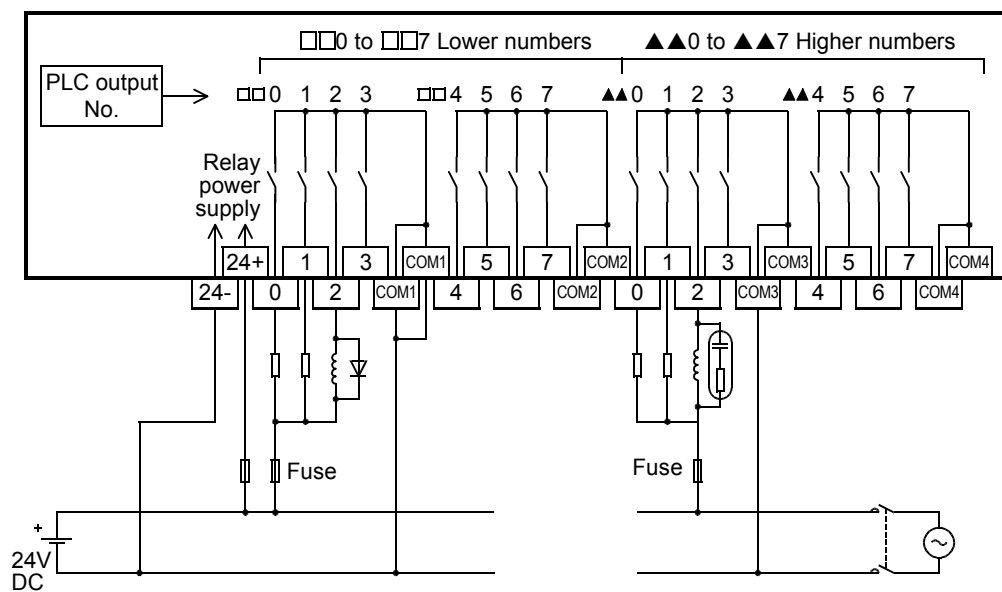

19.7.4 External wiring precautions

1. Protection circuit for load short-circuits

A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

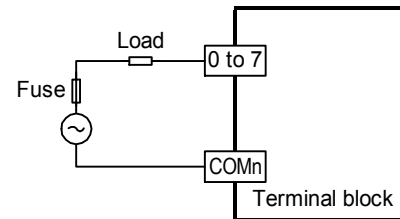

2. Contact protection circuit for inductive loads

The relay output circuit in the terminal block is not equipped with a protection circuit.


Therefore, when an inductive load is connected. For the expected product life and noise reduction, it is recommended to insert a contact protection circuit.

1) DC circuit

Connect a diode (for commutation) parallel to the load.

The diode (for commutation) must comply with the following specifications.


Item	Guide
Reverse voltage	5 to 10 times the load voltage
Forward current	Load current or more

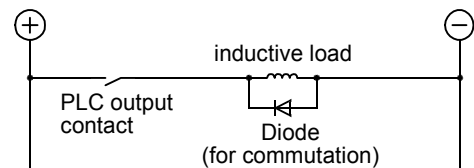

2) AC circuit

Connect the surge absorber shown below (combined CR components such as a surge killer and spark killer, etc.), parallel to the load.

Item	Guide
Rated voltage	250V AC
Static electricity capacity	Approx. 0.1μF
Resistance value	Approx. 100 to 120Ω

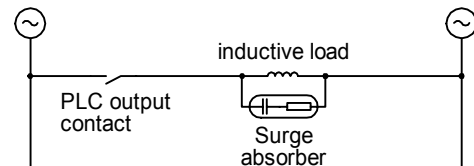


Reference

Manufacturer	Model name
Marcon Electronics Co., Ltd.	RFD2E104K
Okaya Electric Industries Co., Ltd.	CR-10201

Manufacturer	Model name
Rubycon Corporation	250MCRA104100M B0325


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

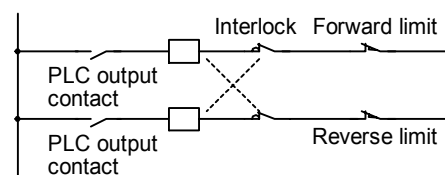

4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

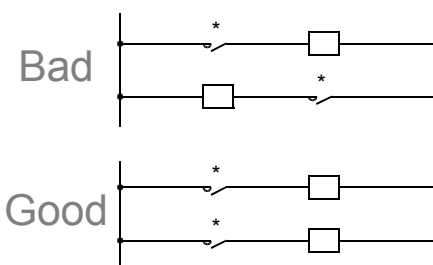

19.7.5 Operation life of relay output contact

The standard life of the contact used for conductive AC loads, such as contactors and solenoid valves, is 500,000 times at 35 VA.

The following table shows the approximate life of the relay based on the results of our life test.

Test conditions: 1 sec. ON / 1 sec. OFF

Load Capacity		Contact Life	Example of applicable loads (Magnetic switch manufactured by our company)
35VA	0.35 A / 100V AC	3,000,000 times	S-K10 to S-K150 S-N10 to S-K35
	0.17 A / 200V AC		
80VA	0.8 A / 100V AC	1,000,000 times	S-K180 to S-K400
	0.4 A / 200V AC		
120VA	1.2 A / 100V AC	200,000 times	S-K600, S-K800
	0.6 A / 200V AC		

Even under the above conditions, the life of a relay contact could be shortened dramatically by shutting off a rush current (over-current).

19.8 FX-16EYT-TB, FX-16EYT-H-TB



The FX-16EYT(H)-TB is used by connecting it to the FX_{2N} series output expansion block (transistor).

	Output Connector
Connectable models	FX _{2N} -16EYT-C (sink output)

The applications shown below are not supported.


	Unsupported Applications
Pulse outputs	Pulse output (PLSY) instruction, pulse output with acceleration/deceleration (PLSR) instruction, pulse width modulation (PWM) instruction, zero return with DOC search function (DSZR) instruction, interruption positioning (DVIT) instruction, positioning by batch setting format (TBL) instruction, ABS current value readout (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, relative positioning (DRVI) instruction, absolute positioning (DRVA) instruction
Time division input	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Time division output	7-segment display (SEGL) instruction, ASCII code print (PR) instruction

19.8.1 Specifications

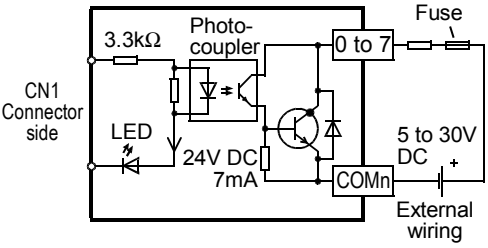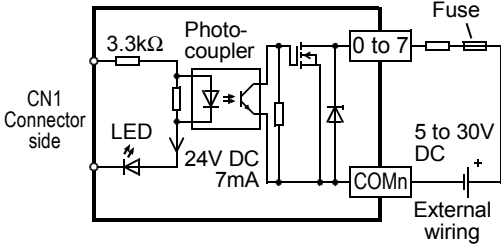
Item		Transistor output	
		FX-16EYT-TB	FX-16EYT-H-TB
Input/output circuitry			
Load voltage		5 to 30V DC	5 to 30V DC
Max. load	Resistance load	0.5 A / point The total load current per common (4 points) should not exceed 0.8 A.	1 A / point The total load current per common (4 points) should not exceed 3 A.
	Inductive load	12 W (24V DC)	24 W (24V DC)
Open-circuit leakage current		0.1 mA / 30V DC	0.1 mA / 30V DC
Response time *1	OFF→ON*1	0.2 ms or less / 24V DC	0.3 ms or less / 24V DC
	ON→OFF*1	1.5 ms or less / 24V DC	4 ms or less / 24V DC
Output element's ON voltage		1.5 V	1.5 V
Circuit isolation		Photo-coupler isolation	Photo-coupler isolation
Operation indicators		LED lights when photo-coupler power is supplied	LED lights when photo-coupler power is supplied
Power consumption		2.7 W (112 mA 24V DC)	2.7 W (112 mA 24V DC)

*1. This response time does not include the response delay at the PLC.

19.8.2 Internal circuit

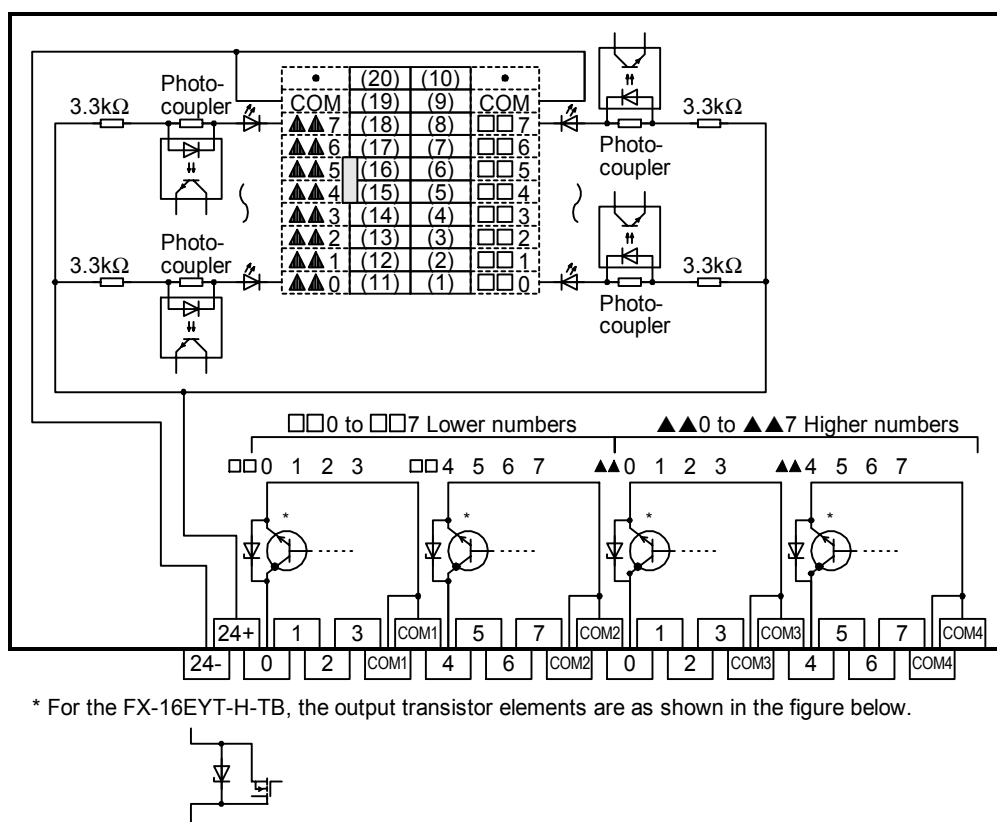


19.8.3 Example of output external wiring

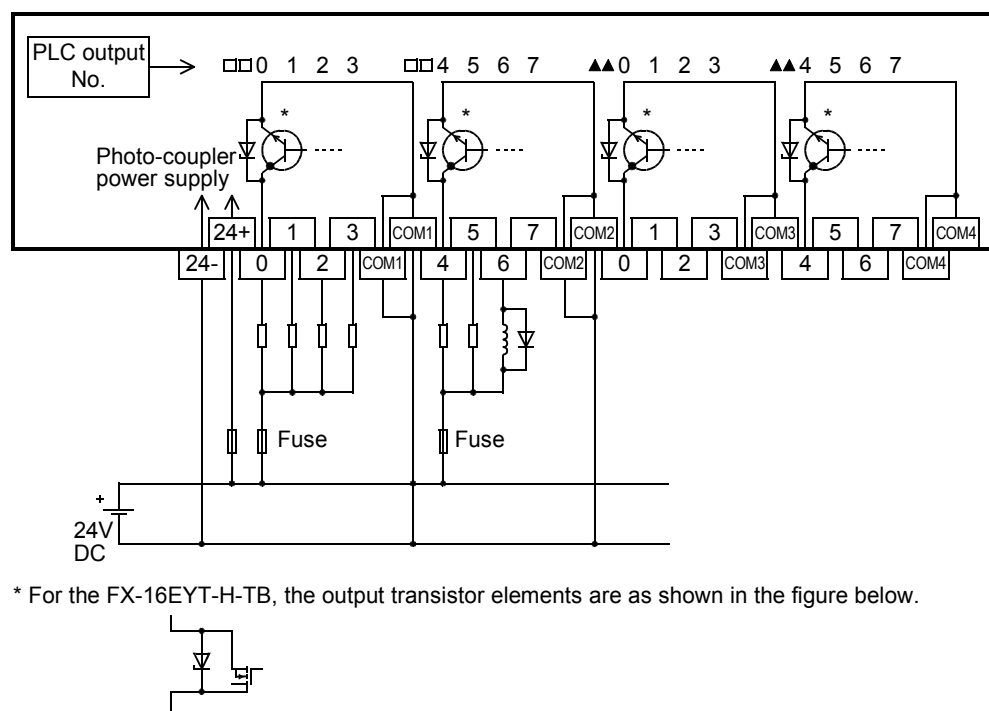

19.8.4 External wiring precautions

1. Protection circuit for load short-circuits


A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output. Use a load power supply capacity that is at least 2 times larger than the total rated fuse capacity.

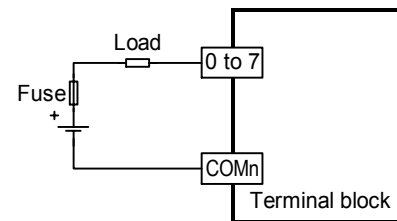

2. Transistor protection circuit for inductive loads


The transistor output circuit in the terminal block is equipped with a Zener diode (50V) for protection. When an inductive load is connected, however, a diode should be connected parallel to the load when required. The diode must comply with the specifications shown below.

Counter voltage	5 to 10 times of the load voltage
Forward current	Load current or more

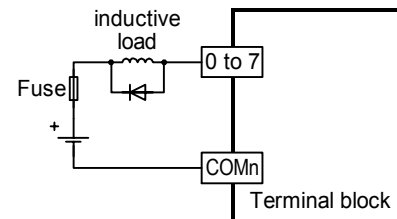

3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

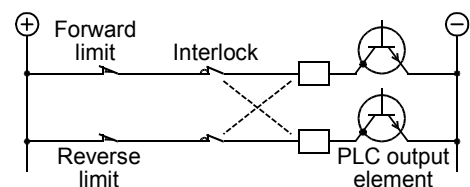

11

High-Speed
Counters

12

External Wiring

13

Wiring for
Various Uses

14

Test Run,
Maintenance,
Troubleshooting

15

Input/Output
Powered
Extension Units

16

Input/Output
Extension
Blocks

17

Other Extension
Units and
Options

18

Display Module

19

Terminal Block

20

Memory
Cassette

19.9 FX-16EYS-TB


The FX-16EYS-TB is used by connecting it to the FX_{2N} series output expansion block (transistor).

	Output Connector
Connectable models	FX _{2N} -16EYT-C (sink output)

The applications shown below are not supported.

	Unsupported Applications
Pulse outputs	Pulse output (PLSY) instruction, pulse output with acceleration/deceleration (PLSR) instruction, pulse width modulation (PWM) instruction, zero return with DOC search function (DSZR) instruction, interruption positioning (DVIT) instruction, positioning by batch setting format (TBL) instruction, ABS current value readout (ABS) instruction, zero return (ZRN) instruction, variable speed pulse output (PLSV) instruction, relative positioning (DRVI) instruction, absolute positioning (DRVA) instruction
Time division inputs	Matrix input (MTR) instruction, 16-key input (HKY) instruction, digital switch (DSW) instruction, arrow switch (ARWS) instruction
Time division outputs	7-segment display (SEGL) instruction, ASCII code print (PR) instruction


19.9.1 Specifications

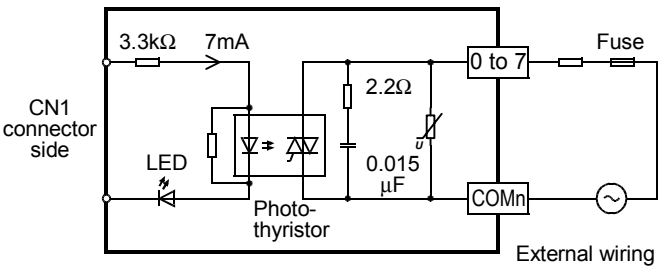Item	TRIAC output	
Input/output circuitry		
Load voltage	85 to 242V AC	
Max. load	Resistance load	0.3 A / point*1
	Inductive load	The total load current per common (4 points) should not exceed 0.8 A.
Min. load	15 VA / 100V AC 36 VA / 200V AC	
Open-circuit leakage current	0.4 VA / 100V AC 1.6 VA / 200V AC	
Response time*2	1 mA / 100V AC 2 mA / 200V AC	
Circuit isolation	2 ms or less	
Operation indicator	Photocoupler isolation	
Power consumption	LED lights when photo-thyristor power is supplied	
	2.7 W (112 mA 24V DC)	

*1. In systems where frequent large-load ON/OFF switching occurs due to rush currents, the root mean square current should be 0.2 A or less.


<Example>

$$\sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}} = 0.2A$$

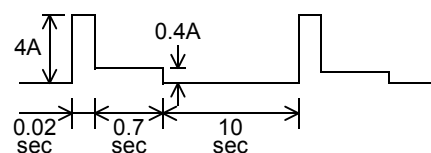


*2. This response time does not include the response delay at the PLC.

19.9.2 Internal circuit

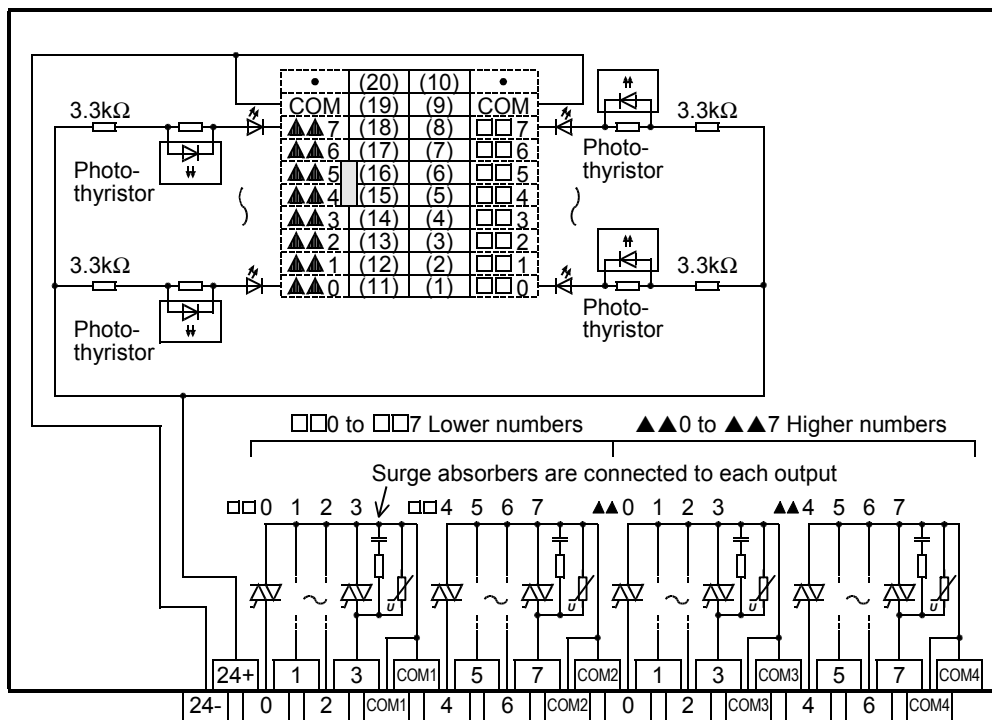


19.9.3 Example of output external wiring

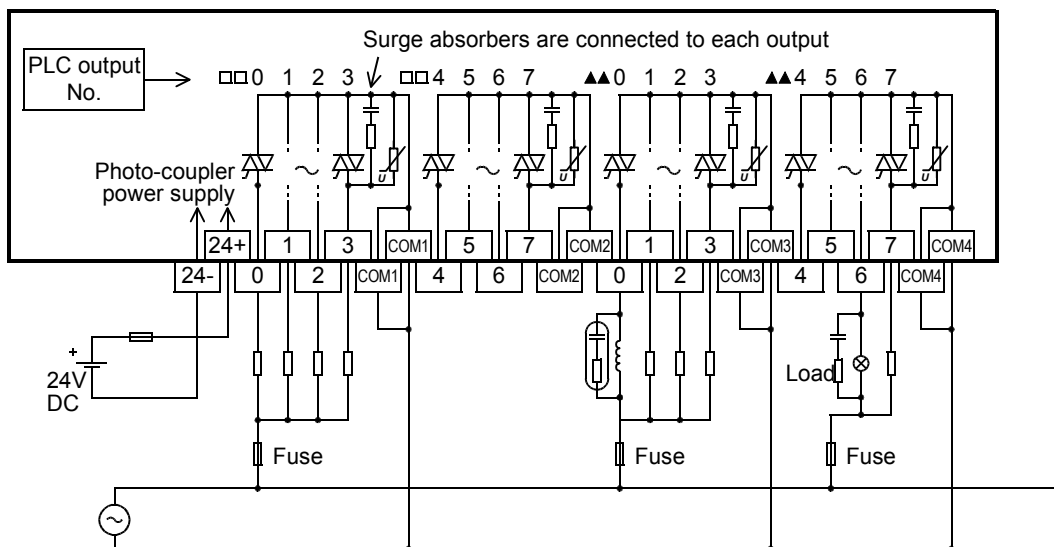

19.9.4 External wiring precautions


1. Protection circuit for load short-circuits

A short-circuit at a load connected to an output terminal could cause burnout at the output element or the PCB. To prevent this, a protection fuse should be inserted at the output.

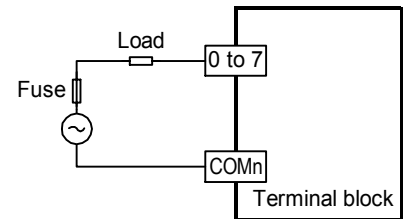

2. Micro current load

The PLC's internal Triac output circuit is equipped with a turn-off C-R absorber. When a micro current load is connected, be sure to connect a surge absorber parallel to the load. In this manual, the term "micro current load" refers to a load of 0.4VA/100V AC or less, and 1.6VA/200V AC or less.

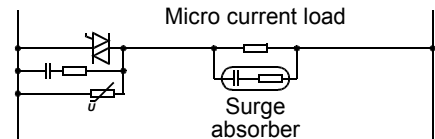

Item	Guide
Rated voltage	250V AC
Static electricity capacity	Approx. 0.1μF
Resistance value	Approx. 100 to 120Ω


Reference

Manufacturer	Model name
Marcon Electronics Co., Ltd.	RFD2E104K
Okaya Electric Industries Co., Ltd.	CR-10201

Manufacturer	Model name
Rubycon Corporation	250MCRA104100M B0325


3. Interlock

For loads such as forward/reverse contactors, etc., where a hazardous condition could result if switched ON simultaneously, an external interlock should be provided for interlocking the PLC's internal programs as shown to the right.

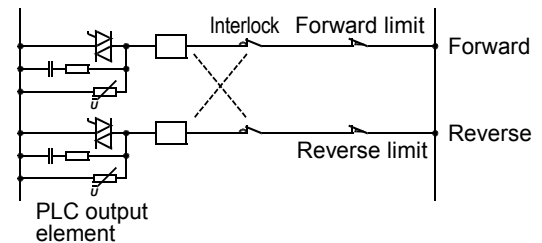

4. In-phase

PLC output contacts (*) should be used in an "in-phase" manner.

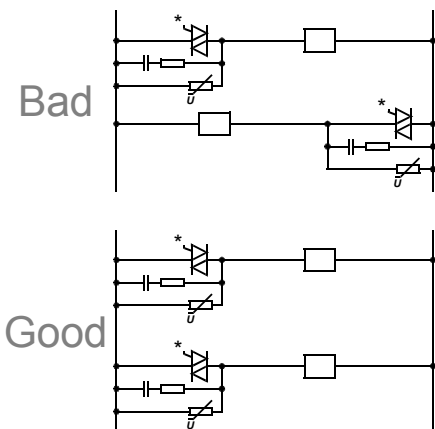

20. FX3U-FLROM-16/64/64L (Memory Cassette)

This chapter explains the memory cassette specifications and functions.

The memory cassette can be installed at the main unit, and when installed, the memory cassette's internal program is used in place of the internal RAM memory.


20.1 Specifications

20.1.1 Electrical specifications


Model Name	Max. Memory Capacity	Memory Type	Max. Allowable Write	PROTECT Switch	Loader Function	Compatible Versions
FX3U-FLROM-64L	64000 steps (2k/4k/8k/16k/32k selectable)	Flash memory	10,000 times	Provided	Provided	1st article (Ver.2.20)
FX3U-FLROM-64	64000 steps (2k/4k/8k/16k/32k selectable)	Flash memory	10,000 times	Provided	NA	
FX3U-FLROM-16	16000 steps (2k/4k/8k selectable)	Flash memory	10,000 times	Provided	NA	

20.1.2 Component names & external dimensions

1. FX3U-FLROM-64L

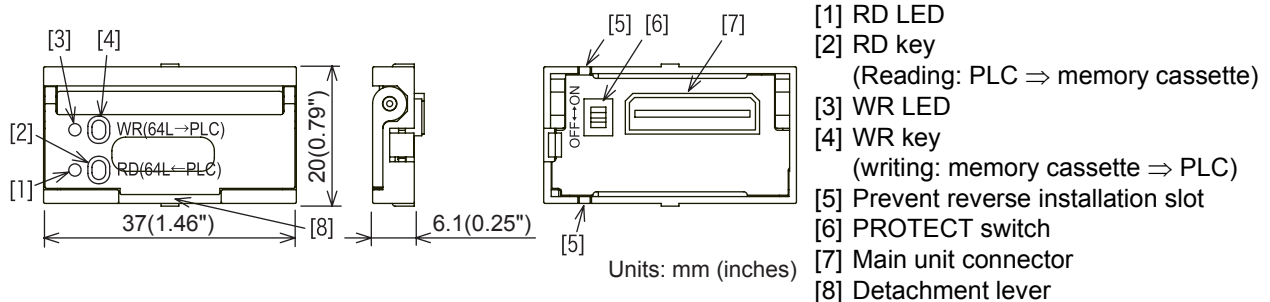

2. FX3U-FLROM-64, FX3U-FLROM-16

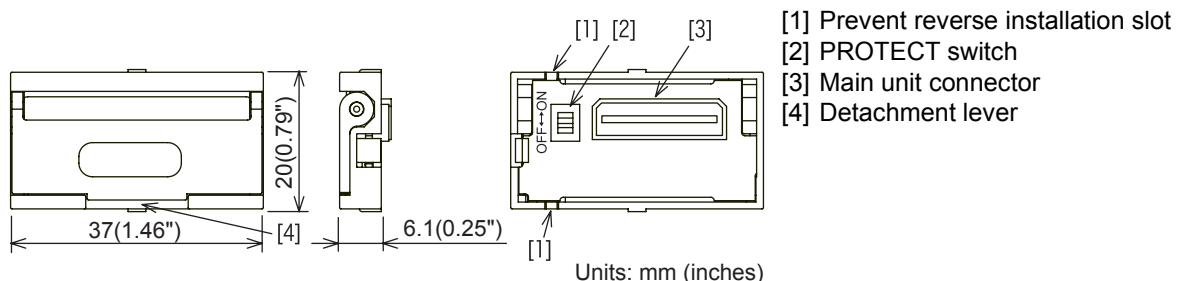


20.2 Installation & Removal

If a display module (FX3U-7DM) and a display module holder (FX3U-7DM-HLD) are installed, remove these items before installing or removing the memory cassette. Be sure that the power is OFF when installing/removing the memory cassette.

20.2.1 Memory cassette installation


1 Remove the top cover.

While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the figure to the right.

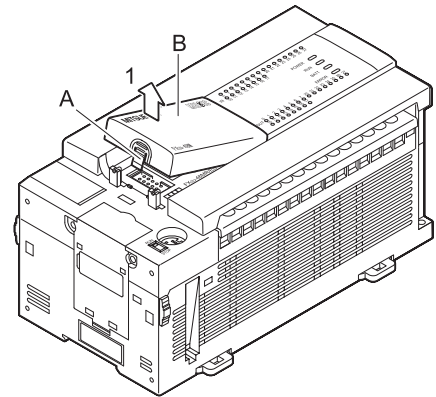


2 Raise the memory cassette detachment lever.

Raise the memory cassette detachment lever ("C").

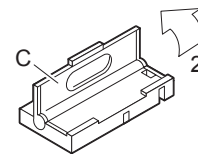

3 Install the memory cassette.

Align the cassette with the "prevent reverse installation slot" ("D"), then press it all the way in (when pressed all the way in, the cassette is approx. 0.4mm (0.02") lower than the surrounding surface.)

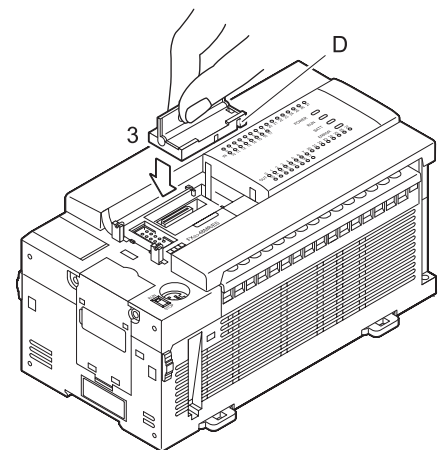



Installation precaution




- Connect the memory cassette securely to the prescribed connector. A poor connection can cause malfunctions. Installing the cassette in a raised or tilted posture can also cause malfunctions.

Cross-section drawing (memory cassette installation condition)

Press the 4 corners in approx. 0.4mm(0.02")

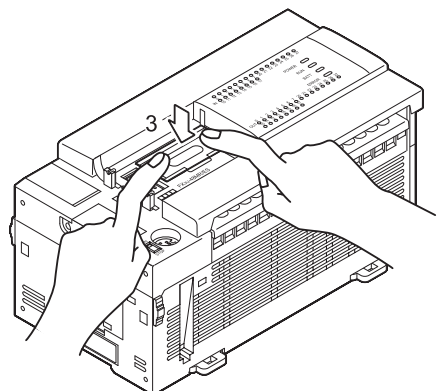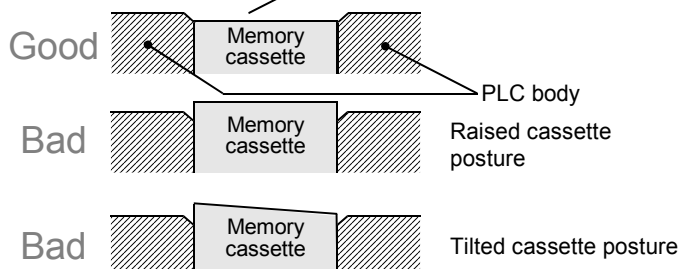


4 Attach the top cover ("B").

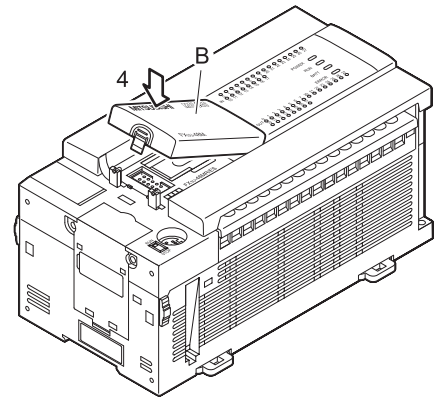

20.2.2 Memory cassette removal


1 Remove the top cover.

While pressing the top cover hook ("A"), remove the top cover ("B") as shown in the figure to the right.

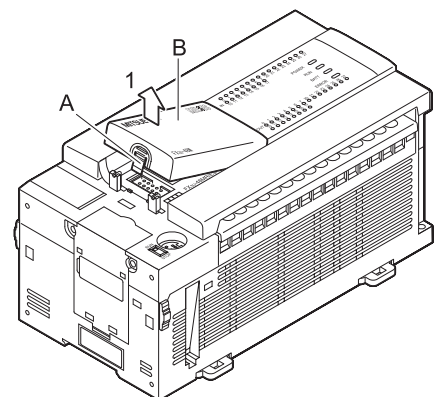

2 Raise the memory cassette detachment lever.

Raise the memory cassette detachment lever ("C").

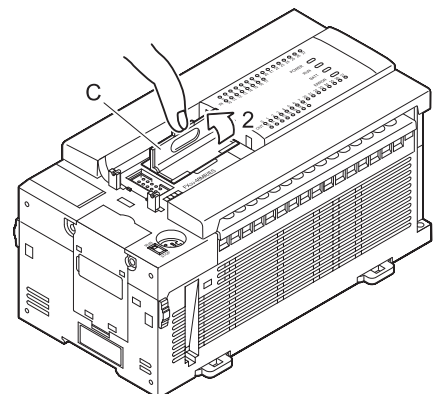


3 Grasp the detachment lever and pull it.

Grasp the detachment lever ("C") and pull it vertically to remove the memory cassette.

Caution:

Take care to avoid twisting the detachment lever when removing the memory cassette.

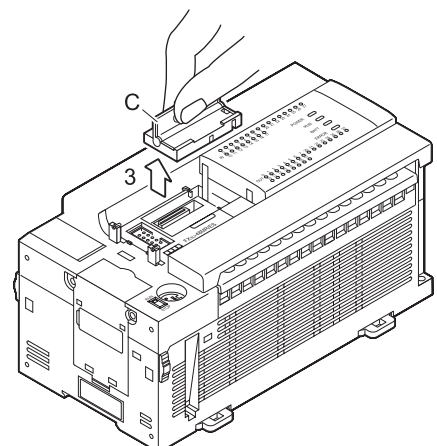

11	High-Speed Counters
12	External Wiring
13	Wiring for Various Uses
14	Test Run, Maintenance, Troubleshooting
15	Input/Output Powered Extension Units
16	Input/Output Extension Blocks
17	Other Extension Units and Options
18	Display Module
19	Terminal Block
20	Memory Cassette

20.3 Saved Data Content

The following data is saved on the memory cassette.

Item		Description		Saving Method
Program Memory	Parameters	<ul style="list-style-type: none">Memory capacity setting<ul style="list-style-type: none">Memory capacity (default setting: 16k steps) 2k/4k/8k/16k steps (FX3U-FLROM-16) 2k/4k/8k/16k/32k/64k steps (FX3U-FLROM-64/64L)Comment capacityFile register capacityBuffer memory initial setting capacity <ul style="list-style-type: none">Device latch range settings (keep device)Modem initializing settings, battery-free operation, RUN terminal settingsRS/RS2 instructions / computer link function communication settingsPositioning settingsBFM default settings		Programming tool *2
	Sequence programs	User-created sequence programs	Comments and file registers can be created in the memory by setting them in the parameter memory capacity.*1	
	Comments	Max. 6350 points (0 to 127 blocks, 1 block = 50 points / 500 steps)		
	File registers	Max. 7000 points (0 to 14 blocks, 1 block = 500 points / 500 steps)		
Extended file registers		ER0 to ER32767 (32768 points)		<ul style="list-style-type: none">Sequence programGX Developer

*1. The total size of the programs + comments + file registers must not exceed the maximum capacity of the memory cassette.

*2. The maximum number of points for the memory capacity, comments, and file registers, can be specified when the FX3U(C) programming tool is selected. The maximum number of points cannot be specified when a programming tool other than the FX3U(C) is selected.


20.4 PROTECT Switch

20.4.1 PROTECT switch setting

Reading from and writing to memory cassette operations can be performed by using the programming tool.

Because sequence programs are written by an electronic format, a special ROM writer and ultraviolet eraser are not required.

The PROTECT switch must be turned OFF to enable writing.

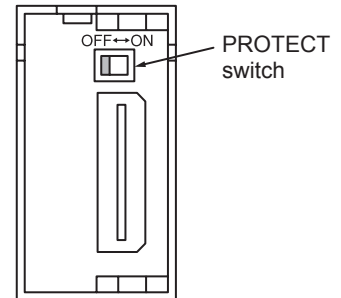


20.4.2 PROTECT switch operation

1. Preparing the operation tools


Set the PROTECT switch knob by using the tip of a pair of tweezers, a precision screwdriver, or a tool with a tip width of approx. 0.8mm (0.04").

Do not use objects with round tips, as the round tip can easily slip off the switch knob, possibly resulting in an incorrect setting.

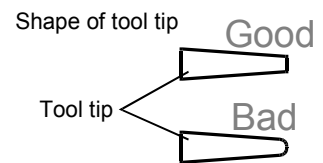

2. Switch operation procedure

As shown in the figure below, the switch knob can be "pushed" or "pulled". When setting the switch, do not set it in an intermediate position.

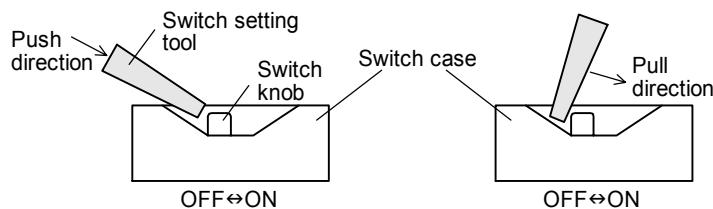

20.4.3 Precautions when setting and using the switch

- Leaving the switch knob at an intermediate position for an extended period can cause an equipment failure.
- Also use care to avoid scratching the PCB when setting the switch.

20.5 Memory Cassette <-> PLC (RAM Memory) Transfers by Loader Function

The FX3U-FLROM-64L loader function ([WR] and [RD] key operation) is explained in this chapter.

- Program transfers (reading/writing) are possible between the memory cassette and the PLC's internal RAM memory.
- The loader function is enabled while the PLC is stopped.

20.5.1 Tool for pressing the [WR] and [RD] keys

Use an insulator tool (plastic, ceramic, etc.) to press the [WR] and [RD] keys. The area around the keys is not insulated. Using a metal screwdriver, etc can cause equipment damage.

20.5.2 Writing (WR: 64L → PLC)

A memory cassette program is written to the PLC's internal RAM memory.

Required condition: The PLC must be stopped.

1 Install the memory cassette on the main unit.

(Setting the PROTECT switch to ON (on memory cassette's rear face) prevents accidental overwriting of memory cassette program.)

→ Refer to Subsection 20.2.1 for the installation procedure.

- Verify that the PLC power is OFF, then install the memory cassette on the PLC.
- Turn the PLC power ON.
- Raise the memory cassette's eject lever.

2 Press the [WR] key 1 time.

The [WR] LED lights, and a preparation status is established.

- To cancel, press the [RD] key.

3 Press the [WR] key again.

Writing is executed, and the [WR] LED goes off.



- Writing to the built-in RAM is completed instantaneously, and the LED goes out soon.

4 Remove the memory cassette from the main unit.

Writing is completed when the [WR] LED goes off.

After turning the PLC power OFF, remove the memory cassette from the PLC.

→ Refer to Subsection 20.2.2 for the removal procedure.

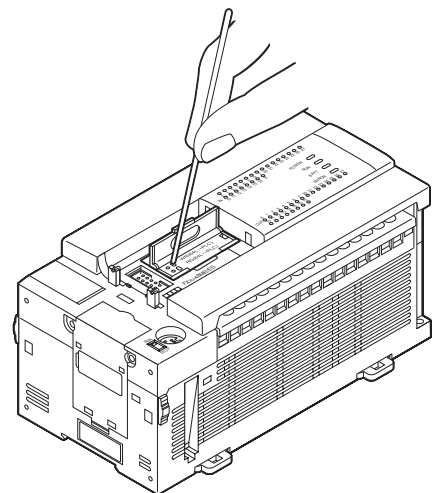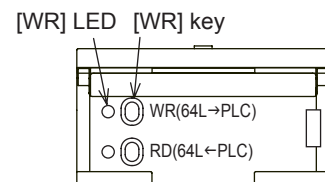

20.5.3 Reading (RD: 64L ← PLC)

Programs are read from the PLC's internal RAM memory to the memory cassette.

Required condition: The PLC must be stopped, and the PROTECT switch must be OFF.

1 Turn the PROTECT switch OFF at the rear face of the memory cassette.

The memory cassette must be removed from the PLC in order to turn the PROTECT switch OFF.

→ Refer to Subsection 20.2.2 for the removal procedure.

2 Install the memory cassette on the main unit.

→ Refer to Subsection 20.2.1 for the installation procedure.

- Verify that the PLC power is OFF, then install the memory cassette on the PLC.
- Turn the PLC power ON.
- Raise the memory cassette's eject lever.

3 Press the [RD] key 1 time.

The [RD] LED lights, and a preparation status is established.

- To cancel, press the [WR] key.

4 Press the [RD] key again.


Reading is executed, and the [RD] LED blinks.

5 Remove the memory cassette from the main unit.

Reading is completed when the [RD] LED goes off.

After turning the PLC power OFF, remove the memory cassette from the PLC, then turn the PROTECT switch ON.

→ Refer to Subsection 20.2.2 for the removal procedure.

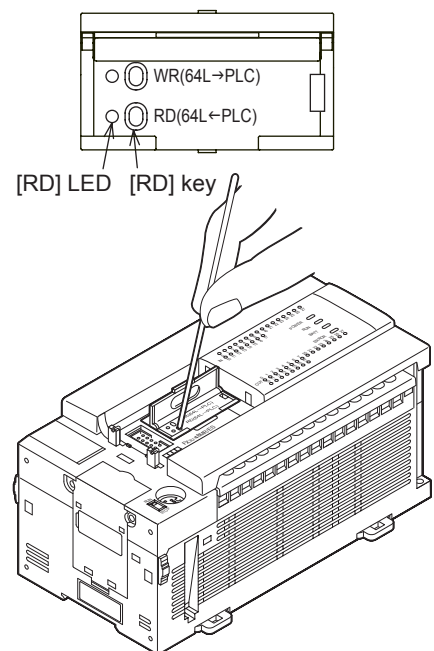

20.6 Transfers By Display Module Operation

Programs can be transferred (reading/writing) between the memory cassette and the PLC's internal RAM memory by a display module operation.

→ Refer to Section 18.17 for details concerning the memory cassette transfer function.

20.7 Operation Precautions

Observe the following precautions when writing to file registers (D) and extended file registers (ER) by program.

1. Flash memory writing count

10,000 writing operations are permitted at the flash memory.

2. Precaution for file register usage

Writing to the flash memory occurs at each PLC operation cycle if BMOV instructions are used in a continuous execution format with regard to a file register.

To prevent this, be sure to use "pulse execution format" (BMOV P) instructions.

3. Precaution for extended file register (ER) usage

Do not use continuous constant-execution SAVED and LOGR instructions with regard to extended file registers. Use the individual instructions only when required.

21. FX3U-32BL (Battery)

STARTUP AND MAINTENANCE PRECAUTIONS



- Before attaching or detaching the memory cassette, turn off power. If it is attached or detached while PLC's power is on, the data in the memory may be destroyed, or the memory cassette may be damaged.

TRANSPORTATION PRECAUTIONS



- Before transporting the PLC, turn on power to the PLC to check that the BATT LED is off and check the battery life. If the PLC is transported with the BATT LED on or the battery exhausted, the backed up data may be unstable during transportation.

The main unit of the PLC has a built-in battery. When the battery voltage drops, the BATT LED lights, and the special auxiliary relay (M8005 or M8006) turns on. In this case, replace the battery FX3U-32BL.

21.1 Battery Purpose

The battery is required to retain (backup) program memory and "keep device" data and maintain clock operation in the event of a power outage.

	Data Retained By Backup Battery
Program memory	Internal RAM parameters, programs, device comments, file registers
Device memory	<ul style="list-style-type: none"> Auxiliary relay, state (for annunciator included), timer (cumulative type), counter, data register keep device Extended register Sampling trace result
Current time	Current time clock

21.2 Specifications

Item	Specifications	Remarks
Nominal voltage	3V	Battery voltage can be monitored with PLC data register D8005.

21.2.1 Differences between main unit's internal battery and the optional battery

Although the optional battery (FX3U-32BL) serves as the same as the main unit's internal battery, they differ in the ways described below.

They may also have different external colors due to dates of manufacture.

	Main Unit Internal Battery	Optional Battery (Spare)
External appearance		<p>A nameplate label indicating the product model and lot No. is affixed.</p>
Warranty period	1 year from delivery or 18 months from date of manufacture, with reference to the main unit's manufacture No.	1 year from delivery or 18 months from the date of manufacture, with reference to the lot No.

21.3 Battery Handling

When the battery voltage is low, a "BATT" LED lights (red) while the power is ON, and M8005 and M8006 are switches ON.

Although the battery will continue to function for approximately 1 month after the "BATT" LED switches ON, a replacement battery should be ordered and installed as soon as possible.

21.3.1 Battery life & replacement guidelines

FX3U-32BL battery life : Approx. 5 years (ambient temperature : 25°C(77°F))

[Guarantee period: 1 year after delivery or 18 months after production]


FX3U-32BL battery replacement period : Within 4 to 5 years

Although the battery has a 5-year life (approx.), this can vary according to ambient temperature conditions, etc., and the battery should therefore be replaced after 4 to 5 years. Furthermore, because batteries are subject to a natural discharge, a replacement battery should be ordered in advance, with reference to the above replacement schedule.

21.3.2 Reading the date of manufacture


1. Reading the optional battery's lot No. (reference)

Batteries with affixed nameplate labels are optional batteries.

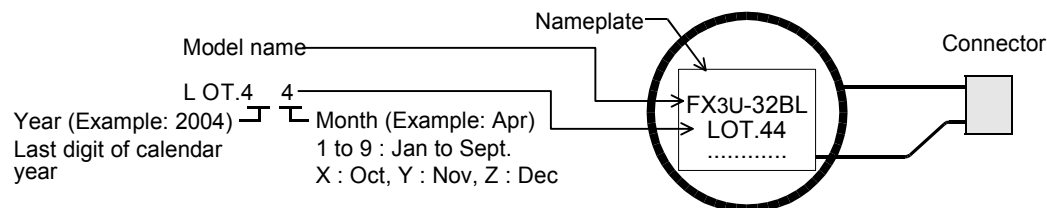

2. Reading the battery's year/month of manufacture [main unit's internal battery] (reference)


Batteries without affixed nameplate labels (refer to item 1. above) are main unit internal batteries.

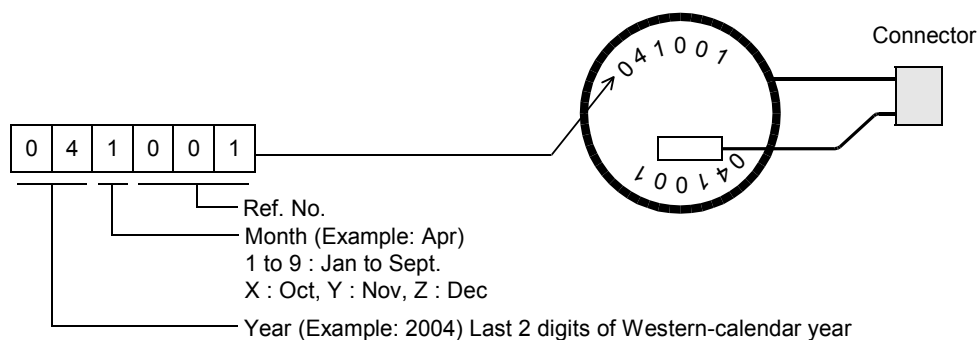

21.3.3 Special "battery low-voltage" device & notification program example

Prepare a system which allows constant external monitoring of the battery status, using an indicator lamp, etc.

- M8005



Y001 is output when a battery low-voltage condition occurs.

- M8006
Battery low-voltage is latched.
- D8005
Battery voltage can be monitored.

21.4 Battery-Free Operation

FX3U series operation is possible without a battery (PLC's internal battery removed) when the following conditions are satisfied.

→ **Refer to the FX3U / FX3UC Programming Manuals for details concerning battery-free operation.**

- 1. A memory cassette must be installed.**
- 2. The following devices must not be used as "keep" devices.**
Auxiliary relay, state (for annunciator included), timer (cumulative type), counter, data register "keep" device, extended register.
- 3. The sampling trace function must be disabled.**
- 4. The clock function must be disabled.**

21.5 Battery Replacement



Before replacing the battery

Step 4 of the replacement procedure (below), must be performed within 20 seconds after step 3, or the memory content could be lost.

- 1 Turn the power OFF.**
- 2 Remove the battery cover.**

Slightly lift the "B" side of the battery cover ("A").

Grasp the cover ("A") between your fingers and remove it.

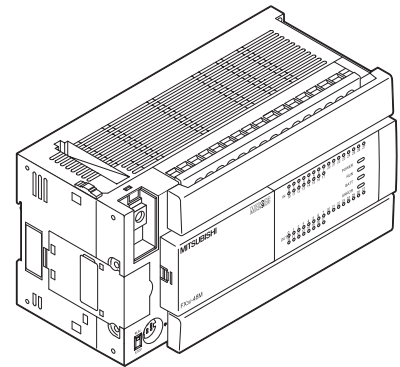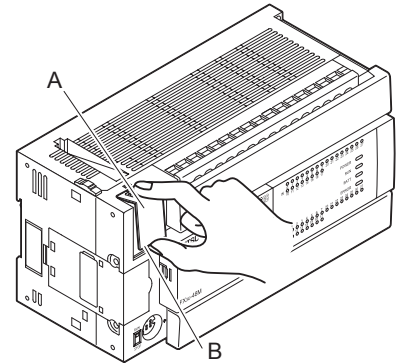


- 3 Remove the old battery.**

Extract the old battery from the battery holder ("C"), and disconnect the battery connector ("D").

- 4 Install the new battery.**

Connect the battery connector ("D") to the new battery, and insert the battery into the battery holder ("C").

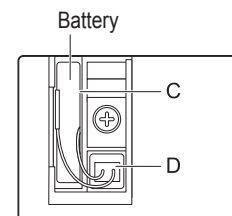

- 5 Attach the battery cover ("A").**

21.6 Battery Related Precautions

- 1. The FX3U series uses a different battery type than those used for the FX2N (F2-40BL) and FX2NC (FX2NC-32BL) series.**
 - Not for use with the FX3U series.
- 2. When performing battery-free operation, the clock stops when the main unit power is turned OFF.**

Appendix A: Operation of Special Devices (M8000 -, D8000 -)

The device numbers and functions of the special auxiliary relays (indicated as "special M" in tables) and special data registers (indicated as "special D" in tables) are shown below.

Note that functions of certain devices vary depending on the series of the PLC.

Do not use the undefined / blank special auxiliary relays and special data registers in the sequence program since they are occupied by the CPU.

In addition, do not activate or write to the devices with brackets on the first letter such as [M]8000 or [D]8001 in the program.

→ For detailed explanation, refer to the Programming Manual.

Appendix A-1 Special Auxiliary Relay (M8000 to M8511)

Number and name	Operation and function	Corresponding special device	Number and name	Operation and function	Corresponding special device
PLC Status			Clock		
[M]8000 RUN monitor NO contact		—	[M]8010	Not used	—
[M]8001 RUN monitor NC contact		—	[M]8011	ON and OFF in 10 ms cycle 10 ms clock pulse (ON: 5 ms, OFF: 5 ms)	—
[M]8002 Initial pulse NO contact		—	[M]8012	ON and OFF in 100 ms cycle 100 ms clock pulse (ON: 50 ms, OFF: 50 ms)	—
[M]8003 Initial pulse NC contact		—	[M]8013	ON and OFF in 1 sec cycle 1 sec clock pulse (ON: 500 ms, OFF: 500 ms)	—
		—	[M]8014	ON and OFF in 1 min cycle 1 min clock pulse (ON: 30 sec, OFF: 30 sec)	—
[M]8004 Error occurrence	ON when either M8060, M8061, M8064, M8065, M8066, or M8067 is ON.	D8004	M 8015	Clock stop and preset For real time clock	—
[M]8005 Battery voltage low	ON when battery voltage is below the value set in D8006.	D8005	M 8016	Time read display is stopped For real time clock	—
[M]8006 Battery error latch	It is set when battery voltage low is detected.	D8006	M 8017	±30 seconds correction For real time clock	—
[M]8007 Momentary power failure	ON for 1 scan, when detecting momentary power failure Even if M8007 turns ON, PLC continues to RUN mode in case duration of power loss is within period of time specified in D8008.	D8007 D8008	[M]8018	Installation detection (Always ON) For real time clock	—
[M]8008 Power failure detected	It is set when momentary power failure is detected. If power loss time is longer than period of time specified in D8008, M8008 is reset and PLC is turned in STOP mode.(M8000=OFF).	D8008	M 8019	Real time clock (RTC) error For real time clock	—
[M]8009 24V DC down	ON when 24V DC power fails in either powered extension unit	D8009	Flag		
			[M]8020 Zero	ON when the result of addition/subtraction is 0.	—
			[M]8021 Borrow	ON when the result of subtraction is less than the min. negative number.	—
			M 8022 Carry	ON when 'carry' occurs as a result of addition or when an overflow occurs as a result of shift operation.	—
			[M]8023	Not used	—
			M 8024*1	BMOV direction specification (FNC 15)	—
			M 8025*1	HSC mode (FNC 53 to 55)	—
			M 8026*1	RAMP mode (FNC 67)	—
			M 8027*1	PR mode (FNC 77)	—
			M 8028	Interrupt permission during FROM/TO (FNC 78 and 79) instruction execution	—
			[M]8029 Instruction execution complete	ON when operation such as DSW (FNC 72) is completed.	—

*1. Cleared when PLC switches from RUN to STOP.

Number and name	Operation and function	Corresponding special device
PLC Mode		
M 8030*1 Battery LED OFF	When M8030 set to ON, LED on PLC is not lit even if low battery voltage is detected.	—
M 8031*1 Non-latch memory all clear	If this special auxiliary relay is activated, the ON/OFF image memory of Y, M, S, T, and C, and present values of T, C, D, special data registers and R are cleared to zero.	—
M 8032*1 Latch memory all clear	However, file registers (D) in program memory, and extension file registers (ER) in the memory cassette are not cleared.	—
M 8033 Memory hold STOP	When PLC is switched from RUN to STOP, image memory and data memory are retained.	—
M 8034*1 All outputs disable	All external output contacts of PLC are turned OFF.	—
M 8035 Forced RUN mode	→Refer to Programming Manual for details.	—
M 8036 Forced RUN signal		—
M 8037 Forced STOP signal		—
[M]8038 Parameter setting	Communication parameter setting flag (for N:N network setting)	D8176 to D8180
M 8039 Constant scan mode	When M8039 is ON, PLC waits until scan time specified in D8039 and then executes cyclic operation.	D8039

*1. Executed at END instruction

Step Ladder and Annunciator		
M 8040 Transfer disable	While M8040 is turned ON, transfer between states is disabled.	—
[M]8041*2 Transfer start	Transfer from initial state is enabled in automatic operation mode.	—
[M]8042 Start pulse	Pulse output is given in response to a start input.	—
M 8043*2 Zero return complete	Set this in the last state of zero return mode.	—
M 8044*2 Zero point condition	Set this when machine zero return is detected.	—
M 8045 All output reset disable	Disables the 'all output reset' function when the operation mode is changed.	—
[M]8046*3 STL state ON	ON when M8047 is ON and either of S0 to S899 or S1000 to S4095 is active.	M8047
M 8047*3 STL monitoring enable	D8040 to D8047 are enabled when M8047 is ON.	D8040 to D8047
[M]8048*3 Annunciator operate	ON when M8049 is ON and either of S900 to S999 is ON.	—
M 8049*2 Annunciator enable	D8049 is enabled when M8049 is ON.	D8049 M8048

*2. Cleared when PLC switches from RUN to STOP.

*3. Executed at END instruction.

Number and name	Operation and function	Corresponding special device
Interrupt Disable		
M8050 (input interrupt) I00□ disable*4	<ul style="list-style-type: none"> If an input interrupt or timer interrupt occurs while a special auxiliary relay for that interrupt (M8050 - M8058) is ON, the interrupt will not operate. For example, turning M8050 ON disables the I00□ interrupt; hence, the interrupt routine is not processed even in an allowable program area. If an input interrupt or timer interrupt occurs while a special auxiliary relay for that interrupt (M8050 - M8058) is OFF, <ul style="list-style-type: none"> a) The interrupt will be accepted. b) The interrupt routine will be processed promptly if it is permitted by the EI (FNC 04) instruction. However, if the DI (FNC 05) instruction disables interrupts, the interrupt program will not be processed until EI (FNC 04) permits the interrupts. 	—
M8051 (input interrupt) I10□ disable*4		—
M8052 (input interrupt) I20□ disable*4		—
M8053 (input interrupt) I30□ disable*4		—
M8054 (input interrupt) I40□ disable*4		—
M8055 (input interrupt) I50□ disable*4		—
M8056 (Timer interrupt) I6□□ disable*4		—
M8057 (Timer interrupt) I7□□ disable*4		—
M8058 (Timer interrupt) I8□□ disable*4		—
M8059 Counter interrupt disable*4	Interrupt of I010 to I060 disabled	—

*4. Cleared when PLC switches from RUN to STOP.

Error Detection		
[M]8060	I/O configuration error	D8060
[M]8061	PLC hardware error	D8061
[M]8062	Not used	—
[M]8063*5*6	Serial communication error 1 [ch1]	D8063
[M]8064	Parameter error	D8064
[M]8065	Syntax error	D8065 D8069 D8314 D8315
[M]8066	Ladder error	D8066 D8069 D8314 D8315
[M]8067*7	Operation error	D8067 D8069 D8314 D8315
M 8068	Operation error latch	D8068 D8312 D8313
M 8069*8	I/O bus check	—

*5. Not cleared PLC.

*6. Serial communication error 2 [ch2] PLC is detected by M8438.

*7. Cleared when PLC switches from STOP to RUN.

*8. When M8069 is ON, I/O bus check is executed.

Number and name	Operation and function	Corresponding special device
Parallel Link		
M 8070*1	Parallel link Set M8070 when using master station.	—
M 8071*1	Parallel link Set M8071 when using slave station.	—
[M]8072	Parallel link ON when operating	—
[M]8073	Parallel link ON when M8070 or M8071 setting is incorrect	—

*1. Cleared when PLC switches from STOP to RUN.

Sampling Trace		
[M]8074	Not used	—
[M]8075	Ready request for sampling trace	D8075 to D8098
[M]8076	Start request for sampling trace	
[M]8077	ON during sampling trace	
[M]8078	ON when sampling trace is completed	
[M]8079	Sampling trace system area	
[M]8080	Not used	—
[M]8081		—
[M]8082		—
[M]8083		—
[M]8084		—
[M]8085		—
[M]8086		—
[M]8087		—
[M]8088		—
[M]8089		—

Flag		
[M]8090	BKCOMP (FNC194 to FNC199) instructions - Block comparison signal	—
M 8091	COMRD (FNC182) and BINDA (FNC261) instructions - Output character quantity selector signal	—
[M]8092	Not used	—
[M]8093		—
[M]8094		—
[M]8095		—
[M]8096		—
[M]8097		—
[M]8098		—

High Speed Ring Counter		
M 8099*2	High speed ring counter operation (in units of 0.1ms, 16 bits)	D8099
[M]8100	Not used	—

*2. 0.1ms high speed ring counter D8099 will operate after M8099 turns ON.

Number and name	Operation and function	Corresponding special device
Memory Information		
[M]8101	Not used	—
[M]8102		—
[M]8103		—
[M]8104		—
[M]8105	ON when writing to flash memory	—
[M]8106	Not used	—
[M]8107	Device comment registration check	D8107
[M]8108	Not used	—
Output Refresh Error		
[M]8109	Output refresh error	—
[M]8110	Not used	—
[M]8111		—
M 8112		—
M 8113		—
M 8114		—
M 8115		—
M 8116		—
M 8117		—
[M]8118		—
[M]8119		—
RS (FNC 80) and Computer Link [ch1]		
[M]8120	Not used	—
[M]8121*3	RS (FNC 80) instruction: Send wait flag	—
M 8122*3	RS (FNC 80) instruction: Send request	D8122
M 8123*3	RS (FNC 80) instruction: Receive complete flag	D8123
[M]8124	RS (FNC 80) instruction: Carrier detection flag	—
[M]8125	Not used	—
[M]8126	Computer link [ch1]: Global ON	D8127 D8128 D8129
[M]8127	Computer link [ch1]: On-demand send processing	
M 8128	Computer link [ch1]: On-demand error flag	
M 8129	Computer link [ch1]: On-demand Word/Byte changeover RS (FNC 80) instruction: Time-out check flag	

*3. Cleared when PLC switches from RUN to STOP or RS instruction is OFF.

Number and name	Operation and function	Corresponding special device
High Speed Counter Comparison, High Speed Table, and Positioning		
M 8130	HSZ (FNC 55) instruction: Table comparison mode	D8130
[M]8131	HSZ (FNC 55) instruction: Table comparison mode completion flag	
M 8132	HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern mode	D8131 to D8134
[M]8133	HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern mode completion flag	
[M]8134	Not used	—
[M]8135		—
[M]8136		—
[M]8137		—
[M]8138	HSCT (FNC280) instruction: Instruction execution complete flag	D8138
[M]8139	HSCS(FNC 53), HSCR(FNC 54), HS2(FNC 55), HSCT(FNC280) instructions: High speed counter comparison instruction executing	D8139
M 8140	ZRN (FNC156) instruction: CLR signal output function enable	—
[M]8141	Not used	—
[M]8142		—
[M]8143		—
[M]8144		—
M 8145	[Y000] Pulse output stop command	—
M 8146	[Y001] Pulse output stop command	—
[M]8147	[Y000] Pulse output monitor (BUSY/READY)	—
[M]8148	[Y001] Pulse output monitor (BUSY/READY)	—
[M]8149	Not used	—
Inverter Communication Function		
[M]8150	Not used	—
[M]8151*1	Inverter communication in execution [ch1]	D8151
[M]8152*1	Inverter communication error [ch1]	D8152
[M]8153*1	Inverter communication error latch [ch1]	D8153
[M]8154*1	IVBWR (FNC274) instruction error [ch1]	D8154
[M]8155	Not used	—
[M]8156*1	Inverter communication in execution [ch2]	D8156
[M]8157*1	Inverter communication error [ch2]	D8157
[M]8158*1	Inverter communication error latch [ch2]	D8158
[M]8159*1	IVBWR (FNC274) instruction error [ch2]	D8159

*1. Cleared when PLC switches from STOP to RUN.

Number and name	Operation and function	Corresponding special device
Advanced Function		
M 8160*2	SWAP function of XCH (FNC 17)	—
M 8161*2*3	8-bit process mode	—
M 8162	High speed parallel link mode	—
[M]8163	Not used	—
M 8164		—
M 8165*2	SORT2 (FNC149) instruction: Sorting in descending order	—
[M]8166	Not used	—
M 8167*2	HKY (FNC 71) instruction: HEX data handling function	—
M 8168*	SMOV (FNC 13) instruction: HEX data handling function	—
[M]8169	Not used	—

*2. Cleared when PLC switches from RUN to STOP.

*3. Applicable to ASC (FNC 76), RS (FNC 80), ASCI (FNC 82), HEX (FNC 83), CCD (FNC 84), and CRC (FNC188) instructions.

Pulse Catch		
M 8170*4	Input X000 pulse catch	—
M 8171*4	Input X001 pulse catch	—
M 8172*4	Input X002 pulse catch	—
M 8173*4	Input X003 pulse catch	—
M 8174*4	Input X004 pulse catch	—
M 8175*4	Input X005 pulse catch	—
M 8176*4	Input X006 pulse catch	—
M 8177*4	Input X007 pulse catch	—

*4. Cleared when PLC switches from STOP to RUN.
EI (FNC 04) instruction is necessary.

Communication Port Channel Setting		
M 8178	Parallel link channel switch (OFF: ch1/ON: ch2)	—
M 8179	N:N network channel switch*5	—

*5. The channel is specified by either creating or not creating M8179 in setting program.

•ch1: not creating M8179 in setting program

•ch2: creating M8179 in setting program

Number and name	Operation and function	Corresponding special device
N:N Network		
[M]8180	Not used	—
[M]8181		—
[M]8182		—
[M]8183	Data communication error (Master station)	D8201 to D8218
[M]8184	Data communication error (Slave station No.1)	
[M]8185	Data communication error (Slave station No.2)	
[M]8186	Data communication error (Slave station No.3)	
[M]8187	Data communication error (Slave station No.4)	
[M]8188	Data communication error (Slave station No.5)	
[M]8189	Data communication error (Slave station No.6)	
[M]8190	Data communication error (Slave station No.7)	
[M]8191	Data communication in execution	
[M]8192	Not used	—
[M]8193		—
[M]8194		—
[M]8195		—
[M]8196		—
[M]8197		—
High Speed Counter Edge Count Specification		
M 8198*1*2	C251, C252, C254: 1/4 edge count selector	—
M 8199*1*2	C253, C255, or C253 (OP): 1/4 edge count selector	—

*1. OFF: 1 edge count
ON: 4 edge count

*2. Cleared when PLC switches from RUN to STOP.

Number and name		Operation and function		Corresponding special device
Counter	Up/down	Counter	Counting Direction	
M 8200		C200	When M8□□□ is ON, the corresponding C□□□ is changed to down mode. • ON: Down count operation • OFF: Up count operation	—
M 8201		C201		—
M 8202		C202		—
M 8203		C203		—
M 8204		C204		—
M 8205		C205		—
M 8206		C206		—
M 8207		C207		—
M 8208		C208		—
M 8209		C209		—
M 8210		C210		—
M 8211		C211		—
M 8212		C212		—
M 8213		C213		—
M 8214		C214		—
M 8215		C215		—
M 8216		C216		—
M 8217		C217		—
M 8218		C218		—
M 8219		C219		—
M 8220		C220		—
M 8221		C221		—
M 8222		C222		—
M 8223		C223		—
M 8224		C224		—
M 8225		C225		—
M 8226		C226		—
M 8227		C227		—
M 8228		C228		—
M 8229		C229		—
M 8230		C230		—
M 8231		C231		—
M 8232		C232		—
M 8233		C233		—
M 8234		C234	—	
High Speed Counter		Up/down	Counter Counting Direction	
M 8235		C235	When M8□□□ is ON, the corresponding C□□□ is changed to down mode. • ON: Down count operation • OFF: Up count operation	—
M 8236		C236		—
M 8237		C237		—
M 8238		C238		—
M 8239		C239		—
M 8240		C240		—
M 8241		C241		—
M 8242		C242		—
M 8243		C243		—
M 8244		C244		—
M 8245		C245		—

Number and name	Operation and function	Corresponding special device
High Speed Counter Up/down Counter Monitoring		
[M]8246	C246	—
[M]8247	C247	—
[M]8248	C248	When C□□□ of 1-phase 2-input or 2-phase 2-input counter is in down mode, the corresponding M8□□□ turns ON. • ON: Down count operation • OFF: Up count operation
[M]8249	C249	
[M]8250	C250	
[M]8251	C251	
[M]8252	C252	
[M]8253	C253	
[M]8254	C254	
[M]8255	C255	
[M]8256 to [M]8259	Not used	—
Analog Special Adapter		
M 8260 to M 8269 ^{*1}	1st special adapter	—
M 8270 to M 8279 ^{*1}	2nd special adapter	—
M 8280 to M 8289 ^{*1}	3rd special adapter	—
M 8290 to M 8299 ^{*1}	4th special adapter	—
[M]8300 to [M]8315	Not used	—

*1. The unit number of the analog special adapter is counted from the main units side.

Unconnected I/O Designation Error and flag		
[M]8316 ^{*2}	Unconnected I/O designation error	D8316 D8317
[M]8317	Not used	—
[M]8318	BFM initialization failure ON when a FROM/TO error has occurred in a special function block/unit as specified in the BFM initialization function at changing PLC from STOP to RUN. When M8318 turns ON, the unit number in which the error has occurred is stored in D8318, and the BFM number is stored in D8319.	D8318 D8319
[M]8319 to [M]8327	Not used	—
[M]8328	Instruction non-execution	—
[M]8329	Instruction execution abnormal end	—

*2. If the I/O device numbers are unavailable, M8316 turns ON when its directly designated to device numbers including LD, AND, OR, and OUT instructions or indirectly designated by index.

Number and name	Operation and function	Corresponding special device
Timing Clock and Positioning		
[M]8330	DUTY (FNC186) instruction: Timing clock output 1	D8330
[M]8331	DUTY (FNC186) instruction: Timing clock output 2	D8331
[M]8332	DUTY (FNC186) instruction: Timing clock output 3	D8332
[M]8333	DUTY (FNC186) instruction: Timing clock output 4	D8333
[M]8334	DUTY (FNC186) instruction: Timing clock output 5	D8334
[M]8335	Not used	—
M 8336 ^{*3}	DVIT (FNC151) instruction: Interrupt input specification function enabled	D8336
[M]8337	Not used	—
M 8338	PLSV (FNC157) instruction: Acceleration/deceleration operation	—
[M]8339	Not used	—
[M]8340	[Y000] Pulse output monitor (ON: BUSY/ OFF: READY)	—
M 8341 ^{*3}	[Y000] Clear signal output function enable	—
M 8342 ^{*3}	[Y000] Zero return direction specification	—
M 8343	[Y000] Forward limit	—
M 8344	[Y000] Reverse limit	—
M 8345 ^{*3}	[Y000] DOG signal logic reverse	—
M 8346 ^{*3}	[Y000] Zero point signal logic reverse	—
M 8347 ^{*3}	[Y000] Interrupt signal logic reverse	—
[M]8348	[Y000] Positioning instruction activation	—
M 8349 ^{*3}	[Y000] Pulse output stop command	—

*3. Cleared when PLC switches from RUN to STOP.

Number and name	Operation and function	Corresponding special device
Positioning		
[M]8350	[Y001] Pulse output monitor (ON: BUSY/ OFF: READY)	—
M 8351*1	[Y001] Clear signal output function enable	—
M 8352*1	[Y001] Zero return direction specification	—
M 8353	[Y001] Forward limit	—
M 8354	[Y001] Reverse limit	—
M 8355*1	[Y001] DOG signal logic reverse	—
M 8356*1	[Y001] Zero point signal logic reverse	—
M 8357*1	[Y001] Interrupt signal logic reverse	—
[M]8358	[Y001] Positioning instruction activation	—
M 8359*1	[Y001] Pulse output stop command	—
[M]8360	[Y002] Pulse output monitor (ON: BUSY/ OFF: READY)	—
M 8361*1	[Y002] Clear signal output function enable	—
M 8362*1	[Y002] Zero return direction specification	—
M 8363	[Y002] Forward limit	—
M 8364	[Y002] Reverse limit	—
M 8365*1	[Y002] DOG signal logic reverse	—
M 8366*1	[Y002] Zero point signal logic reverse	—
M 8367*1	[Y002] Interrupt signal logic reverse	—
[M]8368	[Y002] Positioning instruction activation	—
M 8369*1	[Y002] Pulse output stop command	—
[M]8370*2	[Y003] Pulse output monitor (ON: BUSY/ OFF: READY)	—
M 8371*1*2	[Y003] Clear signal output function enable	—
M 8372*1*2	[Y003] Zero return direction specification	—
M 8373*2	[Y003] Forward limit	—
M 8374*2	[Y003] Reverse limit	—
M 8375*1*2	[Y003] DOG signal logic reverse	—
M 8376*1*2	[Y003] Zero point signal logic reverse	—
M 8377*1*2	[Y003] Interrupt signal logic reverse	—
[M]8378*2	[Y003] Positioning instruction activation	—
M 8379*1*2	[Y003] Pulse output stop command	—

*1. Cleared when PLC switches from RUN to STOP.

*2. Available only when two FX3U-2HSY-ADP units are connected to an FX3U PLC.

Number and name	Operation and function	Corresponding special device
High Speed Counter Function		
[M]8380*3	Operation status of C235, C241, C244, C246, C247, C249, C251, C252, and C254	—
[M]8381*3	Operation status of C236	—
[M]8382*3	Operation status of C237, C242, and C245	—
[M]8383*3	Operation status of C238, C248, C248 (OP), C250, C253, and C255	—
[M]8384*3	Operation status of C239 and C243	—
[M]8385*3	Operation status of C240	—
[M]8386*3	Operation status of C244 (OP)	—
[M]8387*3	Operation status of C245 (OP)	—
[M]8388	Contact for high speed counter function change	—
M 8389	External reset input logic reverse	—
M 8390	Function changeover device for C244	—
M 8391	Function changeover device for C245	—
M 8392	Function changeover device for C248 and C253	—

*3. Cleared when PLC switches from STOP to RUN.

Interrupt Program		
[M]8393	Contact for delay time setting	D8393
[M]8394	HCMOV (FNC189): Drive contact for interrupt program	—
[M]8395	Not used	—
[M]8396		—
[M]8397		—

Ring Counter		
M 8398	Ring counter operation (in units of 1ms, 32 bits)*4	D8398, D8399
[M]8399	Not used	—

*4. 1ms ring counter (D8399, D8398) will operate after M8398 turns ON.

RS2 (FNC 87) [ch1]		
[M]8400	Not used	—
[M]8401*5	RS2 (FNC 87) [ch1] Send wait flag	—
M 8402*5	RS2 (FNC 87) [ch1] Send request	D8402
M 8403*5	RS2 (FNC 87) [ch1] Receive complete flag	D8403
[M]8404	RS2 (FNC 87) [ch1] Carrier detection flag	—
[M]8405	Not used	—
[M]8406		—
[M]8407		—
[M]8408		—
M 8409	RS2 (FNC 87) [ch1] Time-out check flag	—

*5. Cleared when PLC switches from RUN to STOP or when RS2 instruction [ch1] is OFF.

Number and name	Operation and function	Corresponding special device
RS2 (FNC 87) [ch2] and Computer Link [ch2]		
[M]8410 to [M]8420	Not used	—
[M]8421*1	RS2 (FNC 87) [ch2] Send wait flag	—
M 8422*1	RS2 (FNC 87) [ch2] Send request	D8422
M 8423*1	RS2 (FNC 87) [ch2] Receive complete flag	D8423
[M]8424	RS2 (FNC 87) [ch2] Carrier detection flag	—
[M]8425	Not used	—
[M]8426	Computer link [ch2] Global ON	D8427 D8428 D8429
[M]8427	Computer link [ch2] On-demand send processing	
M 8428	Computer link [ch2] On-demand error flag	
M 8429	Computer link [ch2] On-demand Word/Byte changeover RS2 (FNC 87) [ch2] Time-out check flag	

*1. Cleared when PLC switches from RUN to STOP or when RS2 instruction [ch2] is OFF.

Error Detection		
[M]8430 to [M]8437	Not used	—
M 8438	Serial communication error 2 [ch2]	D8438
[M]8439 to [M]8448	Not used	—
[M]8449	Special block error flag	D8449
[M]8450 to [M]8459	Not used	—
Positioning		
M 8460	DVIT (FNC151) instruction [Y000] User interrupt input command	D8336
M 8461	DVIT (FNC151) instruction [Y001] User interrupt input command	D8336
M 8462	DVIT (FNC151) instruction [Y002] User interrupt input command	D8336
M 8463*2	DVIT (FNC151) instruction [Y003] User interrupt input command	D8336
M 8464	DSZR (FNC150), ZRN (FNC156) instructions [Y000] Clear signal device specification function enabled	D8464
M 8465	DSZR (FNC150), ZRN (FNC156) instructions [Y001] Clear signal device specification function enabled	D8465
M 8466	DSZR (FNC150), ZRN (FNC156) instructions [Y002] Clear signal device specification function enabled	D8466
M 8467*2	DSZR (FNC150), ZRN (FNC156) instructions [Y003] Clear signal device specification function enabled	D8467
[M]8468 to [M]8511	Not used	—

*2. Available only when two FX3U-2HSY-ADP adapters are connected to a PLC.

Appendix A-2 Special Data Register (D8000 to D8511)

Number and name	Content of register	Corresponding special device
PLC Status		
D 8000 Watchdog timer	Default value is shown on the right (in 1ms steps) (Writes from system ROM at power ON) Value overwritten by program is valid after END or WDT instruction execution.	—
[D]8001 PLC type and system version	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">2</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">4</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">2</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">2</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">0</div> <div style="margin-left: 5px;">BCD converted value</div> </div> <div style="margin-left: 20px;"> ↑ Version 2.20 FX3U, FX3UC, FX2N, FX2NC Series </div>	D8101
[D]8002 Memory capacity	<ul style="list-style-type: none"> • 2...2K steps • 4...4K steps • 8...8K steps • If 16K steps or more "K8" is written to D8002 and "16" or "64" is written to D8102. 	D8102
[D]8003 Memory type	Type of cassette or ON/OFF status of memory protect switch is stored.*1	—
[D]8004 Error number M	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">8</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">0</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">6</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">0</div> <div style="margin-left: 5px;">BCD converted value</div> </div> <div style="margin-left: 20px;"> ↑ 8060 to 8068 (when M8004 is ON) </div>	M8004
[D]8005 Battery voltage	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">3</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">0</div> <div style="margin-left: 5px;">BCD converted value (in units of 0.1V)</div> </div> Battery voltage present value (Example: 3.0V)	M8005
[D]8006 Low battery voltage detection level	Default: (Writes from system ROM at power ON)	M8006
[D]8007 Momentary power failure count	Operation frequency of M8007 is stored. Cleared at power-off.	M8007
D 8008 Power failure detection	Default: 10 ms (AC power supply type)	M8008
[D]8009 24V DC failed device	Minimum input device number of extension units and extension power units in which 24V DC has failed.	M8009

*1. D8003 becomes the undermentioned content.

Present value	Type of memory	Protect switch
02H	Flash memory cassette	OFF
0AH	Flash memory cassette	ON
10H	Built-in memory in PLC	—

Number and name	Content of register	Corresponding special device
Clock		
[D]8010 Present scan time *2	Accumulated instruction-execution time from 0 step (in units of 0.1 ms)	—
[D]8011 Minimum scan time*2	Minimum value of scan time (in units of 0.1 ms)	—
[D]8012 Maximum scan time*2	Maximum value of scan time (in units of 0.1 ms)	—
D 8013 Second data	0 to 59 seconds (for real time clock)	—
D 8014 Minute data	0 to 59 minutes (for real time clock)	—
D 8015 Hour data	0 to 23 hours (for real time clock)	—
D 8016 Day data	1 to 31 days (for real time clock)	—
D 8017 Month data	1 to 12 months (for real time clock)	—
D 8018 Year data	2 digits of year data (0 to 99) (for real time clock)	—
D 8019 Day-of-the-week data	0 (Sunday) to 6 (Saturday) (for real time clock)	—

*2. Indicated value includes waiting time of constant scan operation (when M8039 is activated).

Input Filter		
D 8020 Input filter adjustment	Input filter value of X000 to X017*3 (Default: 10 ms)	—
[D]8021	Not used	—
[D]8022		—
[D]8023		—
[D]8024		—
[D]8025		—
[D]8026		—
[D]8027		—
Index Register Z0 and V0		
[D]8028	Value of Z0 (Z) register*4	—
[D]8029	Value of V0 (V) register*4	—

*3. X000 to X007 in FX3U-16M□.

*4. The values of Z1 to Z7 and V1 to V7 are stored in D8182 to D8195.

Number and name	Content of register	Corresponding special device
Constant Scan		
[D]8030	Not used	—
[D]8031		—
[D]8032		—
[D]8033		—
[D]8034		—
[D]8035		—
[D]8036		—
[D]8037		—
[D]8038		—
D 8039 Constant scan duration	Default: 0 ms (in 1 ms steps) (Writes from system ROM at power ON) Can be overwritten by program	M8039
Stepladder and Annunciator		
[D]8040* ¹ ON state number 1	The smallest number out of active state ranging from S0 to S899 and S1000 to S4095 is stored in D8040 and the second-smallest state number is stored in D8041. Active state numbers are then sequentially stored in registers up to D8047 (Max. 8 points).	M8047
[D]8041* ¹ ON state number 2		
[D]8042* ¹ ON state number 3		
[D]8043* ¹ ON state number 4		
[D]8044* ¹ ON state number 5		
[D]8045* ¹ ON state number 6		
[D]8046* ¹ ON state number 7		
[D]8047* ¹ ON state number 8		
[D]8048	Not used	—
[D]8049* ¹ On state minimum number	When M8049 is ON, the smallest number out of active annunciator relay ranging from S900 to S999 is stored in D8049.	M8049
[D]8050 to [D]8059	Not used	—

*1. Executed at END instruction.

Number and name	Content of register	Corresponding special device
Error Detection		
[D]8060	<p>If the unit or block corresponding to a programmed I/O number is not actually loaded, M8060 is set to ON and the first device number of the erroneous block is written to D8060.</p> <p>Example: If X020 is unconnected.</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;"> 1 0 2 0 </div> <div> BCD converted value Device number 10 to 337 1: Input X 0: Output Y </div> </div>	M8060
[D]8061	Error code for PLC hardware error	M8061
[D]8062	Error code for PLC/PP communication error	M8062
[D]8063	Error code for serial communication error 1 [ch1]	M8063
[D]8064	Error code for parameter error	M8064
[D]8065	Error code for syntax error	M8065
[D]8066	Error code for ladder error	M8066
[D]8067* ²	Error code for operation error	M8067
D 8068* ²	Operation error step number latched* ³	M8068
[D]8069* ²	Error step number of M8065 to M8067* ⁴	M8065 to M8067

*2. Cleared when PLC switches from STOP to RUN.

*3. In case of 32K steps or more, step number is stored in [D8313, D8312].

*4. In case of 32K steps or more, step number is stored in [D8315, D8314].

Parallel Link (Refer to Data Communication Edition for details.)		
[D]8070	Parallel link error time-out check time: 500 ms	—
[D]8071	Not used	—
[D]8072		—
[D]8073		—

Number and name	Content of register	Corresponding special device
Sampling Trace*1		
[D]8074	These devices are occupied by the PLC system when the sampling trace function is used in the A6GPP, A6PHP, A7PHP, or personal computer*1.	M8075 to M8079
[D]8075		
[D]8076		
[D]8077		
[D]8078		
[D]8079		
[D]8080		
[D]8081		
[D]8082		
[D]8083		
[D]8084		
[D]8085		
[D]8086		
[D]8087		
[D]8088		
[D]8089		
[D]8090		
[D]8091		
[D]8092		
[D]8093		
[D]8094		
[D]8095		
[D]8096		
[D]8097		
[D]8098		

*1. The sampling trace devices are used by peripheral equipment.

High Speed Ring Counter		
D 8099	Up-operation high speed ring counter of 0 to 32,767 (in units of 0.1ms, 16-bit)*2	M8099
[D]8100	Not used	—

*2. 0.1ms high speed ring counter D8099 will operate after M8099 turns ON.

Memory Information		
[D]8101 PLC type and system version	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">1</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">6</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">2</div> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">2</div> <div style="border: 1px solid black; padding: 2px;">0</div> <div style="margin-left: 10px;">BCD converted value</div> </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="text-align: center;">↑ FX3U/ FX3UC</div> <div style="text-align: center;">↑ Version 2.20</div> </div>	—
[D]8102	2 2K steps 4 4K steps 8 8K steps 16 16K steps 64 64K steps	—
[D]8103	Not used	—
[D]8104		—
[D]8105		—
[D]8106		—
[D]8107	Number of registered device comments	M8107
[D]8108	Number of special function units/blocks connected	—

Output Refresh Error		
[D]8109	Y number where output refresh error occurs	M8109
[D]8110 to [D]8119	Not used	—
RS (FNC 80) and Computer Link [ch1]		
D 8120*3	RS (FNC 80) instruction and computer link [ch1] Communication format setting	—
D 8121*3	Computer link [ch1] Station number setting	—
[D]8122*4	RS (FNC 80) instruction: Remaining points of transmit data	M8122
[D]8123*4	RS (FNC 80) instruction: Monitoring receive data points	M8123
D 8124	RS (FNC 80) instruction: Header <Default: STX>	—
D 8125	RS (FNC 80) instruction: Terminator <Default: ETX>	—
[D]8126	Not used	—
D 8127	Computer link [ch1] Specification of on-demand head device register	M8126 to M8129
D 8128	Computer link [ch1] Specification of on-demand data length register	
D 8129*3	RS (FNC 80) instruction, computer link [ch1] Time-out time setting	

*3. Latch (battery backed) device

*4. Cleared when PLC switches from RUN to STOP.

Number and name	Content of register	Corresponding special device
High Speed Counter Comparison, High Speed Table, and Positioning		
[D]8130	HSZ (FNC 55) instruction: High speed comparison table counter	M8130
[D]8131	HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern table counter	M8132
[D]8132	Lower HSZ (FNC 55) and PLSY (FNC 57) instructions: Speed pattern frequency	M8132
[D]8133	Upper	
[D]8134	Lower HSZ (FNC 55) and PLSY (FNC 57) instructions: Number of target pulses for speed pattern	M8132
[D]8135	Upper	
D 8136	Lower PLSY (FNC 57), PLSR (FNC 59) instructions: Accumulated total number of pulses output to Y000 and Y001	—
D 8137	Upper	
[D]8138	HSCT (FNC280) instruction: Table count	D8138
[D]8139	HSCS (FNC 53), HSCR (FNC 54), HSZ (FNC 55), and HSCT (FNC280) instructions: Number of instructions being executed	D8139
D 8140	Lower Accumulated number of pulses output to Y000 for PLSY (FNC 57) and PLSR (FNC 59) instructions, or current address of Y000 for positioning instruction	—
D 8141	Upper	
D 8142	Lower Accumulated number of pulses output to Y001 for PLSY (FNC 57) and PLSR (FNC 59) instructions, or current address of Y001 for positioning instruction	—
D 8143	Upper	
[D]8144 to [D]8149	Not used	—
Inverter Communication Function		
D 8150	Response wait time of inverter communication [ch1]	—
[D]8151	Step number of instruction during inverter communication [ch1] Default: -1	M8151
[D]8152 ^{*1}	Error code for inverter communication [ch1]	M8152
[D]8153	Inverter communication error step number latched [ch1] Default: -1	M8153
[D]8154	Parameter number when error occurs during IVBWR (FNC274) instruction [ch1] Default: -1	M8154
D 8155	Response wait time of inverter communication [ch2]	—
[D]8156	Step number of instruction during inverter communication [ch2] Default: -1	M8156

Number and name	Content of register	Corresponding special device
[D]8157 ^{*1}	Error code for inverter communication [ch2]	M8157
[D]8158	Inverter communication error step number latched [ch2] Default: -1	M8158
[D]8159	Parameter number when error occurs during IVBWR (FNC274) instruction [ch2] Default: -1	M8159

^{*1}. Cleared when PLC switches from STOP to RUN.

Advanced Function		
[D]8160	Not used	—
[D]8161		—
[D]8162		—
[D]8163		—
D 8164		—
[D]8165		—
[D]8166		—
[D]8167		—
[D]8168		—
[D]8169	Access restriction status by 2nd keyword ^{*2}	—

^{*2}. Access restriction status by 2nd keyword

Present value	Access restriction status	Program		Monitoring	Present value change
		Read	Write		
H0000	2nd keyword is not set.	✓ ^{*3}	✓ ^{*3}	✓ ^{*3}	✓ ^{*3}
H0010	Write protection	✓	—	✓	✓
H0011	Read / write protection	—	—	✓	✓
H0012	All online operation protection	—	—	—	—
H0020	Keyword cancel	✓	✓	✓	✓

^{*3}. The accessibility is restricted depending on the keyword setting status.

Number and name	Content of register	Corresponding special device
N:N Network (setting)		
[D]8170	Not used	—
[D]8171		—
[D]8172		—
[D]8173	Station number	—
[D]8174	Total number of slave stations	—
[D]8175	Refresh range	—
D 8176	Station number setting	M8038
D 8177	Total slave station number setting	
D 8178	Refresh range setting	
D 8179	Retry count setting	
D 8180	Comms time-out setting	
[D]8181	Not used	—
Index Register Z1 to Z7 and V1 to V7		
[D]8182	Value of Z1 register	—
[D]8183	Value of V1 register	—
[D]8184	Value of Z2 register	—
[D]8185	Value of V2 register	—
[D]8186	Value of Z3 register	—
[D]8187	Value of V3 register	—
[D]8188	Value of Z4 register	—
[D]8189	Value of V4 register	—
[D]8190	Value of Z5 register	—
[D]8191	Value of V5 register	—
[D]8192	Value of Z6 register	—
[D]8193	Value of V6 register	—
[D]8194	Value of Z7 register	—
[D]8195	Value of V7 register	—
[D]8196	Not used	—
[D]8197		—
[D]8198		—
[D]8199		—

Number and name	Content of register	Corresponding special device
N:N Network (monitoring)		
[D]8200	Not used	—
[D]8201	Current link scan time	—
[D]8202	Maximum link scan time	—
[D]8203	Number of communication error at master station	M8183 to M8191
[D]8204	Number of communication error at slave station No.1	
[D]8205	Number of communication error at slave station No.2	
[D]8206	Number of communication error at slave station No.3	
[D]8207	Number of communication error at slave station No.4	
[D]8208	Number of communication error at slave station No.5	
[D]8209	Number of communication error at slave station No.6	
[D]8210	Number of communication error at slave station No.7	
[D]8211	Code of communication error at master station	
[D]8212	Code of communication error at slave station No.1	
[D]8213	Code of communication error at slave station No.2	
[D]8214	Code of communication error at slave station No.3	
[D]8215	Code of communication error at slave station No.4	
[D]8216	Code of communication error at slave station No.5	
[D]8217	Code of communication error at slave station No.6	
[D]8218	Code of communication error at slave station No.7	
[D]8219 to [D]8259	Not used	—
Analog Special Adapter		
D 8260 to D 8269	1st special adapter*1	
D 8270 to D 8279	2nd special adapter*1	
D 8280 to D 8289	3rd special adapter*1	
D 8290 to D 8299	4th special adapter*1	

*1. The unit number of the analog special adapter is counted from the main units side.

Number and name	Content of register	Corresponding special device
Display Module Function FX3U-7DM		
D 8300	Control device (D) for display module • Default: K-1	—
D 8301	Control device (M) for display module • Default: K-1	—
[D]8302*1	Language display setting • Japanese: K0 • English: Other than K0	—
[D]8303	LCD contrast setting value • Default: K0	—
[D]8304 to [D]8309	Not used	—
[D]8305		—
[D]8306		—
[D]8307		—
[D]8308		—
[D]8309		—

*1. Latch (battery backed) device

RND (FNC184)			
[D]8310	Lower	RND (FNC184) instruction: Data for generating random number • Default: K1	—
[D]8311	Upper		
Syntax, Circuit, Operation, or Unconnected I/O Designation Error Step Number			
D 8312	Lower	Operation error step number latched (32-bit)	M8068
D 8313	Upper		
[D]8314 ^{*2}	Lower	Error step number of M8065 to M8067 (32-bit)	M8065 to M8067
[D]8315 ^{*2}	Upper		
[D]8316	Lower	Step number of instruction specifying an unconnected I/O number (directly or indirectly using index register)	M8316
[D]8317	Upper		
[D]8318	BFM initialization function: Error unit number		M8318
[D]8319	BFM initialization function: Error BFM number		M8318
[D]8320 to [D]8328	Not used		—

*2. Cleared when PLC switches from STOP to RUN.

Timing Clock and Positioning			
[D]8329	Not used		—
[D]8330	DUTY (FNC186) instruction: Scan counting for timing clock output 1		M8330
[D]8331	DUTY (FNC186) instruction: Scan counting for timing clock output 2		M8331
[D]8332	DUTY (FNC186) instruction: Scan counting for timing clock output 3		M8332
[D]8333	DUTY (FNC186) instruction: Scan counting for timing clock output 4		M8333
[D]8334	DUTY (FNC186) instruction: Scan counting for timing clock output 5		M8334
D 8336	DVIT (FNC151) instruction: Specification of interrupt input		M8336
[D]8337 to [D]8339	Not used		—
D 8340	Lower	[Y000] Current value register • Default: 0	—
D 8341	Upper		

Number and name	Content of register		Corresponding special device
D 8342	[Y000] Bias speed Default: 0		—
D 8343	Lower	[Y000] Maximum speed • Default: 100000	—
D 8344	Upper		
D 8345	[Y000] Creep speed • Default: 1000		—
D 8346	Lower	[Y000] Zero return speed Default: 50000	—
D 8347	Upper		
D 8348	[Y000] Acceleration time • Default: 100		—
D 8349	[Y000] Deceleration time • Default: 100		—
D 8350	Lower	[Y001] Current value register • Default: 0	—
D 8351	Upper		
D 8352	[Y001] Bias speed Default: 0		—
D 8353	Lower	[Y001] Maximum speed • Default: 100000	—
D 8354	Upper		
D 8355	[Y001] Creep speed • Default: 1000		—
D 8356	Lower	[Y001] Zero return speed • Default: 50000	—
D 8357	Upper		
D 8358	[Y001] Acceleration time • Default: 100		—
D 8359	[Y001] Deceleration time • Default: 100		—
D 8360	Lower	[Y002] Current value register • Default: 0	—
D 8361	Upper		
D 8362	[Y002] Bias speed Default: 0		—
D 8363	Lower	[Y002] Maximum speed • Default: 100000	—
D 8364	Upper		
D 8365	[Y002] Creep speed • Default: 1000		—
D 8366	Lower	[Y002] Zero return speed • Default: 50000	—
D 8367	Upper		
D 8368	[Y002] Acceleration time • Default: 100		—
D 8369	[Y002] Deceleration time • Default: 100		—
D 8370* ³	Lower	[Y003] Current value register • Default: 0	—
D 8371* ³	Upper		—
D 8372* ³	[Y003] Bias speed Default: 0		—
D 8373* ³	Lower	[Y003] Maximum speed • Default: 100000	—
D 8374* ³	Upper		—
D 8375* ³	[Y003] Creep speed Default: 1000		—
D 8376* ³	Lower	[Y003] Zero return speed • Default: 50000	—
D 8377* ³	Upper		—
D 8378* ³	[Y003] Acceleration time • Default: 100		—
D 8379* ³	[Y003] Deceleration time • Default: 100		—
[D]8380 to [D]8392	Not used		—

*3. Available only when two FX3U-2HSY-ADP adapters are connected to an PLC.

Number and name	Content of register		Corresponding special device
Interrupt Program			
D 8393	Delay time		M8393
[D]8394	Not used		—
[D]8395			—
[D]8396			—
[D]8397			—
Ring Counter			
D 8398	Lower	Up-operation ring counter of 0 to 2,147,483,647 (in units of 1ms, 32-bit)*1	M8398
D 8399	Upper		

*1. 1ms ring counter (D8399, D8398) will operate after M8398 turns ON.

RS2 (FNC 87) [ch1]			
D 8400	RS2 (FNC 87) [ch1] Communication format setting		—
[D]8401	Not used		—
[D]8402*2	RS2 (FNC 87) [ch1] Remaining points of transmit data		M8402
[D]8403*2	RS2 (FNC 87) [ch1] Monitoring receive data points		M8403
[D]8404	Not used		—
[D]8405	Communication parameter display [ch1]		—
[D]8406	Not used		—
[D]8407			—
[D]8408			—
D 8409	RS2 (FNC 87) [ch1] Time-out time setting		—
D 8410	RS2 (FNC 87) [ch1] Header 1 and 2 <Default: STX>		—
D 8411	RS2 (FNC 87) [ch1] Header 3 and 4		—
D 8412	RS2 (FNC 87) [ch1] Terminator 1 and 2 <Default: ETX>		—
D 8413	RS2 (FNC 87) [ch1] Terminator 3 and 4		—
[D]8414	RS2 (FNC 87) [ch1] Receive sum (received data)		—
[D]8415	RS2 (FNC 87) [ch1] Receive sum (calculated result)		—
[D]8416	RS2 (FNC 87) [ch1] Send sum		—
[D]8417	Not used		—
[D]8418			—
[D]8419	Operation mode display [ch1]		—

*2. Cleared when PLC switches from RUN to STOP.

RS2 (FNC 87) [ch2] and Computer Link [ch2]			
D 8420	RS2 (FNC 87) [ch2] Communication format setting		—
D 8421	Computer link [ch2] Station number setting		—
[D]8422*3	RS2 (FNC 87) [ch2] Remaining points of transmit data		M8422
[D]8423*3	RS2 (FNC 87) [ch2] Monitoring receive data points		M8423

Number and name	Content of register	Corresponding special device
[D]8424	Not used	—
[D]8425	Communication parameter display [ch2]	—
[D]8426	Not used	—
D 8427	Computer link [ch2] Specification of on-demand head device register	M8426 to M8429
D 8428	Computer link [ch2] Specification of on-demand data length register	
D 8429	RS2 (FNC 87) [ch2], computer link [ch2] Time-out time setting	
D 8430	RS2 (FNC 87) [ch2] Header 1 and 2 <Default: STX>	—
D 8431	RS2 (FNC 87) [ch2] Header 3 and 4	—
D 8432	RS2 (FNC 87) [ch2] Terminator 1 and 2 <Default: ETX>	—
D 8433	RS2 (FNC 87) [ch2] Terminator 3 and 4	—
[D]8434	RS2 (FNC 87) [ch2] Receive sum (received data)	—
[D]8435	RS2 (FNC 87) [ch2] Receive sum (calculated result)	—
[D]8436	RS2 (FNC 87) [ch2] Send sum	—
[D]8437	Not used	—

*3. Cleared when PLC switches from RUN to STOP.

Error Detection		
[D]8438	Error code for serial communication error 2 [ch2]	M8438
RS2 (FNC 87) [ch2] and Computer Link [ch2]		
[D]8439	Operation mode display [ch2]	—
Error Detection		
[D]8440 to [D]8448	Not used	—
[D]8449	Special block error code	M8449
[D]8450 to [D]8459	Not used	—
Positioning [FX3U and FX3UC PLCs]		
[D]8460 to [D]8463	Not used	—
D 8464	DSZR (FNC150) and ZRN (FNC156) instructions: [Y000] Clear signal device specification	M8464
D 8465	DSZR (FNC150) and ZRN (FNC156) instructions: [Y001] Clear signal device specification	M8465
D 8466	DSZR (FNC150) and ZRN (FNC156) instructions: [Y002] Clear signal device specification	M8466
D 8467*4	DSZR (FNC150) and ZRN (FNC156) instructions: [Y003] Clear signal device specification	M8467
[D]8468 to [D]8511	Not used	—

*4. Available only when two FX3U-2HSY-ADP adapters are connected to an PLC.

Appendix A-3 Analog special adapters [M8260 to M8299 and D8260 to D8299]

When analog special adapters are connected, operations and functions are assigned to the devices shown in the tables below in accordance with the number of connected analog special adapters.
Devices which cannot be written are shaded in "Operation and function" column.

→ For the details, refer to the manual of each product.

Appendix A-3-1 Special auxiliary relays (M8260 to M8299)

Number	Operation and function			
	FX3U-4AD-ADP	FX3U-4DA-ADP	FX3U-4AD-PT-ADP	FX3U-4AD-TC-ADP
1st analog special adapter				
M 8260	Input mode switching Ch1	Output mode switching Ch1	Temperature unit selection	Temperature unit selection
M 8261	Input mode switching Ch2	Output mode switching Ch2	Not used	Type-K/-J switching
M 8262	Input mode switching Ch3	Output mode switching Ch3	Not used	Not used
M 8263	Input mode switching Ch4	Output mode switching Ch4	Not used	Not used
M 8264	Not used	Output hold mode cancel Ch1	Not used	Not used
M 8265	Not used	Output hold mode cancel Ch2	Not used	Not used
M 8266	Not used	Output hold mode cancel Ch3	Not used	Not used
M 8267	Not used	Output hold mode cancel Ch4	Not used	Not used
M 8268	Not used	Not used	Not used	Not used
M 8269	Not used	Not used	Not used	Not used
2nd analog special adapter				
M 8270	Input mode switching Ch1	Output mode switching Ch1	Temperature unit selection	Temperature unit selection
M 8271	Input mode switching Ch2	Output mode switching Ch2	Not used	Type-K/-J switching
M 8272	Input mode switching Ch3	Output mode switching Ch3	Not used	Not used
M 8273	Input mode switching Ch4	Output mode switching Ch4	Not used	Not used
M 8274	Not used	Output hold mode cancel Ch1	Not used	Not used
M 8275	Not used	Output hold mode cancel Ch2	Not used	Not used
M 8276	Not used	Output hold mode cancel Ch3	Not used	Not used
M 8277	Not used	Output hold mode cancel Ch4	Not used	Not used
M 8278	Not used	Not used	Not used	Not used
M 8279	Not used	Not used	Not used	Not used
3rd analog special adapter				
M 8280	Input mode switching Ch1	Output mode switching Ch1	Temperature unit selection	Temperature unit selection
M 8281	Input mode switching Ch2	Output mode switching Ch2	Not used	Type-K/-J switching
M 8282	Input mode switching Ch3	Output mode switching Ch3	Not used	Not used
M 8283	Input mode switching Ch4	Output mode switching Ch4	Not used	Not used
M 8284	Not used	Output hold mode cancel Ch1	Not used	Not used
M 8285	Not used	Output hold mode cancel Ch2	Not used	Not used
M 8286	Not used	Output hold mode cancel Ch3	Not used	Not used
M 8287	Not used	Output hold mode cancel Ch4	Not used	Not used
M 8288	Not used	Not used	Not used	Not used
M 8289	Not used	Not used	Not used	Not used
4th analog special adapter				
M 8290	Input mode switching Ch1	Output mode switching Ch1	Temperature unit selection	Temperature unit selection
M 8291	Input mode switching Ch2	Output mode switching Ch2	Not used	Type-K/-J switching
M 8292	Input mode switching Ch3	Output mode switching Ch3	Not used	Not used
M 8293	Input mode switching Ch4	Output mode switching Ch4	Not used	Not used
M 8294	Not used	Output hold mode cancel Ch1	Not used	Not used
M 8295	Not used	Output hold mode cancel Ch2	Not used	Not used
M 8296	Not used	Output hold mode cancel Ch3	Not used	Not used
M 8297	Not used	Output hold mode cancel Ch4	Not used	Not used
M 8298	Not used	Not used	Not used	Not used
M 8299	Not used	Not used	Not used	Not used

Appendix A-3-2 Special data registers (D8260 to D8299)

Number	Operation and function			
	FX3U-4AD-ADP	FX3U-4DA-ADP	FX3U-4AD-PT-ADP	FX3U-4AD-TC-ADP
1st analog special adapter				
D 8260	Input data Ch1	Output data Ch1	Measured temperature Ch1	Measured temperature Ch1
D 8261	Input data Ch2	Output data Ch2	Measured temperature Ch2	Measured temperature Ch2
D 8262	Input data Ch3	Output data Ch3	Measured temperature Ch3	Measured temperature Ch3
D 8263	Input data Ch4	Output data Ch4	Measured temperature Ch4	Measured temperature Ch4
D 8264	Number of averaging times for Ch1 (1 to 4095)	Not used	Number of averaging times for Ch1 (1 to 4095)	Number of averaging times for Ch1 (1 to 4095)
D 8265	Number of averaging times for Ch2 (1 to 4095)	Not used	Number of averaging times for Ch2 (1 to 4095)	Number of averaging times for Ch2 (1 to 4095)
D 8266	Number of averaging times for Ch3 (1 to 4095)	Not used	Number of averaging times for Ch3 (1 to 4095)	Number of averaging times for Ch3 (1 to 4095)
D 8267	Number of averaging times for Ch4 (1 to 4095)	Not used	Number of averaging times for Ch4 (1 to 4095)	Number of averaging times for Ch4 (1 to 4095)
D 8268	Error status	Error status	Error status	Error status
D 8269	Model code: K1	Model code: K2	Model code: K20	Model code: K10
2nd analog special adapter				
D 8270	Input data Ch1	Output data Ch1	Measured temperature Ch1	Measured temperature Ch1
D 8271	Input data Ch2	Output data Ch2	Measured temperature Ch2	Measured temperature Ch2
D 8272	Input data Ch3	Output data Ch3	Measured temperature Ch3	Measured temperature Ch3
D 8273	Input data Ch4	Output data Ch4	Measured temperature Ch4	Measured temperature Ch4
D 8274	Number of averaging times for Ch1 (1 to 4095)	Not used	Number of averaging times for Ch1 (1 to 4095)	Number of averaging times for Ch1 (1 to 4095)
D 8275	Number of averaging times for Ch2 (1 to 4095)	Not used	Number of averaging times for Ch2 (1 to 4095)	Number of averaging times for Ch2 (1 to 4095)
D 8276	Number of averaging times for Ch3 (1 to 4095)	Not used	Number of averaging times for Ch3 (1 to 4095)	Number of averaging times for Ch3 (1 to 4095)
D 8277	Number of averaging times for Ch4 (1 to 4095)	Not used	Number of averaging times for Ch4 (1 to 4095)	Number of averaging times for Ch4 (1 to 4095)
D 8278	Error status	Error status	Error status	Error status
D 8279	Model code: K1	Model code: K2	Model code: K20	Model code: K10
3rd analog special adapter				
D 8280	Input data Ch1	Output data Ch1	Measured temperature Ch1	Measured temperature Ch1
D 8281	Input data Ch2	Output data Ch2	Measured temperature Ch2	Measured temperature Ch2
D 8282	Input data Ch3	Output data Ch3	Measured temperature Ch3	Measured temperature Ch3
D 8283	Input data Ch4	Output data Ch4	Measured temperature Ch4	Measured temperature Ch4
D 8284	Number of averaging times for Ch1 (1 to 4095)	Not used	Number of averaging times for Ch1 (1 to 4095)	Number of averaging times for Ch1 (1 to 4095)
D 8285	Number of averaging times for Ch2 (1 to 4095)	Not used	Number of averaging times for Ch2 (1 to 4095)	Number of averaging times for Ch2 (1 to 4095)
D 8286	Number of averaging times for Ch3 (1 to 4095)	Not used	Number of averaging times for Ch3 (1 to 4095)	Number of averaging times for Ch3 (1 to 4095)
D 8287	Number of averaging times for Ch4 (1 to 4095)	Not used	Number of averaging times for Ch4 (1 to 4095)	Number of averaging times for Ch4 (1 to 4095)
D 8288	Error status	Error status	Error status	Error status
D 8289	Model code: K1	Model code: K2	Model code: K20	Model code: K10
4th analog special adapter				
D 8290	Input data Ch1	Output data Ch1	Measured temperature Ch1	Measured temperature Ch1
D 8291	Input data Ch2	Output data Ch2	Measured temperature Ch2	Measured temperature Ch2
D 8292	Input data Ch3	Output data Ch3	Measured temperature Ch3	Measured temperature Ch3
D 8293	Input data Ch4	Output data Ch4	Measured temperature Ch4	Measured temperature Ch4
D 8294	Number of averaging times for Ch1 (1 to 4095)	Not used	Number of averaging times for Ch1 (1 to 4095)	Number of averaging times for Ch1 (1 to 4095)
D 8295	Number of averaging times for Ch2 (1 to 4095)	Not used	Number of averaging times for Ch2 (1 to 4095)	Number of averaging times for Ch2 (1 to 4095)
D 8296	Number of averaging times for Ch3 (1 to 4095)	Not used	Number of averaging times for Ch3 (1 to 4095)	Number of averaging times for Ch3 (1 to 4095)
D 8297	Number of averaging times for Ch4 (1 to 4095)	Not used	Number of averaging times for Ch4 (1 to 4095)	Number of averaging times for Ch4 (1 to 4095)
D 8298	Error status	Error status	Error status	Error status
D 8299	Model code: K1	Model code: K2	Model code: K20	Model code: K10

Appendix B: Instruction List

Appendix B-1 Basic Instructions

Mnemonic	Function
Contact Instruction	
LD	Initial logical operation contact type NO (normally open)
LDI	Initial logical operation contact type NC (normally closed)
LDP	Initial logical operation of Rising edge pulse
LDF	Initial logical operation of Falling/trailing edge pulse
AND	Serial connection of NO (normally open) contacts
ANI	Serial connection of NC (normally closed) contacts
ANDP	Serial connection of Rising edge pulse
ANDF	Serial connection of Falling/trailing edge pulse
OR	Parallel connection of NO (normally open) contacts
ORI	Parallel connection of NC (normally closed) contacts
ORP	Parallel connection of Rising edge pulse
ORF	Parallel connection of Falling/trailing edge pulse
Connection Instruction	
ANB	Serial connection of multiple parallel circuits
ORB	Parallel connection of multiple contact circuits
MPS	Stores the current result of the internal PLC operations
MRD	Reads the current result of the internal PLC operations
MPP	Pops (recalls and removes) the currently stored result
INV	Invert the current result of the internal PLC operations

Mnemonic	Function
Out Instruction	
OUT	Final logical operation type coil drive
SET	SET Bit device latch ON
RST	RESET Bit device OFF
PLS	Rising edge pulse
PLF	Falling/trailing edge pulse
Master Control Instruction	
MC	Denotes the start of a master control block
MCR	Denotes the end of a master control block
Other Instruction	
NOP	No operation or null step
End Instruction	
END	Program END, I/O refresh and Return to Step 0

Appendix B-2 Step Ladder Instructions

Mnemonic	Function
STL	Starts step ladder
RET	Completes step ladder

21

Battery

A

Special Devices
(M8000-D8000-)

B

Instruction List

C

Character-code

Appendix B-3 Applied Instructions ... in Ascending Order of FNC Number

FNC No.	Mnemonic	Function
Program Flow		
00	CJ	Conditional Jump
01	CALL	Call Subroutine
02	SRET	Subroutine Return
03	IRET	Interrupt Return
04	EI	Enable Interrupt
05	DI	Disable Interrupt
06	FEND	Main Routine Program End
07	WDT	Watchdog Timer Refresh
08	FOR	Start a FOR/NEXT Loop
09	NEXT	End a FOR/NEXT Loop
Move and Compare		
10	CMP	Compare
11	ZCP	Zone Compare
12	MOV	Move
13	SMOV	Shift Move
14	CML	Complement
15	BMOV	Block Move
Move and Compare		
16	FMOV	Fill Move
17	XCH	Exchange
18	BCD	Conversion to Binary Coded Decimal
19	BIN	Conversion to Binary
Arithmetic and Logical Operation (+, −, ×, ÷)		
20	ADD	Addition
21	SUB	Subtraction
22	MUL	Multiplication
23	DIV	Division
24	INC	Increment
25	DEC	Decrement
26	WAND	Logical Word AND
27	WOR	Logical Word OR
28	WXOR	Logical Exclusive OR
29	NEG	Negation
Rotation and Shift Operation		
30	ROR	Rotation Right
31	ROL	Rotation Left
32	RCR	Rotation Right with Carry
33	RCL	Rotation Left with Carry
34	SFTR	Bit Shift Right
Rotation and Shift Operation		
35	SFTL	Bit Shift Left
36	WSFR	Word Shift Right
37	WSFL	Word Shift Left
38	SFWR	Shift Write [FIFO/FILO Control]
39	SFRD	Shift Read [FIFO Control]

FNC No.	Mnemonic	Function
Data Operation		
40	ZRST	Zone Reset
41	DECO	Decode
42	ENCO	Encode
43	SUM	Sum of Active Bits
44	BON	Check Specified Bit Status
45	MEAN	Mean
46	ANS	Timed Annunciator Set
47	ANR	Annunciator Reset
48	SQR	Square Root
49	FLT	Conversion to Floating Point
High Speed Processing		
50	REF	Refresh
51	REFF	Refresh and Filter Adjust
52	MTR	Input Matrix
53	HSCS	High Speed Counter Set
54	HSCR	High Speed Counter Reset
55	HSZ	High Speed Counter Zone Compare
56	SPD	Speed Detection
57	PLSY	Pulse Y Output
58	PWM	Pulse Width Modulation
59	PLSR	Acceleration/Deceleration Setup
Handy Instruction		
60	IST	Initial State
61	SER	Search a Data Stack
62	ABSD	Absolute Drum Sequencer
63	INCD	Incremental Drum Sequencer
64	TTMR	Teaching Timer
65	STMR	Special Timer
66	ALT	Alternate State
67	RAMP	Ramp Variable Value
68	ROTC	Rotary Table Control
69	SORT	SORT Tabulated Data
External FX I/O Device		
70	TKY	Ten Key Input
71	HKY	Hexadecimal Input
72	DSW	Digital Switch (Thumbwheel Input)
External FX I/O Device		
73	SEGD	Seven Segment Decoder
74	SEGL	Seven Segment With Latch
75	ARWS	Arrow Switch
76	ASC	ASCII Code Data Input
77	PR	Print (ASCII Code)
78	FROM	Read From A Special Function Block
79	TO	Write To A Special Function Block

FNC No.	Mnemonic	Function
External FX Device		
80	RS	Serial Communication
81	PRUN	Parallel Run (Octal Mode)
82	ASCI	Hexadecimal to ASCII Conversion
83	HEX	ASCII to Hexadecimal Conversion
84	CCD	Check Code
85	VRRD	Volume Read
86	VRSC	Volume Scale
87	RS2	Serial Communication 2
88	PID	PID Control Loop
89 to 99	–	
Data Transfer 2		
100, 101	–	
102	ZPUSH	Batch Store of Index Register
Data Transfer 2		
103	ZPOP	Batch POP of Index Register
104 to 109	–	
Floating Point		
110	ECMP	Floating Point Compare
111	EZCP	Floating Point Zone Compare
112	EMOV	Floating Point Move
113 to 115	–	
116	ESTR	Floating Point to Character String Conversion
117	EVAL	Character String to Floating Point Conversion
118	EBCD	Floating Point to Scientific Notation Conversion
119	EBIN	Scientific Notation to Floating Point Conversion
120	EADD	Floating Point Addition
121	ESUB	Floating Point Subtraction
122	EMUL	Floating Point Multiplication
123	EDIV	Floating Point Division
124	EXP	Floating Point Exponent
125	LOGE	Floating Point Natural Logarithm
126	LOG10	Floating Point Common Logarithm
127	ESQR	Floating Point Square Root
128	ENEG	Floating Point Negation
129	INT	Floating Point to Integer Conversion
Floating Point		
130	SIN	Floating Point Sine
131	COS	Floating Point Cosine
132	TAN	Floating Point Tangent
133	ASIN	Floating Point Arc Sine
134	ACOS	Floating Point Arc Cosine
135	ATAN	Floating Point Arc Tangent

FNC No.	Mnemonic	Function
136	RAD	Floating Point Degree to Radian Conversion
137	DEG	Floating Point Radian to Degree Conversion
138, 139	–	
Data Operation 2		
140	WSUM	Sum of Word Data
141	WTOB	WORD to BYTE
142	BTOW	BYTE to WORD
143	UNI	4-bit Linking of Word Data
144	DIS	4-bit Grouping of Word Data
145, 146	–	
147	SWAP	Byte Swap
148	–	
149	SORT2	Sort Tabulated Data 2
Positioning Control		
150	DSZR	DOG Search Zero Return
151	DVIT	Interrupt Positioning
152	TBL	Batch Data Positioning Mode
153, 154	–	
155	ABS	Absolute Current Value Read
156	ZRN	Zero Return
157	PLSV	Variable Speed Pulse Output
158	DRVI	Drive to Increment
159	DRVA	Drive to Absolute
Real Time Clock Control		
160	TCMP	RTC Data Compare
161	TZCP	RTC Data Zone Compare
162	TADD	RTC Data Addition
163	TSUB	RTC Data Subtraction
164	HTOS	Hour to Second Conversion
165	STOH	Second to Hour Conversion
166	TRD	Read RTC data
167	TWR	Set RTC data
168	–	
169	HOUR	Hour Meter
External Device		
170	GRY	Decimal to Gray Code Conversion
171	GBIN	Gray Code to Decimal Conversion
172 to 175	–	
176	RD3A	Read form Dedicated Analog Block
177	WR3A	Write to Dedicated Analog Block
178, 179	–	
Extension Function		
180	EXTR	External ROM Function (FX2N/FX2NC)

FNC No.	Mnemonic	Function
Others		
181	—	
182	COMRD	Read Device Comment Data
183	—	
184	RND	Random Number Generation
185	—	
186	DUTY	Timing Pulse Generation
187	—	
188	CRC	Cyclic Redundancy Check
189	HCMOV	High Speed Counter Move
Block Data Operation		
190, 191	—	
192	BK+	Block Data Addition
193	BK-	Block Data Subtraction
Block Data Subtraction		
194	BKCOMP=	Block Data Compare $(S_1) = (S_2)$
195	BKCOMP>	Block Data Compare $(S_1) > (S_2)$
196	BKCOMP<	Block Data Compare $(S_1) < (S_2)$
197	BKCOMP<>	Block Data Compare $(S_1) \neq (S_2)$
198	BKCOMP<=	Block Data Compare $(S_1) \leq (S_2)$
199	BKCOMP>=	Block Data Compare $(S_1) \geq (S_2)$
Character String Control		
200	STR	BIN to Character String Conversion
201	VAL	Character String to BIN Conversion
202	\$+	Link Character Strings
203	LEN	Character String Length Detection
204	RIGHT	Extracting Character String Data from the Right
205	LEFT	Extracting Character String Data from the Left
206	MIDR	Random Selection of Character Strings
207	MIDW	Random Replacement of Character Strings
208	INSTR	Character string search
209	\$MOV	Character String Transfer
Data Operation 3		
210	FDEL	Deleting Data from Tables
211	FINS	Inserting Data to Tables
212	POP	Shift Last Data Read [FILO Control]
Data Operation 3		
213	SFR	Bit Shift Right with Carry
214	SFL	Bit Shift Left with Carry
215 to 219	—	

FNC No.	Mnemonic	Function
Data Comparison		
220 to 223	—	
224	LD=	Load Compare $(S_1) = (S_2)$
225	LD>	Load Compare $(S_1) > (S_2)$
226	LD<	Load Compare $(S_1) < (S_2)$
227	—	
228	LD<>	Load Compare $(S_1) \neq (S_2)$
229	LD<=	Load Compare $(S_1) \leq (S_2)$
230	LD>=	Load Compare $(S_1) \geq (S_2)$
231	—	
232	AND=	AND Compare $(S_1) = (S_2)$
233	AND>	AND Compare $(S_1) > (S_2)$
234	AND<	AND Compare $(S_1) < (S_2)$
235	—	
236	AND<>	AND Compare $(S_1) \neq (S_2)$
237	AND<=	AND Compare $(S_1) \leq (S_2)$
238	AND>=	AND Compare $(S_1) \geq (S_2)$
239	—	
Data Comparison		
240	OR=	OR Compare $(S_1) = (S_2)$
241	OR>	OR Compare $(S_1) > (S_2)$
242	OR<	OR Compare $(S_1) < (S_2)$
243	—	
244	OR<>	OR Compare $(S_1) \neq (S_2)$
245	OR<=	OR Compare $(S_1) \leq (S_2)$
246	OR>=	OR Compare $(S_1) \geq (S_2)$
247 to 249	—	
Data Table Operation		
250 to 255	—	
256	LIMIT	Limit Control
257	BAND	Dead Band Control
258	ZONE	Zone Control
259	SCL	Scaling (Coordinate by Point Data)
260	DABIN	Decimal ASCII to BIN Conversion
261	BINDA	BIN to Decimal ASCII Conversion
262 to 268	—	
269	SCL2	Scaling 2 (Coordinate by X/Y Data)

FNC No.	Mnemonic	Function
External Device Communication (Inverter Communication)		
270	IVCK	Inverter Status Check
271	IVDR	Inverter Drive
272	IVRD	Inverter Parameter Read
273	IVWR	Inverter Parameter Write
274	IVBWR	Inverter Parameter Block Write
275 to 277	—	
Data Transfer 3		
278	RBFM	Divided BFM Read
279	WBFM	Divided BFM Write
High Speed Processing 2		
280	HSCT	High Speed Counter Compare With Data Table
281 to 289	—	
Extension File Register Control		
290	LOADR	Load From ER
291	SAVER	Save to ER
292	INITR	Initialize R and ER
293	LOGR	Logging R and ER
294	RWER	Rewrite to ER
295	INITER	Initialize ER
296 to 299	—	

21

Battery

A

Special Devices
(M8000-D8000-)

B

Instruction List

C

Character-code

Appendix C: Character-code

Appendix C-1 ASCII Code Table

- ¥ (ASCII Code: 5C) symbol is displayed as " ¥ " even if the language display setting at FX3U-7DM is set to English (LANGUAGE: ENGLISH).
- The Character at ASCII Code: 7E "~" is not displayed.

1. ASCII code table (7-bit code expressed in hexadecimal)

Example . "A " becomes 41H(hexadecimal number) by ASCII code.

Hexadecimal	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0			SP	0	@	P	`	p			As for this range, the Japanese syllabary is displayed.					
1			!	1	A	Q	a	q								
2			"	2	B	R	b	r								
3			#	3	C	S	c	s								
4			\$	4	D	T	d	t								
5			%	5	E	U	e	u								
6			&	6	F	V	f	v								
7			'	7	G	W	g	w								
8			(8	H	X	h	x								
9)	9	I	Y	i	y								
A			*	:	J	Z	j	z								
B			+	;	K	[k	{								
C			,	<	L	¥	l									
D			—	=	M]	m	}								
E			.	>	N	^	n									
F			/	?	O	_	o									

2. Examples of ASCII codes

Decimal	ASCII (hexadecimal)	Alphabet	ASCII (hexadecimal)	Alphabet	ASCII (hexadecimal)	Symbol	ASCII (hexadecimal)
0	30	A	41	N	4E	#	24
1	31	B	42	O	4F	&	26
2	32	C	43	P	50	=	3D
3	33	D	44	Q	51	¥	5C
4	34	E	45	R	52		
5	35	F	46	S	53		
6	36	G	47	T	54		
7	37	H	48	U	55		
8	38	I	49	V	56		
9	39	J	4A	W	57		
		K	4B	K	58		
		L	4C	Y	59		
		M	4D	Z	5A		

MEMO

21	Battery
A	Special Devices (M8000-D8000-)
B	Instruction List
C	Character-code

MEMO

Warranty

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company. However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- 1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- 2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 - a) Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 - b) Failure caused by unapproved modifications, etc., to the product by the user.
 - c) When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - d) Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 - e) Relay failure or output contact failure caused by usage beyond the specified Life of contact (cycles).
 - f) Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 - g) Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 - h) Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- 1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.
Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- 2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user or third person by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

6. Product application

- 1) In using the Mitsubishi MELSEC programmable logic controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable logic controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- 2) The Mitsubishi programmable logic controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or Public service purposes shall be excluded from the programmable logic controller applications.
In addition, applications in which human life or property that could be greatly affected, such as in aircraft, medical applications, incineration and fuel devices, manned transportation, equipment for recreation and amusement, and safety devices, shall also be excluded from the programmable logic controller range of applications.
However, in certain cases, some applications may be possible, providing the user consults their local Mitsubishi representative outlining the special requirements of the project, and providing that all parties concerned agree to the special circumstances, solely at the users discretion.

Revised History

Date	Revision	Description
7/2005	A	First Edition

USER'S MANUAL - Hardware Edition

FX3U SERIES PROGRAMMABLE CONTROLLERS



HEAD OFFICE: MITSUBISHI DENKI BLDG MARUNOUCHI TOKYO 100-8310
HIMEJI WORKS: 840, CHIYODA CHO, HIMEJI, JAPAN

MODEL	FX3U-HW-E
MODEL CODE	09R516